

ALPHABETICAL INDEX

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

SECTION **IDX**

IDX

ALPHABETICAL INDEX

A

| | |
|---|-------|
| ABS (anti-lock brake system)..... | BR-25 |
| ABS actuator..... | BR-28 |
| ABS circuit diagram..... | BR-41 |
| ABS component parts and connector locations..... | BR-37 |
| ABS control unit..... | BR-28 |
| ABS hydraulic circuit..... | BR-25 |
| ABS self-diagnosis..... | BR-34 |
| ABS symptom chart..... | BR-36 |
| ABS system components..... | BR-26 |
| ABS trouble diagnoses..... | BR-33 |
| ABS wheel sensors..... | BR-27 |
| ABS wiring diagram..... | BR-29 |
| A/C air flow..... | HA-13 |
| A/C circuit diagram..... | HA-36 |
| A/C component layout..... | HA-12 |
| A/C compressor clutch removal and installation..... | HA-76 |
| A/C compressor mounting..... | HA-75 |
| A/C compressor precaution..... | HA-6 |
| A/C compressor special service tool..... | HA-6 |
| A/C control linkage adjustment..... | HA-63 |
| A/C control operation..... | HA-15 |
| A/C harness layout..... | HA-34 |
| A/C HFC134a (R134a) system identification..... | HA-3 |
| A/C HFC134a (R134a) system introduction..... | HA-3 |
| A/C HFC134a (R134a) system precaution..... | HA-4 |
| A/C HFC134a (R134a) system service procedure..... | HA-68 |
| A/C HFC134a (R134a) system service tools..... | HA-7 |
| A/C HFC134a system service equip- ment precaution..... | HA-9 |
| A/C lubricant (R134a)..... | HA-70 |
| A/C operational check..... | HA-18 |
| A/C performance chart..... | HA-30 |
| A/C performance test diagnoses..... | HA-28 |
| A/C push control..... | HA-65 |
| A/C relay..... | HA-62 |
| A/C service data specification..... | HA-82 |
| A/C switch..... | HA-61 |
| A/C symptom chart..... | HA-20 |
| A/C trouble diagnoses..... | HA-16 |
| A/C wiring diagram..... | HA-37 |
| Accelerator control system..... | FE-2 |
| Accelerator wire adjustment..... | FE-2 |
| Air bag..... | RS-5 |
| Air bag disposal..... | RS-14 |
| Air bag module..... | RS-10 |
| Air bag precautions..... | GI-2 |
| Air bag removal and installation..... | RS-9 |
| Air bleeding for brake system..... | BR-6 |

| | |
|---|--------|
| Air cleaner filter replacement..... | MA-13 |
| Air conditioner cut control..... | EC-19 |
| Air flow meter - See Mass air flow sensor..... | EC-92 |
| Air spoiler, rear - See Rear air spoiler..... | BT-30 |
| Angular tightening application..... | EM-2 |
| Antenna - See Power antenna..... | EL-154 |
| Anti-freeze coolant mixture ratio..... | MA-9 |
| ASCD (automatic speed control device)..... | EL-171 |
| A/T control DTC:P0600..... | EC-173 |
| AT control unit..... | AT-105 |
| AT diagnosis communication line..... | EC-200 |
| AT fluid temperature sensor..... | AT-109 |
| AT mode switch..... | AT-110 |
| AT removal and installation..... | AT-134 |
| AT self-diagnoses..... | AT-48 |
| AT shift lock system..... | AT-120 |
| AT trouble diagnoses..... | AT-15 |
| Audio..... | EL-151 |
| Audio and A/C control removal and installation - See Instrument panel..... | BT-10 |
| Automatic transaxle number..... | GI-34 |
| Automatic transmission fluid replacement..... | MA-18 |
| Auxiliary air control (AAC)..... | EC-169 |
| Axle housing (rear)..... | RA-6 |

B

| | |
|---|-------|
| Back-up lamp..... | EL-53 |
| Back-up lamp switch (MT) -See reverse lamp switch..... | MT-6 |
| Baulk ring (MT)..... | MT-11 |
| Belt inspection (drive belt)..... | MA-10 |
| Blower motor..... | HA-61 |
| Blower relay..... | HA-62 |
| Blower resistor..... | HA-61 |
| Board-on lift..... | GI-36 |
| Body alignment..... | BT-31 |
| Brake booster..... | BR-10 |
| Brake control valve (Proportioning valve)..... | BR-4 |
| Brake fluid change..... | BR-5 |
| Brake fluid level..... | MA-19 |
| Brake fluid level and line check..... | BR-5 |
| Brake hydraulic line..... | BR-3 |
| Brake inspection..... | MA-19 |
| Brake lines and cables inspection..... | MA-19 |
| Brake master cylinder..... | BR-8 |
| Brake pedal..... | BR-7 |
| Bumper, front - See Front bumper..... | BT-5 |
| Bumper, rear - See Rear bumper..... | BT-6 |

ALPHABETICAL INDEX

C

| | |
|---|-----------|
| Chassis and body maintenance | MA-17 |
| Camshaft inspection | EM-35 |
| Camshaft position sensor (CMPS)..... | EC-147 |
| Camshaft position sensor inspection | EC-150 |
| Charging system..... | EL-31 |
| Cigarette lighter..... | EL-146 |
| Circuit breaker | EL-17 |
| Clearance lamp..... | EL-49, 50 |
| Clock..... | EL-146 |
| Closed loop control | EC-121 |
| Clutch cable | CL-4 |
| Clutch cover..... | CL-6 |
| Clutch disc | CL-6 |
| Clutch pedal..... | CL-4 |
| Clutch pedal free play..... | CL-4 |
| Clutch pedal height..... | CL-4 |
| Clutch release bearing..... | CL-5 |
| Clutch withdrawal lever | CL-5 |
| Coil spring (front) | FA-23 |
| Coil spring (rear) | RA-8 |
| Combination lamp, front, removal and installation | BT-5 |
| Combination lamp, rear, removal and installation..... | BT-17 |
| Combination meter | EL-73 |
| Combination meter removal and installation - See Instrument panel | BT-10 |
| Combination switch | EL-35 |
| Compression pressure..... | EM-10 |
| Compressor clutch removal and installation | HA-76 |
| Compressor mounting | HA-75 |
| Compressor precaution..... | HA-6 |
| Compressor special service tool | HA-6 |
| Connecting rod | EM-50 |
| Connecting rod bearing clearance | EM-54 |
| Connecting rod bushing clearance..... | EM-55 |
| Console box - See Instrument panel..... | BT-10 |
| CONSULT for ECCS..... | EC-43 |
| CONSULT general information | GI-31 |
| Control lever (MT) | MT-9 |
| Control valve (AT) | AT-162 |
| Converter housing installation..... | AT-135 |
| Coolant replacement..... | MA-11 |
| Cooling circuit (engine)..... | LC-8 |
| Cooling fan control | EC-203 |
| Cooling fan motor inspection..... | EC-221 |
| Cooling fan relay inspection..... | EC-221 |
| Coupling sleeve (MT) | MT-11 |
| Crank angle sensor built into distrib- utor - See Camshaft position sensor..... | EC-147 |
| Crankcase ventilation system - See positive crankcase ventilation | EC-23 |
| Crankshaft assembly | EM-57 |

| | |
|---|--------|
| Crankshaft bearing clearance..... | EM-53 |
| Crankshaft inspection..... | EM-52 |
| Crankshaft position sensor (OBD) chipping..... | EC-187 |
| Crankshaft position sensor (OBD) DTC0802, P0335..... | EC-143 |
| Crankshaft position sensor (OBD) DTC0802, P0335 inspection | EC-146 |
| Cruise control - See ASCD..... | EL-171 |
| Cylinder block..... | EM-48 |
| Cylinder block boring | EM-52 |
| Cylinder head..... | EM-32 |
| Cylinder head bolt tightening..... | EM-24 |

D

| | |
|---|--------|
| Detonation sensor - See Knock sensor..... | EC-140 |
| Diagnostic trouble code (DTC) chart..... | EC-64 |
| Diagnostic trouble code (DTC) for ECCS OBD system..... | EC-33 |
| Differential gear (FF AT) (RE4F03A and RE4F03V)..... | AT-210 |
| Differential gear (FF MT) (RS5F32A and RS5F32V) | MT-24 |
| Dimensions | GI-35 |
| Distributor | EC-18 |
| Distributor ignition (DI) system..... | EC-18 |
| Door mirror | BT-29 |
| Door trim..... | BT-14 |
| Door, front - See Front door | BT-8 |
| Door, rear - See Rear door | BT-9 |
| Drive plate runout..... | EM-56 |
| Drive shaft (front) | FA-12 |
| Dropping resistor (AT)..... | AT-111 |
| Dual pressure switch | HA-63 |

E

| | |
|---|--------|
| ECCS basic inspection..... | EC-61 |
| ECCS circuit diagram..... | EC-8 |
| ECCS component parts location..... | EC-10 |
| ECCS fail-safe system..... | EC-75 |
| ECCS on board diagnostic system..... | EC-33 |
| ECCS symptom matrix chart..... | EC-76 |
| ECCS system diagram and chart..... | EC-9 |
| ECCS trouble diagnoses | EC-57 |
| ECM input/output signal inspection | EC-83 |
| EGR control (EGRC) - BPT valve..... | EC-160 |
| EGR control (EGRC) - solenoid valve | EC-191 |
| EGR temperature sensor | EC-195 |
| EGR temperature sensor inspection | EC-199 |
| EGR valve & EVAP canister purge control solenoid valve inspection..... | EC-194 |
| EGR valve inspection..... | EC-158 |
| EGRC - BPT valve inspection | EC-161 |

ALPHABETICAL INDEX

| | |
|--|--------|
| Electric sun roof..... | EL-160 |
| Electrical unit..... | EL-220 |
| Electronic ignition system..... | EC-18 |
| Engine control module (ECM)..... | EC-176 |
| Engine coolant temperature sensor (ECTS) | EC-102 |
| Engine coolant temperature sensor (ECTS) P0115, DTC0103..... | EC-102 |
| Engine coolant temperature sensor (ECTS) P0115, DTC0103 inspection..... | EC-105 |
| Engine coolant temperature sensor (ECTS) P0125, DTC0908..... | EC-111 |
| Engine coolant temperature sensor (ECTS) P0125, DTC0908 inspection..... | EC-115 |
| Engine oil filter replacement..... | MA-14 |
| Engine oil precautions..... | GI-4 |
| Engine oil replacement..... | MA-14 |
| Engine outer component parts | EM-7 |
| Engine removal..... | EM-45 |
| Engine serial number | GI-34 |
| EVAP canister..... | EC-21 |
| EVAP canister inspection..... | EC-21 |
| EVAP canister purge control | EC-21 |
| EVAP canister purge control solenoid valve..... | EC-191 |
| EVAP vapor lines inspection | MA-16 |
| Evaporative emission (EVAP) system..... | EC-21 |
| Exhaust gas recirculation (EGR) system..... | EC-151 |
| Exhaust gas recirculation (EGR) valve..... | EC-151 |
| Exhaust system..... | FE-6 |
| Exhaust system inspection | MA-17 |
| Exterior..... | BT-17 |
| Exterior lamp | EL-49 |

F

| | |
|---|--------|
| Fan switch | HA-61 |
| Final drive (FF AT) (RE4F03A and RE4F03V) | AT-210 |
| Final drive (FF MT) (RS5F32A and RS5F32V) | MT-24 |
| Floor trim | BT-12 |
| Fluid temperature sensor (AT) | AT-109 |
| Fluids | MA-8 |
| Flywheel runout..... | EM-56 |
| Fog lamp, front, removal and installation..... | BT-5 |
| Fork rod (MT) | MT-12 |
| Forward clutch..... | AT-186 |
| Freeze frame data..... | EC-34 |
| Front axle..... | FA-8 |
| Front bumper..... | BT-5 |
| Front combination lamp removal and installation..... | BT-5 |
| Front disc brake..... | BR-12 |

| | |
|--|-------------|
| Front door..... | BT-8 |
| Front fog lamp..... | EL-49 |
| Front fog lamp removal and installation..... | BT-5 |
| Front heated oxygen sensor (HO2S) | EC-116, 122 |
| Front heated oxygen sensor (HO2S) heater | EC-122 |
| Front heated oxygen sensor heater inspection..... | EC-125 |
| Front oxygen sensor (O2S) monitor..... | EC-35 |
| Front seat..... | BT-23 |
| Front seat belt..... | RS-3 |
| Front suspension..... | FA-22 |
| Front washer | EL-141 |
| Front wiper..... | EL-141 |
| Fuel check valve inspection | EC-22 |
| Fuel cut control (at no load & high engine speed) | EC-20 |
| Fuel filler lid..... | BT-6 |
| Fuel filter replacement..... | MA-13 |
| Fuel gauge | EL-74 |
| Fuel injection system | EC-131 |
| Fuel lid opener, electric..... | EL-170 |
| Fuel line inspection..... | MA-12 |
| Fuel precautions..... | GI-5 |
| Fuel pressure check..... | EC-24 |
| Fuel pressure regulator..... | EC-25 |
| Fuel pressure release..... | EC-24 |
| Fuel pump..... | EC-227 |
| Fuel pump control | EC-227 |
| Fuel pump inspection..... | EC-230 |
| Fuel pump relay inspection | EC-230 |
| Fuel system..... | FE-3 |
| Fuel tank vacuum relief valve inspection..... | EC-22 |
| Fuse..... | EL-17 |
| Fusible link..... | EL-17 |

G

| | |
|-----------------------------------|-------|
| Garage jack and safety stand..... | GI-37 |
| Gauges | EL-72 |
| Gears (MT) | MT-11 |
| Generic scan tool (GST) | EC-55 |
| Grease | MA-8 |
| Grille - See Exterior..... | BT-17 |

H

| | |
|---|--------|
| Harness connector | EL-5 |
| Harness layout..... | EL-223 |
| Hazard warning lamp..... | EL-49 |
| Headlamp..... | EL-37 |
| Headlamp levelizer - See Headlamp aiming control | EL-141 |

ALPHABETICAL INDEX

| | |
|--|--------|
| Headlamp removal and installation | BT-5 |
| Heated oxygen sensor (HO2S) (front) | EC-116 |
| Heated oxygen sensor (HO2S) heater (front) | EC-122 |
| Heated oxygen sensor (HO2S) heater (rear) | EC-130 |
| Heated oxygen sensor (rear) | EC-126 |
| Heated oxygen sensor heater (front) inspection | EC-125 |
| Heater mirror | EL-166 |
| Height (Dimensions) | GI-35 |
| HFC134a (R134a) system identification | HA-3 |
| HFC134a (R134a) system introduction | HA-3 |
| HFC134a (R134a) system precaution | HA-4 |
| HFC134a (R134a) system service procedure | HA-68 |
| HFC134a (R134a) system service tools | HA-7 |
| HFC134a system service equipment precaution | HA-9 |
| High clutch | AT-181 |
| Hood | BT-5 |
| Horn | EL-146 |
| How to erase DTC for ECCS OBD system | EC-33 |
| How to follow flow chart in trouble diagnoses | GI-28 |
| How to perform efficient diagnosis for an electrical incident | GI-17 |
| How to read wiring diagrams | GI-8 |
| How to use this manual | GI-6 |
| Hydraulic lash adjuster inspection | EM-40 |

I

| | |
|--|--------|
| IACV - air regulator inspection | EC-236 |
| IACV - FICD solenoid valve inspection | EC-240 |
| IACV-AAC valve inspection | EC-172 |
| IACV-FICD solenoid valve | EC-237 |
| Identification plate | GI-34 |
| Idle air control valve (IACV) - air regulator | EC-234 |
| Idle air control valve (IACV) | EC-169 |
| Idle mixture ratio inspection | EC-26 |
| Idle speed inspection | EC-26 |
| Ignition coil inspection | EC-186 |
| Ignition timing inspection | EC-26 |
| Illumination | EL-64 |
| Inhibitor switch | AT-110 |
| Injector inspection | EC-224 |
| Injector removal and installation | EC-25 |
| Input shaft | MT-16 |
| Instrument panel | BT-10 |
| Intake air temperature sensor | EC-97 |
| Intake air temperature sensor inspection | EC-101 |

| | |
|---|-----------|
| Intake door control linkage adjustment | HA-64 |
| Intake door motor | HA-66 |
| Interior | BT-12 |
| Interior lamp | EL-64, 69 |

J

| | |
|-----------------------------|---------|
| Jacking points | GI-37 |
| Joint connector (J/C) | Foldout |

K

| | |
|--|--------|
| Keyless entry system - See Multi- remote control system | EL-107 |
| Kickdown switch | AT-110 |
| Knock sensor (KS) | EC-140 |
| Knock sensor (KS) inspection | EC-142 |

L

| | |
|---|-----------|
| Length (Dimensions) | GI-35 |
| License lamp | EL-49, 50 |
| Lifting points | GI-37 |
| Line pressure solenoid valve | AT-109 |
| Line pressure test (AT) | AT-115 |
| Liquid gasket application | EM-2 |
| Location of electrical units | EL-220 |
| Low and reverse brake | AT-192 |
| Lubricant (R134a) A/C | HA-70 |
| Lubricants | MA-8 |
| Lubrication circuit (engine) | LC-4 |
| Lubrication-locks, hinges and hood latches | MA-21 |

M

| | |
|---|-------|
| Magnet clutch | HA-76 |
| Main drive gear (MT) | MT-11 |
| Mainshaft (MT) | MT-18 |
| Maintenance (engine) | MA-10 |
| Maintenance | MA-1 |
| Maintenance general | MA-3 |
| Maintenance periodic | MA-5 |
| Maintenance schedule (1) | MA-6 |
| Maintenance schedule (2) | MA-7 |
| Malfunction indicator lamp (MIL) | EC-35 |
| Manual transaxle number | GI-34 |
| Manual transmission oil replacement | MA-17 |
| Mass air flow sensor (MAFS) | EC-92 |
| Mass air flow sensor inspection | EC-96 |
| Master cylinder (brake) | BR-8 |

ALPHABETICAL INDEX

| | |
|---|--------|
| Max cold door control linkage adjustment | HA-64 |
| Max cold door motor | HA-67 |
| Meter and gauges..... | EL-72 |
| Mirror defogger..... | EL-166 |
| Mirror, door - See Door mirror..... | BT-29 |
| Mirror, out side - See Out side mirror | BT-29 |
| Misfire | EC-136 |
| Mode door control linkage adjustment | HA-63 |
| Mode door motor | HA-66 |
| Model variation | GI-32 |
| Molding - See Exterior | BT-17 |
| MT overhaul | MT-10 |
| MT removal and installation | MT-7 |
| Mud guard - See Exterior | BT-17 |
| Multi-remote control system | EL-107 |
| Multiport fuel injection (MFI) system | EC-16 |
| Multiport fuel injection precautions | GI-4 |

N

| | |
|------------------------------------|------|
| Neutral position switch (MT) | MT-6 |
|------------------------------------|------|

O

| | |
|--|--------|
| Oil change (capacity) | MA-8 |
| Oil pan (engine) | EM-11 |
| Oil pressure (engine) | LC-4 |
| Oil pressure relief valve (engine) | LC-7 |
| Oil pump (AT) | AT-158 |
| Oil pump (engine)..... | LC-5 |
| Oil pump regulator valve (engine) | LC-7 |
| Oil seal replacement (engine) | EM-30 |
| Out side mirror | BT-29 |
| Overdrive control switch | AT-110 |
| Overrun clutch | AT-186 |
| Overrun clutch solenoid valve | AT-109 |
| Oversize piston..... | EM-52 |

P

| | |
|--|--------|
| Park/Neutral position switch..... | EC-178 |
| Parking brake control | BR-23 |
| PCV (positive crankcase ventilation) inspection | EC-23 |
| Pilot bushing replacement | EM-56 |
| Piston assembly..... | EM-57 |
| Piston pin inspection | EM-49 |
| Piston ring inspection..... | EM-50 |
| Piston to bore clearance | EM-51 |
| Power antenna | EL-154 |
| Power door lock..... | EL-95 |

| | |
|--|-------------|
| Power door mirror | EL-163 |
| Power seat | EL-161 |
| Power steering fluid level | MA-20, ST-5 |
| Power steering gear..... | ST-12 |
| Power steering hydraulic pressure | ST-7 |
| Power steering oil pressure switch..... | EC-231 |
| Power steering oil pressure switch inspection | EC-233 |
| Power steering oil pump..... | ST-22 |
| Power steering system bleeding | ST-6 |
| Power supply routing | EL-10 |
| Power transistor & ignition coil | EC-182 |
| Power transistor inspection | EC-186 |
| Power window..... | EL-85 |
| Precautions (General)..... | GI-2 |
| Pressure plate - See Clutch cover | CL-6 |
| Pressure test (AT) | AT-115 |

R

| | |
|--|--------|
| Rack retainer adjustment..... | ST-20 |
| Radiator..... | LC-12 |
| Radio - See Audio..... | EL-151 |
| Rear air spoiler | BT-30 |
| Rear axle (disc brake type)..... | RA-6 |
| Rear bumper..... | BT-6 |
| Rear combination lamp removal and installation..... | BT-17 |
| Rear disc brake..... | BR-16 |
| Rear door..... | BT-9 |
| Rear heated oxygen sensor (HO2S)..... | EC-126 |
| Rear heated oxygen sensor (HO2S) heater | EC-130 |
| Rear seat | BT-25 |
| Rear seat belt..... | RS-4 |
| Rear suspension | RA-7 |
| Rear window..... | BT-28 |
| Rear window defogger | EL-147 |
| Refrigerant connection precaution..... | HA-5 |
| Refrigerant general precaution..... | HA-4 |
| Refrigerant lines | HA-72 |
| Refrigeration cycle..... | HA-11 |
| Release bearing (clutch)..... | CL-5 |
| Resistor inspection..... | EC-186 |
| Reverse clutch | AT-177 |
| Reverse gear (MT)..... | MT-11 |
| Reverse idler shaft (MT)..... | MT-10 |
| Reverse lamp switch | MT-6 |
| Revolution sensor (AT)..... | AT-111 |
| Roof trim | BT-15 |

S

| | |
|---------------------------------|-------|
| SAE J1930 terminology list..... | GI-40 |
| Seal - See Exterior | BT-17 |
| Seat belt inspection..... | MA-21 |

ALPHABETICAL INDEX

| | |
|---|-----------|
| Seat belt pre-tensioner | RS-5 |
| Seat belt pre-tensioner disposal | RS-14 |
| Seat belt pretensioner removal and installation | RS-9 |
| Seat belt, front - See Front seat belt | RS-3 |
| Seat belt, rear - See Rear seat belt | RS-4 |
| Seat, front - See Front seat | BT-23 |
| Seat, rear - See Rear seat | BT-25 |
| Self-diagnostic results | EC-35 |
| Shift control (MT) | MT-12 |
| Shift fork (MT) | MT-12 |
| Shift lock system | AT-120 |
| Shift schedule | AT-38 |
| Shift solenoid valve (AT) | AT-109 |
| Shock absorber (front) | FA-23 |
| Side trim | BT-12 |
| SMJ (super multiple junction) | Foldout |
| Spark plug replacement (Conventional type) | MA-16 |
| Spark plug replacement (Platinum-tipped type) | MA-15 |
| Speedometer | EL-74 |
| Spiral cable | RS-10 |
| Spot lamp | EL-69 |
| SRS - See Supplemental Restraint System | RS-5 |
| SRS Trouble diagnoses | RS-19 |
| SRS Wiring diagram | RS-20 |
| Stabilizer bar (front) | FA-26 |
| Stabilizer bar (rear) | RA-9 |
| Stall test (AT) | AT-112 |
| Standardized relay | EL-6 |
| Starting system | EL-26 |
| Steering gear and linkage inspection | MA-20 |
| Steering gear oil level | MA-20 |
| Steering linkage | ST-12 |
| Steering wheel and column | ST-8 |
| Steering wheel play | ST-4 |
| Steering wheel turning force | ST-6 |
| Stop lamp | EL-49, 50 |
| Striking rod (MT) | MT-12 |
| Strut (rear) | RA-8 |
| Sun roof | BT-26 |
| Sun roof, electric - See Electric sun roof | EL-160 |
| Supplemental Restraint System | RS-5 |
| Symbols and abbreviations | GI-7 |
| Synchronizer (MT) | MT-11 |

T

| | |
|--|-----------|
| Tachometer | EL-74 |
| Tail lamp | EL-49, 50 |
| Temperature control cable and linkage adjustment | HA-64 |
| Theft warning system | EL-193 |
| Thermal protector | HA-62 |

| | |
|---|------------|
| Thermo control amp | HA-62 |
| Thermostat | LC-10 |
| Third link (front susp.) | FA-24 |
| Three way catalyst | EC-162 |
| Three way catalyst precautions | GI-4 |
| Throttle position sensor (TPS) | EC-106 |
| Throttle position sensor inspection ... | EC-61, 110 |
| Throttle position switch | AT-111 |
| Throwout bearing - See Clutch release bearing | CL-5 |
| Tie-rod ball joints | ST-16 |
| Tightening torque of standard bolts | GI-39 |
| Time control system | EL-124 |
| Timing chain | EM-16 |
| Tire rotation | MA-19 |
| Tire size | GI-35 |
| Torque converter clutch solenoid valve | AT-109 |
| Torque converter installation | AT-135 |
| Tow truck towing | GI-38 |
| Transmission case (MT) | MT-10 |
| Transverse link (front) | FA-27 |
| Tread-FR&RR (Dimensions) | GI-35 |
| Trim | BT-12 |
| Triple pressure switch | HA-63 |
| Trunk lid | BT-6 |
| Trunk lid opener - See Trunk lid | BT-6 |
| Trunk lid opener, electric | EL-170 |
| Trunk lid trim | BT-16 |
| Trunk room lamp | EL-69 |
| Trunk room trim | BT-16 |
| Turn signal lamp | EL-49 |
| Two trip detection logic | EC-33 |
| Two-pole lift | GI-37 |

U

| | |
|--------------------------------|-------|
| Under body | BT-33 |
| Upper link (front susp.) | FA-24 |

V

| | |
|---|--------|
| Vacuum hose (brake system) | BR-11 |
| Vacuum hose drawing (ECCS) | EC-14 |
| Valve guide inspection | EM-37 |
| Valve seat inspection | EM-38 |
| Valve spring inspection | EM-39 |
| Vehicle identification number | GI-33 |
| Vehicle Recovery. (Freeing a stuck vehicle) | GI-38 |
| Vehicle speed sensor (VSS) | EC-165 |
| Viscosity number (SAE) | MA-8 |
| Viscous coupling (FF AT) (RE4F03V) | AT-210 |
| Viscous coupling (FF MT) (RS5F32V) | MT-25 |

GI
MA
EM
LC
EC
FE
CL
MT
AT
FA
RA
BR
ST
RS
BT
HA
EL
IDX

ALPHABETICAL INDEX

W

Warning chime..... EL-79
Warning lamps..... EL-79
Water pump LC-9
Water temperature gauge EL-74
Weatherstrip - See Exterior BT-17
Wheel alignment (front) FA-6
Wheel alignment (rear)..... RA-4
Wheel balance MA-18
Wheel bearing (front axle) FA-5
Wheel bearing (rear) RA-4
Wheel hub and steering knuckle FA-8
Wheel sensors (ABS)..... BR-27

Wheel size GI-35
Wheelbase (Dimensions) GI-35
Wide open & closed throttle position
 (CTP) switch EC-106
Width (Dimensions) GI-35
Window, rear - See Rear window..... BT-28
Windshield BT-28
Windshield washer - See Front
 washer EL-141
Windshield wiper - See Front wiper EL-141
Wiper, front..... EL-141
Withdrawal lever (clutch) CL-5
Wrist pin - See Piston pin inspection EM-49