

ALPHABETICAL INDEX

SECTION **IDX**

A B C D E F G H I J K L M

N O P Q R S T U V W X Y Z

GI
MA
EM
LG
EC
FE
CL
MT
AT
AX
SU
BR
ST
RS
BT
HA
SC
EL

ALPHABETICAL INDEX

A

AAC/V - Wiring diagram.....EC-426
 ABS (anti-lock brake system).....BR-34
 ABS - Wiring diagramBR-39
 Absolute pressure sensorEC-163
 A/C air flow.....HA-21, 138
 A/C component layout.....HA-15, 136
 A/C compressor clutch removal and installationHA-111, 196
 A/C compressor precautionHA-7, 128
 A/C compressor special service toolHA-10, 131
 A/C control linkage adjustment (manual A/C).....HA-155, 161
 A/C control operation (auto A/C).....HA-19
 A/C control operation (manual A/C).....HA-137
 A/C diagnostic work flow (auto A/C)HA-41
 A/C diagnostic work flow (manual A/C).....HA-147
 A/C HFC134a (R134a) system
 precaution.....HA-3, 124
 A/C HFC134a (R134a) system service procedure.....HA-105, 191
 A/C HFC134a (R134a) system service toolsHA-11, 132
 A/C HFC134a system service equipment precaution.....HA-7, 128
 A/C lubricant (R134a)HA-107, 193
 A/C operational check.....HA-42, 148
 A/C performance chart.....HA-83, 185
 A/C performance test diagnosesHA-81, 183
 A/C push control.....HA-137
 A/C relayHA-79, 180
 A/C self-diagnoses (auto A/C).....HA-31
 A/C service data specification.....HA-123, 209
 A/C system description (auto A/C).....HA-19
 A/C trouble diagnoses (auto A/C)HA-23
 A/C, A - Wiring diagramHA-26
 A/C, M - Wiring diagramHA-143
 Accelerator control systemFE-3
 Accelerator wire adjustmentFE-3
 Air bagRS-13
 Air bag disposal.....RS-26
 Air bag precautionsGI-3
 Air bleeding (hydraulic clutch)CL-7
 Air bleeding for brake systemBR-8
 Air cleaner filter replacement.....MA-18
 Air conditioner cut controlEC-32
 Air flow meter - See Mass air flow
 sensorEC-154
 Air mix door control linkage
 adjustmentHA-56, 166
 Air mix. door motorHA-54, 104, 163
 Air spoiler, rear.....BT-33
 AlternatorSC-30
 Ambient sensorHA-92
 Angular tightening application.....EM-3
 Antenna - See Power antennaEL-135
 Anti-lock brake system - See ABS.....BR-34

Anti-lock brake system - Wiring
 diagramBR-39
 ASCD (automatic speed control device)EL-146
 ASCD - Wiring diagramEL-150
 A/T - Wiring diagram - AT - FTSAT-115
 A/T - Wiring diagram - AT - MAIN.....AT-104
 A/T - Wiring diagram - AT - PNP/SW.....AT-109
 A/T - Wiring diagram - AT - VSS A/TAT-121
 A/T controlEC-440
 A/T diagnosis communication line.....EC-556
 A/T fluid temperature sensorAT-118
 A/T shift lock systemAT-272
 A/T shift lock system - Wiring diagramAT-273
 A/T trouble diagnosesAT-56
 A/T Wiring diagram - AT - ENG SSAT-125
 A/T Wiring diagram AT - 1STAT-131
 A/T Wiring diagram AT - 2NDAT-138
 A/T Wiring diagram AT - 3RDAT-144
 A/T Wiring diagram AT - 4TH.....AT-151
 A/T Wiring diagram AT - BA/FTSAT-210
 A/T Wiring diagram AT - LPSVAT-176
 A/T Wiring diagram AT - NONDTCAT-223
 A/T Wiring diagram AT - OVRCSVAT-204
 A/T Wiring diagram AT - SSV/AAT-183
 A/T Wiring diagram AT - SSV/BAT-189
 A/T Wiring diagram AT - TCCSIGAT-166
 A/T Wiring diagram AT - TCVAT-159
 A/T Wiring diagram AT - TPS.....AT-196
 A/T Wiring diagram AT - VSSMTR.....AT-217
 AT/C - Wiring diagram.....EC-441
 ATDIAG - Wiring diagram.....EC-557
 AudioEL-130
 AUDIO - Wiring diagram.....EL-131
 Audio and A/C control removal and installation - See Instrument panelBT-22
 Auto air conditioner - Wiring diagramHA-26
 Automatic amplifier.....HA-29, 45
 Automatic speed control system - See
 ASCDEL-146
 Automatic transaxle number.....GI-44
 Automatic transmission fluid
 replacement.....MA-23
 Auxiliary air control (AAC) valveEC-423

B

Back door.....BT-16
 Back door opener - See Back door.....BT-16
 Back-up lampEL-59
 Back-up lamp switch (M/T)MT-10
 BACK/L - Wiring diagram.....EL-59
 Ball joint (front)SU-14
 Base idle air volume initialiging.....EC-65
 Basic inspectionEC-107
 BatterySC-4
 Battery/Starting/Charging System
 Tester.....SC-7, 13, 23
 Baulk ring (M/T).....MT-17
 Blower motorHA-65, 173
 Blower resistor.....HA-173

ALPHABETICAL INDEX

Blower unit.....	HA-115, 201
Board-on lift	GI-46
Body alignment	BT-56
Boring/horning cylinder block.....	EM-62
Brake booster	BR-17
Brake fluid change	BR-7
Brake fluid level	MA-24
Brake fluid level and line check	BR-7
Brake hydraulic line.....	BR-9
Brake inspection	MA-24
Brake lines and cables inspection	MA-24
Brake master cylinder	BR-14
Brake pedal	BR-12
Bulb specifications	EL-330
Bumper, front	BT-13
Bumper, rear	BT-16
BYPS/V - Wiring diagram	EC-540, 547

C

Camshaft inspection	EM-36
Camshaft position sensor (CMPS).....	EC-326
Canister-See EVAP canister	EC-33
CHARGE - Wiring diagram	SC-22
Charging system	SC-21
Chassis and body maintenance	MA-22
CHIME - Wiring diagram.....	EL-107
CIGAR - Wiring diagram.....	EL-120
Cigarette lighter.....	EL-120
Circuit breaker.....	EL-17
CKPS - Wiring diagram.....	EC-322, 469
Closed loop control	EC-447
Closed throttle position switch	EC-432
Clutch cover.....	CL-19
Clutch damper.....	CL-11
Clutch disc	CL-19
Clutch fluid level.....	MA-22
Clutch master cylinder	CL-8
Clutch operating cylinder	CL-13
Clutch pedal.....	CL-6
Clutch release bearing.....	CL-16
Clutch release mechanism	CL-16
Clutch withdrawal lever.....	CL-16
CMPS - Wiring diagram	EC-329
Coil spring (front).....	SU-9
Coil spring (rear)	SU-22
Collision diagnosis.....	RS-65
Combination lamp, front, removal and installation	BT-13
Combination lamp, rear, removal and installation	BT-33
Combination meter.....	EL-83
Combination meter removal and instal- lation - See Instrument panel.....	BT-22
Combination switch.....	EL-26
Component Location (auto A/C).....	HA-23
Component Location (manual A/C).....	HA-140
Compressor clutch removal and installation	HA-111, 196
Compressor precaution.....	HA-7, 128

Compressor special service tool.....	HA-10, 131
Connecting rod.....	EM-61
Connecting rod bearing clearance.....	EM-65
Connecting rod bushing clearance	EM-66
Connector inspection.....	GI-21
Console box - See Instrument panel.....	BT-22
CONSULT for ABS	BR-44
CONSULT for engine	EC-88
Control lever (M/T)	MT-15
Control valve (A/T)	AT-312
Converter housing installation.....	AT-369
COOL/F - Wiring diagram	EC-296, 452
Coolant mixture ratio.....	MA-12
Coolant replacement.....	MA-14
Cooling circuit (engine).....	LC-9
Cooling fan control	EC-449
Cooling fan motor.....	EC-466
Cooling fan relay	EC-465
Cooling unit (A/C evaporator).....	HA-116, 202
Coupling sleeve (M/T)	MT-17
Crank angle sensor built into distributor - See Camshaft position sensor.....	EC-326
“Crankcase emission control system - See positive crankcase ventilation”.....	EC-48
Crankcase ventilation system - See Positive crankcase ventilation	EC-48
Crankshaft.....	EM-63
Crankshaft position sensor (OBD)	EC-320, 467
Crankshaft position sensor (OBD) cog chipping	EC-467
Cruise control - See ASCD.....	EL-146
Cylinder block	EM-58
Cylinder block boring	EM-62
Cylinder head.....	EM-30

D

Data link connector for Consult	EC-50, 88
Daytime light system.....	EL-42
Daytime running light - See Daytime light system	EL-42
DEF - Wiring diagram	EL-123
Detonation sensor - See Knock sensor	EC-316
Diagnosis sensor unit.....	RS-18
Diagnostic trouble code (DTC) for OBD system	EC-8, 68
Diagnostic trouble code (DTC) inspec- tion priority chart.....	EC-123
Differential gear (FF A/T)	AT-361
Differential gear (FF M/T).....	MT-17
Dimensions	GI-45
Distributor	EC-31
Distributor ignition (DI) system.....	EC-31
D/LOCK - Wiring diagram.....	EL-178
Dome light - See Interior lamp	EL-77
Door glass.....	BT-19
Door lock.....	BT-19
Door mirror.....	BT-54
Door trim	BT-28
Door, front	BT-19

ALPHABETICAL INDEX

Door, rear	BT-21
Drive belt inspection	MA-13
Drive plate runout	EM-67
Drive shaft (front).....	AX-10
Dropping resistor (A/T).....	AT-180
DTC work support	EC-99
DTRL - Wiring diagram.....	EL-46

E

ECM input/output signal.....	EC-134
ECTS - Wiring diagram.....	EC-173, 192
EGR temperature sensor	EC-473
EGR/TS - Wiring diagram	EC-476
EGRC1 - Wiring diagram.....	EC-338, 347, 485
Electric sun roof.....	EL-140
Electrical diagnoses.....	GI-24
Electrical ignition system.....	EC-31
Electrical unit	Foldout
Electrical units location	EL-310
Electronic ignition (EI) system.....	EC-31
Engine compartment.....	BT-57
Engine control circuit diagram.....	EC-24
Engine control component parts location	EC-20
Engine control module (ECM).....	EC-443
Engine control system diagram and chart.....	EC-26
Engine coolant temperature sensor (ECTS).....	EC-171, 190
Engine fail-safe system	EC-124
Engine oil filter replacement	MA-19
Engine oil precautions	GI-7
Engine oil replacement	MA-18
Engine outer component parts	EM-10
Engine removal	EM-55
Engine room - See Engine compartment.....	BT-57
Engine serial number	GI-44
EVAP canister.....	EC-34
EVAP canister purge volume control solenoid valve.....	EC-369, 493
EVAP canister vent control valve	EC-376, 505, 525
EVAP control system (small leak) diagnosis	EC-36, 355, 396, 491
EVAP control system pressure sensor.....	EC-383
EVAP control system purge flow moni- toring diagnosis.....	EC-513
EVAP system close mode	EC-36
EVAP vapor lines inspection.....	MA-21
Evaporative emission (EVAP) system.....	EC-33
Exhaust gas recirculation (EGR) valve	EC-334, 482
Exhaust system	FE-8
Exhaust system inspection	MA-22
Exterior.....	BT-33

F

Fan control amp.	HA-67
Fan switch	HA-173
F/FOG - Wiring diagram	EL-62
Final drive (FF A/T)	AT-361
Final drive (FF M/T)	MT-39
Finisher, interior - See Trim	BT-26
Fluid temperature sensor (A/T)	AT-118
Fluids.....	MA-11
Flywheel (clutch).....	CL-19
Flywheel runout.....	EM-67
Fog lamp, front.....	EL-60
Fog lamp, front, removal and installation	BT-13
Fork rod (M/T)	MT-18
Forward clutch.....	AT-336
F/PUMP - Wiring diagram	EC-585
Freeze frame data.....	EC-68
FRO2 - Wiring diagram.....	EC-199, 220, 228
FRO2/H - Wiring diagram	EC-234
Front axle.....	AX-2
Front bumper	BT-13
Front combination lamp removal and installation	BT-13
Front disc brake	BR-20
Front door	BT-19
Front fog lamp.....	EL-60
Front fog lamp removal and installation	BT-13
Front heated oxygen sensor (HO2S).....	EC-196, 204, 210, 217, 226
Front heated oxygen sensor (HO2S) heater.....	EC-232
Front seat.....	BT-39
Front seat belt	RS-5
Front suspension.....	SU-2
Front washer	EL-114
Front wiper	EL-114
FUEL - Wiring diagram	EC-274, 281
Fuel cut control (at no load & high engine speed).....	EC-33
Fuel filler lid.....	BT-16
Fuel filter.....	EC-50
Fuel filter replacement	MA-17
Fuel gauge	EL-83
Fuel injection system	EC-272, 279
Fuel injector.....	EC-574
Fuel line inspection	MA-16
Fuel precautions.....	GI-8
Fuel pressure check.....	EC-50
Fuel pressure regulator	EC-51
Fuel pressure release	EC-50
Fuel pump	EC-583
Fuel pump relay	EC-583
Fuel system	FE-5
Fuel tank temperature sensor	EC-286
Fuel tank vacuum relief valve	EC-34
Fuse	EL-17
Fuse block	Foldout

ALPHABETICAL INDEX

Fusible linkEL-17

G

Garage jack and safety standGI-47
 Gauges.....EL-83
 Gear components (M/T)MT-17
 Generator - See Alternator.....SC-30
 Generic scan tool (GST)EC-101
 GlassBT-19
 Grease.....MA-11
 Ground distribution.....EL-18

H

Harness connector.....EL-5
 Harness connector inspectionGI-21
 Harness layoutEL-314
 Hazard warning lamp.....EL-65
 Headlamp.....EL-30
 Headlining - See Roof trimBT-30
 Heated oxygen sensor (HO2S)
 (front).....EC-196, 204, 210, 217, 226
 Heated oxygen sensor (HO2S) heater
 (front)EC-232
 Heated oxygen sensor (HO2S) heater
 (rear)EC-267
 Heated oxygen sensor
 (rear).....EC-237, 245, 253, 261
 Heated seat.....BT-41, EL-145
 Heater unit (heater core)HA-114, 200
 Height (Dimensions)GI-45
 HFC134a (R134a) system precautionHA-3, 124
 HFC134a (R134a) system service
 procedure.....HA-105, 191
 HFC134a (R134a) system service
 toolsHA-11, 132
 HFC134a system service equipment
 precautionHA-7, 128
 High clutch.....AT-331
 H/LAMP - Wiring diagramEL-34
 Hood.....BT-13
 Horn.....EL-119
 HORN - Wiring diagramEL-119
 How to erase DTC for OBD system.....EC-79
 HSEAT - Wiring diagram.....EL-145
 Hydraulic lash adjuster inspectionEM-41

I

IACV-AAC valveEC-423
 IATS - Wiring diagramEC-167
 Identification plate.....GI-44
 Idle air control (IAC) systemEC-423
 Idle air control valve (IACV)EC-423
 Idle mixture ratio.....EC-53
 Idle speed.....EC-53

IGN/SG - Wiring diagramEC-568
 Ignition coilEC-573
 Ignition control systemEC-566
 Ignition timingEC-53
 Ignition wire inspection.....EC-315
 ILL - Wiring diagramEL-73
 IlluminationEL-70
 In vehicle sensorHA-95
 INFINITI COMMUNICATOR.....EL-272
 Infiniti communicator (IVCS)EL-272
 INJECT - Wiring diagramEC-575
 Injector removal and installationEC-51
 Input shaft (FF M/T)MT-26
 Instrument panelBT-22
 INT/L - Wiring diagram.....EL-82
 Intake air temperature sensorEC-165
 Intake door control linkage
 adjustmentHA-64, 155
 Intake door motorHA-58, 152
 Integrated homelink transmitterEL-269
 InteriorBT-26
 Interior lamp.....EL-77, 81
 Interior lamp on-off control.....EL-78
 IVCS - Wiring diagramEL-283
 IVIS (Infiniti vehicle immobilizer
 system)EL-249
 IVIS (Infiniti vehicle immobilizer sys-
 tem) precautionsGI-3

J

Jacking points.....GI-47
 Joint connector (J/C)Foldout
 Junction box (J/B).....Foldout

K

Keyless entry system - See Multi-re-
 mote control systemEL-190
 Knock sensor (KS)EC-316, 317
 Knuckle spindleAX-5

L

Length (Dimensions)GI-45
 License lampEL-52
 Lifting pointsGI-48
 Line pressure solenoid valveAT-156
 Line pressure test (A/T)AT-66
 Liquid gasket applicationEM-3
 LOAD - Wiring diagramEC-602
 Location of electrical unitsEL-310
 Lock, doorBT-19
 Low and reverse brakeAT-343
 Lubricant (R134a) A/CHA-107, 193
 Lubricants.....MA-11
 Lubrication circuit (engine)LC-3

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

Lubrication-locks, hinges and hood
 latchesMA-26
 Luggage room lampEL-81

M

MAFS - Wiring diagramEC-158
 Magnet clutchHA-73, 111, 196
 MAIN - Wiring diagramEC-147
 Mainshaft (M/T)MT-31
 Maintenance (engine)MA-13
 MAJOR OVERHALLAT-286
 Malfunction indicator lamp (MIL)EC-81
 Manual air conditioner - Wiring diagramHA-143
 Manual transaxle numberGI-44
 Manual transmission oil replacementMA-22
 Mass air flow sensor (MAFS)EC-154
 Master cylinder (brake)BR-14
 Master cylinder (clutch)CL-8
 MeterEL-83
 METER - Wiring diagramEL-86
 MIL & Data link connectors circuitEC-609
 MIL/DL - Wiring diagramEC-609
 MIRROR - Wiring diagramEL-143
 Mirror defoggerEL-121
 Mirror, doorBT-54
 Mirror, out sideBT-54
 MisfireEC-309
 Mode door control linkage adjustment...HA-53, 161
 Mode door motorHA-48, 157
 Model variationGI-42
 Molding - See ExteriorBT-33
 M/T major overhaulMT-15
 M/T removal and installationMT-12
 MULTI - Wiring diagramEL-194
 Multi-remote control systemEL-190
 Multiport fuel injection (MFI) systemEC-29
 Multiport fuel injection precautionsGI-6

N

NATS (Nissan anti-theft system)
 precautionsGI-3
 NATS - Wiring diagramEL-251
 Neutral position switchEC-559
 NVH troubleshooting (AX)AX-3
 NVH troubleshooting (BR)BR-6
 NVH troubleshooting (CL)CL-4
 NVH troubleshooting (M/T)MT-6
 NVH troubleshooting (ST)ST-5
 NVH troubleshooting (SU)SU-17

O

Oil change (capacity)MA-11
 Oil pan (engine)EM-14
 Oil pressure (engine)LC-4

Oil pump (A/T)AT-308
 Oil pump (engine)LC-4
 Oil pump regulator valve (engine)LC-6
 Oil seal replacement (engine)EM-28
 On board diagnostic systemEC-67
 Operating cylinder (clutch)CL-13
 ORVR (On-board Refueling Vapor
 Recovery)EC-39
 Out side mirrorBT-54
 Overdrive control switchAT-270
 Overrun clutchAT-336
 Oversize pistonEM-62

P

P/ANT - Wiring diagramEL-136
 Park/Neutral position switchEC-559
 Park/neutral position switch (A/T)AT-107
 Park/neutral position switch (M/T)MT-10
 Parking brake controlBR-32
 Parking lampEL-52
 PCV (positive crankcase ventilation)EC-48
 PGC/V - Wiring diagramEC-372, 496
 Pilot bushing replacementEM-66
 Piston assemblyEM-67
 Piston pin inspectionEM-59
 Piston ring inspectionEM-60
 Piston to bore clearanceEM-62
 PNP/SW - Wiring diagramEC-561
 POWER - Wiring diagramEL-10
 Power antennaEL-135
 Power door lockEL-176
 Power door mirrorEL-143
 Power seatEL-144
 Power steering fluid levelMA-25, ST-7
 Power steering gearST-15
 Power steering hydraulic pressureST-8
 Power steering oil pressure switchEC-592
 Power steering oil pumpST-26
 Power steering system bleedingST-7
 Power supply routingEL-9
 Power transistorEC-573
 Power transistor & ignition coilEC-566
 Power windowEL-166
 PRE/SE - Wiring diagramEC-386
 Precautions (General)GI-4
 Pressure plate - See Clutch coverCL-19
 Pressure test (A/T)AT-66
 PST/SW - Wiring diagramEC-593

R

RadiatorLC-14
 Radiator fan - See Cooling fanLC-14
 Radio - See AudioEL-130
 Rear air spoilerBT-33
 Rear axleAX-20
 Rear bumperBT-16

ALPHABETICAL INDEX

Rear combination lamp removal and installation	BT-33
Rear disc brake	BR-24
Rear door	BT-21
Rear heated oxygen sensor (HO2S)	EC-237, 245, 253, 261
Rear heated oxygen sensor (HO2S) heater	EC-267
Rear seat	BT-42
Rear seat belt	RS-7
Rear suspension	SU-17
Rear window defogger	EL-121
Refrigerant pressure sensor	HA-79, 181
Refrigerant connection precaution	HA-5, 126
Refrigerant discharging evacuating charging	HA-105
Refrigerant general precaution	HA-4, 125
Refrigerant lines	HA-117, 203
Refrigerant pressure sensor	EC-597
Refrigeration cycle	HA-14, 135
Release bearing (clutch)	CL-16
Removal and installation (A/T)	AT-283
Resistor	EC-573
Reverse clutch	AT-327
Reverse idler shaft (M/T)	MT-16
Reverse lamp switch (M/T) - See Back-up lamp switch (M/T)	MT-10
Reverse main gear (M/T)	MT-17
Road wheel size	GI-45
Roof trim	BT-30
Room lamp - See Interior lamp	EL-77
ROOM/L - Wiring diagram	EL-79
RRO2 - Wiring diagram	EC-239, 247, 255, 263
RRO2/H - Wiring diagram	EC-269

S

SAE J1930 terminology list	GI-52
Seal - See Exterior	BT-33
SEAT - Wiring diagram	EL-144
Seat belt inspection	MA-26, RS-9
Seat belt pre-tensioner	RS-3
Seat belt pre-tensioner disposal	RS-26
Seat belt, front	RS-5
Seat belt, rear	RS-7
Seat, front	BT-39
Seat, rear	BT-42
SHIFT - Wiring diagram	AT-273
Shift control components (M/T)	MT-18
Shift fork (M/T)	MT-18
Shift lever	MT-15
Shift lock system	AT-272
Shift schedule	AT-389
Shift solenoid valve A (A/T)	AT-128, 133, 146
Shift solenoid valve B (A/T)	AT-128, 133
Shock absorber (front)	SU-10
Shock absorber (rear)	SU-22
Side air bag	RS-24
Side trim	BT-26
Smart entrance control unit	EL-243

SMJ (super multiple junction)	Foldout
Spare tire size	GI-45
Spark plug replacement	MA-19
Speedometer	EL-83
Spiral cable	RS-20
Spot lamp	EL-81
Spring (Wheelarch) height	SU-5
SROOF - Wiring diagram	EL-141
SRS - See Supplemental Restraint System	RS-13
SRS - Wiring diagram	RS-38
S/SIG - Wiring diagram	EC-580
Stabilizer bar (front)	SU-13
Stall test (A/T)	AT-62
Standardized relay	EL-7
START - Wiring diagram	SC-11
Start signal	EC-579
Starter	SC-19
Starting system	SC-10
Steering gear, linkage and transfer gear inspection	MA-25
Steering linkage	ST-15
Steering switch	EL-28
Steering wheel and column	ST-10
Steering wheel play	ST-6
Steering wheel turning force	ST-8
Stop lamp	EL-58
STOP/L - Wiring diagram	EL-58
Striking rod (M/T)	MT-18
Strut (front)	SU-9
Strut (rear)	SU-21
Sub-gear (M/T)	MT-17
Sun roof, electric	EL-140
Sunload sensor	HA-99
Sunroof	BT-43
Supplemental Restraint System	RS-13
Supplemental restraint system - Wiring diagram	RS-38
Symbols and abbreviations	GI-9
Symptom matrix chart	EC-125
Synchronizer (M/T)	MT-17
System readiness test (SRT) code	EC-69

T

Tachometer	EL-83
Tail lamp	EL-52
TAIL/L - Wiring diagram	EL-54
TCM circuit diagram	AT-15
TCM inspection table	AT-100
TFTS - Wiring diagram	EC-288
THEFT - Wiring diagram	EL-220
Theft warning system	EL-215
Thermal protector	HA-114, 200
Thermostat	LC-12
Three way catalyst	EC-351
Three way catalyst precautions	GI-6
Throttle position sensor (TPS)	EC-177
Throttle position sensor adjustment	EC-107
Throttle position switch	AT-201, 270, EC-432

ALPHABETICAL INDEX

Throwout bearing - See Clutch release bearing	CL-16
Tie-rod ball joints.....	ST-19
Tightening torque of standard bolts.....	GI-51
Timing belt.....	EM-19
Tire rotation	MA-24
Tire size	GI-45
TLID - Wiring diagram	EL-139
Torque converter installation	AT-284
Tow truck towing.....	GI-49
TP/SW - Wiring diagram	EC-434
TPS - Wiring diagram.....	EC-183
Transmission case (M/T).....	MT-16
TRANSMT - Wiring diagram.....	EL-269
Tread-FR&RR (Dimensions).....	GI-45
Trim	BT-26
Trouble diagnoses	GI-34
Trunk room trim.....	BT-32
TURN - Wiring diagram	EL-67
Turn signal lamp	EL-65
Two trip detection logic	EC-67
Two-pole lift	GI-48

U

Under body	BT-59
------------------	-------

V

Vacuum cut valve bypass valve.....	EC-538, 544
Vacuum hose (brake system).....	BR-19
Vacuum hose drawing (Engine control)	EC-27
Valve guide.....	EM-38
Valve seat.....	EM-39
Valve spring.....	EM-41
Vehicle identification number.....	GI-43
Vehicle recovery (freeing a stuck vehicle).....	GI-50
VEHICLE SECURITY (THEFT WARNING) SYSTEM.....	EL-215
Vehicle speed sensor (VSS)	EC-419

Vent mode switch.....	HA-137
VENT/V - Wiring diagram	EC-378, 507, 528
Viscosity number (SAE)	MA-11
Viscous coupling (FF A/T).....	AT-361
Viscous coupling (FF M/T)	MT-11
VSS - Wiring diagram	EC-421

W

WARN - Wiring diagram	EL-99
Warning chime	EL-105
Warning lamps	EL-98
Washer, front.....	EL-114
Water cock control rod adjustment	HA-166
Water pump	LC-10
Water temperature gauge	EL-83
Weatherstrip - See Exterior	BT-33
Wheel alignment (front).....	SU-6
Wheel alignment (rear).....	SU-19
Wheel balance	MA-24
Wheel bearing (front).....	AX-3
Wheel bearing (rear)	AX-21
Wheel hub (front).....	AX-5
Wheel hub (rear)	AX-21
Wheel sensors (ABS).....	BR-75
Wheel size	GI-45
Wheelarch height	SU-5
Wheelbase (Dimensions)	GI-45
Wide open & closed throttle position switch	EC-177
Width (Dimensions)	GI-45
WINDOW - Wiring diagram	EL-169
Window, door	BT-19
Windshield.....	BT-52
WIPER - Wiring diagram.....	EL-116
Wiper, front.....	EL-114
Wiring Diagram (Cell code) list.....	EL-331
Wiring Diagram - VEHSEC -	EL-220
Wiring diagrams	GI-11
Withdrawal lever (clutch)	CL-16
Wrist pin - See Piston pin inspection.....	EM-59