

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

A

A/C air flow [ATC-36](#)
A/C and audio controller [ATC-117](#)
A/C component layout [ATC-25](#)
A/C compressor clutch removal and installation
[ATC-140](#)
A/C compressor mounting [ATC-139](#), [ATC-140](#),
[ATC-143](#), [ATC-144](#), [ATC-145](#), [ATC-146](#), [ATC-147](#),
[ATC-150](#), [ATC-151](#), [ATC-152](#), [ATC-153](#)
A/C compressor precaution [ATC-12](#)
A/C compressor special service tool [ATC-16](#)
A/C control operation (auto A/C) [ATC-34](#)
A/C diagnostic work flow (auto A/C) [ATC-103](#)
A/C evaporator [ATC-153](#)
A/C HFC134a (R134a) system precaution [ATC-6](#)
A/C HFC134a (R134a) system service procedure
[ATC-137](#)
A/C HFC134a (R134a) system service tools ... [ATC-17](#)
A/C HFC134a system service equipment precaution ...
[ATC-12](#)
A/C lubricant (R134a) [ATC-26](#)
A/C lubrication oil [ATC-159](#)
A/C operational check [ATC-62](#)
A/C self-diagnoses (auto A/C) [ATC-53](#), [ATC-103](#)
A/C service data specification [ATC-159](#)
A/C system description (auto A/C) [ATC-29](#)
A/C trouble diagnoses (auto A/C) [ATC-39](#)
A/C, A - Wiring diagram [ATC-45](#)
A/T fluid checking [AT-13](#), [AT-51](#), [MA-19](#)
A/T fluid cooler cleaning [AT-15](#)
A/T fluid replacement [AT-13](#), [MA-20](#)
A/T fluid temperature sensor [AT-152](#)
A/T IND - Wiring diagram [DI-37](#)
A/T self-diagnoses [AT-102](#)
A/T shift lock system [AT-292](#)
A/T shift lock system - Wiring diagram [AT-293](#)
A/T trouble diagnoses [AT-42](#)
A/T Wiring diagram AT - CAN [AT-105](#)
A/T Wiring diagram AT - D/C [AT-196](#)
A/T Wiring diagram AT - D/CF [AT-201](#)
A/T Wiring diagram AT - E/BRE [AT-173](#)
A/T Wiring diagram AT - FPSW1 [AT-228](#)
A/T Wiring diagram AT - FPSW3 [AT-232](#)
A/T Wiring diagram AT - FPSW5 [AT-236](#)
A/T Wiring diagram AT - FPSW6 [AT-240](#)
A/T Wiring diagram AT - FR/B [AT-186](#)
A/T Wiring diagram AT - FR/BF [AT-191](#)
A/T Wiring diagram AT - FTS [AT-153](#)
A/T Wiring diagram AT - HLR/C [AT-205](#)
A/T Wiring diagram AT - HLR/CF [AT-210](#)
A/T Wiring diagram AT - I/C [AT-177](#)
A/T Wiring diagram AT - I/CF [AT-182](#)
A/T Wiring diagram AT - I/LOCK [AT-166](#)
A/T Wiring diagram AT - LC/B [AT-215](#)
A/T Wiring diagram AT - LC/BF [AT-220](#)
A/T Wiring diagram AT - LPSV [AT-134](#)
A/T Wiring diagram AT - MMSW [AT-224](#)
A/T Wiring diagram AT - NONDTC [AT-245](#)

A/T Wiring diagram AT - PNP/SW [AT-112](#)
A/T Wiring diagram AT - POWER [AT-139](#)
A/T Wiring diagram AT - STSIG [AT-108](#)
A/T Wiring diagram AT - TCCSIG [AT-129](#)
A/T Wiring diagram AT - TCV [AT-124](#)
A/T Wiring diagram AT - TRSA/T [AT-159](#)
A/T Wiring diagram AT - VSS A/T [AT-117](#)
Accelerator control system [ACC-3](#)
Accelerator pedal position (APP) sensor [EC-539](#),
[EC-546](#), [EC-560](#)
Accelerator pedal released position learning [EC-42](#)
Air bag [SRS-3](#)
Air bag disposal [SRS-51](#)
Air bag precautions [SRS-3](#)
Air bleeding (hydraulic clutch) [CL-7](#)
Air bleeding for brake system [BR-10](#)
Air cleaner and air duct [EM-15](#)
Air cleaner filter replacement [MA-14](#)
Air conditioner cut control [EC-28](#)
Air flow meter - See Mass air flow sensor [EC-160](#),
[EC-168](#)
Air mix. door motor [ATC-74](#), [ATC-133](#)
Ambient sensor [ATC-104](#), [ATC-119](#)
Angular tightening application [EM-4](#)
Antenna [AV-41](#)
APPS1 - Wiring diagram [EC-541](#)
APPS2 - Wiring diagram [EC-548](#)
APPS3 - Wiring diagram [EC-562](#)
ASC/BS - Wiring diagram [EC-510](#)
ASC/SW - Wiring diagram [EC-503](#)
ASCBOF - Wiring diagram [EC-599](#)
ASCD [EC-631](#)
ASCD (automatic speed control device) [ACS-2](#)
ASCIND - Wiring diagram [EC-613](#)
Ashtray illumination [LT-161](#)
AT indicator lamp [DI-37](#)
Audio [AV-6](#)
AUDIO - Wiring diagram [AV-11](#)
Auto air conditioner - Wiring diagram [ATC-45](#)
Auto amp [ATC-118](#)
Auto anti-dazzling inside mirror [GW-58](#)
Automatic amplifier [ATC-50](#), [ATC-64](#), [ATC-118](#)
Axle [MA-25](#)
Axle housing (rear) [RAX-8](#)

B

BACK/L - Wiring diagram [LT-134](#)
Back-up lamp [LT-134](#)
Back-up lamp switch (M/T) [MT-12](#)
Battery [SC-4](#)
Battery/Starting/Charging System Tester [SC-6](#), [SC-15](#),
[SC-23](#)
BCM (Body control module) [BCS-3](#)
Blower motor [ATC-80](#), [ATC-125](#)
Blower unit [ATC-123](#)
Bose speaker amp. [AV-6](#)
Brake booster [BR-19](#)
Brake fluid change [BR-9](#), [BR-10](#)

ALPHABETICAL INDEX

Brake fluid level	MA-23	Converter housing installation	AT-318
Brake fluid level and line check	BR-9	COOL/F - Wiring diagram	EC-469
Brake hydraulic line	BR-11	Cooling circuit (engine)	CO-8
Brake inspection	MA-24	Cooling fan	CO-20
Brake lines and cables inspection	MA-23	Cooling fan motor	EC-476
Brake master cylinder	BR-14	Crankcase ventilation system - See Positive crankcase ventilation	EC-629
Brake pedal	BR-6	Crankshaft position sensor (POS)	EC-295
Brake switch	EC-534	Crash zone sensor	SRS-47
BRK/SW - Wiring diagram	EC-535	Cylinder head	EM-90
Bulb specifications	LT-194		

C

Camshaft	EM-75
Camshaft inspection	EM-77
Camshaft position sensor (PHASE)	EC-301
CAN - Wiring diagram	EC-139 , LAN-10 , LAN-35
CAN (Controller Area Network)	LAN-4 , LAN-8 , LAN-33
CAN communication	EC-29 , EC-138 , AT-31 , AT-104 , WT-9 , WW-9 , LAN-4 , LAN-8 , LAN-33
Canister-See EVAP canister	EC-620
Center bearing assembly (propeller shaft)	PR-8
Center bearing disassembly (propeller shaft)	PR-7
CHARGE - Wiring diagram	SC-22
Charging system	SC-21
Chassis and body maintenance	MA-18
CHIME - Wiring diagram	DI-43
CIGAR - Wiring diagram	WW-36
Cigarette lighter	WW-36
Cigarette lighter illumination	LT-162
Circuit breaker	PG-16
Clock	DI-57
CLOCK - Wiring diagram	DI-57
Closed loop control	EC-26
Clutch master cylinder	CL-8
Clutch operating cylinder	CL-11
Clutch pedal	CL-5
Clutch release bearing	CL-13
Clutch release mechanism	CL-13
Clutch withdrawal lever	CL-13
Coil spring (front)	FSU-10
Collision diagnosis	SRS-58
Combination lamp, rear, removal and installation	LT-155
Combination meter	DI-4
Combination meter removal and installation - See Instrument panel	IP-11
COMM - Wiring diagram	AV-68
COMPAS - Wiring diagram	DI-21
Compass	DI-20
Component Location (auto A/C)	ATC-42
Compression pressure	EM-90
Compressor clutch removal and installation	ATC-140
Compressor special service tool	ATC-16
Condenser	ATC-151
Console box - See Instrument panel	IP-10 , IP-20
Control units (terminal arrangement)	PG-66
Control valve (A/T)	AT-36
Controller Area Network (CAN)	LAN-4 , LAN-8 , LAN-33

D

D/LOCK - Wiring diagram	BL-24
Daytime light system	LT-38
Daytime running light - See Daytime light system	LT-38
Diagnosis sensor unit	SRS-50
Diagnostic trouble code (DTC) for OBD system	EC-8
Differential carrier assembly	RFD-12
Differential carrier disassembly	RFD-16
Direct clutch solenoid valve	AT-195 , AT-200
Display and amp.assembly	ATC-50 , ATC-64
Door glass	GW-55
Door glass Fitting Adjustment(Front)	GW-57
Door mirror	GW-84 , GW-85
Door trim	EI-30
Door, front	BL-79 , GW-55
Door, rear	BL-79
Drive belt	EM-13
Drive pinion diff. inspection	RFD-15
Drive pinion height	RFD-21 , RFD-24
Drive shaft	MA-26
Drive shaft (rear)	RAX-10
Driver air bag	SRS-37
DTRL - Wiring diagram	LT-44
Duct and grilles	ATC-134

E

ECM power supply	EC-129 , EC-397
ECM/PW - Wiring diagram	EC-398
ECTS - Wiring diagram	EC-182
Electric sunroof	RF-10
Electric throttle control actuator	EC-408 , EC-410
Electrical load signal circuit	EC-597
Electrical unit	PG-66
Electrical units location	PG-60
Electronic ignition (EI) system	EC-27
Engine control module (ECM)	EC-394
Engine control system diagram and chart	EC-22
Engine coolant	CO-10
Engine coolant temperature sensor (ECTS)	EC-180 , EC-192
Engine oil	LU-6
Engine oil filter replacement	MA-15
Engine oil precautions	GI-8
Engine removal	EM-102
ETC1 - Wiring diagram	EC-411
ETC2 - Wiring diagram	EC-418

A
B
C
D
E
F
G
H
I
J
K
L

ALPHABETICAL INDEX

ETC3 - Wiring diagram [EC-422](#)
EVAP canister [EC-620](#)
EVAP canister purge volume control solenoid valve
[EC-328](#), [EC-486](#)
EVAP canister vent control valve [EC-335](#), [EC-494](#)
EVAP control system (small leak) diagnosis .. [EC-319](#),
[EC-359](#)
EVAP control system pressure sensor [EC-342](#),
[EC-345](#), [EC-351](#)
EVAP control system purge flow monitoring diagnosis
[EC-314](#)
EVAP vapor lines inspection [MA-17](#)
Evaporative emission (EVAP) system [EC-617](#)
Evaporator [ATC-153](#)
Exhaust manifold [EM-24](#)
Exhaust system [EX-3](#)
Exhaust system inspection [EX-3](#), [MA-18](#)
Expansion valve [ATC-153](#)

F

F/FOG - Wiring diagram [LT-92](#)
F/PUMP - Wiring diagram [EC-587](#)
Final drive disassembly [RFD-16](#)
Final drive pre-inspection [RFD-15](#)
Final drive removal and installation [RFD-10](#)
Floor trim [EI-36](#)
Flow charts [GI-27](#)
Fluid temperature sensor (A/T) [AT-152](#)
Fluorescent leak detector [ATC-154](#)
Flywheel runout(QR) [EM-135](#)
Fog lamp, front [LT-89](#)
Front axle [FAX-4](#)
Front brake solenoid valve [AT-185](#), [AT-190](#)
Front door [BL-79](#), [GW-55](#)
Front fog lamp [LT-89](#)
Front passenger air bag [SRS-41](#)
Front seat [SE-55](#)
Front seat belt [SB-4](#)
Front seat belt pre-tensioner [SB-2](#), [SRS-3](#), [SRS-49](#)
Front side air bag [SRS-43](#)
Front suspension [FSU-5](#)
Front washer [WW-4](#)
Front wiper [WW-4](#)
FTTS - Wiring diagram [EC-270](#), [EC-274](#)
Fuel cut control (at no load high engine speed) . [EC-28](#)
Fuel filter replacement [FL-5](#)
Fuel gauge [DI-4](#)
Fuel level sensor [EC-377](#), [EC-379](#), [EC-381](#)
Fuel line inspection [FL-4](#), [MA-14](#)
Fuel precautions [GI-5](#)
Fuel pressure check [EC-44](#)
Fuel pressure release [EC-44](#)
Fuel pump [EC-586](#)
Fuel pump and gauge [FL-5](#)
Fuel system [FL-4](#)
Fuel tank [FL-11](#)
Fuel tank temperature sensor [EC-268](#), [EC-273](#)
Fuel tank vacuum relief valve [EC-620](#)

FUELB1 - Wiring diagram [EC-254](#), [EC-262](#)
FUELB2 - Wiring diagram [EC-255](#), [EC-263](#)
Fuse [PG-16](#)
Fuse and fusible link box [PG-72](#)
Fusible link [PG-16](#)

G

Gauges [DI-4](#)
Glass [GW-11](#), [GW-13](#), [GW-55](#)
Glove box lamp [LT-160](#), [LT-193](#)
GPS antenna [AV-46](#)
Ground distribution [PG-30](#)

H

H/LAMP - Wiring diagram [LT-11](#)
Harness connector [PG-64](#)
Harness layout [PG-40](#)
Hazard warning lamp [LT-107](#)
Headlining - See Roof trim [EI-38](#)
Heated oxygen sensor 1 (bank 1) [EC-200](#), [EC-210](#),
[EC-222](#), [EC-426](#), [EC-432](#)
Heated oxygen sensor 1 (bank 2) [EC-200](#), [EC-210](#),
[EC-222](#), [EC-426](#), [EC-432](#)
Heated oxygen sensor 1 heater (bank 1) [EC-144](#)
Heated oxygen sensor 1 heater (bank 2) [EC-144](#)
Heated oxygen sensor 2 (bank 1) [EC-232](#), [EC-241](#),
[EC-439](#), [EC-450](#)
Heated oxygen sensor 2 (bank 2) [EC-232](#), [EC-241](#),
[EC-439](#), [EC-450](#)
Heated oxygen sensor 2 heater (bank 1) [EC-152](#)
Heated oxygen sensor 2 heater (bank 2) [EC-152](#)
Heated seat [SE-47](#)
Heater and cooling unit (Heater core) [ATC-128](#)
HFC134a (R134a) system precaution [ATC-6](#)
HFC134a (R134a) system service procedure [ATC-137](#)
HFC134a (R134a) system service tools [ATC-17](#)
HFC134a system service equipment precaution
[ATC-12](#)
High & low reverse clutch solenoid valve [AT-204](#),
[AT-209](#)
Hood [BL-12](#)
Hood lock system [BL-15](#)
Horn [WW-40](#)
HORN - Wiring diagram [WW-40](#)
HSEAT - Wiring diagram [SE-49](#)

I

IATS - Wiring diagram [EC-177](#)
Idle air volume learning [EC-42](#)
Idle mixture ratio [EC-31](#)
Idle speed [EC-31](#)
Idle speed control (ISC) [EC-385](#), [EC-387](#)
Ignition coil [EM-34](#), [EC-568](#)
Ignition control system [EC-568](#)
Ignition key hole illumination [LT-159](#)
Ignition timing [EC-31](#)

ALPHABETICAL INDEX

IGNSYS - Wiring diagram [EC-569](#)
In vehicle sensor [ATC-107](#), [ATC-120](#)
INJECT - Wiring diagram [EC-581](#)
Injector [EC-580](#)
Input clutch solenoid valve [AT-176](#), [AT-181](#)
Instrument panel [IP-10](#)
Intake air temperature sensor [EC-175](#), [EC-195](#)
Intake door control linkage adjustment [ATC-79](#)
Intake door motor [ATC-77](#), [ATC-126](#)
Intake manifold [EM-22](#)
Intake manifold collector [EM-17](#)
Intake sensor [ATC-113](#), [ATC-122](#)
Intake valve timing control (Bank 1) [EC-141](#)
Intake valve timing control (Bank 2) [EC-141](#)
Intake valve timing control solenoid valve (Bank 1)
[EC-401](#)
Intake valve timing control solenoid valve (Bank 2)
[EC-401](#)
Integrated homelink transmitter [BL-137](#)
Interior [EI-32](#)
Interior lamp [LT-163](#)
IPDM (Intelligent power distribution module engine
room) [PG-17](#)
IVCB1 - Wiring diagram [EC-402](#)
IVCB2 - Wiring diagram [EC-404](#)
IVIS (Infiniti vehicle immobilizer system) precautions ...
[GI-3](#)

K

KEYLES - Wiring diagram [BL-51](#)
Knock sensor (KS) [EC-290](#)
KS - Wiring diagram [EC-291](#)

L

LAN system circuit [ATC-67](#)
Latch (lower anchors and tether for children) system ...
[SB-10](#)
Line pressure solenoid valve [AT-133](#)
Line pressure test (A/T) [AT-52](#)
Liquid gasket application [LU-2](#), [CO-2](#)
Location of electrical units [PG-60](#)
Low coast brake solenoid valve [AT-214](#), [AT-219](#)
Low tire pressure warning system [WT-7](#)
Lubricant (R134a) A/C [ATC-7](#), [ATC-26](#)
Lubrication circuit (engine) [LU-4](#)
Lubrication oil A/C [ATC-159](#)
Luggage compartment trim [EI-40](#)

M

M/T oil replacement [MT-10](#)
MAFS - Wiring diagram [EC-163](#), [EC-170](#)
Magnet clutch [ATC-85](#), [ATC-140](#)
MAIN - Wiring diagram [EC-129](#)
Maintenance (engine) [MA-11](#)
Manual transmission oil replacement ... [MA-18](#), [MA-19](#)
Mass air flow sensor (MAFS) [EC-160](#), [EC-168](#)

Master cylinder (brake) [BR-14](#)
Master cylinder (clutch) [CL-8](#)
Meter [DI-4](#)
METER - Wiring diagram [DI-8](#)
MIL data link connectors circuit [EC-615](#)
MIL/DL - Wiring diagram [EC-615](#)
Mirror, door [GW-84](#), [GW-85](#)
Mirror, out side [GW-84](#), [GW-85](#)
Misfire [EC-284](#)
Mode door control linkage adjustment [ATC-73](#)
Mode door motor [ATC-71](#), [ATC-132](#)
Multiplex communication [ATC-115](#)
Multiport fuel injection (MFI) system [EC-25](#)
Multiport fuel injection precautions [GI-6](#)

N

NATS - Wiring diagram [BL-122](#)
NAVI - Wiring diagram [AV-64](#)
Navigation system [AV-45](#)
NVH troubleshooting (BR) [BR-5](#)
NVIS (Nissan vehicle immobilizer system) precautions
[GI-3](#)

O

O2H1B1 - Wiring diagram [EC-146](#)
O2H1B2 - Wiring diagram [EC-148](#)
O2H2B1 - Wiring diagram [EC-154](#)
O2H2B2 - Wiring diagram [EC-156](#)
O2S1B1 - Wiring diagram ... [EC-202](#), [EC-213](#), [EC-225](#)
O2S1B2 - Wiring diagram ... [EC-204](#), [EC-215](#), [EC-227](#)
O2S2B1 - Wiring diagram .. [EC-234](#), [EC-244](#), [EC-442](#),
[EC-453](#)
O2S2B2 - Wiring diagram .. [EC-236](#), [EC-246](#), [EC-444](#),
[EC-455](#)
Oil cooler (engine) [LU-10](#)
Oil filter [LU-9](#)
Oil pan (engine) [EM-28](#)
Oil pressure (engine) [LU-7](#)
Oil pump (engine) [LU-12](#)
Oil pump regulator valve (engine) [LU-12](#)
Oil seal replacement (front of final drive) [RFD-6](#)
Oil seal replacement (side of final drive) [RFD-8](#)
Operating cylinder (clutch) [CL-11](#)
ORVR (On-board Refueling Vapor Recovery) . [EC-624](#)
Out side mirror [GW-84](#), [GW-85](#)
Overheat [EC-465](#)

P

P/SCKT - Wiring diagram [WW-38](#)
Park/Neutral position switch [EC-525](#)
Park/neutral position switch (A/T) [AT-111](#), [AT-243](#)
Parking brake control [PB-5](#)
Parking drum brake [PB-7](#)
PCV (positive crankcase ventilation) [EC-629](#)
PGC/V - Wiring diagram [EC-330](#), [EC-488](#)
PHSB1 - Wiring diagram [EC-302](#)

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

PHSB2 - Wiring diagram	EC-304	ROOM/L - Wiring diagram	LT-167
Pinion bearing preload diff.	RFD-30	RP/SEN - Wiring diagram	EC-593
Pinion gear height diff.	RFD-24		
PNP/SW - Wiring diagram	EC-527		
POS - Wiring diagram	EC-296		
POWER - Wiring diagram	PG-5		
Power door lock	BL-20		
Power seat	SE-13		
Power socket	WW-38		
Power steering fluid level	PS-6 , MA-25		
Power steering gear	PS-14		
Power steering hydraulic pressure	PS-26		
Power steering oil pump	PS-26		
Power steering system bleeding	PS-6		
Power supply routing	PG-4		
Power window	GW-17		
PRE/SE - Wiring diagram	EC-347 , EC-353		
Precautions for Leak detection dye	ATC-15		
Precautions (General)	GI-4		
Pressure switch 1	AT-190 , AT-227		
Pressure switch 2	AT-219		
Pressure switch 3	AT-181 , AT-231		
Pressure switch 5	AT-200 , AT-235		
Pressure switch 6	AT-209 , AT-239		
Pressure test (A/T)	AT-52		
Propeller shaft	PR-4		
Propeller shaft on vehicle service	PR-4		
Propeller shaft vibration	PR-4		
PS/SEN - Wiring diagram	EC-390		

R

Radiator	CO-13
Radio - See Audio	AV-6
Rear axle	RAX-6
Rear combination lamp removal and installation	LT-155
Rear cover packing replacement diff.	RFD-32
Rear parcel shelf finisher	EI-35
Rear seat	SE-60
Rear suspension	RSU-5
Rear window	GW-13
Rear window defogger	GW-60
Refrigerant connection precaution	ATC-7
Refrigerant discharging evacuating charging	ATC-137
Refrigerant general precaution	ATC-7
Refrigerant lines	ATC-137
Refrigerant pressure sensor	EC-592 , ATC-91 , ATC-152
Refrigeration cycle	ATC-20
Release bearing (clutch)	CL-13
Remote keyless entry system	BL-46
Removal and installation (A/T)	AT-316
Reverse lamp switch (M/T) - See Back-up lamp switch (M/T)	MT-12
Revolution sensor (A/T)	AT-116
Ring gear diff. inspection	RFD-15
Rocker cover	EM-43
Room lamp - See Interior lamp	LT-163

S

SEAT - Wiring diagram	SE-18
Seat belt inspection	SB-7
Seat belt pre-tensioner disposal	SRS-51
Seat belt, front	SB-4
Seat, front	SE-55
Seat, rear	SE-60
SEN/PW - Wiring diagram	EC-482
SHIFT - Wiring diagram	AT-293
Shift lock system	AT-292
Shift schedule	AT-379
Shock absorber (front)	FSU-10
Shock absorber (rear)	RSU-9
Side air bag (satellite) sensor	SRS-48
Side bearing preload diff.	RFD-23
Side curtain air bag	SRS-45
Side flange installation diff.	RFD-9
Side trim	EI-32
SMJ (super multiple junction)	PG-67
Spark plug	EM-35
Spark plug replacement	MA-16
Specification value	EC-124
Speedometer	DI-4
Spiral cable	SRS-39
SROOF - Wiring diagram	RF-13
SRS - See Supplemental Restraint System	SRS-6
SRS - Wiring diagram	SRS-12
SRS Trouble diagnoses	SRS-8
Stabilizer bar (rear)	RSU-16
Stall test (A/T)	AT-51
Standardized relay	PG-69
START - Wiring diagram	SC-12
Starter	SC-10
Starting system	SC-10
Steering gear and linkage inspection	MA-24
Steering linkage	PS-14
Steering wheel and column	PS-8 , PS-10
Steering wheel play	PS-8
Steering wheel turning force	PS-8
Stop lamp	LT-131
Stop lamp switch	EC-534
STOP/L - Wiring diagram	LT-131
Sun roof, electric	RF-10
Sunload sensor	ATC-109 , ATC-121
Sunroof	RF-10 , RF-27
Supplemental Restraint System	SRS-6
Supplemental restraint system - Wiring diagram	SRS-12
Suspension	MA-25
Symbols and abbreviations	GI-10 , GI-23

T

Tachometer	DI-4
TCM circuit diagram	AT-50

ALPHABETICAL INDEX

TCM inspection table	AT-88
Three way catalyst	EM-24
Three way catalyst function (Bank 1)	EC-309
Three way catalyst function (Bank 2)	EC-309
Three way catalyst precautions	GI-5
Throttle body	EM-21
Throttle control motor	EC-421
Throttle control motor relay	EC-416
Throttle position sensor (TPS)	EC-185 , EC-277 , EC-477 , EC-479 , EC-553
Throttle position switch	AT-243
Throwout bearing - See Clutch release bearing	CL-13
Thrust washer selection diff.	RFD-22
Tie-rod	PS-14
Timing chain	EM-55
TLID - Wiring diagram	BL-91
Tooth contact diff.	RFD-28
Top tether strap child restraint	SB-11
Torque converter installation	AT-317 , AT-318
Torque convertor clutch solenoid valve	AT-123 , AT-128
TPS1 - Wiring diagram	EC-279
TPS2 - Wiring diagram	EC-187
TPS3 - Wiring diagram	EC-555
Transverse link (front)	FSU-13
TRNSCV - Wiring diagram	BL-137
Trouble diagnoses	GI-11
Trunk lid	BL-86
Trunk lid opener - See Trunk lid	BL-91
Trunk lid trim	EI-40
Trunk room trim	EI-40
Turbine revolution sensor	AT-158
TURN - Wiring diagram	LT-111
Turn signal lamp	LT-107
Tyre pressure monitoring system - trouble diagnoses ..	WT-10
Tyre pressure monitoring system - wiring diagram	WT-10

U

Upper link (front susp.)	FSU-14
--------------------------------	------------------------

V

Vacuum hose (brake system)	BR-21
Vacuum hose drawing (Engine control)	EC-23
Valve clearance	EM-82
Valve guide	EM-97
Valve lifter	EM-79
Valve seat	EM-99
Valve spring	EM-100
Vanity mirror lamp	LT-156
Vehicle security (theft warning) system	BL-93
Vehicle speed sensor (VSS)	EC-383
VEHSEC - Wiring diagram	BL-98
VENT/V - Wiring diagram	EC-337 , EC-496

W

W/ANT - Wiring diagram	AV-42
WARN - Wiring diagram	DI-29
Warning chime	DI-39
Warning lamps	DI-28
Washer, front	WW-4
Water pump	CO-22
Water temperature gauge	DI-4
Wheel alignment (front)	FSU-6
Wheel alignment (rear)	RSU-5
Wheel balance	WT-4 , MA-22
Wheel bearing (front)	FAX-4
Wheel bearing (rear)	RAX-6
Wheel hub (front)	FAX-4
Wheel hub (rear)	RAX-6
Wheel sensor (VDC)	BRC-61
WINDOW - Wiring diagram	GW-23
Window antenna	AV-41
Window, door	GW-55
Window, rear	GW-13
Windshield	GW-11
WIPER - Wiring diagram	WW-11
Wiper, front	WW-4
Wiring Diagram (Cell code) list	PG-57
Wiring diagrams	GI-15
Withdrawal lever (clutch)	CL-13
WT-T/WARN - Wiring diagram	WT-10

A
B
C
D
E
F
G
H
I
J
K
L

IDX