

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

A

A/C air flow	ATC-35	A/T Wiring diagram AT - PNP/SW	AT-113
A/C and audio controller	ATC-116	A/T Wiring diagram AT - POWER	AT-140
A/C component layout	ATC-24	A/T Wiring diagram AT - STSIG	AT-109
A/C compressor clutch removal and installation	ATC-140	A/T Wiring diagram AT - TCCSIG	AT-130
A/C compressor mounting	ATC-138 , ATC-140 , ATC-143 , ATC-144 , ATC-145 , ATC-146 , ATC-147 , ATC-148 , ATC-149 , ATC-151 , ATC-152	A/T Wiring diagram AT - TCV	AT-125
A/C compressor precaution	ATC-11	A/T Wiring diagram AT - TRSA/T	AT-160
A/C compressor special service tool	ATC-15	A/T Wiring diagram AT - VSS A/T	AT-118
A/C control operation (auto A/C)	ATC-33	Accelerator control system	ACC-3
A/C diagnostic work flow (auto A/C)	ATC-102	Accelerator pedal position (APP) sensor	EC-554 , EC-561 , EC-575
A/C evaporator	ATC-151	Accelerator pedal released position learning	EC-42
A/C HFC134a (R134a) system precaution	ATC-5	Air bag	SRS-3
A/C HFC134a (R134a) system service procedure	ATC-136	Air bag disposal	SRS-51
A/C HFC134a (R134a) system service tools ...	ATC-16	Air bag precautions	SRS-3
A/C HFC134a system service equipment precaution ...	ATC-12	Air bleeding (hydraulic clutch)	CL-7
A/C lubricant (R134a)	ATC-25	Air bleeding for brake system	BR-10
A/C lubrication oil	ATC-157	Air cleaner and air duct	EM-16
A/C operational check	ATC-61	Air cleaner filter replacement	MA-15
A/C self-diagnoses (auto A/C)	ATC-52 , ATC-102	Air conditioner cut control	EC-28
A/C service data specification	ATC-157	Air flow meter - See Mass air flow sensor	EC-161 , EC-169
A/C system description (auto A/C)	ATC-28	Air mix. door motor	ATC-132
A/C trouble diagnoses (auto A/C)	ATC-38	Air spoiler, rear	EI-35
A/C, A - Wiring diagram	ATC-44	Ambient sensor	ATC-103 , ATC-118
A/T fluid checking	AT-13 , AT-51	Angular tightening application	EM-4
A/T fluid cooler cleaning	AT-15	Antenna	AV-37
A/T fluid replacement	AT-13	APPS1 - Wiring diagram	EC-556
A/T fluid temperature sensor	AT-153	APPS2 - Wiring diagram	EC-563
A/T IND - Wiring diagram	DI-34	APPS3 - Wiring diagram	EC-577
A/T self-diagnoses	AT-103	ASC/SW - Wiring diagram	EC-516
A/T shift lock system	AT-291	ASCBOF - Wiring diagram	EC-614
A/T shift lock system - Wiring diagram	AT-292	ASCD	EC-649
A/T trouble diagnoses	AT-42	ASCD (automatic speed control device)	ACS-2
A/T Wiring diagram AT - CAN	AT-106	ASCIND - Wiring diagram	EC-630
A/T Wiring diagram AT - D/C	AT-197	Ashtray illumination	LT-164
A/T Wiring diagram AT - D/CF	AT-202	AT indicator lamp	DI-34
A/T Wiring diagram AT - E/BRE	AT-174	Audio	AV-5
A/T Wiring diagram AT - FPSW1	AT-229	AUDIO - Wiring diagram	AV-10
A/T Wiring diagram AT - FPSW3	AT-233	AUT/DP - Wiring diagram	SE-16 , SE-23
A/T Wiring diagram AT - FPSW5	AT-237	Auto air conditioner - Wiring diagram	ATC-44
A/T Wiring diagram AT - FPSW6	AT-241	Auto amp	ATC-117
A/T Wiring diagram AT - FR/B	AT-187	Auto anti-dazzling inside mirror	GW-92
A/T Wiring diagram AT - FR/BF	AT-192	Automatic amplifier	ATC-49 , ATC-63 , ATC-117
A/T Wiring diagram AT - FTS	AT-154	Automatic drive positioner	SE-11
A/T Wiring diagram AT - HLR/C	AT-206	Automatic transmission fluid replacement	MA-21
A/T Wiring diagram AT - HLR/CF	AT-211	Axle	MA-26
A/T Wiring diagram AT - I/C	AT-178	Axle housing (rear)	RAX-8
A/T Wiring diagram AT - I/CF	AT-183		
A/T Wiring diagram AT - I/LOCK	AT-167		
A/T Wiring diagram AT - LC/B	AT-216		
A/T Wiring diagram AT - LC/BF	AT-221		
A/T Wiring diagram AT - LPSV	AT-135		
A/T Wiring diagram AT - MMSW	AT-225		
A/T Wiring diagram AT - NONDTC	AT-246		

B

BACK/L - Wiring diagram	LT-136
Back-up lamp	LT-136
Back-up lamp switch (M/T)	MT-12
Battery	SC-4
Battery/Starting/Charging System Tester	SC-6 , SC-14 , SC-22
BCM (Body control module)	BCS-3
Blower motor	ATC-79 , ATC-124
Blower unit	ATC-122

ALPHABETICAL INDEX

Bose speaker amp. [AV-5](#)
 Brake booster [BR-18](#)
 Brake fluid change [BR-9](#), [BR-10](#)
 Brake fluid level [MA-24](#)
 Brake fluid level and line check [BR-9](#)
 Brake hydraulic line [BR-11](#)
 Brake inspection [MA-25](#)
 Brake lines and cables inspection [MA-24](#)
 Brake master cylinder [BR-13](#)
 Brake pedal [BR-6](#)
 Brake switch [EC-549](#)
 BRK/SW - Wiring diagram [EC-550](#)
 Bulb specifications [LT-199](#)
 Bumper, front [EI-14](#)
 Bumper, rear [EI-17](#)

C

Camshaft [EM-76](#)
 Camshaft inspection [EM-78](#)
 Camshaft position sensor (PHASE) [EC-303](#)
 CAN - Wiring diagram [EC-140](#), [LAN-10](#), [LAN-38](#)
 CAN (Controller Area Network) [BL-23](#), [BL-53](#), [BL-108](#),
[LAN-4](#), [LAN-8](#), [LAN-36](#)
 CAN communication . [EC-29](#), [EC-139](#), [AT-31](#), [AT-105](#),
[WT-9](#), [BL-23](#), [BL-53](#), [BL-108](#), [LT-43](#), [WW-10](#), [LAN-4](#),
[LAN-8](#), [LAN-36](#)
 Canister-See EVAP canister [EC-637](#)
 Center bearing assembly (propeller shaft) [PR-8](#)
 Center bearing disassembly (propeller shaft) [PR-7](#)
 CHARGE - Wiring diagram [SC-21](#)
 Charging system [SC-20](#)
 Chassis and body maintenance [MA-19](#)
 CHIME - Wiring diagram [DI-39](#)
 CIGAR - Wiring diagram [WW-40](#)
 Cigarette lighter [WW-40](#)
 Cigarette lighter illumination [LT-165](#)
 Circuit breaker [PG-15](#)
 Clock [DI-52](#)
 CLOCK - Wiring diagram [DI-52](#)
 Closed loop control [EC-26](#)
 Clutch master cylinder [CL-8](#)
 Clutch operating cylinder [CL-11](#)
 Clutch pedal [CL-5](#)
 Clutch release bearing [CL-13](#)
 Clutch release mechanism [CL-13](#)
 Clutch withdrawal lever [CL-13](#)
 Coil spring (front) [FSU-10](#)
 Collision diagnosis [SRS-58](#)
 Combination lamp, front, removal and installation
[LT-36](#)
 Combination lamp, rear, removal and installation
[LT-156](#)
 Combination meter [DI-4](#)
 Combination meter removal and installation - See
 Instrument panel [IP-11](#)
 Combination switch [LT-126](#)
 COMM - Wiring diagram [AV-65](#)
 COMPAS - Wiring diagram [DI-19](#)

Compass [DI-18](#)
 Component Location (auto A/C) [ATC-41](#)
 Compression pressure [EM-92](#)
 Compressor clutch removal and installation .. [ATC-140](#)
 Compressor special service tool [ATC-15](#)
 Condenser [ATC-149](#)
 Console box - See Instrument panel [IP-10](#)
 Control units (terminal arrangement) [PG-67](#)
 Control valve (A/T) [AT-36](#)
 Controller Area Network (CAN) [BL-23](#), [BL-53](#), [BL-108](#),
[LAN-4](#), [LAN-8](#), [LAN-36](#)
 Converter housing installation [AT-316](#)
 COOL/F - Wiring diagram [EC-470](#), [EC-482](#)
 Cooling circuit (engine) [CO-8](#)
 Cooling fan [CO-22](#)
 Cooling fan motor [EC-477](#), [EC-489](#)
 Cowl top [EI-21](#)
 Cowl top cover [EI-21](#)
 Crankcase ventilation system - See Positive crankcase
 ventilation [EC-647](#)
 Crankshaft position sensor (POS) [EC-297](#)
 Crash zone sensor [SRS-47](#)
 Cylinder head [EM-92](#)

D

D/LOCK - Wiring diagram [BL-25](#)
 Daytime light system [LT-39](#)
 Daytime running light - See Daytime light system [LT-39](#)
 Diagnosis sensor unit [SRS-50](#)
 Diagnostic trouble code (DTC) for OBD system .. [EC-8](#)
 Differential carrier assembly [RFD-12](#)
 Differential carrier disassembly [RFD-14](#)
 Direct clutch solenoid valve [AT-196](#), [AT-201](#)
 Display and amp.assembly [ATC-49](#), [ATC-63](#)
 Door glass [GW-86](#), [GW-89](#)
 Door glass Fitting Adjustment(Front) [GW-88](#)
 Door glass Fitting Adjustment(Rear) [GW-91](#)
 Door lock [BL-82](#)
 Door mirror [GW-117](#)
 Door trim [EI-37](#)
 Door, front [BL-78](#), [GW-86](#)
 Door, rear [BL-78](#), [GW-89](#)
 Drive belt [EM-13](#)
 Drive pinion diff. inspection [RFD-13](#)
 Drive pinion height [RFD-17](#), [RFD-20](#)
 Drive shaft (rear) [RAX-10](#)
 Driver air bag [SRS-37](#)
 DTRL - Wiring diagram [LT-45](#)
 Duct and grilles [ATC-133](#)

E

ECM power supply [EC-130](#), [EC-399](#)
 ECM/PW - Wiring diagram [EC-400](#)
 ECTS - Wiring diagram [EC-183](#)
 Electric sunroof [RF-10](#)
 Electric throttle control actuator [EC-410](#), [EC-412](#)
 Electrical load signal circuit [EC-612](#)

A
B
C
D
E
F
G
H
I
J
K
L
IDX

ALPHABETICAL INDEX

[ATC-12](#)
High & low reverse clutch solenoid valve [AT-205](#),
[AT-210](#)
Hood [BL-12](#)
Hood lock system [BL-15](#)
Horn [WW-44](#)
HORN - Wiring diagram [WW-44](#)
HSEAT - Wiring diagram [SE-59](#), [SE-63](#)

I

IATS - Wiring diagram [EC-178](#)
Idle air volume learning [EC-42](#)
Idle mixture ratio [EC-31](#)
Idle speed [EC-31](#)
Idle speed control (ISC) [EC-387](#), [EC-389](#)
Ignition coil [EM-35](#), [EC-583](#)
Ignition control system [EC-583](#)
Ignition key hole illumination [LT-162](#)
Ignition timing [EC-31](#)
IGNSYS - Wiring diagram [EC-584](#)
In vehicle sensor [ATC-106](#), [ATC-119](#)
INJECT - Wiring diagram [EC-596](#)
Injector [EC-595](#)
Input clutch solenoid valve [AT-177](#), [AT-182](#)
Instrument panel [IP-10](#)
Intake air temperature sensor [EC-176](#), [EC-196](#)
Intake door control linkage adjustment [ATC-78](#)
Intake door motor [ATC-76](#), [ATC-125](#)
Intake manifold [EM-23](#)
Intake manifold collector [EM-18](#)
Intake sensor [ATC-111](#), [ATC-121](#)
Intake valve timing control (Bank 1) [EC-142](#)
Intake valve timing control (Bank 2) [EC-142](#)
Intake valve timing control solenoid valve (Bank 1)
[EC-403](#)
Intake valve timing control solenoid valve (Bank 2)
[EC-403](#)
Integrated homelink transmitter [BL-151](#)
Interior [EI-39](#)
Interior lamp [LT-166](#)
IPDM (Intelligent power distribution module engine
room) [PG-16](#)
IVCB1 - Wiring diagram [EC-404](#)
IVCB2 - Wiring diagram [EC-406](#)
IVIS (Infiniti vehicle immobilizer system) precautions ...
[GI-3](#)

K

Knock sensor (KS) [EC-292](#)
KS - Wiring diagram [EC-293](#)

L

LAN system circuit [ATC-66](#)
Latch (lower anchors and tether for children) system ...
[SB-9](#)
Line pressure solenoid valve [AT-134](#)

Line pressure test (A/T) [AT-52](#)
Liquid gasket application [LU-2](#), [CO-2](#)
Location of electrical units [PG-61](#)
Low coast brake solenoid valve [AT-215](#), [AT-220](#)
Low tire pressure warning system [WT-7](#)
Lubricant (R134a) A/C [ATC-6](#), [ATC-25](#)
Lubrication circuit (engine) [LU-4](#)
Lubrication oil A/C [ATC-157](#)
Luggage compartment trim [EI-47](#)

M

M/T oil replacement [MT-10](#)
MAFS - Wiring diagram [EC-164](#), [EC-171](#)
Magnet clutch [ATC-84](#), [ATC-140](#)
MAIN - Wiring diagram [EC-130](#)
Maintenance (engine) [MA-11](#)
Mass air flow sensor (MAFS) [EC-161](#), [EC-169](#)
Master cylinder (brake) [BR-13](#)
Master cylinder (clutch) [CL-8](#)
Meter [DI-4](#)
METER - Wiring diagram [DI-8](#)
MIL data link connectors circuit [EC-632](#)
MIL/DL - Wiring diagram [EC-632](#)
Mirror, door [GW-117](#)
Mirror, out side [GW-117](#)
Misfire [EC-286](#)
Mode door control linkage adjustment [ATC-72](#)
Mode door motor [ATC-70](#), [ATC-131](#)
Molding - See Exterior [EI-23](#), [EI-24](#), [EI-27](#), [EI-30](#), [EI-32](#),
[EI-36](#)
Mud guard - See Exterior [EI-28](#), [EI-29](#)
Multiplex communication [ATC-114](#)
Multiport fuel injection (MFI) system [EC-25](#)
Multiport fuel injection precautions [GI-6](#)

N

NATS - Wiring diagram [BL-135](#)
NAVI - Wiring diagram [AV-61](#)
Navigation system [AV-42](#)
NVH troubleshooting (BR) [BR-5](#)
NVIS (Nissan vehicle immobilizer system) precautions
[GI-3](#)

O

O2H1B1 - Wiring diagram [EC-147](#)
O2H1B2 - Wiring diagram [EC-149](#)
O2H2B1 - Wiring diagram [EC-155](#)
O2H2B2 - Wiring diagram [EC-157](#)
O2S1B1 - Wiring diagram ... [EC-203](#), [EC-214](#), [EC-227](#)
O2S1B2 - Wiring diagram ... [EC-205](#), [EC-216](#), [EC-229](#)
O2S2B1 - Wiring diagram .. [EC-236](#), [EC-246](#), [EC-443](#),
[EC-454](#)
O2S2B2 - Wiring diagram .. [EC-238](#), [EC-248](#), [EC-445](#),
[EC-456](#)
Oil cooler (engine) [LU-10](#)
Oil filter [LU-9](#)

ALPHABETICAL INDEX

Oil pan (engine)	EM-29	LT-156	
Oil pressure (engine)	LU-7	Rear cover packing replacement diff.	RFD-26
Oil pump (engine)	LU-12	Rear disc brake	BR-29
Oil pump regulator valve (engine)	LU-12	Rear door	BL-78 , GW-89
Oil seal replacement (front of final drive)	RFD-6	Rear parcel shelf finisher	EI-41
Oil seal replacement (side of final drive)	RFD-8	Rear seat	SE-73
Operating cylinder (clutch)	CL-11	Rear seat belt	SB-5
ORVR (On-board Refueling Vapor Recovery) .	EC-641	Rear suspension	RSU-5
Out side mirror	GW-117	Rear window	GW-13
Overheat	EC-466 , EC-478	Rear window defogger	GW-94

P

P/SCKT - Wiring diagram	WW-42	Refrigerant connection precaution	ATC-7
Park/Neutral position switch	EC-540	Refrigerant discharging evacuating charging	ATC-136
Park/neutral position switch (A/T)	AT-112 , AT-244	Refrigerant general precaution	ATC-6
Parking brake control	PB-5	Refrigerant lines	ATC-136
Parking drum brake	PB-7	Refrigerant pressure sensor	EC-607 , ATC-90 , ATC-151
PCV (positive crankcase ventilation)	EC-647	Refrigeration cycle	ATC-19
Personal lamp	LT-161	Release bearing (clutch)	CL-13
PGC/V - Wiring diagram	EC-332 , EC-501	Removal and installation (A/T)	AT-314
PHSB1 - Wiring diagram	EC-304	Reverse lamp switch (M/T) - See Back-up lamp switch (M/T)	MT-12
PHSB2 - Wiring diagram	EC-306	Revolution sensor (A/T)	AT-117
Pinion bearing preload diff.	RFD-25	Ring gear diff. inspection	RFD-13
Pinion gear height diff.	RFD-20	Rocker cover	EM-44
PNP/SW - Wiring diagram	EC-542	Room lamp - See Interior lamp	LT-166
POS - Wiring diagram	EC-298	ROOM/L - Wiring diagram	LT-172
POWER - Wiring diagram	PG-4	RP/SEN - Wiring diagram	EC-608
Power door mirror	BL-19		
Power seat	SE-54		
Power socket	WW-42		
Power steering fluid level	PS-6 , MA-26		
Power steering gear	PS-14		
Power steering hydraulic pressure	PS-25		
Power steering oil pump	PS-25		
Power steering system bleeding	PS-6		
Power supply routing	PG-3		
Power window	GW-15		
PRE/SE - Wiring diagram	EC-349 , EC-355		
Precautions for Leak detection dye	ATC-14		
Precautions (General)	GI-4		
Pressure switch 1	AT-191 , AT-228		
Pressure switch 2	AT-220		
Pressure switch 3	AT-182 , AT-232		
Pressure switch 5	AT-201 , AT-236		
Pressure switch 6	AT-210 , AT-240		
Pressure test (A/T)	AT-52		
Propeller shaft	PR-4		
Propeller shaft on vehicle service	PR-4		
Propeller shaft vibration	PR-4		
PS/SEN - Wiring diagram	EC-392		

R

Radiator	CO-13
Radio - See Audio	AV-5
Rear axle	RAX-6
Rear bumper	EI-17
Rear combination lamp removal and installation	

S

Seal - See Exterior	EI-26
SEAT - Wiring diagram	SE-54
Seat belt inspection	SB-6
Seat belt pre-tensioner disposal	SRS-51
Seat belt, front	SB-4
Seat belt, rear	SB-5
Seat, front	SE-66
Seat, rear	SE-73
SEN/PW - Wiring diagram	EC-495
SHIFT - Wiring diagram	AT-292
Shift lock system	AT-291
Shift schedule	AT-377
Shock absorber (front)	FSU-10
Shock absorber (rear)	RSU-9
Side air bag (satellite) sensor	SRS-48
Side bearing preload diff.	RFD-18
Side curtain air bag	SRS-45
Side flange installation diff.	RFD-8
Side trim	EI-39
SMJ (super multiple junction)	PG-68
Spark plug	EM-36
Spark plug replacement	MA-17
Specification value	EC-125
Speedometer	DI-4
Spiral cable	SRS-39
Spot lamp	LT-186
SROOF - Wiring diagram	RF-13
SRS - See Supplemental Restraint System	SRS-6
SRS - Wiring diagram	SRS-12

