

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

A

A/C air flow [ATC-36](#)
A/C and audio controller [ATC-119](#)
A/C component layout [ATC-25](#)
A/C compressor clutch removal and installation
[ATC-144](#)
A/C compressor mounting [ATC-142](#), [ATC-144](#),
[ATC-147](#), [ATC-148](#), [ATC-149](#), [ATC-150](#), [ATC-151](#),
[ATC-153](#), [ATC-154](#), [ATC-155](#), [ATC-156](#), [ATC-157](#)
A/C compressor precaution [ATC-12](#)
A/C compressor special service tool [ATC-16](#)
A/C control operation (auto A/C) [ATC-33](#)
A/C diagnostic work flow (auto A/C) [ATC-105](#)
A/C evaporator [ATC-156](#)
A/C HFC134a (R134a) system precaution [ATC-5](#)
A/C HFC134a (R134a) system service procedure
[ATC-140](#)
A/C HFC134a (R134a) system service tools ... [ATC-17](#)
A/C HFC134a system service equipment precaution ...
[ATC-12](#)
A/C lubricant (R134a) [ATC-26](#)
A/C lubrication oil [ATC-162](#)
A/C operational check [ATC-62](#)
A/C self-diagnoses (auto A/C) [ATC-53](#), [ATC-105](#)
A/C service data specification [ATC-162](#)
A/C system description (auto A/C) [ATC-29](#)
A/C trouble diagnoses (auto A/C) [ATC-39](#)
A/C, A - Wiring diagram [ATC-45](#)
A/T fluid checking [AT-12](#), [AT-51](#)
A/T fluid cooler cleaning [AT-14](#)
A/T fluid replacement [AT-12](#)
A/T fluid temperature sensor [AT-141](#)
A/T IND - Wiring diagram [DI-37](#)
A/T self-diagnoses [AT-106](#)
A/T shift lock system [AT-241](#)
A/T shift lock system - Wiring diagram [AT-242](#)
A/T trouble diagnoses [AT-42](#)
A/T Wiring diagram AT - CAN [AT-112](#)
A/T Wiring diagram AT - FTS [AT-142](#)
A/T Wiring diagram AT - MAIN [AT-187](#)
A/T Wiring diagram AT - MMSW [AT-176](#)
A/T Wiring diagram AT - NONDTC [AT-194](#)
A/T Wiring diagram AT - PNP/SW [AT-120](#)
A/T Wiring diagram AT - STSIG [AT-115](#)
A/T Wiring diagram AT - VSS A/T [AT-125](#)
Accelerator control system [ACC-3](#)
Accelerator pedal position (APP) sensor [EC-598](#),
[EC-605](#), [EC-619](#)
Accelerator pedal released position learning [EC-88](#)
AF1B1-Wiring diagram [EC-479](#), [EC-487](#), [EC-495](#),
[EC-504](#), [EC-514](#), [EC-523](#), [EC-535](#)
AF1B2-Wiring diagram [EC-481](#), [EC-489](#), [EC-497](#),
[EC-506](#), [EC-516](#), [EC-525](#), [EC-537](#)
AF1HB1-Wiring diagram [EC-396](#)
AF1HB2-Wiring diagram [EC-398](#)
Air bag [SRS-3](#)
Air bag disposal [SRS-56](#)
Air bag precautions [SRS-3](#)

Air bleeding (hydraulic clutch) [CL-7](#)
Air bleeding for brake system [BR-10](#)
Air cleaner and air duct [EM-17](#)
Air cleaner filter replacement [MA-17](#)
Air conditioner cut control [EC-27](#)
Air flow meter - See Mass air flow sensor [EC-182](#),
[EC-191](#)
Air fuel ratio sensor 1 [EC-477](#), [EC-485](#), [EC-493](#),
[EC-502](#), [EC-511](#), [EC-520](#), [EC-532](#)
Air fuel ratio sensor 1 heater [EC-395](#)
Air mix. door motor [ATC-135](#)
Air spoiler, rear [EI-35](#)
Ambient sensor [ATC-106](#), [ATC-121](#)
Angular tightening application [EM-5](#)
Antenna [AV-30](#)
APPS1 - Wiring diagram [EC-600](#)
APPS2 - Wiring diagram [EC-607](#)
APPS3 - Wiring diagram [EC-621](#)
ASC/BS - Wiring diagram [EC-569](#), [EC-571](#)
ASC/SW - Wiring diagram [EC-561](#)
ASCBOF - Wiring diagram [EC-660](#), [EC-662](#)
ASCD [EC-28](#)
ASCD (automatic speed control device) [ACS-2](#)
ASCD brake switch [EC-567](#), [EC-659](#)
ASCD indicator lamp [EC-674](#)
ASCD steering switch [EC-559](#)
ASCIND - Wiring diagram [EC-675](#)
Ashtray illumination [LT-167](#)
AT indicator lamp [DI-37](#)
Audio [AV-5](#)
Auto air conditioner - Wiring diagram [ATC-45](#)
Auto amp [ATC-120](#)
Auto anti-dazzling inside mirror [GW-84](#)
Automatic amplifier [ATC-50](#), [ATC-64](#), [ATC-120](#)
Automatic transmission fluid replacement [MA-24](#),
[MA-25](#)
AWD - Wiring diagram [TF-17](#)
Axle [MA-30](#)
Axle housing (rear) [RAX-8](#)

B

BACK/L - Wiring diagram [LT-140](#)
Back-up lamp [LT-140](#)
Back-up lamp switch (M/T) [MT-12](#)
Basic inspection [EC-71](#)
Battery [SC-4](#)
Battery/Starting/Charging System Tester [SC-6](#), [SC-14](#),
[SC-25](#)
BCM (Body control module) [BCS-3](#)
Blower motor [ATC-80](#), [ATC-127](#)
Blower unit [ATC-125](#)
Bose speaker amp. [AV-5](#)
Brake booster [BR-21](#)
Brake fluid change [BR-9](#), [BR-10](#)
Brake fluid level [MA-28](#)
Brake fluid level and line check [BR-9](#)
Brake hydraulic line [BR-11](#)
Brake inspection [MA-29](#)

ALPHABETICAL INDEX

Brake lines and cables inspection	MA-28	Control units (terminal arrangement)	PG-71
Brake master cylinder	BR-14	Control valve (A/T)	AT-37
Brake pedal	BR-6	Controller Area Network (CAN) .	BL-23 , BL-57 , BL-99 ,
Brake switch	EC-593	BL-203 , SE-16 , LAN-21 , LAN-30 , LAN-57 , LAN-90 ,	
BRK/SW - Wiring diagram	EC-594	LAN-119	
Bulb specifications	LT-207	Converter housing installation	AT-280
Bumper, front	EI-14	COOL/F - Wiring diagram	EC-460
Bumper, rear	EI-17	Cooling circuit (engine)	CO-8

C

Camshaft	EM-84
Camshaft inspection	EM-86
Camshaft position sensor (PHASE)	EC-299
CAN - Wiring diagram	EC-167 , LAN-32 , LAN-59 ,
LAN-92 , LAN-121	
CAN (Controller Area Network) .	BL-23 , BL-57 , BL-99 ,
BL-203 , SE-16 , LAN-21 , LAN-30 , LAN-57 , LAN-90 ,	
LAN-119	
CAN communication .	EC-30 , EC-166 , AT-31 , AT-111 ,
TF-13 , TF-32 , WT-9 , BL-23 , BL-57 , BL-99 , BL-203 ,	
SE-16 , LT-42 , VW-9 , LAN-21 , LAN-30 , LAN-57 ,	
LAN-90 , LAN-119	
Canister-See EVAP canister	EC-34
Center bearing assembly (propeller shaft) PR-9 , PR-21	
Center bearing disassembly (propeller shaft)	PR-8 ,
PR-20	
CHARGE - Wiring diagram	SC-23
Charging system	SC-22
Chassis and body maintenance	MA-21
CHIME - Wiring diagram	DI-42
CIGAR - Wiring diagram	VW-38
Cigarette lighter	VW-38
Cigarette lighter illumination	LT-168
Circuit breaker	PG-15
Clock	DI-58
Closed loop control	EC-24
Clutch master cylinder	CL-8
Clutch operating cylinder	CL-11
Clutch pedal	CL-5
Clutch release bearing	CL-13
Clutch release mechanism	CL-13
Clutch withdrawal lever	CL-13
Coil spring (front)	FSU-10 , FSU-27
Collision diagnosis	SRS-63
Combination lamp, front, removal and installation	
LT-35 , LT-74	
Combination lamp, rear, removal and installation	
LT-159	
Combination meter	DI-4
Combination switch	LT-131
COMM - Wiring diagram	AV-57
COMPAS - Wiring diagram	DI-20
Compass	DI-19
Component Location (auto A/C)	ATC-42
Compression pressure	EM-101
Compressor clutch removal and installation ..	ATC-144
Compressor special service tool	ATC-16
Condenser	ATC-154

Control units (terminal arrangement)	PG-71
Control valve (A/T)	AT-37
Controller Area Network (CAN) .	BL-23 , BL-57 , BL-99 ,
BL-203 , SE-16 , LAN-21 , LAN-30 , LAN-57 , LAN-90 ,	
LAN-119	
Converter housing installation	AT-280
COOL/F - Wiring diagram	EC-460
Cooling circuit (engine)	CO-8
Cooling fan	CO-21
Cooling fan motor	EC-467
Cowl top	EI-21
Cowl top cover	EI-21
Crankcase ventilation system - See Positive crankcase ventilation	EC-43
Crankshaft position sensor (POS)	EC-292
Crash zone sensor	SRS-51
Cylinder head	EM-101

D

D/LOCK - Wiring diagram	BL-25 , BL-31
Daytime light system	LT-38
Daytime running light - See Daytime light system LT-38	
Diagnosis sensor unit	SRS-54
Diagnostic trouble code (DTC) for OBD system .	EC-8 ,
EC-47	
Diagnostic trouble code (DTC) inspection priority chart	EC-99
Direct clutch solenoid valve	AT-163 , AT-165
Display and amp.assembly	ATC-50 , ATC-64
Door glass	GW-76 , GW-80
Door glass Fitting Adjustment(Front)	GW-79
Door glass Fitting Adjustment(Rear)	GW-83
Door lock	BL-170
Door mirror	GW-109
Door trim	EI-37
Door, front	BL-166 , GW-76
Door, rear	BL-166 , GW-80
Drive belt	EM-14
Drive shaft	MA-31
Drive shaft (rear)	RAX-10
Driver air bag	SRS-42
DTRL - Wiring diagram	LT-44
Duct and grilles	ATC-136

E

ECM power supply	EC-157 , EC-402
ECM/PW - Wiring diagram	EC-403
ECTS - Wiring diagram	EC-204
Electric sunroof	RF-10
Electric throttle control actuator	EC-413 , EC-415
Electrical load signal circuit	EC-658
Electrical unit	PG-71
Electrical units location	PG-65
Electronic ignition (EI) system	EC-25
Engine control circuit diagram	EC-113 , EC-115
Engine control component parts location	EC-106
Engine control module (ECM)	EC-392

A
B
C
D
E
F
G
H
I
J
K
L
IDX

ALPHABETICAL INDEX

Engine control system diagram [EC-22](#)
Engine coolant [CO-10](#)
Engine coolant temperature sensor (ECTS) ... [EC-202](#),
[EC-214](#)
Engine fail-safe system [EC-101](#)
Engine oil [LU-6](#)
Engine oil filter replacement [MA-18](#)
Engine oil precautions [GI-7](#)
Engine oil replacement [MA-17](#)
Engine removal [EM-113](#)
ETC1 - Wiring diagram [EC-416](#)
ETC2 - Wiring diagram [EC-423](#)
ETC3 - Wiring diagram [EC-427](#)
EVAP canister [EC-34](#)
EVAP canister purge volume control solenoid valve
[EC-327](#), [EC-544](#)
EVAP canister vent control valve [EC-334](#), [EC-552](#)
EVAP control system (small leak) diagnosis ... [EC-319](#)
EVAP control system pressure sensor [EC-341](#),
[EC-344](#), [EC-350](#)
EVAP control system purge flow monitoring diagnosis
[EC-314](#)
EVAP vapor lines inspection [MA-20](#)
Evaporative emission (EVAP) system [EC-31](#)
Evaporator [ATC-156](#)
Exhaust manifold [EM-26](#)
Exhaust system [EX-3](#)
Exhaust system inspection [EX-3](#), [MA-21](#)
Expansion valve [ATC-157](#)

F

F/FOG - Wiring diagram [LT-98](#)
F/PUMP - Wiring diagram [EC-648](#)
Final drive pre-inspection [RFD-18](#), [RFD-38](#), [FFD-16](#)
Final drive removal and installation [RFD-15](#)
Floor trim [EI-43](#)
Flow charts [GI-26](#)
Fluid temperature sensor (A/T) [AT-141](#)
Fluorescent leak detector [ATC-158](#)
Flywheel runout(QR) [EM-150](#)
Fog lamp, front [LT-95](#)
Freeze frame data [EC-51](#)
Front axle [FAX-4](#), [FAX-12](#)
Front brake solenoid valve [AT-159](#), [AT-161](#)
Front bumper [EI-14](#)
Front combination lamp removal and installation [LT-35](#),
[LT-74](#)
Front door [BL-166](#), [BL-170](#), [GW-76](#)
Front fog lamp [LT-95](#)
Front passenger air bag [SRS-46](#)
Front seat [SE-90](#)
Front seat belt [SB-4](#)
Front seat belt pre-tensioner [SB-2](#), [SRS-3](#), [SRS-53](#)
Front side air bag [SRS-47](#)
Front suspension [FSU-6](#), [FSU-23](#)
Front washer [WW-4](#)
Front wiper [WW-4](#)
FTTS - Wiring diagram [EC-263](#), [EC-267](#)

Fuel cut control (at no load high engine speed) . [EC-26](#)
Fuel filter replacement [FL-4](#)
Fuel gauge [DI-4](#)
Fuel injection system (Bank 1) [EC-242](#), [EC-252](#)
Fuel injection system (Bank 2) [EC-242](#), [EC-252](#)
Fuel injector [EC-640](#)
Fuel level sensor [EC-375](#), [EC-377](#), [EC-379](#)
Fuel line inspection [FL-3](#), [MA-17](#)
Fuel pressure check [EC-91](#)
Fuel pressure release [EC-91](#)
Fuel pump [EC-647](#)
Fuel pump and gauge [FL-4](#)
Fuel system [FL-3](#)
Fuel tank [FL-11](#)
Fuel tank temperature sensor [EC-261](#), [EC-266](#)
Fuel tank vacuum relief valve [EC-34](#)
FUELB1 - Wiring diagram [EC-244](#), [EC-254](#)
FUELB2 - Wiring diagram [EC-245](#), [EC-255](#)
Fuse [PG-15](#)
Fuse and fusible link box [PG-77](#)
Fusible link [PG-15](#)

G

Gauges [DI-4](#)
Generic scan tool (GST) [EC-138](#)
Glass [GW-12](#), [GW-14](#), [GW-76](#), [GW-80](#)
Glove box lamp [LT-166](#), [LT-206](#)
Grille - See Exterior [EI-20](#)
Ground distribution [PG-29](#)

H

H/LAMP - Wiring diagram [LT-11](#)
Harness connector [PG-69](#)
Harness layout [PG-41](#)
Hazard warning lamp [LT-113](#)
Headlamp [LT-7](#)
Headlamp removal and installation [LT-35](#), [LT-74](#)
Headlining - See Roof trim [EI-45](#)
Heated oxygen sensor 2 (bank 1) [EC-222](#), [EC-231](#),
[EC-431](#), [EC-442](#)
Heated oxygen sensor 2 (bank 2) [EC-222](#), [EC-231](#),
[EC-431](#), [EC-442](#)
Heated oxygen sensor 2 heater (bank 1) [EC-174](#)
Heated oxygen sensor 2 heater (bank 2) [EC-174](#)
Heated seat [SE-82](#)
Heater and cooling unit (Heater core) [ATC-130](#)
HFC134a (R134a) system precaution [ATC-5](#)
HFC134a (R134a) system service procedure [ATC-140](#)
HFC134a (R134a) system service tools [ATC-17](#)
HFC134a system service equipment precaution
[ATC-12](#)
High & low reverse clutch solenoid valve [AT-167](#),
[AT-169](#)
Hood [BL-13](#)
Hood lock system [BL-16](#)
Horn [WW-42](#)
HORN - Wiring diagram [WW-42](#)

ALPHABETICAL INDEX

How to erase DTC for OBD system [EC-60](#)
HSEAT - Wiring diagram [SE-84](#), [SE-87](#)
Lubrication oil A/C [ATC-162](#)
Luggage compartment trim [EI-47](#)

I

IATS - Wiring diagram [EC-199](#)
Idle air volume learning [EC-89](#)
Idle mixture ratio [EC-77](#)
Idle speed [EC-76](#)
Idle speed control (ISC) [EC-383](#), [EC-385](#)
Ignition coil [EM-43](#), [EC-627](#)
Ignition control system [EC-627](#)
Ignition key hole illumination [LT-165](#)
Ignition timing [EC-76](#)
IGNSYS - Wiring diagram [EC-628](#)
In vehicle sensor [ATC-109](#), [ATC-122](#)
INJECT - Wiring diagram [EC-641](#)
Injector [EC-640](#)
Input clutch solenoid valve [AT-155](#), [AT-157](#)
Intake air temperature sensor [EC-198](#), [EC-217](#)
Intake door control linkage adjustment [ATC-79](#)
Intake door motor [ATC-77](#), [ATC-128](#)
Intake manifold [EM-24](#)
Intake manifold collector [EM-19](#)
Intake sensor [ATC-115](#), [ATC-124](#)
Intake valve timing control (Bank 1) [EC-169](#)
Intake valve timing control (Bank 2) [EC-169](#)
Intake valve timing control solenoid valve (Bank 1)
[EC-406](#)
Intake valve timing control solenoid valve (Bank 2)
[EC-406](#)
Integrated homelink transmitter [BL-248](#)
Interior [EI-39](#)
Interior lamp [LT-169](#)
IPDM (Intelligent power distribution module engine
room) [PG-16](#)
IVCB1 - Wiring diagram [EC-407](#)
IVCB2 - Wiring diagram [EC-409](#)
IVIS (Infiniti vehicle immobilizer system) precautions ...
[GI-3](#)

K

Knock sensor (KS) [EC-287](#)
KS - Wiring diagram [EC-288](#)

L

LAN system circuit [ATC-67](#)
Latch (lower anchors and tether for children) system ...
[SB-9](#)
Line pressure solenoid valve [AT-134](#)
Line pressure test (A/T) [AT-53](#)
Liquid gasket application [LU-2](#), [CO-2](#)
Location of electrical units [PG-65](#)
Low coast brake solenoid valve [AT-171](#), [AT-173](#)
Low tire pressure warning system [WT-7](#)
Lubricant (R134a) A/C [ATC-6](#), [ATC-26](#)
Lubrication circuit (engine) [LU-4](#)

M

M/T oil replacement [MT-10](#)
MAFS - Wiring diagram [EC-185](#), [EC-193](#)
Magnet clutch [ATC-86](#), [ATC-144](#)
MAIN - Wiring diagram [EC-157](#)
Maintenance (engine) [MA-13](#)
Major overhaul (Final drive) [RFD-17](#), [FFD-14](#)
Major overhaul (Transfer) [TF-50](#)
Malfunction indicator lamp (MIL) [EC-62](#)
Mass air flow sensor (MAFS) [EC-182](#), [EC-191](#)
Master cylinder (brake) [BR-14](#)
Master cylinder (clutch) [CL-8](#)
Meter [DI-4](#)
METER - Wiring diagram [DI-8](#)
MIL data link connectors circuit [EC-683](#)
MIL/DL - Wiring diagram [EC-683](#)
Mirror, door [GW-109](#)
Mirror, out side [GW-109](#)
Misfire [EC-277](#)
Mode door control linkage adjustment [ATC-73](#)
Mode door motor [ATC-71](#), [ATC-134](#)
Molding - See Exterior [EI-23](#), [EI-24](#), [EI-27](#), [EI-30](#), [EI-32](#),
[EI-36](#)
Mud guard - See Exterior [EI-28](#), [EI-29](#)
Multiplex communication [ATC-117](#)
Multiport fuel injection (MFI) system [EC-23](#)
Multiport fuel injection precautions [GI-6](#)

N

NATS - Wiring diagram [BL-229](#)
NAVI - Wiring diagram [AV-52](#)
Navigation system [AV-35](#)
NVH troubleshooting (BR) [BR-5](#)
NVH troubleshooting (Final drive) [RFD-7](#), [FFD-6](#)
NVH troubleshooting (Propeller shaft) [PR-3](#), [PR-12](#)
NVH troubleshooting (Transfer) [TF-8](#)
NVIS (Nissan vehicle immobilizer system) precautions
[GI-3](#)

O

O2H2B1 - Wiring diagram [EC-176](#)
O2H2B2 - Wiring diagram [EC-178](#)
O2S2B1 - Wiring diagram .. [EC-224](#), [EC-234](#), [EC-434](#),
[EC-445](#)
O2S2B2 - Wiring diagram .. [EC-226](#), [EC-236](#), [EC-436](#),
[EC-447](#)
Oil cooler (engine) [LU-14](#)
Oil filter [LU-10](#)
Oil pan (engine) [EM-30](#)
Oil pressure (engine) [LU-7](#)
Oil pump (engine) [LU-17](#)
Oil pump regulator valve (engine) [LU-17](#)
Oil seal replacement (front of final drive) [RFD-11](#),

ALPHABETICAL INDEX

FFD-9		Rear parcel shelf finisher	EI-41
Oil seal replacement (side of final drive)	RFD-13 ,	Rear seat	SE-98
FFD-11		Rear seat belt	SB-5
On board diagnostic system	EC-46	Rear suspension	RSU-5
Operating cylinder (clutch)	CL-11	Rear window	GW-14
ORVR (On-board Refueling Vapor Recovery)	EC-38	Rear window defogger	GW-86
Out side mirror	GW-109	Refrigerant connection precaution	ATC-7
Overheat	EC-456	Refrigerant discharging evacuating charging	ATC-140
P			
P/SCKT - Wiring diagram	WW-40	Refrigerant general precaution	ATC-6
Park/Neutral position switch	EC-585	Refrigerant lines	ATC-140
Park/neutral position switch (A/T)	AT-119	Refrigerant pressure sensor	EC-653 , ATC-92 ,
Parking brake control	PB-5	ATC-155	
Parking drum brake	PB-7	Refrigeration cycle	ATC-20
PCV (positive crankcase ventilation)	EC-43	Release bearing (clutch)	CL-13
Personal lamp	LT-164	Removal and installation (A/T)	AT-276
PGC/V - Wiring diagram	EC-329 , EC-546	Removal and installation (Transfer)	TF-49
PHSB1 - Wiring diagram	EC-301	Reverse lamp switch (M/T) - See Back-up lamp switch	
PHSB2 - Wiring diagram	EC-303	(M/T)	MT-12
PNP/SW - Wiring diagram	EC-587 , EC-589	Revolution sensor (A/T)	AT-123
POS - Wiring diagram	EC-294	Rocker cover	EM-52
POWER - Wiring diagram	PG-4	Room lamp - See Interior lamp	LT-169
Power door mirror	BL-20	ROOM/L - Wiring diagram	LT-176
Power seat	SE-79	RP/SEN - Wiring diagram	EC-654
Power socket	WW-40	S	
Power steering fluid level	PS-7 , MA-30	SAE J1979 - Service \$01 - 09	EC-46
Power steering gear	PS-17	Seal - See Exterior	EI-26
Power steering hydraulic pressure	PS-27	SEAT - Wiring diagram	SE-79
Power steering oil pump	PS-27	Seat belt inspection	SB-6
Power steering pressure (PSP) sensor	EC-387	Seat belt pre-tensioner disposal	SRS-56
Power steering system bleeding	PS-7	Seat belt, front	SB-4
Power supply routing	PG-3	Seat belt, rear	SB-5
Power window	GW-16	Seat, front	SE-90
PRE/SE - Wiring diagram	EC-346 , EC-352	Seat, rear	SE-98
Precautions for Leak detection dye	ATC-15	Self-diagnosis (Transfer)	TF-22
Precautions (General)	GI-4	Self-diagnostic results	EC-65
Pressure switch 1	AT-161 , AT-179	SEN/PW - Wiring diagram	EC-473
Pressure switch 2	AT-173	SHIFT - Wiring diagram	AT-242
Pressure switch 3	AT-157 , AT-181	Shift lock system	AT-241
Pressure switch 5	AT-165 , AT-183	Shift schedule	AT-353
Pressure switch 6	AT-169 , AT-185	Shock absorber (front)	FSU-10 , FSU-27
Pressure test (A/T)	AT-53	Shock absorber (rear)	RSU-9
Propeller shaft	PR-4 , PR-13 , PR-16	Side air bag (satellite) sensor	SRS-52
Propeller shaft on vehicle service	PR-4 , PR-13 , PR-16	Side curtain air bag	SRS-49
Propeller shaft vibration	PR-4 , PR-13 , PR-16	Side trim	EI-39
PS/SEN - Wiring diagram	EC-388	SMJ (super multiple junction)	PG-72
R			
Radiator	CO-13	SNOW MODE SW	EC-677
Radio - See Audio	AV-5	SNOWSW - Wiring diagram	EC-678
Rear axle	RAX-6	Spark plug	EM-44
Rear bumper	EI-17	Spark plug replacement	MA-19
Rear combination lamp removal and installation		Specification value	EC-146
LT-159		Speedometer	DI-4
Rear disc brake	BR-38	Spiral cable	SRS-44
Rear door	BL-166 , GW-80	Spot lamp	LT-192
		SROOF - Wiring diagram	RF-13
		SRS - See Supplemental Restraint System	SRS-6
		SRS - Wiring diagram	SRS-13
		SRS Trouble diagnoses	SRS-9

ALPHABETICAL INDEX

Stabilizer bar (rear)	RSU-16	Trunk room trim	EI-47
Stall test (A/T)	AT-51	Turbine revolution sensor	AT-146
Standardized relay	PG-74	TURN - Wiring diagram	LT-117
START - Wiring diagram	SC-11	Turn signal lamp	LT-113
Starter	SC-9	Two trip detection logic	EC-46
Starting system	SC-9	Tyre pressure monitoring system - trouble diagnoses ..	WT-10
Steering gear and linkage inspection	MA-29	Tyre pressure monitoring system - wiring diagram	WT-10
Steering linkage	PS-17		
Steering wheel and column	PS-9 , PS-11	U	
Steering wheel play	PS-9		
Steering wheel turning force	PS-9		
Step lamp	LT-139		
Stop lamp	LT-137	Upper link (front susp.)	FSU-13 , FSU-30
Stop lamp switch	EC-593		
STOP/L - Wiring diagram	LT-137	V	
Sun roof, electric	RF-10		
Sunload sensor	ATC-112 , ATC-123	Vacuum hose (brake system)	BR-23
Sunroof	RF-10	Vacuum hose drawing (Engine control)	EC-112
Supplemental Restraint System	SRS-6	Valve clearance	EM-93
Supplemental restraint system - Wiring diagram	SRS-13	Valve guide	EM-108
Suspension	MA-30	Valve lifter	EM-88
Symbols and abbreviations	GI-9 , GI-22	Valve seat	EM-110
Symptom matrix chart	EC-102	Valve spring	EM-111
System readiness test (SRT) code	EC-52	Vanity mirror lamp	LT-161
	T	VDC -Wiring diagram	BRC-15
		Vehicle security (theft warning) system	BL-199
Tachometer	DI-4	Vehicle speed sensor (VSS)	EC-381
TCM circuit diagram	AT-50	VEHSEC - Wiring diagram	BL-205
TCM inspection table	AT-91	VENT/V - Wiring diagram	EC-336 , EC-554
Three way catalyst	EM-26	VIN registration	EC-88
Three way catalyst function (Bank 1)	EC-308		
Three way catalyst function (Bank 2)	EC-308	W	
Three way catalyst precautions	GI-5		
Throttle body	EM-23	W/ANT - Wiring diagram	AV-31
Throttle control motor	EC-426	WARN - Wiring diagram	DI-27
Throttle control motor relay	EC-421	Warning chime	DI-39
Throttle position sensor (TPS)	EC-207 , EC-270 , EC-468 , EC-470 , EC-612	Warning lamps	DI-26
Throttle valve closed position learning	EC-88	Washer, front	WW-4
Throwout bearing - See Clutch release bearing	CL-13	Water pump	CO-23
Tie-rod	PS-17	Water temperature gauge	DI-4
Timing chain	EM-64	Wheel alignment (front)	FSU-7 , FSU-24
Tire rotation	MA-28	Wheel alignment (rear)	RSU-5
TLID - Wiring diagram	BL-183 , BL-184	Wheel balance	WT-5 , MA-26
Top tether strap child restraint	SB-10	Wheel bearing (front)	FAX-4
Torque converter installation	AT-279 , AT-280	Wheel bearing (rear)	RAX-6
Torque convertor clutch solenoid valve	AT-130 , AT-132	Wheel hub (front)	FAX-4 , FAX-12
TPS1 - Wiring diagram	EC-272	Wheel hub (rear)	RAX-6
TPS2 - Wiring diagram	EC-209	Wheel sensor (VDC)	BRC-66
TPS3 - Wiring diagram	EC-614	WINDOW - Wiring diagram	GW-25
Transfer control unit inspection table	TF-20	Window antenna	AV-30
Transverse link (front)	FSU-12 , FSU-29	Window, door	GW-76 , GW-80
TRNSCV - Wiring diagram	BL-248	Window, rear	GW-14
Trouble diagnoses	GI-10	Windshield	GW-12
Trunk lid	BL-176	WIPER - Wiring diagram	WW-11
Trunk lid opener - See Trunk lid	BL-181	Wiper, front	WW-4
Trunk lid trim	EI-47	Wiring Diagram (Cell code) list	PG-62
		Wiring diagrams	GI-14
		Withdrawal lever (clutch)	CL-13
		WT-T/WARN - Wiring diagram	WT-10