

# ALPHABETICAL INDEX

## SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

**IDX**

# ALPHABETICAL INDEX

## A

ABS (anti-lock brake system) .....	BR-24
ABS - Wiring diagram .....	BR-33
Absolute pressure sensor.....	EC-117
A/C air flow.....	HA-17
A/C component layout.....	HA-16
A/C compressor clutch removal and installation.....	HA-97
A/C compressor description.....	HA-12
A/C compressor mounting .....	HA-96
A/C compressor precaution .....	HA-6
A/C compressor special service tool .....	HA-6
A/C control linkage adjustment (auto A/C).....	HA-74
A/C control operation (auto A/C).....	HA-21
A/C diagnostic work flow (auto A/C) .....	HA-23
A/C harness layout (auto A/C) .....	HA-54
A/C HFC134a (R134a) system precaution .....	HA-2
A/C HFC134a (R134a) system service procedure.....	HA-88
A/C HFC134a (R134a) system service tools.....	HA-7
A/C HFC134a system service equip- ment precaution.....	HA-9
A/C lubricant (R134a) .....	HA-90
A/C operational check.....	HA-24
A/C performance chart.....	HA-50
A/C performance test diagnoses .....	HA-48
A/C relay .....	HA-74
A/C self-diagnoses (auto A/C) .....	HA-30
A/C service data specification.....	HA-101
A/C symptom chart (auto A/C).....	HA-28
A/C system description (auto A/C).....	HA-76
A/C trouble diagnoses (auto A/C) .....	HA-23
A/C, A - Wiring diagram .....	HA-57
Accelerator control system .....	FE-2
Accelerator wire adjustment .....	FE-2
Air bag .....	RS-8
Air bag disposal .....	RS-19
Air bag precautions .....	GI-2
Air bleeding (hydraulic clutch) .....	CL-6
Air bleeding for brake system .....	BR-4
Air cleaner filter replacement.....	MA-13
Air conditioner cut control .....	EC-21
Air flow meter - See Mass air flow sensor .....	EC-110
Air mix door control linkage adjustment.....	HA-74
Air mix. door motor .....	HA-81
Air spoiler, rear .....	BT-21
Alternator .....	EL-31
Ambient sensor .....	HA-78
Angular tightening application .....	EM-2
Antenna.....	EL-127
Anti-lock brake system - See ABS.....	BR-24
Anti-lock brake system - Wiring diagram.....	BR-33
ASCD (automatic speed control device) .....	EL-142

ASCD - Wiring diagram .....	EL-147
A/T - Wiring diagram .....	AT-13
A/T control.....	EC-314
A/T diagnosis communication line .....	EC-422
A/T fluid temperature sensor .....	AT-89, 155
A/T self-diagnoses.....	AT-43
A/T shift lock system .....	AT-180
A/T shift lock system - Wiring diagram .....	AT-181
A/T trouble diagnoses .....	AT-54
Audio.....	EL-121
AUDIO - Wiring diagram.....	EL-123
Audio and A/C control removal and installation - See Instrument panel .....	BT-13
Auto air conditioner - Wiring diagram .....	HA-57
Auto anti-dazzling inside mirror .....	EL-140
Automatic speed control system - See ASCD .....	EL-142
Automatic transaxle number .....	GI-38
Automatic transmission fluid replacement.....	MA-18
Auxiliary air control (AAC) valve .....	EC-303

## B

Back-up lamp.....	EL-56
Back-up lamp switch (M/T) .....	MT-8
BACK/L - Wiring diagram .....	EL-56
Battery.....	EL-19
Baulk ring (M/T) .....	MT-12
Blower motor .....	HA-73
Board-on lift .....	GI-40
Body alignment .....	BT-42
BPT valve.....	EC-267
Brake booster.....	BR-10
Brake control valve (Proportioning valve).....	BR-6
Brake fluid change .....	BR-4
Brake fluid level .....	MA-19
Brake fluid level and line check .....	BR-4
Brake hydraulic line.....	BR-5
Brake inspection .....	MA-19
Brake lines and cables inspection.....	MA-19
Brake master cylinder .....	BR-8
Brake pedal.....	BR-7
Bulb specifications .....	EL-319
Bumper, front .....	BT-5
Bumper, rear .....	BT-8
BUZZER - Wiring diagram.....	EL-89
BYPS/V - Wiring diagram .....	EC-399, 404

## C

Camshaft inspection .....	EM-39
Camshaft position sensor (CMPS) .....	EC-249
Camshaft position sensor (PHASE).....	EC-249
Canister-See EVAP canister .....	EC-23
CHARGE - Wiring diagram.....	EL-29
Charging system.....	EL-28

# ALPHABETICAL INDEX

Chassis and body maintenance .....	MA-17
CIGAR - Wiring diagram .....	EL-110
Cigarette lighter .....	EL-110
Circuit breaker .....	EL-14
Clock .....	EL-111
CLOCK - Wiring diagram .....	EL-111
Closed loop control .....	EC-327
Closed throttle position switch .....	EC-309
Clutch cover .....	CL-10
Clutch disc .....	CL-10
Clutch fluid level .....	MA-17
Clutch master cylinder .....	CL-7
Clutch operating cylinder .....	CL-8
Clutch pedal .....	CL-5
Clutch release bearing .....	CL-9
Clutch release mechanism .....	CL-9
Clutch withdrawal lever .....	CL-9
Coil spring (front) .....	FA-22
Coil spring (rear) .....	RA-11
Collision diagnosis .....	RS-53
Combination lamp, front, removal and installation .....	BT-5
Combination lamp, rear, removal and installation .....	BT-21
Combination meter .....	EL-70
Combination meter removal and installation - See Instrument panel .....	BT-13
Combination switch .....	EL-33
COMM - Wiring diagram .....	EL-182
Compression pressure .....	EM-12
Compressor clutch removal and installation .....	HA-97
Compressor description .....	HA-12
Compressor mounting .....	HA-96
Compressor precaution .....	HA-6
Compressor special service tool .....	HA-6
Connecting rod .....	EM-58
Connecting rod bearing clearance .....	EM-62
Connecting rod bushing clearance .....	EM-63
Connector inspection .....	GI-18
Console box - See Instrument panel .....	BT-13
CONSULT for ABS .....	BR-39
CONSULT for ECCS .....	EC-63
CONSULT general information .....	GI-34
Control lever (M/T) .....	MT-10
Control valve (A/T) .....	AT-218
Converter housing installation .....	AT-191
Coolant mixture ratio .....	MA-9
Coolant replacement .....	MA-11
Cooling circuit (engine) .....	LC-8
Cooling fan control .....	EC-430
Cooling fan control system .....	LC-15
Cooling fan motor .....	EC-442
Cooling fan relay .....	EC-442
CORNER - Wiring diagram .....	EL-61
Cornering lamp .....	EL-60
Coupling sleeve (M/T) .....	MT-12
Crankshaft .....	EM-60
Crankshaft position sensor (POS) .....	EC-243
Crankshaft position sensor (POS) chipping .....	EC-341

Crankshaft position sensor (REF) .....	EC-336
Cruise control - See ASCD .....	EL-142
Cylinder block .....	EM-56
Cylinder head .....	EM-36
Cylinder head bolt tightening .....	EM-45

GI

## D

Daytime light system .....	EL-41
Daytime running light - See Daytime light system .....	EL-41
DEF - Wiring diagram .....	EL-113
Detonation sensor - See Knock sensor .....	EC-240
Diagnosis sensor unit .....	RS-12
Differential gear (FF A/T) .....	AT-261
Differential gear (FF M/T) .....	MT-12, 26
Dimensions .....	GI-39
Direct ignition system .....	EC-32
Distributor ignition (DI) system .....	EC-20
D/LOCK - Wiring diagram .....	EL-217
Door mirror .....	BT-41
Door trim .....	BT-18
Door, front .....	BT-11
Door, rear .....	BT-12
Drive belt inspection .....	MA-10
Drive plate runout .....	EM-63
Drive shaft (front) .....	FA-13
Dropping resistor (A/T) .....	AT-133
DTRL - Wiring diagram .....	EL-43

MA

EM

LC

EC

FE

CL

MT

AT

FA

## E

ECCS basic inspection .....	EC-82
ECCS circuit diagram .....	EC-11
ECCS component parts location .....	EC-13
ECCS on board diagnostic system .....	EC-41
ECCS system diagram and chart .....	EC-12
ECM input/output signal .....	EC-95
EGR control (EGRC) - BPT valve .....	EC-263
EGR control (EGRC) - solenoid valve .....	EC-347
EGR control valve .....	EC-261, 362
EGR temperature sensor .....	EC-352
EGR valve & EVAP canister purge control solenoid valve .....	EC-351
Electric sun roof .....	EL-135
Electrical diagnoses .....	GI-21
Electrical ignition system .....	EC-20
Electrical load signal circuit .....	EC-465
Electrical unit .....	Foldout
Engine compartment .....	BT-42
Engine control module (ECM) .....	EC-318
Engine coolant temperature sensor (ECTS) .....	EC-132, 145
Engine mounting control (Front) .....	EC-454
Engine oil filter replacement .....	MA-14
Engine oil precautions .....	GI-5
Engine oil replacement .....	MA-14
Engine outer component parts .....	EM-8

RA

BR

ST

RS

BT

HA

EL

IDX

# ALPHABETICAL INDEX

Engine removal.....	EM-53
Engine room - See Engine compartment.....	BT-42
Engine serial number.....	GI-38
EVAP canister.....	EC-23
EVAP canister purge control solenoid valve.....	EC-415
EVAP canister purge control valve.....	EC-409
EVAP canister purge volume control valve.....	EC-282, 374
EVAP canister vent control valve.....	EC-288
EVAP control system purge flow monitoring diagnosis.....	EC-386
EVAP vapor lines inspection.....	MA-16
Evaporative emission (EVAP) system.....	EC-23
Exhaust system.....	FE-4
Exhaust system inspection.....	MA-17
Exterior.....	BT-21

## F

Fan control amp.....	HA-86
Fast idle cam (FIC) inspection and adjustment.....	EC-31
F/FOG - Wiring diagram.....	EL-58
Final drive (FF A/T).....	AT-261
Final drive (FF M/T).....	MT-12, 26
Floor trim.....	BT-16
Flow charts.....	GI-31
Fluid temperature sensor (A/T).....	AT-89, 155
Fluids.....	MA-8
Flywheel (clutch).....	CL-11
Flywheel runout.....	EM-63
FO2H-L - Wiring diagram.....	EC-150, 157, 163, 169, 178
Fog lamp, front.....	EL-57
Fog lamp, front, removal and installation.....	BT-5
Fork rod (M/T).....	MT-13
Forward clutch.....	AT-239
Freeze frame data.....	EC-43
Front axle.....	FA-9
Front bumper.....	BT-5
Front combination lamp removal and installation.....	BT-5
Front disc brake.....	BR-12
Front door.....	BT-11
Front engine mounting control.....	EC-454
Front fog lamp.....	EL-57
Front fog lamp removal and installation.....	BT-5
Front heated oxygen sensor (HO2S).....	EC-150, 157, 163, 169, 178
Front heated oxygen sensor (HO2S) (Left bank).....	EC-150, 157, 163, 169, 178
Front heated oxygen sensor (HO2S) (Right bank).....	EC-150, 157, 163, 169, 178
Front heated oxygen sensor (HO2S) monitor.....	EC-54, 57

Front heated oxygen sensor heater (Left bank).....	EC-184
Front heated oxygen sensor heater (Right bank).....	EC-184
Front passenger air bag.....	RS-8
Front seat.....	BT-28
Front seat belt.....	RS-3
Front suspension.....	FA-21
Front washer.....	EL-97
Front wiper.....	EL-97
Fuel cut control (at no load & high engine speed).....	EC-22
Fuel filler lid.....	BT-8
Fuel filter replacement.....	MA-12
Fuel gauge.....	EL-70
Fuel injection system (Left bank).....	EC-219, 225
Fuel injection system (Right bank).....	EC-219
Fuel lid opener, electric.....	EL-141
Fuel line inspection.....	MA-12
Fuel precautions.....	GI-6
Fuel pressure check.....	EC-29
Fuel pressure release.....	EC-29
Fuel pump.....	EC-453
Fuel pump control module.....	EC-450
Fuel pump relay.....	EC-453
Fuel system.....	FE-3
FUELLH - Wiring diagram.....	EC-219, 225
Fuse.....	EL-14
Fuse block.....	Foldout
Fusible link.....	EL-14

## G

Garage jack and safety stand.....	GI-41
Gauges.....	EL-70
Gear components (M/T).....	MT-12
Generic scan tool (GST).....	EC-76
Grille - See Exterior.....	BT-21
Ground distribution.....	EL-15

## H

Harness connector.....	EL-3
Harness connector inspection.....	GI-18
Harness layout.....	EL-303
Hazard warning lamp.....	EL-50
Headlamp.....	EL-36
Headlamp removal and installation.....	BT-5
Headlining - See Roof trim.....	BT-19
Heated oxygen sensor (HO2S) (front).....	EC-150, 157, 163, 169, 178
Heated oxygen sensor (HO2S) (Front) (Left bank).....	EC-150, 157, 163, 169, 178
Heated oxygen sensor (HO2S) (Front) (Right bank).....	EC-150, 157, 163, 178
Heated oxygen sensor (HO2S) monitor.....	EC-57
Heated oxygen sensor heater (Front)(Left bank).....	EC-184

# ALPHABETICAL INDEX

Heated oxygen sensor heater  
 (Front)(Right bank) ..... EC-184  
 Heated oxygen sensor monitor (HO2S)  
 (front) ..... EC-57  
 Heated seat..... BT-29, EL-138  
 Height (Dimensions)..... GI-39  
 HFC134a (R134a) system precaution ..... HA-2  
 HFC134a (R134a) system service  
 procedure..... HA-88  
 HFC134a (R134a) system service tools..... HA-7  
 HFC134a system service equipment  
 precaution ..... HA-9  
 High clutch..... AT-235  
 H/LAMP - Wiring diagram..... EL-37  
 Hood ..... BT-5  
 Horn ..... EL-109  
 HORN - Wiring diagram ..... EL-109  
 How to erase DTC for ECCS OBD  
 system ..... EC-52  
 H/PHON - Wiring diagram ..... EL-132  
 HSEAT - Wiring diagram ..... EL-138

## I

IACV - FICD solenoid valve ..... EC-464  
 IACV-AAC valve ..... EC-308  
 IACV-FICD solenoid valve ..... EC-462  
 Identification plate ..... GI-38  
 Idle air control valve (IACV) ..... EC-303  
 Idle mixture ratio ..... EC-34  
 Idle speed..... EC-34  
 Ignition coil ..... EC-335  
 Ignition timing ..... EC-34  
 ILL - Wiring diagram ..... EL-65  
 Illumination..... EL-63, 280  
 I/MIRR - Wiring diagram ..... EL-140  
 In vehicle sensor ..... HA-77  
 Inhibitor switch ..... AT-82, 85  
 Injector..... EC-447  
 Injector removal and installation ..... EC-30  
 Input shaft (FF M/T)..... MT-12, 17  
 Instrument panel ..... BT-13  
 INT/L - Wiring diagram ..... EL-69  
 Intake air temperature sensor..... EC-126  
 Intake door control linkage adjustment..... HA-75  
 Intake door motor ..... HA-85  
 Intake manifold ..... EM-10  
 Intake sensor..... HA-79  
 Integrated homelink transmitter ..... EL-298  
 Interior..... BT-16  
 Interior lamp on-off control..... EL-284  
 IVMS (In-Vehicle Multiplexing System) ..... EL-166  
 IVMS-System description ..... EL-166  
 IVMS-Trouble diagnoses ..... EL-185

## J

Jacking points..... GI-41

Junction box (J/B) ..... Foldout

## K

Key illumination..... EL-284  
 Keyless entry system - See Multi-  
 remote control system..... EL-234  
 Knock sensor (KS) ..... EC-240

## L

Length (Dimensions) ..... GI-39  
 License lamp..... EL-48  
 Lifting points ..... GI-42  
 Line pressure solenoid valve ..... AT-118, 129, 133  
 Line pressure test (A/T) ..... AT-62  
 Liquid gasket application ..... EM-2  
 Location of electrical units ..... EL-300  
 Low and reverse brake ..... AT-245  
 Lubricant (R134a) A/C ..... HA-90  
 Lubricants ..... MA-8  
 Lubrication circuit (engine) ..... LC-4  
 Lubrication-locks, hinges and hood  
 latches..... MA-21

## M

Magnet clutch ..... HA-97  
 Main drive gear (M/T) ..... MT-12  
 Mainshaft (M/T)..... MT-12, 22  
 Maintenance ..... MA-1  
 Maintenance (engine) ..... MA-10  
 MAJOR OVERHALL..... AT-193  
 Malfunction indicator lamp (MIL)..... EC-54  
 Manual transaxle number..... GI-38  
 Manual transmission oil replacement ..... MA-17  
 MAP/BARO switch solenoid valve ..... EC-320  
 Mass air flow sensor (MAFS)..... EC-110  
 Master cylinder (brake) ..... BR-8  
 Master cylinder (clutch) ..... CL-7  
 Meter..... EL-70  
 METER - Wiring diagram ..... EL-73  
 MIL & Data link connectors circuit ..... EC-468  
 MIRROR - Wiring diagram ..... EL-139  
 Mirror, door ..... BT-41  
 Mirror, out side..... BT-41  
 Misfire..... EC-235  
 Mode door control linkage adjustment..... HA-74  
 Mode door motor..... HA-83  
 Model variation ..... GI-36  
 Molding - See Exterior ..... BT-21  
 M/T major overhaul ..... MT-11  
 M/T removal and installation ..... MT-8  
 MULTI - Wiring diagram..... EL-237  
 Multi-remote control system ..... EL-234  
 Multiport fuel injection (MFI) system ..... EC-18

GI  
 MA  
 EM  
 LC  
 EC  
 FE  
 CL  
 MT  
 AT  
 FA  
 RA  
 BR  
 ST  
 RS  
 BT  
 HA  
 EL  
**IDX**

# ALPHABETICAL INDEX

Multipoint fuel injection precautions..... GI-4

Pressure test (A/T)..... AT-62

## N

Neutral position switch (M/T) ..... MT-8  
 NVH troubleshooting (BR) ..... BR-3  
 NVH troubleshooting (CL) ..... CL-3  
 NVH troubleshooting (FA)..... FA-4  
 NVH troubleshooting (M/T) ..... MT-5  
 NVH troubleshooting (RA) ..... RA-3  
 NVH troubleshooting (ST) ..... ST-5

## O

Oil pan (engine) ..... EM-13  
 Oil pressure (engine) ..... LC-5  
 Oil pump (A/T)..... AT-214  
 Oil pump (engine) ..... LC-5  
 Oil pump regulator valve (engine) ..... LC-7  
 Oil seal replacement (engine) ..... EM-33  
 Operating cylinder (clutch) ..... CL-8  
 Out side mirror ..... BT-41  
 Overdrive control switch..... AT-178  
 Overrun clutch ..... AT-239  
 Overrun clutch solenoid valve..... AT-118, 129, 151  
 Oxygen sensor monitor (O2S) (front) ..... EC-57

## P

P/ANT - Wiring diagram..... EL-128  
 Park/Neutral position switch..... EC-425  
 Parking brake control ..... BR-22  
 Parking lamp ..... EL-48  
 PCV (positive crankcase ventilation) ..... EC-28  
 PGC/V - Wiring diagram ..... EC-282  
 PHONE - Wiring diagram ..... EL-134  
 Piston assembly ..... EM-64  
 Piston pin inspection..... EM-57  
 Piston ring inspection ..... EM-58  
 Piston to bore clearance..... EM-59  
 POWER - Wiring diagram ..... EL-7  
 Power door lock..... EL-215  
 Power door mirror ..... EL-139  
 Power seat ..... EL-136  
 Power steering fluid level..... MA-20, ST-7  
 Power steering gear ..... ST-14  
 Power steering hydraulic pressure ..... ST-9  
 Power steering oil pressure switch..... EC-457, 461  
 Power steering oil pump ..... ST-24  
 Power steering system bleeding ..... ST-7  
 Power supply routing ..... EL-6  
 Power transistor ..... EC-335  
 Power transistor & ignition coil ..... EC-329  
 Power window ..... EL-200  
 Precautions (General) ..... GI-2  
 Pressure plate - See Clutch cover ..... CL-10

## R

Radiator ..... LC-15  
 Radio - See Audio ..... EL-121  
 Rear air spoiler ..... BT-21  
 Rear axle ..... RA-7  
 Rear bumper ..... BT-8  
 Rear combination lamp removal and  
     installation ..... BT-21  
 Rear disc brake ..... BR-16  
 Rear door ..... BT-12  
 Rear heated oxygen sensor (HO2S)  
     heater ..... EC-214  
 Rear seat ..... BT-30  
 Rear seat belt ..... RS-4  
 Rear suspension ..... RA-10  
 Rear window ..... BT-39  
 Rear window defogger ..... EL-112  
 Refrigerant connection precaution ..... HA-3  
 Refrigerant general precaution ..... HA-2  
 Refrigerant lines ..... HA-92  
 Release bearing (clutch) ..... CL-9  
 Removal and installation (A/T) ..... AT-190  
 Reverse clutch ..... AT-232  
 Reverse idler shaft (M/T) ..... MT-12  
 Reverse lamp switch (M/T) - See  
     Back-up lamp switch (M/T) ..... MT-8  
 Reverse main gear (M/T) ..... MT-12  
 Revolution sensor (A/T) ..... AT-92  
 Road wheel size ..... GI-39  
 Roof trim ..... BT-19  
 ROOM/L - Wiring diagram ..... EL-285  
 RRO2LH - Wiring diagram ..... EC-196  
 RRO2RH - Wiring diagram ..... EC-189

## S

SAE J1979 - Mode 1 - 7 ..... EC-41  
 Seal - See Exterior ..... BT-21  
 SEAT - Wiring diagram ..... EL-136  
 Seat belt inspection ..... MA-21, RS-5  
 Seat belt, front ..... RS-3  
 Seat belt, rear ..... RS-4  
 Seat, front ..... BT-28  
 Seat, rear ..... BT-30  
 Self-diagnostic results ..... EC-54  
 SHIFT - Wiring diagram ..... AT-181  
 Shift control components (M/T) ..... MT-13  
 Shift fork (M/T) ..... MT-13  
 Shift lever ..... MT-10  
 Shift schedule ..... AT-284  
 Shift solenoid valve A  
     (A/T) ..... AT-99, 109, 118, 129, 137  
 Shift solenoid valve B  
     (A/T) ..... AT-99, 104, 118, 129, 141  
 Shock absorber (rear) ..... RA-11

# ALPHABETICAL INDEX

Side air bag .....	RS-8
Side trim .....	BT-16
SMJ (super multiple junction) .....	Foldout
Spare tire size .....	GI-39
Spark plug replacement .....	MA-15
Speedometer .....	EL-70
Spiral cable .....	RS-14
Spot lamp .....	EL-69
Spring (Wheelarch) height .....	FA-6
SROOF - Wiring diagram .....	EL-135
SRS - See Supplemental Restraint System .....	RS-8
SRS - Wiring diagram .....	RS-30
SRS Trouble diagnoses .....	RS-25
Stabilizer bar (front) .....	FA-23
Stall test (A/T) .....	AT-59
Standardized relay .....	EL-4
START - Wiring diagram .....	EL-24
Starter .....	EL-26
Starting system .....	EL-23
Steering gear and linkage inspection .....	MA-20
Steering linkage .....	ST-14
Steering switch .....	EL-35
Steering wheel and column .....	ST-10
Steering wheel play .....	ST-6
Steering wheel turning force .....	ST-8
Step lamp .....	EL-292
STEP/L - Wiring diagram .....	EL-293
Stop lamp .....	EL-54
STOP/L - Wiring diagram .....	EL-54
Striking rod (M/T) .....	MT-13
Strut (front) .....	FA-22
Sunload sensor .....	HA-78
Sunroof .....	BT-31
Supplemental Restraint System .....	RS-8
Supplemental restraint system - Wiring diagram .....	RS-30
SW/ILL - Wiring diagram .....	EL-281
Symbols and abbreviations .....	GI-8
Synchronizer (M/T) .....	MT-12
System readiness test (SRT) code .....	EC-43

## T

Tachometer .....	EL-70
Tail lamp .....	EL-48
TAIL/L - Wiring diagram .....	EL-48
Tank fuel temperature sensor .....	EC-231
TCM circuit diagram .....	AT-12
TCM inspection table .....	AT-77
Telephone .....	EL-132
THEFT - Wiring diagram .....	EL-258
Theft warning system .....	EL-252
Thermostat .....	LC-14
Three way catalyst .....	EC-268
Three way catalyst function (Left bank) .....	EC-268
Three way catalyst function (Right bank) .....	EC-268
Three way catalyst precautions .....	GI-4
Throttle bodies .....	EM-10

Throttle position sensor (TPS) .....	EC-137
Throttle position switch .....	AT-147, 179
Throwout bearing - See Clutch release bearing .....	CL-9
Tie-rod .....	ST-18
Tie-rod ball joints .....	ST-18
Timing chain .....	EM-19
Tire rotation .....	MA-19
Tire size .....	GI-39
TLID - Wiring diagram .....	EL-141
Torque converter installation .....	AT-191
Torque convertor clutch solenoid valve .....	AT-118, 122, 129
Tow truck towing .....	GI-43
Transmission case (M/T) .....	MT-11
TRANSMT - Wiring diagram .....	EL-298
Transverse link (front) .....	FA-24
Tread-FR&RR (Dimensions) .....	GI-39
Trim .....	BT-16
Triple pressure switch .....	HA-11, 73
Trouble diagnoses .....	GI-31
Trunk lid .....	BT-8
Trunk lid opener - See Trunk lid .....	BT-8
Trunk lid opener, electric .....	EL-141
Trunk lid trim .....	BT-20
Trunk room lamp .....	EL-69
Trunk room trim .....	BT-20
TURN - Wiring diagram .....	EL-51
Turn signal lamp .....	EL-50
Two trip detection logic .....	EC-41
Two-pole lift .....	GI-42

## U

Under body .....	BT-44
------------------	-------

## V

Vacuum cut valve .....	EC-408
Vacuum hose (brake system) .....	BR-11
Vacuum hose drawing (ECCS) .....	EC-16
Valve clearance .....	EM-49
Valve guide .....	EM-40
Valve seat .....	EM-42
Valve spring .....	EM-43
Vehicle identification number .....	GI-37
Vehicle recovery (freeing a stuck vehicle) .....	GI-43
Vehicle speed sensor (VSS) .....	EC-299
VENT/V - Wiring diagram .....	EC-381, 393
Viscosity number (SAE) .....	MA-8
Viscous coupling (FF M/T) .....	MT-8, 12

## W

WARN - Wiring diagram .....	EL-83
Warning buzzer .....	EL-88

GI  
 MA  
 EM  
 LC  
 EC  
 FE  
 CL  
 MT  
 AT  
 FA  
 RA  
 BR  
 ST  
 RS  
 BT  
 HA  
 EL  
**IDX**

## ALPHABETICAL INDEX

---

Warning lamps .....	EL-82	Wide open & closed throttle position switch.....	EC-137
Washer, front.....	EL-97	Width (Dimensions) .....	GI-39
Water pump .....	LC-9	WINDOW - Wiring diagram .....	EL-202
Water temperature gauge .....	EL-70	Window antenna .....	EL-129
Weatherstrip - See Exterior .....	BT-21	Window, rear .....	BT-39
Wheel alignment (front) .....	FA-7	Windshield .....	BT-39
Wheel alignment (rear) .....	RA-6	WIPER - Wiring diagram .....	EL-99
Wheel balance .....	MA-19	Wiper, front .....	EL-97
Wheel bearing (front axle) .....	FA-7	Wiring Diagram (Cell code) list.....	EL-320
Wheel bearing (rear) .....	RA-5	Wiring diagrams .....	GI-9
Wheel hub (rear) .....	RA-7	Withdrawal lever (clutch) .....	CL-9
Wheel sensors (ABS).....	BR-27	Wrist pin - See Piston pin inspection .....	EM-57
Wheel size .....	GI-39		
Wheelarch height.....	FA-6		
Wheelbase (Dimensions) .....	GI-39		