


SUPER MULTIPLE JUNCTION (SMJ)

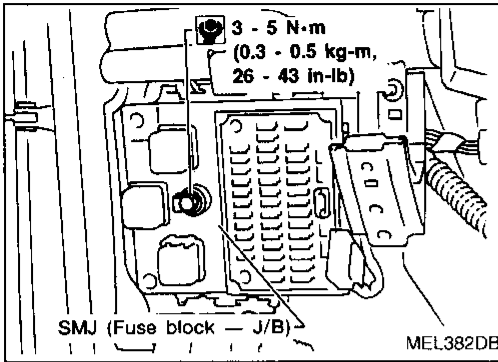


INSTALLATION

To install FUSE BLOCK (J/B) and SMJ, tighten bolts until orange "fulltight" mark appears and then retighten to specified torque as required.

 : 3 - 5 N·m
(0.3 - 0.5 kg-m, 26 - 43 in-lb)

CAUTION:

Do not overtighten bolts, otherwise, they may be damaged.

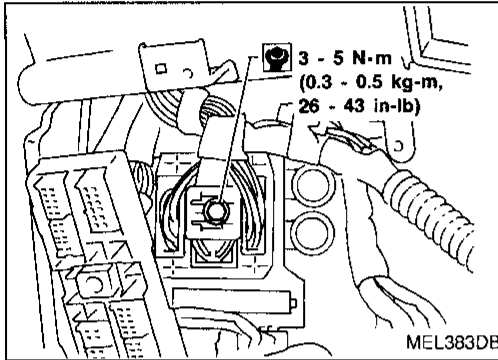


SUPER MULTIPLE JUNCTION (SMJ)

Terminal Arrangement



MAIN HARNESS

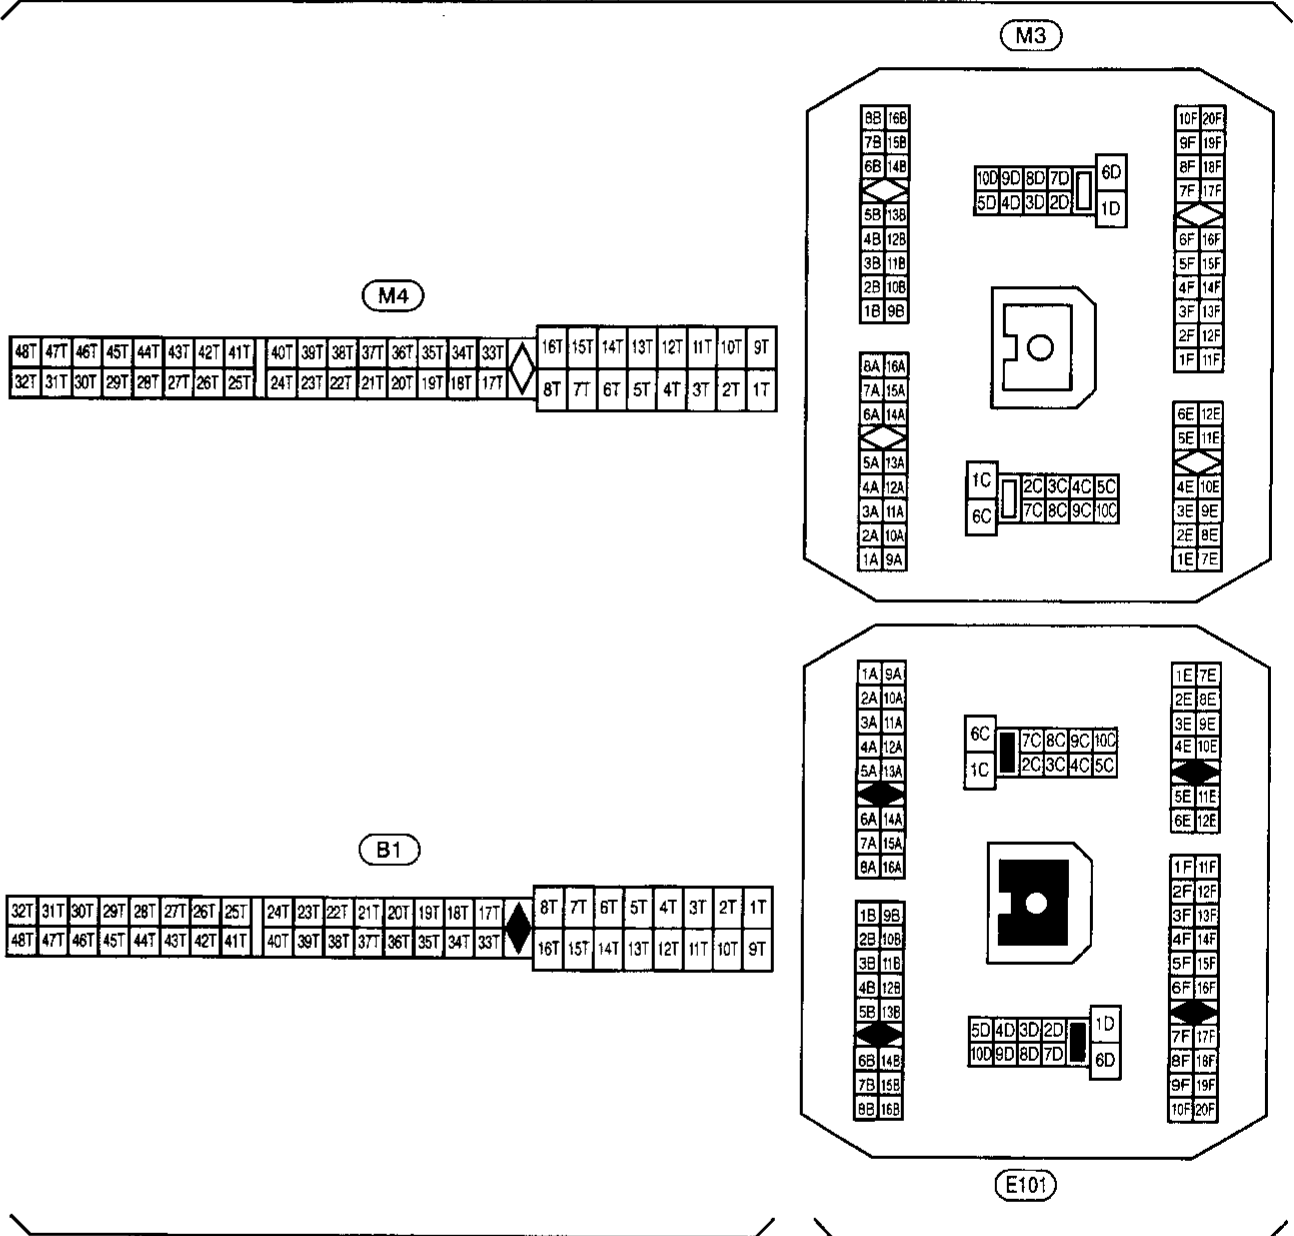


BODY HARNESS

ENGINE ROOM HARNESS


FUSE BLOCK — Junction Box (J/B)

Terminal Arrangement

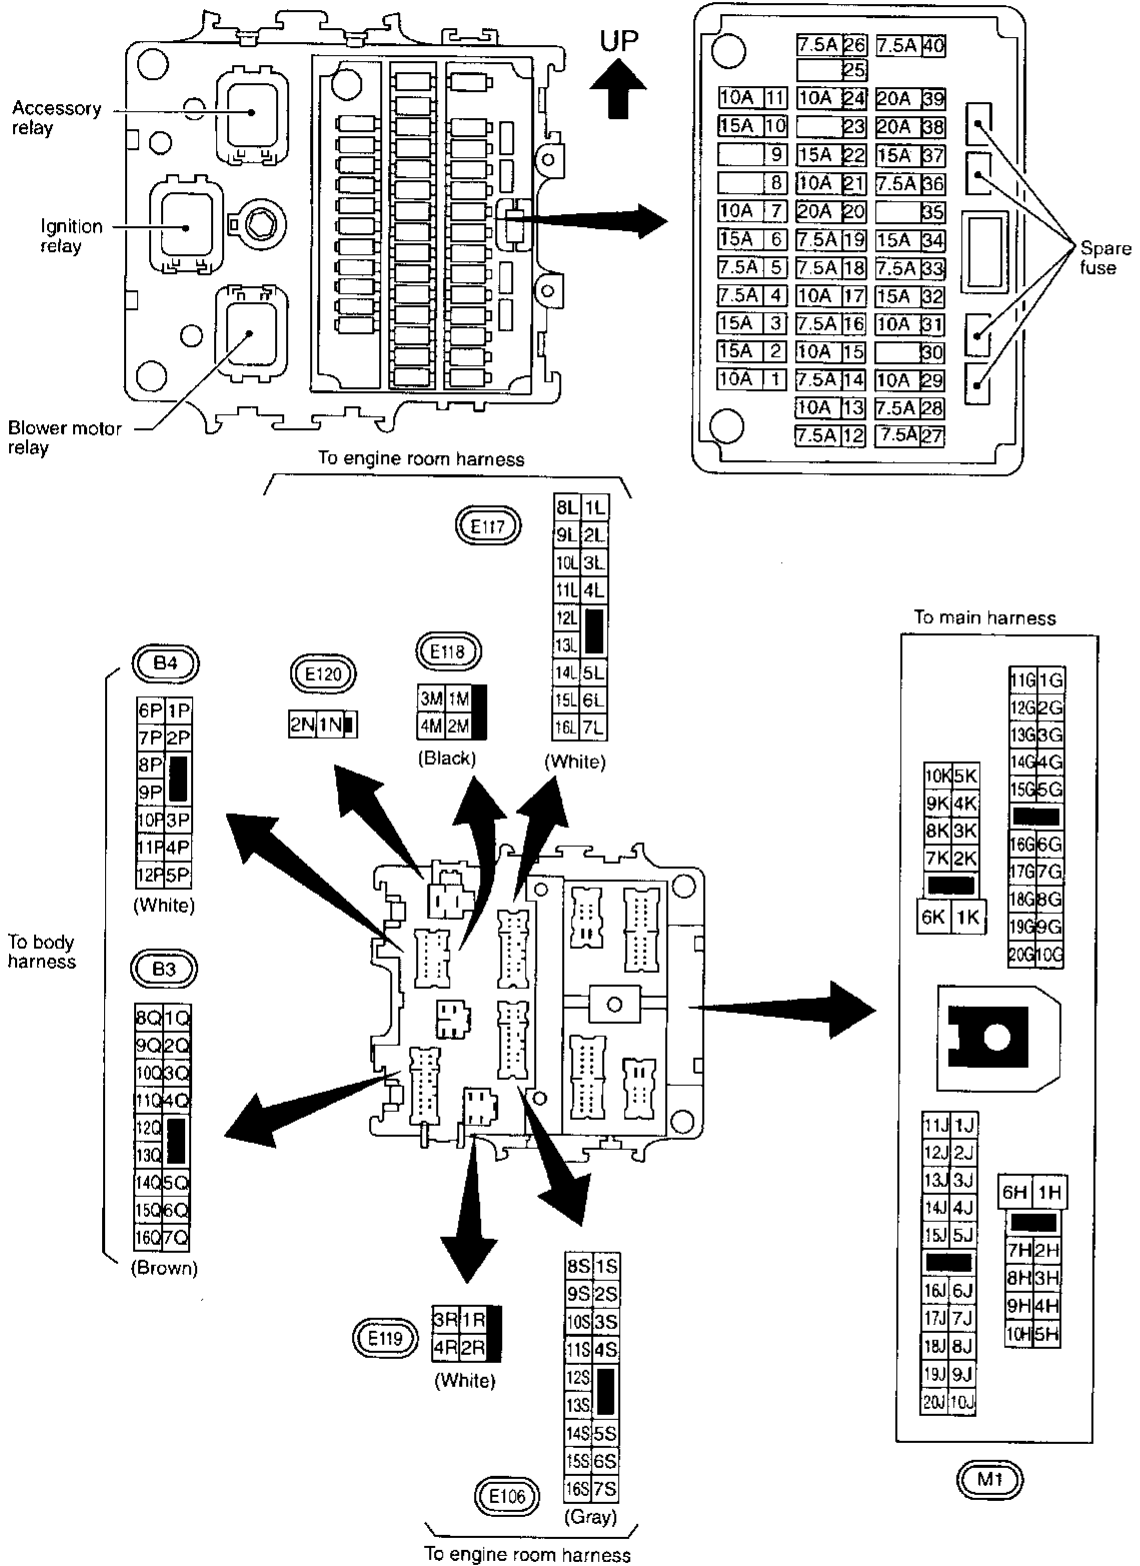

FUSE AND FUSIBLE LINK BOX


Terminal Arrangement

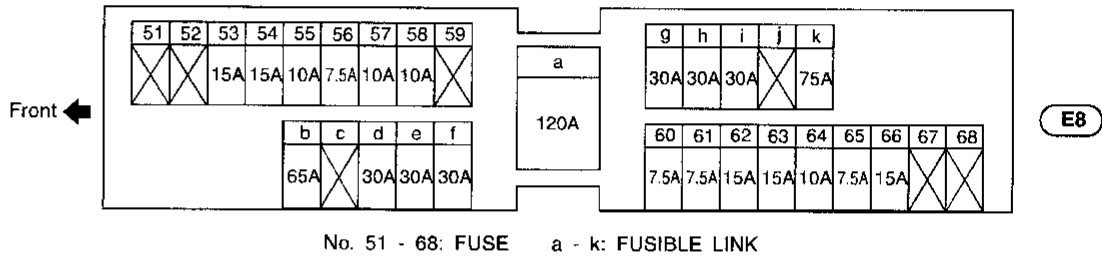


ELECTRICAL UNITS

Terminal Arrangement

ECM (F101)

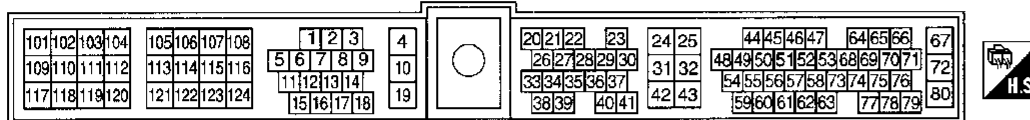


TCM (TRANSMISSION CONTROL MODULE)

 


ABS/TCS CONTROL UNIT (E114)



 BCM (BODY CONTROL MODULE)



A/C AUTO AMP.

 

JOINT CONNECTOR (J/C)

Terminal Arrangement

