

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

A

AAC/V - Wiring diagram.....EC-461
 ABS (anti-lock brake system).....BR-39
 ABS - Wiring diagramBR-44
 ABS sensor rotorAX-19
 ABS/TCS C/U signalEC-515
 Absolute pressure sensorEC-172
 A/C air flowHA-26
 A/C component layout.....HA-20
 A/C compressor clutch removal and
 installationHA-112
 A/C compressor precaution.....HA-7
 A/C compressor special service tool.....HA-10
 A/C control operation (auto A/C).....HA-24
 A/C diagnostic work flow (auto A/C)HA-46
 A/C HFC134a (R134a) system
 precautionHA-2
 A/C HFC134a (R134a) system service
 procedure.....HA-107
 A/C HFC134a (R134a) system service
 tools.....HA-11
 A/C HFC134a system service equip-
 ment precautionHA-7
 A/C lubricant (R134a).....HA-109
 A/C operational checkHA-47
 A/C performance chartHA-84
 A/C performance test diagnosesHA-82
 A/C relay.....HA-80
 A/C self-diagnoses (auto A/C).....HA-36
 A/C service data specificationHA-123
 A/C system description (auto A/C).....HA-24
 A/C trouble diagnoses (auto A/C)HA-28
 A/C, A - Wiring diagramHA-31
 Accelerator control systemFE-3
 Air bagRS-13
 Air bag disposal.....RS-25
 Air bag precautionsGI-3
 Air bleeding for brake systemBR-9
 Air cleaner filter replacement.....MA-17
 Air conditioner cut controlEC-31
 Air flow meter - See Mass air flow
 sensorEC-164
 Air mix door control linkage adjustment.....HA-62
 Air mix. door motorHA-60, 106
 Air spoiler, rear.....BT-40
 AlternatorSC-13
 Ambient sensorHA-93
 Angular tightening application.....EM-3
 Antenna - See Power antennaEL-210
 Anti-lock brake system - See ABSBR-39
 Anti-lock brake system - Wiring
 diagramBR-44
 AP/SEN - Wiring diagramEC-174
 ASCD (automatic speed control device)EL-269
 ASCD - Wiring diagramEL-273
 A/T - Wiring diagramAT-16
 A/T - Wiring diagram - AT - FTSAT-110
 A/T - Wiring diagram - AT - MAIN.....AT-99

A/T - Wiring diagram - AT - PNP/SW.....AT-104
 A/T - Wiring diagram - AT - VSS A/TAT-116
 A/T controlEC-476
 A/T diagnosis communication line.....EC-643
 A/T fluid temperature sensor.....AT-108
 A/T IND - Wiring diagramEL-166
 AT indicator lampEL-166
 A/T self-diagnosesAT-41, 49
 A/T shift lock systemAT-270
 A/T shift lock system - Wiring diagramAT-271
 A/T trouble diagnosesAT-55
 A/T Wiring diagram - AT - ENG SSAT-121
 A/T Wiring diagram AT - 1STAT-127
 A/T Wiring diagram AT - 2NDAT-133
 A/T Wiring diagram AT - 3RDAT-139
 A/T Wiring diagram AT - 4TH.....AT-146
 A/T Wiring diagram AT - BA/FTSAT-198
 A/T Wiring diagram AT - LPSVAT-168
 A/T Wiring diagram AT - NONDTCAT-216
 A/T Wiring diagram AT - OVRCSVAT-193
 A/T Wiring diagram AT - SSV/AAT-174
 A/T Wiring diagram AT - SSV/BAT-179
 A/T Wiring diagram AT - TCCSIGAT-159
 A/T Wiring diagram AT - TCVAT-153
 A/T Wiring diagram AT - TPS.....AT-185
 A/T Wiring diagram AT - VSSMTR.....AT-205
 AT/C - Wiring diagram.....EC-477
 ATDIAG - Wiring diagram.....EC-644
 AudioEL-202
 AUDIO - Wiring diagramEL-204
 Audio and A/C control removal and
 installation - See Instrument panelBT-28
 AUT/DP - Wiring diagramEL-228
 Auto air conditioner - Wiring diagramHA-31
 Auto anti-dazzling inside mirrorEL-220
 Automatic amplifier.....HA-34, 50
 Automatic drive positionerEL-223
 Automatic speed control system - See
 ASCDEL-269
 Automatic transmission fluid
 replacement.....MA-22
 Automatic transmission numberGI-44
 Auxiliary air control (AAC) valveEC-458

B

Back-up lampEL-100
 BACK/L - Wiring diagram.....EL-100
 Ball joint (front)SU-14
 Base idle air volume initialiging.....EC-67
 Basic inspection.....EC-110
 BatterySC-3
 Blower and cooling unitHA-117
 Blower motorHA-66
 Board-on liftGI-46
 Body alignmentBT-62
 Brake boosterBR-21
 Brake control valve (Proportioning
 valve)BR-12
 Brake fluid changeBR-8

ALPHABETICAL INDEX

Brake fluid level	MA-24
Brake fluid level and line check	BR-8
Brake hydraulic line	BR-10
Brake inspection	MA-24
Brake lines and cables inspection	MA-24
Brake master cylinder	BR-15
Brake pedal	BR-13
Bulb specifications	EL-486
Bumper, front	BT-13
Bumper, rear	BT-16
BYPS/V - Wiring diagram	EC-627, 634

C

Camshaft inspection	EM-41
Camshaft position sensor (PHASE)	EC-363
Canister-See EVAP canister	EC-32
CHARGE - Wiring diagram	SC-11
Charging system	SC-10
Chassis and body maintenance	MA-21
CHIME - Wiring diagram	EL-170
CIGAR - Wiring diagram	EL-188
Cigarette lighter	EL-188
Circuit breaker	EL-18
Clock	EL-189
CLOCK - Wiring diagram	EL-189
Closed loop control (Left bank)	EC-507
Closed loop control (Right bank)	EC-507
Closed throttle position switch	EC-467
Coil spring (front)	SU-10
Coil spring (rear)	SU-25
Collision diagnosis	RS-62
Combination lamp, rear, removal and installation	BT-40
Combination meter	EL-143
Combination meter removal and instal- lation - See Instrument panel	BT-28
Combination switch	EL-31
Component Location (auto A/C)	HA-28
Compression pressure	EM-12
Compressor clutch removal and installation	HA-112
Compressor precaution	HA-7
Compressor special service tool	HA-10
Connecting rod	EM-62
Connecting rod bearing clearance	EM-66
Connecting rod bushing clearance	EM-67
Connector inspection	GI-22
Console box - See Instrument panel	BT-28
CONSULT for ABS	BR-50
CONSULT for engine	EC-91
CONSULT for TCS	BR-93
Control valve (A/T)	AT-312
Converter housing installation	AT-284
COOL/F - Wiring diagram	EC-328, 523
Coolant mixture ratio	MA-12
Coolant replacement	MA-14
Cooling circuit (engine)	LC-8
Cooling fan control	EC-520
Cooling fan control system	LC-17

CORNER - Wiring diagram	EL-115
Cornering lamp	EL-113
"Crankcase emission control system - See positive crankcase ventilation"	EC-48
Crankshaft	EM-64
Crankshaft position sensor (POS)	EC-355
Crankshaft position sensor (POS) chipping	EC-554
Crankshaft position sensor (REF)	EC-548
Cruise control - See ASCD	EL-269
Cylinder block	EM-59
Cylinder head	EM-38
Cylinder head bolt tightening	EM-48

GI
MA
EM
LC

D

Data link connector for Consult	EC-91
Daytime light system	EL-65, 77
Daytime running light - See Daytime light system	EL-65, 77
DEF - Wiring diagram	EL-192
Detonation sensor - See Knock sensor	EC-350
Diagnosis sensor unit	RS-18
Diagnostic trouble code (DTC) for OBD system	EC-8, 70
Diagnostic trouble code (DTC) inspec- tion priority chart	EC-125
Differential gear (FF A/T)	AT-356
Dimensions	GI-45
D/LOCK - Wiring diagram	EL-311
Dome light - See Interior lamp	EL-125
Door glass	BT-20
Door lock	BT-24
Door mirror	BT-60
Door trim	BT-35
Door, front	BT-19
Door, rear	BT-19
Drive plate runout	EM-67
Drive shaft (front)	AX-9
Dropping resistor (A/T)	AT-166
DTC work support	EC-102
DTRL - Wiring diagram	EL-69, 81

EC
FE
AT
AX
SU
BR
ST
RS
BT
HA
SC

E

ECM input/output signal	EC-144
ECTS - Wiring diagram	EC-185, 202
EGR temperature sensor	EC-562
EGR volume control valve	EC-378
EGR/TS - Wiring diagram	EC-565
EGRC1 - Wiring diagram	EC-373, 381, 573
Electric sun roof	EL-214
Electrical diagnoses	GI-25
Electrical ignition system	EC-30
Electrical unit	Foldout
Electrical units location	EL-459
EMNT - Wiring diagram	EC-674
Engine compartment	BT-63

EL
IDX

ALPHABETICAL INDEX

Engine control circuit diagram.....	EC-24
Engine control component parts	
location	EC-20
Engine control module (ECM).....	EC-479
Engine control system diagram and	
chart.....	EC-25
Engine coolant temperature sensor	
(ECTS).....	EC-183, 200
Engine fail-safe system.....	EC-126
Engine mounting control (Front)	EC-673
Engine oil filter replacement	MA-18
Engine oil precautions	GI-7
Engine oil replacement	MA-17
Engine outer component parts	EM-9
Engine removal	EM-56
Engine room - See Engine	
compartment.....	BT-63
Engine serial number	GI-44
EVAP canister.....	EC-33
EVAP canister purge volume control	
solenoid valve.....	EC-32, 406, 581
EVAP canister vent control	
valve	EC-412, 593, 613
EVAP control system (small leak)	
diagnosis	EC-390, 431, 579
EVAP control system pressure sensor.....	EC-419
EVAP control system purge flow moni-	
toring diagnosis.....	EC-601
EVAP vapor lines inspection.....	MA-20
Evaporative emission (EVAP) system.....	EC-32
Exhaust gas recirculation (EGR)	
valve	EC-369, 571
Exhaust system.....	FE-11
Exhaust system inspection	MA-21
Exterior.....	BT-40

F

Fan control amp.....	HA-68
F/FOG - Wiring diagram	EL-102
Final drive (FF A/T)	AT-356
Finisher, interior - See Trim	BT-32
Finisher, trunk lid.....	BT-39
F/LID - Wiring diagram	EL-221
Floor trim.....	BT-32
Fluid temperature sensor (A/T).....	AT-108
Fluids.....	MA-11
FO2H-L - Wiring diagram.....	EC-255
FO2H-R - Wiring diagram	EC-254
Fog lamp, front.....	EL-101
Fog lamp, front, removal and	
installation	BT-13
Forward clutch.....	AT-334
F/PUMP - Wiring diagram	EC-668
Freeze frame data.....	EC-70
FRO2LH - Wiring diagram	EC-209, 235, 247
FRO2RH - Wiring diagram.....	EC-208, 234, 246
Front axle.....	AX-2
Front bumper	BT-13

Front combination lamp removal and	
installation	BT-13
Front disc brake	BR-24
Front door	BT-19
Front fog lamp.....	EL-101
Front fog lamp removal and installation	BT-13
Front heated oxygen sensor (HO2S)	
(Left bank).....	EC-205, 215, 223, 231, 244
Front heated oxygen sensor (HO2S)	
(Right bank)	EC-205, 215, 223, 231, 244
Front heated oxygen sensor heater	
(Left bank).....	EC-252
Front heated oxygen sensor heater	
(Right bank)	EC-252
Front seat.....	BT-46
Front seat belt	RS-5
Front suspension.....	SU-2
Front washer	EL-182
Front wiper	EL-182
Fuel cut control (at no load & high	
engine speed).....	EC-32
Fuel gauge	EL-143
Fuel injection system (Left bank).....	EC-304, 312
Fuel injection system (Right bank)	EC-304, 312
Fuel lid opener, electric.....	EL-221
Fuel line inspection	MA-16
Fuel precautions	GI-8
Fuel pressure check.....	EC-50
Fuel pressure regulator	EC-51
Fuel pressure release	EC-50
Fuel pump	EC-667
Fuel system	FE-5
Fuel tank temperature sensor	EC-319
Fuel tank vacuum relief valve	EC-33
FUELLH - Wiring diagram.....	EC-307, 315
FUELRH - Wiring diagram	EC-306, 314
Fuse	EL-18
Fuse block	Foldout
Fusible link	EL-18

G

Garage jack and safety stand	GI-47
Gauges.....	EL-143
Generator - See Alternator.....	SC-13
Generic scan tool (GST)	EC-104
Glass	BT-20
Grease.....	MA-11
Ground distribution.....	EL-19

H

Harness connector.....	EL-6
Harness connector inspection	GI-22
Harness layout	EL-463
Hazard warning lamp.....	EL-108
Headlamp.....	EL-34, 48
Headlamp removal and installation	BT-13

ALPHABETICAL INDEX

Headlining - See Roof trimBT-37
 Heated seat.....BT-48, EL-262
 Heater unit (heater core)HA-116
 Height (Dimensions)GI-45
 HFC134a (R134a) system precautionHA-2
 HFC134a (R134a) system service
 procedure.....HA-107
 HFC134a (R134a) system service toolsHA-11
 HFC134a system service equipment
 precautionHA-7
 High clutch.....AT-329
 H/LAMP - Wiring diagram.....EL-38, 53
 Hood.....BT-13
 HornEL-187
 HORN - Wiring diagram.....EL-187
 How to erase DTC for OBD system.....EC-82
 HSEAT - Wiring diagram.....EL-262

I

IACV-AAC valveEC-458
 IATS - Wiring diagramEC-180
 Identification plate.....GI-44
 Idle air control valve (IACV)EC-458
 Idle mixture ratio.....EC-54
 Idle speed.....EC-54
 IGN/SG - Wiring diagramEC-539
 Ignition control systemEC-537
 Ignition timingEC-54
 ILL - Wiring diagram.....EL-119
 IlluminationEL-117
 I/MIRR - Wiring diagramEL-220
 In vehicle sensorHA-97
 INFINITI COMMUNICATOR.....EL-423
 Infiniti communicator (IVCS)EL-423
 INJECT - Wiring diagramEC-658
 Injector.....EC-657
 Injector removal and installationEC-52
 Instrument panelBT-28
 INT/L - Wiring diagram.....EL-129
 Intake air temperature sensor.....EC-178
 Intake door control linkage adjustmentHA-65
 Intake door motorHA-63
 Intake manifoldEM-11
 Intake sensorHA-104
 Integrated homelink transmitterEL-400
 InteriorBT-32
 Interior lampEL-125
 Interior lamp on-off control.....EL-126
 IVCS - Wiring diagram.....EL-432
 IVIS (Infiniti vehicle immobilizer
 system)EL-403

J

Jacking points.....GI-47
 Joint connector (J/C)Foldout

Junction box (J/B).....Foldout

K

Keyless entry system - See Multi-re-
 mote control systemEL-327
 Knock sensor (KS)EC-350
 Knuckle spindleAX-5
 KS - Wiring diagram.....EC-351

L

Length (Dimensions)GI-45
 License lamp.....EL-89
 Lifting pointsGI-48
 Line pressure solenoid valveAT-166
 Line pressure test (A/T)AT-65
 Liquid gasket applicationEM-3
 LOAD - Wiring diagramEC-686
 Location of electrical unitsEL-459
 Lock, doorBT-24
 Low and reverse brakeAT-339
 Lubricant (R134a) A/C.....HA-109
 Lubricants.....MA-11
 Lubrication circuit (engine)LC-3
 Lubrication-locks, hinges and hood
 latchesMA-26

M

MAFS - Wiring diagram.....EC-168
 Magnet clutchHA-75, 112
 MAIN - Wiring diagram.....EC-157
 Maintenance (engine)MA-13
 MAJOR OVERHALL.....AT-286
 Malfunction indicator lamp (MIL).....EC-84
 Mass air flow sensor (MAFS).....EC-164
 Master cylinder (brake)BR-15
 MeterEL-143
 METER - Wiring diagram.....EL-148
 MIL & Data link connectors circuitEC-692
 MIL/DL - Wiring diagramEC-692
 MIRROR - Wiring diagram.....EL-219
 Mirror defoggerEL-190
 Mirror, door.....BT-60
 MisfireEC-342
 Mode door control linkage adjustment.....HA-58
 Mode door motor.....HA-53
 Model variationGI-42
 Molding - See ExteriorBT-40
 MULTI - Wiring diagram.....EL-331
 Multi-remote control system.....EL-327
 Multiport fuel injection (MFI) systemEC-28
 Multiport fuel injection precautions.....GI-6

GI

MA

EM

LC

EC

FE

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

EL

IDX

ALPHABETICAL INDEX

N

NATS (Nissan anti-theft system) precautions	GI-3
NATS - Wiring diagram	EL-405
NVH troubleshooting (AX)	AX-3
NVH troubleshooting (BR)	BR-7
NVH troubleshooting (ST)	ST-5
NVH troubleshooting (SU)	SU-18
NVIS (Nissan vehicle immobilizer system)	EL-403
NVIS (Nissan vehicle immobilizer system) precautions	GI-3

O

Oil change (capacity)	MA-11
Oil pan (engine)	EM-13
Oil pressure (engine)	LC-4
Oil pump (A/T)	AT-308
Oil pump (engine)	LC-4
Oil pump regulator valve (engine)	LC-6
Oil seal replacement (engine)	EM-35
On board diagnostic system	EC-69
ORVR (On-board Refueling Vapor Recovery)	EC-38
Overdrive control switch	AT-260
Overrun clutch	AT-334
Overrun clutch solenoid valve	AT-191

P

P/ANT - Wiring diagram	EL-211
Park/Neutral position switch	EC-646
Park/neutral position switch (A/T)	AT-102
Parking brake control	BR-37
Parking lamp	EL-89
PCV (positive crankcase ventilation)	EC-48
PGC/V - Wiring diagram	EC-408, 584
PHASE - Wiring diagram	EC-365
PHONE - Wiring diagram	EL-222
Piston assembly	EM-68
Piston pin inspection	EM-60
Piston ring inspection	EM-61
Piston to bore clearance	EM-63
PNP/SW - Wiring diagram	EC-648
POS - Wiring diagram	EC-357, 556
POWER - Wiring diagram	EL-11
Power antenna	EL-210
Power door lock	EL-309
Power door mirror	EL-219
Power seat	EL-258
Power steering fluid level	MA-25, ST-7
Power steering gear	ST-15
Power steering hydraulic pressure	ST-9
Power steering oil pressure switch	EC-677
Power steering oil pump	ST-25

Power steering system bleeding	ST-7
Power supply routing	EL-10
Power transistor & ignition coil	EC-537
Power window	EL-294
PRE/SE - Wiring diagram	EC-421
Precautions (General)	GI-4
Pressure test (A/T)	AT-65
PST/SW - Wiring diagram	EC-678

R

Radiator	LC-16, 17
Radio - See Audio	EL-202
Rear air spoiler	BT-40
Rear axle	AX-17
Rear axle (disc brake type)	AX-19
Rear bumper	BT-16
Rear combination lamp removal and installation	BT-40
Rear disc brake	BR-28
Rear door	BT-19
Rear heated oxygen sensor (HO2S)	EC-259, 269, 279, 289
Rear heated oxygen sensor (HO2S) heater	EC-297
Rear seat	BT-49
Rear seat belt	RS-7
Rear sunshade	EL-263
Rear suspension	SU-18
Rear window	BT-58
Rear window defogger	EL-190
REF - Wiring diagram	EC-550
Refrigerant pressure sensor	HA-80
Refrigerant connection precaution	HA-3
Refrigerant discharging evacuating charging	HA-107
Refrigerant general precaution	HA-3
Refrigerant lines	HA-118
Refrigerant pressure sensor	EC-682
Refrigeration cycle	HA-14
Removal and installation (A/T)	AT-283
Reverse clutch	AT-326
Revolution sensor (A/T)	AT-114
RO2H-L - Wiring diagram	EC-300
RO2H-R - Wiring diagram	EC-299
Road wheel size	GI-45
Roof trim	BT-37
Room lamp - See Interior lamp	EL-125
RRO2LH - Wiring diagram	EC-263, 273, 283, 292
RRO2RH - Wiring diagram	EC-262, 272, 282, 291

S

SAE J1930 terminology list	GI-51
Seal - See Exterior	BT-40
SEAT - Wiring diagram	EL-259
Seat belt inspection	MA-26, RS-9
Seat belt pre-tensioner	RS-3

ALPHABETICAL INDEX

Seat belt pre-tensioner disposal	RS-25
Seat belt, front.....	RS-5
Seat belt, rear.....	RS-7
Seat, front	BT-46
Seat, rear	BT-49
SHADE - Wiring diagram.....	EL-265
SHIFT - Wiring diagram	AT-271
Shift lock system	AT-270
Shift schedule.....	AT-382
Shift solenoid valve A (A/T).....	AT-172
Shift solenoid valve B (A/T)	AT-177
Shock absorber (front).....	SU-11
Shock absorber (rear)	SU-25
Side air bag	RS-24
Side trim.....	BT-32
Smart entrance control unit	EL-391
SMJ (super multiple junction).....	Foldout
Spare tire size	GI-45
Spark plug replacement.....	MA-18
Speedometer.....	EL-143
Spiral cable.....	RS-20
Spot lamp	EL-125
Spring (Wheelarch) height	SU-6
SROOF - Wiring diagram	EL-215
SRS - See Supplemental Restraint System.....	RS-13
SRS - Wiring diagram	RS-38
S/SIG - Wiring diagram	EC-664
Stabilizer bar (front).....	SU-12
Stall test (A/T)	AT-61
Standardized relay	EL-8
START - Wiring diagram	SC-7
Start signal	EC-663
Starter	SC-8
Starting system.....	SC-6
Steering gear and linkage inspection	MA-25
Steering linkage	ST-15
Steering switch.....	EL-33
Steering wheel and column	ST-10
Steering wheel play	ST-6
Steering wheel turning force.....	ST-8
Step lamp.....	EL-125
STEP/L - Wiring diagram	EL-129
Stop lamp	EL-98
STOP/L - Wiring diagram.....	EL-98
Strut (front)	SU-10
Strut (rear).....	SU-23
Sun roof, electric.....	EL-214
Sunload sensor	HA-100
Sunroof.....	BT-50
Supplemental Restraint System.....	RS-13
Supplemental restraint system - Wiring diagram.....	RS-38
S/VCSW - Wiring diagram.....	EC-511
Swirl control valve control solenoid valve	EC-483
Swirl control valve control vacuum check switch	EC-509
SWL/V - Wiring diagram	EC-487
Symbols and abbreviations	GI-9
Symptom matrix chart	EC-134

System readiness test (SRT) code	EC-71
--	-------

T

Tachometer	EL-143
Tail lamp.....	EL-89
TAIL/L - Wiring diagram	EL-91
TCM circuit diagram.....	AT-16
TCM inspection table	AT-95
TCS (traction control system)	BR-81
TCS - Wiring diagram	BR-85
TCS component parts and connector location	BR-84
TCS control unit	BR-83
TCS self-diagnosis	BR-91
TCS system components	BR-82
TCS trouble diagnoses.....	BR-101
TCS wheel sensors	BR-84
Telephone.....	EL-222
TFTS - Wiring diagram.....	EC-321
THEFT - Wiring diagram.....	EL-364
Theft warning system.....	EL-357
Thermostat.....	LC-14
Three way catalyst function (Left bank)	EC-385
Three way catalyst function (Right bank)	EC-385
Three way catalyst precautions.....	GI-6
Throttle bodies.....	EM-11
Throttle position sensor (TPS)	EC-188
Throttle position sensor adjustment	EC-110
Throttle position switch	EC-467, AT-182, 260
Tie-rod.....	ST-15
Tie-rod ball joints.....	ST-19
Tightening torque of standard bolts.....	GI-50
Timing chain.....	EM-19
Tire rotation	MA-24
Tire size	GI-45
TLID - Wiring diagram	EL-221
Torque converter installation.....	AT-284, 375
Torque convertor clutch solenoid valve.....	AT-151
Tow truck towing.....	GI-49
TP/SW - Wiring diagram	EC-470
TPS - Wiring diagram.....	EC-193
Traction control system - See TCS.....	BR-81
Traction control system - Wiring diagram.....	BR-85
TRANSMT - Wiring diagram.....	EL-400
Tread-FR&RR (Dimensions).....	GI-45
Trim	BT-32
Trouble diagnoses	GI-35
Trunk lid	BT-16
Trunk lid finisher.....	BT-39
Trunk lid opener - See Trunk lid	BT-16
Trunk lid opener, electric.....	EL-221
Trunk lid trim	BT-39
Trunk room lamp.....	EL-125
Trunk room trim.....	BT-39
TURN - Wiring diagram.....	EL-110
Turn signal lamp	EL-108
Two trip detection logic	EC-69

GI

MA

EM

LC

EC

FE

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

Two-pole liftGI-48

U

Under bodyBT-65

V

Vacuum cut valveEC-32

Vacuum cut valve bypass valve.....EC-32, 625, 631

Vacuum hose (brake system).....BR-23

Vacuum hose drawing (Engine control)EC-26

Valve clearance.....EM-51

Valve guide.....EM-43

Valve seat.....EM-44

Valve spring.....EM-45

Vanity mirror lampEL-125

Vehicle recovery (freeing a stuck vehicle).....GI-49

Vehicle speed sensor (VSS)EC-454

VENT/V - Wiring diagramEC-414, 595, 616

VIASEC-651

VIAS - Wiring diagramEC-653

Viscosity number (SAE)MA-11

Viscous coupling (FF A/T).....AT-356

VSS - Wiring diagramEC-456

W

WARN - Wiring diagramEL-161

Warning chimeEL-168

Warning lampsEL-160

Washer, front.....EL-182

Water pumpLC-10

Water temperature gaugeEL-143

Weatherstrip - See ExteriorBT-40

Wheel alignment (front).....SU-6

Wheel alignment (rear).....SU-20

Wheel balanceMA-22

Wheel bearing (front).....AX-3

Wheel bearing (rear)AX-18

Wheel hub (front).....AX-5

Wheel hub (rear)AX-19

Wheel sensors (ABS).....BR-155

Wheel sensors (TCS).....BR-155

Wheelarch heightSU-6

Wheelbase (Dimensions)GI-45

Wide open & closed throttle position switchEC-188

Width (Dimensions)GI-45

WINDOW - Wiring diagramEL-298

Window, rearBT-58

Windshield.....BT-58

WIPER - Wiring diagramEL-184

Wiper, front.....EL-182

Wiring Diagram (Cell code) list.....EL-487

Wiring diagram - AT - LAN.....AT-210

Wiring diagramsGI-11

Wrist pin - See Piston pin inspection.....EM-60