

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

A

ABS sensor rotorAX-19
 Absolute pressure sensorEC-200
 A/C air flowHA-25
 A/C component layoutHA-19
 A/C compressor clutch removal and
 installationHA-112
 A/C compressor precautionHA-7
 A/C compressor special service toolHA-10
 A/C control operation (auto A/C)HA-23
 A/C diagnostic work flow (auto A/C)HA-46
 A/C HFC134a (R134a) system
 precautionHA-2
 A/C HFC134a (R134a) system service
 procedureHA-107
 A/C HFC134a (R134a) system service
 toolsHA-11
 A/C HFC134a system service equip-
 ment precautionHA-7
 A/C lubricant (R134a)HA-109
 A/C operational checkHA-47
 A/C performance chartHA-84
 A/C performance test diagnosesHA-82
 A/C relayHA-80
 A/C self-diagnoses (auto A/C)HA-36
 A/C service data specificationHA-124
 A/C system description (auto A/C)HA-23
 A/C trouble diagnoses (auto A/C)HA-27
 A/C, A - Wiring diagramHA-30
 Accelerator control systemFE-3
 Accelerator pedal position (APP)
 sensorEC-650, 657, 670
 Air bagRS-13
 Air bag disposalRS-25
 Air bag precautionsGI-3
 Air bleeding for brake systemBR-8
 Air cleaner filter replacementMA-16
 Air conditioner cut controlEC-36
 Air flow meter - See Mass air flow
 sensorEC-187, 194, 452
 Air mix door control linkage adjustmentHA-62
 Air mix. door motorHA-60, 106
 Air spoiler, rearBT-44
 AlternatorSC-29
 Ambient sensorHA-93
 Angular tightening applicationEM-3
 Antenna - See Power antennaEL-205
 ASCD (automatic speed control device)EL-261
 A/T - Wiring diagram - AT - FTSAT-116
 A/T - Wiring diagram - AT - MAINAT-101
 A/T - Wiring diagram - AT - PNP/SWAT-110
 A/T - Wiring diagram - AT - VSS A/TAT-122, 213
 A/T fluid temperature sensorAT-114
 A/T IND - Wiring diagramEL-159
 AT indicator lampEL-159
 A/T self-diagnosesAT-41, 52
 A/T shift lock systemAT-275
 A/T shift lock system - Wiring diagramAT-276

A/T trouble diagnosesAT-58
 A/T Wiring diagram - AT - ENG SSAT-127
 A/T Wiring diagram AT - 1STAT-133
 A/T Wiring diagram AT - 2NDAT-139
 A/T Wiring diagram AT - 3RDAT-145
 A/T Wiring diagram AT - 4THAT-152
 A/T Wiring diagram AT - BA/FTSAT-201
 A/T Wiring diagram AT - CANAT-106
 A/T Wiring diagram AT - LPSVAT-174
 A/T Wiring diagram AT - NONDTCAT-220
 A/T Wiring diagram AT - OVRCSVAT-196
 A/T Wiring diagram AT - SSV/AAT-180
 A/T Wiring diagram AT - SSV/BAT-185
 A/T Wiring diagram AT - TCCSIGAT-165
 A/T Wiring diagram AT - TCVAT-159
 A/T Wiring diagram AT - TPSAT-191
 A/T Wiring diagram AT - VSSMTRAT-208
 AudioEL-195
 AUDIO - Wiring diagramEL-197
 Audio and A/C control removal and
 installation - See Instrument panelBT-30
 AUT/DP - Wiring diagramEL-222
 Auto air conditioner - Wiring diagramHA-30
 Auto anti-dazzling inside mirrorEL-214
 Automatic amplifierHA-34, 50
 Automatic drive positionerEL-217
 Automatic speed control system - See
 ASCDEL-261
 Automatic transmission fluid
 replacementMA-21
 Automatic transmission numberGI-46

B

Back-up lampEL-76
 BACK/L - Wiring diagramEL-76
 Ball joint (front)SU-13
 Basic inspectionEC-120
 BatterySC-4
 Battery/Starting/Charging System
 TesterSC-7, 12, 22
 B/COMP - Wiring diagramEL-143
 Blower and cooling unitHA-117
 Blower motorHA-66
 Board computerEL-141
 Board-on liftGI-48
 Body alignmentBT-66
 Brake boosterBR-19
 Brake fluid changeBR-7
 Brake fluid levelMA-23
 Brake fluid level and line checkBR-7
 Brake hydraulic lineBR-9
 Brake inspectionMA-23
 Brake lines and cables inspectionMA-23
 Brake master cylinderBR-13, 16
 Brake pedalBR-11
 Brake switchEC-644
 BRK/SW - Wiring diagramEC-645
 Bulb specificationsEL-506
 Bumper, frontBT-13

ALPHABETICAL INDEX

Bumper, rearBT-17
BYPS/V - Wiring diagramEC-596, 603

C

Camshaft inspectionEM-55
Camshaft position sensor (PHASE).....EC-323
CAN (Controller Area Network) ...EL-448, 450, 463
CAN - Wiring diagramEL-451, 464
CAN communication.....AT-29, 104, BR-60, 99,
EL-448, 450, 463
Canister - See EVAP canisterEC-37
CHARGE - Wiring diagramSC-21
Charging systemSC-20
Chassis and body maintenanceMA-20
CHIME - Wiring diagram.....EL-163
CIGAR - Wiring diagram.....EL-182
Cigarette lighter.....EL-182
Circuit breaker.....EL-19
ClockEL-183
CLOCK - Wiring diagram.....EL-183
Closed loop control (Bank 1).....EC-511
Closed loop control (Bank 2).....EC-511
Coil spring (front).....SU-9
Coil spring (rear)SU-23
Collision diagnosis.....RS-62
Combination lamp, rear, removal and
installationBT-44
Combination meter.....EL-125
Combination meter removal and instal-
lation - See Instrument panel.....BT-30
Combination switch.....EL-32
COMPAS - Wiring diagramEL-149
CompassEL-147
Component Location (auto A/C).....HA-27
Compression pressure.....EM-13
Compressor clutch removal and
installationHA-112
Compressor precautionHA-7
Compressor special service toolHA-10
Connecting rod.....EM-76
Connecting rod bearing clearance.....EM-80
Connecting rod bushing clearanceEM-81
Connector inspection.....GI-21
Console box - See Instrument panel.....BT-30
CONSULT for engineEC-99
CONSULT for TCSBR-46
CONSULT for VDCBR-118
Control valve (A/T)AT-314
Controller Area Network (CAN) ...EL-448, 450, 463
Converter housing installation.....AT-375
COOL/F - Wiring diagramEC-521
Coolant mixture ratio.....MA-12
Coolant replacement.....MA-14
Cooling circuit (engine).....LC-12
Cooling fan controlEC-517
Cooling fan control systemLC-21
CORNER - Wiring diagram.....EL-89
Cornering lampEL-87

Crankcase emission control system -
See positive crankcase ventilationEC-52
Crankshaft.....EM-78
Crankshaft position sensor (POS)EC-316
Crash zone sensorRS-18
Cruise control - See ASCDEL-261
Cylinder blockEM-73
Cylinder head.....EM-50
Cylinder head bolt tighteningEM-62

D

Data link connector for Consult.....EC-99
Daytime light system.....EL-52
Daytime running light - See Daytime
light systemEL-52
DEF - Wiring diagramEL-185
Detonation sensor - See Knock sensorEC-311
Diagnosis sensor unit.....RS-17
Diagnostic trouble code (DTC) for OBD
systemEC-9, 75
Diagnostic trouble code (DTC) inspec-
tion priority chart.....EC-125
Differential gear (FF A/T)AT-358
DimensionsGI-47
DLC - Wiring diagramEC-738
D/LOCK - Wiring diagram.....EL-282
Dome light - See Interior lampEL-100
Door glass.....BT-22
Door lock.....BT-26
Door mirror.....BT-64
Door trimBT-38
Door, frontBT-21
Door, rearBT-21
Drive plate runoutEM-82
Drive shaft (front).....AX-9
Dropping resistor (A/T).....AT-172
DTC work support.....EC-111
DTRL - Wiring diagramEL-56

E

ECM input/output signalEC-137
ECM power supplyEC-448
ECM/PW - Wiring diagram.....EC-449
ECTS - Wiring diagramEC-208
Electric sun roofEL-208
Electric throttle control actuatorEC-458, 460
Electrical diagnoses.....GI-25
Electrical ignition system.....EC-35
Electrical unitFoldout
Electrical units locationEL-478
EMNT - Wiring diagram.....EC-714
Engine compartment.....BT-67
Engine control circuit diagram.....EC-28
Engine control component parts
locationEC-24
Engine control module (ECM).....EC-442

ALPHABETICAL INDEX

Engine control system diagram and chart.....	EC-30
Engine coolant temperature sensor (ECTS).....	EC-206, 218
Engine fail-safe system	EC-126
Engine mounting control (Front)	EC-713
Engine oil filter replacement	MA-17
Engine oil precautions	GI-7
Engine oil replacement	MA-16
Engine outer component parts	EM-9
Engine removal	EM-69
Engine room - See Engine compartment.....	BT-67
Engine serial number	GI-46
EVAP canister.....	EC-38
EVAP canister purge volume control solenoid valve.....	EC-37, 362, 545
EVAP canister vent control valve	EC-369, 558, 566
EVAP control system (small leak) diagnosis	EC-347, 404, 575
EVAP control system pressure sensor	EC-376, 382
EVAP control system purge flow monitoring diagnosis.....	EC-337
EVAP vapor lines inspection.....	MA-19
Evaporative emission (EVAP) system.....	EC-37
Exhaust system	FE-9
Exhaust system inspection	MA-20
Exterior	BT-44

F

Fan control amp.	HA-68
F/FOG - Wiring diagram	EL-78
Final drive (FF A/T)	AT-358
Finisher, interior - See Trim	BT-35
Finisher, trunk lid.....	BT-43
F/LID - Wiring diagram	EL-215
Floor trim.....	BT-35
FLS1 - Wiring diagram	EC-420
FLS2 - Wiring diagram	EC-426
Fluid temperature sensor (A/T)	AT-114
Fluids.....	MA-11
Fog lamp, front.....	EL-77
Fog lamp, front, removal and installation	BT-13
Forward clutch.....	AT-336
F/PUMP - Wiring diagram	EC-707
Freeze frame data	EC-76
Front axle.....	AX-2
Front bumper	BT-13
Front combination lamp removal and installation	BT-13
Front disc brake	BR-22
Front door	BT-21
Front fog lamp.....	EL-77
Front fog lamp removal and installation	BT-13
Front passenger air bag.....	RS-22
Front seat.....	BT-50

Front seat belt	RS-4
Front suspension.....	SU-2
Front washer	EL-176
Front wiper	EL-176
FTTS - Wiring diagram.....	EC-293
Fuel cut control (at no load & high engine speed).....	EC-37
Fuel gauge	EL-125
Fuel injection system (Bank 1)	EC-273, 281
Fuel injection system (Bank 2)	EC-273, 281
Fuel level sensor.....	EC-419, 423
Fuel lid opener, electric.....	EL-215
Fuel line inspection	MA-15
Fuel precautions	GI-8
Fuel pressure check.....	EC-55
Fuel pressure release	EC-55
Fuel pump	EC-706
Fuel system	FE-4
Fuel tank temperature sensor.....	EC-288, 291
Fuel tank vacuum relief valve	EC-38
FUELB1 - Wiring diagram.....	EC-275, 283
FUELB2 - Wiring diagram.....	EC-276, 284
Fuse	EL-19
Fuse block	Foldout
Fusible link	EL-19

G

Garage jack and safety stand	GI-49
Gauges.....	EL-125
Generator - See Alternator	SC-29
Generic scan tool (GST).....	EC-114
Glass	BT-22
Grease.....	MA-11
Ground distribution.....	EL-20

H

Harness connector	EL-7
Harness connector inspection	GI-21
Harness layout	EL-483
Hazard warning lamp	EL-82
Headlamp	EL-38
Headlamp removal and installation	BT-13
Headlining - See Roof trim	BT-41
Heated oxygen sensor 1 (bank 1).....	EC-226, 235, 247, 479, 486
Heated oxygen sensor 1 (bank 2).....	EC-226, 235, 247, 479, 486
Heated oxygen sensor 1 heater (bank 1).....	EC-174
Heated oxygen sensor 1 heater (bank 2).....	EC-174
Heated oxygen sensor 2 (bank 1).....	EC-256, 264, 493, 502
Heated oxygen sensor 2 (bank 2).....	EC-256, 264, 493, 502

ALPHABETICAL INDEX

Heated oxygen sensor 2 heater (bank 1).....	EC-181
Heated oxygen sensor 2 heater (bank 2).....	EC-181
Heated seat.....	BT-52, EL-252
Heated steering.....	EL-35
Heater unit (heater core)	HA-116
Height (Dimensions)	GI-47
HFC134a (R134a) system precaution	HA-2
HFC134a (R134a) system service procedure.....	HA-107
HFC134a (R134a) system service tools	HA-11
HFC134a system service equipment precaution	HA-7
High clutch.....	AT-331
H/LAMP - Wiring diagram	EL-42
Homelink universal transceiver	EL-371
Hood.....	BT-13
Horn	EL-181
HORN - Wiring diagram.....	EL-181
How to erase DTC for OBD system.....	EC-88
HSEAT - Wiring diagram.....	EL-252
H/STRG - Wiring diagram.....	EL-37

I

IATS - Wiring diagram	EC-203
Identification plate.....	GI-46
Idle mixture ratio.....	EC-58
Idle speed.....	EC-58
Ignition control system	EC-685
Ignition timing	EC-58
IGNSYS - Wiring diagram	EC-686
ILL - Wiring diagram	EL-94
Illumination	EL-92
I/MIRR - Wiring diagram	EL-214
In vehicle sensor	HA-97
In-cabin Microfilter	HA-123
INJECT - Wiring diagram	EC-697
Injector.....	EC-696
Injector removal and installation	EC-56
Instrument panel	BT-30
INT/L - Wiring diagram.....	EL-104
Intake air temperature sensor.....	EC-202, 221
Intake door control linkage adjustment	HA-65
Intake door motor	HA-63
Intake manifold.....	EM-11
Intake sensor.....	HA-104
Integrated homelink transmitter	EL-371
Interior	BT-35
Interior lamp	EL-100
Interior lamp on-off control.....	EL-102
IVIS (Infiniti vehicle immobilizer system).....	EL-375

J

Jacking points.....	GI-49
---------------------	-------

Joint connector (J/C)	Foldout
Junction box (J/B).....	Foldout

K

KEYLES - Wiring diagram	EL-302
Keyless entry system - See Multi-re- mote control system.....	EL-297
Knock sensor (KS).....	EC-311
Knuckle spindle	AX-5
KS - Wiring diagram.....	EC-312

L

Length (Dimensions)	GI-47
License lamp.....	EL-65
Lifting points	GI-50
Line pressure solenoid valve	AT-172
Line pressure test (A/T)	AT-68
Liquid gasket application	EM-3
LOAD - Wiring diagram	EC-733
Location of electrical units	EL-478
Lock, door	BT-26
Low and reverse brake	AT-341
Lubricant (R134a) A/C.....	HA-109
Lubricants.....	MA-11
Lubrication circuit (engine)	LC-4
Lubrication-locks, hinges and hood latches	MA-25

M

MAFS - Wiring diagram	EC-190, 196, 454
Magnet clutch	HA-75, 112
MAIN - Wiring diagram.....	EC-153
Maintenance (engine)	MA-13
MAJOR OVERHALL.....	AT-288
Malfunction indicator lamp (MIL)	EC-444
Mass air flow sensor (MAFS)	EC-187, 194, 452
Master cylinder (brake)	BR-13, 16
Meter	EL-125
METER - Wiring diagram.....	EL-129
MIL - Wiring diagram.....	EC-445
MIRROR - Wiring diagram.....	EL-213
Mirror defogger	EL-184
Mirror, door.....	BT-64
Misfire	EC-302
Mode door control linkage adjustment	HA-59
Mode door motor	HA-53
Model variation	GI-44
Molding - See Exterior	BT-44
MULTI - Wiring diagram.....	EL-302
Multi-remote control system.....	EL-297
Multiport fuel injection (MFI) system	EC-33
Multiport fuel injection precautions	GI-6

GI

MA

EM

LC

EC

FE

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

N

NATS (Nissan anti-theft system) precautions	GI-3
NATS - Wiring diagram	EL-377
NAVI - wiring diagram	EL-405
Navigation System	EL-395
NVH troubleshooting (AX)	AX-3
NVH troubleshooting (BR)	BR-6
NVH troubleshooting (ST)	ST-5
NVH troubleshooting (SU)	SU-4
NVIS (Nissan vehicle immobilizer system)	EL-375
NVIS (Nissan vehicle immobilizer system) precautions	GI-3

O

O2H1B1 - Wiring diagram	EC-176
O2H1B2 - Wiring diagram	EC-177
O2H2B1 - Wiring diagram	EC-183
O2H2B2 - Wiring diagram	EC-184
O2S1B1 - Wiring diagram	EC-228, 238, 250
O2S1B2 - Wiring diagram	EC-229, 239, 251
O2S2B1 - Wiring diagram	EC-258, 267, 496, 505
O2S2B2 - Wiring diagram	EC-259, 268, 497, 506
Oil change (capacity)	MA-11
Oil cooler (engine)	LC-9
Oil pan (engine)	EM-14
Oil pressure (engine)	LC-6
Oil pump (A/T)	AT-310
Oil pump (engine)	LC-6
Oil pump regulator valve (engine)	LC-8
Oil seal replacement (engine)	EM-47
On board diagnostic system	EC-74
ORVR (On-board Refueling Vapor Recovery)	EC-43
Overheat	EC-517
Overrun clutch	AT-336
Overrun clutch solenoid valve	AT-194

P

P/ANT - Wiring diagram	EL-205
Park/Neutral position switch	EC-634
Park/neutral position switch (A/T)	AT-108
Parking brake control	BR-34
Parking lamp	EL-65
PCV (positive crankcase ventilation)	EC-52
PGC/V - Wiring diagram	EC-364, 548
PHASE - Wiring diagram	EC-325
PHONE - Wiring diagram	EL-216
Piston assembly	EM-82
Piston pin inspection	EM-75
Piston ring inspection	EM-75
Piston to bore clearance	EM-77
PNP/SW - Wiring diagram	EC-636

POS - Wiring diagram	EC-318
POWER - Wiring diagram	EL-12
Power antenna	EL-205
Power door lock	EL-280
Power door mirror	EL-213
Power seat	EL-251
Power steering fluid level	MA-24, ST-7
Power steering gear	ST-15
Power steering hydraulic pressure	ST-9
Power steering oil pump	ST-25
Power steering pressure (PSP) sensor	EC-437
Power steering system bleeding	ST-7
Power supply routing	EL-11
Power transistor & ignition coil	EC-685
Power window	EL-262
PRE/SE - Wiring diagram	EC-378, 384
Precautions (General)	GI-4
Pressure test (A/T)	AT-68
PS/SEN - Wiring diagram	EC-438

R

Radiator	LC-20, 21
Radio - See Audio	EL-195
Rear air spoiler	BT-44
Rear axle	AX-17
Rear axle (disc brake type)	AX-19
Rear bumper	BT-17
Rear combination lamp removal and installation	BT-44
Rear disc brake	BR-26
Rear door	BT-21
Rear seat	BT-53
Rear seat belt	RS-6
Rear sunshade	EL-255
Rear suspension	SU-17
Rear window	BT-62
Rear window defogger	EL-184
Refrigerant pressure sensor	HA-80
Refrigerant connection precaution	HA-4
Refrigerant discharging evacuating charging	HA-107
Refrigerant general precaution	HA-3
Refrigerant lines	HA-118
Refrigerant pressure sensor	EC-717
Refrigeration cycle	HA-14
Remote keyless entry system	EL-297
Removal and installation (A/T)	AT-285
Reverse clutch	AT-328
Revolution sensor (A/T)	AT-120
Road wheel size	GI-47
Roof trim	BT-41
Room lamp - See Interior lamp	EL-100
RP/SEN - Wiring diagram	EC-718

S

SAE J1930 terminology list	GI-54
----------------------------------	-------

ALPHABETICAL INDEX

Seal - See ExteriorBT-44
 SEAT - Wiring diagramEL-251
 Seat belt inspectionMA-26, RS-8
 Seat belt pre-tensionerRS-3
 Seat belt pre-tensioner disposalRS-25
 Seat belt, frontRS-4
 Seat belt, rearRS-6
 Seat, frontBT-50
 Seat, rearBT-53
 SHADE - Wiring diagramEL-257
 SHIFT - Wiring diagramAT-276
 Shift lock systemAT-275
 Shift scheduleAT-381
 Shift solenoid valve A (A/T)AT-178
 Shift solenoid valve B (A/T)AT-183
 Shock absorber (front)SU-10
 Shock absorber (rear)SU-23
 Side air bagRS-24
 Side trimBT-35
 Smart entrance control unitEL-361
 SMJ (super multiple junction)Foldout
 Spare tire sizeGI-47
 Spark plug replacementMA-17
 SpeedometerEL-125
 Spiral cableRS-20
 Spot lampEL-100
 Spring (Wheelarch) heightSU-6
 SROOF - Wiring diagramEL-209
 SRS - See Supplemental Restraint SystemRS-13
 SRS - Wiring diagramRS-38
 S/SIG - Wiring diagramEC-703
 Stabilizer bar (front)SU-11
 Stall test (A/T)AT-64
 Standardized relayEL-9
 START - Wiring diagramSC-11
 Start signalEC-702
 StarterSC-18
 Starting systemSC-10
 Steering gear and linkage inspectionMA-24
 Steering linkageST-15
 Steering switchEL-34
 Steering wheel and columnST-10
 Steering wheel playST-6
 Steering wheel turning forceST-8
 Step lampEL-100
 STEP/L - Wiring diagramEL-104
 Stop lampEL-74
 STOP/L - Wiring diagramEL-74
 Strut (front)SU-9
 Strut (rear)SU-21
 Sunload sensorHA-100
 SunroofBT-54
 Sunroof, electricEL-208
 Supplemental Restraint SystemRS-13
 Supplemental restraint system - Wiring diagramRS-38
 Symbols and abbreviationsGI-10
 Symptom matrix chartEC-127
 System readiness test (SRT) codeEC-76

T

TachometerEL-125
 Tail lampEL-65
 TAIL/L - Wiring diagramEL-68
 TCM circuit diagramAT-16
 TCM inspection tableAT-98
 TCS (traction control system)BR-36
 TCS - Wiring diagramBR-41
 TCS component parts and connector locationBR-40
 TCS control unitBR-38
 TCS system componentsBR-37
 TCS trouble diagnosesBR-54, 131
 TCS wheel sensorsBR-40
 TelephoneEL-216
 THEFT - Wiring diagramEL-336
 Theft warning systemEL-328
 ThermometerEL-147
 ThermostatLC-18
 Three way catalyst precautionsGI-6
 Throttle bodyEM-11
 Throttle control motorEC-474
 Throttle control motor relayEC-468
 Throttle position sensor (TPS)EC-212, 296, 535, 537, 664
 Throttle position switchAT-188
 Tie-rodST-15
 Tie-rod ball jointsST-19
 Tightening torque of standard boltsGI-52
 Timing chainEM-29
 Tire rotationMA-23
 Tire sizeGI-47
 TLID - Wiring diagramEL-215
 Torque converter clutch solenoid valveAT-157
 Torque converter installationAT-286, 375
 Tow truck towingGI-51
 Traction control system - See TCSBR-36
 Traction control system - Wiring diagramBR-41
 TRANSMT - Wiring diagramEL-371
 Tread-FR&RR (Dimensions)GI-47
 TrimBT-35
 TRNSCV - Wiring diagramEL-371
 Trouble diagnosesGI-35
 Trunk lidBT-17
 Trunk lid finisherBT-43
 Trunk lid opener - See Trunk lidBT-17
 Trunk lid opener, electricEL-215
 Trunk lid trimBT-43
 Trunk room lampEL-100
 Trunk room trimBT-43
 Turbine revolution sensorAT-211
 TURN - Wiring diagramEL-84
 Turn signal lampEL-82
 Two trip detection logicEC-74
 Two-pole liftGI-50

GI
 MA
 EM
 LC
 EC
 FE
 AT
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL

ALPHABETICAL INDEX

U

Under bodyBT-69

V

Vacuum cut valveEC-37
Vacuum cut valve bypass valve.....EC-37, 594, 600
Vacuum hose (brake system).....BR-21
Vacuum hose drawing (Engine control)EC-31
Valve clearance.....EM-66
Valve guide.....EM-57
Valve seat.....EM-58
Valve spring.....EM-59
Vanity mirror lampEL-100
VDC - Wiring diagramBR-104
Vehicle recovery (freeing a stuck
vehicle).....GI-51
Vehicle security (theft warning) systemEL-328
Vehicle speed sensor (VSS)EC-429
VEHSEC - Wiring Diagram.....EL-336
VENT/V - Wiring diagramEC-371, 560, 569
VIASEC-639, 677
VIAS - Wiring diagramEC-679
Viscosity number (SAE)MA-11
VSS - Wiring diagramEC-431

W

WARN - Wiring diagramEL-151

Warning chimeEL-161
Warning lampsEL-150
Washer, front.....EL-176
Water pumpLC-14
Water temperature gaugeEL-125
Weatherstrip - See ExteriorBT-44
Wheel alignment (front).....SU-6
Wheel alignment (rear).....SU-19
Wheel balanceMA-21
Wheel bearing (front).....AX-4
Wheel bearing (rear)AX-18
Wheel hub (front).....AX-5
Wheel hub (rear)AX-19
Wheel sensor (VDC)BR-170
Wheel sensors (TCS).....BR-170
Wheelarch heightSU-6
Wheelbase (Dimensions)GI-47
Width (Dimensions)GI-47
WINDOW - Wiring diagramEL-266
Window, rearBT-62
Windshield.....BT-62
WIPER - Wiring diagramEL-178
Wiper, front.....EL-176
Wiring Diagram (Cell code) list.....EL-507
Wiring diagramsGI-11
Wrist pin - See Piston pin inspection.....EM-75