


SUPER MULTIPLE JUNCTION (SMJ)

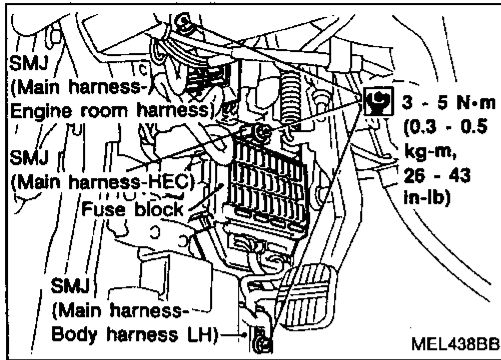


INSTALLATION

To install SMJ, tighten bolts until orange "fulltight" mark appears and then retighten to specified torque as required.

 : 3 - 5 N·m
(0.3 - 0.5 kg-m, 26 - 43 in-lb)

CAUTION:


Do not overtighten bolts, otherwise, they may be damaged.

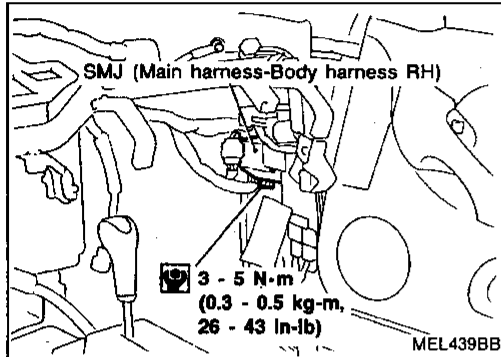

SUPER MULTIPLE JUNCTION (SMJ)


Terminal Arrangement

MAIN HARNESS

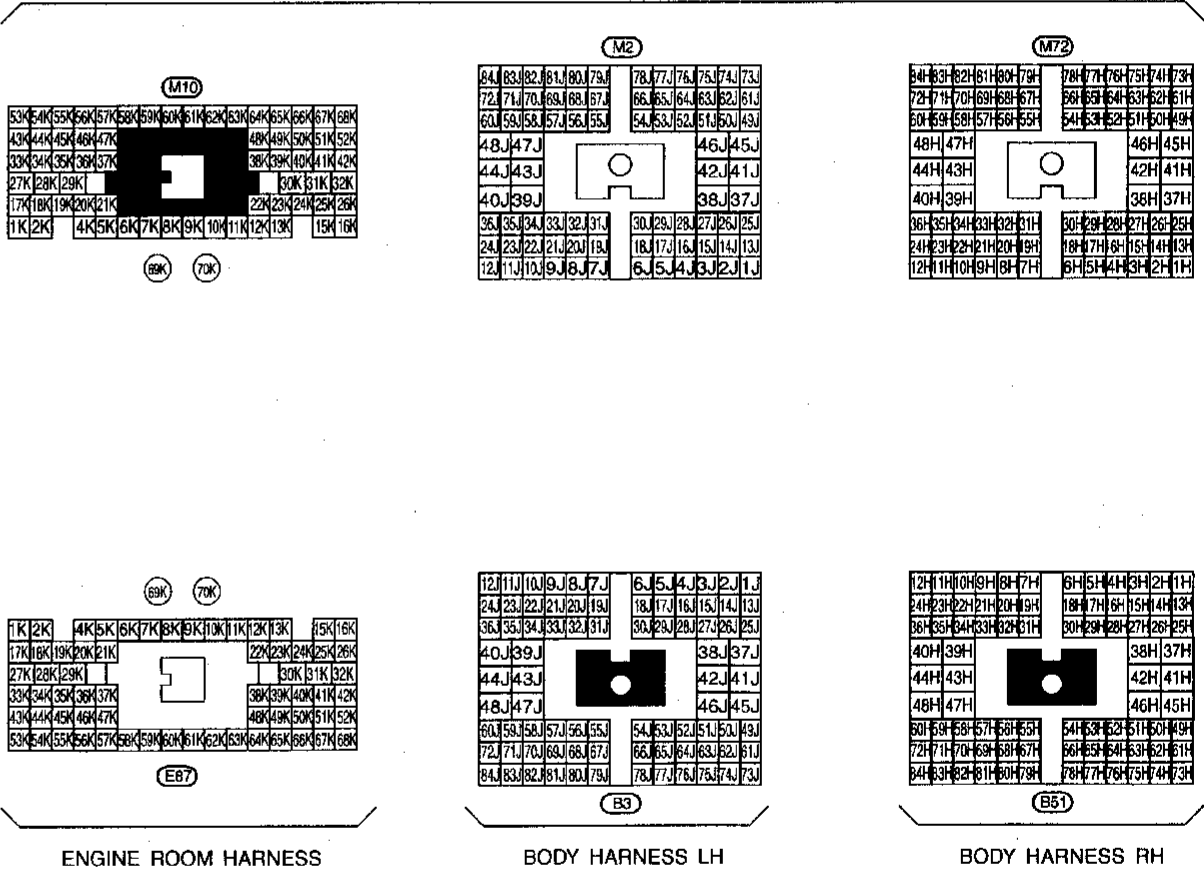


FUSE BLOCK — Junction Box (J/B)

Terminal Arrangement

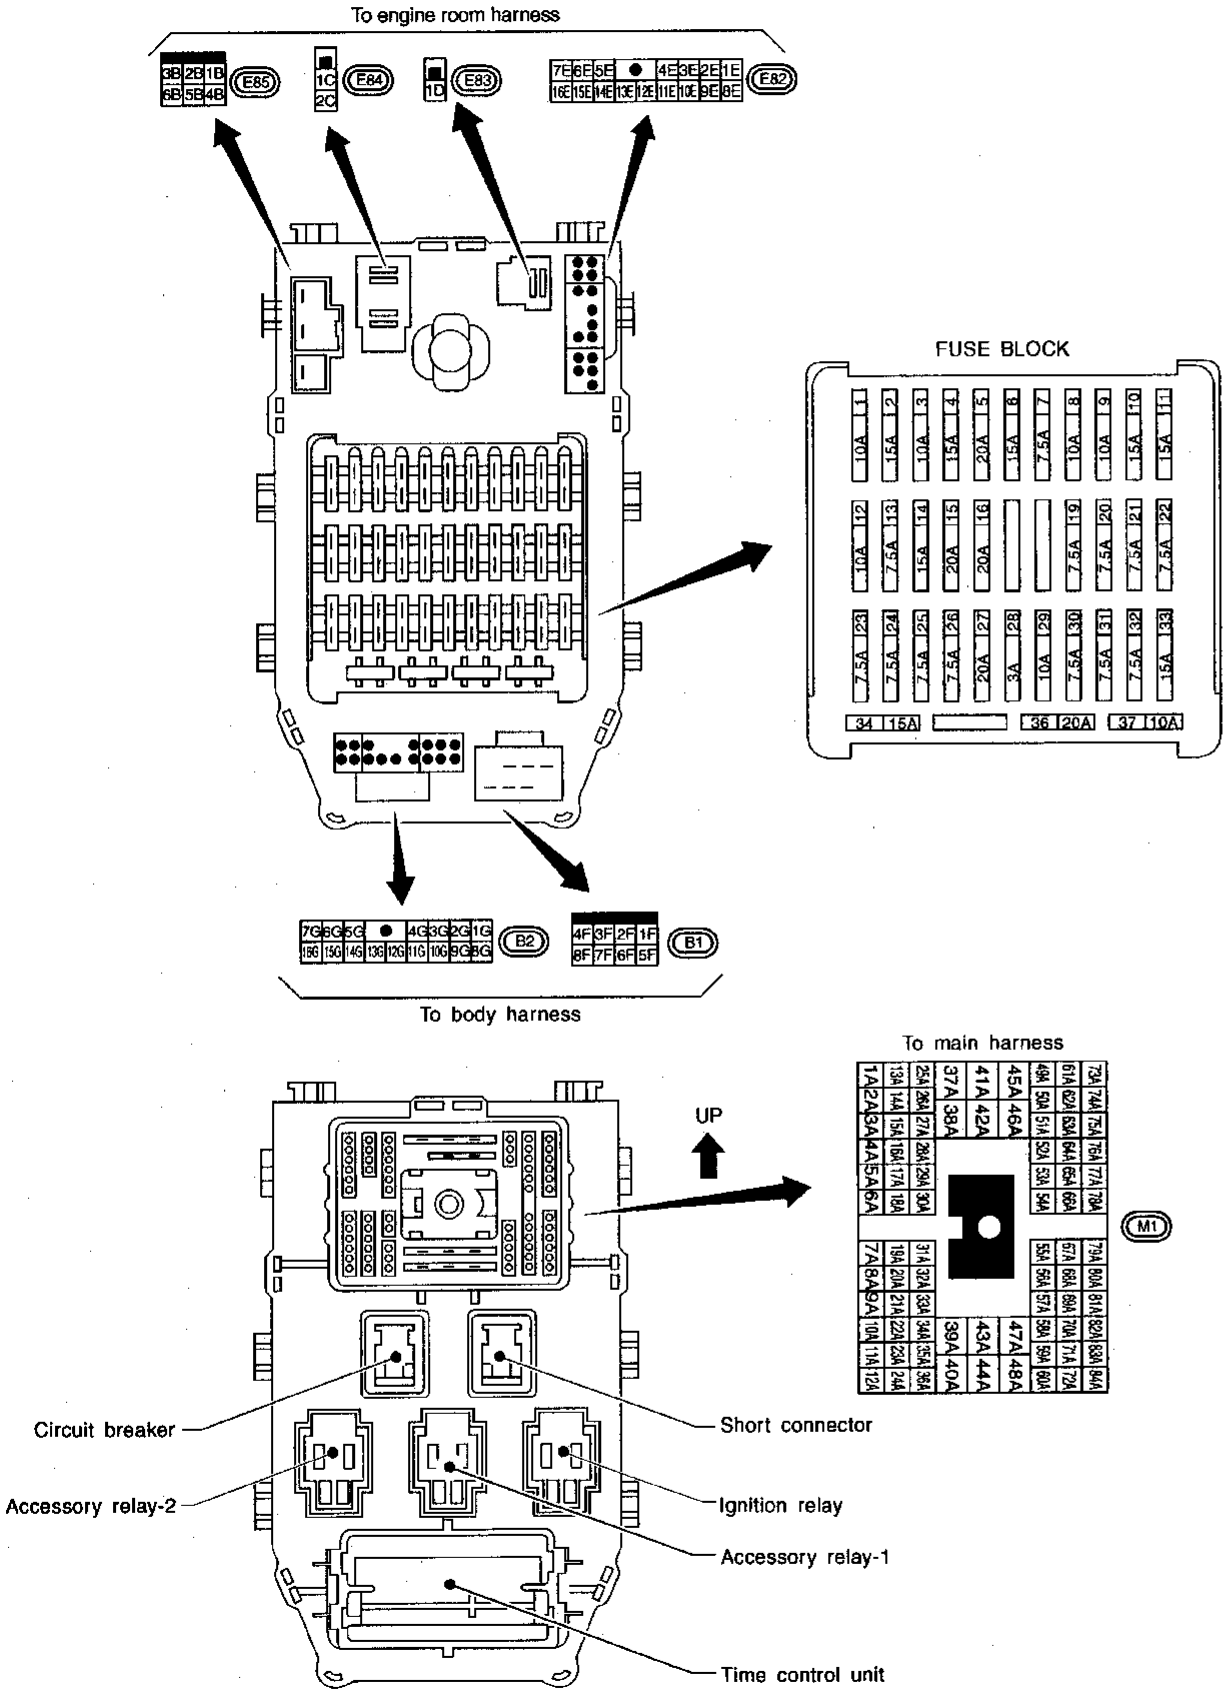

FUSE AND FUSIBLE LINK BOX


Terminal Arrangement

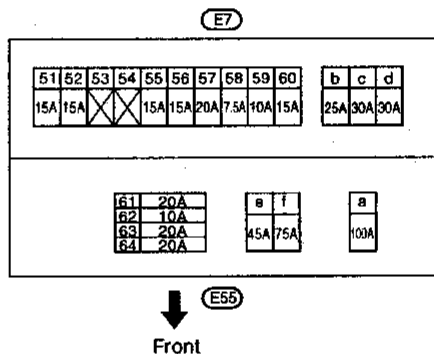

ELECTRICAL UNITS

Terminal Arrangement


ECM (ECCS CONTROL MODULE) (F27)

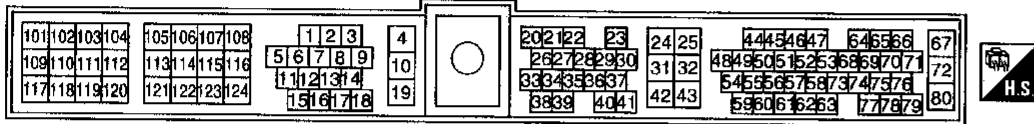


A/T CONTROL UNIT (B8)



 
ABS CONTROL UNIT (B70)



A/C AUTO AMP.

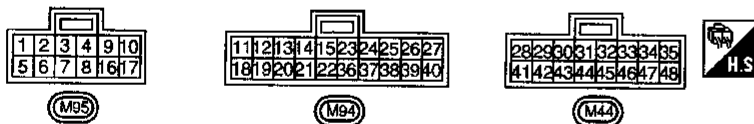

AIR BAG DIAGNOSIS SENSOR UNIT (Z5)

 

JOINT CONNECTOR (J/C)

Terminal Arrangement

