


SUPER MULTIPLE JUNCTION (SMJ)

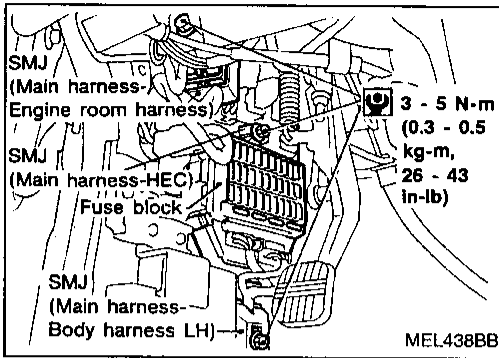


INSTALLATION

To install SMJ, tighten bolts until orange "fulltight" mark appears and then retighten to specified torque as required.

 : 3 - 5 N·m
(0.3 - 0.5 kg-m, 26 - 43 in-lb)

CAUTION:


Do not overtighten bolts, otherwise, they may be damaged.

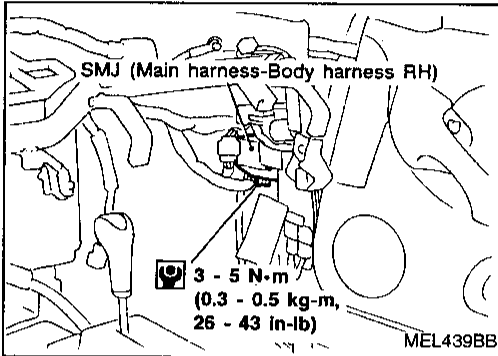

SUPER MULTIPLE JUNCTION (SMJ)

Terminal Arrangement

MAIN HARNESS

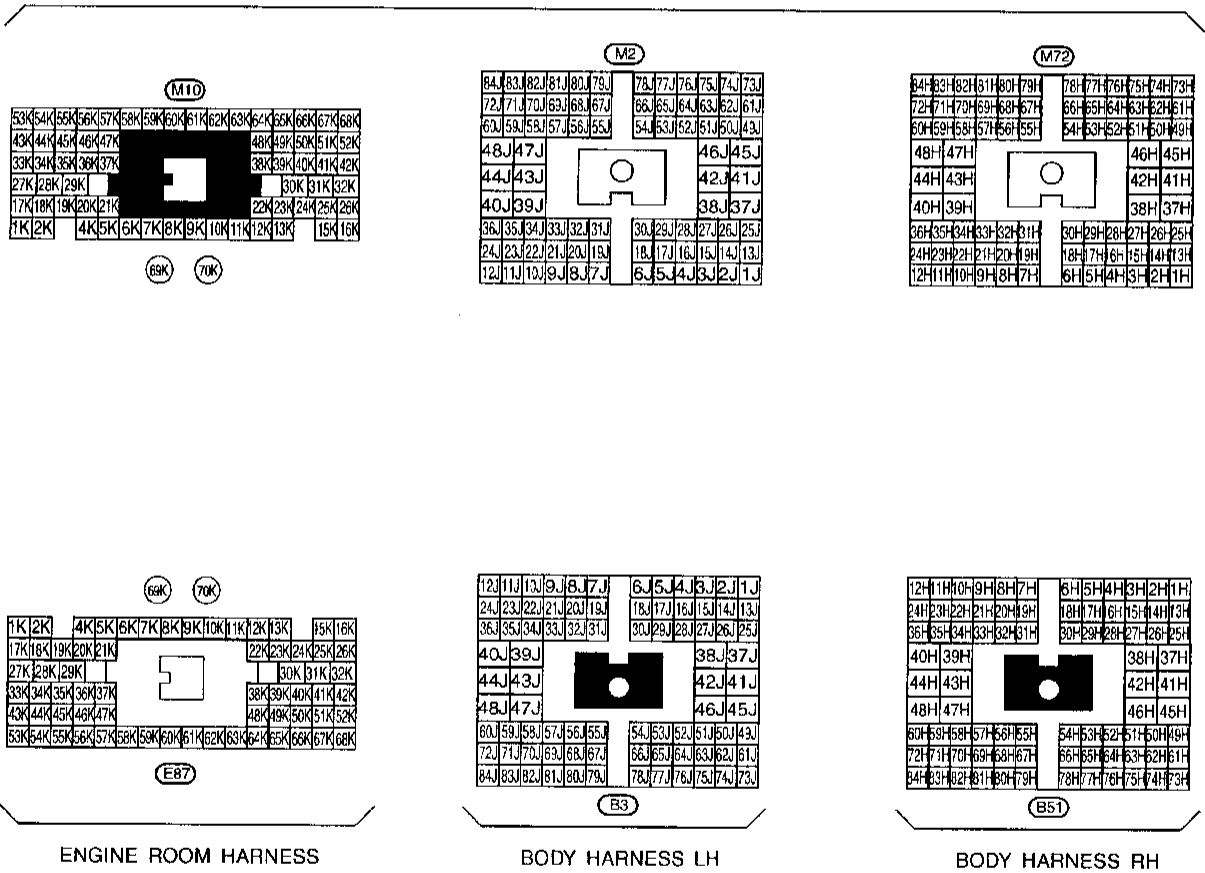


ENGINE ROOM HARNESS

BODY HARNESS LH

BODY HARNESS RH


FUSE BLOCK — Junction Box (J/B)

Terminal Arrangement

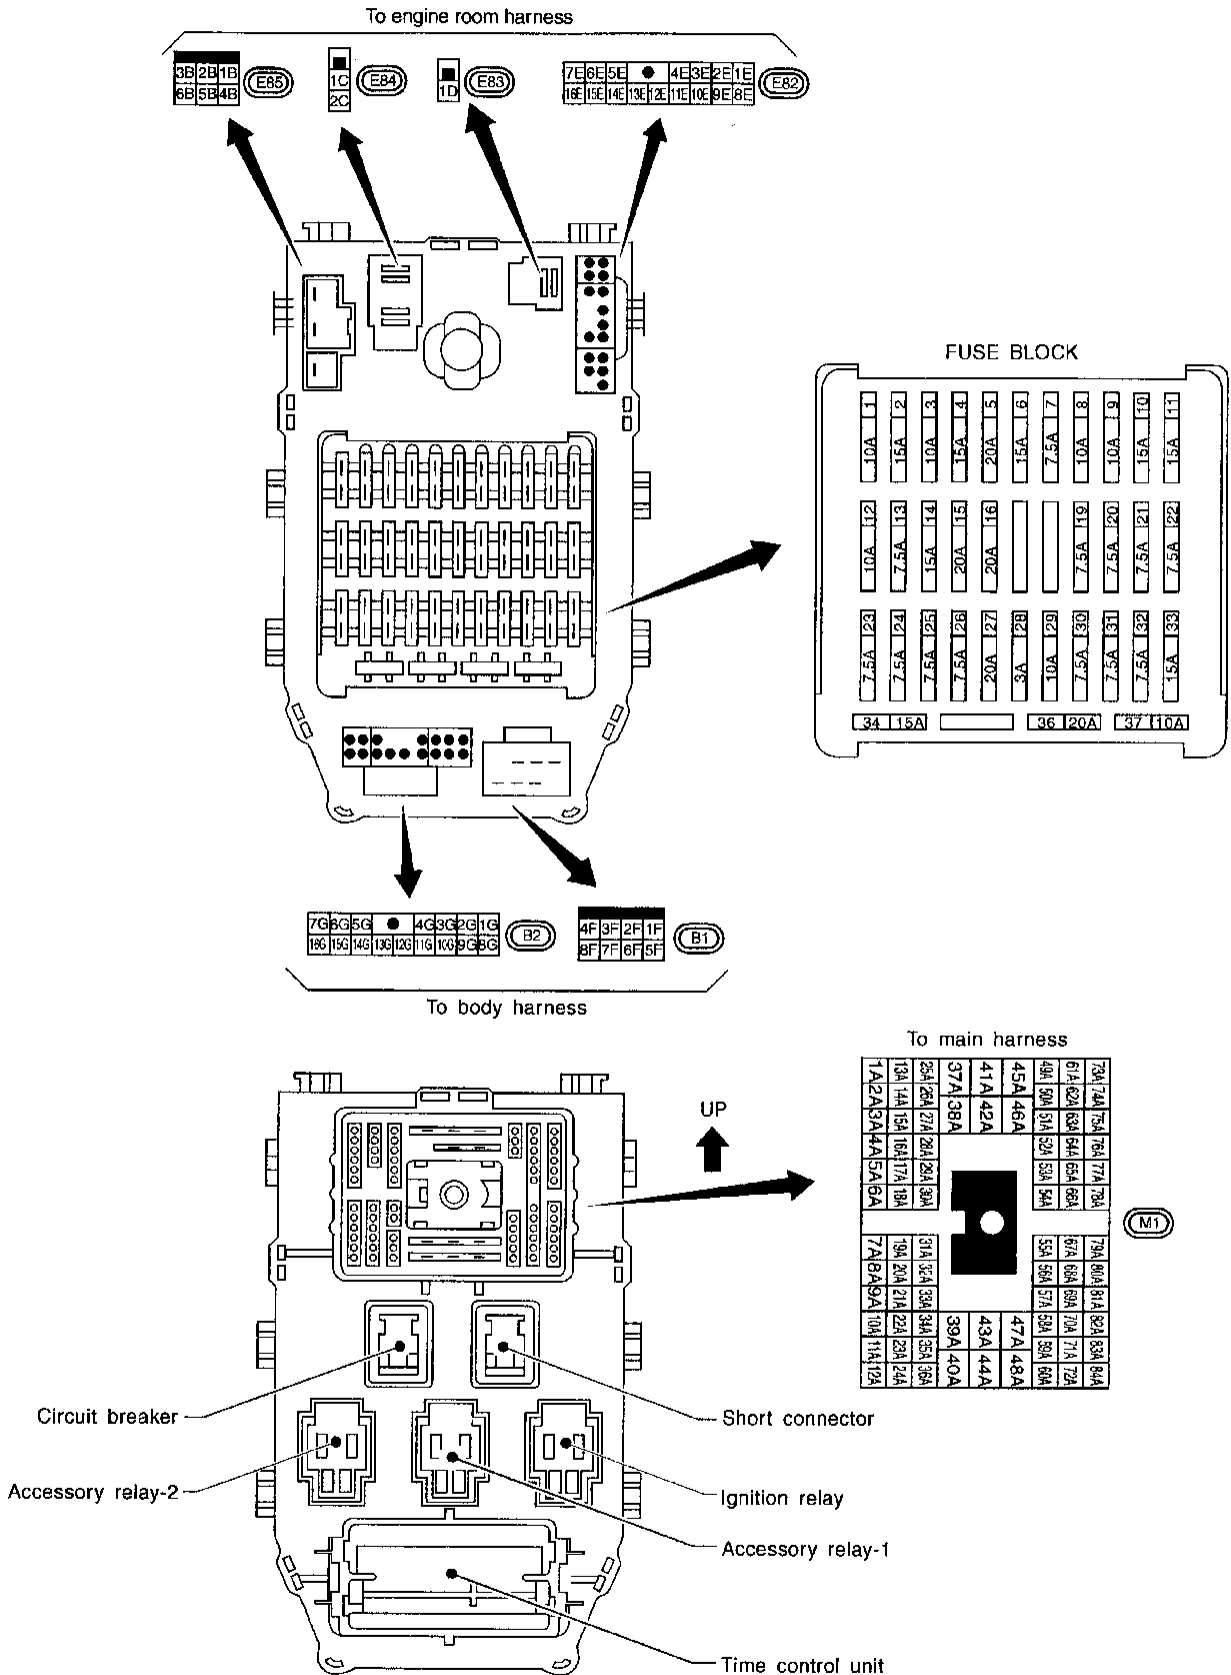

FUSE AND FUSIBLE LINK BOX


Terminal Arrangement

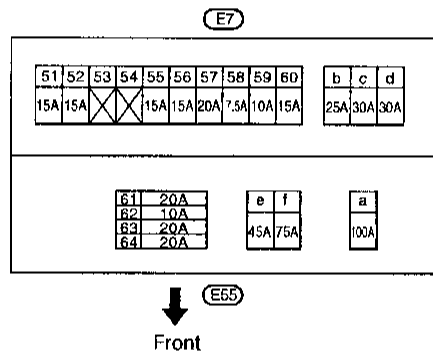


ELECTRICAL UNITS

Terminal Arrangement

 
ECM (ECCS CONTROL MODULE) (F27)




A/T CONTROL UNIT (B8)

 

ABS CONTROL UNIT (B70)

 

A/C AUTO AMP.


 


AIR BAG DIAGNOSIS SENSOR UNIT (Z5)



JOINT CONNECTOR (J/C)

 
 
Terminal Arrangement



(Blue)

J/C-6 (M11)

  J/C-11 (M59)





(Orange)

J/C-3 (E66)

J/C-7 (M12)

 
 
J/C-13 (B64)



(Yellow)

J/C-8 (M13)

  
J/C-12 (B16)



(Black)

J/C-9 (M57)

 J/C-10 (M58)



(Gray)

J/C-1 (E23)

J/C-2 (E36)