

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EF &
EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

A

ABS (anti-lock brake system) BR-25
 ABS actuator BR-28
 ABS circuit diagram BR-39
 ABS component parts and connector
 locations BR-38
 ABS control unit BR-27
 ABS hydraulic circuit BR-25
 ABS self-diagnosis BR-37
 ABS symptom chart BR-33
 ABS system components BR-25
 ABS trouble diagnoses BR-29
 ABS wiring diagram BR-26
 A/C air flow HA-17
 A/C circuit diagram HA-57
 A/C component layout HA-16
 A/C compressor clutch removal and
 installation HA-109
 A/C compressor description HA-12
 A/C compressor mounting HA-108
 A/C compressor precaution HA-6
 A/C compressor special service tool HA-6
 A/C control linkage adjustment HA-84
 A/C control operation HA-19
 A/C diagnostic work flow HA-24
 A/C harness layout HA-55
 A/C HFC134a (R134a) system
 identification HA-3
 A/C HFC134a (R134a) system
 introduction HA-3
 A/C HFC134a (R134a) system
 precaution HA-4
 A/C HFC134a (R134a) system service
 procedure HA-103
 A/C HFC134a (R134a) system service
 tools HA-7
 A/C HFC134a system service equip-
 ment precaution HA-9
 A/C lubricant (R134a) HA-105
 A/C operational check HA-25
 A/C performance chart HA-50
 A/C performance test diagnoses HA-48
 A/C relay HA-83
 A/C self-dfignoses HA-30
 A/C service data specification HA-112
 A/C symptom chart HA-28
 A/C system description HA-86
 A/C trouble diagnoses HA-22
 A/C wiring diagram HA-58
 Accelerator control system FE-2
 Accelerator wire adjustment FE-2
 Activated carbon canister EF & EC-18
 Activated carbon canister
 inspection EF & EC-228
 Active suspension - See Full active
 suspension FA-21

Active suspension fluid MA-8
 Air bag RS-5
 Air bag disposal RS-12
 Air bag module RS-9
 Air bag precautions GI-2
 Air bag removal and installation RS-8
 Air bleeding for brake system BR-4
 Air bleeding for TCS BR-60
 Air cleaner filter replacement MA-13
 Air conditioner cut control EF & EC-27
 Air cut valve for TCS EF & EC-15
 Air cut valve inspection EF & EC-219
 Air mix door control linkage
 adjustment HA-84
 Air mix. door motor HA-95
 Air spoiler, rear - See Rear air
 spoiler BT-34
 Alternator EL-16
 Ambient sensor HA-88
 Angular tightening application EM-2
 Antenna - See Power antenna EL-230
 Anti-freeze coolant MA-8
 Anti-freeze coolant mixture ratio MA-9
 ASCD (automatic speed control
 device) EL-235
 AT control unit AT-75
 AT fluid temperature sensor AT-82
 AT removal and installation AT-109
 AT self-diagnoses AT-40
 AT shift lock system AT-91
 AT trouble diagnoses AT-11
 Audio EL-228
 Audio and A/C control removal and
 installation - See Instrument panel BT-10
 Automatic amplifier HA-91
 Automatic drive positioner - LAN EL-129
 Automatic transmission fluid MA-8
 Automatic transmission fluid
 replacement MA-16
 Automatic transmission number GI-31
 Auxilliary air control (AAC) EF & EC-16
 Axle housing (rear) RA-7

B

Back-up lamp EL-27
 Ball joint front axle FA-19
 Battery EL-11
 Belt inspection (drive belt) MA-10
 Blower motor HA-83
 Blower relay HA-83
 Board-on Lift GI-32
 Body alignment BT-35
 Brake booster BR-11
 Brake control valve (Proportioning
 Valve) BR-6
 Brake fluid change BR-4

ALPHABETICAL INDEX

Brake fluid level	MA-17
Brake fluid level and line check	BR-4
Brake hydraulic line	BR-5
Brake inspection.....	MA-18
Brake lines and cables inspection	MA-18
Brake pedal.....	BR-7
Bumper, front - See Front bumper.....	BT-4
Bumper, rear - See Rear bumper	BT-6

C

Camshaft inspection	EM-26
Camshaft position sensor inspection.....	EF & EC-213
Canister control.....	EF & EC-26
Canister control solenoid valve	EF & EC-17
Center bearing assembly (propeller shaft)	PD-8
Center bearing disassembly (propeller shaft).....	PD-7
Charging system.....	EL-16
Cigarette lighter.....	EL-221
Circuit breaker.....	EL-10
Clearance lamp.....	EL-26
Clock.....	EL-221
Coil spring (front)	FA-16
Coil spring (rear)	RA-16
Combination lamp, front, removal and installation	BT-4
Combination lamp, rear, removal and installation.....	BT-23
Combination meter	EL-37
Combination meter removal and installation - See Instrument panel	BT-10
Combination switch	EL-18
Compression pressure.....	EM-7
Compressor clutch removal and installation.....	HA-109
Compressor description	HA-12
Compressor mounting	HA-108
Compressor precaution.....	HA-6
Compressor special service tool	HA-6
Connecting rod	EM-35
Connecting rod bearing clearance	EM-39
Connecting rod bushing clearance.....	EM-39
Console box - See Instrument panel.....	BT-10
Consult for ECCS	EF & EC-56
CONSULT for TCS.....	BR-75
Consult general information	GI-28
Control valve (AT)	AT-132
Converter housing installation.....	AT-111
Coolant replacement.....	MA-11
Cooling circuit (engine).....	LC-7
Cooling fan.....	LC-13
Cooling fan control.....	EF & EC-30
Cooling fan motor inspection	EF & EC-222
Cooling fan relay inspection.....	EF & EC-222

Courtesy lamp.....	EL-35
Crankcase emission control system.....	EF & EC-230
Crankshaft assembly	EM-41
Crankshaft inspection	EM-37
Cruise control - See ASCD.....	EL-235
Cylinder block.....	EM-33
Cylinder head.....	EM-25
Cylinder head bolt tightening.....	EM-19

D

Data link connector for Consult.....	EF & EC-17
Daytime light system.....	EL-22
Daytime running light - See Daytime light system	EL-22
Diagnostic information display	EL-48
Differential carrier assembly	PD-25
Differential carrier disassembly	PD-13
Differential gear oil	MA-8
Differential gear oil replacement.....	MA-17
Dimensions	GI-31
Direct ignition system.....	EF & EC-33
Dome light - See Interior lamp	EL-34
Door glass	BT-8
Door lock.....	BT-8
Door mirror - LAN.....	EL-162
Door mirror.....	BT-33
Door trim.....	BT-16
Door, front - See Front door	BT-8
Door, rear - See Rear door	BT-9
Drive pinion diff. inspection	PD-16
Drive plate runout.....	EM-40
Drive shaft (rear).....	RA-10
Dropping resistor (AT)	AT-82

E

ECCS basic inspection.....	EF & EC-67
ECCS circuit diagram	EF & EC-10
ECCS component parts location	EF & EC-5
ECCS fail-safe system	EF & EC-31
ECCS on-board diagnostic system....	EF & EC-49
ECCS relay inspection	EF & EC-221
ECCS system diagram and chart.....	EF & EC-7
ECCS trouble diagnoses.....	EF & EC-42
ECM input/output signal inspection.....	EF & EC-209
EGR control (EGRC) - BPT valve	EF & EC-17
EGR control (EGRC) - solenoid valve.....	EF & EC-17
EGR temperature sensor.....	EF & EC-18
EGR temperature sensor inspection.....	EF & EC-218
EGR valve inspection.....	EF & EC-217
EGRC - BPT valve inspection	EF & EC-217

ALPHABETICAL INDEX

Electric sun roof.....	EL-219
Electrical units location.....	EL-255
Electronic ignition (EI) system.....	EF & EC-22
Engine compartment.....	BT-35
Engine control module (ECM).....	EF & EC-11
Engine coolant temperature sensor (ECTS).....	EF & EC-12
Engine coolant temperature sensor inspection.....	EF & EC-214
Engine oil.....	MA-8
Engine oil filter replacement.....	MA-14
Engine oil precautions.....	GI-5
Engine oil replacement.....	MA-13
Engine outer component parts.....	EM-6
Engine removal.....	EM-31
Engine room - See Engine compartment.....	BT-35
Engine serial number.....	GI-31
Evaporative emission system.....	EF & EC-228
Exhaust gas recirculation (EGR) system.....	EF & EC-26
Exhaust gas recirculation (EGR) valve.....	EF & EC-16
Exhaust system.....	FE-4
Exhaust system inspection.....	MA-16
Exterior.....	BT-18
Exterior lamp.....	EL-26

F

Fan control amp.....	HA-101
Fast idle cam (FIC).....	EF & EC-15
Fast idle cam (FIC) inspection and adjustment.....	EF & EC-223
Final drive disassembly.....	PD-12
Final drive pre-inspection.....	PD-13
Final drive removal and installation.....	PD-11
Finisher, interior - See Trim.....	BT-12
Finisher, rear panel - See Rear panel finisher.....	BT-17
Finisher, trunk lid - See Trunk lid finisher.....	BT-17
First (1st) position switch.....	AT-81
Fluid temperature sensor (AT).....	AT-82
Fog lamp, front.....	EL-28
Fog lamp, front, removal and installation.....	BT-4
Foot lamp.....	EL-34
Forward clutch.....	AT-152
Front axle.....	FA-11
Front bumper.....	BT-4
Front combination lamp removal and installation.....	BT-4
Front disc brake.....	BR-14
Front door.....	BT-8
Front fog lamp.....	EL-28
Front fog lamp removal and	

installation.....	BT-4
Front passenger air bag.....	RS-5
Front seat.....	BT-24
Front seat belt.....	RS-3
Front suspension.....	FA-15
Front washer.....	EL-216
Front wiper.....	EL-216
Fuel check valve inspection.....	EF & EC-229
Fuel damper.....	EF & EC-15
Fuel filler lid.....	BT-6
Fuel filter.....	EF & EC-17
Fuel filter replacement.....	MA-12
Fuel gauge.....	EL-38
Fuel injector.....	EF & EC-13
Fuel lid opener, electric.....	EL-220
Fuel line inspection.....	MA-12
Fuel precautions.....	GI-6
Fuel pressure check.....	EF & EC-226
Fuel pressure regulator.....	EF & EC-14
Fuel pressure release.....	EF & EC-226
Fuel pump.....	EF & EC-14
Fuel pump control.....	EF & EC-25
Fuel pump control unit.....	EF & EC-14
Fuel pump control unit inspection... EF & EC-215	
Fuel pump inspection.....	EF & EC-215
Fuel pump relay inspection.....	EF & EC-221
Fuel system.....	FE-3
Fuel tank vacuum relief valve inspection.....	EF & EC-229
Full active susp. parts and harness connectors.....	FA-57
Full active suspension fluid level.....	FA-23
Full active suspension parts location.....	FA-22
Full active suspension precautions.....	GI-2
Full active suspension repair of com- ponent parts.....	FA-26
Full active suspension trouble diagnoses.....	FA-49
Full-active suspension fluid and lines checking.....	MA-19
Fuse.....	EL-10
Fusible link.....	EL-10

G

Garage jack and safety stand.....	GI-33
Generator - See Alternator.....	EL-16
Glass.....	BT-8
Grille - See Exterior.....	BT-23
Ground distribution.....	EL-286

H

Harness connector.....	EL-4
Harness layout.....	EL-259
Hazard warning lamp.....	EL-29

ALPHABETICAL INDEX

Headlamp	EL-20
Headlamp removal and installation	BT-4
Headlining - See Roof trim	BT-14
Heated oxygen (HO2S) heater control	EF & EC-29
Heated oxygen sensor (HO2S)	EF & EC-14
Heated oxygen sensor heater inspection	EF & EC-217
Heated oxygen sensor monitor	EF & EC-54
Heated seat	BT-27, EL-233
Height (Dimensions)	GI-31
HFC134a (R134a) system identification	HA-3
HFC134a (R134a) system introduction	HA-3
HFC134a (R134a) system precaution	HA-4
HFC134a (R134a) system service procedure	HA-103
HFC134a (R134a) system service tools	HA-7
HFC134a system service equipment precaution	HA-9
High clutch	AT-150
Hood	BT-4
Horn	EL-221
How to follow flow chart in trouble diagnoses	GI-25
How to perform efficient diagnosis for an electrical incident	GI-14
How to read wiring diagrams	GI-9
How to use this manual	GI-7
Hydraulic lash adjuster inspection	EM-30

I

IACV-AAC valve inspection	EF & EC-220
Identification plate	GI-31
Idle air control (IAC) system	EF & EC-24
Idle air control valve (IACV)	EF & EC-16
Idle mixture ratio inspection	EF & EC-35
Idle speed inspection	EF & EC-35
Ignition coil inspection	EF & EC-215
Ignition timing inspection	EF & EC-35
Illumination - LAN	EL-215
Illumination	EL-32
In vehicle sensor	HA-87
Inhibitor switch	AT-80
Inhibitor switch inspection	EF & EC-221
Injector inspection	EF & EC-220
Injector removal and installation	EF & EC-227
Instrument panel	BT-10
Intake door control linkage adjustment	HA-85
Intake door motor	HA-93
Intake sensor	HA-89
Interior	BT-12
Interior lamp	EL-34

K

Knock sensor (KS)	EF & EC-16
Knock sensor inspection	EF & EC-220

L

LAN system description	EL-61
LAN trouble diagnoses	EL-77
LAN	EL-61
Length (Dimensions)	GI-31
License lamp	EL-26
Line pressure solenoid valve	AT-82
Line pressure test (AT)	AT-86
Liquid gasket application	EM-2
Location of electrical units	EL-255
Lock, door - See Door lock	BT-8
Low and reverse brake	AT-156
Lower ball joint (rear susp.)	RA-17
Lubricant (R134a) A/C	HA-105
Lubrication circuit (engine)	LC-3
Lubrication-locks, hinges and hood latches	MA-21

M

Magnet clutch	HA-109
Maintenance (engine)	MA-10
Maintenance	MA-1
Maintenance general	MA-3
Maintenance periodic	MA-5
Maintenance schedule (1)	MA-6
Maintenance schedule (2)	MA-7
Mass air flow sensor (MAFS)	EF & EC-11
Mass air flow sensor inspection	EF & EC-214
Master cylinder (brake)	BR-9
Middle throttle drum adjustment	FE-2
Mirror, door - See Door mirror	BT-33
Mirror, out side - See Out side mirror	BT-33
Mode door control linkage adjustment	HA-84
Mode door motor	HA-97
Model variation	GI-29
Molding - See Exterior	BT-18
Multi link/lower ball joint (rear)	RA-17
Multi purpose grease	MA-8
Multi remote control system - LAN	EL-155
Multiport fuel injection (MFI) system	EF & EC-19
Multiport fuel injection precautions	GI-4
Multiport fuel injection system inspection	EF & EC-226

ALPHABETICAL INDEX

O

Oil pan (engine).....	EM-8
Oil pressure (engine).....	LC-4
Oil pump (AT).....	AT-128
Oil pump (engine).....	LC-5
Oil pump regulator valve (engine).....	LC-6
Oil seal replacement (engine).....	EM-23
Oil seal replacement (front of final drive).....	PD-9
Oil seal replacement (side of final drive).....	PD-9
Opera window.....	BT-32
Out side mirror.....	BT-33
Overrun clutch.....	AT-152
Overrun clutch solenoid valve.....	AT-82
Oversize piston.....	EM-36

P

Park/Neutral position (PNP) relay inspection.....	EF & EC-222
Parking brake control.....	BR-23
Parking drum brake.....	BR-20
PCV (positive crankcase ventilation) inspection.....	EF & EC-230
Pilot bushing replacement.....	EM-42
Pinion bearing preload diff.....	PD-18
Pinion gear height diff.....	PD-18
Piston assembly.....	EM-40
Piston pin inspection.....	EM-34
Piston ring inspection.....	EM-35
Piston to bore clearance.....	EM-36
Power antenna.....	EL-230
Power door lock - LAN.....	EL-119
Power seat.....	EL-154
Power steering (twin orifice) trouble diagnoses.....	ST-30
Power steering fluid.....	MA-8
Power steering fluid level.....	MA-19, ST-5
Power steering gear.....	ST-12
Power steering hydraulic pressure.....	ST-7
Power steering oil pressure switch ..	EF & EC-16
Power steering oil pressure switch inspection.....	EF & EC-222
Power steering oil pump (full-active sus.).....	ST-27
Power steering oil pump (normal sus.).....	ST-23
Power steering system (twin orifice).....	ST-28
Power steering system bleeding.....	ST-6
Power supply routing.....	EL-8
Power transistor & ignition coil.....	EF & EC-15
Power transistor inspection.....	EF & EC-215
Power window - LAN.....	EL-107
Precautions (General).....	GI-2

Pressure test (AT).....	AT-86
Propeller shaft.....	PD-5
Propeller shaft on vehicle service.....	PD-5
Propeller shaft vibration.....	PD-5

R

Rack retainer adjustment.....	ST-5
Radiator.....	LC-12
Radio - See Audio.....	EL-228
Rear air spoiler.....	BT-34
Rear axle.....	RA-7
Rear bumper.....	BT-6
Rear combination lamp removal and installation.....	BT-23
Rear disc brake.....	BR-17
Rear door.....	BT-9
Rear panel finisher.....	BT-17
Rear seat.....	BT-28
Rear seat belt.....	RS-4
Rear suspension.....	RA-15
Rear window.....	BT-31
Rear window defogger.....	EL-222
Refrigerant connection precaution.....	HA-5
Refrigerant general precaution.....	HA-4
Refrigerant lines.....	HA-107
Refrigeration cycle.....	HA-11
Resistor inspection.....	EF & EC-216
Reverse clutch.....	AT-146
Revolution sensor (AT).....	AT-81
Ring gear diff. Inspection.....	PD-16
Road wheel size.....	GI-31
Roof trim.....	BT-14
Room lamp - See Interior lamp.....	EL-34

S

SAE J1930 terminology list.....	GI-37
Seal - See Exterior.....	BT-18
Seat belt inspection.....	MA-21
Seat belt pre-tensioner.....	RS-5
Seat belt pre-tensioner disposal.....	RS-12
Seat belt pretensioner removal and installation.....	RS-8
Seat belt, front - See Front seat belt.....	RS-3
Seat belt, rear - See Rear seat belt.....	RS-4
Seat, front - See Front seat.....	BT-24
Seat, rear - See Rear seat.....	BT-28
Secondary throttle position sensor (TPS) for TCS.....	EF & EC-13
Secondary throttle position sensor.....	BR-57
Secondary throttle position sensor adjustment.....	BR-63
Secondary throttle position sensor inspection.....	EF & EC-219
Self-diagnostic results.....	EF & EC-52

ALPHABETICAL INDEX

<p>Shift lock system AT-91</p> <p>Shift schedule AT-32</p> <p>Shift solenoid valve (AT)..... AT-82</p> <p>Shock absorber (front) FA-16</p> <p>Shock absorber (rear)..... RA-16</p> <p>Side bearing preload diff. PD-17</p> <p>Side window - See Rear side window BT-32</p> <p>SMJ (super multiple junction)..... Foldout</p> <p>Spark plug replacement..... MA-14</p> <p>Speedometer..... EL-38</p> <p>Spiral cable RS-9</p> <p>Splice location..... EL-276</p> <p>Spot lamp EL-34</p> <p>Spring (Wheelarch) height..... FA-6</p> <p>SRS - See Supplemental Restraint System RS-5</p> <p>SRS Trouble diagnoses RS-17</p> <p>SRS Wiring diagram..... RS-18</p> <p>Stabilizer bar (front) FA-19</p> <p>Stabilizer bar (rear) RA-18</p> <p>Stall test (AT)..... AT-84</p> <p>Standardized relay EL-5</p> <p>Starter..... EL-14</p> <p>Starting system EL-14</p> <p>Steering gear and linkage inspection MA-19</p> <p>Steering knuckle..... FA-11</p> <p>Steering linkage..... ST-12</p> <p>Steering switch EL-19</p> <p>Steering wheel and column ST-8</p> <p>Steering wheel play ST-4</p> <p>Steering wheel turning force ST-6</p> <p>Step lamps - LAN..... EL-210</p> <p>Stop lamp EL-26</p> <p>Sun roof BT-29</p> <p>Sun roof, electric - See Electric sun roof..... EL-219</p> <p>Sunload sensor HA-89</p> <p>Symbols and abbreviations GI-8</p>	<p>TCS pump removal and installation..... BR-60</p> <p>TCS rear wheel sensor removal and installation BR-61</p> <p>TCS self-diagnosis BR-76</p> <p>TCS symptom chart..... BR-69</p> <p>TCS system components BR-51</p> <p>TCS trouble diagnoses BR-64</p> <p>TCS wiring diagram Foldout page</p> <p>Telephone..... EL-226</p> <p>Tension rod (front)..... FA-19</p> <p>Theft warning system - LAN..... EL-187</p> <p>Thermostat..... LC-10</p> <p>Third link (front susp.)..... FA-17</p> <p>Three way catalyst precautions GI-5</p> <p>Throttle drum adjustment..... FE-2</p> <p>Throttle Motor..... BR-57</p> <p>Throttle motor removal and installation BR-62</p> <p>Throttle position sensor (TPS)..... EF & EC-12</p> <p>Throttle position sensor inspection. EF & EC-219</p> <p>Throttle position switch inspection.. EF & EC-218</p> <p>Throttle valve control system for TCS BR-56</p> <p>Thrust washer selection diff. PD-24</p> <p>Tie-rod ball joints ST-16</p> <p>Tightening torque of standard bolts GI-36</p> <p>Time control system - LAN..... EL-169</p> <p>Timing chain EM-10</p> <p>Tire rotation MA-17</p> <p>Tire size..... GI-31</p> <p>Tooth contact diff..... PD-23</p> <p>Torque converter clutch solenoid valve AT-82</p> <p>Torque converter installation..... AT-111</p> <p>Tow truck towing GI-34</p> <p>Traction control system - See TCS BR-50</p> <p>Traction control system fluid MA-8</p> <p>Transverse link (front)..... FA-19</p> <p>Tread-FR&RR (Dimensions)..... GI-31</p> <p>Trim..... BT-12</p> <p>Triple pressure switch..... HA-83</p> <p>Trunk lid..... BT-6</p> <p>Trunk lid finisher BT-17</p> <p>Trunk lid opener - See Trunk lid BT-6</p> <p>Trunk lid opener, electric..... EL-220</p> <p>Trunk lid trim BT-17</p> <p>Trunk room lamp EL-34</p> <p>Trunk room trim..... BT-17</p> <p>Turbine revolution sensor..... AT-81</p> <p>Turn signal lamp..... EL-29</p> <p>Two-pole lift..... GI-33</p>
<p style="font-size: 2em; margin: 0;">T</p>	
<p>Tachometer EL-38</p> <p>Tail lamp EL-26</p> <p>TCM (throttle control module) BR-57</p> <p>TCM removal and installation BR-61</p> <p>TCS (traction control system)..... BR-50</p> <p>TCS actuator..... BR-53</p> <p>TCS actuator removal and installation BR-59</p> <p>TCS circuit diagram BR-84</p> <p>TCS component parts and connector location BR-73</p> <p>TCS control unit BR-52</p> <p>TCS front wheel sensor removal and installation BR-62</p> <p>TCS hydraulic circuit..... BR-55</p> <p>TCS pump..... BR-53</p>	<p>Under body BT-37</p> <p>Upper link (front susp.) FA-17</p>
<p style="font-size: 2em; margin: 0;">U</p>	

ALPHABETICAL INDEX

V

Vacuum hose (brake system)..... BR-13
Vacuum hose drawing (ECCS)..... EF & EC-9
Valve guide inspection..... EM-27
Valve seat inspection..... EM-29
Valve spring inspection..... EM-30
Valve timing control (VTC)..... EF & EC-27
Valve timing control (VTC) valve
inspection..... EF & EC-221
Valve timing control solenoid valve.. EF & EC-18
Vapor lines inspection..... MA-15
Vehicle identification number..... GI-30
Vehicle speed sensor (VSS)..... EF & EC-16
Vehicle speed sensor inspection EF & EC-216
Viscosity number (SAE)..... MA-8
VTC solenoid valve inspection..... EF & EC-220

W

Warning chime..... EL-46
Warning lamps..... EL-43
Washer, front..... EL-216
Water pump..... LC-8
Water temperature gauge..... EL-38
Weatherstrip - See Exterior..... BT-18
Wheel alignment (front)..... FA-9

Wheel alignment (rear)..... RA-5
Wheel balance..... MA-17
Wheel bearing (front axle)..... FA-9
Wheel bearing (rear)..... RA-5
Wheel hub (front)..... FA-11
Wheel hub (rear)..... RA-7
Wheel hub and steering knuckle..... FA-11
Wheel sensors (ABS)..... BR-27
Wheel sensors (TCS)..... BR-54
Wheelarch height..... FA-6
Wheelbase (Dimensions)..... GI-31
Wide open & closed throttle position
(CTP) switch..... EF & EC-12
Width (Dimensions)..... GI-31
Window antenna..... EL-232
Window, back - See Back window..... BT-31
Window, door..... BT-8
Window, opera - See Opera window..... BT-32
Window, rear - See Rear window..... BT-31
Window, side - See Rear side
window..... BT-32
Windshield..... BT-31
Windshield washer - See Front
washer..... EL-216
Windshield wiper - See Front wiper..... EL-216
Wiper and washer..... EL-216
Wiper, front..... EL-216