

ALPHABETICAL INDEX

SECTION

IDX

GI
MA
EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

A

AAC/V - Wiring diagram.....	EC-321
ABS (anti-lock brake system).....	BR-31
ABS - Wiring diagram	BR-49
ABS input/output signal inspection	BR-121
ABS sensor rotor	FA-14
ABS/TCS C/U signal	EC-481
Absolute pressure sensor	EC-123
A/C - Wiring diagram.....	HA-53
A/C air flow.....	HA-22
A/C component location	HA-16
A/C compressor clutch removal and installation.....	HA-108
A/C compressor description	HA-13
A/C compressor mounting.....	HA-107
A/C compressor precaution.....	HA-6
A/C compressor special service tool.....	HA-7
A/C control linkage adjustment (auto A/C).....	HA-96
A/C control operation (auto A/C).....	HA-20
A/C diagnostic work flow (auto A/C)	HA-24
A/C HFC134a (R134a) system precaution	HA-2
A/C HFC134a (R134a) system service procedure.....	HA-98
A/C HFC134a (R134a) system service tools	HA-8
A/C HFC134a system service equip- ment precaution.....	HA-10
A/C lubricant (R134a).....	HA-101
A/C operational check	HA-25
A/C performance test diagnoses.....	HA-44
A/C self-diagnoses (auto A/C).....	HA-29
A/C service data specification	HA-112
A/C symptom chart (auto A/C)	HA-28
A/C trouble diagnoses (auto A/C)	HA-24
Accelerator control system	FE-2
Accelerator wire adjustment	FE-3
ACTIVE - Wiring diagram	FA-32
Active damper suspension (front) parts location	FA-22
Active damper suspension (front) trouble diagnoses.....	FA-26
Active damper suspenstion system - Wiring diagram	FA-32
Air bag	RS-10
Air bag disposal.....	RS-23
Air bag precautions	GI-2
Air bleeding for brake system	BR-6
Air cleaner filter replacement.....	MA-13
Air conditioner - Wiring diagram.....	HA-53
Air conditioner cut control	EC-21
Air flow meter - See Mass air flow sensor	EC-115
Air mix door control linkage adjustment.....	HA-96
Air spoiler, rear.....	BT-25
Alternator.....	EL-38
Ambient sensor	HA-66

Angular tightening application.....	EM-2
Antenna - See Power antenna	EL-200
Anti-lock brake system - See ABS	BR-31
Anti-lock brake system - Wiring diagram	BR-49
AP/SEN - Wiring diagram	EC-123
ASCD (automatic speed control device)	EL-233
ASCD - Wiring diagram	EL-237
A/T - Wiring diagram	AT-11
A/T fluid temperature sensor	AT-87, 151
A/T IND - Wiring diagram	EL-145
AT indicator lamp	EL-144
A/T self-diagnoses.....	AT-41
A/T shift lock system	AT-184
A/T shift lock system - Wiring diagram	AT-185
A/T trouble diagnoses	AT-53
AT/C - Wiring diagram.....	EC-333, 482
Audio	EL-188
AUDIO - Wiring diagram.....	EL-190
Audio and A/C control removal and installation - See Instrument panel	BT-14
AUT/DP - Wiring diagram	EL-419
Auto air conditioner - Wiring diagram	HA-53
Auto anti-dazzling inside mirror	EL-219
Autolamp	EL-43, 59
Automatic drive positioner	EL-413
Automatic speed control system - See ASCD	EL-233
Automatic transmission fluid replacement.....	MA-18
Automatic transmission number	GI-41

B

Back-up lamp	EL-97
BACK/L - Wiring diagram.....	EL-97
Ball joint front axle	FA-21
Basic inspection	EC-82
Battery	EL-28
Bi-level door control linkage adjustment	HA-97
Blower motor	HA-91
Board-on lift	GI-42
Body alignment	BT-48
BPT valve	EC-284
Brake booster	BR-14
Brake control valve (Proportioning valve)	BR-8
Brake fluid change	BR-5
Brake fluid level	MA-19
Brake fluid level and line check	BR-5
Brake hydraulic line	BR-7
Brake inspection	MA-20
Brake lines and cables inspection	MA-19
Brake master cylinder.....	BR-11
Brake pedal	BR-9
Bulb specifications	EL-547
Bumper, front	BT-6
Bumper, rear	BT-9
BYPS/V - Wiring diagram	EC-452, 457

ALPHABETICAL INDEX

C

Camshaft inspection	EM-35
Camshaft position sensor (CMPS)	EC-265
CANI/V - Wiring diagram	EC-463, 469
Center bearing assembly (propeller shaft)	PD-9
Center bearing disassembly (propeller shaft)	PD-8
CHARGE - Wiring diagram	EL-36
Charging system	EL-35
Chassis and body maintenance	MA-17
CHIME - Wiring diagram	EL-150
CIGAR - Wiring diagram	EL-177
Cigarette lighter	EL-177
Circuit breaker	EL-17
CKPS - Wiring diagram	EC-260, 389
Clock	EL-178
CLOCK - Wiring diagram	EL-178
Closed loop control	EC-369
CMPS - Wiring diagram	EC-265
Coil spring (front)	FA-16
Coil spring (rear)	RA-21
Collision diagnosis	RS-59
Combination lamp, front, removal and installation	BT-6
Combination lamp, rear, removal and installation	BT-25
Combination meter	EL-119
Combination meter removal and installation - See Instrument panel	BT-14
Combination switch	EL-39
COMM - Wiring diagram	EL-273
Component Location (auto A/C)	HA-50
Compression pressure	EM-10
Compressor clutch removal and installation	HA-108
Compressor description	HA-13
Compressor mounting	HA-107
Compressor precaution	HA-6
Compressor special service tool	HA-7
Connecting rod	EM-47
Connecting rod bearing clearance	EM-51
Connecting rod bushing clearance	EM-52
Connector inspection	GI-20
Console box - See Instrument panel	BT-14
CONSULT for engine	EC-63
CONSULT for TCS	BR-60
CONSULT general information	GI-36
Control valve (A/T)	AT-222
Converter housing installation	AT-200
COOL/F - Wiring diagram	EC-485
Coolant mixture ratio	MA-9
Cooling circuit (engine)	LC-8
Cooling fan	LC-17
Cooling fan control	EC-485
Cooling fan motor	EC-496
Crankshaft	EM-49
Crankshaft position sensor (OBD)	EC-260

Crankshaft position sensor (OBD) cog chipping	EC-389
Cruise control - See ASCD	EL-233
Cylinder block	EM-45
Cylinder head	EM-29

GI

D

Daytime light system	EL-71, 81
Daytime running light - See Daytime light system	EL-71, 81
DEF - Wiring diagram	EL-180
Detonation sensor - See Knock sensor	EC-257
Diagnosis sensor unit	RS-15
Diagnostic trouble code (DTC) inspection priority chart	EC-88
Differential carrier assembly	PD-26
Differential carrier disassembly	PD-13
Differential gear oil replacement	MA-18
Dimensions	GI-41
Direct ignition system	EC-31
D/LOCK - Wiring diagram	EL-308
Door glass	BT-12
Door lock	BT-12
Door mirror	BT-47
Door trim	BT-20
Door, front	BT-12
Door, rear	BT-13
Drive belt inspection	MA-10
Drive pinion height	PD-20
Drive plate runout	EM-52
Drive shaft (rear)	RA-15
Dropping resistor (A/T)	AT-129
DTRL - Wiring diagram	EL-75, 85

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ECM input/output signal	EC-98
ECM-ABS/TCS COMM NG	EC-482
ECTS - Wiring diagram	EC-137, 154
EGR control (EGRC) - BPT valve	EC-280
EGR control (EGRC) - solenoid valve	EC-394
EGR control valve	EC-278, 412
EGR temperature sensor	EC-399
EGR/TS - Wiring diagram	EC-399
EGRC1 - Wiring diagram	EC-271, 405
Electric sun roof	EL-214
Electrical diagnoses	GI-23
Electrical ignition system	EC-20
Electrical unit	Foldout
Electrical units location	EL-512
Electronic controlled power steering system - Wiring diagram	ST-31
Engine compartment	BT-48
Engine control circuit diagram	EC-12
Engine control component parts location	EC-14
Engine control module (ECM)	EC-336

ALPHABETICAL INDEX

Engine control system diagram and chart.....	EC-11
Engine coolant temperature sensor (ECTS)	EC-137
Engine oil filter replacement	MA-14
Engine oil precautions	GI-6
Engine oil replacement	MA-14
Engine outer component parts	EM-8
Engine removal	EM-43
Engine room - See Engine compartment.....	BT-48
Engine serial number	GI-41
EPS - Wiring diagram	ST-31
EVAP canister purge control solenoid valve	EC-463, 469
EVAP canister purge control valve	EC-463, 469
EVAP canister purge volume control valve	EC-299, 426
EVAP canister vent control valve	EC-305, 434, 446
EVAP control system (small leak) diagnosis.....	EC-288, 414
EVAP control system pressure sensor.....	EC-310
EVAP control system purge flow moni- toring diagnosis.....	EC-439
EVAP vapor lines inspection	MA-16
Evaporative emission (EVAP) system.....	EC-23
Exhaust system	FE-5
Exhaust system inspection	MA-17
Exterior	BT-25

F

Fan control amp.....	HA-89
Fan switch	HA-94
Fast idle cam (FIC) inspection and adjustment	EC-31
F/FOG - Wiring diagram	EL-99
Final drive disassembly.....	PD-13
Final drive pre-inspection	PD-13
Final drive removal and installation	PD-11
Finisher, interior - See Trim	BT-18
Floor trim	BT-18
Flow charts	GI-33
Fluid temperature sensor (A/T).....	AT-87, 151
Fluids.....	MA-8
FO2H-L - Wiring diagram.....	EC-159, 166, 172, 178, 187
Fog lamp, front.....	EL-98
Fog lamp, front, removal and installation	BT-6
Foot lamp	EL-349
Forward clutch.....	AT-241
FPCM - Wiring diagram	EC-374
F/PUMP - Wiring diagram	EC-505
FRO2LH - Wiring diagram	EC-194
Front axle	FA-11
Front bumper	BT-6
Front combination lamp removal and installation	BT-6
Front disc brake	BR-17

Front door	BT-12
Front fog lamp.....	EL-98
Front fog lamp removal and installation	BT-6
Front heated oxygen sensor (HO2S).....	EC-159, 166, 172, 178, 187
Front heated oxygen sensor (HO2S) (Left bank).....	EC-159, 166, 172, 178, 187
Front heated oxygen sensor (HO2S) (Right bank)	EC-159, 166, 172, 178, 187
Front heated oxygen sensor (HO2S) monitor	EC-54
Front heated oxygen sensor heater (Left bank).....	EC-194
Front heated oxygen sensor heater (Right bank)	EC-194
Front passenger air bag	RS-10
Front seat	BT-34
Front seat belt	RS-4
Front suspension	FA-15
Front tower bar	BT-25
Front washer	EL-158
Front wiper	EL-158
Fuel cut control (at no load & high engine speed)	EC-22
Fuel filter replacement	MA-13
Fuel injection system (Left bank)	EC-235, 241
Fuel injection system (Right bank)	EC-235, 241
Fuel lid opener, electric.....	EL-206
Fuel line inspection	MA-12
Fuel precautions	GI-7
Fuel pressure check	EC-29
Fuel pressure release	EC-29
Fuel pump control module	EC-374
Fuel system	FE-4
Fuel tank vacuum relief valve	EC-24
FUELLH - Wiring diagram.....	EC-235, 241
Fuse	EL-17
Fuse block	Foldout
Fusible link	EL-17

G

Garage jack and safety stand	GI-43
Gauges	EL-117
Generic scan tool (GST)	EC-76
Glass	BT-12
Grease	MA-8
Grille	BT-25
Ground distribution.....	EL-18

H

H/AIM - Wiring diagram	EL-91
Harness connector	EL-3
Harness connector inspection	GI-20
Harness layout	EL-516
Hazard warning lamp	EL-102
Headlamp.....	EL-43, 59

ALPHABETICAL INDEX

Headlamp aiming control	EL-91		Integrated homelink transmitter	EL-476
Headlining - See Roof trim	BT-22		Interior	BT-18
Heated oxygen sensor (HO2S) (front).....	EC-159, 166, 172, 178, 187		Interior lamp	EL-349
Heated oxygen sensor (HO2S) (Front) (Left bank).....	EC-159, 166, 172, 178, 187		IVC-L - Wiring diagram.....	EC-348
Heated oxygen sensor (HO2S) (Front) (Right bank)	EC-159, 166, 172, 178, 187		IVCS (Infiniti communicator)	EL-478
Heated oxygen sensor (HO2S) heater (front)	EC-194		IVCS - Wiring diagram.....	EL-487
Heated oxygen sensor (rear).....	EC-200, 208, 216, 223		IVCS-L - Wiring diagram	EC-363
Heated oxygen sensor heater (Front)(Left bank).....	EC-194		IVIS (Infiniti vehicle immobiliser system)	EL-458
Heated seat.....	BT-35, EL-225		IVIS (Infiniti vehicle immobiliser sys- tem) precautions	GI-2
Height (Dimensions)	GI-41		IVMS (In-Vehicle Multiplexing System).....	EL-256
HFC134a (R134a) system precaution	HA-2		IVMS-System description.....	EL-256
HFC134a (R134a) system service procedure.....	HA-98		IVMS-Trouble diagnoses.....	EL-277
HFC134a (R134a) system service tools	HA-8			
HFC134a system service equipment precaution	HA-10			
High clutch.....	AT-239			
H/LAMP - Wiring diagram.....	EL-46, 63		Jacking points	GI-43
Hood.....	BT-6		Joint connector (J/C)	Foldout
Horn	EL-176		Junction box (J/B).....	Foldout
HORN - Wiring diagram.....	EL-176			
HSEAT - Wiring diagram.....	EL-225			
Hydraulic lash adjuster inspection	EM-39			
I				
IATS - Wiring diagram	EC-131			
Identification plate.....	GI-41			
Idle mixture ratio.....	EC-33			
Idle speed.....	EC-33			
IGN/SG - Wiring diagram	EC-381			
Ignition coil	EC-388			
Ignition timing	EC-33			
ILL - Wiring diagram	EL-111			
Illumination.....	EL-109, 349, 382			
I/MIRR - Wiring diagram	EL-219			
In vehicle sensor	HA-69			
INFINITI COMMUNICATOR.....	EL-478			
Infiniti communicator (IVCS)	EL-478			
INJECT - Wiring diagram	EC-497			
Injector.....	EC-502			
Injector removal and installation	EC-30			
Instrument panel	BT-14			
INT/L - Wiring diagram	EL-116			
Intake air temparature sensor	EC-131			
Intake door motor	HA-86			
Intake sensor.....	HA-71, 97			
Intake valve timing control	EC-348			
- Wiring diagram	EC-348			
Intake valve timing control position sensor (left bank).....	EC-363			
Intake valve timing control position sensor (right bank).....	EC-363			
I				
IATS - Wiring diagram	EC-131			
Identification plate.....	GI-41			
Idle mixture ratio.....	EC-33			
Idle speed.....	EC-33			
IGN/SG - Wiring diagram	EC-381			
Ignition coil	EC-388			
Ignition timing	EC-33			
ILL - Wiring diagram	EL-111			
Illumination.....	EL-109, 349, 382			
I/MIRR - Wiring diagram	EL-219			
In vehicle sensor	HA-69			
INFINITI COMMUNICATOR.....	EL-478			
Infiniti communicator (IVCS)	EL-478			
INJECT - Wiring diagram	EC-497			
Injector.....	EC-502			
Injector removal and installation	EC-30			
Instrument panel	BT-14			
INT/L - Wiring diagram	EL-116			
Intake air temparature sensor	EC-131			
Intake door motor	HA-86			
Intake sensor.....	HA-71, 97			
Intake valve timing control	EC-348			
- Wiring diagram	EC-348			
Intake valve timing control position sensor (left bank).....	EC-363			
Intake valve timing control position sensor (right bank).....	EC-363			
I				
Integrated homelink transmitter	EL-476			
Interior	BT-18			
Interior lamp	EL-349			
IVC-L - Wiring diagram.....	EC-348			
IVCS (Infiniti communicator)	EL-478			GI
IVCS - Wiring diagram.....	EL-487			
IVCS-L - Wiring diagram	EC-363			
IVIS (Infiniti vehicle immobiliser system)	EL-458			MA
IVIS (Infiniti vehicle immobiliser sys- tem) precautions	GI-2			
IVMS (In-Vehicle Multiplexing System).....	EL-256			EM
IVMS-System description.....	EL-256			
IVMS-Trouble diagnoses.....	EL-277			
J				
Jacking points	GI-43			
Joint connector (J/C)	Foldout			
Junction box (J/B).....	Foldout			
K				
Key illumination	EL-349			PD
Keyless entry system - See Multi-re- mote control system.....	EL-326			
Knock sensor (KS)	EC-257			FA
Knuckle spindle	FA-11			
KS - Wiring diagram.....	EC-257			RA
L				
LAN system circuit	HA-80			
Length (Dimensions)	GI-41			ST
License lamp	EL-92			
Lifting points	GI-44			
Line pressure solenoid valve	AT-114, 125, 129			RS
Line pressure test (A/T)	AT-61			
Liquid gasket application	EM-2			
LOAD - Wiring diagram.....	EC-514			BT
Location of electrical units	EL-512			
Lock, door	BT-12			
Low and reverse brake	AT-245			HA
Lower ball joint (rear susp.)	RA-22			
Lubricant (R134a) A/C.....	HA-101			
Lubricants.....	MA-8			EL
Lubrication circuit (engine)	LC-3			
Lubrication-locks, hinges and hood latches	MA-22			IDX
M				
MAFS - Wiring diagram.....	EC-115			
Magnet clutch	HA-108			
MAIN - Wiring diagram.....	EC-109			
Maintenance.....	MA-1			

ALPHABETICAL INDEX

Maintenance (engine)	MA-10
MAJOR OVERHAUL	AT-202
Malfunction indicator lamp (MIL)	EC-54
Map lamp	EL-349
MAP/BARO switch solenoid valve	EC-339
Mass air flow sensor (MAFS)	EC-115
Master cylinder (brake)	BR-11
Meter	EL-117
METER - Wiring diagram.....	EL-120
Middle throttle drum adjustment	FE-3
MIL & Data link connectors circuit	EC-517
MIL/DL - Wiring diagram	EC-517
MIRROR - Wiring diagram.....	EL-218
Mirror, door.....	BT-47
Mirror, out side	BT-47
Misfire	EC-252
Mode door control linkage adjustment	HA-96
Model variation	GI-39
Molding - See Exterior	BT-25
Mud guard - See Exterior	BT-25
MULTI - Wiring diagram.....	EL-330
Multi link/lower ball joint (rear)	RA-22
Multi-remote control system.....	EL-326
Multiport fuel injection (MFI) system	EC-18
Multiport fuel injection precautions.....	GI-5

N

NATS (Nissan anti-theft system)	
precautions	GI-2
NATS - Wiring diagram.....	EL-460
NVH troubleshooting (BR).....	BR-4
NVH troubleshooting (FA).....	FA-4
NVH troubleshooting (PD).....	PD-5
NVH troubleshooting (RA).....	RA-4
NVH troubleshooting (ST).....	ST-5

O

Oil change (capacity)	MA-8
Oil change (interval)	MA-6, 7
Oil pan (engine).....	EM-11
Oil pressure (engine)	LC-4
Oil pump (A/T).....	AT-218
Oil pump (engine)	LC-5
Oil pump regulator valve (engine)	LC-7
Oil seal replacement (engine).....	EM-27
Oil seal replacement (front of final drive)	PD-10
Oil seal replacement (side of final drive)	PD-10
On board diagnostic system	EC-40
Out side mirror	BT-47
Overdrive control switch.....	AT-182
Overrun clutch.....	AT-241
Overrun clutch solenoid valve.....	AT-114, 125, 146

P

P/ANT - Wiring diagram.....	EL-201
Park/Neutral position switch	EC-476
Parking brake control	BR-29
Parking drum brake	BR-25
Parking lamp	EL-92
PCV (positive crankcase ventilation)	EC-28
Personal lamp	EL-349
PGC/V - Wiring diagram	EC-299, 426
PHONE - Wiring diagram	EL-204
Pinion bearing preload diff.	PD-20
Pinion gear height diff.	PD-20
Piston assembly	EM-52
Piston pin inspection	EM-47
Piston ring inspection	EM-47
Piston to bore clearance	EM-48
PNP switch	AT-83
POWER - Wiring diagram.....	EL-8
Power antenna	EL-200
Power door lock	EL-305
Power seat	EL-220, 413
Power steering (twin orifice) trouble diagnoses	ST-33
Power steering fluid level	MA-20, ST-7
Power steering gear	ST-15
Power steering hydraulic pressure	ST-9
Power steering oil pressure switch	EC-509
Power steering oil pump	ST-27
Power steering system (twin orifice)	ST-30
Power steering system bleeding	ST-8
Power supply routing	EL-7
Power transistor	EC-388
Power transistor & ignition coil	EC-381
Power window	EL-288
PRE/SE - Wiring diagram	EC-310
Precautions (General)	GI-3
Pressure test (A/T)	AT-61
Propeller shaft	PD-6
Propeller shaft on vehicle service	PD-6
Propeller shaft vibration	PD-6
PST/SW - Wiring diagram.....	EC-509

R

Rack retainer adjustment	ST-7
Radiator	LC-13
Radio - See Audio.....	EL-188
Rear air spoiler	BT-25
Rear axle	RA-9
Rear bumper	BT-9
Rear combination lamp removal and installation	BT-25
Rear disc brake	BR-21
Rear door	BT-13
Rear heated oxygen sensor (HO2S)	EC-200, 208, 216, 223

ALPHABETICAL INDEX

Rear heated oxygen sensor (HO2S) heater.....	EC-229
Rear seat	BT-36
Rear seat belt.....	RS-5
Rear sunshade.....	EL-227
Rear suspension	RA-19
Rear tower bar	BT-25
Rear window	BT-45
Rear window defogger.....	EL-179
Refrigerant connection precaution	HA-3
Refrigerant discharging evacuating charging	HA-100
Refrigerant general precaution.....	HA-3
Refrigerant lines	HA-103
Refrigeration cycle.....	HA-12
REMOTE - Wiring diagram.....	EL-199
Removal and installation (A/T)	AT-199
Reverse clutch.....	AT-235
Revolution sensor (A/T)	AT-90
RO2H-L - Wiring diagram.....	EC-200
Road wheel size	GI-41
Roof trim	BT-22
Room lamp.....	EL-349
ROOM/L - Wiring diagram	EL-354
RRO2LH - Wiring diagram	EC-229

S

SAE J1930 terminology list	GI-47
Seal - See Exterior	BT-25
SEAT - Wiring diagram	EL-221
Seat belt inspection	MA-22, RS-7
Seat belt pre-tensioner	RS-10
Seat belt pre-tensioner disposal	RS-23
Seat belt, front.....	RS-4
Seat belt, rear.....	RS-5
Seat, front	BT-34
Seat, rear	BT-36
Secondary throttle position sensor.....	BR-34
Secondary throttle position sensor (TPS) for TCS.....	EC-356
Self-diagnostic results	EC-54
SHIFT - Wiring diagram	AT-185
Shift lock system	AT-184
Shift schedule	AT-277
Shift solenoid valve A (A/T)	AT-97, 106, 114, 125, 132
Shift solenoid valve B (A/T)	AT-97, 102, 114, 125, 136
Shock absorber (rear)	RA-21
Side air bag	RS-10
Side bearing preload diff.	PD-19
Side flange installation diff.	PD-11
Side trim	BT-18
SMJ (super multiple junction)	Foldout
Spare tire size	GI-41
Spark plug replacement.....	MA-15
Spiral cable.....	RS-17
Splice location.....	EL-535
Spot lamp	EL-349

Spring (Wheelarch) height	FA-6
SROOF - Wiring diagram	EL-215
SRS - See Supplemental Restraint System	RS-10
SRS - Wiring diagram	RS-34
SRS Trouble diagnoses	RS-29
S/SIG - Wiring diagram	EC-503
Stabilizer bar (front)	FA-20
Stabilizer bar (rear)	RA-25
Stall test (A/T)	AT-58
Standardized relay	EL-5
START - Wiring diagram.....	EL-32
Starter	EL-33
Starting system	EL-31
Steering gear and linkage inspection	MA-20
Steering linkage	ST-15
Steering switch.....	EL-41
Steering wheel and column.....	ST-11
Steering wheel play	ST-6
Steering wheel turning force	ST-9
Step lamp.....	EL-371
STEP/L - Wiring diagram	EL-374
Stop lamp	EL-96
STOP/L - Wiring diagram	EL-96
Strut (front)	FA-16
Sun roof, electric	EL-214
Sunload sensor	HA-73
Sunroof.....	BT-37
Sunshade	EL-227
Supplemental Restraint System	RS-10
Supplemental restraint system - Wiring diagram	RS-34
SW/ILL - Wiring diagram.....	EL-383
SW/V - Wiring diagram	EC-339
Symbols and abbreviations	GI-9
System readiness test (SRT) code	EC-42

T

T&FLID - Wiring diagram	EL-206
TAC (throttle actuator control) module	BR-37
TAC module removal and installation	BR-37
Tail lamp	EL-92
TAIL/L - Wiring diagram	EL-93
Tandem throttle position sensor	EC-362
T/CLOS - Wiring diagram	EL-209
TCM circuit diagram	AT-10
TCM inspection table	AT-76
TCS (traction control system)	BR-31
TCS - Wiring diagram	BR-49
TCS component parts and connector location	BR-47
TCS control unit	BR-121
TCS front wheel sensor removal and installation	BR-37
TCS rear wheel sensor removal and installation	BR-37
TCS self-diagnosis	BR-57
TCS symptom chart	BR-44
TCS system components	BR-32

ALPHABETICAL INDEX

TCS throttle valve control system	BR-34
TCS trouble diagnoses.....	BR-40
TCS wheel sensors	BR-36
Telephone.....	EL-204
Tension rod (front).....	FA-20
TFTS - Wiring diagram.....	EC-247
THEFT - Wiring diagram.....	EL-391
Theft warning system.....	EL-387
Thermostat	LC-11
Three way catalyst	EC-285
Three way catalyst function (Left bank)	EC-285
Three way catalyst function (Right bank)	EC-285
Three way catalyst precautions.....	GI-5
Throttle actuator control module - See TAC module	BR-37
Throttle drum adjustment.....	FE-3
Throttle Motor	BR-34
Throttle position sensor (TPS)	EC-142
Throttle position sensor adjustment	EC-82
Throttle position switch	AT-143, 183
Throttle valve control system for TCS.....	BR-34
Tie-rod	ST-19
Tie-rod ball joints	ST-19
Tightening torque of standard bolts.....	GI-46
Timing chain.....	EM-13
Tire rotation	MA-19
Tire size	GI-41
Tooth contact diff.	PD-25
Torque converter installation	AT-200
Torque convertor clutch solenoid valve	AT-114, 118, 125
Tow truck towing	GI-44
Towing point.....	GI-45
TP/SW - Wiring diagram	EC-327
TPS - Wiring diagram.....	EC-142
Traction control system - See TCS	BR-31
Traction control system - Wiring diagram.....	BR-49
Traction control system circuit (engine)	EC-371
Transmission serial number	GI-41
TRANSMT - Wiring diagram	EL-476
Transverse link (front)	FA-21
Tread-FR&RR (Dimensions).....	GI-41
Trim	BT-18
Triple pressure switch	HA-94
Trouble diagnoses	GI-33
Trunk closure	EL-208
Trunk lid	BT-9
Trunk lid opener - See Trunk lid	BT-9
Trunk lid opener, electric.....	EL-206
Trunk lid trim	BT-24
Trunk room lamp	EL-116
Trunk room trim.....	BT-24
Turbine revolution sensor.....	AT-157
TURN - Wiring diagram	EL-105
Turn signal lamp	EL-102
Two trip detection logic	EC-40
Two-pole lift	GI-44

U

Under body	BT-50
------------------	-------

V

Vacuum cut valve	EC-461
Vacuum cut valve bypass valve.....	EC-452, 457
Vacuum hose (brake system).....	BR-16
Vacuum hose drawing (Engine control)	EC-16
Valve guide.....	EM-36
Valve seat.....	EM-38
Valve spring.....	EM-39
Vanity mirror lamp	EL-116
Vehicle identification number.....	GI-40
Vehicle recovery (freeing a stuck vehicle).....	GI-45
Vehicle speed sensor (VSS)	EC-316
VENT/V - Wiring diagram	EC-305, 434, 446
Ventilation air filter	HA-110
Ventilator door control rod adjustment	HA-97
Viscosity number (SAE)	MA-8
VSS - Wiring diagram	EC-316

W

WARN - Wiring diagram	EL-135
Warning chime	EL-148
Warning lamps	EL-131
Washer, front	EL-158
Water pump	LC-9
Weatherstrip - See Exterior	BT-25
Wheel alignment (front)	FA-8
Wheel alignment (rear).....	RA-7
Wheel balance	MA-18
Wheel bearing (front axle)	FA-7
Wheel bearing (rear)	RA-7
Wheel hub (front)	FA-11
Wheel hub (rear)	RA-9
Wheel sensors (ABS)	BR-36
Wheel sensors (TCS)	BR-36
Wheel size	GI-41
Wheelarch height	FA-6
Wheelbase (Dimensions)	GI-41
Wide open & closed throttle position switch	EC-142
Width (Dimensions)	GI-41
WINDOW - Wiring diagram	EL-291
Window, door	BT-12
Window, rear	BT-45
Windshield.....	BT-45
WIPER - Wiring diagram	EL-161
Wiper, front.....	EL-158
Wiring Diagram (Cell code) list.....	EL-548
Wiring diagrams.....	GI-10