

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

A

AAC/V - Wiring diagram.....EC-340
ABS (anti-lock brake system).....BR-32
ABS - Wiring diagramBR-51
ABS input/output signal inspectionBR-123
ABS sensor rotorFA-15
ABS/TCS C/U signalEC-499
Absolute pressure sensorEC-132
A/C - Wiring diagram.....HA-72
A/C air flow.....HA-27
A/C component layout.....HA-20
A/C compressor clutch removal and
installation.....HA-136
A/C compressor descriptionHA-17
A/C compressor mounting.....HA-135
A/C compressor precaution.....HA-8
A/C compressor special service tool.....HA-9
A/C control linkage adjustment (auto
A/C).....HA-123
A/C control operation (auto A/C).....HA-24
A/C diagnostic work flow (auto A/C)HA-29
A/C HFC134a (R134a) system
precautionHA-3
A/C HFC134a (R134a) system service
procedure.....HA-125
A/C HFC134a (R134a) system service
toolsHA-10
A/C HFC134a system service equip-
ment precaution.....HA-14
A/C lubricant (R134a).....HA-128
A/C operational check.....HA-30
A/C performance test diagnoses.....HA-63
A/C relay.....HA-121
A/C self-diagnoses (auto A/C).....HA-37
A/C service data specification.....HA-140
A/C symptom chart (auto A/C)HA-36
A/C trouble diagnoses (auto A/C)HA-29
A/C, A - Wiring diagramHA-78
Accelerator control systemFE-3
Accelerator wire adjustmentFE-4
ACTIVE - Wiring diagramFA-34
Active damper suspension (front) parts
locationFA-23
Active damper suspension (front)
trouble diagnoses.....FA-28
Active damper suspension system -
Wiring diagramFA-34
Air bagRS-11
Air bag disposal.....RS-24
Air bag precautionsGI-2
Air bleeding for brake systemBR-7
Air cleaner filter replacement.....MA-13
Air conditioner - Wiring diagram.....HA-72
Air conditioner cut controlEC-24
Air flow meter - See Mass air flow
sensorEC-124
Air mix door control linkage adjustment.....HA-123
Alternator.....EL-57

Ambient sensorHA-92
Angular tightening application.....EM-2
Antenna - See Power antennaEL-228
Anti-lock brake system - See ABSBR-32
Anti-lock brake system - Wiring
diagramBR-51
AP/SEN - Wiring diagramEC-132
ASCD (automatic speed control device)EL-262
ASCD - Wiring diagramEL-266
A/T - Wiring diagramAT-12
A/T fluid temperature sensorAT-88, 150
A/T IND - Wiring diagramEL-170
AT indicator lampEL-169
A/T self-diagnoses.....AT-42
A/T shift lock systemAT-183
A/T shift lock system - Wiring diagramAT-184
A/T trouble diagnosesAT-54
AT/C - Wiring diagram.....EC-352, 500
AudioEL-216
AUDIO - Wiring diagram.....EL-218
Audio and A/C control removal and
installation - See Instrument panelBT-22
AUT/DP - Wiring diagramEL-447
Auto air conditioner - Wiring diagramHA-72, 78
Auto anti-dazzling inside mirrorEL-248
Autolamp.....EL-62, 79
Automatic drive positionerEL-441
Automatic speed control system - See
ASCDEL-262
Automatic transmission fluid
replacement.....MA-18
Automatic transmission numberGI-40

B

Back-up lampEL-116
BACK/L - Wiring diagramEL-116
Ball joint front axleFA-22
Basic inspectionEC-91
BatteryEL-35
Bi-level door control linkage adjustment.....HA-124
Blower motor.....HA-117
Board-on liftGI-41
Body alignmentBT-56
BPT valveEC-294
Brake booster.....BR-15
Brake control valve (Proportioning
valve)BR-9
Brake fluid changeBR-6
Brake fluid levelMA-19
Brake fluid level and line checkBR-6
Brake hydraulic line.....BR-8
Brake inspectionMA-20
Brake lines and cables inspection.....MA-20
Brake master cylinderBR-12
Brake pedalBR-10
Bulb specificationsEL-628
Bumper, frontBT-13
Bumper, rearBT-16

ALPHABETICAL INDEX

BYPSS/V - Wiring diagramEC-470, 475

C

Camshaft inspectionEM-35
 Camshaft position sensor (CMPS).....EC-275
 CANI/V - Wiring diagramEC-481, 487
 Center bearing assembly (propeller shaft).....PD-9
 Center bearing disassembly (propeller shaft).....PD-8
 CHARGE - Wiring diagramEL-50
 Charging systemEL-49
 Chassis and body maintenanceMA-17
 CHIME - Wiring diagram.....EL-175
 CIGAR - Wiring diagramEL-202
 Cigarette lighter.....EL-202
 Circuit breaker.....EL-22
 CKPS - Wiring diagram.....EC-270, 407
 ClockEL-203
 CLOCK - Wiring diagramEL-203
 Closed loop controlEC-388
 CMPS - Wiring diagramEC-275
 Coil spring (front)FA-17
 Coil spring (rear)RA-21
 Collision diagnosis.....RS-60
 Combination lamp, rear, removal and installationBT-33
 Combination meter.....EL-144
 Combination meter removal and installation - See Instrument panel.....BT-22
 Combination switch.....EL-58
 COMM - Wiring diagramEL-302
 Component Location (auto A/C).....HA-69
 Compression pressure.....EM-10
 Compressor clutch removal and installationHA-136
 Compressor descriptionHA-17
 Compressor mountingHA-135
 Compressor precautionHA-8
 Compressor special service toolHA-9
 Connecting rod.....EM-47
 Connecting rod bearing clearance.....EM-51
 Connecting rod bushing clearanceEM-52
 Connector inspection.....GI-20
 Console box - See Instrument panel.....BT-22
 CONSULT for engineEC-74
 CONSULT for TCSBR-62
 CONSULT-II general information.....GI-36
 Control valve (A/T)AT-221
 Converter housing installation.....AT-199
 COOL/F - Wiring diagramEC-503
 Coolant mixture ratioMA-9
 Cooling circuit (engine).....LC-8
 Cooling fan.....LC-17
 Cooling fan controlEC-503
 Cooling fan motorEC-514
 Crankshaft.....EM-49
 Crankshaft position sensor (OBD)EC-270

Crankshaft position sensor (OBD) cog chippingEC-407
 Cruise control - See ASCD.....EL-262
 Cylinder blockEM-45
 Cylinder head.....EM-29

D

Daytime light systemEL-90, 100
 Daytime running light - See Daytime light systemEL-90, 100
 DEF - Wiring diagramEL-206
 Detonation sensor - See Knock sensorEC-267
 Diagnosis sensor unit.....RS-16
 Diagnostic trouble code (DTC) inspection priority chart.....EC-97
 Differential carrier assembly.....PD-27
 Differential carrier disassemblyPD-14
 Differential gear oil replacement.....MA-18
 DimensionsGI-40
 Direct ignition systemEC-40
 D/LOCK - Wiring diagramEL-335
 Door glass.....BT-19
 Door lock.....BT-19
 Door mirror.....BT-55
 Door trimBT-28
 Door, frontBT-19
 Door, rearBT-21
 Drive belt inspectionMA-10
 Drive pinion heightPD-21
 Drive plate runoutEM-52
 Drive shaft (rear)RA-15
 Dropping resistor (A/T).....AT-128
 DTRL - Wiring diagram.....EL-94, 104

E

ECM input/output signalEC-107
 ECM-ABS/TCS COMM NGEC-500
 ECTS - Wiring diagramEC-145, 161
 EGR control (EGRC) - BPT valve.....EC-290
 EGR control (EGRC) - solenoid valveEC-412
 EGR control valveEC-288, 430
 EGR temperature sensorEC-417
 EGR/TS - Wiring diagramEC-417
 EGRC1 - Wiring diagramEC-281, 423
 Electric sun roofEL-242
 Electrical diagnoses.....GI-23
 Electrical ignition system.....EC-23
 Electrical unitFoldout
 Electrical units locationEL-590
 Electronic controlled power steering system - Wiring diagramST-31
 Engine compartment.....BT-56
 Engine control circuit diagram.....EC-14
 Engine control component parts locationEC-17
 Engine control module (ECM).....EC-355

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

Engine control system diagram and chart.....	EC-16
Engine coolant temperature sensor (ECTS).....	EC-145
Engine oil filter replacement	MA-14
Engine oil precautions	GI-6
Engine oil replacement	MA-14
Engine outer component parts	EM-8
Engine removal.....	EM-43
Engine room - See Engine compartment.....	BT-56
Engine serial number	GI-40
EPS - Wiring diagram.....	ST-31
EVAP canister purge control solenoid valve	EC-481, 487
EVAP canister purge control valve	EC-481, 487
EVAP canister purge volume control valve	EC-309, 444
EVAP canister vent control valve	EC-315, 452, 464
EVAP control system (small leak) diagnosis.....	EC-298, 432
EVAP control system pressure sensor.....	EC-320
EVAP control system purge flow monitoring diagnosis.....	EC-457
EVAP vapor lines inspection.....	MA-16
Evaporative emission (EVAP) system.....	EC-26
Exhaust system	FE-7
Exhaust system inspection	MA-17
Exterior.....	BT-33

F

Fan control amp.....	HA-115
Fast idle cam (FIC) inspection and adjustment	EC-40
F/FOG - Wiring diagram.....	EL-118
Final drive disassembly.....	PD-14
Final drive pre-inspection	PD-14
Final drive removal and installation	PD-12
Finisher, interior - See Trim	BT-26
Floor trim.....	BT-26
Flow charts	GI-33
Fluid temperature sensor (A/T).....	AT-88, 150
Fluids.....	MA-8
FO2H-L - Wiring diagram	EC-166, 174, 180, 187, 196
Fog lamp, front.....	EL-117
Fog lamp, front, removal and installation	BT-13
Foot lamp.....	EL-377
Forward clutch.....	AT-240
FPCM - Wiring diagram	EC-393
F/PUMP - Wiring diagram	EC-523
FRO2LH - Wiring diagram	EC-204
Front axle	FA-12
Front bumper	BT-13
Front disc brake	BR-18
Front door	BT-19
Front fog lamp.....	EL-117

Front fog lamp removal and installation	BT-13
Front heated oxygen sensor (HO2S).....	EC-166, 174, 180, 187, 196
Front heated oxygen sensor (HO2S) (Left bank).....	EC-166, 174, 180, 187, 196
Front heated oxygen sensor (HO2S) (Right bank)	EC-166, 174, 180, 187, 196
Front heated oxygen sensor (HO2S) monitor	EC-65
Front heated oxygen sensor heater (Left bank).....	EC-204
Front heated oxygen sensor heater (Right bank)	EC-204
Front passenger air bag	RS-11
Front seat.....	BT-42
Front seat belt	RS-4
Front suspension	FA-16
Front tower bar	BT-33
Front washer	EL-183
Front wiper	EL-183
Fuel cut control (at no load & high engine speed).....	EC-25
Fuel filter replacement	MA-13
Fuel gauge	EL-142
Fuel injection system (Left bank).....	EC-245, 251
Fuel injection system (Right bank)	EC-245, 251
Fuel lid opener, electric.....	EL-234
Fuel line inspection	MA-12
Fuel precautions	GI-7
Fuel pressure check.....	EC-37
Fuel pressure release	EC-37
Fuel pump control module	EC-393
Fuel system	FE-5
Fuel tank vacuum relief valve	EC-27
FUELLH - Wiring diagram.....	EC-245, 251
Fuse	EL-22
Fuse block	Foldout
Fusible link	EL-22

G

Garage jack and safety stand	GI-42
Gauges.....	EL-142
Generic scan tool (GST)	EC-85
Glass	BT-19
Grease	MA-8
Grille - See Exterior	BT-33
Ground distribution.....	EL-23

H

H/AIM - Wiring diagram.....	EL-110
Harness connector.....	EL-8
Harness connector inspection	GI-20
Harness layout	EL-594
Hazard warning lamp.....	EL-121
Headlamp.....	EL-62, 78
Headlamp aiming control	EL-110

ALPHABETICAL INDEX

Headlining - See Roof trimBT-30
 Heated oxygen sensor (HO2S)
 (front).....EC-166, 174, 180, 187, 196
 Heated oxygen sensor (HO2S) (Front)
 (Left bank).....EC-166, 174, 180, 187, 196
 Heated oxygen sensor (HO2S) (Front)
 (Right bank)EC-166, 174, 180, 187, 196
 Heated oxygen sensor (HO2S) heater
 (front)EC-204
 Heated oxygen sensor
 (rear).....EC-210, 218, 226, 233
 Heated oxygen sensor heater
 (Front)(Left bank).....EC-204
 Heated seat.....BT-43, EL-254
 Height (Dimensions).....GI-40
 HFC134a (R134a) system precautionHA-3
 HFC134a (R134a) system service
 procedure.....HA-125
 HFC134a (R134a) system service toolsHA-10
 HFC134a system service equipment
 precautionHA-14
 High clutch.....AT-238
 H/LAMP - Wiring diagram.....EL-65, 82
 Hood.....BT-13
 HornEL-201
 HORN - Wiring diagram.....EL-201
 HSEAT - Wiring diagram.....EL-254
 Hydraulic lash adjuster inspectionEM-39

I

IATS - Wiring diagramEC-140
 Identification plate.....GI-40
 Idle mixture ratio.....EC-42
 Idle speed.....EC-42
 IGN/SG - Wiring diagramEC-399
 Ignition coilEC-406
 Ignition timingEC-42
 ILL - Wiring diagramEL-131
 Illumination.....EL-128, 377, 410
 I/MIRR - Wiring diagramEL-248
 In vehicle sensorHA-95
 INFINITI COMMUNICATOR.....EL-506
 Infiniti communicator (IVCS)EL-506
 INJECT - Wiring diagramEC-515
 Injector.....EC-520
 Injector removal and installationEC-38
 Instrument panelBT-22
 INT/L - Wiring diagram.....EL-141
 Intake air temperature sensorEC-140
 Intake door motorHA-112
 Intake sensor.....HA-97, 124
 Intake valve timing controlEC-367
 Intake valve timing control (right bank)
 - Wiring diagramEC-367
 Intake valve timing control position
 sensor (left bank).....EC-382
 Intake valve timing control position
 sensor (right bank).....EC-382
 Integrated homelink transmitterEL-504

InteriorBT-26
 Interior lampEL-377
 IVC-L - Wiring diagram.....EC-367
 IVCS (Infiniti communicator)EL-506
 IVCS - Wiring diagramEL-515
 IVCS-L - Wiring diagramEC-382
 IVIS (Infiniti vehicle immobilizer
 system).....EL-486
 IVIS (Infiniti vehicle immobilizer sys-
 tem) precautionsGI-2
 IVMS (In-Vehicle Multiplexing System).....EL-285
 IVMS-System description.....EL-285
 IVMS-Trouble diagnoses.....EL-306

GI
MA
EM
LC

J

Jacking pointsGI-42
 Joint connector (J/C)Foldout
 Junction box (J/B).....Foldout

EC
FE

K

Key illuminationEL-377
 Keyless entry system - See Multi-re-
 mote control systemEL-353
 Knock sensor (KS)EC-267
 Knuckle spindleFA-12
 KS - Wiring diagramEC-267

PD
FA
RA

L

LAN system circuitHA-106
 Length (Dimensions)GI-40
 License lampEL-111
 Lifting pointsGI-43
 Line pressure solenoid valveAT-113, 124, 128
 Line pressure test (A/T)AT-62
 Liquid gasket applicationEM-2
 LOAD - Wiring diagramEC-532
 Location of electrical unitsEL-590
 Lock, doorBT-19
 Low and reverse brakeAT-244
 Lower ball joint (rear susp.)RA-22
 Lubricant (R134a) A/C.....HA-128
 Lubricants.....MA-8
 Lubrication circuit (engine)LC-3
 Lubrication-locks, hinges and hood
 latchesMA-22

BR
ST
RS
BT
HA
EL

M

MAFS - Wiring diagram.....EC-124
 Magnet clutchHA-136
 MAIN - Wiring diagramEC-118
 Maintenance (engine)MA-10

IDX

ALPHABETICAL INDEX

MAJOR OVERHALL.....	AT-201
Malfunction indicator lamp (MIL).....	EC-65
Map lamp.....	EL-377
MAP/BARO switch solenoid valve.....	EC-358
Mass air flow sensor (MAFS).....	EC-124
Master cylinder (brake).....	BR-12
Meter.....	EL-142
METER - Wiring diagram.....	EL-145
Middle throttle drum adjustment.....	FE-4
MIL & Data link connectors circuit.....	EC-535
MIL/DL - Wiring diagram.....	EC-535
MIRROR - Wiring diagram.....	EL-247
Mirror, door.....	BT-55
Mirror, out side.....	BT-55
Misfire.....	EC-262
Mode door control linkage adjustment.....	HA-123
Model variation.....	GI-38
Molding - See Exterior.....	BT-33
Mud guard - See Exterior.....	BT-33
MULTI - Wiring diagram.....	EL-357
Multi link/lower ball joint (rear).....	RA-22
Multi-remote control system.....	EL-353
Multiplex communication.....	HA-89
Multiport fuel injection (MFI) system.....	EC-21
Multiport fuel injection precautions.....	GI-5

N

NATS (Nissan anti-theft system)	
precautions.....	GI-2
NATS - Wiring diagram.....	EL-488
NAVI - wiring diagram.....	EL-549
Navigation System.....	EL-540
NVH troubleshooting (BR).....	BR-5
NVH troubleshooting (FA).....	FA-5
NVH troubleshooting (PD).....	PD-5
NVH troubleshooting (RA).....	RA-4
NVH troubleshooting (ST).....	ST-5

O

Oil change (capacity).....	MA-8
Oil change (interval).....	MA-6, 7
Oil pan (engine).....	EM-11
Oil pressure (engine).....	LC-4
Oil pump (A/T).....	AT-217
Oil pump (engine).....	LC-5
Oil pump regulator valve (engine).....	LC-7
Oil seal replacement (engine).....	EM-27
Oil seal replacement (front of final drive).....	PD-11
Oil seal replacement (side of final drive).....	PD-11
On board diagnostic system.....	EC-49
ORVR (On-board Refueling Vapor Recovery).....	EC-31
Out side mirror.....	BT-55
Overdrive control switch.....	AT-181

Overrun clutch.....	AT-240
Overrun clutch solenoid valve.....	AT-145

P

P/ANT - Wiring diagram.....	EL-229
Park/Neutral position switch.....	EC-494
Park/neutral position switch (A/T).....	AT-84
Parking brake control.....	BR-30
Parking drum brake.....	BR-26
Parking lamp.....	EL-111
PCV (positive crankcase ventilation).....	EC-36
Personal lamp.....	EL-377
PGC/V - Wiring diagram.....	EC-309, 444
PHONE - Wiring diagram.....	EL-232
Pinion bearing preload diff.....	PD-21
Pinion gear height diff.....	PD-21
Piston assembly.....	EM-52
Piston pin inspection.....	EM-47
Piston ring inspection.....	EM-47
Piston to bore clearance.....	EM-48
POWER - Wiring diagram.....	EL-13
Power antenna.....	EL-228
Power door lock.....	EL-332
Power seat.....	EL-249, 441
Power steering (twin orifice) trouble diagnoses.....	ST-33
Power steering fluid level.....	MA-21, ST-7
Power steering gear.....	ST-15
Power steering hydraulic pressure.....	ST-9
Power steering oil pressure switch.....	EC-527
Power steering oil pump.....	ST-27
Power steering system (twin orifice).....	ST-30
Power steering system bleeding.....	ST-8
Power supply routing.....	EL-12
Power transistor.....	EC-406
Power transistor & ignition coil.....	EC-399
Power window.....	EL-316
PRE/SE - Wiring diagram.....	EC-320
Precautions for Leak detection dye.....	HA-4
Precautions (General).....	GI-3
Pressure test (A/T).....	AT-62
Propeller shaft.....	PD-6
Propeller shaft on vehicle service.....	PD-6
Propeller shaft vibration.....	PD-6
PST/SW - Wiring diagram.....	EC-527

R

Rack retainer adjustment.....	ST-7
Radiator.....	LC-13
Radio - See Audio.....	EL-216
Rear axle.....	RA-9
Rear bumper.....	BT-16
Rear combination lamp removal and installation.....	BT-33
Rear disc brake.....	BR-22
Rear door.....	BT-21

ALPHABETICAL INDEX

Rear heated oxygen sensor (HO2S).....	EC-210, 218, 226, 233
Rear heated oxygen sensor (HO2S) heater.....	EC-239
Rear seat	BT-44
Rear seat belt.....	RS-5
Rear sunshade.....	EL-256
Rear suspension	RA-19
Rear tower bar	BT-33
Rear window	BT-53
Rear window defogger.....	EL-204
Refrigerant connection precaution	HA-5
Refrigerant discharging evacuating charging.....	HA-127
Refrigerant general precaution.....	HA-4
Refrigerant lines	HA-130
Refrigeration cycle.....	HA-16
REMOTE - Wiring diagram.....	EL-227
Removal and installation (A/T).....	AT-198
Reverse clutch.....	AT-234
Revolution sensor (A/T)	AT-91
RO2H-L - Wiring diagram.....	EC-210
Road wheel size	GI-40
Roof trim	BT-30
Room lamp.....	EL-377
ROOM/L - Wiring diagram	EL-382
RRO2LH - Wiring diagram	EC-239

S

SAE J1930 terminology list	GI-46
Seal - See Exterior	BT-33
SEAT - Wiring diagram	EL-250
Seat belt inspection	MA-22, RS-7
Seat belt pre-tensioner	RS-11
Seat belt pre-tensioner disposal	RS-24
Seat belt, front.....	RS-4
Seat belt, rear.....	RS-5
Seat, front	BT-42
Seat, rear	BT-44
Secondary throttle position sensor.....	BR-35
Secondary throttle position sensor (TPS) for TCS.....	EC-375
Self-diagnostic results	EC-65
SHADE - Wiring diagram.....	EL-258
SHIFT - Wiring diagram	AT-184
Shift lock system	AT-183
Shift schedule.....	AT-276
Shift solenoid valve A (A/T)	AT-98, 107, 113, 131
Shift solenoid valve B (A/T)	AT-98, 103, 113, 135
Shock absorber (rear)	RA-21
Side air bag	RS-11
Side bearing preload diff.	PD-20
Side flange installation diff.	PD-12
Side trim.....	BT-26
SMJ (super multiple junction).....	Foldout
Spare tire size	GI-40
Spark plug replacement.....	MA-15
Speedometer.....	EL-142
Spiral cable.....	RS-18

Splice location.....	EL-615
Spot lamp.....	EL-377
Spring (Wheelarch) height.....	FA-7
SROOF - Wiring diagram	EL-243
SRS - See Supplemental Restraint System	RS-11
SRS - Wiring diagram	RS-35
SRS Trouble diagnoses	RS-30
S/SIG - Wiring diagram	EC-521
Stabilizer bar (front)	FA-21
Stabilizer bar (rear)	RA-25
Stall test (A/T)	AT-59
Standardized relay	EL-10
START - Wiring diagram.....	EL-42
Starter	EL-47
Starting system	EL-41
Steering gear and linkage inspection	MA-21
Steering linkage	ST-15
Steering switch.....	EL-60
Steering wheel and column.....	ST-11
Steering wheel play	ST-6
Steering wheel turning force.....	ST-9
Step lamp.....	EL-399
STEP/L - Wiring diagram.....	EL-402
Stop lamp	EL-115
STOP/L - Wiring diagram	EL-115
Strut (front).....	FA-17
Sun roof, electric.....	EL-242
Sunload sensor	HA-99
Sunroof.....	BT-45
Sunshade	EL-256
Supplemental Restraint System	RS-11
Supplemental restraint system - Wiring diagram.....	RS-35
SW/ILL - Wiring diagram.....	EL-411
SW/V - Wiring diagram	EC-358
Symbols and abbreviations	GI-9
System readiness test (SRT) code	EC-51

T

T&FLID - Wiring diagram.....	EL-234
TAC (throttle actuator control) module.....	BR-38
TAC module removal and installation	BR-38
Tachometer	EL-142
Tail lamp	EL-111
TAIL/L - Wiring diagram	EL-112
Tandem throttle position sensor	EC-381
T/CLOS - Wiring diagram	EL-237
TCM circuit diagram	AT-11
TCM inspection table	AT-77
TCS (traction control system)	BR-32
TCS - Wiring diagram	BR-51
TCS component parts and connector location	BR-49
TCS control unit	BR-123
TCS front wheel sensor removal and installation.....	BR-38
TCS rear wheel sensor removal and installation.....	BR-38

GI
 MA
 EM
 LG
 EC
 FE
 AT
 PD
 FA
 RA
 BR
 ST
 RS

IDX

ALPHABETICAL INDEX

TCS self-diagnosisBR-59
 TCS symptom chartBR-45
 TCS system componentsBR-33
 TCS throttle valve control systemBR-35
 TCS trouble diagnosesBR-41
 TCS wheel sensorsBR-37
 TelephoneEL-232
 Tension rod (front)FA-21
 TFTS - Wiring diagramEC-257
 THEFT - Wiring diagramEL-419
 Theft warning systemEL-415
 ThermostatLC-11
 Three way catalystEC-295
 Three way catalyst function (Left bank)EC-295
 Three way catalyst function (Right bank)EC-295
 Three way catalyst precautionsGI-5
 Throttle actuator control module - See TAC moduleBR-38
 Throttle drum adjustmentFE-4
 Throttle MotorBR-35
 Throttle position sensor (TPS)EC-150
 Throttle position sensor adjustmentEC-91
 Throttle position switchAT-142, 182
 Throttle valve control system for TCSBR-35
 Tie-rodST-19
 Tie-rod ball jointsST-19
 Tightening torque of standard boltsGI-45
 Timing chainEM-13
 Tire rotationMA-19
 Tire sizeGI-40
 Tooth contact diff.PD-26
 Torque converter installationAT-199
 Torque convertor clutch solenoid valveAT-117, 124
 Tow truck towingGI-43
 Towing pointGI-44
 TP/SW - Wiring diagramEC-346
 TPS - Wiring diagramEC-150
 Traction control system - See TCSBR-32
 Traction control system - Wiring diagramBR-51
 Traction control system circuit (engine)EC-390
 Transmission serial numberGI-40
 TRANSMT - Wiring diagramEL-504
 Transverse link (front)FA-22
 Tread-FR&RR (Dimensions)GI-40
 TrimBT-26
 Triple pressure switchHA-121
 Trouble diagnosesGI-33
 Trunk closureEL-236
 Trunk lidBT-16
 Trunk lid opener - See Trunk lidBT-16
 Trunk lid opener, electricEL-234
 Trunk lid trimBT-32
 Trunk room lampEL-141
 Trunk room trimBT-32
 Turbine revolution sensorAT-156
 TURN - Wiring diagramEL-124
 Turn signal lampEL-121
 Two trip detection logicEC-49

Two-pole liftGI-43

U

Under bodyBT-58

V

Vacuum cut valveEC-479
 Vacuum cut valve bypass valveEC-470, 475
 Vacuum hose (brake system)BR-17
 Vacuum hose drawing (Engine control)EC-19
 Valve guideEM-36
 Valve seatEM-38
 Valve springEM-39
 Vanity mirror lampEL-141
 Vehicle identification numberGI-39
 Vehicle recovery (freeing a stuck vehicle)GI-44
 Vehicle speed sensor (VSS)EC-335
 VENT/V - Wiring diagramEC-315, 452, 464
 Ventilation air filterHA-139
 Ventilator door control rod adjustmentHA-124
 Viscosity number (SAE)MA-8
 VSS - Wiring diagramEC-335

W

WARN - Wiring diagramEL-160
 Warning chimeEL-173
 Warning lampsEL-156
 Washer, frontEL-183
 Water pumpLC-9
 Weatherstrip - See ExteriorBT-33
 Wheel alignment (front)FA-9
 Wheel alignment (rear)RA-7
 Wheel bearing (front axle)FA-8
 Wheel bearing (rear)RA-7
 Wheel hub (front)FA-12
 Wheel hub (rear)RA-9
 Wheel sensors (ABS)BR-37
 Wheel sensors (TCS)BR-37
 Wheel sizeGI-40
 Wheelarch heightFA-7
 Wheelbase (Dimensions)GI-40
 Wide open & closed throttle position switchEC-150
 Width (Dimensions)GI-40
 WINDOW - Wiring diagramEL-319
 Window, doorBT-19
 Window, rearBT-53
 WindshieldBT-53
 WIPER - Wiring diagramEL-186
 Wiper, frontEL-183
 Wiring Diagram (Cell code) listEL-629
 Wiring diagramsGI-10