

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

A

A/C air flow	ATC-30	A/T Wiring diagram AT - STSIG	AT-83
A/C component layout	ATC-21	A/T Wiring diagram AT - TCCSIG	AT-98
A/C compressor clutch removal and installation	ATC-136	A/T Wiring diagram AT - TCV	AT-95
A/C compressor precaution	ATC-8	A/T Wiring diagram AT - TRSA/T	AT-124
A/C compressor special service tool	ATC-13	A/T Wiring diagram AT - VSS A/T	AT-90
A/C control operation (auto A/C)	ATC-28	Absolute pressure sensor	EC-163
A/C diagnostic work flow (auto A/C)	ATC-32	Accelerator control system	ACC-2
A/C evaporator	ATC-144	Accelerator pedal position (APP) sensor	EC-186
A/C HFC134a (R134a) system precaution	ATC-4	Accelerator wire adjustment	ACC-3
A/C HFC134a (R134a) system service procedure	ATC-132	Active damper suspension system	SCS-2
A/C HFC134a (R134a) system service tools ...	ATC-13	Active damper suspension system - trouble diagnoses	SCS-2
A/C HFC134a system service equipment precaution ...	ATC-8	Active damper suspension system - Wiring diagram	SCS-4
A/C lubricant (R134a)	ATC-22	Aiming adjustment	LT-30
A/C operational check	ATC-57	Air bag	SRS-3
A/C performance chart	ATC-90	Air bag disposal	SRS-47
A/C performance test diagnoses	ATC-88	Air bleeding for brake system	BR-9
A/C rera y	ATC-85	Air cleaner and air duct	EM-15
A/C self-diagnoses (auto A/C)	ATC-48	Air cleaner filter replacement	MA-15
A/C system description (auto A/C)	ATC-25	Air conditioner cut control	EC-30
A/C trouble diagnoses (auto A/C)	ATC-32	Air flow meter - See Mass air flow sensor	EC-154
A/C, A - Wiring diagram	ATC-36	Air mix door control linkage adjustment	ATC-71
A/T diagnosis communication line	EC-554	Air mix. door motor	ATC-69 , ATC-128
A/T fluid checking	AT-12 , AT-50	Alternator	SC-9
A/T fluid replacement	AT-12	Ambient sensor	ATC-102 , ATC-115
A/T fluid temperature sensor	AT-118 , AT-120	Angular tightening application	EM-3
A/T IND - Wiring diagram	DI-48	Antenna	AV-31
A/T indicator	DI-48	AP/SEN - Wiring diagram	EC-164
A/T self-diagnoses	AT-68 , AT-76	APPS - Wiring diagram	EC-188
A/T shift lock system	AT-210	ASCD - Wiring diagram	ACS-8
A/T shift lock system - Wiring diagram	AT-211	ASCD (automatic speed control device)	ACS-4
A/T trouble diagnoses	AT-40	ASCD vacuum hose	MA-26
A/T Wiring diagram AT - CAN	AT-80	Ashtray illumination(Front)	LT-137
A/T Wiring diagram AT - D/C	AT-151	Ashtray illumination(Rear)	LT-137
A/T Wiring diagram AT - D/CF	AT-154	Audio	AV-4
A/T Wiring diagram AT - E/BRE	AT-136	AUDIO - Wiring diagram	AV-6
A/T Wiring diagram AT - FPSW1	AT-173	Audio and A/C control removal and installation - See	
A/T Wiring diagram AT - FPSW3	AT-176	Instrument panel	IP-11
A/T Wiring diagram AT - FPSW5	AT-179	AUT/DP - Wiring diagram	SE-17
A/T Wiring diagram AT - FPSW6	AT-182	Auto air conditioner - Wiring diagram	ATC-36
A/T Wiring diagram AT - FR/B	AT-145	Auto anti-dazzling inside mirror	GW-51 , GW-52
A/T Wiring diagram AT - FR/BF	AT-148	Automatic amplifier	ATC-45 , ATC-59
A/T Wiring diagram AT - FTS	AT-119	Automatic drive positioner	SE-12
A/T Wiring diagram AT - HLR/C	AT-157	Automatic transmission fluid replacement	MA-19
A/T Wiring diagram AT - HLR/CF	AT-160	AV and NAVI control unit	DI-68 , AV-35
A/T Wiring diagram AT - I/C	AT-139	AV communication line	DI-103 , DI-112
A/T Wiring diagram AT - I/CF	AT-142	AV control unit	DI-68
A/T Wiring diagram AT - I/LOCK	AT-130	Axle	MA-24
A/T Wiring diagram AT - LC/B	AT-163	Axle housing (rear)	RAX-7
A/T Wiring diagram AT - LC/BF	AT-166		
A/T Wiring diagram AT - LPSV	AT-102		
A/T Wiring diagram AT - MMSW	AT-169		
A/T Wiring diagram AT - NONDTC	AT-186		
A/T Wiring diagram AT - PNP/SW	AT-86		
A/T Wiring diagram AT - POWER	AT-105		

B

BACK/L - Wiring diagram	LT-70
Back-up lamp	LT-70
Ball joint (front)	FSU-11
Ball Joint (rear)	RSU-11
Basic inspection	EC-82
Battery	SC-4

ALPHABETICAL INDEX

Battery/Starting/Charging System Tester(Battery)	SC-6	Combination lamp, front, removal and installation LT-33
Battery/Starting/Charging System Tester(Charging system) SC-11	Combination lamp, rear, removal and installation	LT-78
Battery/Starting/Charging System Tester(Starting system) SC-22	Combination meter DI-5
Block heater EM-67	Combination meter removal and installation - See	
Blower motor ATC-75, ATC-121	Instrument panel IP-13
Blower unit ATC-119	COMM - Wiring diagram LAN-9
Body alignment BL-176	Component Location (auto A/C) ATC-33
Body component parts BL-165	Compression pressure EM-55
Body construction BL-175	Compressor clutch removal and installation	.. ATC-136
Body exterior paint color BL-164	Compressor special service tool ATC-13
Body repair BL-164	Condenser ATC-142
Body sealing BL-172	Connecting rod EM-84
Bose speaker amp. AV-4	Connecting rod bearing clearance EM-84
Brake booster BR-17	Connecting rod bushing clearance EM-84
Brake fluid change BR-9	Console box - See Instrument panel IP-14
Brake fluid level MA-22	Console box lamp LT-136
Brake fluid level and line check BR-9	CONSULT for engine EC-118
Brake inspection MA-23	CONSULT for VDC BRC-30
Brake lines and cables inspection MA-22	Contaminated refrigerant ATC-4
Brake master cylinder BR-13	Control unit ATC-114
Brake pedal BR-6	Control units (terminal arrangement) PG-68
Brake switch EC-565	Control valve (A/T) AT-34
BRK/SW - Wiring diagram EC-566	Controller Area Network (CAN) LAN-21, LAN-24, LAN-42
Bulb specifications LT-140	Converter housing installation AT-218
Bumper, front EI-15	COOL/V - Wiring diagram EC-467, EC-537
Bumper, rear EI-18	Coolant replacement MA-12
BYPS/V - Wiring diagram EC-542, EC-549	Cooling circuit (engine) CO-7

C

Camshaft EM-34
Camshaft inspection EM-38
Camshaft position sensor (PHASE) EC-340
CAN - Wiring diagram EC-152, LAN-25, LAN-44
CAN (Controller Area Network) LAN-21, LAN-24, LAN-42
CAN communication ...	EC-30, EC-151, AT-28, AT-79, BRC-8, BRC-45, DI-6, LAN-21, LAN-24, LAN-42
Canister-See EVAP canister EC-609
CD auto changer AV-27
CD/CHG - Wiring diagram AV-6
CHARGE - Wiring diagram SC-10
Charging system SC-9
Chassis and body maintenance MA-19
CHIME - Wiring diagram DI-53
CIGAR - Wiring diagram WW-23
Cigarette lighter WW-23
Cigarette lighter illumination LT-137
Circuit breaker PG-64
Clearance lamp LT-71
Clock DI-137
CLOCK - Wiring diagram DI-137
Closed loop control EC-27
Closed loop control (Bank 1) EC-460
Closed loop control (Bank 2) EC-460
Coil spring (rear) RSU-15
Collision diagnosis SRS-54

Combination lamp, front, removal and installation LT-33
Combination lamp, rear, removal and installation	LT-78
Combination meter DI-5
Combination meter removal and installation - See	
Instrument panel IP-13
COMM - Wiring diagram LAN-9
Component Location (auto A/C) ATC-33
Compression pressure EM-55
Compressor clutch removal and installation	.. ATC-136
Compressor special service tool ATC-13
Condenser ATC-142
Connecting rod EM-84
Connecting rod bearing clearance EM-84
Connecting rod bushing clearance EM-84
Console box - See Instrument panel IP-14
Console box lamp LT-136
CONSULT for engine EC-118
CONSULT for VDC BRC-30
Contaminated refrigerant ATC-4
Control unit ATC-114
Control units (terminal arrangement) PG-68
Control valve (A/T) AT-34
Controller Area Network (CAN) LAN-21, LAN-24, LAN-42
Converter housing installation AT-218
COOL/V - Wiring diagram EC-467, EC-537
Coolant replacement MA-12
Cooling circuit (engine) CO-7
Cooling fan CO-17
Cooling fan control EC-534
Cooling fan fluid level MA-18
Cooling fan speed control solenoid valve EC-534
Corrosion protection BL-169
Crankcase ventilation system - See Positive crankcase ventilation EC-619
Crankshaft EM-68
Crankshaft position sensor (POS) EC-331, EC-490
Crankshaft position sensor (POS) chipping EC-490
Crash zone sensor SRS-43
Cylinder block EM-67
Cylinder block boring EM-87
Cylinder head EM-55

D

D/LOCK - Wiring diagram BL-20
Data link connector EC-605
Data link connector for Consult EC-120
Daytime light system LT-36
Daytime running light - See Daytime light system	LT-36
DEF - Wiring diagram GW-55
Diagnosis sensor unit SRS-46
Diagnostic trouble code (DTC) for OBD system	EC-10, EC-54
Diagnostic trouble code (DTC) inspection priority chart	EC-78, AT-40
Differential carrier assembly RFD-22
Differential carrier disassembly RFD-11

ALPHABETICAL INDEX

Direct clutch solenoid valve	AT-150 , AT-153	EVAP vapor lines inspection	MA-17
DLC - Wiring diagram	EC-605	Evaporative emission (EVAP) system	EC-606 , EC-609
Door glass	GW-45 , GW-48	Evaporator	ATC-144
Door glass Fitting Adjustment(Front)	GW-47	Exhaust manifold	EM-22
Door glass Fitting Adjustment(Rear)	GW-50	Exhaust system	EX-3
Door lock	BL-88 , BL-91	Exhaust system inspection	EX-3 , MA-19
Door mirror	GW-105	Expansion valve	ATC-144
Door trim	EI-31		
Door, front	BL-85 , GW-45		
Door, rear	BL-85 , GW-48		
Drive belt	EM-12		
Drive belt inspection	MA-12		
Drive pinion diff. inspection	RFD-11		
Drive pinion height	RFD-17		
Drive shaft	MA-25		
Drive shaft (rear)	RAX-9		
Driver air bag	SRS-34		
DTC work support	EC-129		
DTRL - Wiring diagram	LT-41		
Dual pressure switch	ATC-145		
Duct and grilles	ATC-129		
Duel mode muffler	EX-5		
Duel mode muffler -Wiring diagram-	EX-7		

E

ECM input/output signal	EC-109
ECM power supply	EC-143 , EC-412 , EC-416
ECTS - Wiring diagram	EC-175 , EC-195
Electric sunroof	RF-10
Electric throttle control actuator	EC-440 , EC-443
Electrical load signal circuit	EC-603
Electrical unit	PG-68
Electrical units location	PG-58
Electronic ignition (EI) system	EC-28
Electronic key	BL-71 , BL-80 , BL-128
Engine control circuit diagram	EC-107
Engine control component parts location	EC-102
Engine control module (ECM)	EC-409
Engine control system diagram and chart	EC-23
Engine coolant	CO-8
Engine coolant temperature sensor (ECTS) ..	EC-173 , EC-193
Engine fail-safe system	EC-80
Engine oil	LU-6
Engine oil filter replacement	MA-16
Engine oil precautions	GI-7
Engine oil replacement	MA-15
Engine removal	EM-64
Engine room cover	EM-11
EVAP canister purge volume control solenoid valve	EC-360 , EC-500 , EC-609
EVAP canister vent control valve	EC-366 , EC-509 , EC-522
EVAP control system (small leak) diagnosis ..	EC-350 , EC-381 , EC-498
EVAP control system pressure sensor	EC-373
EVAP control system purge flow monitoring diagnosis	EC-516

F

F/LID - Wiring diagram	BL-98
F/PUMP - Wiring diagram	EC-593
Fan switch	ATC-29
Final drive pre-inspection	RFD-11
Final drive removal and installation	RFD-9
Finisher, interior - See Trim	EI-38
Finisher, trunk lid	EI-51
Floor trim	EI-46
Flow charts	GI-26
FLS1 - Wiring diagram	EC-390
FLS2 - Wiring diagram	EC-397
FLS3 - Wiring diagram	EC-531
Fluid temperature sensor (A/T)	AT-118 , AT-120
Fluorescent leak detector	ATC-146
FPCM - Wiring diagram	EC-474
Freeze frame data	EC-55
Front axle	FAX-4
Front brake solenoid valve	AT-144 , AT-147
Front bumper	EI-15
Front combination lamp removal and installation	LT-33
Front disc brake	BR-19
Front door	BL-85 , GW-45
Front Door Trim	EI-31
Front passenger air bag	SRS-39
Front seat	SE-111
Front seat belt	SB-3
Front seat belt pre-tensioner	SB-2 , SRS-3 , SRS-45
Front side air bag	SRS-40
Front suspension	FSU-5
Front wiper	WW-3
FTTS - Wiring diagram	EC-318
Fuel cut control (at no load high engine speed) .	EC-30
Fuel gauge	DI-5
Fuel injection system (Bank 1)	EC-301 , EC-309
Fuel injection system (Bank 2)	EC-301 , EC-309
Fuel injector and fuel tube	EM-30
Fuel level sensor ...	EC-389 , EC-394 , EC-396 , EC-530
Fuel lid opener, electric	BL-97
Fuel line inspection	FL-2 , MA-14
Fuel precautions	GI-5
Fuel pressure check	EC-48
Fuel pressure regulator	EC-49
Fuel pressure release	EC-48
Fuel pump	EC-592
Fuel pump and gauge	FL-3
Fuel pump control module	EC-472
Fuel pump dropping resistor	EC-472
Fuel system	FL-2
Fuel tank	FL-6

ALPHABETICAL INDEX

Fuel tank temperature sensor [EC-316](#)
FUELB1 - Wiring diagram [EC-303](#), [EC-311](#)
FUELB2 - Wiring diagram [EC-304](#), [EC-312](#)
Fuse [PG-64](#)
Fuse and fusible link block [PG-77](#)
Fuse and fusible link box [PG-78](#)
Fuse block [PG-75](#), [PG-76](#)
Fusible link [PG-64](#)

G

Generator [SC-9](#)
Generator - See Alternator [SC-9](#)
Generic scan tool (GST) [EC-130](#)
Glass [GW-11](#), [GW-13](#), [GW-45](#), [GW-48](#)
Glove box lamp [LT-136](#)
GPS antenna [AV-34](#)
Grille - See Exterior [EI-20](#)
Ground distribution [PG-13](#)

H

H/AIM - Wiring diagram [LT-54](#)
H/LAMP - Wiring diagram [LT-10](#)
Handling precautions for plastics [BL-187](#)
Harness connector [PG-65](#)
Harness layout [PG-26](#)
Hazard warning lamp [LT-57](#)
Headlamp [LT-5](#)
Headlamp aiming control [LT-54](#)
Headlamp leveler - See Headlamp aiming control
[LT-54](#)
Headlamp removal and installation [LT-33](#)
Headlining - See Roof trim [EI-48](#)
Heated oxygen sensor 1 (bank 1) [EC-197](#), [EC-207](#),
[EC-213](#), [EC-220](#), [EC-232](#)
Heated oxygen sensor 1 (bank 2) [EC-197](#), [EC-207](#),
[EC-213](#), [EC-220](#), [EC-232](#)
Heated oxygen sensor 1 heater (bank 1) [EC-241](#)
Heated oxygen sensor 1 heater (bank 2) [EC-241](#)
Heated oxygen sensor 2 (bank 1) [EC-249](#), [EC-260](#),
[EC-271](#), [EC-282](#)
Heated oxygen sensor 2 (bank 2) [EC-249](#), [EC-260](#),
[EC-271](#), [EC-282](#)
Heated oxygen sensor 2 heater (bank 1) [EC-293](#)
Heated oxygen sensor 2 heater (bank 2) [EC-293](#)
Heated seat [SE-101](#)
Heater and cooling unit (Heater core) [ATC-124](#)
HFC134a (R134a) system precaution [ATC-4](#)
HFC134a (R134a) system service procedure [ATC-132](#)
HFC134a (R134a) system service tools [ATC-13](#)
HFC134a system service equipment precaution [ATC-8](#)
High & low reverse clutch solenoid valve [AT-156](#),
[AT-159](#)
Hood [BL-13](#)
Horn [WW-27](#)
HORN - Wiring diagram [WW-27](#)
How to erase DTC for OBD system [EC-63](#)
HSEAT - Wiring diagram [SE-103](#)

I

I/MIRR - Wiring diagram [GW-51](#)
IATS - Wiring diagram [EC-170](#)
ICC - Wiring diagram [ACS-47](#)
Identification [ATC-11](#)
Idle air volume learning [EC-45](#)
Idle mixture ratio [EC-35](#)
Idle speed [EC-35](#), [EC-82](#)
Idle speed control (ISC) [EC-402](#)
IGN/SG - Wiring diagram [EC-480](#)
Ignition coil [EM-28](#), [EC-479](#)
Ignition control system [EC-479](#)
Ignition key hole illumination [LT-106](#)
Ignition timing [EC-35](#), [EC-82](#)
ILL - Wiring diagram [LT-127](#)
Illumination [LT-125](#)
Illumination control [LT-136](#)
In vehicle sensor [ATC-104](#), [ATC-116](#)
INF/D - Wiring diagram [DI-78](#), [DI-86](#)
INJECT - Wiring diagram [EC-580](#)
Injector [EC-579](#)
Input clutch solenoid valve [AT-138](#), [AT-141](#)
Instrument panel [IP-10](#)
Instrument panel speaker [AV-28](#)
INT/L - Wiring diagram [LT-138](#)
Intake air temperature sensor [EC-168](#)
Intake door control linkage adjustment [ATC-74](#)
Intake door motor [ATC-72](#), [ATC-122](#)
Intake manifold [EM-17](#)
Intake sensor [ATC-110](#), [ATC-118](#)
Intake valve timing control (Bank 1) [EC-420](#)
Intake valve timing control (Bank 2) [EC-420](#)
Intake valve timing control position sensor (Bank 1)
[EC-452](#)
Intake valve timing control position sensor (Bank 2)
[EC-452](#)
Intake valve timing control solenoid valve (Bank 1)
[EC-429](#)
Intake valve timing control solenoid valve (Bank 2)
[EC-429](#)
Intelligent cruise control (ICC) system [ACS-33](#)
Interior lamp [LT-80](#)
IVCB1 - Wiring diagram [EC-430](#)
IVCB2 - Wiring diagram [EC-432](#)
IVCSB1 - Wiring diagram [EC-423](#), [EC-453](#)
IVCSB2 - Wiring diagram [EC-425](#), [EC-455](#)
IVIS (Infiniti vehicle immobilizer system) precautions ...
[GI-3](#)
IVMS (In-Vehicle Multiplexing System) [LAN-4](#)
IVMS-System description [LAN-4](#)

J

Joint connector (J/C) [PG-67](#)
Junction box (J/B) [PG-75](#), [PG-76](#)

A
B
C
D
E
F
G
H
I
J
K
L

ALPHABETICAL INDEX

K

Keyless entry system - See Multi-remote control system	
BL-45	
Knock sensor (KS)	EC-327
KS - Wiring diagram	EC-328

L

Laser beam aiming adjustment	ACS-39
Latch (lower anchors and tether for children) system	SB-8
License lamp	LT-71
Line pressure solenoid valve	AT-101
Line pressure test (A/T)	AT-52
LOAD/S - Wiring diagram	DI-14
Location of electrical units	PG-58
Lock, door	BL-88 , BL-91
Low coast brake solenoid valve	AT-162 , AT-165
Low tire pressure warning system	WT-7
Low tire pressure warning system - trouble diagnoses	WT-9
Low tire pressure warning system - Wiring diagram	WT-9
Lubricant (R134a) A/C	ATC-5 , ATC-22
Lubrication circuit (engine)	LU-4
Lubrication oil A/C	ATC-149
Lubrication-locks, hinges and hood latches	MA-25

M

MAFS - Wiring diagram	EC-158
Magnet clutch	ATC-81 , ATC-136
MAIN - Wiring diagram	EC-143
Maintenance (engine)	MA-12
Major overhaul (Final drive)	RFD-11
Malfunction indicator lamp (MIL)	EC-65
Mass air flow sensor (MAFS)	EC-154
Master cylinder (brake)	BR-13
METER - Wiring diagram	DI-12
MIL - Wiring diagram	EC-413
MIRROR - Wiring diagram	GW-72 , GW-104
Mirror, door	GW-105
Mirror, out side	GW-105
Misfire	EC-321
Mode door control linkage adjustment	ATC-68
Mode door motor	ATC-66 , ATC-127
Molding - See Exterior	EI-24 , EI-26 , EI-27 , EI-28 , EI-29
Mud guard - See Exterior	EI-23
Multiplex communication	ATC-111
Multipoint fuel injection (MFI) system	EC-26
Multipoint fuel injection precautions	GI-6
Multi-remote control system	BL-45

N

NATS - Wiring diagram	BL-131 , BL-149
NAVI - Wiring diagram	AV-48
Navigation system	AV-33

Nissan torque demand (NTD) control system	EC-29
NVH troubleshooting (BR)	BR-5
NVH troubleshooting (ST)	PS-5
NVIS (Nissan vehicle immobilizer system) precautions	GI-3

O

O2H1B1 - Wiring diagram	EC-243
O2H1B2 - Wiring diagram	EC-245
O2H2B1 - Wiring diagram	EC-295
O2H2B2 - Wiring diagram	EC-297
O2S1B1 - Wiring diagram	EC-200
O2S2B1 - Wiring diagram	EC-251 , EC-262 , EC-273 , EC-284
O2S2B2 - Wiring diagram	EC-253 , EC-264 , EC-275 , EC-286
Oil filter	LU-9
Oil pan (engine)	EM-25
Oil pressure (engine)	LU-7
Oil pump (engine)	LU-10
Oil seal replacement (front of final drive)	RFD-6
Oil seal replacement (side of final drive)	RFD-7
On board diagnostic system	EC-50
ORVR (On-board Refueling Vapor Recovery)	EC-612
Out side mirror	GW-105
Overheat	EC-464

P

Park/Neutral position switch	EC-555
Park/neutral position switch (A/T)	AT-85 , AT-184 , AT-209
Parking brake control	PB-4
Parking drum brake	PB-6
Parking lamp	LT-71
PCV (positive crankcase ventilation)	EC-619
Personal lamp	LT-106
PGC/V - Wiring diagram	EC-362 , EC-503
PHASE - Wiring diagram	EC-341
Pinion bearing preload diff.	RFD-17
Pinion gear height diff.	RFD-17
Piston pin inspection	EM-82
Piston ring inspection	EM-83
Piston to bore clearance	EM-87
PNP/SW - Wiring diagram	EC-557
POS - Wiring diagram	EC-333 , EC-491
POWER - Wiring diagram	EC-417 , PG-3
Power door lock	BL-18
Power seat	SE-90
Power steering fluid level	PS-6 , MA-24
Power steering gear	PS-15
Power steering hydraulic pressure	PS-23
Power steering oil pump	PS-23
Power steering pressure (PSP) sensor	EC-404
Power supply routing	PG-2
Power window	GW-15
Power window main switch	LT-136
PRE/SE - Wiring diagram	EC-375

ALPHABETICAL INDEX

Precautions (General)	GI-4
Precautions in repairing high strength steel	BL-190
Pressure switch 1	AT-147 , AT-172
Pressure switch 2	AT-165
Pressure switch 3	AT-141 , AT-175
Pressure switch 5	AT-153 , AT-178
Pressure switch 6	AT-159 , AT-181
Pressure test (A/T)	AT-52
Propeller shaft	PR-4
Propeller shaft on vehicle service	PR-4
Propeller shaft vibration	PR-4
PS/SEN - Wiring diagram	EC-405
PTT switch (Push To Talk switch)	DI-153
Push To Talk switch (PTT switch)	DI-153

R

R/VIEW - Wiring diagram	DI-142
Radiator	CO-11
Radiator coolant temperature sensor	EC-435
Radio - See Audio	AV-4
RCTS - Wiring diagram	EC-437
Rear axle	RAX-5
Rear bumper	EI-18
Rear combination lamp removal and installation	LT-78
Rear disc brake	BR-26
Rear door	BL-85 , GW-48
Rear door trim	EI-31
Rear drum brake	PB-8
Rear parcel shelf finisher	EI-40
Rear seat	SE-118
Rear seat belt	SB-4
Rear suspension	RSU-5
Rear ventilator door motor	ATC-74
Rear view monitor	DI-139
Rear window	GW-13
Rear window defogger	GW-53
Refrigerant connection precaution	ATC-5
Refrigerant discharging evacuating charging	ATC-132
Refrigerant general precaution	ATC-5
Refrigerant lines	ATC-132
Refrigerant pressure sensor	EC-598 , ATC-86 , ATC-141
Refrigeration cycle	ATC-17
Relay block	PG-77
REMOTE - Wiring diagram	AV-12
Remote keyless entry system	BL-45
Removal and installation (A/T)	AT-216
Reverse interlock door mirror	GW-68
Revolution sensor (A/T)	AT-89
Ring gear diff. inspection	RFD-11
Rocker cover	EM-32
Roof trim	EI-48
Room lamp	LT-80 , LT-105
Room lamp - See Interior lamp	LT-80
ROOM/L - Wiring diagram	LT-85
RP/SEN - Wiring diagram	EC-599

S

S/SIG - Wiring diagram	EC-589
SAE J1979 - Mode 1 - 7	EC-50
SCS-ACTIVE - Wiring diagram	SCS-4
SEAT - Wiring diagram	SE-92
Seat belt inspection	SB-5 , MA-26
Seat belt pre-tensioner disposal	SRS-47
Seat belt, front	SB-3
Seat belt, rear	SB-4
Seat, front	SE-111
Seat, rear	SE-118
Sheft warning system	BL-100
SHIFT - Wiring diagram	AT-211
Shift change signal	EC-563
Shift lock system	AT-210
Shift schedule	AT-59 , AT-219
Shock absorber (adjustable) - Wiring diagram	SCS-4
Shock absorber (adjustable, rear)	RSU-9
Shock absorber (rear)	RSU-9
Side air bag (satellite) sensor	SRS-44
Side bearing preload diff.	RFD-16
Side curtain air bag	SRS-42
Side flange installation diff.	RFD-7
Side trim	EI-38
SMJ (super multiple junction)	PG-70
Spark plug	EM-29
Spark plug replacement	MA-17
Specification value	EC-138
Speedometer	DI-5
Spiral cable	SRS-37
Spot lamp	LT-105
SROOF - Wiring diagram	RF-11
SRS - See Supplemental Restraint System	SRS-6
SRS - Wiring diagram	SRS-12
SRS Trouble diagnoses	SRS-8
Stabilizer bar (front)	FSU-13
Stabilizer bar (rear)	RSU-16
Stall test (A/T)	AT-50
Standardized relay	PG-73
START - Wiring diagram	SC-21
Start signal	EC-588
Starter	SC-20
Starting system	SC-20
Steering gear and linkage inspection	MA-24
Steering linkage	PS-15
Steering wheel and column	PS-11
Steering wheel turning force	PS-6
Step lamp	LT-107
STEP/L - Wiring diagram	LT-110
Stop lamp	LT-68
Stop lamp switch	EC-565
STOP/L - Wiring diagram	LT-68
Strut (rear)	RSU-9
Sun roof, electric	RF-10
Sunload sensor	ATC-107 , ATC-117
Sunroof	RF-18
Sunshade	EI-42
Supplemental Restraint System	SRS-6

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

Supplemental restraint system - Wiring diagram
[SRS-12](#)
Suspension [MA-24](#)
Symbols and abbreviations [GI-9](#), [GI-22](#)
Symptom matrix chart [EC-86](#)
System readiness test (SRT) code [EC-55](#)

T

T/MTR - Wiring diagram [EC-444](#)
Tachometer [DI-5](#)
Tail lamp [LT-71](#)
TAIL/L - Wiring diagram [LT-73](#)
TCM circuit diagram [AT-49](#)
TCM inspection table [AT-64](#)
THEFT - Wiring diagram [BL-105](#)
Thermostat [CO-23](#)
Three way catalyst [EM-22](#)
Three way catalyst function (Bank 1) [EC-346](#)
Three way catalyst function (Bank 2) [EC-346](#)
Three way catalyst precautions [GI-5](#)
Throttle control motor relay [EC-447](#)
Throttle position sensor (TPS) [EC-178](#)
Throttle position switch [AT-184](#)
Thrust washer selection diff. [RFD-15](#)
Tie-rod [PS-15](#)
Tie-rod ball joints [PS-20](#)
Timing chain [EM-45](#)
Tire rotation [MA-22](#)
TLID - Wiring diagram [BL-98](#)
TM/RLY - Wiring diagram [EC-448](#)
Tooth contact diff. [RFD-21](#)
Top tether strap child restraint [SB-9](#)
Torque converter installation [AT-217](#), [AT-218](#)
Torque convertor clutch solenoid valve . [AT-94](#), [AT-97](#)
TPS - Wiring diagram [EC-181](#)
TRANSMT - Wiring diagram [BL-161](#)
Trim [EI-38](#)
Trouble diagnoses [GI-10](#)
Trunk lid [BL-94](#)
Trunk lid finisher [EI-51](#)
Trunk lid opener, electric [BL-46](#), [BL-97](#)
Trunk lid trim [EI-51](#)
Trunk room lamp [LT-138](#)
Trunk room trim [EI-51](#)
Turbine revolution sensor [AT-123](#)
Turbocharger precautions [GI-6](#)
TURN - Wiring diagram [LT-60](#)
Turn signal lamp [LT-57](#)
Two trip detection logic [EC-50](#)

V

VACS (voice activated control system) [DI-153](#)
Vacuum cut valve [EC-609](#)
Vacuum cut valve bypass valve [EC-540](#), [EC-546](#),
[EC-609](#)
Vacuum hose drawing (Engine control) [EC-24](#)
Valve clearance [EM-40](#)

Valve guide [EM-60](#)
Valve lifter [EM-39](#)
Valve seat [EM-61](#)
Valve spring [EM-62](#)
Vanity mirror lamp [LT-138](#)
Variable induction air control system (VIAS) [EC-570](#)
VDC -Wiring diagram [BRC-16](#)
Vehicle security (theft warning) system [BL-100](#)
Vehicle speed sensor (VSS) [EC-400](#), [EC-561](#)
VEHSEC - Wiring diagram [BL-105](#)
VENT/V - Wiring diagram ... [EC-368](#), [EC-511](#), [EC-525](#)
Ventilation air filter [ATC-123](#)
VIAS - Wiring diagram [EC-572](#)
Vice activated control system (VACS) [DI-153](#)
VOICE - Wiring diagram [DI-156](#)

W

W/ANT - Wiring diagram [AV-30](#)
WARN - Wiring diagram [DI-31](#)
Warning chime [DI-50](#)
Warning lamps [DI-27](#)
Water control valve [CO-23](#)
Water pump [CO-21](#)
Water temperature gauge [DI-5](#)
Wheel alignment (rear) [RSU-6](#)
Wheel balance [WT-5](#), [MA-20](#)
Wheel hub (front) [FAX-4](#)
Wheel hub (rear) [RAX-5](#)
WINDOW - Wiring diagram [GW-18](#)
Window antenna [AV-31](#)
Window, door [GW-45](#), [GW-48](#)
Window, rear [GW-13](#)
Windshield [GW-11](#)
Windshield wiper - See Front wiper [WW-3](#)
WIPER - Wiring diagram [WW-6](#)
Wiper and washer [WW-3](#)
Wiper, front [WW-3](#)
Wiring Diagram (Cell code) list [PG-55](#)
Wiring diagrams [GI-14](#)
WT-T/WARN - Wiring diagram [WT-9](#)