

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

A

A/C air flow	ATC-34	A/T Wiring diagram AT - TRSA/T	AT-161
A/C component layout	ATC-23	A/T Wiring diagram AT - VSS A/T	AT-118
A/C compressor clutch removal and installation	ATC-153	Accelerator control system	ACC-2
A/C compressor precaution	ATC-10	Accelerator pedal position (APP) sensor	EC-608 , EC-615 , EC-628
A/C compressor special service tool	ATC-14	Accelerator pedal released position learning	EC-44
A/C control operation (auto A/C)	ATC-32	Accelerator wire adjustment	ACC-3
A/C diagnostic work flow (auto A/C)	ATC-36	Active damper suspension system	SCS-2
A/C evaporator	ATC-161	Active damper suspension system - trouble diagnoses	SCS-2
A/C HFC134a (R134a) system precaution	ATC-5	Active damper suspension system - Wiring diagram	SCS-4
A/C HFC134a (R134a) system service procedure	ATC-149	Aiming adjustment	LT-29
A/C HFC134a (R134a) system service tools ...	ATC-14	Air bag	SRS-3
A/C HFC134a system service equipment precaution ...	ATC-10	Air bag disposal	SRS-52
A/C lubricant (R134a)	ATC-24	Air bleeding for brake system	BR-10
A/C operational check	ATC-64	Air cleaner and air duct	EM-15
A/C performance chart	ATC-99	Air cleaner filter replacement	MA-15
A/C performance test diagnoses	ATC-97	Air conditioner cut control	EC-30
A/C rera y	ATC-93	Air flow meter - See Mass air flow sensor	EC-171 , EC-179 , EC-416
A/C self-diagnoses (auto A/C)	ATC-55	Air mix door control linkage adjustment	ATC-78
A/C system description (auto A/C)	ATC-27	Air mix. door motor	ATC-76 , ATC-143
A/C trouble diagnoses (auto A/C)	ATC-36	Alternator	SC-9
A/C, A - Wiring diagram	ATC-41	Ambient sensor	ATC-112 , ATC-128
A/T fluid checking	AT-14 , AT-52	Angular tightening application	EM-3
A/T fluid replacement	AT-14	Antenna	AV-44
A/T fluid temperature sensor	AT-154	APPS1 - Wiring diagram	EC-610
A/T self-diagnoses	AT-101	APPS2 - Wiring diagram	EC-617
A/T shift lock system	AT-300	APPS3 - Wiring diagram	EC-630
A/T shift lock system - Wiring diagram	AT-301	ASCD - Wiring diagram	ACS-8
A/T trouble diagnoses	AT-43	ASCD (automatic speed control device)	ACS-4
A/T Wiring diagram AT - CAN	AT-105	ASCD vacuum hose	MA-27
A/T Wiring diagram AT - D/C	AT-198	Ashtray illumination(Front)	LT-147
A/T Wiring diagram AT - D/CF	AT-203	Ashtray illumination(Rear)	LT-147
A/T Wiring diagram AT - E/BRE	AT-175	Audio	AV-5
A/T Wiring diagram AT - FPSW1	AT-229	AUDIO - Wiring diagram	AV-9
A/T Wiring diagram AT - FPSW3	AT-233	Audio and A/C control removal and installation - See	
A/T Wiring diagram AT - FPSW5	AT-237	Instrument panel	IP-11
A/T Wiring diagram AT - FPSW6	AT-241	AUT/DP - Wiring diagram	SE-21
A/T Wiring diagram AT - FR/B	AT-189	Auto air conditioner - Wiring diagram	ATC-41
A/T Wiring diagram AT - FR/BF	AT-194	Auto anti-dazzling inside mirror	GW-58 , GW-59
A/T Wiring diagram AT - FTS	AT-155	Automatic amplifier	ATC-52 , ATC-67
A/T Wiring diagram AT - HLR/C	AT-207	Automatic drive positioner	SE-13
A/T Wiring diagram AT - HLR/CF	AT-212	Automatic transmission fluid replacement	MA-20
A/T Wiring diagram AT - I/C	AT-179	AV and NAVI control unit	DI-118 , AV-49
A/T Wiring diagram AT - I/CF	AT-185	AV communication line	AV-72
A/T Wiring diagram AT - I/LOCK	AT-168	AV control unit	DI-118
A/T Wiring diagram AT - LC/B	AT-216	Axle	MA-26
A/T Wiring diagram AT - LC/BF	AT-221	Axle housing (rear)	RAX-7
A/T Wiring diagram AT - LPSV	AT-136		
A/T Wiring diagram AT - MMSW	AT-225		
A/T Wiring diagram AT - NONDTC	AT-248		
A/T Wiring diagram AT - PNP/SW	AT-112		
A/T Wiring diagram AT - POWER	AT-141		
A/T Wiring diagram AT - STSIG	AT-108		
A/T Wiring diagram AT - TCCSIG	AT-131		
A/T Wiring diagram AT - TCV	AT-125		

B

BACK/L - Wiring diagram	LT-70
Back-up lamp	LT-70
Ball joint (front)	FSU-12
Ball Joint (rear)	RSU-11
Basic inspection	EC-80
Battery	SC-4

ALPHABETICAL INDEX

Battery/Starting/Charging System Tester(Battery)	SC-6	LT-32
Battery/Starting/Charging System Tester(Charging system)	SC-11	Combination lamp, rear, removal and installation
Battery/Starting/Charging System Tester(Starting system)	SC-24	LT-81
Block heater	EM-75	Combination meter
Blower motor	ATC-83, ATC-134	DI-7
Blower unit	ATC-132	COMM - Wiring diagram
Body alignment	BL-239	LAN-9, AV-72
Body component parts	BL-228	COMPAS - Wiring diagram
Body construction	BL-238	DI-26
Body exterior paint color	BL-227	Compass
Body repair	BL-227	DI-24
Body sealing	BL-235	Component Location (auto A/C)
Bose speaker amp.	AV-5	ATC-38
Brake booster	BR-21	Compression pressure
Brake fluid change	BR-9, BR-10	EM-62
Brake fluid level	MA-23	Compressor clutch removal and installation
Brake fluid level and line check	BR-9	ATC-153
Brake inspection	MA-24	Compressor special service tool
Brake lines and cables inspection	MA-24	ATC-14
Brake master cylinder	BR-13	Condenser
Brake pedal	BR-6	ATC-159
Brake switch	EC-603	Connecting rod
BRK/SW - Wiring diagram	EC-604	EM-92
Bulb specifications	LT-150	Console box lamp
Bumper, front	EI-15	LT-146
Bumper, rear	EI-17	CONSULT for engine
BYPS/V - Wiring diagram	EC-580, EC-587	EC-107
		CONSULT-II for engine
		EC-107, EC-121
		Contaminated refrigerant
		ATC-6
		Control unit
		ATC-127
		Control units (terminal arrangement)
		PG-59
		Control valve (A/T)
		AT-37
		Controller Area Network (CAN)
		LAN-21, LAN-24, LAN-42
		Converter housing installation
		AT-326
		COOL/V - Wiring diagram
		EC-507, EC-575
		Coolant replacement
		MA-12
		Cooling circuit (engine)
		CO-7
		Cooling fan
		CO-18
		Cooling fan control
		EC-503, EC-572
		Cooling fan fluid level
		MA-18
		Cooling fan speed control solenoid valve
		EC-572
		Corrosion protection
		BL-232
		Crankcase ventilation system - See Positive crankcase ventilation
		EC-699
		Crankshaft
		EM-76
		Crankshaft position sensor (POS)
		EC-304
		Crash zone sensor
		SRS-48
		Cylinder block
		EM-75
		Cylinder block boring
		EM-95
		Cylinder head
		EM-62

C

Camshaft	EM-47
Camshaft inspection	EM-48
Camshaft position sensor (PHASE)	EC-312
CAN - Wiring diagram	EC-142, LAN-25, LAN-44
CAN (Controller Area Network)	LAN-21, LAN-24, LAN-42
CAN communication	EC-30, EC-141, AT-32, AT-104, DI-8, LAN-21, LAN-24, LAN-42
Canister-See EVAP canister	EC-690
CD auto changer	AV-40
CD/CHG - Wiring diagram	AV-9
CHARGE - Wiring diagram	SC-10
Charging system	SC-9
Chassis and body maintenance	MA-19
CIGAR - Wiring diagram	WW-26
Cigarette lighter	WW-26
Cigarette lighter illumination	LT-147
Circuit breaker	PG-13
Clearance lamp	LT-72
Clock	DI-145
CLOCK - Wiring diagram	DI-145
Closed loop control	EC-27
Closed loop control (Bank 1)	EC-499
Closed loop control (Bank 2)	EC-499
Coil spring (rear)	RSU-15
Collision diagnosis	SRS-59
Combination lamp, front, removal and installation	

D

D/LOCK - Wiring diagram	BL-23
Data link connector	EC-686
Data link connector for Consult	EC-109
Daytime light system	LT-35
Daytime running light - See Daytime light system	LT-35
DEF - Wiring diagram	GW-63, SE-163
Diagnosis sensor unit	SRS-51
Diagnostic trouble code (DTC) for OBD system	EC-9
Diagnostic trouble code (DTC) inspection priority chart	EC-77
Direct clutch solenoid valve	AT-197, AT-202
DLC - Wiring diagram	EC-686
Door glass	GW-52, GW-55
Door glass Fitting Adjustment(Front)	GW-54
Door glass Fitting Adjustment(Rear)	GW-57
Door lock	BL-107, BL-110
Door mirror	GW-115
Door mirror lamp	LT-129

A
B
C
D
E
F
G
H
I
J
K
L

ALPHABETICAL INDEX

Door trim	EI-31	Exhaust system inspection	EX-3 , MA-19
Door, front	BL-103 , GW-52	Expansion valve	ATC-163
Door, rear	BL-103 , GW-55		
Drive belt	EM-12		
Drive belt inspection	MA-12		
Drive pinion diff. inspection	RFD-13		
Drive shaft (rear)	RAX-9		
Driver air bag	SRS-39		
DTC work support	EC-118		
DTRL - Wiring diagram	LT-40		
Duct and grilles	ATC-145		
Duel mode muffler	EX-6		

E

ECM input/output signal	EC-97
ECM power supply	EC-131 , EC-412
ECM/PW - Wiring diagram	EC-413
ECTS - Wiring diagram	EC-192
Electric sunroof	RF-10
Electric throttle control actuator	EC-434 , EC-436 , EC-449
Electrical load signal circuit	EC-680
Electrical unit	PG-59
Electrical units location	PG-50
Electronic ignition (EI) system	EC-28
Electronic key	BL-83 , BL-98 , BL-190
Engine control circuit diagram	EC-95
Engine control component parts location	EC-89
Engine control module (ECM)	EC-405
Engine control system diagram and chart	EC-23
Engine coolant	CO-9
Engine coolant temperature sensor (ECTS) ..	EC-190 , EC-202
Engine fail-safe system	EC-79
Engine oil	LU-6
Engine oil filter replacement	MA-16
Engine oil precautions	GI-7
Engine oil replacement	MA-15
Engine removal	EM-72
Engine room cover	EM-11
ETC1 - Wiring diagram	EC-437
ETC2 - Wiring diagram	EC-445
ETC3 - Wiring diagram	EC-450
EVAP canister	EC-690
EVAP canister purge volume control solenoid valve	EC-337 , EC-538
EVAP canister vent control valve	EC-343 , EC-546 , EC-552
EVAP control system (small leak) diagnosis ..	EC-328 , EC-365 , EC-373 , EC-529 , EC-559
EVAP control system pressure sensor	EC-350 , EC-357
EVAP control system purge flow monitoring diagnosis	EC-322
EVAP vapor lines inspection	MA-18
Evaporative emission (EVAP) system	EC-687
Evaporator	ATC-161
Exhaust manifold	EM-21
Exhaust system	EX-3

F

F/LID - Wiring diagram	BL-122 , BL-124
F/PUMP - Wiring diagram	EC-669
Fan switch	ATC-33
Final drive disassembly	RFD-14
Final drive removal and installation	RFD-11
Finisher, interior - See Trim	EI-39
Finisher, trunk lid	EI-59
Floor trim	EI-54
Flow charts	GI-26
FLS1 - Wiring diagram	EC-383
FLS2 - Wiring diagram	EC-390
FLS3 - Wiring diagram	EC-569
Fluid temperature sensor (A/T)	AT-154
Fluorescent leak detector	ATC-164
FPCM - Wiring diagram	EC-515
Freeze frame data	EC-54
Front axle	FAX-4
Front brake solenoid valve	AT-188 , AT-193
Front bumper	EI-15
Front combination lamp removal and installation	LT-32
Front disc brake	BR-23
Front door	BL-103 , GW-52
Front Door Trim	EI-31
Front passenger air bag	SRS-44
Front seat	SE-187
Front seat belt	SB-4
Front seat belt pre-tensioner	SB-2 , SRS-3 , SRS-50
Front side air bag	SRS-45
Front suspension	FSU-5
Front wiper	WW-3
FTTS - Wiring diagram	EC-280 , EC-284
Fuel cut control (at no load high engine speed) .	EC-30
Fuel gauge	DI-7
Fuel injection system (Bank 1)	EC-261 , EC-270
Fuel injection system (Bank 2)	EC-261 , EC-270
Fuel injector and fuel tube	EM-30
Fuel level sensor ...	EC-382 , EC-387 , EC-389 , EC-568
Fuel lid opener, electric	BL-121
Fuel line inspection	FL-2 , MA-15
Fuel precautions	GI-5
Fuel pressure check	EC-47
Fuel pressure release	EC-46
Fuel pump	EC-668
Fuel pump and gauge	FL-3
Fuel pump control module	EC-513
Fuel pump dropping resistor	EC-513
Fuel system	FL-2
Fuel tank	FL-8
Fuel tank temperature sensor	EC-278 , EC-283
FUELB1 - Wiring diagram	EC-263 , EC-272
FUELB2 - Wiring diagram	EC-264 , EC-273
Fuse	PG-13
Fuse and fusible link block	PG-68
Fuse and fusible link box	PG-69

ALPHABETICAL INDEX

Fuse block [PG-66](#), [PG-67](#)
 Fusible link [PG-13](#)

G

Generator [SC-9](#)
 Generator - See Alternator [SC-9](#)
 Generic scan tool (GST) [EC-119](#)
 Glass [GW-11](#), [GW-14](#), [GW-52](#), [GW-55](#), [EI-24](#)
 Glove box lamp [LT-146](#)
 GPS antenna [AV-48](#)
 Grille - See Exterior [EI-19](#)
 Ground distribution [PG-14](#)

H

H/AIM - Wiring diagram [LT-53](#)
 H/LAMP - Wiring diagram [LT-10](#)
 Handling precautions for plastics [BL-250](#)
 Harness connector [PG-56](#)
 Harness layout [PG-28](#)
 Hazard warning lamp [LT-56](#)
 Headlamp [LT-6](#), [LT-56](#), [LT-72](#)
 Headlamp aiming control [LT-53](#)
 Headlamp leveler - See Headlamp aiming control
[LT-53](#)
 Headlamp removal and installation [LT-32](#)
 Headlining - See Roof trim [EI-56](#)
 Heated oxygen sensor 1 (bank 1) ... [EC-210](#), [EC-219](#),
[EC-231](#), [EC-462](#), [EC-468](#)
 Heated oxygen sensor 1 (bank 2) ... [EC-210](#), [EC-219](#),
[EC-231](#), [EC-462](#), [EC-468](#)
 Heated oxygen sensor 1 heater (bank 1) [EC-155](#)
 Heated oxygen sensor 1 heater (bank 2) [EC-155](#)
 Heated oxygen sensor 2 (bank 1) ... [EC-240](#), [EC-249](#),
[EC-475](#), [EC-487](#)
 Heated oxygen sensor 2 (bank 2) ... [EC-240](#), [EC-249](#),
[EC-475](#), [EC-487](#)
 Heated oxygen sensor 2 heater (bank 1) [EC-163](#)
 Heated oxygen sensor 2 heater (bank 2) [EC-163](#)
 Heated seat [SE-128](#)
 Heater and cooling unit (Heater core) [ATC-137](#)
 HFC134a (R134a) system precaution [ATC-5](#)
 HFC134a (R134a) system service procedure [ATC-149](#)
 HFC134a (R134a) system service tools [ATC-14](#)
 HFC134a system service equipment precaution
[ATC-10](#)
 High & low reverse clutch solenoid valve [AT-206](#),
[AT-211](#)
 Hood [BL-13](#)
 Horn [WW-30](#)
 HORN - Wiring diagram [WW-30](#)
 How to erase DTC for OBD system [EC-61](#)
 HSEAT - Wiring diagram [SE-134](#)

I

I/MIRR - Wiring diagram [GW-58](#)
 IATS - Wiring diagram [EC-187](#)

ICC - Wiring diagram [ACS-46](#)
 Identification [ATC-13](#)
 Idle air volume learning [EC-44](#)
 Idle mixture ratio [EC-33](#)
 Idle speed [EC-33](#), [EC-80](#)
 Idle speed control (ISC) [EC-396](#), [EC-398](#)
 Ignition coil [EM-27](#), [EC-643](#)
 Ignition control system [EC-643](#)
 Ignition key hole illumination [LT-109](#)
 Ignition timing [EC-33](#), [EC-80](#)
 IGNSYS - Wiring diagram [EC-644](#)
 ILL - Wiring diagram [LT-135](#)
 Illumination [LT-132](#)
 Illumination control [LT-146](#)
 In vehicle sensor [ATC-114](#), [ATC-129](#)
 INF/D - Wring diagram [DI-126](#)
 INJECT - Wiring diagram [EC-656](#)
 Injector [EC-655](#)
 Input clutch solenoid valve [AT-178](#), [AT-184](#)
 Instrument panel [IP-10](#)
 Instrument panel speaker [AV-41](#)
 INT/L - Wiring diagram [LT-148](#)
 Intake air temperature sensor [EC-186](#), [EC-205](#)
 Intake door control linkage adjustment [ATC-81](#)
 Intake door motor [ATC-79](#), [ATC-135](#)
 Intake manifold [EM-17](#)
 Intake sensor [ATC-120](#), [ATC-131](#)
 Intake valve timing control (Bank 1) [EC-144](#)
 Intake valve timing control (Bank 2) [EC-144](#)
 Intake valve timing control position sensor (Bank 1) ...
[EC-454](#)
 Intake valve timing control position sensor (Bank 2) ...
[EC-454](#)
 Intake valve timing control solenoid valve (Bank 1)
[EC-422](#)
 Intake valve timing control solenoid valve (Bank 2)
[EC-422](#)
 Intelligent cruise control (ICC) system [ACS-33](#)
 Interior lamp [LT-82](#)
 IVCB1 - Wiring diagram [EC-147](#), [EC-423](#)
 IVCB2 - Wiring diagram [EC-149](#), [EC-425](#)
 IVCSB1 - Wiring diagram [EC-455](#)
 IVCSB2 - Wiring diagram [EC-457](#)
 IVIS (Infiniti vehicle immobilizer system) precautions ...
[GI-3](#)
 IVMS (In-Vehicle Multiplexing System) [LAN-4](#)
 IVMS-System description [LAN-4](#)

J

Joint connector (J/C) [PG-58](#)
 Junction box (J/B) [PG-66](#), [PG-67](#)

K

Keyless entry system - See Multi-remote control system
[BL-53](#)
 Knock sensor (KS) [EC-299](#)
 KS - Wiring diagram [EC-300](#)

A
B
C
D
E
F
G
H
I
J
K
L



IDX

ALPHABETICAL INDEX

L

Laser beam aiming adjustment [ACS-38](#)
 Latch (lower anchors and tether for children) system ...
[SB-10](#)
 License lamp [LT-72](#)
 Line pressure solenoid valve [AT-135](#)
 Line pressure test (A/T) [AT-53](#)
 Liquid gasket application [LU-2, CO-2](#)
 LOAD - Wiring diagram [EC-681](#)
 Location of electrical units [PG-50](#)
 Lock, door [BL-107, BL-110](#)
 Low coast brake solenoid valve [AT-215, AT-220](#)
 Low tire pressure warning system [WT-7](#)
 Low tire pressure warning system - trouble diagnoses .
[WT-9](#)
 Low tire pressure warning system - Wiring diagram
[WT-9](#)
 Lubricant (R134a) A/C [ATC-6, ATC-24](#)
 Lubrication circuit (engine) [LU-4](#)
 Lubrication oil A/C [ATC-167](#)
 Lubrication-locks, hinges and hood latches [MA-26](#)

M

MAFS - Wiring diagram [EC-174, EC-181, EC-418](#)
 Magnet clutch [ATC-88, ATC-153](#)
 MAIN - Wiring diagram [EC-131](#)
 Maintenance (engine) [MA-12](#)
 Malfunction indicator lamp (MIL) [EC-63, EC-408](#)
 Mass air flow sensor (MAFS) [EC-171, EC-179, EC-416](#)
 Master cylinder (brake) [BR-13](#)
 METER - Wiring diagram [DI-12](#)
 MIL - Wiring diagram [EC-409](#)
 MIRR/L - Wiring diagram [LT-130](#)
 MIRROR - Wiring diagram [GW-84](#)
 Mirror, door [GW-115](#)
 Mirror, out side [GW-115](#)
 Misfire [EC-293](#)
 Mode door control linkage adjustment [ATC-75](#)
 Mode door motor [ATC-73, ATC-142](#)
 Molding - See Exterior [EI-23, EI-25, EI-27, EI-28, EI-29](#)
 Mud guard - See Exterior [EI-22](#)
 Multiplex communication [ATC-122](#)
 Multiport fuel injection (MFI) system [EC-26](#)
 Multiport fuel injection precautions [GI-6](#)
 Multi-remote control system [BL-53](#)

N

NATS - Wiring diagram [BL-193, BL-207](#)
 NAVI - Wiring diagram [AV-62](#)
 Navigation system [AV-47](#)
 Nissan torque demand (NTD) control system [EC-29](#)
 NVH troubleshooting (BR) [BR-5](#)
 NVH troubleshooting (ST) [PS-5](#)
 NVIS (Nissan vehicle immobilizer system) precautions
[GI-3](#)

O

O2H1B1 - Wiring diagram [EC-157](#)
 O2H1B2 - Wiring diagram [EC-159](#)
 O2H2B1 - Wiring diagram [EC-165](#)
 O2H2B2 - Wiring diagram [EC-167](#)
 O2S1B1 - Wiring diagram ... [EC-212, EC-222, EC-234](#)
 O2S1B2 - Wiring diagram ... [EC-214, EC-224, EC-236](#)
 O2S2B1 - Wiring diagram .. [EC-242, EC-252, EC-478,](#)
[EC-490](#)
 O2S2B2 - Wiring diagram .. [EC-244, EC-254, EC-480,](#)
[EC-492](#)
 Oil filter [LU-9](#)
 Oil pan (engine) [EM-24](#)
 Oil pressure (engine) [LU-6](#)
 Oil pump (engine) [LU-10](#)
 Oil pump regulator valve (engine) [LU-10](#)
 Oil seal replacement (engine) [EM-58](#)
 Oil seal replacement (front of final drive) [RFD-7](#)
 Oil seal replacement (side of final drive) [RFD-9](#)
 On board diagnostic system [EC-49, EC-64](#)
 ORVR (On-board Refueling Vapor Recovery) . [EC-693](#)
 Out side mirror [GW-115](#)
 Overheat [EC-503](#)

P

Park/Neutral position switch [EC-593](#)
 Park/neutral position switch (A/T) [AT-110, AT-244](#)
 Parking brake control [PB-4](#)
 Parking drum brake [PB-6](#)
 Parking lamp [LT-72](#)
 PCV (positive crankcase ventilation) [EC-699](#)
 Personal lamp [LT-108](#)
 PGC/V - Wiring diagram [EC-339, EC-540](#)
 PHASE - Wiring diagram [EC-313](#)
 Piston pin inspection [EM-90](#)
 Piston ring inspection [EM-91](#)
 Piston to bore clearance [EM-95](#)
 PNP/SW - Wiring diagram [EC-595](#)
 POS - Wiring diagram [EC-305](#)
 POWER - Wiring diagram [PG-3](#)
 Power door lock [BL-20](#)
 Power seat [SE-94](#)
 Power steering fluid level [PS-6, MA-25](#)
 Power steering gear [PS-15](#)
 Power steering hydraulic pressure [PS-26](#)
 Power steering oil pump [PS-26](#)
 Power steering pressure (PSP) sensor [EC-400](#)
 Power supply routing [PG-2](#)
 Power window [GW-16](#)
 Power window main switch [LT-146](#)
 PRE/SE - Wiring diagram [EC-352, EC-359](#)
 Precautions (General) [GI-4](#)
 Precautions in repairing high strength steel [BL-253](#)
 Pressure switch 1 [AT-193, AT-228](#)
 Pressure switch 2 [AT-220](#)
 Pressure switch 3 [AT-184, AT-232](#)
 Pressure switch 5 [AT-202, AT-236](#)

ALPHABETICAL INDEX

Pressure switch 6	AT-211 , AT-240	Seat belt, front	SB-4
Pressure test (A/T)	AT-53	Seat belt, rear	SB-6
Propeller shaft	PR-3	Seat, front	SE-187
Propeller shaft on vehicle service	PR-3	Seat, rear	SE-196
Propeller shaft vibration	PR-3	SEN/PW - Wiring diagram	EC-526
PS/SEN - Wiring diagram	EC-401	Sheft warning system	BL-155
PTT switch (Push To Talk switch)	DI-164	SHIFT - Wiring diagram	AT-301
Push To Talk switch (PTT switch)	DI-164	Shift change signal	EC-601

R

R/VIEW - Wiring diagram	DI-150	Shift lock system	AT-300
Radiator	CO-12	Shift schedule	AT-62 , AT-386
Radiator coolant temperature sensor	EC-428	Shock absorber (adjustable) - Wiring diagram .	SCS-4
Radio - See Audio	AV-5	Shock absorber (adjustable, rear)	RSU-9
RCTS - Wiring diagram	EC-430	Shock absorber (rear)	RSU-9
Rear axle	RAX-5	Side air bag (satellite) sensor	SRS-49
Rear bumper	EI-17	Side bearing preload diff.	RFD-20
Rear combination lamp removal and installation	LT-81	Side curtain air bag	SRS-47
Rear disc brake	BR-30	Side flange installation diff.	RFD-10
Rear door	BL-103 , GW-55	Side trim	EI-39
Rear door trim	EI-31	SMJ (super multiple junction)	PG-61
Rear drum brake	PB-8	Spark plug	EM-28
Rear parcel shelf finisher	EI-44	Spark plug replacement	MA-17
Rear seat	SE-196	Specification value	EC-126
Rear seat belt	SB-6	Speedometer	DI-7
Rear suspension	RSU-5	Spiral cable	SRS-42
Rear ventilator door motor	ATC-81	Spot lamp	LT-108
Rear view monitor	DI-147	SROOF - Wiring diagram	RF-11
Rear window	GW-14 , EI-24	SRS - See Supplemental Restraint System	SRS-6
Rear window defogger	GW-60	SRS - Wiring diagram	SRS-12
Refrigerant connection precaution	ATC-7	SRS Trouble diagnoses	SRS-8
Refrigerant discharging evacuating charging	ATC-149	Stabilizer bar (front)	FSU-14
Refrigerant general precaution	ATC-6	Stabilizer bar (rear)	RSU-16
Refrigerant lines	ATC-149	Stall test (A/T)	AT-52
Refrigerant pressure sensor	EC-674 , ATC-93 , ATC-159	Standardized relay	PG-64
Refrigeration cycle	ATC-18	START - Wiring diagram	SC-23
Relay block	PG-68	Start signal	EC-664
REMOTE - Wiring diagram	AV-15	Starter	SC-22
Remote keyless entry system	BL-53	Starting system	SC-22
Removal and installation (A/T)	AT-324	Steering gear and linkage inspection	MA-25
Reverse interlock door mirror	GW-80	Steering linkage	PS-15
Revolution sensor (A/T)	AT-117	Steering wheel and column	PS-11
Ring gear diff. inspection	RFD-13	Steering wheel turning force	PS-6
Rocker cover	EM-35	Step lamp	LT-110
Roof trim	EI-56	STEP/L - Wiring diagram	LT-113
Room lamp	LT-82 , LT-108	Stop lamp	LT-68
Room lamp - See Interior lamp	LT-82	Stop lamp switch	EC-603
ROOM/L - Wiring diagram	LT-88	STOP/L - Wiring diagram	LT-68
RP/SEN - Wiring diagram	EC-675	Strut (rear)	RSU-9

S

S/SIG - Wiring diagram	EC-665	Sun roof, electric	RF-10
SCS-ACTIVE - Wiring diagram	SCS-4	Sunload sensor	ATC-117 , ATC-130
SEAT - Wiring diagram	SE-99	Sunroof	RF-19
Seat belt inspection	SB-7 , MA-27	Sunshade	EI-46
Seat belt pre-tensioner disposal	SRS-52	Supplemental Restraint System	SRS-6

A
B
C
D
E
F
G
H
I
J
K
L

ALPHABETICAL INDEX

T

Tachometer	DI-7
Tail lamp	LT-72
TAIL/L - Wiring diagram	LT-75
TCM circuit diagram	AT-51
TCM inspection table	AT-86
THEFT - Wiring diagram	BL-160
Thermostat	CO-24
Three way catalyst	EM-21
Three way catalyst function (Bank 1)	EC-317
Three way catalyst function (Bank 2)	EC-317
Three way catalyst precautions	GI-5
Throttle control motor relay	EC-443
Throttle position sensor (TPS)	EC-196 , EC-287 , EC-521 , EC-523 , EC-525 , EC-621
Throttle position switch	AT-244
Throttle valve closed position learning	EC-44
Tie-rod	PS-15
Tie-rod ball joints	PS-20
Timing chain	EM-37
Tire rotation	MA-23
TLID - Wiring diagram	BL-122 , BL-124
Tooth contact diff.	RFD-24
Top tether strap child restraint	SB-11
Torque converter installation	AT-326
Torque convertor clutch solenoid valve	AT-124 , AT-129
TPS1 - Wiring diagram	EC-289
TPS2 - Wiring diagram	EC-198
TPS3 - Wiring diagram	EC-623
TRANSMT - Wiring diagram	BL-224
Trim	EI-39
Trouble diagnoses	GI-10
Trunk lid	BL-113
Trunk lid finisher	EI-59
Trunk lid opener, electric	BL-56 , BL-121
Trunk lid trim	EI-59
Trunk room lamp	LT-148
Trunk room trim	EI-59
Turbine revolution sensor	AT-160
TURN - Wiring diagram	LT-60
Turn signal lamp	LT-56
Two trip detection logic	EC-49

V

VACS (voice activated control system)	DI-164
Vacuum cut valve	EC-584
Vacuum cut valve bypass valve	EC-578 , EC-584 , EC-690
Vacuum hose drawing (Engine control)	EC-24
Valve clearance	EM-52
Valve guide	EM-68
Valve lifter	EM-50
Valve seat	EM-69
Valve spring	EM-71
Vanity mirror lamp	LT-148
Variable induction air control system (VIAS) ...	EC-635
VDC -Wiring diagram	BRC-15

Vehicle security (theft warning) system	BL-155
Vehicle speed sensor (VSS)	EC-394 , EC-599
VEHSEC - Wiring diagram	BL-160
VENT/V - Wiring diagram ...	EC-345 , EC-548 , EC-555
VIAS - Wiring diagram	EC-637
Vice activated control system (VACS)	DI-164
VOICE - Wiring diagram	DI-167

W

W/ANT - Wiring diagram	AV-43
WARN - Wiring diagram	DI-32
Warning lamps	DI-28
Water control valve	CO-24
Water pump	CO-22
Water temperature gauge	DI-7
Wheel alignment (rear)	RSU-5
Wheel balance	WT-5 , MA-22
Wheel hub (front)	FAX-4
Wheel hub (rear)	RAX-5
WINDOW - Wiring diagram	GW-19
Window antenna	AV-44
Window, door	GW-52 , GW-55
Window, rear	GW-14 , EI-24
Windshield	GW-11
Windshield wiper - See Front wiper	WW-3
WIPER - Wiring diagram	WW-7
Wiper, front	WW-3
Wiring Diagram (Cell code) list	PG-46
Wiring diagrams	GI-14
WT-T/WARN - Wiring diagram	WT-9