

# ALPHABETICAL INDEX

## SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

**IDX**

# ALPHABETICAL INDEX

## A

ABS (anti-lock brake system) .....	BR-25
ABS actuator .....	BR-29
ABS circuit diagram .....	BR-48
ABS component parts and connector locations.....	BR-45
ABS control unit .....	BR-29
ABS hydraulic circuit .....	BR-25
ABS input/output signal inspection .....	BR-67
ABS self-diagnosis.....	BR-36, 40
ABS symptom chart .....	BR-38
ABS system components.....	BR-26
ABS trouble diagnoses .....	BR-35
ABS wheel sensors.....	BR-28
ABS wiring diagram .....	BR-30
A/C air flow.....	HA-11
A/C circuit diagram.....	HA-38
A/C component layout.....	HA-10
A/C compressor clutch removal and installation.....	HA-71
A/C compressor description.....	HA-13
A/C compressor mounting .....	HA-69
A/C compressor precaution .....	HA-4
A/C compressor special service tool .....	HA-4
A/C control linkage adjustment.....	HA-60
A/C control operation .....	HA-12
A/C diagnostic work flow.....	HA-19
A/C harness layout.....	HA-36
A/C HFC134a (R134a) system precaution.....	HA-2
A/C HFC134a (R134a) system service procedure.....	HA-62
A/C HFC134a (R134a) system service tools .....	HA-5
A/C HFC134a system service equip- ment precaution.....	HA-7
A/C lubricant (R134a) .....	HA-64
A/C operational check.....	HA-20
A/C performance chart.....	HA-32
A/C performance test diagnoses .....	HA-30
A/C push control .....	HA-70
A/C relay .....	HA-59
A/C service data specification.....	HA-75
A/C symptom chart .....	HA-22
A/C trouble diagnoses.....	HA-18
A/C wiring diagram.....	HA-39
Accelerator control system .....	FE-2
Accelerator wire adjustment.....	FE-2
Air bag.....	RS-5
Air bag disposal .....	RS-13
Air bag module.....	RS-9
Air bag precautions .....	GI-2
Air bag removal and installation .....	RS-9
Air bleeding for brake system.....	BR-6
Air cleaner filter replacement.....	MA-13
Air conditioner cut control .....	EC-17
Air flow meter - See Mass air flow sensor.....	EC-105

Air mix door control linkage adjustment.....	HA-60
Air mix. door motor .....	HA-60
Air spoiler, front - See Front air spoiler.....	BT-37
Air spoiler, rear - See Rear air spoiler.....	BT-37
Alternator .....	EL-38
Anti-freeze coolant mixture ratio.....	MA-9
ASCD (automatic speed control device) .....	EL-138
A/T control DTC:P0600.....	EC-229
AT control unit .....	AT-97
AT diagnosis communication line.....	EC-281
AT fluid temperature sensor .....	AT-101
AT removal and installation.....	AT-122
AT self-diagnoses.....	AT-41
AT shift lock system.....	AT-112
AT trouble diagnoses .....	AT-13
Audio.....	EL-121
Audio and A/C control removal and installation - See Instrument panel.....	BT-14
Automatic transmission fluid replacement.....	MA-18
Automatic transmission number.....	GI-35
Axle housing (rear).....	RA-8

## B

Back-up lamp.....	EL-56
Back-up lamp switch (MT) .....	MT-5
Ball joint front axle .....	FA-15
Battery.....	EL-23
Baulk ring (MT) .....	MT-9
Belt inspection (drive belt).....	MA-10
Bi-level door control linkage adjustment.....	HA-61
Blower motor .....	HA-58
Blower resistor .....	HA-58
Board-on lift.....	GI-37
Body alignment.....	BT-38
Boring/horning cylinder block .....	EM-39
Brake booster .....	BR-11
Brake control valve (Proportioning valve).....	BR-4
Brake fluid change .....	BR-5
Brake fluid level .....	MA-19
Brake fluid level and line check.....	BR-5
Brake hydraulic line.....	BR-3
Brake inspection .....	MA-20
Brake lines and cables inspection.....	MA-19
Brake master cylinder .....	BR-8
Brake pedal .....	BR-7
Bumper, front - See Front bumper .....	BT-6
Bumper, rear - See Rear bumper.....	BT-8

## C

Camshaft inspection .....	EM-25
Camshaft position sensor (CMPS) .....	EC-173
Camshaft position sensor inspection.....	EC-176
Center bearing assembly (propeller shaft).....	PD-8

# ALPHABETICAL INDEX

Center bearing disassembly (propeller shaft).....	PD-8
Charging system.....	EL-34
Chassis and body maintenance .....	MA-17
Cigarette lighter.....	EL-112
Circuit breaker .....	EL-19
Clearance lamp.....	EL-54
Clock .....	EL-112
Closed loop control .....	EC-141
Closed throttle position switch .....	EC-225
Clutch cover.....	CL-10
Clutch disc.....	CL-10
Clutch fluid level .....	MA-17
Clutch master cylinder.....	CL-6
Clutch operating cylinder.....	CL-7
Clutch pedal.....	CL-4
Clutch pedal free play .....	CL-4
Clutch pedal height.....	CL-4
Clutch release bearing .....	CL-8
Clutch withdrawal lever .....	CL-8
Coil spring (front) .....	FA-13
Coil spring (rear) .....	RA-20
Combination lamp, front, removal and installation .....	BT-6
Combination lamp, rear, removal and installation .....	BT-22
Combination meter .....	EL-78
Combination meter removal and installation - See Instrument panel.....	BT-14
Combination switch.....	EL-39
Compression pressure.....	EM-9
Compressor clutch removal and installation.....	HA-71
Compressor description .....	HA-13
Compressor mounting.....	HA-69
Compressor precaution.....	HA-4
Compressor special service tool .....	HA-4
Connecting rod .....	EM-38
Connecting rod bearing clearance .....	EM-41
Connecting rod bushing clearance.....	EM-42
Console box - See Instrument panel.....	BT-14
CONSULT for ABS.....	BR-39
CONSULT general information.....	GI-32
Control lever (MT) .....	MT-10
Control valve (AT) .....	AT-145
Converter housing installation.....	AT-124
Coolant replacement.....	MA-11
Cooling circuit (engine).....	LC-7
Cooling fan .....	LC-13
Cooling fan control .....	EC-284
Cooling fan motor inspection .....	EC-295
Cooling fan relay inspection.....	EC-295
Counter gear (MT) .....	MT-9
Coupling sleeve (MT).....	MT-9
Crank angle sensor built into distributor - See Camshaft position sensor.....	EC-173
Crankshaft assembly .....	EM-44
Crankshaft bearing clearance.....	EM-40
Crankshaft inspection .....	EM-39
Crankshaft position sensor (OBD) DTC0802, P0335.....	EC-169

Crankshaft position sensor (OBD) DTC0802, P0335 inspection .....	EC-172
Cylinder block .....	EM-35
Cylinder block boring .....	EM-39
Cylinder head.....	EM-23
Cylinder head bolt tightening.....	EM-19

## D

Daytime running light - See Daytime light system.....	EL-45
Detonation sensor - See Knock sensor.....	EC-166
Differential carrier assembly (except FF).....	PD-26
Differential carrier disassembly (except FF).....	PD-14
Differential gear oil replacement.....	MA-19
Dimensions .....	GI-36
Distributor ignition (DI) system.....	EC-16
Dome light - See Interior lamp .....	EL-74
Door glass.....	BT-10
Door glass Fitting Adjustment.....	BT-10
Door lock.....	BT-10
Door mirror.....	BT-36
Door trim .....	BT-19
Door, front - See Front door.....	BT-10
Drive pinion diff. inspection (except FF) .....	PD-18
Drive plate runout .....	EM-43
Drive shaft (rear) .....	RA-12
Dropping resistor (AT) .....	AT-103

## E

ECCS basic inspection .....	EC-62
ECCS component parts location.....	EC-10
ECCS on board diagnostic system.....	EC-32
ECCS symptom matrix chart .....	EC-84, 87
ECCS system diagram and chart .....	EC-9
ECM input/output signal inspection .....	EC-95
EGR control (EGRC) - BPT valve.....	EC-185
EGR control (EGRC) - solenoid valve .....	EC-254
EGR valve & EVAP canister purge control solenoid valve inspection .....	EC-257
EGRC - BPT valve inspection.....	EC-186
EGRC-solenoid valve inspection .....	EC-257
Electric sun roof.....	EL-135
Electrical units location .....	EL-214
Engine compartment.....	BT-38
Engine coolant temperature sensor (ECTS).....	EC-122
Engine coolant temperature sensor (ECTS) P0115, DTC0103.....	EC-122
Engine coolant temperature sensor (ECTS) P0115, DTC0103 inspection .....	EC-125
Engine coolant temperature sensor (ECTS) P0115, DTC0103 inspection .....	EC-135
Engine coolant temperature sensor (ECTS) P0125, DTC0908.....	EC-131

# ALPHABETICAL INDEX

Engine oil filter replacement.....	MA-14
Engine oil precautions.....	GI-5
Engine oil replacement.....	MA-14
Engine outer component parts.....	EM-7
Engine removal.....	EM-33
Engine room - See Engine compartment.....	BT-38
Engine serial number.....	GI-35
EVAP canister.....	EC-19
EVAP canister inspection.....	EC-19
EVAP canister purge control.....	EC-19
EVAP canister purge control solenoid valve.....	EC-199
EVAP canister purge control valve.....	EC-199
EVAP canister purge control valve inspection.....	EC-206
EVAP canister purge volume control valve.....	EC-268
EVAP canister vent control valve.....	EC-207
EVAP control system (small leak) diagnosis.....	EC-190
EVAP control system pressure sensor.....	EC-110, 212
EVAP control system purge flow moni- toring diagnosis.....	EC-274
EVAP shut valve.....	EC-20
EVAP vapor lines inspection.....	MA-16
Evaporative emission (EVAP) system.....	EC-19
Exhaust gas recirculation (EGR) system.....	EC-177
Exhaust gas recirculation (EGR) valve.....	EC-177
Exhaust system.....	FE-7
Exhaust system inspection.....	MA-17
Exterior.....	BT-22
Exterior lamp.....	EL-54

## F

Fan switch.....	HA-58
Fifth position switch.....	EC-316
Final drive disassembly (except FF).....	PD-14
Final drive pre-inspection (except FF).....	PD-14
Floor trim.....	BT-17
Fluid temperature sensor (AT).....	AT-101
Fluids.....	MA-8
Flywheel runout.....	EM-43
Fog lamp, front, removal and installation.....	BT-6
Fork rod (MT).....	MT-10
Forward clutch.....	AT-164
Front air spoiler.....	BT-37
Front axle.....	FA-8
Front bumper.....	BT-6
Front combination lamp removal and installation.....	BT-6
Front disc brake.....	BR-13
Front door.....	BT-10
Front fog lamp.....	EL-58
Front fog lamp removal and installation.....	BT-6
Front oxygen sensor (O2S).....	EC-136
Front passenger air bag.....	RS-10

Front seat.....	BT-27
Front seat belt.....	RS-3
Front suspension.....	FA-12
Front washer.....	EL-103
Front wiper.....	EL-103
Fuel cut control (at no load & high engine speed).....	EC-18
Fuel filler lid.....	BT-8
Fuel filter replacement.....	MA-13
Fuel gauge.....	EL-79, 80
Fuel injection system.....	EC-150, 155
Fuel line inspection.....	MA-12
Fuel precautions.....	GI-6
Fuel pressure check.....	EC-24
Fuel pressure release.....	EC-24
Fuel pump.....	EC-301
Fuel pump control.....	EC-301
Fuel pump inspection.....	EC-305
Fuel pump relay inspection.....	EC-305
Fuel system.....	FE-3
Fuse.....	EL-19
Fusible link.....	EL-19

## G

Garage jack and safety stand.....	GI-38
Gauges.....	EL-77
Gears (MT).....	MT-9
Glass.....	BT-10
Grease.....	MA-8
Grille - See Exterior.....	BT-22
Ground distribution.....	EL-20

## H

Harness connector.....	EL-5
Harness layout.....	EL-217
Hazard warning lamp.....	EL-61
Headlamp.....	EL-42
Headlamp removal and installation.....	BT-6
Heated oxygen sensor (HO2S) heater (rear).....	EC-149
Heated oxygen sensor (rear).....	EC-145
Height (Dimensions).....	GI-36
HFC134a (R134a) system precaution.....	HA-2
HFC134a (R134a) system service procedure.....	HA-62
HFC134a (R134a) system service tools.....	HA-5
HFC134a system service equipment precaution.....	HA-7
High clutch.....	AT-162
Hood.....	BT-6
Horn.....	EL-112
How to follow flow chart in trouble diagnoses.....	GI-29
How to perform efficient diagnosis for an electrical incident.....	GI-18
How to read wiring diagrams.....	GI-9

# ALPHABETICAL INDEX

How to use this manual ..... GI-7

## I

IACV - air regulator inspection ..... EC-311  
 IACV - FICD solenoid valve inspection ..... EC-315  
 IACV-AAC valve inspection ..... EC-224  
 IACV-FICD solenoid valve ..... EC-312  
 Identification plate ..... GI-35  
 Idle air control valve (IACV) - air  
   regulator ..... EC-309  
 Idle mixture ratio inspection ..... EC-26  
 Idle speed inspection ..... EC-26  
 Ignition coil inspection ..... EC-249  
 Ignition timing inspection ..... EC-26  
 Illumination ..... EL-69  
 Inhibitor switch ..... AT-102  
 Injector inspection ..... EC-298  
 Injector removal and installation ..... EC-25  
 Instrument panel ..... BT-14  
 Intake air temperature sensor ..... EC-117  
 Intake air temperature sensor  
   inspection ..... EC-121  
 Intake door control linkage adjustment ..... HA-61  
 Interior ..... BT-17  
 Interior lamp ..... EL-69

## J

Jacking points ..... GI-38

## K

Keyless entry system - See Multi-re-  
   mote control system ..... EL-173  
 Knock sensor (KS) ..... EC-166  
 Knock sensor (KS) inspection ..... EC-168  
 Knuckle spindle ..... FA-8

## L

Length (Dimensions) ..... GI-36  
 License lamp ..... EL-54  
 Line pressure solenoid valve ..... AT-101  
 Line pressure test (AT) ..... AT-107  
 Location of electrical units ..... EL-214  
 Lock, door - See Door lock ..... BT-10  
 Low and reverse brake ..... AT-168  
 Lower ball joint (rear susp.) ..... RA-21  
 Lubricant (R134a) A/C ..... HA-64  
 Lubricants ..... MA-8  
 Lubrication circuit (engine) ..... LC-4  
 Lubrication-locks, hinges and hood  
   latches ..... MA-22

## M

Magnet clutch ..... HA-71  
 Main drive gear (MT) ..... MT-9  
 Mainshaft (MT) ..... MT-9  
 Maintenance (engine) ..... MA-10  
 Maintenance ..... MA-1  
 Maintenance general ..... MA-3  
 Maintenance periodic ..... MA-5  
 Maintenance schedule (1) ..... MA-6  
 Maintenance schedule (2) ..... MA-7  
 Manual steering gear ..... ST-13  
 Manual transmission number ..... GI-35  
 Manual transmission oil replacement ..... MA-17  
 MAP/BARO switch solenoid valve ..... EC-239  
 Mass air flow sensor (MAFS) ..... EC-105  
 Mass air flow sensor inspection ..... EC-109  
 Master cylinder (brake) ..... BR-8  
 Master cylinder (clutch) ..... CL-6  
 Meter and gauges ..... EL-77  
 Mirror, door - See Door mirror ..... BT-36  
 Mirror, out side - See Out side mirror ..... BT-36  
 Misfire ..... EC-162  
 Mode door control linkage adjustment ..... HA-60  
 Model variation ..... GI-33  
 Molding - See Exterior ..... BT-22  
 MT overhaul ..... MT-8  
 MT removal and installation ..... MT-6  
 Mud guard - See Exterior ..... BT-22  
 Multi link/lower ball joint (rear) ..... RA-21  
 Multi-remote control system ..... EL-173  
 Multiport fuel injection (MFI) system ..... EC-14  
 Multiport fuel injection precautions ..... GI-4

## N

Neutral position switch (MT) ..... MT-5

## O

Oil pan (engine) ..... EM-10  
 Oil pressure (engine) ..... LC-4  
 Oil pressure relief valve (engine) ..... LC-6  
 Oil pump (AT) ..... AT-141  
 Oil pump (engine) ..... LC-5  
 Oil pump regulator valve (engine) ..... LC-6  
 Oil seal replacement (front of final  
   drive) ..... PD-9  
 Oil seal replacement (side of final  
   drive) ..... PD-9  
 Operating cylinder (clutch) ..... CL-7  
 Out side mirror ..... BT-36  
 Overdrive control switch ..... AT-102  
 Overrun clutch ..... AT-164  
 Overrun clutch solenoid valve ..... AT-101  
 Oversize piston ..... EM-39

GI  
 MA  
 EM  
 LC  
 EC  
 FE  
 CL  
 MT  
 AT  
 PD  
 FA  
 RA  
 BR  
 ST  
 RS  
 BT  
 HA  
 EL  
 IDX

# ALPHABETICAL INDEX

Oxygen sensor (O2S) (front) ..... EC-136

## P

Park/Neutral position switch..... EC-234  
 Parking brake control ..... BR-23  
 Pilot bushing replacement ..... EM-45  
 Pinion bearing preload diff. (except FF) ..... PD-20  
 Pinion gear height diff. (except FF) ..... PD-20  
 Piston assembly..... EM-43  
 Piston pin inspection..... EM-37  
 Piston ring inspection ..... EM-37  
 Piston to bore clearance..... EM-38  
 Power antenna..... EL-121  
 Power door lock..... EL-167  
 Power door mirror..... EL-136  
 Power steering fluid level..... MA-20, ST-6  
 Power steering hydraulic pressure ..... ST-8  
 Power steering oil pressure switch ..... EC-306  
 Power steering oil pressure switch  
 inspection..... EC-308  
 Power steering oil pump..... ST-23  
 Power steering system bleeding ..... ST-7  
 Power supply routing..... EL-8  
 Power transistor & ignition coil ..... EC-245  
 Power transistor inspection..... EC-249  
 Power window..... EL-162  
 Precautions (General) ..... GI-2  
 Pressure plate - See Clutch cover ..... CL-10  
 Pressure test (AT) ..... AT-107  
 Propeller shaft ..... PD-5  
 Propeller shaft on vehicle service..... PD-6  
 Propeller shaft vibration ..... PD-6

## R

Rack retainer adjustment..... ST-6  
 Radiator ..... LC-10  
 Radio - See Audio ..... EL-121  
 Rear air spoiler ..... BT-37  
 Rear axle (disc brake type)..... RA-8  
 Rear bumper..... BT-8  
 Rear combination lamp removal and  
 installation ..... BT-22  
 Rear disc brake..... BR-16  
 Rear heated oxygen sensor (HO2S) ..... EC-145  
 Rear heated oxygen sensor (HO2S)  
 heater ..... EC-149  
 Rear seat ..... BT-29  
 Rear seat belt..... RS-4  
 Rear suspension ..... RA-18  
 Rear window ..... BT-34  
 Rear window defogger..... EL-113  
 Rear window signal..... EC-318  
 Refrigerant connection precaution ..... HA-3  
 Refrigerant general precaution ..... HA-2  
 Refrigerant lines ..... HA-66  
 Refrigeration cycle ..... HA-9

Release bearing (clutch) ..... CL-8  
 Resistor inspection..... EC-249  
 Reverse clutch..... AT-158  
 Reverse gear (MT) ..... MT-9  
 Reverse idler shaft (MT) ..... MT-9  
 Reverse lamp switch (MT) - See  
 Back-up lamp switch (MT)..... MT-5  
 Revolution sensor (AT)..... AT-103  
 Ring gear diff. Inspection (except FF) ..... PD-18  
 Road wheel size..... GI-36  
 Roof trim ..... BT-20

## S

SAE J1930 terminology list..... GI-42  
 Seal - See Exterior ..... BT-22  
 Seat belt inspection ..... MA-22  
 Seat belt, front - See Front seat belt ..... RS-3  
 Seat belt, rear - See Rear seat belt ..... RS-4  
 Seat, front - See Front seat..... BT-27  
 Seat, rear - See Rear seat ..... BT-29  
 Shift control (MT) ..... MT-10  
 Shift fork (MT) ..... MT-10  
 Shift lock system ..... AT-112  
 Shift schedule..... AT-33  
 Shift solenoid valve (AT) ..... AT-101  
 Shock absorber (rear)..... RA-20  
 Side bearing preload diff. (except FF) ..... PD-19  
 Side trim..... BT-17  
 Side window - See Rear side window..... BT-35  
 SMJ (super multiple junction)..... Foldout  
 Spark plug replacement..... MA-15  
 Speedometer ..... EL-79  
 Spiral cable ..... RS-9  
 Spot lamp..... EL-74  
 Spring (Wheelarch) height..... FA-5  
 SRS - See Supplemental Restraint  
 System..... RS-5  
 SRS Trouble diagnoses ..... RS-17  
 SRS Wiring diagram ..... RS-18  
 Stabilizer bar (front) ..... FA-14  
 Stabilizer bar (rear) ..... RA-22  
 Stall test (AT)..... AT-104  
 Standardized relay ..... EL-6  
 Starter ..... EL-33  
 Starting system ..... EL-27  
 Steering gear and linkage inspection ..... MA-20  
 Steering gear oil level..... MA-20  
 Steering linkage ..... ST-13  
 Steering switch ..... EL-41  
 Steering wheel and column ..... ST-9  
 Steering wheel play ..... ST-5  
 Steering wheel turning force..... ST-7  
 Stop lamp..... EL-54  
 Striking rod (MT) ..... MT-10  
 Strut (front)..... FA-13  
 Sun roof, electric - See Electric sun  
 roof ..... EL-135  
 Sunroof ..... BT-30  
 Supplemental Restraint System..... RS-5

# ALPHABETICAL INDEX

Symbols and abbreviations ..... GI-8  
 Synchronizer (MT)..... MT-9

## T

Tachometer ..... EL-79  
 Tail lamp..... EL-54  
 Tank fuel temperature sensor ..... EC-159  
 Tension rod (front) ..... FA-14  
 Theft warning system ..... EL-186  
 Thermo control amp..... HA-58  
 Thermostat..... LC-9  
 Three way catalyst ..... EC-187  
 Three way catalyst precautions ..... GI-5  
 Throttle position sensor (TPS) ..... EC-126  
 Throttle position sensor inspection ..... EC-62, 130  
 Throttle position switch..... AT-103  
 Throwout bearing - See Clutch release bearing ..... CL-8  
 Thrust washer selection diff. (except FF)..... PD-26  
 Tie-rod..... ST-17  
 Tightening torque of standard bolts ..... GI-41  
 Timing chain..... EM-12  
 Tire rotation..... MA-19  
 Tire size ..... GI-36  
 Tooth contact diff. (except FF) ..... PD-25  
 Torque converter clutch solenoid valve..... AT-101  
 Torque converter installation ..... AT-124  
 Tow truck towing..... GI-39  
 Towing point ..... GI-40  
 Transmission case (MT)..... MT-8  
 Transmission serial number ..... GI-35  
 Transverse link (front)..... FA-15  
 Tread-FR&RR (Dimensions) ..... GI-36  
 Trim ..... BT-17  
 Triple pressure switch ..... HA-9, 59  
 Trunk lid ..... BT-8  
 Trunk lid opener - See Trunk lid..... BT-8  
 Trunk lid trim ..... BT-21  
 Trunk room lamp..... EL-74  
 Trunk room trim ..... BT-21  
 Turn signal lamp ..... EL-61  
 Two-pole lift ..... GI-39

## U

Under body ..... BT-40

## V

Vacuum cut valve ..... EC-267  
 Vacuum cut valve bypass valve..... EC-263  
 Vacuum hose (brake system) ..... BR-12  
 Vacuum hose drawing (ECCS) ..... EC-12  
 Valve clearance..... EM-30  
 Valve guide inspection ..... EM-26  
 Valve seat inspection ..... EM-28  
 Valve spring inspection ..... EM-29  
 Vehicle identification number ..... GI-34  
 Vehicle speed sensor (VSS) ..... EC-216  
 Viscosity number (SAE)..... MA-8

## W

Warning buzzer ..... EL-84  
 Warning lamps ..... EL-84  
 Water pump ..... LC-8  
 Water temperature gauge..... EL-79, 80  
 Weatherstrip - See Exterior ..... BT-22  
 Wheel alignment (front) ..... FA-6  
 Wheel alignment (rear) ..... RA-5  
 Wheel balance ..... MA-19  
 Wheel bearing (front axle) ..... FA-5  
 Wheel bearing (rear) ..... RA-5  
 Wheel hub (front) ..... FA-8  
 Wheel hub (rear) ..... RA-8  
 Wheel hub and steering knuckle ..... FA-8  
 Wheel sensors (ABS)..... BR-28  
 Wheel size ..... GI-36  
 Wheelarch height..... FA-5  
 Wheelbase (Dimensions) ..... GI-36  
 Wide open & closed throttle position (CTP) switch ..... EC-126  
 Width (Dimensions) ..... GI-36  
 Window, door ..... BT-10  
 Window, rear - See Rear window..... BT-34  
 Window, side - See Rear side window..... BT-35  
 Windshield ..... BT-34  
 Windshield washer - See Front washer ..... EL-103  
 Windshield wiper - See Front wiper ..... EL-103  
 Wiper and washer..... EL-103  
 Withdrawal lever (clutch) ..... CL-8

GI  
 MA  
 EM  
 LC  
 EC  
 FE  
 CL  
 MT  
 AT  
 PD  
 FA  
 RA  
 BR  
 ST  
 RS  
 BT  
 HA  
 EL