




# NISSAN 300ZX (Z32 Series) E. C. C. S. WIRING DIAGRAM

101	11
102	12
103	13
104	14
105	15
106	16
107	17
108	18
109	19
110	20
111	21
112	22
113	23
114	24
115	25
116	26
117	27
118	28
119	29
120	30
121	31
122	32
123	33
124	34
125	35
126	36
127	37
128	38
129	39
130	40
131	41
132	42
133	43
134	44
135	45


101	11
102	12
103	13
104	14
105	15
106	16
107	17
108	18
109	19
110	20
111	21
112	22
113	23
114	24
115	25
116	26
117	27
118	28
119	29
120	30
121	31
122	32
123	33
124	34
125	35
126	36
127	37
128	38
129	39
130	40
131	41
132	42
133	43
134	44
135	45

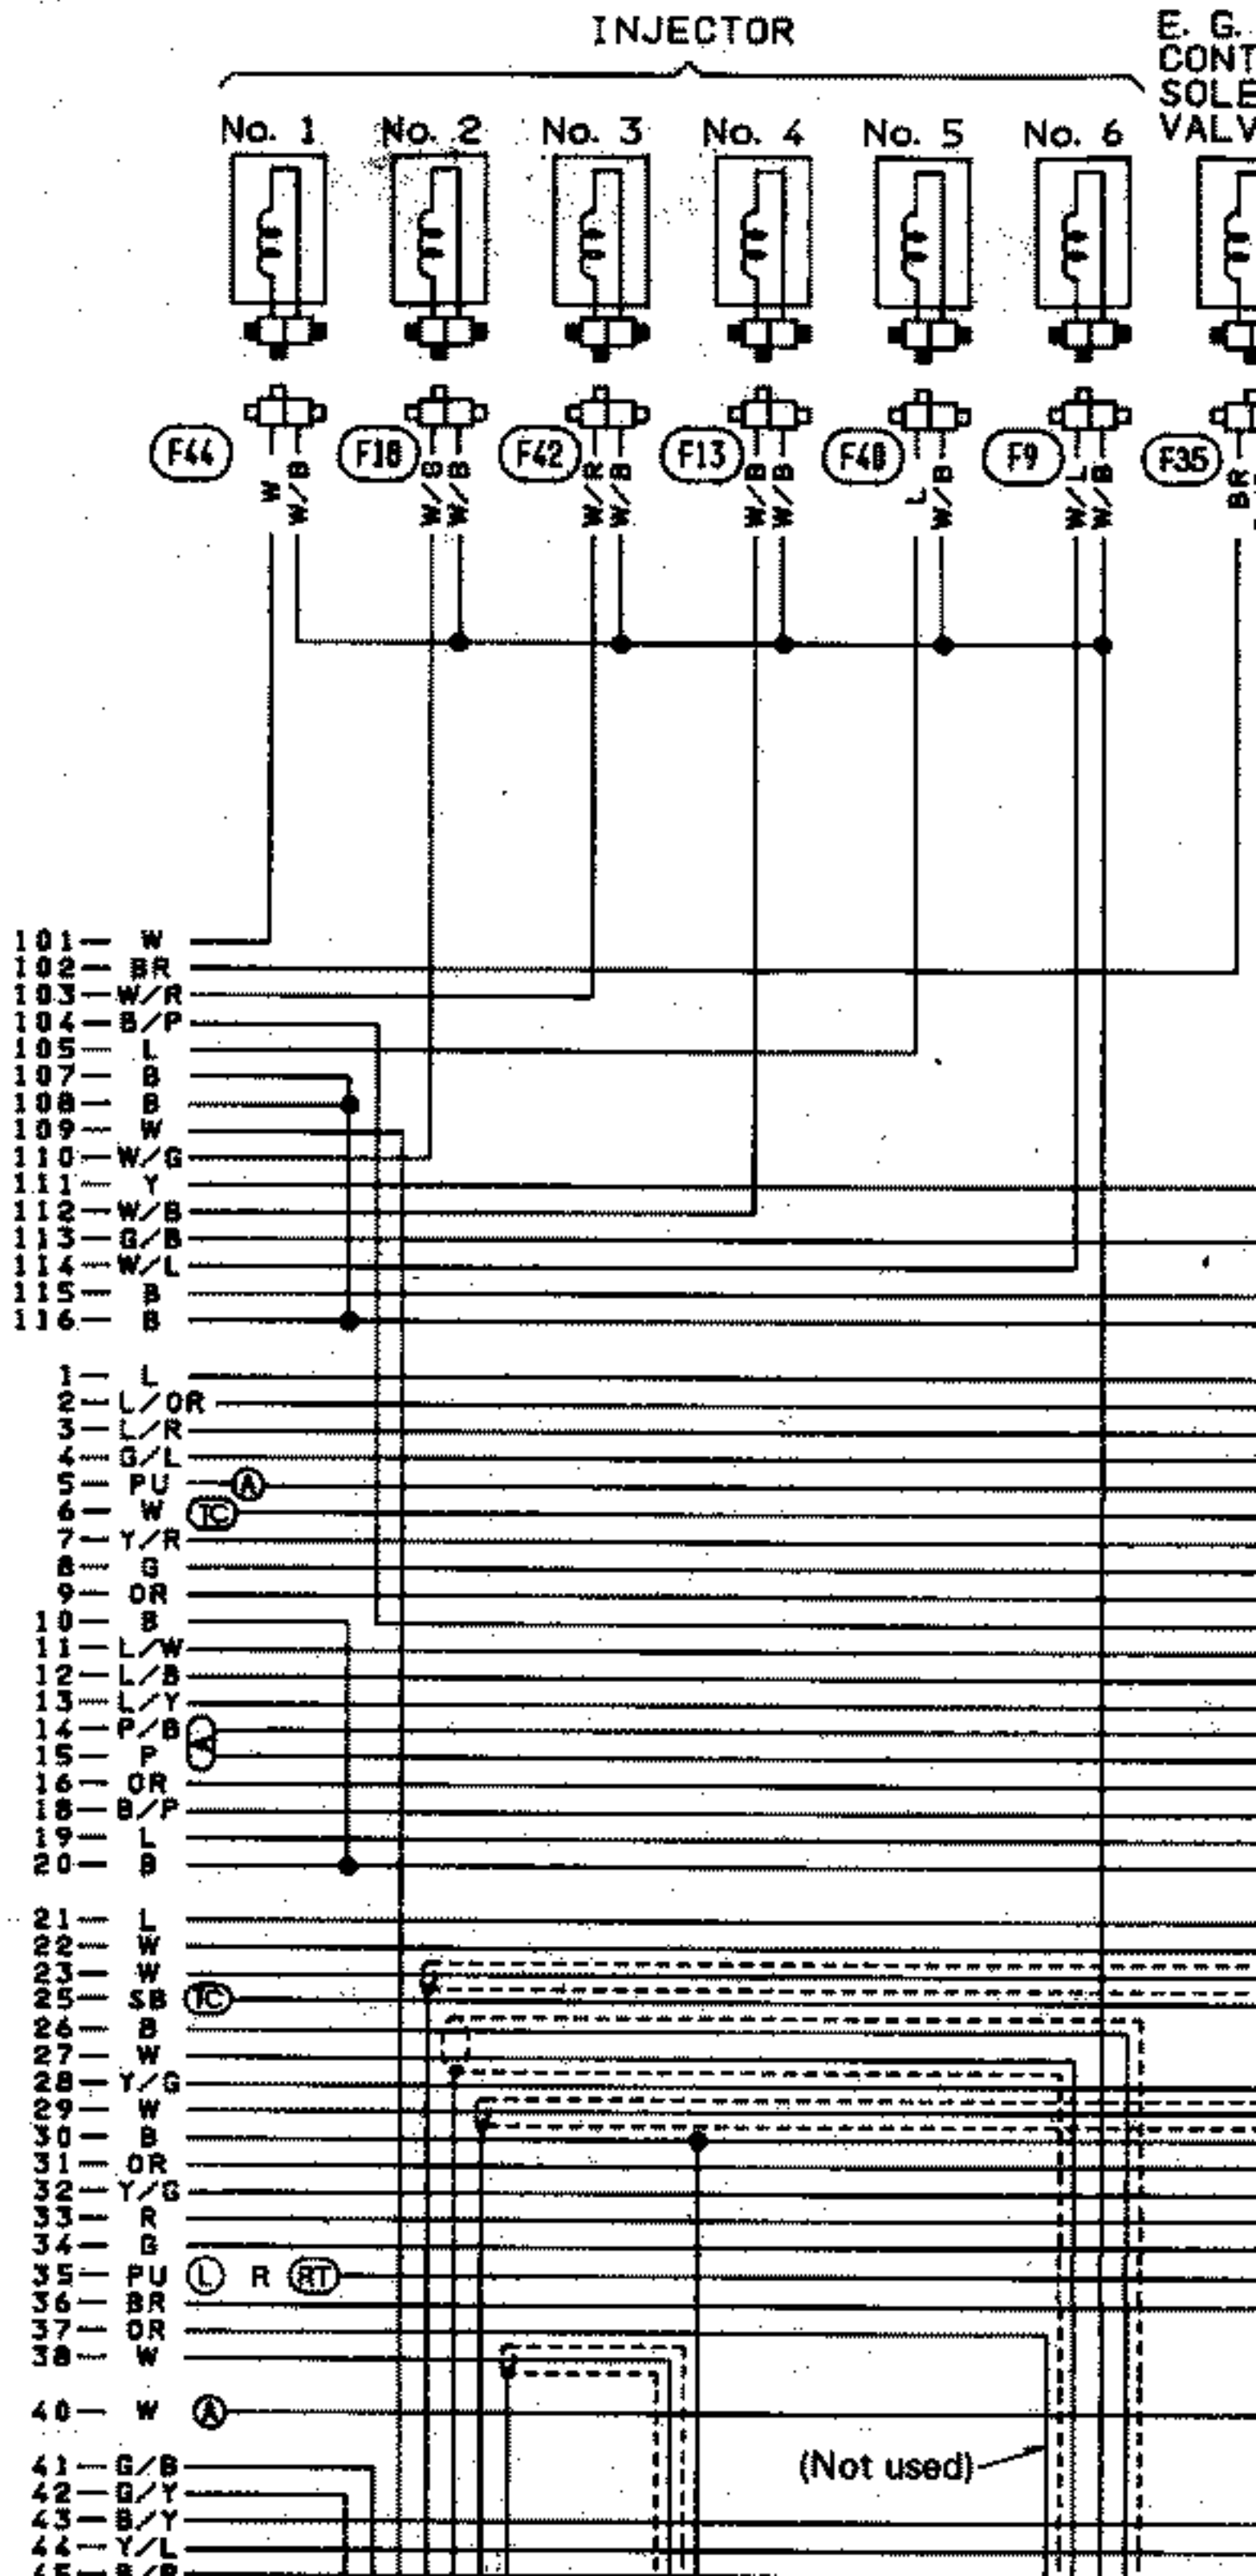

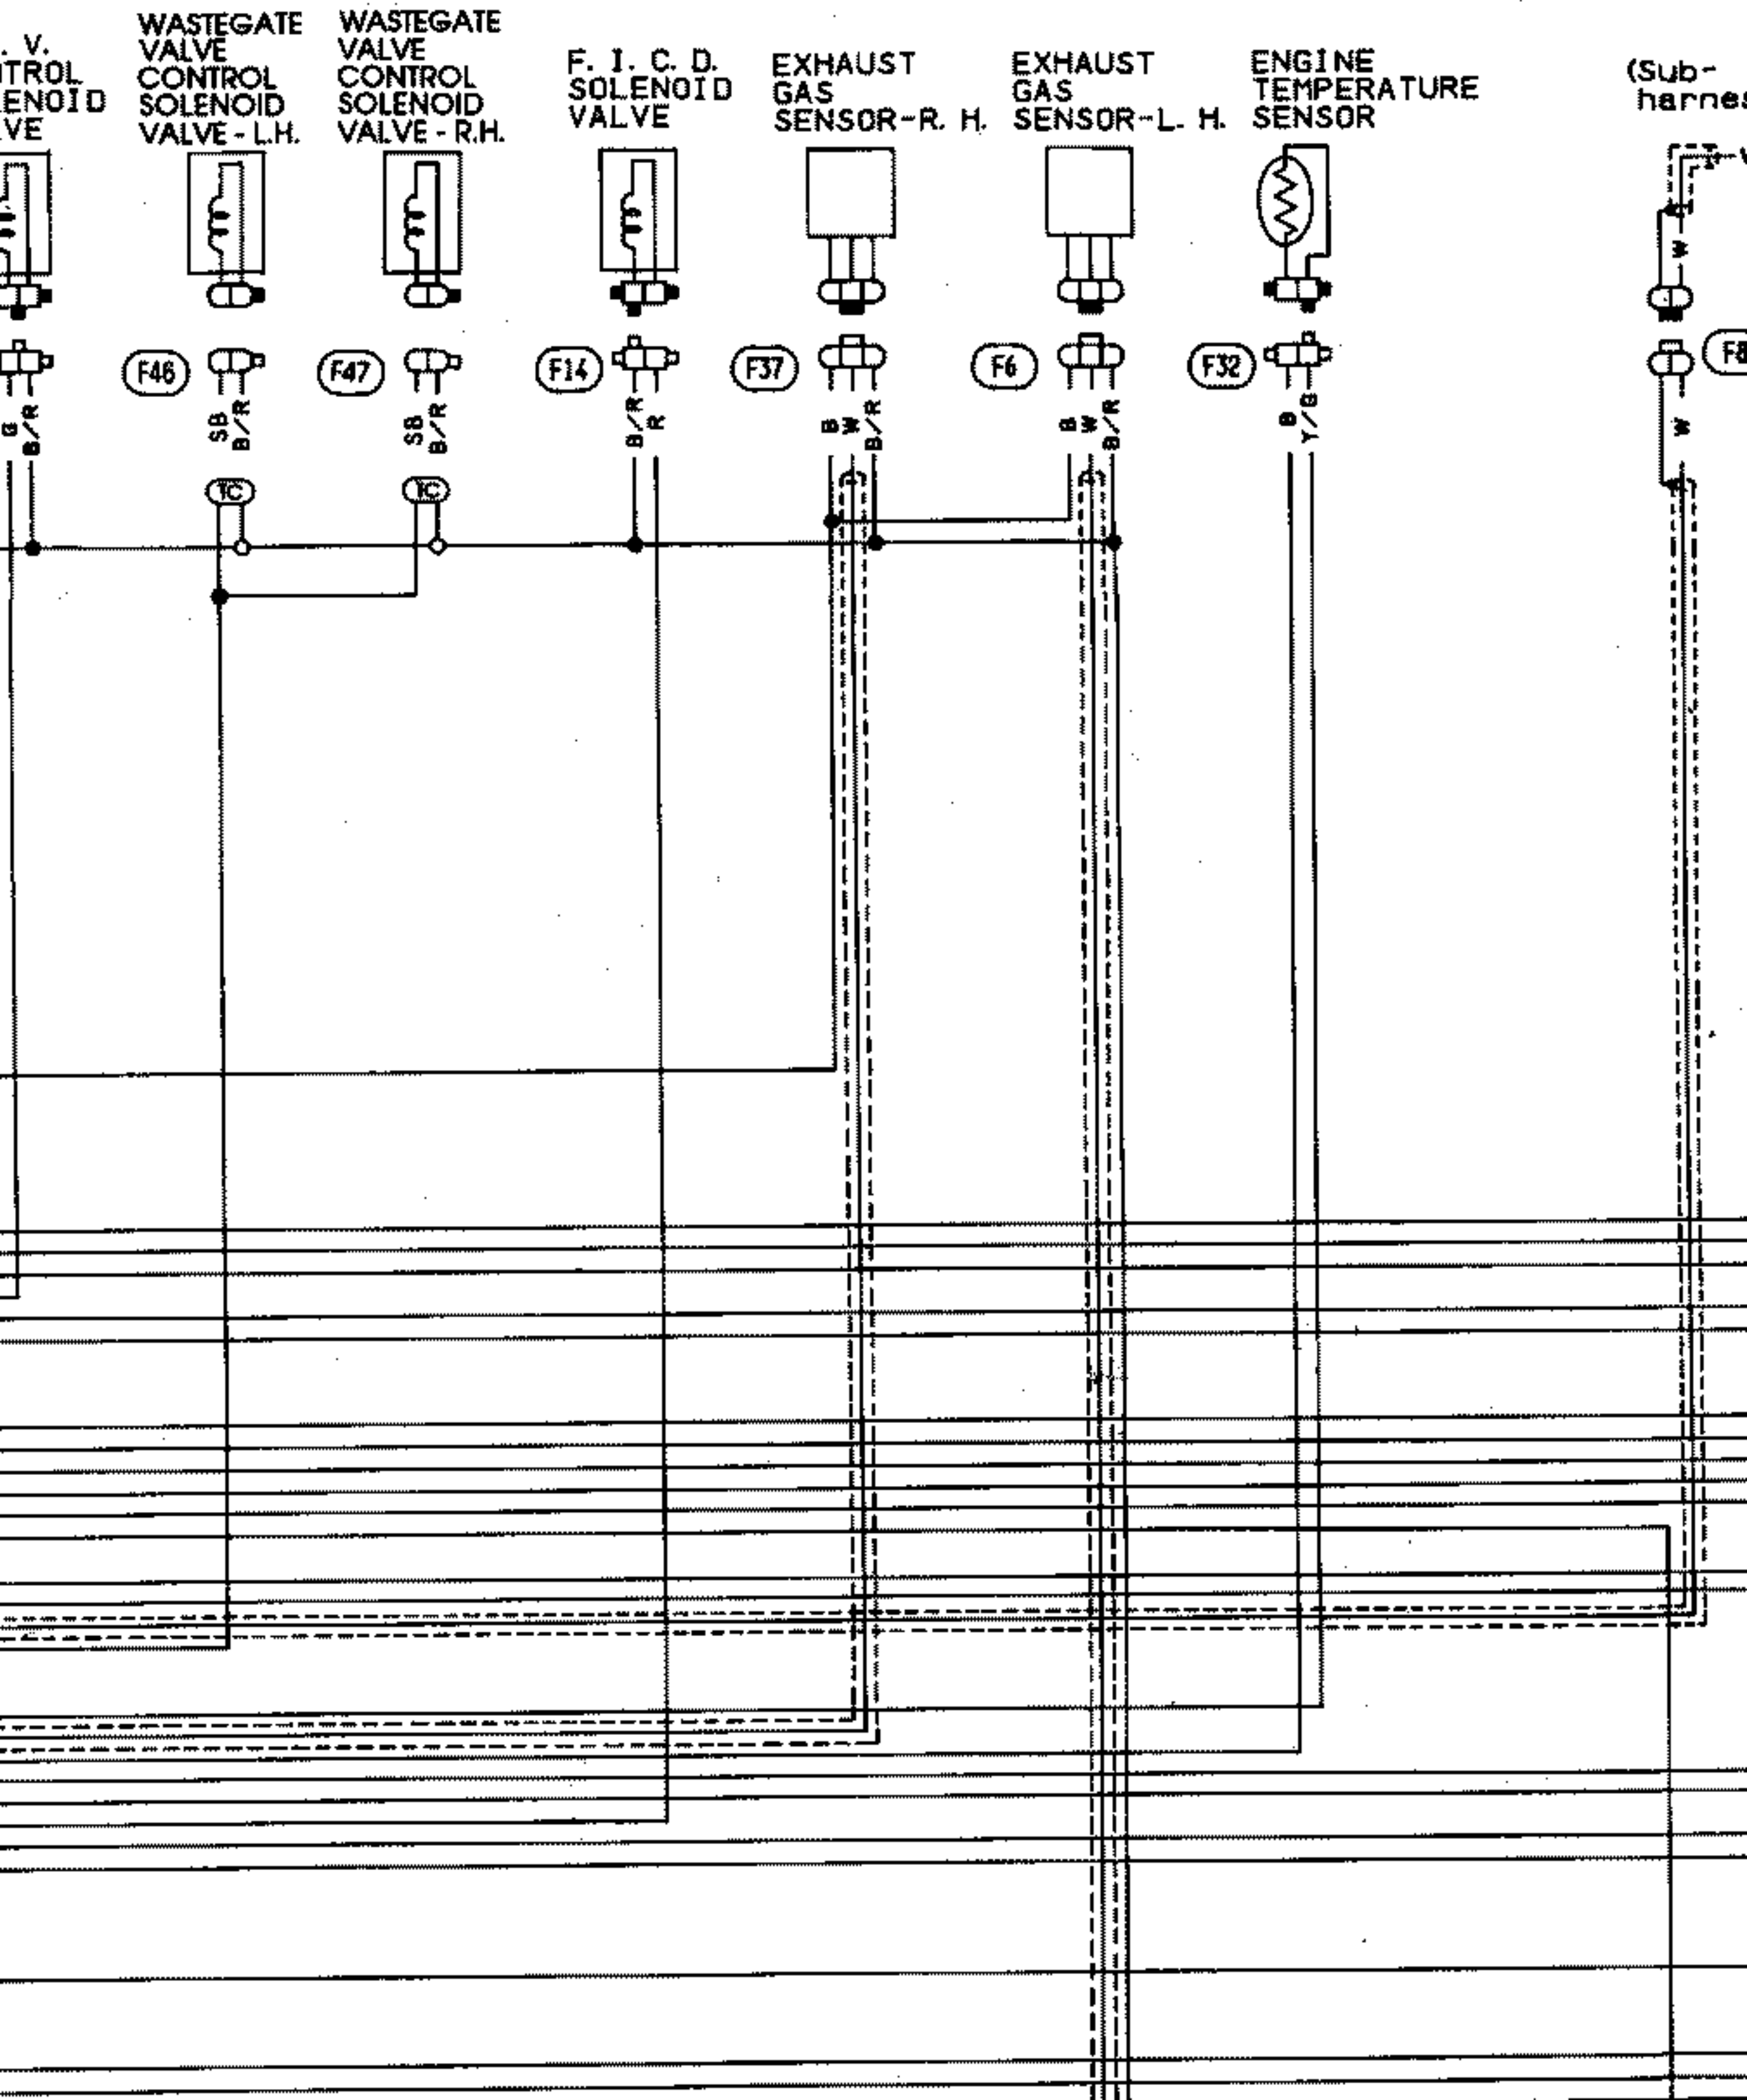

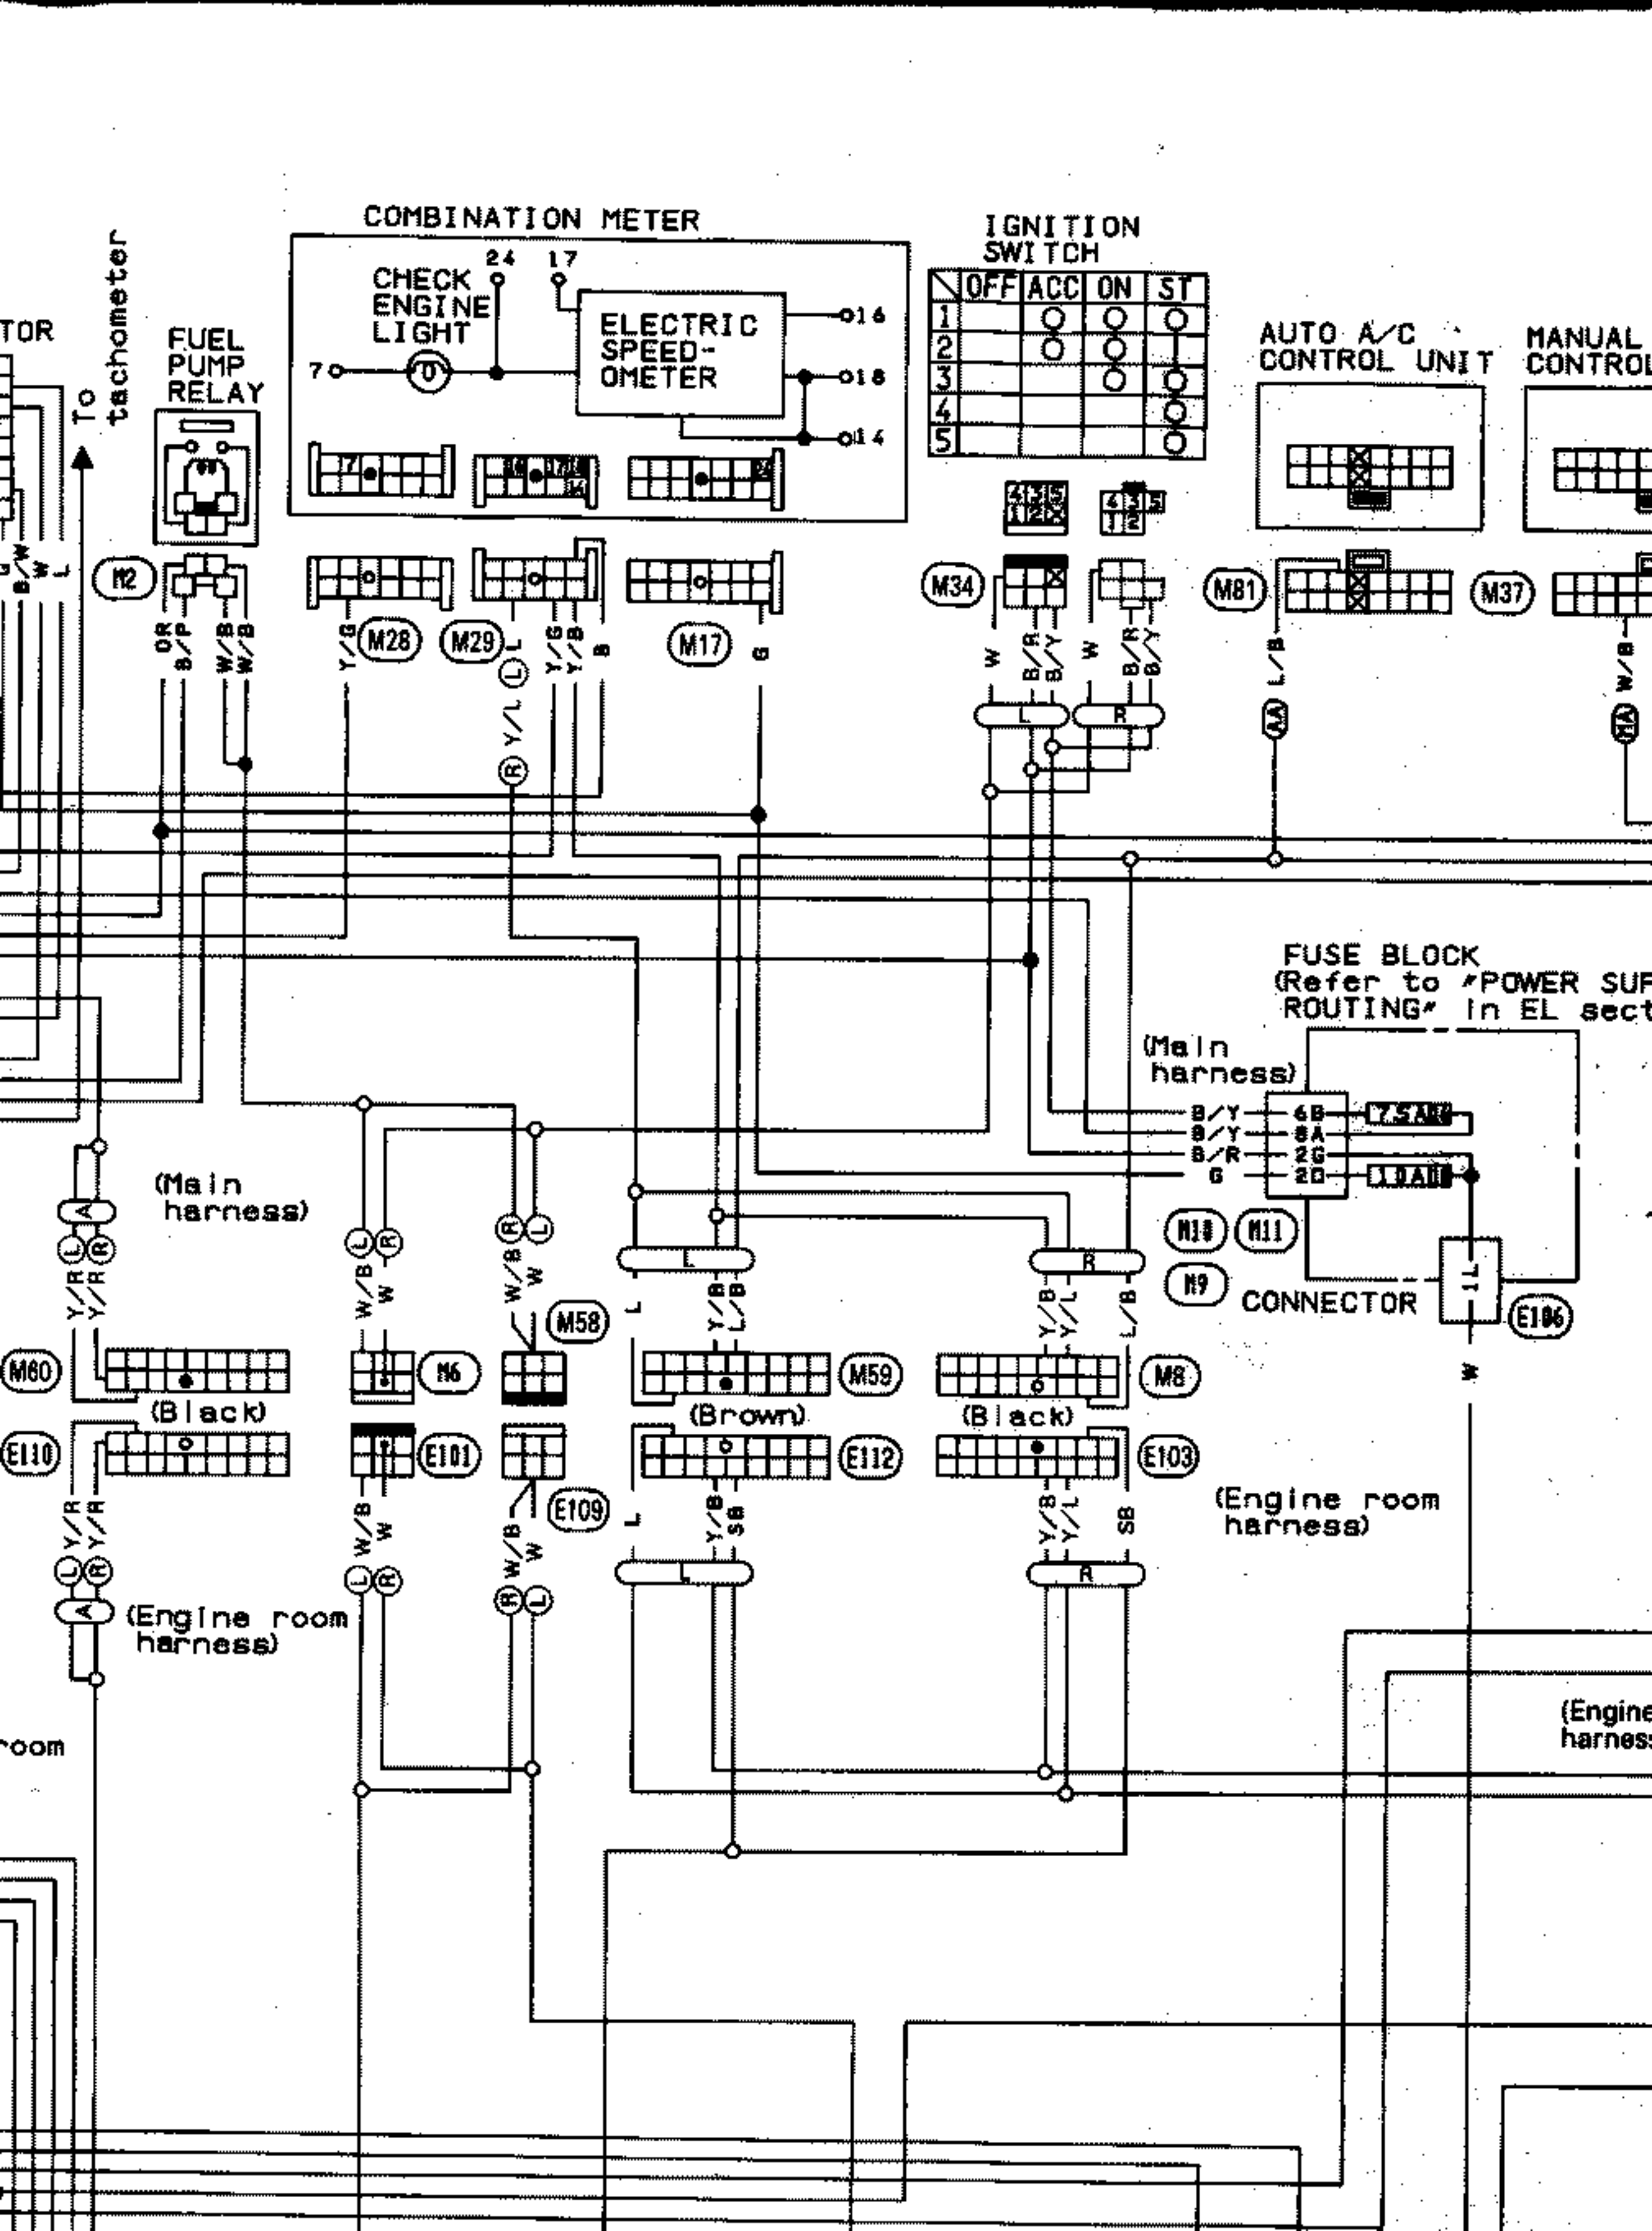

**COMBINATION METER**

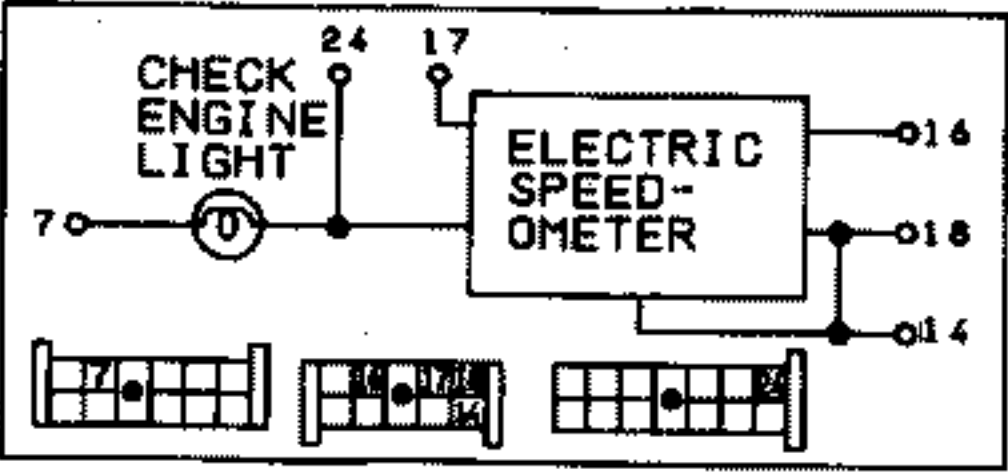

**IGNITION SWITCH**

	OFF	ACC	ON	ST
1		○	○	○
2		○	○	○
3			○	○
4				○
5				○

**AUTO A/C CONTROL UNIT**

**MANUAL CONTROL**



**FUSE BLOCK**  
 (Refer to "POWER SUPPLY ROUTING" in EL sect)

(Main harness)



CONNECTOR

(Engine room harness)

(Engine room harness)

(Main harness)

(Engine room harness)

(Black)

(Brown)

(Black)

room