

# ALPHABETICAL INDEX

# SECTION **IDX**

GI

MA

EM

LC

EF &  
EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

**IDX**

# ALPHABETICAL INDEX

## A

ABS (anti-lock brake system) .....	BR-21
ABS actuator .....	BR-23
ABS circuit diagram .....	BR-31
ABS component parts and connector locations.....	BR-28
ABS hydraulic circuit .....	BR-21
ABS self-diagnosis .....	BR-25
ABS system components.....	BR-21
ABS trouble diagnoses .....	BR-24
ABS wheel sensors.....	BR-23
ABS wiring diagram .....	BR-22
A/C air flow.....	HA-13
A/C circuit diagram (auto A/C) .....	HA-90
A/C circuit diagram (manual A/C) .....	HA-38
A/C component layout.....	HA-12
A/C compressor clutch removal and installation.....	HA-131
A/C compressor mounting .....	HA-129
A/C compressor precaution .....	HA-6
A/C compressor special service tool .....	HA-6
A/C control linkage adjustment (auto A/C).....	HA-114
A/C control linkage adjustment (manual A/C).....	HA-56
A/C control operation (auto A/C).....	HA-61
A/C control operation (manual A/C).....	HA-15
A/C diagnostic work flow (auto A/C).....	HA-64
A/C diagnostic work flow (manual A/C) .....	HA-17
A/C harness layout (auto A/C).....	HA-86
A/C harness layout (manual A/C) .....	HA-34
A/C HFC134a (R134a) system identification.....	HA-2
A/C HFC134a (R134a) system introduction .....	HA-2
A/C HFC134a (R134a) system precaution.....	HA-4
A/C HFC134a (R134a) system service procedure.....	HA-123
A/C HFC134a (R134a) system service tools .....	HA-7
A/C HFC134a system service equipment precaution.....	HA-9
A/C lubricant (R134a) .....	HA-125
A/C operational check (auto A/C) .....	HA-65
A/C operational check (manual A/C) .....	HA-18
A/C performance chart.....	HA-28
A/C performance test diagnoses .....	HA-26
A/C relay .....	HA-55
A/C self-diagnostics (auto A/C) .....	HA-69
A/C service data specification.....	HA-133
A/C switch .....	HA-55
A/C symptom chart (auto A/C).....	HA-68
A/C symptom chart (manual A/C) .....	HA-20
A/C trouble diagnoses (auto A/C).....	HA-62
A/C trouble diagnoses (manual A/C) .....	HA-16
A/C wiring diagram (auto A/C) .....	HA-88
A/C wiring diagram (manual A/C) .....	HA-36

Accelerator control system.....	FE-2
Accelerator wire adjustment.....	FE-2
Activated carbon canister .....	EF & EC-19
Activated carbon canister inspection .....	EF & EC-191
Air bag.....	RS-5
Air bag disposal .....	RS-14
Air bag module.....	RS-10
Air bag precautions .....	GI-2
Air bag removal and installation .....	RS-10
Air bleeding for brake system.....	BR-4
Air conditioner cut control.....	EF & EC-26
Air mix door control linkage adjustment (auto A/C).....	HA-115
Air mix door control linkage adjustment (manual A/C).....	HA-57
Air mix. door motor (auto A/C) .....	HA-116
Air mix. door motor (manual A/C) .....	HA-58
Air spoiler, rear - See Rear air spoiler.....	BT-41
Alternator .....	EL-19
Ambient sensor.....	HA-112
Angular tightening application .....	EM-2
Antenna.....	EL-81
Anti-freeze coolant mixture ratio.....	MA-9
ASCD (automatic speed control device) .....	EL-99
AT control unit .....	AT-74
AT fluid temperature sensor.....	AT-79
AT removal and installation.....	AT-100
AT self-diagnostics.....	AT-38
AT trouble diagnoses.....	AT-11
Audio.....	EL-81
Audio and A/C control removal and installation - See Instrument panel .....	BT-11
Automatic amplifier.....	HA-116
Automatic transmission fluid.....	MA-8
Automatic transmission fluid replacement.....	MA-17
Automatic transmission number.....	GI-30
Auxiliary air control (AAC) .....	EF & EC-16
Axle housing (rear).....	RA-9

## B

Back door trim .....	BT-18
Back door window .....	BT-40
Back window.....	BT-38
Back-up lamp.....	EL-33
Back-up lamp switch (MT) .....	MT-7
Ball joint front axle .....	FA-17
Battery.....	EL-12
Baulk ring (MT) .....	MT-8
Blower motor .....	HA-54
Blower relay .....	HA-55
Blower resistor .....	HA-54
Body alignment.....	BT-42
Boost gauge.....	EL-41
Boost pressure sensor.....	EF & EC-19
Boost pressure sensor inspection .....	EF & EC-188
Brake booster.....	BR-10
Brake fluid.....	MA-8

# ALPHABETICAL INDEX

Brake fluid change .....	BR-4
Brake fluid level .....	MA-18
Brake fluid level and line check .....	BR-4
Brake hydraulic line.....	BR-5
Brake inspection .....	MA-18
Brake lines and cables inspection.....	MA-18
Brake master cylinder .....	BR-8
Brake pedal .....	BR-6
Bumper, front - See Front bumper .....	BT-5
Bumper, rear - See Rear bumper.....	BT-7

## C

Camshaft inspection .....	EM-26
Camshaft position sensor (CMPS) .....	EF & EC-13
Camshaft position sensor inspection .....	EF & EC-181
Center bearing assembly (propeller shaft) .....	PD-9
Center bearing disassembly (propeller shaft) .....	PD-9
Charging system.....	EL-18
Cigarette lighter .....	EL-77
Clearance lamp.....	EL-32
Clock .....	EL-77
Closed throttle position switch inspection .....	EF & EC-185
Clutch cover.....	CL-14
Clutch disc.....	CL-14
Clutch fluid .....	MA-8
Clutch fluid level .....	MA-16
Clutch master cylinder.....	CL-8
Clutch operating cylinder.....	CL-9
Clutch pedal.....	CL-6
Clutch pedal free play .....	CL-6
Clutch pedal height.....	CL-6
Clutch release bearing .....	CL-12
Clutch withdrawal lever .....	CL-12
Coil spring (front) .....	FA-14
Coil spring (rear) .....	RA-17
Combination lamp, rear, removal and installation .....	BT-20
Combination meter .....	EL-40
Combination meter removal and installation - See Instrument panel .....	BT-11
Combination switch.....	EL-22
Compression pressure.....	EM-9
Compressor clutch removal and installation.....	HA-131
Compressor mounting.....	HA-129
Compressor precaution.....	HA-6
Compressor special service tool.....	HA-6
Connecting rod .....	EM-45
Connecting rod bearing clearance .....	EM-49
Connecting rod bushing clearance.....	EM-50
Console box - See Instrument panel.....	BT-11
Consult for ECCS .....	EF & EC-54
Consult general information .....	GI-26
Control lever (MT) .....	MT-10
Control valve (AT) .....	AT-125

Converter housing installation.....	AT-100
Convertible roof .....	BT-31
Coolant.....	MA-8
Cooling circuit (engine).....	LC-8
Cooling fan.....	LC-11
Cooling fan control.....	EF & EC-29
Cooling fan control system .....	LC-12
Cooling fan motor inspection.....	EF & EC-183
Cooling fan relay inspection .....	EF & EC-187
Counter gear (MT) .....	MT-8
Coupling sleeve (MT).....	MT-8
Crankshaft assembly .....	EM-51
Crankshaft bearing clearance.....	EM-47
Crankshaft inspection .....	EM-47
Cylinder block .....	EM-43
Cylinder block boring .....	EM-46
Cylinder head.....	EM-23
Cylinder head bolt tightening.....	EM-33

## D

Data link connector for Consult .....	EF & EC-18
Daytime light system .....	EL-26
Differential carrier assembly.....	PD-29
Differential carrier disassembly .....	PD-14
Differential gear oil.....	MA-8
Differential gear oil replacement.....	MA-17
Dimensions .....	GI-31
Direct ignition system .....	EF & EC-33
Door glass.....	BT-10
Door lock.....	BT-10
Door mirror.....	BT-41
Door trim .....	BT-17
Door, front - See Front door .....	BT-10
Drive plate runout .....	EM-50
Drive shaft (rear) .....	RA-12
Dropping resistor (AT) .....	AT-79
Dual pressure switch.....	HA-55

## E

ECCS basic inspection .....	EF & EC-64
ECCS circuit diagram .....	EF & EC-12
ECCS fail-safe system.....	EF & EC-31
ECCS on-board diagnostic system .....	EF & EC-47
ECCS relay inspection.....	EF & EC-187
ECCS system diagram and chart.....	EF & EC-5, 7
ECCS trouble diagnoses .....	EF & EC-41
ECM input/output signal inspection .....	EF & EC-176
EGR control (EGRC) - solenoid valve.....	EF & EC-18
EGR temperature sensor.....	EF & EC-19
EGR temperature sensor inspection .....	EF & EC-184
EGR valve inspection .....	EF & EC-183
EGRC valve and canister control solenoid valve inspection .....	EF & EC-183, 187
Electrical units location .....	EL-144

# ALPHABETICAL INDEX

Electronic ignition (EI) system ..... EF & EC-22  
 Engine compartment..... BT-42  
 Engine control module (ECM) ..... EF & EC-13  
 Engine coolant temperature sensor  
 (ECTS) ..... EF & EC-13  
 Engine coolant temperature sensor  
 inspection ..... EF & EC-181  
 Engine oil ..... MA-8  
 Engine oil precautions ..... GI-5  
 Engine outer component parts ..... EM-6  
 Engine removal ..... EM-40  
 Engine room - See Engine  
 compartment ..... BT-42  
 Engine serial number ..... GI-30  
 Evaporative emission system ..... EF & EC-191  
 Exhaust gas recirculation (EGR)  
 system ..... EF & EC-25  
 Exhaust gas recirculation (EGR)  
 valve ..... EF & EC-17  
 Exhaust system ..... FE-5  
 Exhaust system inspection ..... MA-16  
 Exterior ..... BT-20  
 Exterior lamp ..... EL-32

## F

Fan control amp. .... HA-119  
 Fan switch ..... HA-54  
 Final drive disassembly ..... PD-14  
 Final drive pre-inspection ..... PD-14  
 Final drive removal and installation ..... PD-10  
 Finisher, interior - See Trim ..... BT-13  
 Finisher, trunk lid - See Trunk lid  
 finisher ..... BT-16  
 Floor trim ..... BT-13  
 Fluid temperature sensor (AT) ..... AT-79  
 Flywheel runout ..... EM-50  
 Fog lamp, front ..... EL-34  
 Foot lamp ..... EL-38  
 Fork rod (MT) ..... MT-10  
 Forward clutch ..... AT-144  
 Front axle ..... FA-9  
 Front bumper ..... BT-5  
 Front disc brake ..... BR-12  
 Front door ..... BT-10  
 Front fog lamp ..... EL-34  
 Front passenger air bag ..... RS-11  
 Front seat ..... BT-36  
 Front seat belt ..... RS-3  
 Front suspension ..... FA-13  
 Front washer ..... EL-63  
 Front wiper ..... EL-63  
 Fuel check valve inspection ..... EF & EC-192  
 Fuel damper ..... EF & EC-15  
 Fuel filter ..... EF & EC-18  
 Fuel gauge ..... EL-41  
 Fuel injector ..... EF & EC-14  
 Fuel lid opener, electric ..... EL-74  
 Fuel precautions ..... GI-6  
 Fuel pressure check ..... EF & EC-189

Fuel pressure regulator ..... EF & EC-15  
 Fuel pressure regulator control ..... EF & EC-26  
 Fuel pressure release ..... EF & EC-189  
 Fuel pump ..... EF & EC-15  
 Fuel pump control ..... EF & EC-24  
 Fuel pump inspection ..... EF & EC-182  
 Fuel system ..... FE-3  
 Fuel tank vacuum relief valve  
 inspection ..... EF & EC-192  
 Fuel temperature sensor ..... EF & EC-19  
 Fuel temperature sensor inspection .. EF & EC-188  
 Fuse ..... EL-11  
 Fusible link ..... EL-11

## G

Garage jack and safety stand ..... GI-32  
 Gauges ..... EL-40  
 Gears (MT) ..... MT-8  
 Glass ..... BT-10  
 Grille - See Exterior ..... BT-20

## H

Harness connector ..... EL-4  
 Harness layout ..... EL-148  
 Hazard warning lamp ..... EL-35  
 Headlamp ..... EL-26  
 Headlamp washer ..... EL-65  
 Headlining - See Roof trim ..... BT-19  
 Heated oxygen sensor (HO2S) ..... EF & EC-15  
 Heated oxygen sensor heater  
 inspection ..... EF & EC-184  
 Heated oxygen sensor monitor ..... EF & EC-53  
 Heater mirror ..... EL-78  
 Height (Dimensions) ..... GI-31  
 HFC134a (R134a) system identification ..... HA-2  
 HFC134a (R134a) system introduction ..... HA-2  
 HFC134a (R134a) system precaution ..... HA-4  
 HFC134a (R134a) system service  
 procedure ..... HA-123  
 HFC134a (R134a) system service tools ..... HA-7  
 HFC134a system service equipment  
 precaution ..... HA-9  
 HICAS - See Super HICAS ..... ST-37  
 High clutch ..... AT-142  
 Hood ..... BT-5  
 Horn ..... EL-77  
 How to follow flow chart in trouble  
 diagnoses ..... GI-23  
 How to perform efficient diagnosis for  
 an electrical incident ..... GI-12  
 How to read wiring diagrams ..... GI-9  
 How to use this manual ..... GI-7  
 Hydraulic lash adjuster inspection ..... EM-30

# ALPHABETICAL INDEX

## I

IACV - air regulator inspection .....	EF & EC-186
IACV - FICD solenoid valve inspection .....	EF & EC-186
IACV-AAC valve inspection .....	EF & EC-185
Idle air adjusting (IAA) unit .....	EF & EC-16
Idle air control (IAC) system .....	EF & EC-23
Idle air control valve (IACV) - air regulator .....	EF & EC-16
Idle mixture ratio inspection .....	EF & EC-35
Idle speed inspection .....	EF & EC-35
Ignition coil inspection .....	EF & EC-182
Ignition coil relay inspection .....	EF & EC-187
Ignition timing inspection .....	EF & EC-35
Illumination .....	EL-37
In vehicle sensor .....	HA-112
Inhibitor switch .....	AT-78
Inhibitor switch inspection .....	EF & EC-187
Injector inspection .....	EF & EC-186
Injector removal and installation .....	EF & EC-190
Instrument panel .....	BT-11
Intake door control linkage adjustment (auto A/C) .....	HA-115
Intake door control linkage adjustment (manual A/C) .....	HA-57
Intake door motor (auto A/C) .....	HA-117
Intake door motor (manual A/C) .....	HA-59
Interior .....	BT-13
Interior lamp .....	EL-37

## J

Jacking points .....	GI-32
----------------------	-------

## K

Knock sensor (KS) .....	EF & EC-17
Knock sensor inspection .....	EF & EC-186

## L

Length (Dimensions) .....	GI-31
Line pressure solenoid valve .....	AT-79
Line pressure test (AT) .....	AT-82
Liquid gasket application .....	EM-2
Location of electrical units .....	EL-144
Lock, door - See Door lock .....	BT-10
Low and reverse brake .....	AT-148
Lower ball joint (rear susp.) .....	RA-18
Lubricant (R134a) A/C .....	HA-125
Lubrication circuit (engine) .....	LC-4
Lubrication-locks, hinges and hood latches .....	MA-21
Luggage compartment trim .....	BT-13

Luggage room lamp .....	EL-38
-------------------------	-------

## M

Magnet clutch .....	HA-131
Main drive gear (MT) .....	MT-8
Mainshaft (MT) .....	MT-8
Maintenance general .....	MA-3
Maintenance periodic .....	MA-5
Maintenance schedule (1) .....	MA-6
Maintenance schedule (2) .....	MA-7
Manual transmission number .....	GI-30
Manual transmission oil .....	MA-8
Manual transmission oil replacement .....	MA-16
Mass air flow sensor (MAFS) .....	EF & EC-13
Mass air flow sensor inspection .....	EF & EC-181
Master cylinder (brake) .....	BR-8
Master cylinder (clutch) .....	CL-8
Meter .....	EL-40
Mirror, door - See Door mirror .....	BT-41
Mirror, out side - See Out side mirror .....	BT-41
Mode door control linkage adjustment (auto A/C) .....	HA-114
Mode door control linkage adjustment (manual A/C) .....	HA-56
Mode door motor (auto A/C) .....	HA-117
Mode door motor (manual A/C) .....	HA-59
Model variation .....	GI-27
Molding - See Exterior .....	BT-20
MT overhaul .....	MT-7
MT removal and installation .....	MT-6
Multi link/lower ball joint (rear) .....	RA-18
Multi purpose grease .....	MA-8
Multi-remote control system .....	EL-88
Multipoint fuel injection (MFI) system .....	EF & EC-20
Multipoint fuel injection precautions .....	GI-4

## N

Neutral position switch inspection .....	EF & EC-187
--	-------------

## O

Oil cooler (engine) .....	LC-7
Oil pan (engine) .....	EM-10
Oil pressure (engine) .....	LC-5
Oil pressure relief valve (engine) .....	LC-7
Oil pump (AT) .....	AT-121
Oil pump (engine) .....	LC-5
Oil pump regulator valve (engine) .....	LC-7
Oil seal replacement (engine) .....	EM-19
Oil seal replacement (front of final drive) .....	PD-10
Oil seal replacement (side of final drive) .....	PD-10
Operating cylinder (clutch) .....	CL-9
Out side mirror .....	BT-41

GI  
 MA  
 EM  
 LC  
 EF & EC  
 FE  
 CL  
 MT  
 AT  
 PD  
 FA  
 RA  
 BR  
 ST  
 RS  
 BT  
 HA  
 EL  
**IDX**

# ALPHABETICAL INDEX

Overrun clutch.....	AT-144
Overrun clutch solenoid valve.....	AT-79
Oversize piston.....	EM-46

P

Parking brake control.....	BR-18
Parking drum brake.....	BR-19
PCV (positive crankcase ventilation) inspection.....	EF & EC-193
Pilot bushing replacement.....	EM-53
Pinion bearing preload diff.....	PD-19
Pinion gear height diff.....	PD-19, 25
Piston assembly.....	EM-51
Piston pin inspection.....	EM-44
Piston ring inspection.....	EM-45
Piston to bore clearance.....	EM-46
Power antenna.....	EL-81
Power door lock.....	EL-70
Power door mirror.....	EL-73
Power seat.....	EL-87
Power steering (twin orifice) trouble diagnoses.....	ST-28
Power steering fluid.....	MA-8
Power steering fluid level.....	MA-19, ST-6
Power steering gear.....	ST-12
Power steering hydraulic pressure.....	ST-8
Power steering oil pressure switch.....	EF & EC-17
Power steering oil pressure switch inspection.....	EF & EC-187
Power steering oil pump.....	ST-23
Power steering system (twin orifice).....	ST-26
Power steering system bleeding.....	ST-7
Power supply routing.....	EL-8
Power transistor & ignition coil.....	EF & EC-16
Power transistor inspection.....	EF & EC-182
Power window.....	EL-68
Precautions (General).....	GI-2
Pressure test (AT).....	AT-82
Propeller shaft.....	PD-6
Propeller shaft on vehicle service.....	PD-7
Propeller shaft vibration.....	PD-7
PRVR control solenoid valve.....	EF & EC-18
PRVR control solenoid valve inspection.....	EF & EC-183

R

Rack retainer adjustment.....	ST-6
Radiator.....	LC-12
Radio.....	EL-81
Rear air spoiler.....	BT-41
Rear axle.....	RA-9
Rear axle housing ball joint (super HICAS).....	RA-22
Rear bumper.....	BT-7
Rear combination lamp removal and installation.....	BT-20

Rear disc brake.....	BR-15
Rear seat.....	BT-36
Rear seat belt.....	RS-4
Rear suspension.....	RA-16
Rear washer.....	EL-64
Rear window.....	BT-38
Rear window defogger.....	EL-78
Rear wiper.....	EL-64
Refrigerant connection precaution.....	HA-5
Refrigerant general precaution.....	HA-4
Refrigerant lines.....	HA-127
Refrigeration cycle.....	HA-11
Release bearing (clutch).....	CL-12
Reverse clutch.....	AT-138
Reverse gear (MT).....	MT-8
Reverse idler shaft (MT).....	MT-8
Revolution sensor (AT).....	AT-78
Road wheel size.....	GI-31
Roof trim.....	BT-19

S

SAE J1930 terminology list.....	GI-36
Seal - See Exterior.....	BT-20
Seat belt inspection.....	MA-21
Seat belt, front - See Front seat belt.....	RS-3
Seat belt, rear - See Rear seat belt.....	RS-4
Seat, front - See Front seat.....	BT-36
Seat, rear - See Rear seat.....	BT-36
Self-diagnostic results.....	EF & EC-50
Shift control (MT).....	MT-10
Shift fork (MT).....	MT-10
Shift lock system.....	AT-88
Shift schedule.....	AT-32
Shift solenoid valve (AT).....	AT-79
Shock absorber (adjustable, front).....	FA-19
Shock absorber (adjustable, rear).....	RA-20
Shock absorber (front).....	FA-14
Shock absorber (rear).....	RA-17
Side bearing preload diff.....	PD-18, 24
Side trim.....	BT-13
Side window.....	BT-39
Speedometer.....	EL-41
Spiral cable.....	RS-10
Spot lamp.....	EL-38
Spring (Wheelarch) height.....	FA-5
SRS - See Supplemental Restraint System.....	RS-5
SRS Trouble diagnoses.....	RS-18
SRS Wiring diagram.....	RS-19
Stabilizer bar (front).....	FA-18
Stabilizer bar (rear).....	RA-18
Stall test (AT).....	AT-80
Standardized relay.....	EL-5
Starter.....	EL-16
Starting system.....	EL-15
Steering angle sensor.....	ST-44
Steering gear and linkage inspection.....	MA-19
Steering knuckle.....	FA-9
Steering linkage.....	ST-12

# ALPHABETICAL INDEX

Steering wheel and column .....	ST-9
Steering wheel play .....	ST-5
Steering wheel turning force .....	ST-7
Stop lamp .....	EL-32
Striking rod (MT) .....	MT-10
Sunload sensor .....	HA-113
Super HICAS system .....	ST-37
Super HICAS system trouble diagnoses .....	ST-45
Supplemental Restraint System .....	RS-5
Symbols and abbreviations .....	GI-7
Synchronizer (MT) .....	MT-8

T

T-bar roof .....	BT-29
Tachometer .....	EL-41
Tail lamp .....	EL-32
Tension rod (front) .....	FA-18
Theft warning system .....	EL-119
Thermo control amp .....	HA-56
Thermostat .....	LC-10
Third link (front susp.) .....	FA-15
Three way catalyst precautions .....	GI-4
Throttle bodies .....	EM-21
Throttle position sensor (TPS) .....	EF & EC-14
Throttle position sensor inspection ....	EF & EC-184
Throttle position switch inspection ....	EF & EC-184
Tightening torque of standard bolts .....	GI-35
Time control system .....	EL-49
Timing belt .....	EM-12
Tire rotation .....	MA-18
Tire size .....	GI-31
Tooth contact diff. ....	PD-28
Torque converter clutch solenoid valve .....	AT-79
Torque converter installation .....	AT-100
Tow truck towing .....	GI-33
Towing points .....	GI-33
Transmission case (MT) .....	MT-7
Transverse link (front) .....	FA-17
Tread-FR&RR (Dimensions) .....	GI-31
Trim .....	BT-13
Trunk lid .....	BT-7
Trunk lid finisher .....	BT-16
Trunk lid opener - See Trunk lid .....	BT-7
Trunk lid opener, electric .....	EL-74
Trunk lid trim .....	BT-16
Trunk room trim .....	BT-16
Turbocharger .....	EM-34
Turbocharger intercooler .....	EM-39
Turbocharger precautions .....	GI-4
Turn signal lamp .....	EL-35
Two-pole lift .....	GI-33

U

Under body .....	BT-44
------------------	-------

Upper link (front susp.) .....	FA-15
--------------------------------	-------

V

Vacuum hose (brake system) .....	BR-11
Vacuum hose drawing (ECCS) .....	EF & EC-10
Valve guide inspection .....	EM-27
Valve seat inspection .....	EM-29
Valve spring inspection .....	EM-30
Valve timing control (VTC) .....	EF & EC-27
Valve timing control solenoid valve ....	EF & EC-19
Vehicle identification number .....	GI-29
Vehicle speed sensor (VSS) .....	EF & EC-17
Vehicle speed sensor inspection .....	EF & EC-182
Viscosity number (SAE) .....	MA-8
VTC solenoid valve inspection .....	EF & EC-187

W

Warning chime .....	EL-47
Warning lamps .....	EL-45
Washer, front .....	EL-63
Washer, rear .....	EL-64
Wastegate Valve Control Solenoid Valve .....	EF & EC-18
Wastegate valve control solenoid valve inspection .....	EF & EC-183
Water cock control rod adjustment (auto A/C) .....	HA-115
Water cock control rod adjustment (manual A/C) .....	HA-57
Water pump .....	LC-9
Water temperature gauge .....	EL-41
Weatherstrip - See Exterior .....	BT-20
Wheel alignment (front) .....	FA-7
Wheel alignment (rear super HICAS) .....	RA-21
Wheel alignment (rear) .....	RA-5
Wheel balance .....	MA-18
Wheel bearing (front axle) .....	FA-7
Wheel bearing (rear) .....	RA-5
Wheel hub (front) .....	FA-9
Wheel hub (rear) .....	RA-9
Wheel sensors (ABS) .....	BR-23
Wheel size .....	GI-31
Wheelbase (Dimensions) .....	GI-31
Wide open & closed throttle position (CTP) switch .....	EF & EC-14
Width (Dimensions) .....	GI-31
Window, back - See Back window .....	BT-38
Window, back door - See Back door window .....	BT-40
Window, door .....	BT-10
Window, rear - See Rear window .....	BT-38
Window, side .....	BT-39
Windshield .....	BT-38
Windshield washer .....	EL-63
Windshield wiper .....	EL-63
Wiper and washer .....	EL-63

## ALPHABETICAL INDEX

---

Wiper, front .....	EL-63
Wiper, rear .....	EL-64
Withdrawal lever (clutch) .....	CL-12