

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

| Numerics | |
|---|--|
| 3METER - Wiring diagram | DI-39 |
| A | |
| A/C component layout | ATC-23 |
| A/C compressor mounting | ATC-130 |
| A/C compressor precaution | ATC-11 |
| A/C compressor special service tool | ATC-15 |
| A/C controller | ATC-107 |
| A/C diagnostic work flow (auto A/C) | ATC-96 |
| A/C evaporator | ATC-143 |
| A/C HFC134a (R134a) system precaution | ATC-5 |
| A/C HFC134a (R134a) system service procedure | ATC-128 |
| A/C HFC134a (R134a) system service tools ... | ATC-16 |
| A/C HFC134a system service equipment precaution ... | ATC-12 |
| A/C lubricant (R134a) | ATC-24 |
| A/C lubrication oil | ATC-149 |
| A/C operational check | ATC-57 |
| A/C self-diagnoses (auto A/C) | ATC-49 , ATC-96 |
| A/C service data specification | ATC-149 |
| A/C trouble diagnoses (auto A/C) | ATC-36 |
| A/C, A - Wiring diagram | ATC-42 |
| A/T fluid checking | AT-12 , AT-50 |
| A/T fluid replacement | AT-12 |
| A/T fluid temperature sensor | AT-134 |
| A/T IND - Wiring diagram | DI-77 |
| A/T self-diagnoses | AT-97 |
| A/T shift lock system | AT-230 |
| A/T shift lock system - Wiring diagram | AT-231 |
| A/T trouble diagnoses | AT-41 |
| A/T Wiring diagram AT - CAN | AT-100 |
| A/T Wiring diagram AT - FTS | AT-135 |
| A/T Wiring diagram AT - MMSW | AT-169 |
| A/T Wiring diagram AT - NONDTC | AT-184 |
| A/T Wiring diagram AT - PNP/SW | AT-107 |
| A/T Wiring diagram AT - POWER | AT-124 |
| A/T Wiring diagram AT - STSIG | AT-103 |
| A/T Wiring diagram AT - VSS A/T | AT-112 |
| Accelerator control system | ACC-3 |
| Accelerator pedal position (APP) sensor | EC-543 , EC-550 , EC-564 |
| Accelerator pedal released position learning | EC-42 |
| Air bag | SRS-3 |
| Air bag disposal | SRS-46 |
| Air bag precautions | SRS-3 |
| Air bleeding (hydraulic clutch) | CL-7 |
| Air bleeding for brake system | BR-10 |
| Air cleaner and air duct | EM-15 |
| Air cleaner filter replacement | MA-17 |
| Air conditioner cut control | EC-28 |
| Air flow meter - See Mass air flow sensor | EC-158 , EC-166 |
| Air mix. door motor | ATC-68 , ATC-122 |
| Ambient sensor | ATC-97 , ATC-109 |
| Angular tightening application | EM-4 |
| Antenna | AV-35 |
| APPS1 - Wiring diagram | EC-545 |
| APPS2 - Wiring diagram | EC-552 |
| APPS3 - Wiring diagram | EC-566 |
| ASC/BS - Wiring diagram | EC-512 |
| ASC/SW - Wiring diagram | EC-505 |
| ASCBOF - Wiring diagram | EC-604 |
| ASCD | EC-638 |
| ASCD (automatic speed control device) | ACS-2 |
| ASCIND - Wiring diagram | EC-620 |
| Ashtray illumination | LT-115 |
| AT indicator lamp | DI-77 |
| Audio | AV-5 |
| AUDIO - Wiring diagram | AV-9 |
| Auto air conditioner - Wiring diagram | ATC-42 |
| Auto amp | ATC-108 |
| Auto anti-dazzling inside mirror | GW-52 |
| Automatic amplifier | ATC-59 , ATC-108 |
| Automatic transmission fluid replacement | MA-25 |
| Axle | MA-30 |
| Axle housing (rear) | RAX-8 |
| B | |
| BACK/L - Wiring diagram | LT-92 |
| Back-up lamp | LT-92 |
| Back-up lamp switch (M/T) | MT-12 |
| Battery | SC-4 |
| Battery/Starting/Charging System Tester | SC-6 , SC-15 , SC-23 |
| BCM (Body control module) | BCS-3 |
| Blower motor | ATC-75 , ATC-115 |
| Blower unit | ATC-113 |
| Bose speaker amp. | AV-5 |
| Brake booster | BR-17 |
| Brake fluid change | BR-9 |
| Brake fluid level | MA-28 |
| Brake fluid level and line check | BR-9 |
| Brake hydraulic line | BR-11 |
| Brake inspection | MA-28 |
| Brake lines and cables inspection | MA-28 |
| Brake master cylinder | BR-13 |
| Brake pedal | BR-6 |
| Brake switch | EC-537 |
| BRK/SW - Wiring diagram | EC-538 |
| Bulb specifications | LT-142 |
| Bumper, front | EI-14 |
| Bumper, rear | EI-17 |
| C | |
| Camshaft | EM-65 |
| Camshaft inspection | EM-67 |
| Camshaft position sensor (PHASE) | EC-300 |
| CAN - Wiring diagram | EC-137 , LAN-9 , LAN-36 |
| CAN (Controller Area Network) | LAN-4 , LAN-8 , LAN-35 |
| CAN communication ... | EC-29 , EC-136 , AT-30 , AT-99 , LT-8 , LT-59 , LT-96 , LT-132 , WW-9 , LAN-4 , LAN-8 , LAN-35 |

ALPHABETICAL INDEX

| K | O |
|---|---|
| KEYLES - Wiring diagram BL-55 | O2H1B1 - Wiring diagram EC-144 |
| Knock sensor (KS) EC-289 | O2H1B2 - Wiring diagram EC-146 |
| KS - Wiring diagram EC-290 | O2H2B1 - Wiring diagram EC-152 |
| | O2H2B2 - Wiring diagram EC-154 |
| L | O2S1B1 - Wiring diagram ... EC-200 , EC-211 , EC-224 |
| LAN system circuit ATC-61 | O2S1B2 - Wiring diagram ... EC-202 , EC-213 , EC-226 |
| License lamp LT-95 | O2S2B1 - Wiring diagram .. EC-233 , EC-243 , EC-443 , EC-454 |
| Line pressure solenoid valve AT-121 | O2S2B2 - Wiring diagram .. EC-235 , EC-245 , EC-445 , EC-456 |
| Line pressure test (A/T) AT-51 | Oil cooler (engine) LU-10 |
| Liquid gasket application LU-2 , CO-2 | Oil filter LU-9 |
| Location of electrical units PG-60 | Oil pan (engine) EM-26 |
| Lock, door BL-79 | Oil pressure (engine) LU-7 |
| Low coast brake solenoid valve AT-164 , AT-166 | Oil pump (engine) LU-12 |
| Lubricant (R134a) A/C ATC-6 , ATC-24 | Oil pump regulator valve (engine) LU-12 |
| Lubrication circuit (engine) LU-4 | Oil seal replacement (front of final drive) RFD-6 |
| Lubrication oil A/C ATC-149 | Oil seal replacement (side of final drive) RFD-8 |
| | Operating cylinder (clutch) CL-11 |
| M | ORVR (On-board Refueling Vapor Recovery) . EC-631 |
| M/ANT - Wiring diagram AV-36 | Out side mirror GW-74 |
| M/T major overhaul MT-27 | Overheat EC-466 |
| M/T oil replacement MT-10 | |
| M/T removal and installation MT-19 | P |
| MAFS - Wiring diagram EC-161 , EC-168 | P/SCKT - Wiring diagram WW-31 |
| Magnet clutch ATC-80 | Park/Neutral position switch EC-529 |
| MAIN - Wiring diagram EC-129 | Park/neutral position switch (A/T) AT-106 |
| Maintenance (engine) MA-13 | Parking brake control PB-3 |
| Major overhaul (Final drive) RFD-16 | Parking lamp LT-95 |
| Manual transmission oil replacement ... MA-22 , MA-23 | PCV (positive crankcase ventilation) EC-636 |
| Mass air flow sensor (MAFS) EC-158 , EC-166 | PGC/V - Wiring diagram EC-330 , EC-490 |
| Master cylinder (clutch) CL-8 | PHSB1 - Wiring diagram EC-301 |
| Meter DI-4 | PHSB2 - Wiring diagram EC-303 |
| METER - Wiring diagram DI-9 | Pinion bearing preload diff. RFD-30 |
| MIL data link connectors circuit EC-622 | Pinion gear height diff. RFD-24 |
| MIL/DL - Wiring diagram EC-622 | PNP/SW - Wiring diagram EC-531 |
| MIRROR - Wiring diagram GW-73 | POS - Wiring diagram EC-295 |
| Mirror, door GW-74 | POWER - Wiring diagram PG-5 |
| Mirror, out side GW-74 | Power door lock BL-18 |
| Misfire EC-283 | Power seat SE-12 |
| Mode door control linkage adjustment ATC-67 | Power socket WW-31 |
| Mode door motor ATC-65 , ATC-121 | Power steering fluid level PS-6 , MA-30 |
| Molding - See Exterior EI-22 , EI-24 | Power steering gear PS-17 |
| Multiport fuel injection (MFI) system EC-25 | Power steering oil pump PS-28 |
| Multiport fuel injection precautions GI-6 | Power steering system bleeding PS-6 |
| | Power supply routing PG-4 |
| N | Power window GW-13 |
| NATS - Wiring diagram BL-122 | PRE/SE - Wiring diagram EC-347 , EC-353 |
| NAVI - Wiring diagram AV-54 | Precautions for Leak detection dye ATC-14 |
| Navigation system AV-39 | Precautions (General) GI-4 |
| NVH troubleshooting (BR) BR-5 | Pressure plate - See Clutch cover CL-15 |
| NVIS (Nissan vehicle immobilizer system) BL-119 | Pressure switch 1 AT-154 , AT-174 |
| NVIS (Nissan vehicle immobilizer system) precautions GI-3 | Pressure switch 2 AT-166 |
| | Pressure switch 3 AT-150 , AT-176 |
| | Pressure switch 5 AT-158 , AT-178 |
| | Pressure switch 6 AT-162 , AT-180 |

A
B
C
D
E
F
G
H
I
J
K
L
INDEX

ALPHABETICAL INDEX

Pressure test (A/T) [AT-51](#)
 Propeller shaft [PR-5](#)
 Propeller shaft on vehicle service [PR-5](#)
 Propeller shaft vibration [PR-5](#)
 PS/SEN - Wiring diagram [EC-390](#)

R

Radiator [CO-11](#)
 Radio - See Audio [AV-5](#)
 Rear axle [RAX-6](#)
 Rear bumper [EI-17](#)
 Rear combination lamp removal and installation
[LT-110](#)
 Rear cover packing replacement diff. [RFD-31](#)
 Rear suspension [RSU-5](#)
 Refrigerant connection precaution [ATC-6](#)
 Refrigerant discharging evacuating charging [ATC-128](#)
 Refrigerant general precaution [ATC-6](#)
 Refrigerant lines [ATC-128](#)
 Refrigerant pressure sensor [EC-597](#), [ATC-85](#),
[ATC-142](#)
 Refrigeration cycle [ATC-19](#)
 Release bearing (clutch) [CL-13](#)
 Remote keyless entry system [BL-50](#)
 Removal and installation (A/T) [AT-263](#)
 Reverse lamp switch (M/T) - See Back-up lamp switch
 (M/T) [MT-12](#)
 Revolution sensor (A/T) [AT-110](#)
 Ring gear diff. inspection [RFD-15](#)
 Rocker cover [EM-39](#)
 Room lamp - See Interior lamp [LT-116](#)
 ROOM/L - Wiring diagram [LT-120](#)
 RP/SEN - Wiring diagram [EC-598](#)

S

Seat belt inspection [SB-5](#)
 Seat belt pre-tensioner disposal [SRS-46](#)
 Seat belt, front [SB-4](#)
 SEN/PW - Wiring diagram [EC-484](#)
 SHIFT - Wiring diagram [AT-231](#)
 Shift lock system [AT-230](#)
 Shift schedule [AT-332](#)
 Shock absorber (front) [FSU-10](#)
 Shock absorber (rear) [RSU-9](#)
 Side air bag (satellite) sensor [SRS-43](#)
 Side bearing preload diff. [RFD-23](#)
 Side flange installation diff. [RFD-9](#)
 SMJ (super multiple junction) [PG-69](#)
 Spark plug replacement [MA-20](#)
 Specification value [EC-124](#)
 Speedometer [DI-4](#)
 Spiral cable [SRS-37](#)
 SRS - See Supplemental Restraint System [SRS-5](#)
 SRS Trouble diagnoses [SRS-7](#)
 Stabilizer bar (rear) [RSU-16](#)
 Standardized relay [PG-71](#)
 START - Wiring diagram [SC-12](#)

Starter [SC-10](#)
 Starting system [SC-10](#)
 Steering gear and linkage inspection [MA-29](#)
 Steering linkage [PS-17](#)
 Steering wheel and column [PS-8](#), [PS-10](#)
 Steering wheel turning force [PS-8](#)
 Stop lamp [LT-89](#)
 Stop lamp switch [EC-537](#)
 STOP/L - Wiring diagram [LT-89](#)
 Sunload sensor [ATC-102](#), [ATC-111](#)
 Supplemental Restraint System [SRS-5](#)
 Suspension [MA-30](#)
 Symbols and abbreviations [GI-10](#), [GI-23](#)

T

Tachometer [DI-4](#)
 Tail lamp [LT-95](#)
 TAIL/L - Wiring diagram [LT-98](#)
 TCM circuit diagram [AT-49](#)
 TCM inspection table [AT-84](#)
 TCS - Wiring diagram [BRC-14](#)
 Thermostat [CO-23](#)
 Three way catalyst [EM-23](#)
 Three way catalyst function (Bank 1) [EC-308](#)
 Three way catalyst function (Bank 2) [EC-308](#)
 Three way catalyst precautions [GI-5](#)
 Throttle body [EM-20](#)
 Throttle control motor [EC-422](#)
 Throttle control motor relay [EC-417](#)
 Throttle position sensor (TPS) [EC-183](#), [EC-276](#),
[EC-479](#), [EC-481](#), [EC-557](#)
 Throwout bearing - See Clutch release bearing [CL-13](#)
 Thrust washer selection diff. [RFD-22](#)
 Tie-rod [PS-17](#)
 Timing chain [EM-49](#)
 Tire rotation [WT-7](#), [MA-27](#)
 Tooth contact diff. [RFD-27](#)
 Torque converter installation [AT-264](#), [AT-265](#)
 Torque converter clutch solenoid valve [AT-117](#), [AT-119](#)
 TPS1 - Wiring diagram [EC-278](#)
 TPS2 - Wiring diagram [EC-185](#)
 TPS3 - Wiring diagram [EC-559](#)
 Transverse link (front) [FSU-13](#)
 Triple meter [DI-34](#)
 TRNSCV - Wiring diagram [BL-138](#)
 Trouble diagnoses [GI-11](#)
 Trunk lid [BL-81](#)
 Turbine revolution sensor [AT-139](#)
 Turbocharger precautions [GI-6](#)
 TURN - Wiring diagram [LT-61](#)
 Turn signal lamp [LT-57](#)

U

Unified meter and A/C amp. [DI-58](#)
 Upper link (front susp.) [FSU-14](#)

ALPHABETICAL INDEX

V

| | |
|---|---|
| Vacuum hose (brake system) | BR-19 |
| Vacuum hose drawing (Engine control) | EC-23 |
| Valve clearance | EM-72 |
| Valve guide | EM-84 |
| Valve lifter | EM-69 |
| Valve seat | EM-86 |
| Valve spring | EM-88 |
| Vanity mirror lamp | LT-111 |
| Vehicle security (theft warning) system | BL-96 |
| Vehicle speed sensor (VSS) | EC-383 |
| VEHSEC - Wiring diagram | BL-101 |
| VENT/V - Wiring diagram | EC-337 , EC-498 |

W

| | |
|---------------------------------------|--|
| WARN - Wiring diagram | DI-67 |
| Warning chime | DI-81 |
| Warning lamps | DI-66 |
| Washer, front | WW-4 |
| Water pump | CO-19 |
| Water temperature gauge | DI-4 |
| Wheel alignment (front) | FSU-6 |
| Wheel alignment (rear) | RSU-5 |
| Wheel balance | WT-6 , MA-26 |
| Wheel bearing (front) | FAX-4 |
| Wheel bearing (rear) | RAX-6 |
| Wheel hub (front) | FAX-4 |
| Wheel hub (rear) | RAX-6 |
| Wheel sensors (TCS) | BRC-42 |
| Window, door | GW-49 |
| Windshield | GW-11 |
| WIPER - Wiring diagram | WW-11 |
| Wiper, front | WW-4 |
| Wiring Diagram (Cell code) list | PG-57 |
| Wiring diagrams | GI-15 |
| Withdrawal lever (clutch) | CL-13 |

A
B
C
D
E
F
G
H
I
J
K
L