

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

Numerics	
3METER - Wiring diagram	DI-35
A	
A/C component layout	ATC-23
A/C compressor mounting	ATC-131
A/C compressor precaution	ATC-11
A/C compressor special service tool	ATC-15
A/C controller	ATC-108
A/C diagnostic work flow (auto A/C)	ATC-97
A/C evaporator	ATC-144
A/C HFC134a (R134a) system precaution	ATC-5
A/C HFC134a (R134a) system service procedure	ATC-129
A/C HFC134a (R134a) system service tools ...	ATC-16
A/C HFC134a system service equipment precaution ...	ATC-12
A/C lubricant (R134a)	ATC-24
A/C lubrication oil	ATC-150
A/C operational check	ATC-57
A/C self-diagnoses (auto A/C)	ATC-49 , ATC-97
A/C service data specification	ATC-150
A/C trouble diagnoses (auto A/C)	ATC-36
A/C, A - Wiring diagram	ATC-42
A/T fluid checking	AT-12 , AT-51 , MA-22
A/T fluid replacement	AT-12 , MA-24
A/T fluid temperature sensor	AT-131
A/T IND - Wiring diagram	DI-74
A/T self-diagnoses	AT-99
A/T shift lock system	AT-231
A/T shift lock system - Wiring diagram	AT-232
A/T trouble diagnoses	AT-41
A/T Wiring diagram AT - CAN	AT-102
A/T Wiring diagram AT - FTS	AT-132
A/T Wiring diagram AT - MAIN	AT-179
A/T Wiring diagram AT - MMSW	AT-166
A/T Wiring diagram AT - NONDTC	AT-185
A/T Wiring diagram AT - PNP/SW	AT-110
A/T Wiring diagram AT - STSIG	AT-105
A/T Wiring diagram AT - VSS A/T	AT-115
Accelerator control system	ACC-3
Accelerator pedal position (APP) sensor	EC-589 , EC-597 , EC-613
Accelerator pedal released position learning	EC-42
AF1B1-Wiring diagram	EC-463 , EC-472 , EC-481 , EC-491 , EC-502 , EC-512 , EC-524
AF1B2-Wiring diagram	EC-465 , EC-474 , EC-483 , EC-493 , EC-504 , EC-514 , EC-526
AF1HB1-Wiring diagram	EC-378
AF1HB2-Wiring diagram	EC-380
Air bag	SRS-3
Air bag precautions	SRS-3
Air bleeding (hydraulic clutch)	CL-7
Air bleeding for brake system	BR-10
Air cleaner and air duct	EM-14
Air cleaner filter replacement	MA-18
Air conditioner cut control	EC-28
Air flow meter - See Mass air flow sensor	EC-153 , EC-163
Air fuel ratio sensor 1	EC-461 , EC-470 , EC-479 , EC-489 , EC-499 , EC-509 , EC-521
Air fuel ratio sensor 1 heater	EC-377
Air mix. door motor	ATC-68 , ATC-123
Air spoiler, rear	EI-30
Ambient sensor	ATC-98 , ATC-110
Angular tightening application	EM-3
Antenna	AV-45
APPS1 - Wiring diagram	EC-591
APPS2 - Wiring diagram	EC-599
APPS3 - Wiring diagram	EC-615
ASC/BS - Wiring diagram	EC-560
ASC/SW - Wiring diagram	EC-552
ASCBOF - Wiring diagram	EC-655
ASCD	EC-688
ASCD (automatic speed control device)	ACS-2
ASCIND - Wiring diagram	EC-670
Ashtray illumination	LT-210
AT indicator lamp	DI-74
Audio	AV-6
AUDIO - Wiring diagram	AV-11
Auto air conditioner - Wiring diagram	ATC-42
Auto amp	ATC-109
Auto anti-dazzling inside mirror	GW-54
Automatic amplifier	ATC-59 , ATC-109
Axle	MA-29
Axle housing (rear)	RAX-8
B	
Back Door	BL-105 , BL-106
Back door	BL-105 , BL-106
Back door opener - See Back door	BL-110
BACK/L - Wiring diagram	LT-179
Back-up lamp	LT-179
Back-up lamp switch (M/T)	MT-12
Battery	SC-4
Battery/Starting/Charging System Tester	SC-6 , SC-15 , SC-23
BCM (Body control module)	BCS-3
Blower motor	ATC-75 , ATC-116
Blower unit	ATC-114
Bose speaker amp.	AV-6 , AV-7
Brake booster	BR-22
Brake fluid change	BR-9
Brake fluid level	MA-27
Brake fluid level and line check	BR-9
Brake hydraulic line	BR-11
Brake inspection	MA-27
Brake lines and cables inspection	MA-27
Brake master cylinder	BR-14
Brake pedal	BR-6
Brake switch	EC-584
BRK/SW - Wiring diagram	EC-585
Bulb specifications	LT-248
Bumper, front	EI-14
Bumper, rear	EI-17

ALPHABETICAL INDEX

C

Camshaft [EM-75](#)
 Camshaft inspection [EM-77](#)
 Camshaft position sensor (PHASE) [EC-274](#)
 CAN - Wiring diagram [EC-140](#), [LAN-12](#), [LAN-39](#),
[LAN-63](#), [LAN-87](#)
 CAN (Controller Area Network) [LAN-5](#), [LAN-11](#),
[LAN-38](#), [LAN-62](#), [LAN-86](#)
 CAN communication . [EC-29](#), [EC-139](#), [AT-30](#), [AT-101](#),
[WT-11](#), [LT-9](#), [LT-40](#), [LT-146](#), [LT-186](#), [LT-237](#), [WW-10](#),
[LAN-5](#), [LAN-11](#), [LAN-38](#), [LAN-62](#), [LAN-86](#)
 Canister-See EVAP canister [EC-677](#)
 CHARGE - Wiring diagram [SC-22](#)
 Charging system [SC-21](#)
 Chassis and body maintenance [MA-22](#)
 CHIME - Wiring diagram [DI-81](#)
 Circuit breaker [PG-16](#)
 Clock [DI-96](#)
 CLOCK - Wiring diagram [DI-96](#)
 Closed loop control [EC-26](#)
 Clutch cover [CL-15](#)
 Clutch disc [CL-15](#)
 Clutch master cylinder [CL-8](#)
 Clutch operating cylinder [CL-11](#)
 Clutch pedal [CL-5](#)
 Clutch release bearing [CL-13](#)
 Clutch release mechanism [CL-13](#)
 Clutch withdrawal lever [CL-13](#)
 Coil spring (front) [FSU-10](#)
 Collision diagnosis [SRS-51](#)
 Combination lamp, front, removal and installation
[LT-65](#), [LT-140](#)
 Combination lamp, rear, removal and installation
[LT-206](#)
 Combination meter [DI-4](#)
 Combination meter removal and installation - See
 Instrument panel [IP-11](#)
 Combination switch [LT-167](#)
 Component Location (auto A/C) [ATC-39](#)
 Compression pressure [EM-90](#)
 Compressor special service tool [ATC-15](#)
 Condenser ... [ATC-139](#), [ATC-142](#), [ATC-143](#), [ATC-144](#),
[ATC-145](#)
 Console box - See Instrument panel [IP-10](#)
 CONSULT for VDC [BRC-108](#)
 Control units (terminal arrangement) [PG-82](#)
 Control valve (A/T) [AT-35](#)
 Controller Area Network (CAN) [LAN-5](#), [LAN-11](#),
[LAN-38](#), [LAN-62](#), [LAN-86](#)
 Converter housing installation [AT-266](#)
 COOL/F - Wiring diagram [EC-443](#)
 Cooling circuit (engine) [CO-7](#)
 Cooling fan [CO-20](#)
 Cooling fan motor [EC-451](#)
 Cowl top [EI-20](#)
 Cowl top cover [EI-20](#)
 Crankcase ventilation system - See Positive crankcase
 ventilation [EC-686](#)

Crankshaft position sensor (POS) [EC-267](#)
 Crash zone sensor [SRS-47](#)
 Cylinder head [EM-90](#)

D

D/LOCK - Wiring diagram [BL-26](#)
 Daytime light system [LT-68](#), [LT-105](#)
 Daytime running light - See Daytime light system
[LT-68](#), [LT-105](#)
 DEF - Wiring diagram [GW-60](#), [GW-64](#)
 Diagnosis sensor unit [SRS-50](#)
 Diagnostic trouble code (DTC) for OBD system .. [EC-8](#)
 Differential carrier assembly [RFD-12](#)
 Differential carrier disassembly [RFD-16](#)
 Differential gear oil replacement [MA-25](#)
 Direct clutch solenoid valve [AT-153](#), [AT-155](#)
 Display and amp.assembly [ATC-59](#)
 Door glass [GW-51](#)
 Door glass Fitting Adjustment(Front) [GW-53](#)
 Door lock [BL-103](#)
 Door mirror [GW-83](#)
 Door trim [EI-33](#)
 Door, front [BL-97](#), [BL-98](#), [GW-51](#)
 Drive belt [EM-12](#)
 Drive pinion diff. inspection [RFD-15](#)
 Drive pinion height [RFD-21](#), [RFD-24](#)
 Drive shaft (rear) [RAX-10](#)
 Driver air bag [SRS-40](#)
 DTRL - Wiring diagram [LT-73](#), [LT-110](#)
 Duct and grilles [ATC-125](#)

E

ECM power supply [EC-130](#), [EC-384](#)
 ECM/PW - Wiring diagram [EC-385](#)
 ECTS - Wiring diagram [EC-180](#)
 Electric throttle control actuator [EC-395](#), [EC-397](#)
 Electrical load signal circuit [EC-653](#)
 Electrical unit [PG-82](#)
 Electrical units location [PG-74](#)
 Electronic ignition (EI) system [EC-27](#)
 Engine control module (ECM) [EC-374](#)
 Engine control system diagram and chart [EC-22](#)
 Engine coolant [CO-9](#)
 Engine coolant temperature sensor (ECTS) ... [EC-178](#),
[EC-192](#)
 Engine oil [LU-6](#)
 Engine oil filter replacement [MA-19](#)
 Engine oil precautions [GI-7](#)
 Engine removal [EM-103](#)
 ETC1 - Wiring diagram [EC-398](#)
 ETC2 - Wiring diagram [EC-406](#)
 ETC3 - Wiring diagram [EC-410](#)
 EVAP canister [EC-677](#)
 EVAP canister purge volume control solenoid valve
[EC-301](#), [EC-533](#)
 EVAP canister vent control valve [EC-308](#), [EC-541](#)
 EVAP control system (small leak) diagnosis .. [EC-292](#),

A
B
C
D
E
F
G
H
I
J
K
L



ALPHABETICAL INDEX

[EC-339](#)
EVAP control system pressure sensor [EC-317](#),
[EC-320](#), [EC-329](#)
EVAP control system purge flow monitoring diagnosis
[EC-287](#)
EVAP vapor lines inspection [MA-21](#)
Evaporative emission (EVAP) system [EC-674](#)
Evaporator [ATC-144](#)
Exhaust manifold [EM-23](#)
Exhaust system [EX-3](#)
Exhaust system inspection [EX-3](#), [MA-22](#)
Expansion valve [ATC-145](#)

F

F/LID - Wiring diagram [BL-54](#)
F/PUMP - Wiring diagram [EC-641](#)
Final drive pre-inspection [RFD-15](#)
Final drive removal and installation [RFD-10](#)
Floor trim [EI-43](#)
Flow charts [GI-27](#)
Fluid temperature sensor (A/T) [AT-131](#)
Fluorescent leak detector [ATC-146](#)
Flywheel (clutch) [CL-15](#)
Flywheel runout(QR) [EM-137](#)
Front axle [FAX-4](#)
Front brake solenoid valve [AT-149](#), [AT-151](#)
Front bumper [EI-14](#)
Front combination lamp removal and installation [LT-65](#),
[LT-140](#)
Front door [BL-97](#), [BL-98](#), [GW-51](#)
Front passenger air bag [SRS-44](#)
Front seat belt [SB-4](#)
Front seat belt pre-tensioner [SB-2](#), [SRS-3](#), [SRS-49](#)
Front suspension [FSU-5](#)
Front washer [WW-4](#)
Front wiper [WW-4](#)
FTTS - Wiring diagram [EC-240](#), [EC-244](#)
Fuel cut control (at no load high engine speed) . [EC-28](#)
Fuel filter replacement [FL-4](#)
Fuel gauge [DI-4](#)
Fuel level sensor [EC-357](#), [EC-359](#), [EC-361](#)
Fuel lid opener, electric [BL-53](#)
Fuel line inspection [FL-3](#), [MA-17](#)
Fuel precautions [GI-5](#)
Fuel pressure check [EC-45](#)
Fuel pressure release [EC-45](#)
Fuel pump [EC-640](#)
Fuel pump and gauge [FL-4](#)
Fuel system [FL-3](#)
Fuel tank [FL-10](#)
Fuel tank temperature sensor [EC-238](#), [EC-243](#)
Fuel tank vacuum relief valve [EC-677](#)
FUELB1 - Wiring diagram [EC-223](#), [EC-232](#)
FUELB2 - Wiring diagram [EC-224](#), [EC-233](#)
Fuse [PG-16](#)
Fuse and fusible link box [PG-89](#)
Fusible link [PG-16](#)

G

Gauges [DI-4](#)
Glass [GW-11](#), [GW-51](#)
Ground distribution [PG-31](#)

H

H/LAMP - Wiring diagram [LT-11](#), [LT-42](#)
Harness connector [PG-80](#)
Harness layout [PG-47](#)
Hazard warning lamp [LT-143](#)
Headlamp [LT-7](#), [LT-38](#)
Headlamp removal and installation [LT-65](#), [LT-140](#)
Headlining - See Roof trim [EI-44](#), [EI-45](#)
Heated oxygen sensor 2 (bank 1) [EC-201](#), [EC-210](#),
[EC-414](#), [EC-425](#)
Heated oxygen sensor 2 (bank 2) [EC-201](#), [EC-210](#),
[EC-414](#), [EC-425](#)
Heated oxygen sensor 2 heater (bank 1) [EC-145](#)
Heated oxygen sensor 2 heater (bank 2) [EC-145](#)
Heated seat [SE-57](#)
Heater and cooling unit (Heater core) [ATC-118](#)
HFC134a (R134a) system precaution [ATC-5](#)
HFC134a (R134a) system service procedure [ATC-129](#)
HFC134a (R134a) system service tools [ATC-16](#)
HFC134a system service equipment precaution
[ATC-12](#)
High & low reverse clutch solenoid valve [AT-157](#),
[AT-159](#)
Hood [BL-13](#)
Hood lock system [BL-16](#)
Horn [WW-55](#)
HORN - Wiring diagram [WW-55](#)

I

IATS - Wiring diagram [EC-174](#)
Idle air volume learning [EC-43](#)
Idle mixture ratio [EC-31](#)
Idle speed [EC-31](#)
Idle speed control (ISC) [EC-365](#), [EC-367](#)
Ignition coil [EM-33](#), [EC-622](#)
Ignition control system [EC-622](#)
Ignition timing [EC-31](#)
IGNSYS - Wiring diagram [EC-623](#)
ILL - Wiring diagram [LT-239](#)
Illumination [LT-236](#)
In vehicle sensor [ATC-100](#), [ATC-111](#)
INJECT - Wiring diagram [EC-635](#)
Injector [EC-634](#)
Input clutch solenoid valve [AT-145](#), [AT-147](#)
Instrument panel [IP-10](#)
Intake air temperature sensor [EC-172](#), [EC-196](#)
Intake door control linkage adjustment [ATC-74](#)
Intake door motor [ATC-72](#), [ATC-117](#)
Intake manifold [EM-21](#)
Intake manifold collector [EM-16](#)
Intake sensor [ATC-106](#), [ATC-113](#)

ALPHABETICAL INDEX

Intake valve timing control (Bank 1) [EC-142](#)
 Intake valve timing control (Bank 2) [EC-142](#)
 Intake valve timing control solenoid valve (Bank 1)
[EC-388](#)
 Intake valve timing control solenoid valve (Bank 2)
[EC-388](#)
 Integrated homelink transmitter [BL-177](#)
 Interior [EI-35](#)
 Interior lamp [LT-211](#)
 IPDM (Intelligent power distribution module engine
 room) [PG-17](#)
 IVCB1 - Wiring diagram [EC-389](#)
 IVCB2 - Wiring diagram [EC-391](#)
 IVIS (Infiniti vehicle immobilizer system) precautions ...
[GI-3](#)

K

KEYLES - Wiring diagram [BL-67](#)
 Knock sensor (KS) [EC-262](#)
 KS - Wiring diagram [EC-263](#)

L

LAN system circuit [ATC-61](#)
 License lamp [LT-184](#)
 Line pressure solenoid valve [AT-124](#)
 Line pressure test (A/T) [AT-52](#)
 Liquid gasket application [LU-2, CO-2](#)
 Location of electrical units [PG-74](#)
 Lock, door [BL-103](#)
 Low coast brake solenoid valve [AT-161, AT-163](#)
 Low tire pressure warning system [WT-9](#)
 Lubricant (R134a) A/C [ATC-6, ATC-24](#)
 Lubrication circuit (engine) [LU-4](#)
 Lubrication oil A/C [ATC-150](#)

M

M/ANT - Wiring diagram [AV-46](#)
 M/T major overhaul [MT-27](#)
 M/T oil replacement [MT-10](#)
 M/T removal and installation [MT-19](#)
 MAFS - Wiring diagram [EC-156, EC-165](#)
 Magnet clutch [ATC-80](#)
 MAIN - Wiring diagram [EC-130](#)
 Maintenance (engine) [MA-14](#)
 Major overhaul (Final drive) [RFD-16](#)
 Manual transmission oil replacement [MA-22](#)
 Mass air flow sensor (MAFS) [EC-153, EC-163](#)
 Master cylinder (clutch) [CL-8](#)
 Meter [DI-4](#)
 METER - Wiring diagram [DI-9](#)
 MIL data link connectors circuit [EC-672](#)
 MIL/DL - Wiring diagram [EC-672](#)
 MIRROR - Wiring diagram [GW-82](#)
 Mirror, door [GW-83](#)
 Mirror, out side [GW-83](#)
 Misfire [EC-255](#)

Mode door control linkage adjustment [ATC-67](#)
 Mode door motor [ATC-65, ATC-122](#)
 Molding - See Exterior [EI-22, EI-26](#)
 Multiport fuel injection (MFI) system [EC-25](#)
 Multiport fuel injection precautions [GI-6](#)

N

NATS - Wiring diagram [BL-161](#)
 NAVI - Wiring diagram [AV-65](#)
 Navigation system [AV-49](#)
 NVH troubleshooting (BR) [BR-5](#)
 NVIS (Nissan vehicle immobilizer system) [BL-158](#)
 NVIS (Nissan vehicle immobilizer system) precautions
[GI-3](#)

O

O2H2B1 - Wiring diagram [EC-147](#)
 O2H2B2 - Wiring diagram [EC-149](#)
 O2S2B1 - Wiring diagram .. [EC-203, EC-213, EC-417,](#)
[EC-428](#)
 O2S2B2 - Wiring diagram .. [EC-205, EC-215, EC-419,](#)
[EC-430](#)
 Oil cooler (engine) [LU-10](#)
 Oil filter [LU-9](#)
 Oil pan (engine) [EM-27](#)
 Oil pressure (engine) [LU-7](#)
 Oil pump (engine) [LU-12](#)
 Oil pump regulator valve (engine) [LU-12](#)
 Oil seal replacement (front of final drive) [RFD-6](#)
 Oil seal replacement (side of final drive) [RFD-8](#)
 Operating cylinder (clutch) [CL-11](#)
 ORVR (On-board Refueling Vapor Recovery) . [EC-681](#)
 Out side mirror [GW-83](#)
 Overheat [EC-439](#)

P

P/SCKT - Wiring diagram [WW-53](#)
 Park/Neutral position switch [EC-576](#)
 Park/neutral position switch (A/T) [AT-109](#)
 Parking brake control [PB-3](#)
 Parking lamp [LT-184](#)
 PCV (positive crankcase ventilation) [EC-686](#)
 PGC/V - Wiring diagram [EC-303, EC-535](#)
 PHSB1 - Wiring diagram [EC-275](#)
 PHSB2 - Wiring diagram [EC-277](#)
 Pinion bearing preload diff. [RFD-30](#)
 Pinion gear height diff. [RFD-24](#)
 PNP/SW - Wiring diagram [EC-578](#)
 POS - Wiring diagram [EC-268](#)
 POWER - Wiring diagram [PG-5](#)
 Power door lock [BL-21](#)
 Power socket [WW-53](#)
 Power steering fluid level [PS-6, MA-29](#)
 Power steering gear [PS-17](#)
 Power steering oil pump [PS-29](#)
 Power steering system bleeding [PS-6](#)

A
B
C
D
E
F
G
H
I
J
K
L

ALPHABETICAL INDEX

Power supply routing	PG-4	Shock absorber (front)	FSU-10
Power window	GW-18	Shock absorber (rear)	RSU-9
PRE/SE - Wiring diagram	EC-322 , EC-331	Side air bag (satellite) sensor	SRS-48
Precautions for Leak detection dye	ATC-14	Side bearing preload diff.	RFD-23
Precautions (General)	GI-4	Side flange installation diff.	RFD-9
Pressure plate - See Clutch cover	CL-15	Side trim	EI-35
Pressure switch 1	AT-151 , AT-171	SMJ (super multiple junction)	PG-84
Pressure switch 2	AT-163	Spark plug	EM-34
Pressure switch 3	AT-147 , AT-173	Spark plug replacement	MA-20
Pressure switch 5	AT-155 , AT-175	Specification value	EC-125
Pressure switch 6	AT-159 , AT-177	Speedometer	DI-4
Pressure test (A/T)	AT-52	Spiral cable	SRS-42
Propeller shaft	PR-5	SRS - See Supplemental Restraint System	SRS-5
Propeller shaft inspection	MA-25	SRS - Wiring diagram	SRS-11
Propeller shaft on vehicle service	PR-5	SRS Trouble diagnoses	SRS-7
Propeller shaft vibration	PR-5	Stabilizer bar (rear)	RSU-16
PS/SEN - Wiring diagram	EC-370	Standardized relay	PG-86

R

Radiator	CO-12
Radio - See Audio	AV-6
Rear axle	RAX-6
Rear bumper	EI-17
Rear combination lamp removal and installation	LT-206
Rear cover packing replacement diff.	RFD-31
Rear suspension	RSU-5
Rear washer	WW-38
Rear window defogger	GW-56
Rear wiper	WW-38
Refrigerant connection precaution	ATC-6
Refrigerant discharging evacuating charging	ATC-129
Refrigerant general precaution	ATC-6
Refrigerant lines	ATC-129
Refrigerant pressure sensor	EC-647 , ATC-86 , ATC-143
Refrigeration cycle	ATC-19
Release bearing (clutch)	CL-13
Remote keyless entry system	BL-61
Removal and installation (A/T)	AT-264
Reverse lamp switch (M/T) - See Back-up lamp switch (M/T)	MT-12
Revolution sensor (A/T)	AT-113
Ring gear diff. inspection	RFD-15
Rocker cover	EM-42
Room lamp - See Interior lamp	LT-211
ROOM/L - Wiring diagram	LT-215
RP/SEN - Wiring diagram	EC-648

S

SEAT - Wiring diagram	SE-12
Seat belt inspection	SB-8
Seat belt, front	SB-4
SEN/PW - Wiring diagram	EC-457
SHIFT - Wiring diagram	AT-232
Shift lock system	AT-231
Shift schedule	AT-333

Shock absorber (front)	FSU-10
Shock absorber (rear)	RSU-9
Side air bag (satellite) sensor	SRS-48
Side bearing preload diff.	RFD-23
Side flange installation diff.	RFD-9
Side trim	EI-35
SMJ (super multiple junction)	PG-84
Spark plug	EM-34
Spark plug replacement	MA-20
Specification value	EC-125
Speedometer	DI-4
Spiral cable	SRS-42
SRS - See Supplemental Restraint System	SRS-5
SRS - Wiring diagram	SRS-11
SRS Trouble diagnoses	SRS-7
Stabilizer bar (rear)	RSU-16
Standardized relay	PG-86
START - Wiring diagram	SC-12
Starter	SC-10
Starting system	SC-10
Steering gear and linkage inspection	MA-28
Steering linkage	PS-17
Steering wheel and column	PS-8 , PS-10
Steering wheel turning force	PS-8
Stop lamp	LT-173
Stop lamp switch	EC-584
STOP/L - Wiring diagram	LT-175
Sunload sensor	ATC-103 , ATC-112
Supplemental Restraint System	SRS-5
Supplemental restraint system - Wiring diagram	SRS-11
Suspension	MA-29
Symbols and abbreviations	GI-10 , GI-23

T

Tachometer	DI-4
Tail lamp	LT-184
TAIL/L - Wiring diagram	LT-188
TCM circuit diagram	AT-50
TCM inspection table	AT-86
Three way catalyst	EM-23
Three way catalyst function (Bank 1)	EC-283
Three way catalyst function (Bank 2)	EC-283
Three way catalyst precautions	GI-5
Throttle body	EM-20
Throttle control motor	EC-409
Throttle control motor relay	EC-404
Throttle position sensor (TPS)	EC-184 , EC-247 , EC-452 , EC-454 , EC-605
Throwout bearing - See Clutch release bearing	CL-13
Thrust washer selection diff.	RFD-22
Tie-rod	PS-17
Timing chain	EM-55
Tire rotation	WT-8 , MA-27
Tooth contact diff.	RFD-27
Torque converter installation	AT-265 , AT-266
Torque convertor clutch solenoid valve	AT-120 , AT-122
TPS1 - Wiring diagram	EC-249

ALPHABETICAL INDEX

TPS2 - Wiring diagram	EC-186	WIP/R - Wiring diagram	WW-40	A	
TPS3 - Wiring diagram	EC-607	WIPER - Wiring diagram	WW-12		
Transverse link (front)	FSU-13	Wiper, front	WW-4		
Triple meter	DI-30	Wiper, rear	WW-38		
TRNSCV - Wiring diagram	BL-177	Wiring Diagram (Cell code) list	PG-71	B	
Trouble diagnoses	GI-11	Wiring diagrams	GI-15		
Trunk lid	BL-112	Withdrawal lever (clutch)	CL-13		
Turbine revolution sensor	AT-136	WT-T/WARN - Wiring diagram	WT-13	C	
TURN - Wiring diagram	LT-148				
Turn signal lamp	LT-143				
Tyre pressure monitoring system - trouble diagnoses ..					
WT-12				D	
Tyre pressure monitoring system - wiring diagram					
WT-13					
U					E
<hr/>					
Unified meter and A/C amp.	DI-54				
Upper link (front susp.)	FSU-14			F	
V					G
<hr/>					
Vacuum hose (brake system)	BR-24				
Vacuum hose drawing (Engine control)	EC-23				
Valve clearance	EM-83			H	
Valve guide	EM-98				
Valve lifter	EM-79				
Valve seat	EM-100			I	
Valve spring	EM-101				
Vanity mirror lamp	LT-207				
VDC -Wiring diagram	BRC-99			J	
Vehicle security (theft warning) system	BL-129				
Vehicle speed sensor (VSS)	EC-363				
VEHSEC - Wiring diagram	BL-134				
VENT/V - Wiring diagram	EC-310 , EC-543			K	
VIN registration	EC-42				
W					L
<hr/>					
WARN - Wiring diagram	DI-63				
Warning chime	DI-77				
Warning lamps	DI-62				
Washer, front	WW-4				
Washer, rear	WW-38				
Water pump	CO-22				
Water temperature gauge	DI-4				
Wheel alignment (front)	FSU-6				
Wheel alignment (rear)	RSU-5				
Wheel balance	WT-7 , MA-25				
Wheel bearing (front)	FAX-4				
Wheel bearing (rear)	RAX-6				
Wheel hub (front)	FAX-4				
Wheel hub (rear)	RAX-6				
Wheel sensor (VDC)	BRC-143				
Wheel sensors (ABS)	BRC-38				
Wheel sensors (TCS)	BRC-83				
WINDOW - Wiring diagram	GW-23				
Window, door	GW-51				
Windshield	GW-11				