

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

Numerics	
3METER - Wiring diagram	DI-37
A	
A/C component layout	ATC-23
A/C compressor mounting	ATC-131
A/C compressor precaution	ATC-11
A/C compressor special service tool	ATC-15
A/C controller	ATC-108
A/C diagnostic work flow (auto A/C)	ATC-97
A/C evaporator	ATC-144
A/C HFC134a (R134a) system precaution	ATC-5
A/C HFC134a (R134a) system service procedure	ATC-129
A/C HFC134a (R134a) system service tools ...	ATC-16
A/C HFC134a system service equipment precaution ...	ATC-12
A/C lubricant (R134a)	ATC-24
A/C lubrication oil	ATC-150
A/C operational check	ATC-57
A/C self-diagnoses (auto A/C)	ATC-49 , ATC-97
A/C service data specification	ATC-150
A/C trouble diagnoses (auto A/C)	ATC-36
A/C, A - Wiring diagram	ATC-42
A/T fluid checking	AT-12 , AT-51
A/T fluid cooler cleaning	AT-14
A/T fluid replacement	AT-12
A/T fluid temperature sensor	AT-137
A/T IND - Wiring diagram	DI-76
A/T self-diagnoses	AT-99
A/T shift lock system	AT-233
A/T shift lock system - Wiring diagram	AT-234
A/T trouble diagnoses	AT-41
A/T Wiring diagram AT - CAN	AT-103
A/T Wiring diagram AT - FTS	AT-138
A/T Wiring diagram AT - MMSW	AT-172
A/T Wiring diagram AT - NONDTC	AT-187
A/T Wiring diagram AT - PNP/SW	AT-110
A/T Wiring diagram AT - POWER	AT-127
A/T Wiring diagram AT - STSIG	AT-106
A/T Wiring diagram AT - VSS A/T	AT-115
Accelerator control system	ACC-3
Accelerator pedal position (APP) sensor	EC-566 , EC-574 , EC-590
Accelerator pedal released position learning	EC-42
Air bag	SRS-3
Air bag precautions	SRS-3
Air bleeding (hydraulic clutch)	CL-7
Air bleeding for brake system	BR-10
Air cleaner and air duct	EM-14
Air cleaner filter	EM-15
Air cleaner filter replacement	MA-18
Air conditioner cut control	EC-28
Air flow meter - See Mass air flow sensor	EC-161 , EC-170
Air mix. door motor	ATC-68 , ATC-123
Air spoiler, rear	EI-29
Ambient sensor	ATC-98 , ATC-110
Angular tightening application	EM-3
Antenna	AV-45
APPS1 - Wiring diagram	EC-568
APPS2 - Wiring diagram	EC-576
APPS3 - Wiring diagram	EC-592
ASC/BS - Wiring diagram	EC-536
ASC/SW - Wiring diagram	EC-528
ASCBOF - Wiring diagram	EC-632
ASCD	EC-666
ASCD (automatic speed control device)	ACS-2
ASCIND - Wiring diagram	EC-648
Ashtray illumination	LT-205
AT indicator lamp	DI-76
Audio	AV-6
AUDIO - Wiring diagram	AV-11
Auto air conditioner - Wiring diagram	ATC-42
Auto amp	ATC-109
Auto anti-dazzling inside mirror	GW-57
Automatic amplifier	ATC-59 , ATC-109
Automatic transmission fluid replacement	MA-24
Axle	MA-29
Axle housing (rear)	RAX-8
B	
Back Door	BL-104 , BL-105
Back door	BL-104 , BL-105
Back door opener - See Back door	BL-110
BACK/L - Wiring diagram	LT-174
Back-up lamp	LT-174
Back-up lamp switch (M/T)	MT-12
Battery	SC-4
Battery/Starting/Charging System Tester	SC-6 , SC-15 , SC-23
BCM (Body control module)	BCS-3
Block heater	EM-109
Blower motor	ATC-75 , ATC-116
Blower unit	ATC-114
Boring/horning cylinder block	EM-133
Bose speaker amp.	AV-6 , AV-7
Brake booster	BR-22
Brake fluid change	BR-9
Brake fluid level	MA-27
Brake fluid level and line check	BR-9
Brake hydraulic line	BR-11
Brake inspection	MA-27
Brake lines and cables inspection	MA-27
Brake master cylinder	BR-14
Brake pedal	BR-6
Brake switch	EC-561
BRK/SW - Wiring diagram	EC-562
Bulb specifications	LT-238
Bumper, front	EI-14
Bumper, rear	EI-17
C	
Camshaft	EM-75

ALPHABETICAL INDEX

Camshaft inspection	EM-77	Crankshaft	EM-134
Camshaft position sensor (PHASE)	EC-313	Crankshaft position sensor (POS)	EC-306
CAN - Wiring diagram	EC-139 , LAN-13 , LAN-40 , LAN-64 , LAN-88	Crash zone sensor	SRS-47
CAN (Controller Area Network)	LAN-5 , LAN-12 , LAN-39 , LAN-63 , LAN-87	Cylinder block	EM-109
CAN communication .	EC-29 , EC-138 , AT-30 , AT-102 , WT-11 , LT-9 , LT-39 , LT-138 , LT-181 , LT-227 , WW-9 , LAN-5 , LAN-12 , LAN-39 , LAN-63 , LAN-87	Cylinder head	EM-90
Canister-See EVAP canister	EC-655	Cylinder head bolt tightening	EM-93
CHARGE - Wiring diagram	SC-22	D	
Charging system	SC-21	D/LOCK - Wiring diagram	BL-26
Chassis and body maintenance	MA-22	Daytime light system	LT-66 , LT-101
CHIME - Wiring diagram	DI-84	Daytime running light - See Daytime light system	LT-66 , LT-101
Circuit breaker	PG-16	DEF - Wiring diagram	GW-63 , GW-67
Clock	DI-99	Diagnosis sensor unit	SRS-50
CLOCK - Wiring diagram	DI-99	Diagnostic trouble code (DTC) for OBD system ..	EC-8
Closed loop control	EC-26	Differential carrier assembly	RFD-12
Clutch cover	CL-15	Differential carrier disassembly	RFD-16
Clutch disc	CL-15	Differential gear oil replacement	MA-25
Clutch master cylinder	CL-8	Direct clutch solenoid valve	AT-159 , AT-161
Clutch operating cylinder	CL-11	Display and amp.assembly	ATC-59
Clutch pedal	CL-5	Door glass	GW-54
Clutch release bearing	CL-13	Door glass Fitting Adjustment(Front)	GW-56
Clutch release mechanism	CL-13	Door lock	BL-102
Clutch withdrawal lever	CL-13	Door mirror	GW-87
Coil spring (front)	FSU-10	Door trim	EI-32
Collision diagnosis	SRS-51	Door, front	BL-96 , BL-97 , GW-54
Combination lamp, front, removal and installation	LT-63 , LT-132	Drive belt	EM-12
Combination lamp, rear, removal and installation	LT-199	Drive pinion diff. inspection	RFD-15
Combination meter	DI-4	Drive pinion height	RFD-21 , RFD-24
Combination meter removal and installation - See		Drive shaft	MA-30
Instrument panel	IP-11	Drive shaft (rear)	RAX-10
Combination switch	LT-157	Driver air bag	SRS-40
Component Location (auto A/C)	ATC-39	DTRL - Wiring diagram	LT-71 , LT-106
Compression pressure	EM-90	Duct and grilles	ATC-125
Compressor special service tool	ATC-15	E	
Condenser ...	ATC-139 , ATC-142 , ATC-143 , ATC-144 , ATC-145	ECM power supply	EC-129 , EC-417
Connecting rod	EM-130	ECM/PW - Wiring diagram	EC-418
Connecting rod bearing clearance	EM-134	ECTS - Wiring diagram	EC-186
Connecting rod bushing clearance	EM-130	Electric throttle control actuator	EM-20 , EC-428 , EC-430
Console box - See Instrument panel	IP-10	Electrical load signal circuit	EC-630
CONSULT for VDC	BRC-108	Electrical unit	PG-81
Control units (terminal arrangement)	PG-81	Electrical units location	PG-73
Control valve (A/T)	AT-35	Electronic ignition (EI) system	EC-27
Controller Area Network (CAN)	LAN-5 , LAN-12 , LAN-39 , LAN-63 , LAN-87	Engine control module (ECM)	EC-414
Converter housing installation	AT-268	Engine control system diagram and chart	EC-22
COOL/F - Wiring diagram	EC-491	Engine coolant	CO-10
Cooling circuit (engine)	CO-8	Engine coolant temperature sensor (ECTS) ...	EC-184 , EC-198
Cooling fan	CO-21	Engine oil	LU-6
Cooling fan motor	EC-499	Engine oil filter replacement	MA-19
Cowl top	EI-20	Engine oil precautions	GI-7
Cowl top cover	EI-20	Engine removal	EM-103
Crankcase ventilation system - See Positive crankcase		ETC1 - Wiring diagram	EC-431
ventilation	EC-664	ETC2 - Wiring diagram	EC-439
		ETC3 - Wiring diagram	EC-443

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

EVAP canister [EC-655](#)
EVAP canister purge volume control solenoid valve
[EC-341](#), [EC-509](#)
EVAP canister vent control valve [EC-348](#), [EC-517](#)
EVAP control system (small leak) diagnosis .. [EC-332](#),
[EC-379](#)
EVAP control system pressure sensor [EC-357](#),
[EC-360](#), [EC-369](#)
EVAP control system purge flow monitoring diagnosis
[EC-327](#)
EVAP vapor lines inspection [MA-21](#)
Evaporative emission (EVAP) system [EC-652](#)
Evaporator [ATC-144](#)
Exhaust manifold [EM-23](#)
Exhaust system [EX-3](#)
Exhaust system inspection [EX-3](#), [MA-22](#)
Expansion valve [ATC-145](#)

F

F/LID - Wiring diagram [BL-56](#)
F/PUMP - Wiring diagram [EC-618](#)
Final drive pre-inspection [RFD-15](#)
Final drive removal and installation [RFD-10](#)
Floor trim [EI-42](#)
Flow charts [GI-27](#)
Fluid temperature sensor (A/T) [AT-137](#)
Fluorescent leak detector [ATC-146](#)
Flywheel (clutch) [CL-15](#)
Flywheel runout [EM-137](#)
Front brake solenoid valve [AT-155](#), [AT-157](#)
Front bumper [EI-14](#)
Front combination lamp removal and installation [LT-63](#),
[LT-132](#)
Front door [BL-96](#), [BL-97](#), [GW-54](#)
Front passenger air bag [SRS-44](#)
Front seat belt [SB-4](#)
Front seat belt pre-tensioner [SB-2](#), [SRS-3](#), [SRS-49](#)
Front washer [WW-4](#)
Front wiper [WW-4](#)
FTTS - Wiring diagram [EC-278](#), [EC-283](#)
Fuel cut control (at no load high engine speed) . [EC-28](#)
Fuel filter replacement [FL-4](#)
Fuel gauge [DI-4](#)
Fuel injector and fuel tube [EM-36](#)
Fuel level sensor [EC-397](#), [EC-399](#), [EC-401](#)
Fuel lid opener, electric [BL-55](#)
Fuel line inspection [FL-3](#), [MA-18](#)
Fuel precautions [GI-5](#)
Fuel pressure check [EC-44](#)
Fuel pressure release [EC-44](#)
Fuel pump [EC-617](#)
Fuel pump and gauge [FL-4](#)
Fuel system [FL-3](#)
Fuel tank [FL-10](#)
Fuel tank temperature sensor [EC-276](#), [EC-282](#)
Fuel tank vacuum relief valve [EC-655](#)
FUELB1 - Wiring diagram [EC-262](#), [EC-270](#)
FUELB2 - Wiring diagram [EC-263](#), [EC-271](#)

Fuse [PG-16](#)
Fuse and fusible link box [PG-88](#)
Fusible link [PG-16](#)

G

Gauges [DI-4](#)
Glass [GW-11](#), [GW-54](#)
Ground distribution [PG-30](#)

H

H/LAMP - Wiring diagram [LT-11](#), [LT-41](#)
Harness connector [PG-79](#)
Harness layout [PG-46](#)
Hazard warning lamp [LT-135](#)
Headlamp [LT-7](#), [LT-37](#)
Headlamp removal and installation [LT-63](#), [LT-132](#)
Headlining - See Roof trim [EI-43](#), [EI-44](#)
Heated oxygen sensor 1 (bank 1) [EC-207](#), [EC-217](#),
[EC-230](#), [EC-447](#), [EC-454](#)
Heated oxygen sensor 1 (bank 2) [EC-207](#), [EC-217](#),
[EC-230](#), [EC-447](#), [EC-454](#)
Heated oxygen sensor 1 heater (bank 1) [EC-144](#)
Heated oxygen sensor 1 heater (bank 2) [EC-144](#)
Heated oxygen sensor 2 (bank 1) [EC-240](#), [EC-249](#),
[EC-461](#), [EC-472](#)
Heated oxygen sensor 2 (bank 2) [EC-240](#), [EC-249](#),
[EC-461](#), [EC-472](#)
Heated oxygen sensor 2 heater (bank 1) [EC-153](#)
Heated oxygen sensor 2 heater (bank 2) [EC-153](#)
Heated seat [SE-59](#)
Heater and cooling unit (Heater core) [ATC-118](#)
HFC134a (R134a) system precaution [ATC-5](#)
HFC134a (R134a) system service procedure [ATC-129](#)
HFC134a (R134a) system service tools [ATC-16](#)
HFC134a system service equipment precaution
[ATC-12](#)
High & low reverse clutch solenoid valve [AT-163](#),
[AT-165](#)
Hood [BL-13](#)
Hood lock system [BL-16](#)
Horn [WW-52](#)
HORN - Wiring diagram [WW-52](#)

I

IATS - Wiring diagram [EC-180](#)
Idle air volume learning [EC-42](#)
Idle mixture ratio [EC-31](#)
Idle speed [EC-31](#)
Idle speed control (ISC) [EC-405](#), [EC-407](#)
Ignition coil [EM-33](#), [EC-599](#)
Ignition control system [EC-599](#)
Ignition timing [EC-31](#)
IGNSYS - Wiring diagram [EC-600](#)
ILL - Wiring diagram [LT-229](#)
Illumination [LT-226](#)
In vehicle sensor [ATC-100](#), [ATC-111](#)

ALPHABETICAL INDEX

INJECT - Wiring diagram	EC-612
Injector	EC-611
Input clutch solenoid valve	AT-151, AT-153
Instrument panel	IP-10
INT/L - Wiring diagram	LT-201
Intake air temperature sensor	EC-178, EC-202
Intake door control linkage adjustment	ATC-74
Intake door motor	ATC-72, ATC-117
Intake manifold	EM-21
Intake manifold collector	EM-16
Intake sensor	ATC-106, ATC-113
Intake valve timing control (Bank 1)	EC-141
Intake valve timing control (Bank 2)	EC-141
Intake valve timing control solenoid valve (Bank 1)	EC-421
Intake valve timing control solenoid valve (Bank 2)	EC-421
Integrated homelink transmitter	BL-174
Interior	EI-34
Interior lamp	LT-206
IPDM (Intelligent power distribution module engine room)	PG-17
IVCB1 - Wiring diagram	EC-422
IVCB2 - Wiring diagram	EC-424
IVIS (Infiniti vehicle immobilizer system) precautions ...	GI-3

K

KEYLES - Wiring diagram	BL-69
Knock sensor (KS)	EC-301
KS - Wiring diagram	EC-302

L

LAN system circuit	ATC-61
License lamp	LT-179
Line pressure solenoid valve	AT-124
Line pressure test (A/T)	AT-52
Liquid gasket application	EM-4, LU-2, CO-2
Location of electrical units	PG-73
Lock, door	BL-102
Low coast brake solenoid valve	AT-167, AT-169
Low tire pressure warning system	WT-9
Lubricant (R134a) A/C	ATC-6, ATC-24
Lubrication circuit (engine)	LU-4
Lubrication oil A/C	ATC-150

M

M/ANT - Wiring diagram	AV-46
M/T major overhaul	MT-27
M/T oil replacement	MT-10
M/T removal and installation	MT-19
MAFS - Wiring diagram	EC-164, EC-172
Magnet clutch	ATC-80
MAIN - Wiring diagram	EC-129
Maintenance (engine)	MA-14
Major overhaul (Final drive)	RFD-16

Manual transmission oil replacement	MA-22
Mass air flow sensor (MAFS)	EC-161, EC-170
Master cylinder (clutch)	CL-8
Meter	DI-4
METER - Wiring diagram	DI-9
MIL data link connectors circuit	EC-650
MIL/DL - Wiring diagram	EC-650
MIRROR - Wiring diagram	GW-86
Mirror, door	GW-87
Mirror, out side	GW-87
Misfire	EC-295
Mode door control linkage adjustment	ATC-67
Mode door motor	ATC-65, ATC-122
Molding - See Exterior	EI-22, EI-26
Multiport fuel injection (MFI) system	EC-25
Multiport fuel injection precautions	GI-6

N

NATS - Wiring diagram	BL-159
NAVI - Wiring diagram	AV-65
Navigation system	AV-49
NVH troubleshooting (BR)	BR-5
NVH troubleshooting (EM)	EM-10
NVIS (Nissan vehicle immobilizer system)	BL-156
NVIS (Nissan vehicle immobilizer system) precautions	GI-3

O

O2H1B1 - Wiring diagram	EC-146
O2H1B2 - Wiring diagram	EC-148
O2H2B1 - Wiring diagram	EC-155
O2H2B2 - Wiring diagram	EC-157
O2S1B1 - Wiring diagram ...	EC-209, EC-220, EC-233
O2S1B2 - Wiring diagram ...	EC-211, EC-222, EC-235
O2S2B1 - Wiring diagram ..	EC-242, EC-252, EC-464, EC-475
O2S2B2 - Wiring diagram ..	EC-244, EC-254, EC-466, EC-477
Oil cooler (engine)	LU-10
Oil filter	LU-9
Oil pan (engine)	EM-27
Oil pressure (engine)	LU-7
Oil pump (engine)	LU-12
Oil pump regulator valve (engine)	LU-12
Oil seal replacement (engine)	EM-87
Oil seal replacement (front of final drive)	RFD-6
Oil seal replacement (side of final drive)	RFD-8
Operating cylinder (clutch)	CL-11
ORVR (On-board Refueling Vapor Recovery) .	EC-659
Out side mirror	GW-87
Overheat	EC-487
Oversize piston	EM-132

P

P/SCKT - Wiring diagram	WW-50
Park/Neutral position switch	EC-553

A
B
C
D
E
F
G
H
I
J
K
L

ALPHABETICAL INDEX

T

Tachometer	DI-4
Tail lamp	LT-179
TAIL/L - Wiring diagram	LT-183
TCM circuit diagram	AT-50
TCM inspection table	AT-87
Thermostat	CO-27
Three way catalyst	EM-23
Three way catalyst function (Bank 1)	EC-322
Three way catalyst function (Bank 2)	EC-322
Three way catalyst precautions	GI-5
Throttle control motor	EC-442
Throttle control motor relay	EC-437
Throttle position sensor (TPS)	EC-190 , EC-287 , EC-500 , EC-502 , EC-582
Throwout bearing - See Clutch release bearing	CL-13
Thrust washer selection diff.	RFD-22
Tie-rod	PS-17
Timing chain	EM-55
Tire rotation	WT-8 , MA-27
Tooth contact diff.	RFD-27
Torque converter installation	AT-267 , AT-268
Torque convertor clutch solenoid valve	AT-120 , AT-122
TPS1 - Wiring diagram	EC-289
TPS2 - Wiring diagram	EC-192
TPS3 - Wiring diagram	EC-584
Transverse link (front)	FSU-13
Triple meter	DI-32
TRNSCV - Wiring diagram	BL-174
Trouble diagnoses	GI-11
Trunk lid	BL-112
Turbine revolution sensor	AT-142
TURN - Wiring diagram	LT-140
Turn signal lamp	LT-135
Tyre pressure monitoring system - trouble diagnoses ..	WT-12
Tyre pressure monitoring system - wiring diagram	WT-13

U

Unified meter and A/C amp.	DI-56
Upper link (front susp.)	FSU-14

V

Vacuum hose (brake system)	BR-24
Vacuum hose drawing (Engine control)	EC-23
Valve clearance	EM-83
Valve guide	EM-98
Valve lifter	EM-79
Valve seat	EM-100
Valve spring	EM-101 , EM-102
Vanity mirror lamp	LT-200
VDC -Wiring diagram	BRC-99
Vehicle security (theft warning) system	BL-130
Vehicle speed sensor (VSS)	EC-403
VEHSEC - Wiring diagram	BL-135

VENT/V - Wiring diagram	EC-350 , EC-519
-------------------------------	---

W

WARN - Wiring diagram	DI-65
Warning chime	DI-80
Warning lamps	DI-64
Washer, front	WW-4
Washer, rear	WW-35
Water pump	CO-23
Water temperature gauge	DI-4
Wheel alignment (rear)	RSU-5
Wheel balance	WT-7 , MA-25
Wheel bearing (rear)	RAX-6
Wheel hub (rear)	RAX-6
Wheel sensor (VDC)	BRC-143
Wheel sensors (ABS)	BRC-38
Wheel sensors (TCS)	BRC-83
WINDOW - Wiring diagram	GW-24
Window, door	GW-54
Windshield	GW-11
WIP/R - Wiring diagram	WW-37
WIPER - Wiring diagram	WW-11
Wiper, front	WW-4
Wiper, rear	WW-35
Wiring Diagram (Cell code) list	PG-70
Wiring diagrams	GI-15
Withdrawal lever (clutch)	CL-13
WT-T/WARN - Wiring diagram	WT-13

A
B
C
D
E
F
G
H
I
J
K
L

IDX