

# ALPHABETICAL INDEX

## SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

**IDX**

# ALPHABETICAL INDEX

## 2

2-pole Lift..... GI-38

## A

ABS actuator ..... BR-38  
ABS (anti-lock brake system)..... BR-35  
ABS circuit diagram..... BR-51  
ABS component parts and connector  
  locations ..... BR-48  
ABS control unit ..... BR-36  
ABS self-diagnosis ..... BR-45  
ABS symptom chart ..... BR-47  
ABS trouble diagnoses..... BR-44  
ABS wheel sensors ..... BR-37  
ABS wiring diagram..... BR-40  
A/C air flow ..... HA-13  
A/C circuit diagram (auto A/C) ..... HA-95  
A/C circuit diagram (manual A/C) ..... HA-35  
A/C component layout..... HA-12  
A/C compressor clutch removal and  
  installation ..... HA-140  
A/C compressor mounting..... HA-139  
A/C compressor precaution..... HA-5  
A/C control linkage adjustment (auto A/C)..... HA-120  
A/C control linkage adjustment (manual A/C)..... HA-57  
A/C control operation (auto A/C)..... HA-60  
A/C control operation (manual A/C)..... HA-14  
A/C harness layout (auto A/C) ..... HA-93  
A/C harness layout (manual A/C) ..... HA-33  
A/C R134a system precaution ..... HA-2  
A/C R134a system service tools..... HA-6  
A/C lubricant..... HA-136  
A/C operational check ..... HA-16  
A/C performance chart..... HA-28  
A/C performance test diagnoses..... HA-26  
A/C push control..... HA-42  
A/C relay..... HA-56  
A/C switch ..... HA-14  
A/C symptom chart (auto A/C)..... HA-66  
A/C symptom chart (manual A/C) ..... HA-18  
A/C trouble diagnoses (auto A/C) ..... HA-62  
A/C trouble diagnoses (manual A/C) ..... HA-15  
A/C wiring diagram (auto A/C) ..... HA-96  
A/C wiring diagram (manual A/C) ..... HA-36  
Accel drum unit ..... EM-26  
Accelerator control system..... FE-3  
Accelerator wire adjustment..... FE-3  
Activated carbon canister..... EC-17  
Activated carbon canister inspection ..... EC-17  
Active suspension fluid..... MA-8  
Air bag..... RS-9

Air bag disposal..... RS-12  
Air bag module..... RS-9  
Air bag precautions ..... GI-2  
Air bag removal and installation..... RS-9  
Air bleeding for brake system ..... BR-5  
Air cleaner filter replacement ..... MA-12  
Air conditioner cut control ..... EC-15  
Air flow meter - See Mass air flow sensor..... EC-95  
Air mix. door motor..... HA-127  
Alternator..... EL-29  
Ambient sensor ..... HA-124  
Angular tightening application ..... EM-2  
Anti-freeze coolant ..... MA-8  
ASCD (Automatic Speed Control Device) ..... EL-140  
A/T control DTC:P0600..... EC-209  
A/T control unit ..... AT-101  
A/T diagnosis communication line ..... EC-186  
AT fluid temperature sensor..... AT-105  
AT removal and installation ..... AT-128  
AT self-diagnoses ..... AT-44  
AT shift lock system ..... AT-116  
AT trouble diagnoses ..... AT-14  
Audio ..... EL-127  
Automatic amplifier..... HA-125  
Automatic transaxle number ..... GI-34  
Automatic transmission fluid ..... MA-8  
Automatic transmission fluid replacement ..... MA-15  
Auxiliary air control (AAC)..... EC-114

## B

Back-up lamp ..... EL-49  
Ball joint front axle..... FA-25  
Battery ..... EL-14  
Baulk ring (MT)..... MT-12  
Belt inspection (drive belt)..... MA-9  
Blower motor ..... HA-119  
Blower relay..... HA-119  
Board-on Lift..... GI-37  
Body alignment..... BT-36  
Boring/horning cylinder block..... EM-44  
Brake booster..... BR-14  
Brake control valve (Proportioning Valve)..... BR-7  
Brake fluid ..... MA-8  
Brake fluid change ..... BR-4  
Brake fluid level..... MA-16  
Brake fluid level and line check ..... BR-4  
Brake hydraulic line..... BR-6  
Brake lining temporary checking..... MA-18  
Brake master cylinder ..... BR-11  
Brake pedal ..... BR-9  
Bumper, front - See Front bumper..... BT-6

# ALPHABETICAL INDEX

## C

Camshaft inspection.....	EM-30
Camshaft position sensor (CMPS).....	EC-90
Camshaft position sensor inspection.....	EC-93
Canister control.....	EC-17
Canister control solenoid valve.....	EC-205
Charging system.....	EL-26
Chassis and body maintenance.....	MA-15
Cigarette lighter.....	EL-122
Circuit breaker.....	EL-13
Clearance lamp.....	EL-50
Clock.....	EL-122
Closed loop control.....	EC-154
Clutch cover.....	CL-3
Clutch disc.....	CL-3
Clutch fluid.....	MA-8
Clutch fluid level.....	MA-15
Clutch master cylinder.....	CL-6
Clutch operating cylinder.....	CL-7
Clutch pedal.....	CL-3
Clutch pedal free play.....	CL-4
Clutch pedal height.....	CL-4
Clutch release bearing.....	CL-3
Clutch withdrawal lever.....	CL-3
Coil spring (front).....	FA-22
Combination lamp, rear, removal and installation.....	BT-24
Combination meter.....	EL-69
Combination meter (needle type).....	EL-69
Combination meter removal and installation - See Instrument panel.....	BT-12
Combination switch.....	EL-33
Compression pressure.....	EM-9
Compressor clutch removal and installation.....	HA-140
Compressor mounting.....	HA-139
Compressor precaution.....	HA-5
Connecting rod.....	EM-44
Connecting rod bearing clearance.....	EM-47
Connecting rod bushing clearance.....	EM-48
Console box - See Instrument panel.....	BT-12
Consult for ECCS.....	EC-38
CONSULT general information.....	GI-31
Control lever (MT).....	MT-10
Control valve (AT).....	AT-155
Converter housing installation.....	AT-129
Coolant.....	MA-8
Coolant replacement.....	MA-10
Cooling circuit (engine).....	LC-8
Cooling fan control.....	EC-118
Cooling fan motor inspection.....	EC-129
Cooling fan relay inspection.....	EC-129
Cornering lamp.....	EL-59
Coupling sleeve (MT).....	MT-12

Crank angle sensor built into distributor - See Camshaft position sensor.....	EC-90
Crankshaft assembly.....	EM-50
Crankshaft bearing clearance.....	EM-46
Crankshaft inspection.....	EM-45
Crankshaft position sensor (OBD).....	EC-182
Crankshaft position sensor (OBD) inspection.....	EC-185
Cylinder block.....	EM-41
Cylinder block boring.....	EM-44
Cylinder head.....	EM-28
Cylinder head bolt tightening.....	EM-28

## D

Daytime light system.....	EL-40
Detonation sensor - See Knock sensor.....	EC-145
Device (FICD) solenoid valve.....	EC-226
Diagnostic trouble code (DTC) for ECCS OBD system.....	EC-28
Differential gear (FF AT).....	AT-199, AT-203
Dimensions.....	GI-35
Distributor ignition (DI) system.....	EC-14
Door mirror.....	BT-33
Door trim.....	BT-16
Drive plate runout.....	EM-49
Drive shaft (front).....	FA-13
Dropping resistor (AT).....	AT-107

## E

ECCS basic inspection.....	EC-70
ECCS component parts location.....	EC-8
ECCS on-board diagnostic system.....	EC-28
ECCS symptom matrix chart.....	EC-73
ECCS system diagram and chart.....	EC-7
ECCS trouble diagnoses.....	EC-53
ECM input/output signal inspection.....	EC-81
EGR canister control solenoid valve inspection.....	EC-208
EGR control (EGRC) - BPT valve.....	EC-152
EGR control (EGRC) - solenoid valve.....	EC-205
EGR temperature sensor.....	EC-148
EGR temperature sensor inspection.....	EC-151
EGR valve inspection.....	EC-139
EGRC - BPT valve inspection.....	EC-153
Energy conserving oils.....	MA-8
Engine compartment.....	BT-36
Engine control module (ECM).....	EC-130
Engine coolant temperature sensor (ECTS).....	EC-100
Engine coolant temperature sensor (ECTS) DTC13, P0115.....	EC-100

GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL

IDX

# ALPHABETICAL INDEX

Engine coolant temperature sensor (ECTS) DTC13, P0115 inspection .....	EC-103
Engine coolant temperature sensor (ECTS) DTC98, P0125 .....	EC-193
Engine coolant temperature sensor (ECTS) DTC98, P0125 inspection .....	EC-197
Engine oil.....	MA-8
Engine oil filter replacement.....	MA-13
Engine oil precautions.....	GI-4
Engine oil replacement.....	MA-13
Engine outer component parts.....	EM-7
Engine removal .....	EM-38
Engine serial number .....	GI-34
Evaporative emission system.....	EC-17
Exhaust gas recirculation (EGR) system.....	EC-132
Exhaust gas recirculation (EGR) valve.....	EC-132
Exhaust system.....	FE-6
Exhaust system inspection.....	MA-15
Exterior.....	BT-19
Exterior lamp .....	EL-49

## F

Fan control amp .....	HA-132
Fan switch .....	HA-14
Final drive (FF AT) .....	AT-199, AT-203
Final drive (FF MT) .....	MT-27
Floor trim.....	BT-15
Fluid temperature sensor (AT) .....	AT-105
Fluids.....	MA-8
Flywheel runout.....	EM-49
Fork rod (MT) .....	MT-13
Forward clutch.....	AT-176
Freeze frame data.....	EC-29
Front axle .....	FA-8
Front bumper.....	BT-6
Front disc brake .....	BR-17
Front door.....	BT-10
Front fog lamp.....	EL-53
Front oxygen sensor .....	EC-140
Front oxygen sensor monitor .....	EC-33
Front passenger air bag.....	RS-11
Front seat .....	BT-26
Front seat belt.....	RS-3
Front suspension.....	FA-21
Fuel check valve inspection.....	EC-18
Fuel cut control (at no load & high engine speed) .....	EC-16
Fuel filler lid.....	BT-8
Fuel filter replacement.....	MA-12
Fuel gauge .....	EL-70, EL-72
Fuel injection system.....	EC-172
Fuel precautions.....	GI-5

Fuel pressure check.....	EC-20
Fuel pressure release .....	EC-20
Fuel pump .....	EC-217
Fuel pump control .....	EC-217
Fuel pump inspection.....	EC-221
Fuel pump relay inspection.....	EC-221
Fuel system.....	FE-4
Fuel tank vacuum relief valve inspection.....	EC-18
Full active suspension precautions.....	GI-3
Fuse.....	EL-13
Fusible link .....	EL-13

## G

Garage Jack and Safety Stand.....	GI-37
Gauges.....	EL-68
Gear oil.....	MA-8
Gears (MT).....	MT-12
Generator .....	EL-29
Generic scan tool (GST) .....	EC-50
Glass .....	BT-31
Grease.....	MA-8

## H

Harness connector .....	EL-3
Harness layout .....	EL-191
Hazard warning lamp .....	EL-55
Headlamp .....	EL-36
Headlamp aiming control .....	EL-47
Heated oxygen sensor (H02S) heater (rear).....	EC-181
Heated oxygen sensor (rear).....	EC-177
Height (Dimensions).....	GI-35
High clutch.....	AT-172
Hood.....	BT-7
Horn.....	EL-122
How to erase DTC for ECCS OBD system .....	EC-28
How to follow flow chart in trouble diagnoses .....	GI-28
How to perform efficient diagnosis for an electrical incident .....	GI-17
How to read wiring diagrams .....	GI-8
How to use this manual .....	GI-6

## I

IACV - FICD solenoid valve inspection.....	EC-229
IACV-AAC valve inspection.....	EC-117
Identification plate .....	GI-33
Idle air control valve (IACV).....	EC-114
Idle mixture ratio inspection .....	EC-22
Idle speed inspection .....	EC-22

# ALPHABETICAL INDEX

Ignition coil inspection.....	EC-112
Ignition timing inspection.....	EC-22
Illumination .....	EL-62
In vehicle sensor .....	HA-123
Inhibitor switch.....	AT-106
Injector inspection .....	EC-214
Injector removal and installation .....	EC-21
Input shaft.....	MT-17
Instrument panel.....	BT-12
Intake air temperature sensor.....	EC-155
Intake air temperature sensor inspection.....	EC-159
Intake door motor.....	HA-130
Intake manifold.....	EM-7
Interior .....	BT-15
Interior lamp .....	EL-62

## J

Jacking points.....	GI-37
Joint connector (J/C).....	Foldout page

## K

Knock sensor inspection.....	EC-147
Knock sensor (KS).....	EC-145
Knuckle spindle .....	FA-9

## L

Length (Dimensions) .....	GI-35
License lamp .....	EL-50
Lifting points .....	GI-36
Line pressure solenoid valve .....	AT-105
Line pressure test (AT).....	AT-111
Liquid gasket application.....	EM-2
Location of electrical units.....	EL-189
Low and reverse brake .....	AT-182
Lubricants.....	MA-8
Lubrication circuit (engine).....	LC-4
Lubricant (A/C).....	HA-136
Lubrication-locks, hinges and hood latches.....	MA-19
Luggage compartment trim .....	BT-18

## M

Magnet clutch.....	HA-133
Main drive gear (MT).....	MT-12
Mainshaft (MT).....	MT-22
Maintenance (engine).....	MA-9
Maintenance general.....	MA-3
Maintenance periodic.....	MA-5

Maintenance schedule (1).....	MA-5
Maintenance schedule (2).....	MA-5
Malfunction indicator lamp (MIL).....	EC-30
Manual transaxle number.....	GI-34
Manual transmission oil.....	MA-8
Manual transmission oil replacement.....	MA-15
Mass air flow sensor inspection.....	EC-99
Mass air flow sensor (MAFS).....	EC-95
Master cylinder (brake) .....	BR-11
Master cylinder (clutch).....	CL-6
Meter and gauges .....	EL-68
Misfire .....	EC-165
Mode door control linkage adjustment. HA-57, HA-120	
Mode door motor.....	HA-129
Model variation.....	GI-32
MT overhaul .....	MT-11
MT removal and installation.....	MT-7
Multi purpose grease.....	MA-8
Multipoint fuel injection (MFI) system.....	EC-12
Multipoint fuel injection precautions.....	GI-4

## O

Oil change (capacity) .....	MA-13
Oil change (interval).....	MA-7
Oil pan (engine).....	EM-10
Oil pressure (engine).....	LC-5
Oil pressure relief valve (engine) .....	LC-7
Oil pump (AT).....	AT-151
Oil pump (engine).....	LC-5
Oil pump regulator valve (engine).....	LC-6
Oil seal replacement (engine).....	EM-24
Operating cylinder (clutch) .....	CL-7
Out side mirror .....	BT-33
Overdrive switch.....	AT-106
Overrun clutch.....	AT-176
Overrun clutch solenoid valve.....	AT-105
Oversize piston.....	EM-44
Oxygen sensor (Front) .....	EC-140

## P

Parking brake control .....	BR-33
Park/Neutral position switch.....	EC-198
PCV (Positive Crankcase Ventilation) inspection.....	EC-19
Personal lamp .....	EL-67
Piston assembly .....	EM-49
Piston pin inspection .....	EM-43
Piston ring inspection.....	EM-43
Piston to bore clearance .....	EM-44
Power antenna .....	EL-127

GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL

IDX

# ALPHABETICAL INDEX

Power steering fluid.....	MA-8
Power steering fluid level.....	ST-6, MA-18
Power steering gear.....	ST-13
Power steering hydraulic pressure.....	ST-8
Power steering oil pressure switch.....	EC-222
Power steering oil pressure switch inspection..	EC-224
Power steering oil pump.....	ST-23
Power steering system bleeding.....	ST-6
Power supply routing.....	EL-6
Power transistor & ignition coil.....	EC-108
Power transistor inspection.....	EC-112
Power window.....	EL-108
Pressure test (AT).....	AT-111

## R

R134a system precaution.....	HA-2
R134a system service tools.....	HA-6
Rack retainer adjustment.....	ST-22
Radiator.....	LC-12
Rear air spoiler.....	BT-35
Rear bumper.....	BT-8
Rear combination lamp removal and installation.....	BT-24
Rear disc brake.....	BR-26
Rear door.....	BT-11
Rear drum brake.....	BR-21
Rear heated oxgen sensor (H02S) heater.....	EC-181
Rear heated oxygen sensor.....	EC-177
Rear seat.....	BT-27
Rear seat belt.....	RS-4
Rear window.....	BT-31
Rear window defogger.....	EL-123
Rear window signal.....	EC-230
Refrigerant CFC12 precaution.....	HA-2
Refrigerant connection precaution.....	HA-4
Refrigerant general precaution.....	HA-3
Refrigerant lines.....	HA-138
Refrigeration cycle.....	HA-11
Release bearing (clutch).....	CL-3
Resistor inspection.....	EC-113
Reverse clutch.....	AT-169
Reverse gear (MT).....	MT-12
Reverse idler shaft (MT).....	MT-12
Revolution sensor (AT).....	AT-107
Road wheel size.....	GI-35
Roof trim.....	BT-17
Rotor disc (front).....	FA-8

## S

SAE J1930 terminology list.....	GI-41
---------------------------------	-------

Seat belt inspection.....	MA-19
Self-diagnostic results.....	EC-32
Shift control (MT).....	MT-13
Shift fork (MT).....	MT-13
Shift lock system.....	AT-116
Shift schedule.....	AT-34
Shift solenoid valve (AT).....	AT-105
Shock absorber (front).....	FA-22
Side trim.....	BT-15
SMJ (Super Multiple Junction).....	Foldout page
Spark plug replacement.....	MA-14
Speedometer.....	EL-70, EL-74
Spiral cable.....	RS-9
Spring (Wheelarch) height.....	FA-4
SRS Trouble diagnoses.....	RS-16
SRS Wiring diagram.....	RS-16
Stabilizer bar (front).....	FA-24
Stall test (AT).....	AT-108
Standardized relay.....	EL-4
Starter.....	EL-23
Starting system.....	EL-18
Steering gear and linkage inspection.....	MA-18
Steering knuckle.....	FA-9
Steering linkage.....	ST-13
Steering switch.....	EL-35
Steering wheel and column.....	ST-9
Steering wheel play.....	ST-5
Steering wheel turning force.....	ST-7
Stop lamp.....	EL-50
Striking rod (MT).....	MT-13
Strut (front).....	FA-22
Sun roof.....	BT-28
Sunload sensor.....	HA-124
Supplemental Restraint System.....	RS-6
Symbols and abbreviations.....	GI-7
Synchronizer (MT).....	MT-24

## T

Tachometer.....	EL-70, EL-73
Tail lamp.....	EL-50
Theft warning system.....	EL-161
Thermal protector.....	HA-56
Thermo control amp.....	HA-56
Thermostat.....	LC-11
Three way catalyst.....	EC-169
Three way catalyst precautions.....	GI-4
Throttle bodies.....	EM-7
Throttle drum adjustment.....	FE-3
Throttle position sensor inspection.....	EC-164
Throttle position sensor (TPS).....	EC-160
Throwout bearing - See Clutch release bearing.....	CL-3

# ALPHABETICAL INDEX

Tie-rod .....	ST-15
Tie-rod ball joints .....	ST-17
Tightening torque of standard bolts .....	GI-40
Time control system .....	EL-86
Timing chain .....	EM-15
Tire rotation .....	MA-18
Tire size .....	GI-35
Torque converter clutch solenoid valve .....	AT-105
Torque converter installation .....	AT-129
Tow truck towing .....	GI-38
Towing points .....	GI-39
Transmission case (MT) .....	MT-11
Transverse link (front) .....	FA-25
Tread-FR&RR (Dimensions) .....	GI-35
Trim .....	BT-15
Triple pressure switch .....	HA-56
Trunk lid .....	BT-8
Trunk room lamp .....	EL-67
Trunk room trim .....	BT-18
Turn signal lamp .....	EL-55
Two trip detection logic .....	EC-28

## U

Under body .....	BT-38
------------------	-------

## V

Vacuum hose (brake system) .....	BR-16
Vacuum hose drawing (ECCS) .....	EC-10
Valve clearance .....	EM-35

Valve guide inspection .....	EM-31
Valve seat inspection .....	EM-33
Valve spring inspection .....	EM-34
Vapor lines inspection .....	MA-14
Vehicle identification number .....	GI-33
Vehicle speed sensor (VSS) .....	EC-104
Viscosity number (SAE) .....	MA-8
Viscous coupling (FF AT) .....	AT-203
Viscous coupling (FF MT) .....	MT-6

## W

Warning chime .....	EL-78
Warning lamps .....	EL-78
Water pump .....	LC-9
Water temperature gauge .....	EL-70, EL-72
Wheel alignment (front) .....	FA-5
Wheel balance .....	MA-18
Wheel bearing (front axle) .....	FA-5
Wheel hub and steering knuckle .....	FA-9
Wheel hub (front) .....	FA-9
Wheel sensors (ABS) .....	BR-37
Wheel size .....	GI-35
Wheelarch height .....	FA-4
Wheelbase (Dimensions) .....	GI-35
Wide open & closed throttle position (CTP) switch .....	EC-160
Width (Dimensions) .....	GI-35
Windshield .....	BT-31
Wiper and washer .....	EL-101
Withdrawal lever (clutch) .....	CL-3