



SUPER MULTIPLE JUNCTION (SMJ)

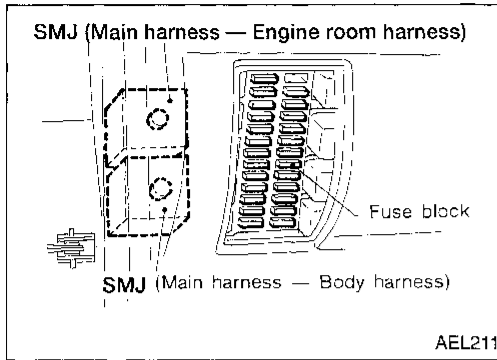


INSTALLATION

To install SMJ, tighten bolts until orange “fulltight” mark appears and then retighten to specified torque as required.

: 3 - 5 N·m
(0.3 - 0.5 kg-m, 26 - 43 in-lb)

CAUTION:


Do not overtighten bolts, otherwise, it may damage them.

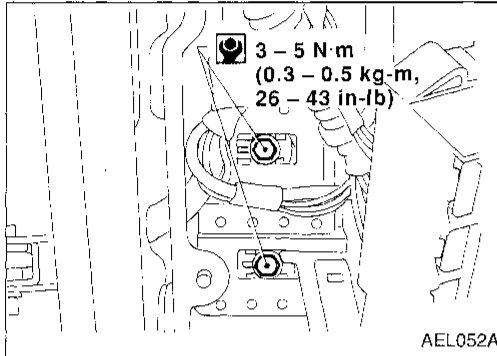

SUPER MULTIPLE JUNCTION (SMJ)

Terminal Arrangement


MAIN HARNESS

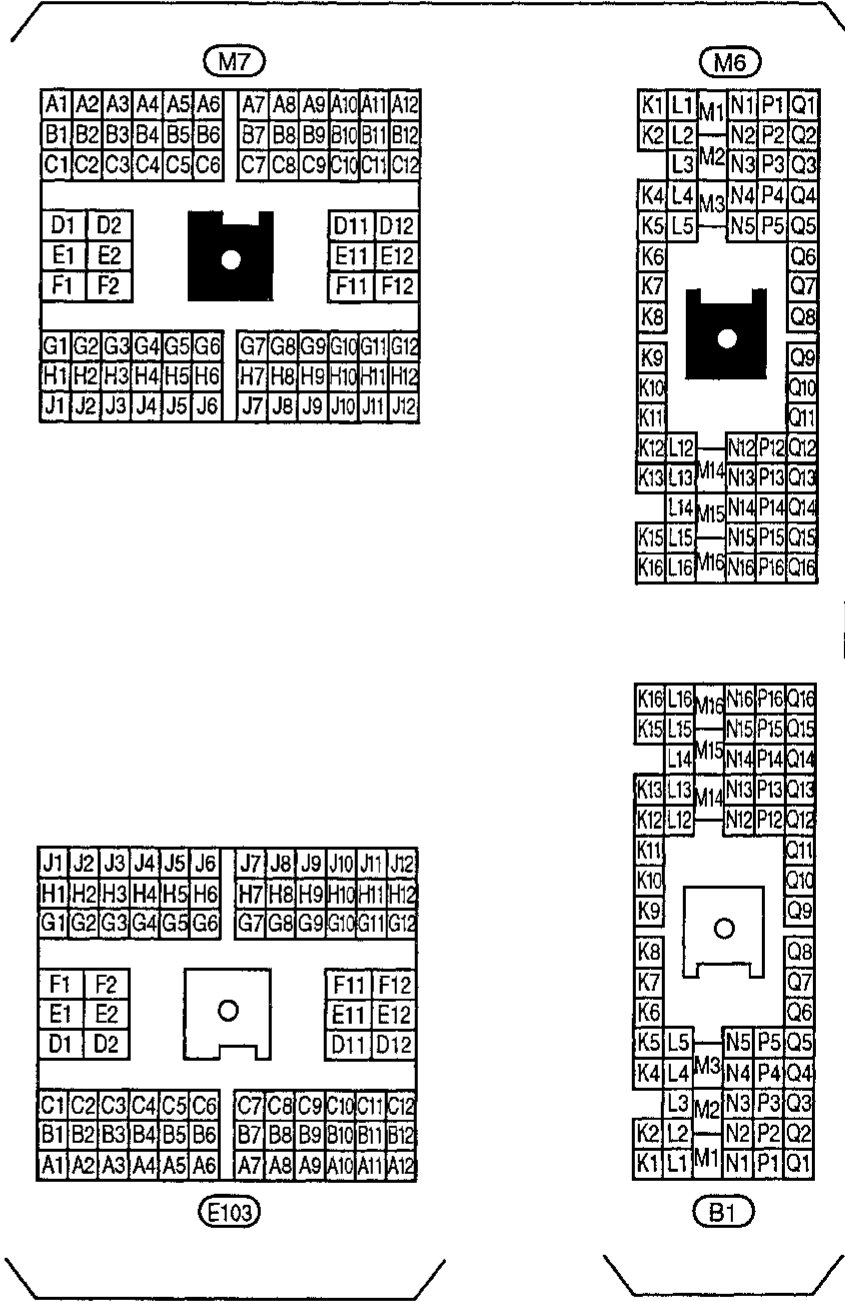

FUSE BLOCK/FUSIBLE LINK AND FUSE BOX


Fuse Arrangement

FUSE BLOCK

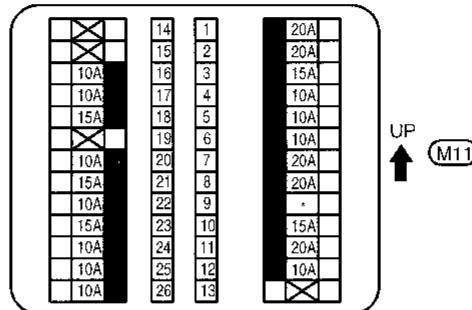


*10A—Models without active speaker audio system
 15A—Models with active speaker audio system

FUSIBLE LINK AND FUSE BOX

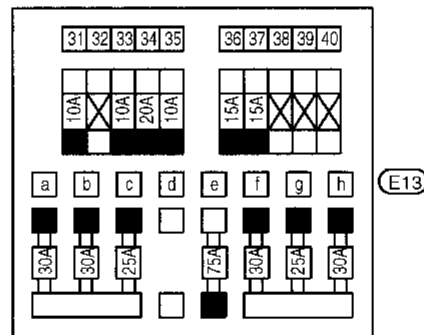

CONTROL UNITS/MODULE

 AIRBAG DIAGNOSIS SENSOR UNIT




View from harness side

ABS CONTROL UNIT




View from harness side

 A/T CONTROL UNIT



View from harness side


ECM (ECCS CONTROL MODULE)

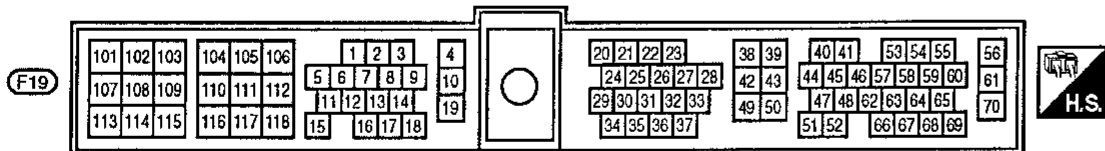

View from harness side

JOINT CONNECTOR (J/C)


Location

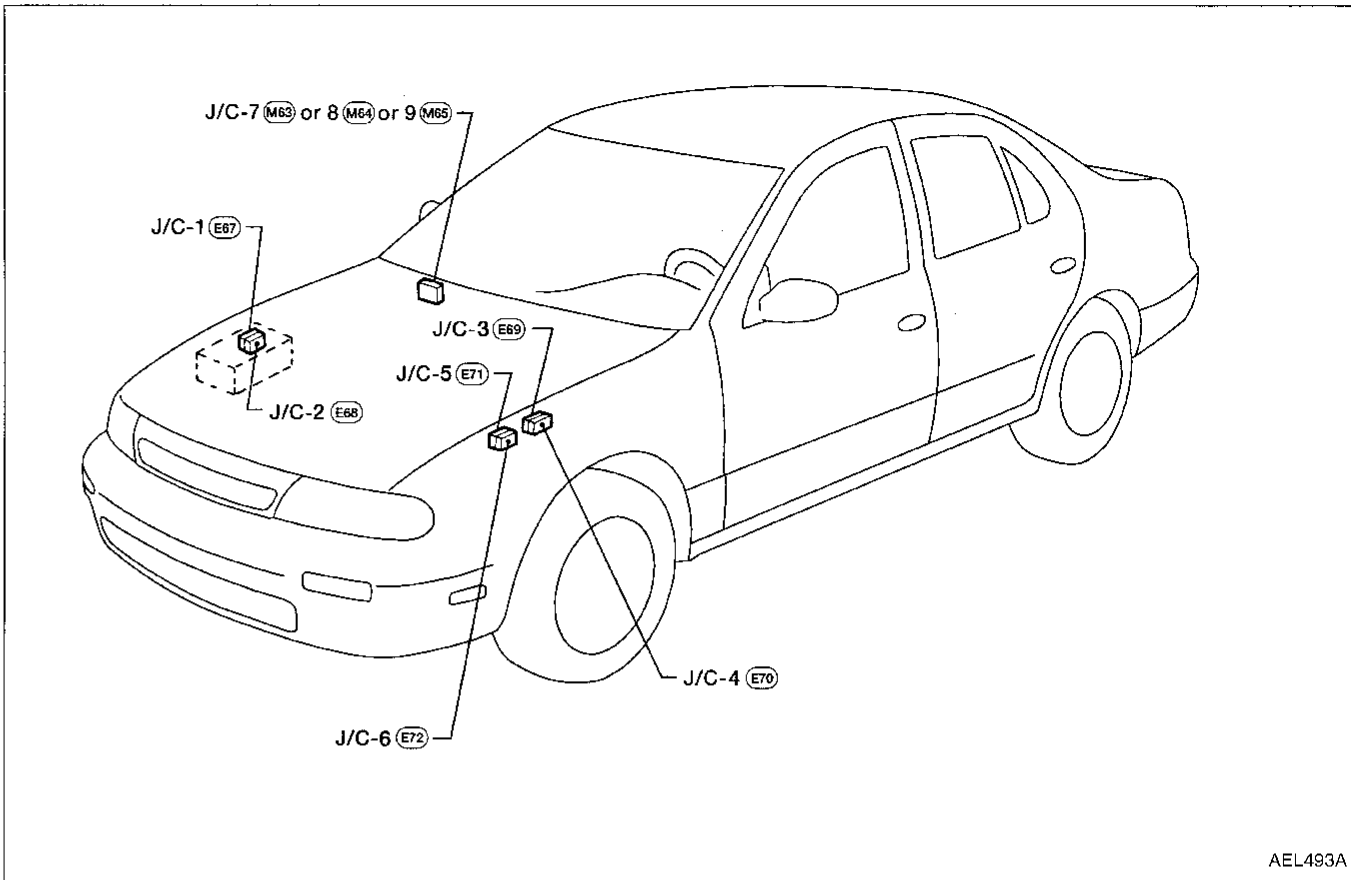


AEL493A

Terminal Arrangement

 
J/C-1




J/C-2

 


J/C-3

 


J/C-4

 


J/C-5

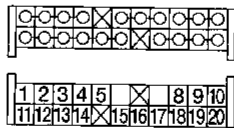


J/C-6

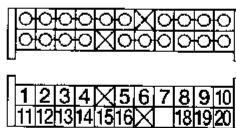


J/C-7

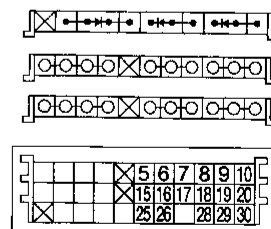

J/C-8

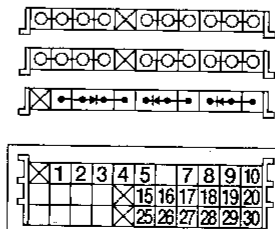

J/C-9

 

AEL916