

ALPHABETICAL INDEX

SECTION IDX

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

A

<p>AAC/V - Wiring diagram..... EC-297</p> <p>ABS (anti-lock brake system)..... BR-35</p> <p>Absolute pressure sensor EC-112</p> <p>A/C - Wiring diagram..... HA-20</p> <p>A/C air flow..... HA-15</p> <p>A/C component layout..... HA-14</p> <p>A/C compressor clutch removal and installation HA-67</p> <p>A/C compressor description..... HA-6</p> <p>A/C compressor mounting..... HA-66</p> <p>A/C compressor precaution..... HA-6</p> <p>A/C compressor special service tool..... HA-7</p> <p>A/C control linkage adjustment (manual A/C)..... HA-36</p> <p>A/C control operation (manual A/C)..... HA-13</p> <p>A/C diagnostic work flow (manual A/C) HA-27</p> <p>A/C harness layout (manual A/C) HA-16</p> <p>A/C HFC134a (R134a) system introduction HA-12</p> <p>A/C HFC134a (R134a) system precaution HA-2</p> <p>A/C HFC134a (R134a) system service procedure HA-58, HA-61</p> <p>A/C HFC134a (R134a) system service tools..... HA-8</p> <p>A/C HFC134a system service equipment precaution HA-8</p> <p>A/C lubricant (R134a)..... HA-63</p> <p>A/C lubrication oil HA-63</p> <p>A/C operational check HA-25</p> <p>A/C performance chart..... HA-51</p> <p>A/C performance test diagnoses..... HA-49</p> <p>A/C pressure switch HA-12</p> <p>A/C push control..... HA-13</p> <p>A/C relay..... HA-46</p> <p>A/C trouble diagnoses (manual A/C) HA-27</p> <p>Accel drum unit EM-28</p> <p>Accelerator control system..... FE-3</p> <p>Accelerator wire adjustment..... FE-3</p> <p>Air bag RS-10</p> <p>Air bag disposal..... RS-19</p> <p>Air bag precautions GI-2</p> <p>Air bleeding for brake system BR-5</p> <p>Air bleeding (hydraulic clutch)..... CL-6</p> <p>Air cleaner filter replacement..... MA-13</p> <p>Air conditioner cut control EC-18</p> <p>Air conditioning - See A/C..... HA-12</p> <p>Air flow meter - See Mass air flow sensor..... EC-103</p> <p>Alternator EL-29</p> <p>Angular tightening application..... EM-2</p> <p>Antenna EL-131</p> <p>AP/SEN - Wiring diagram EC-112</p> <p>ASCD - Wiring diagram..... EL-145</p> <p>ASCD (automatic speed control device)..... EL-141</p> <p>A/T - Wiring diagram - AT - FTS..... AT-83</p>	<p>A/T - Wiring diagram - AT - INH/SW..... AT-78</p> <p>A/T - Wiring diagram - AT - MAIN..... AT-74</p> <p>A/T - Wiring diagram - AT - VSS A/T..... AT-88</p> <p>A/T control..... EC-308</p> <p>A/T diagnosis communication line EC-397</p> <p>A/T fluid temperature sensor..... AT-85</p> <p>A/T removal and installation..... AT-207</p> <p>A/T self-diagnoses..... AT-36</p> <p>A/T shift lock system AT-197</p> <p>A/T shift lock system - Wiring diagram..... AT-198</p> <p>A/T trouble diagnoses AT-47</p> <p>A/T Wiring diagram - AT - ENG SS AT-92</p> <p>A/T Wiring diagram AT - 1ST AT-98</p> <p>A/T Wiring diagram AT - 2ND AT-104</p> <p>A/T Wiring diagram AT - 3RD AT-110</p> <p>A/T Wiring diagram AT - 4TH..... AT-117</p> <p>A/T Wiring diagram AT - BA/FTS AT-164</p> <p>A/T Wiring diagram AT - LPSV AT-137</p> <p>A/T Wiring diagram AT - NONDTC AT-171</p> <p>A/T Wiring diagram AT - OVRCSV AT-159</p> <p>A/T Wiring diagram AT - SSV/A AT-142</p> <p>A/T Wiring diagram AT - SSV/B..... AT-147</p> <p>A/T Wiring diagram AT - TCCSIG AT-130</p> <p>A/T Wiring diagram AT - TCV AT-124</p> <p>A/T Wiring diagram AT - TPS..... AT-153</p> <p>A/T Wiring diagram AT - VSSMTR..... AT-169</p> <p>AT/C - Wiring diagram..... EC-308</p> <p>ATDIAG - Wiring diagram EC-397</p> <p>Audio EL-124</p> <p>AUDIO - Wiring diagram EL-126</p> <p>Audio and A/C control removal and installation - See Instrument panel..... BT-16</p> <p>Automatic speed control system - See ASCD.. EL-141</p> <p>Automatic transaxle number GI-36</p> <p>Automatic transmission fluid replacement MA-17</p> <p>Auxiliary air control (AAC)..... EC-297</p>
---	--

B

<p>Back window BT-44</p> <p>BACK/L - Wiring diagram..... EL-53</p> <p>Back-up lamp EL-53</p> <p>Back-up lamp switch (M/T) MT-8</p> <p>Ball joint front axle..... FA-26</p> <p>Battery EL-19</p> <p>Baulk ring (M/T)..... MT-15</p> <p>Blower motor HA-33</p> <p>Blower resistor..... HA-33</p> <p>Board-on lift..... GI-39</p> <p>Body alignment..... BT-48</p> <p>Boring/honing cylinder block EM-46</p> <p>BPT valve EC-262</p> <p>Brake booster..... BR-14</p>	
---	--

ALPHABETICAL INDEX

Brake control valve (Proportioning valve).....	BR-7
Brake fluid change	BR-4
Brake fluid level.....	MA-18
Brake fluid level and line check	BR-4
Brake hydraulic line.....	BR-6
Brake inspection.....	MA-18
Brake lines and cables inspection	MA-18
Brake lining temporary checking.....	MA-19
Brake master cylinder	BR-11
Brake pedal	BR-9
Bulb specifications.....	EL-249
Bumper, front.....	BT-6
Bumper, rear.....	BT-10
BYPSS/V - Wiring diagram.....	EC-387

C

Camshaft inspection.....	EM-32
Camshaft position sensor (CMPS).....	EC-244
Canister - See EVAP canister.....	EC-20
CHARGE - Wiring diagram	EL-30
Charging system	EL-29
Chassis and body maintenance.....	MA-16
CHIME - Wiring diagram	EL-94
CIGAR - Wiring diagram	EL-113
Cigarette lighter.....	EL-113
Circuit breaker.....	EL-15
CKPS - Wiring diagram.....	EC-239
Closed loop control	EC-16
Closed throttle position switch	EC-303
Clutch cover	CL-10
Clutch disc.....	CL-10
Clutch fluid level.....	MA-16
Clutch master cylinder.....	CL-7
Clutch operating cylinder.....	CL-8
Clutch pedal	CL-4
Clutch release bearing	CL-9
Clutch withdrawal lever	CL-9
CMPS - Wiring diagram	EC-244
Coil spring (front).....	FA-24
Coil spring (rear)	RA-12
Collision diagnosis.....	RS-46
Combination lamp, rear, removal and installation	BT-30
Combination meter.....	EL-76
Combination meter removal and installation - See Instrument panel.....	BT-16
Combination switch	EL-34
Compression pressure	EM-12
Compressor clutch removal and installation.....	HA-67
Compressor description	HA-6
Compressor mounting.....	HA-66
Compressor precaution.....	HA-6

Compressor special service tool.....	HA-7
Connecting rod.....	EM-46
Connecting rod bearing clearance	EM-49
Connecting rod bushing clearance	EM-50
Connector inspection.....	GI-17
Console box - See Instrument panel.....	BT-16
CONSULT for ECCS	EC-60
CONSULT general information	GI-32
Control lever (M/T)	MT-13
Control valve (A/T)	AT-235
Converter housing installation.....	AT-208
Coolant mixture ratio	MA-9
Coolant replacement	MA-11
COOL/F - Wiring diagram	EC-405
Cooling circuit (engine)	LC-9
Cooling fan	LC-14
Cooling fan control system.....	LC-14
Cooling fan motor.....	EC-416
Cooling fan relay	EC-416
Coupling sleeve (M/T).....	MT-15
Crank angle sensor built into distributor - See Camshaft position sensor	EC-244
Crankcase emission control system - See positive crankcase ventilation	EC-30
Crankcase ventilation system - See positive crankcase ventilation	EC-30
Crankshaft	EM-47
Crankshaft position sensor (OBD)	EC-239
Crankshaft position sensor (OBD) cog chipping.....	EC-328
Cruise control - See ASCD	EL-141
Cylinder block.....	EM-43
Cylinder block boring.....	EM-46
Cylinder head	EM-30
Cylinder head bolt tightening	EM-30

D

Daytime light system.....	EL-42
Daytime running light - See Daytime light system.....	EL-42
DEF - Wiring diagram	EL-117
Detonation sensor - See Knock sensor.....	EC-235
Diagnosis sensor unit.....	RS-13
Diagnostic trouble code (DTC) chart	EC-79
Differential gear (FF A/T)	AT-278
Differential gear (FF M/T).....	MT-29
Dimensions.....	GI-37
Distributor	EC-17
Distributor ignition (DI) system.....	EC-17
D/LOCK - Wiring diagram	EL-171
Dome light - See Interior lamp.....	EL-66
Door, front.....	BT-14

ALPHABETICAL INDEX

Door glass	BT-14
Door lock	BT-14
Door mirror	BT-46
Door, rear	BT-15
Door trim.....	BT-21
Drive belt inspection.....	MA-10
Drive plate runout.....	EM-51
Drive shaft (front)	FA-15
Dropping resistor (A/T).....	AT-139
DTC WORK SUPPORT	EC-68
DTRL - Wiring diagram	EL-45

EVAP control system pressure sensor	EC-288
EVAP control system purge flow monitoring diagnosis	EC-373
EVAP control system (small leak) diagnosis	EC-268, EC-351
EVAP vapor lines inspection	MA-15
Evaporative emission (EVAP) system.....	EC-20
Exhaust gas recirculation (EGR) valve	EC-250
Exhaust system.....	FE-6
Exhaust system inspection.....	MA-16
Exterior	BT-25

E

ECCS basic inspection.....	EC-77
ECCS circuit diagram.....	EC-9
ECCS component parts location.....	EC-10
ECCS fail-safe system	EC-80
ECCS on board diagnostic system.....	EC-40
ECCS symptom matrix chart.....	EC-81
ECCS system diagram and chart	EC-12
ECM input/output signal.....	EC-88
ECTS - Wiring diagram.....	EC-126
EGR control (EGRC) - BPT valve.....	EC-258
EGR control (EGRC) - solenoid valve	EC-333
EGR control valve	EC-256, EC-349
EGR temperature sensor	EC-338
EGRC1 - Wiring diagram	EC-250
EGRC/V - Wiring diagram.....	EC-333
EGR/TS - Wiring diagram	EC-338
Electric sun roof	EL-137
Electrical diagnoses	GI-17
Electrical load signal circuit.....	EC-436
Electrical unit.....	EL-226
Electrical units location.....	EL-226
Electronic ignition system.....	EC-17
Engine compartment.....	BT-48
Engine control circuit diagram.....	EC-9
Engine control module (ECM).....	EC-311
Engine coolant temperature sensor (ECTS)	EC-126, EC-142
Engine oil filter replacement.....	MA-14
Engine oil precautions.....	GI-5
Engine oil replacement.....	MA-14
Engine outer component parts.....	EM-9
Engine removal	EM-40
Engine room - See Engine compartment	BT-48
Engine serial number	GI-36
EVAP canister	EC-20
EVAP canister purge volume control solenoid valve.....	EC-277, EC-361
EVAP canister vent control valve.....	EC-283, EC-368

F

Fan switch	HA-33
Fast idle.....	EC-32
Fast idle cam (FIC)	EC-32
Fast idle cam (FIC) inspection and adjustment.....	EC-32
F/FOG - Wiring diagram.....	EL-55
FICD - Wiring diagram	EC-432
Final drive (FF A/T)	AT-278
Final drive (FF M/T)	MT-29
Finisher, interior - See Trim.....	BT-19
Finisher, rear panel	BT-19
Floor trim	BT-19
Flow charts.....	GI-29
Fluid temperature sensor (A/T).....	AT-85
Fluids	MA-8
Flywheel (clutch)	CL-11
Flywheel runout.....	EM-51
Fog lamp, front.....	EL-54
Fog lamp, front, removal and installation.....	BT-6
Fork rod (M/T)	MT-16
Forward clutch.....	AT-256
F/PUMP - Wiring diagram	EC-423
Freeze frame data.....	EC-42
FRO2 - Wiring diagram.....	EC-147
FRO2/H - Wiring diagram	EC-181
Front axle	FA-10
Front bumper.....	BT-6
Front disc brake	BR-17
Front door.....	BT-14
Front fog lamp.....	EL-54
Front fog lamp removal and installation.....	BT-6
Front heated oxygen sensor (HO2S).....	EC-147, EC-154, EC-161, EC-168, EC-176
Front passenger air bag.....	RS-16
Front seat	BT-32
Front seat belt	RS-4
Front suspension.....	FA-23
FUEL - Wiring diagram	EC-214

ALPHABETICAL INDEX

Fuel cut control (at no load & high engine speed)	EC-19
Fuel filler lid	BT-10
Fuel filter	EC-31
Fuel filter replacement	MA-13
Fuel injector	EC-417
Fuel line inspection	MA-12
Fuel precautions	GI-6
Fuel pressure check	EC-31
Fuel pressure regulator	EC-32
Fuel pressure release	EC-31
Fuel pump	EC-423
Fuel pump and gauge	FE-5
Fuel pump relay	EC-423
Fuel system	FE-4
Fuel tank vacuum relief valve	EC-21
Fuel temperature sensor	EC-226
Fuse	EL-15
Fusible link	EL-15

G

Garage jack and safety stand	GI-39
Gauges	EL-76
Gear components (M/T)	MT-15
Generator	EL-29
Generic scan tool (GST)	EC-71
Glass	BT-43
Grease	MA-8
Grille - See Exterior	BT-6
Ground distribution	EL-16

H

Harness connector	EL-3
Harness connector inspection	GI-17
Harness layout	EL-230
Hazard warning lamp	EL-57
Headlamp	EL-37
Headlamp aiming control	EL-40
Headlamp leveler - See Headlamp aiming control	EL-40
Headlining - See Roof trim	BT-23
Heated oxygen sensor heater	EC-159
Heated oxygen sensor (HO2S)	EC-147, EC-154, EC-161, EC-168, EC-176
HEATER - Wiring diagram	HA-19
Height (Dimensions)	GI-37
HFC134a (R134a) system introduction	HA-12
HFC134a (R134a) system precaution	HA-2
HFC134a (R134a) system service procedure	HA-58, HA-61

HFC134a (R134a) system service tools	HA-8
HFC134a system service equipment precaution	HA-8
High clutch	AT-252
H/LAMP - Wiring diagram	EL-38
Hood	BT-6
Horn	EL-112
HORN - Wiring diagram	EL-112
How to erase DTC for ECES OBD system	EC-50

I

IACV-AAC valve inspection	EC-297
IACV-FICD solenoid valve	EC-432
IATS - Wiring diagram	EC-120
Identification plate	GI-35
Idle air control valve (IACV)	EC-297
Idle mixture ratio	EC-34
Idle speed	EC-34
Ignition coil	EC-322
Ignition timing	EC-34
Ignition wire inspection	EC-234
IGN/SG - Wiring diagram	EC-322
ILL - Wiring diagram	EL-64
Illumination	EL-63
Inhibitor switch	AT-76, EC-400
INJECT - Wiring diagram	EC-417
Injector	EC-419
Injector removal and installation	EC-32
Input shaft (FF M/T)	MT-20
Instrument panel	BT-16
Intake air temperature sensor	EC-120
Intake door control linkage adjustment	HA-40
Intake manifold	EM-9
Interior	BT-19
Interior lamp	EL-66
Interior lamp on-off control	EL-67
INT/L - Wiring diagram	EL-74

J

Jacking points	GI-38, GI-39
----------------------	--------------

K

Keyless entry system - See Multi-remote control system	EL-182
Knock sensor (KS)	EC-235
Knuckle spindle	FA-10
KS - Wiring diagram	EC-235

GI
MA
EM
LC
EC
FE
CL
MT
AT
FA
RA
BR
ST
RS
BT
HA
EL

IDX

ALPHABETICAL INDEX

L

Length (Dimensions)	GI-37
License lamp	EL-51
Lifting points	GI-38
Line pressure solenoid valve	AT-121
Line pressure test (A/T)	AT-55
Liquid gasket application	EM-2
LOAD - Wiring diagram	EC-436
Location of electrical units	EL-226
Lock, door	BT-14
Low and reverse brake	AT-262
Lubricant (R134a) A/C	HA-63
Lubricants	MA-8
Lubrication circuit (engine)	LC-4
Lubrication oil A/C	HA-63
Lubrication-locks, hinges and hood latches	MA-21
Luggage compartment trim	BT-24
Luggage room lamp	EL-74

M

MAFS - Wiring diagram	EC-103
Magnet clutch	HA-67
MAIN - Wiring diagram	EC-98
Main drive gear (M/T)	MT-15
Mainshaft (M/T)	MT-25
Maintenance	MA-3
Maintenance (engine)	MA-10
MAJOR OVERHAUL	AT-210
Malfunction indicator lamp (MIL)	EC-52
Manual transaxle number	GI-36
Manual transmission oil replacement	MA-16
MAP/BARO switch solenoid valve	EC-313
Mass air flow sensor (MAFS)	EC-103
Master cylinder (brake)	BR-11
Master cylinder (clutch)	CL-7
Meter	EL-76
METER - Wiring diagram	EL-79
MIL & Data link connectors circuit	EC-439
MIL/DL - Wiring diagram	EC-439
Mirror, door	BT-46
Mirror, out side	BT-46
Misfire	EC-230
Mode door control linkage adjustment	HA-36
Model variation	GI-34
Molding - See Exterior	BT-25
M/T major overhaul	MT-14
M/T removal and installation	MT-9
MULTI - Wiring diagram	EL-186
Multi link/lower ball joint (rear)	RA-14
Multiport fuel injection (MFI) system	EC-15

Multiport fuel injection precautions	GI-5
Multi-remote control system	EL-182

N

Neutral position switch	EC-400
Neutral position switch (M/T)	MT-8
NVH troubleshooting (BR)	BR-3
NVH troubleshooting (CL)	CL-3
NVH troubleshooting (EM)	EM-7
NVH troubleshooting (M/T)	MT-6
NVH troubleshooting (RA)	RA-3

O

Oil change (capacity)	MA-14
Oil change (interval)	MA-5
Oil jet	LC-4
Oil pan (engine)	EM-13
Oil pressure (engine)	LC-5
Oil pressure relief valve (engine)	LC-8
Oil pump (A/T)	AT-231
Oil pump (engine)	LC-6
Oil pump regulator valve (engine)	LC-8
Oil seal replacement (engine)	EM-26
Operating cylinder (clutch)	CL-8
Out side mirror	BT-46
Overdrive control switch	AT-195
Overrun clutch	AT-256
Overrun clutch solenoid valve	AT-121
Oversize piston	EM-46
Oxygen sensor (O2S)	EC-147, EC-154, EC-161, EC-168, EC-176

P

P/ANT - Wiring diagram	EL-132
Parking brake control	BR-33
Parking drum brake	BR-21
Parking lamp	EL-50
Park/Neutral position switch	EC-400
PCV (positive crankcase ventilation)	EC-30
PGC/V - Wiring diagram	EC-361
Pilot bushing replacement	EM-53
Piston assembly	EM-51
Piston pin inspection	EM-45
Piston ring inspection	EM-45
Piston to bore clearance	EM-46
PNP/SW - Wiring diagram	EC-400
POWER - Wiring diagram	EL-8
Power antenna	EL-131

ALPHABETICAL INDEX

Power door lock	EL-167
Power door mirror	EL-139
Power seat	EL-140
Power steering fluid level.....	ST-6, MA-20
Power steering gear	ST-14
Power steering hydraulic pressure.....	ST-9
Power steering oil pressure switch	EC-428
Power steering oil pump	ST-20
Power steering system bleeding.....	ST-6
Power supply routing.....	EL-6
Power transistor & ignition coil.....	EC-322
Power window	EL-161
Precautions (General).....	GI-3
PRE/SE - Wiring diagram	EC-288
Pressure plate - See Clutch cover.....	CL-10
Pressure test (A/T).....	AT-55
PST/SW - Wiring diagram.....	EC-428

R

R134a - See HFC134a	HA-2
Radiator	LC-14
Radiator fan - See Cooling fan	LC-14
Radio - See Audio	EL-124
Rear axle.....	RA-4
Rear axle (disc brake type).....	RA-8
Rear axle (drum brake type).....	RA-8
Rear bumper	BT-10
Rear combination lamp removal and installation	BT-30
Rear disc brake	BR-26
Rear door	BT-15
Rear drum brake	BR-21
Rear heated oxygen sensor (HO2S)	EC-185, EC-192, EC-199, EC-205
Rear panel finisher.....	BT-19
Rear seat.....	BT-33
Rear seat belt.....	RS-6
Rear suspension	RA-10
Rear window.....	BT-44
Rear window defogger	EL-114
Refrigerant connection precaution	HA-3
Refrigerant discharging evacuating charging.....	HA-61
Refrigerant general precaution.....	HA-2
Refrigerant lines	HA-65
Refrigeration cycle.....	HA-12
Release bearing (clutch)	CL-9
Resistor	EC-327
Reverse clutch.....	AT-249
Reverse idler shaft (M/T)	MT-15
Reverse lamp switch (M/T) - See Back-up lamp switch (M/T)	MT-8
Reverse main gear (M/T).....	MT-15

Revolution sensor (A/T)	AT-89
Road wheel size.....	GI-37
Roof trim.....	BT-23
Room lamp.....	EL-66
Room lamp - See Interior lamp.....	EL-66
ROOM/L - Wiring diagram	EL-70
Rotor disc (front)	FA-10
RRO2 - Wiring diagram.....	EC-185
RRO2/H - Wiring diagram.....	EC-210

S

SAE J1930 terminology list.....	GI-43
Seal - See Exterior.....	BT-25
SEAT - Wiring diagram	EL-140
Seat belt, front.....	RS-4
Seat belt inspection.....	MA-21, RS-7
Seat belt, rear.....	RS-6
Seat, front.....	BT-32
Seat, rear.....	BT-33
Self-diagnostic results	EC-52
SHIFT - Wiring diagram	AT-198
Shift control components (M/T).....	MT-16
Shift fork (M/T)	MT-16
Shift lock system	AT-197
Shift schedule.....	AT-301
Shift solenoid valve (A/T).....	AT-99, AT-111
Shift solenoid valve B (A/T)	AT-99
Shock absorber (front)	FA-24
Shock absorber (rear)	RA-12
Side trim	BT-19
Smart entrance control unit.....	EL-182
Spare tire size	GI-37
Spark plug replacement	MA-15
Spiral cable.....	RS-14
Spot lamp	EL-74
Spring (Wheelarch) height	FA-6
SROOF - Wiring diagram.....	EL-137
SRS - See Supplemental Restraint System	RS-10
SRS - Wiring diagram	RS-28
SRS Trouble diagnoses	RS-23
S/SIG - Wiring diagram	EC-420
Stabilizer bar (front).....	FA-25
Stabilizer bar (rear)	RA-14
Stall test (A/T)	AT-52
Standardized relay	EL-4
START - Wiring diagram	EL-25
Start signal	EC-420
Starter.....	EL-23
Starting system.....	EL-23
Steering gear and linkage inspection.....	MA-20
Steering gear oil level	MA-20
Steering knuckle.....	FA-10

ALPHABETICAL INDEX

Steering linkage.....	ST-14
Steering switch.....	EL-36
Steering wheel and column.....	ST-10
Steering wheel play.....	ST-8
Steering wheel turning force.....	ST-7
Stop lamp.....	EL-52
STOP/L - Wiring diagram.....	EL-52
Striking rod (M/T).....	MT-16
Strut (front).....	FA-24
Strut (rear).....	RA-12
Sun roof, electric.....	EL-137
Sunroof.....	BT-35
Supplemental restraint system - Wiring diagram.....	RS-28
Supplemental Restraint System.....	RS-10
SW/V - Wiring diagram.....	EC-313
Symbols and abbreviations.....	GI-8
Synchronizer (M/T).....	MT-15, MT-26
System readiness test (SRT) code.....	EC-42

T

Tail lamp.....	EL-50
TAIL/L - Wiring diagram.....	EL-50
TCM circuit diagram.....	AT-12
TCM inspection table.....	AT-70
Temperature control cable and linkage adjustment.....	HA-47
TFTS - Wiring diagram.....	EC-226
THEFT - Wiring diagram.....	EL-204
Theft warning system.....	EL-197
Thermal protector.....	HA-46
Thermo control amp.....	HA-46
Thermostat.....	LC-13
Three way catalyst.....	EC-263
Three way catalyst precautions.....	GI-5
Throttle bodies.....	EM-9
Throttle drum adjustment.....	FE-3
Throttle position sensor adjustment.....	EC-77
Throttle position sensor (TPS).....	EC-131
Throttle position switch.....	AT-156, AT-196, EC-303
Throwout bearing - See Clutch release bearing.....	CL-9
Tie-rod.....	ST-17
Tie-rod ball joints.....	ST-17
Tightening torque of standard bolts.....	GI-42
Timing chain.....	EM-17
Tire rotation.....	MA-20
Tire size.....	GI-37
Torque converter clutch solenoid valve.....	AT-121
Torque converter installation.....	AT-208
Tow truck towing.....	GI-40
TPS - Wiring diagram.....	EC-131

TP/SW - Wiring diagram.....	EC-303
Transmission case (M/T).....	MT-14
Transverse link (front).....	FA-26
Tread-FR&RR (Dimensions).....	GI-37
Trim.....	BT-19
Triple pressure switch.....	HA-46
Trouble diagnoses.....	GI-17
Trunk lid.....	BT-10
Trunk lid opener - See Trunk lid.....	BT-10
Trunk room lamp.....	EL-74
Trunk room trim.....	BT-24
TURN - Wiring diagram.....	EL-60
Turn signal lamp.....	EL-57
Two trip detection logic.....	EC-40
Two-pole lift.....	GI-40

U

Under body.....	BT-50
-----------------	-------

V

Vacuum cut valve.....	EC-396
Vacuum cut valve bypass valve.....	EC-387, EC-392
Vacuum hose (brake system).....	BR-16
Vacuum hose drawing (ECCS).....	EC-13
Valve clearance.....	EM-37
Valve guide.....	EM-33
Valve lifter.....	EM-36
Valve seat.....	EM-35
Valve spring.....	EM-36
Vehicle identification number.....	GI-35
Vehicle recovery (freeing a stuck vehicle).....	GI-41
Vehicle speed sensor (VSS).....	EC-293
Vent mode switch.....	HA-13
VENT/V - Wiring diagram.....	EC-283, EC-381
Viscosity number (SAE).....	MA-8
VSS - Wiring diagram.....	EC-293

W

WARN - Wiring diagram.....	EL-87
Warning chime.....	EL-91
Warning lamps.....	EL-84
Washer, front.....	EL-104
Water pump.....	LC-11
Weatherstrip - See Exterior.....	BT-25
Wheel alignment (front).....	FA-7
Wheel alignment (rear).....	RA-6
Wheel balance.....	MA-20
Wheel bearing (front axle).....	FA-7

ALPHABETICAL INDEX

Wheel bearing (rear)	RA-5	Window, back	BT-44	
Wheel hub (front)	FA-10	Window, door	BT-14	
Wheel hub (rear)	RA-8	Window, rear	BT-44	GI
Wheel sensors (ABS)	BR-36	Windshield	BT-43	
Wheel size	GI-37	WIPER - Wiring diagram	EL-106	
Wheelarch height	FA-6	Wiper and washer	EL-104	MA
Wheelbase (Dimensions)	GI-37	Wiper, front	EL-104	
Wide open & closed throttle position (CTP)		Wiring diagram (cell code) list	EL-250	
switch	EC-303	Wiring diagrams	GI-9	EM
Width (Dimensions)	GI-37	Withdrawal lever (clutch)	CL-9	
WINDOW - Wiring diagram	EL-164	Wrist pin - See Piston pin inspection	EM-45	LC
Window antenna	EL-131			

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX