

SECTION **IDX**  
ALPHABETICAL INDEX

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

IDX

# ALPHABETICAL INDEX

## A

A/C - Wiring diagram .....	<a href="#">ATC-35</a> , <a href="#">MTC-35</a>
A/C air flow .....	<a href="#">MTC-22</a>
A/C component layout .....	<a href="#">MTC-17</a>
A/C compressor clutch removal and installation ..	<a href="#">ATC-123</a> , <a href="#">MTC-85</a>
A/C compressor description .....	<a href="#">MTC-16</a>
A/C compressor mounting	<a href="#">ATC-122</a> , <a href="#">MTC-83</a> , <a href="#">MTC-84</a>
A/C compressor precaution .....	<a href="#">ATC-9</a> , <a href="#">MTC-9</a>
A/C compressor special service tool .	<a href="#">ATC-12</a> , <a href="#">MTC-12</a>
A/C diagnostic work flow (auto A/C) .....	<a href="#">ATC-31</a>
A/C diagnostic work flow (manual A/C) .....	<a href="#">MTC-28</a>
A/C evaporator .....	<a href="#">ATC-128</a> , <a href="#">MTC-90</a>
A/C HFC134a (R134a) system identification ....	<a href="#">ATC-5</a> , <a href="#">MTC-4</a>
A/C HFC134a (R134a) system introduction ...	<a href="#">MTC-16</a>
A/C HFC134a (R134a) system precaution .....	<a href="#">ATC-4</a> , <a href="#">MTC-3</a>
A/C HFC134a (R134a) system service procedure	<a href="#">ATC-119</a> , <a href="#">MTC-79</a>
A/C HFC134a (R134a) system service tools ..	<a href="#">ATC-12</a> , <a href="#">MTC-12</a>
A/C HFC134a system service equipment precaution ...	<a href="#">ATC-9</a> , <a href="#">MTC-9</a>
A/C lubricant (R134a) .....	<a href="#">ATC-18</a> , <a href="#">MTC-18</a>
A/C lubrication oil .....	<a href="#">ATC-18</a> , <a href="#">MTC-18</a>
A/C operational check .....	<a href="#">ATC-49</a> , <a href="#">MTC-38</a>
A/C performance chart .....	<a href="#">ATC-82</a> , <a href="#">MTC-59</a>
A/C performance test diagnoses .....	<a href="#">ATC-79</a> , <a href="#">MTC-58</a>
A/C self-diagnoses (auto A/C) .....	<a href="#">ATC-41</a>
A/C service data specification .....	<a href="#">ATC-133</a>
A/C switch .....	<a href="#">MTC-21</a>
A/C symptom chart (auto A/C) .....	<a href="#">ATC-31</a>
A/C symptom chart (manual A/C) .....	<a href="#">MTC-28</a>
A/C trouble diagnoses (auto A/C) .....	<a href="#">ATC-31</a>
A/C trouble diagnoses (manual A/C) .....	<a href="#">MTC-28</a>
A/C, A - Wiring diagram .....	<a href="#">ATC-35</a>
A/C, M - Wiring diagram .....	<a href="#">MTC-35</a>
A/T - Wiring diagram .....	<a href="#">AT-16</a>
A/T fluid temperature sensor .....	<a href="#">AT-109</a>
A/T IND - Wiring diagram .....	<a href="#">DI-41</a>
A/T indicator .....	<a href="#">DI-41</a>
A/T self-diagnoses .....	<a href="#">AT-41</a> , <a href="#">AT-50</a> , <a href="#">AT-51</a>
A/T shift lock system .....	<a href="#">AT-246</a>
A/T shift lock system - Wiring diagram .....	<a href="#">AT-247</a>
A/T Wiring diagram AT - 1ST .....	<a href="#">AT-126</a>
A/T Wiring diagram AT - 2ND .....	<a href="#">AT-131</a>
A/T Wiring diagram AT - 3RD .....	<a href="#">AT-136</a>
A/T Wiring diagram AT - 4TH .....	<a href="#">AT-141</a>
A/T Wiring diagram AT - BA/FTS .....	<a href="#">AT-190</a>
A/T Wiring diagram AT - CAN .....	<a href="#">AT-186</a>
A/T Wiring diagram AT - ENG SS .....	<a href="#">AT-121</a>
A/T Wiring diagram AT - FTS .....	<a href="#">AT-111</a>
A/T Wiring diagram AT - LPSV .....	<a href="#">AT-161</a>
A/T Wiring diagram AT - MAIN .....	<a href="#">AT-100</a>
A/T Wiring diagram AT - NONDTC .....	<a href="#">AT-208</a>
A/T Wiring diagram AT - OVRCSV .....	<a href="#">AT-182</a>
A/T Wiring diagram AT - PNP/SW .....	<a href="#">AT-105</a>
A/T Wiring diagram AT - SSV/A .....	<a href="#">AT-167</a>
A/T Wiring diagram AT - SSV/B .....	<a href="#">AT-172</a>
A/T Wiring diagram AT - TCCSIG .....	<a href="#">AT-153</a>
A/T Wiring diagram AT - TCV .....	<a href="#">AT-148</a>
A/T Wiring diagram AT - TPS .....	<a href="#">AT-177</a>
A/T Wiring diagram AT - VSS A/T .....	<a href="#">AT-117</a>
A/T Wiring diagram AT - VSSMTR ....	<a href="#">AT-197</a> , <a href="#">AT-201</a>
ABS - Wiring diagram .....	<a href="#">BRC-12</a>
Absolute pressure sensor .....	<a href="#">EC-802</a>
Accelerator control system .....	<a href="#">ACC-2</a>
Accelerator pedal position (APP) sensor	<a href="#">EC-262</a> , <a href="#">EC-268</a> , <a href="#">EC-464</a> , <a href="#">EC-913</a> , <a href="#">EC-920</a> , <a href="#">EC-1131</a>
Accelerator pedal released position learning ..	<a href="#">EC-667</a>
Active damper suspension system - Wiring diagram ....	<a href="#">FSU-4</a>
Aiming adjustment .....	<a href="#">LT-23</a>
Air bag .....	<a href="#">SRS-3</a>
Air bag disposal .....	<a href="#">SRS-54</a>
Air bag precautions .....	<a href="#">GI-3</a>
Air bleeding (hydraulic clutch)Air bleeding (hydraulic clutch) .....	<a href="#">CL-7</a>
Air bleeding for brake systemAir bleeding for brake system .....	<a href="#">BR-9</a>
Air cleaner and air duct .....	<a href="#">EM-16</a> , <a href="#">EM-112</a>
Air cleaner filter replacement .....	<a href="#">MA-17</a> , <a href="#">MA-24</a>
Air conditioner - Wiring diagram .....	<a href="#">ATC-35</a> , <a href="#">MTC-35</a>
Air conditioner cut control .....	<a href="#">EC-34</a> , <a href="#">EC-651</a>
Air conditioning - See A/C .....	<a href="#">MTC-16</a>
Air flow meter - See Mass air flow sensor	<a href="#">EC-153</a> , <a href="#">EC-160</a> , <a href="#">EC-386</a> , <a href="#">EC-788</a> , <a href="#">EC-796</a> , <a href="#">EC-1047</a>
Air mix door control linkage adjustment .....	<a href="#">ATC-63</a>
Alternator .....	<a href="#">SC-33</a>
Ambient sensor .....	<a href="#">ATC-103</a>
Angular tightening application .....	<a href="#">EM-4</a> , <a href="#">EM-103</a>
Antenna .....	<a href="#">AV-26</a>
Anti-lock brake system - Wiring diagram .....	<a href="#">BRC-12</a>
APPS1 - Wiring diagram .....	<a href="#">EC-270</a> , <a href="#">EC-922</a>
APPS2 - Wiring diagram .....	<a href="#">EC-466</a> , <a href="#">EC-1133</a>
APPS3 - Wiring diagram .....	<a href="#">EC-264</a> , <a href="#">EC-915</a>
ASC/BS - Wiring diagram .....	<a href="#">EC-534</a> , <a href="#">EC-1197</a>
ASC/SW - Wiring diagram .....	<a href="#">EC-527</a> , <a href="#">EC-1190</a>
ASCSOF - Wiring diagram .....	<a href="#">EC-602</a> , <a href="#">EC-1273</a>
ASCD .....	<a href="#">EC-627</a>
ASCD (automatic speed control device) .....	<a href="#">EC-1300</a> , <a href="#">ACS-2</a>
ASCIND - Wiring diagram .....	<a href="#">EC-610</a> , <a href="#">EC-1283</a>
Audio .....	<a href="#">AV-4</a>
AUDIO - Wiring diagram .....	<a href="#">AV-4</a> , <a href="#">AV-8</a>
Auto air conditioner - Wiring diagram .....	<a href="#">ATC-35</a>
Auto anti-dazzling inside mirror .....	<a href="#">GW-39</a> , <a href="#">GW-40</a>
Automatic amplifier .....	<a href="#">ATC-39</a> , <a href="#">ATC-52</a>
Automatic transaxle number .....	<a href="#">GI-43</a>
Automatic transmission fluid replacement .....	<a href="#">MA-29</a>

## B

Back door trim .....	<a href="#">EI-27</a>
BACK/L - Wiring diagram .....	<a href="#">LT-107</a>
Back-up lamp switch (M/T)Back-up lamp switch	<a href="#">MT-12</a>

# ALPHABETICAL INDEX

Basic inspection .....	<a href="#">EC-84</a> , <a href="#">EC-704</a>	Closed loop control .....	<a href="#">EC-32</a> , <a href="#">EC-441</a> , <a href="#">EC-649</a>	
Battery .....	<a href="#">SC-4</a>	Closed loop control (Bank 1) .....	<a href="#">EC-1105</a>	A
Battery/Starting/Charging System Tester .....	<a href="#">SC-6</a> , <a href="#">SC-16</a> , <a href="#">SC-27</a>	Closed loop control (Bank 2) .....	<a href="#">EC-1105</a>	
Baulk ring (M/T) .....	<a href="#">MT-20</a>	Clutch coverClutch cover .....	<a href="#">CL-15</a>	B
BCM (Body control module) .....	<a href="#">BCS-3</a>	Clutch discClutch disc .....	<a href="#">CL-15</a>	
Block heater .....	<a href="#">EM-69</a> , <a href="#">EM-188</a>	Clutch fluid level .....	<a href="#">MA-28</a>	C
Blower motor .....	<a href="#">ATC-67</a> , <a href="#">ATC-109</a> , <a href="#">MTC-49</a> , <a href="#">MTC-70</a>	Clutch master cylinderClutch master cylinder .....	<a href="#">CL-8</a>	
Blower resistor .....	<a href="#">MTC-76</a>	Clutch operating cylinderClutch operating cylinder .....	<a href="#">CL-10</a>	
Blower unit .....	<a href="#">ATC-108</a> , <a href="#">MTC-69</a>	Clutch pedalClutch pedal .....	<a href="#">CL-5</a>	
Board-on lift .....	<a href="#">GI-37</a>	Clutch release mechanismClutch release mechanism .....	<a href="#">CL-13</a>	D
Body alignment .....	<a href="#">BL-150</a>	Coil spring (front) .....	<a href="#">FSU-9</a>	
Body component parts .....	<a href="#">BL-139</a>	Coil spring (rear)Coil spring .....	<a href="#">RSU-9</a>	
Body construction .....	<a href="#">BL-149</a>	Collision diagnosis .....	<a href="#">SRS-61</a>	E
Body exterior paint color .....	<a href="#">BL-138</a>	Combination lamp, front, removal and installation ..	<a href="#">LT-25</a>	
Body repair .....	<a href="#">BL-138</a>	Combination lamp, rear, removal and installation ..	<a href="#">LT-122</a>	F
Body sealing .....	<a href="#">BL-146</a>	Combination meter .....	<a href="#">DI-4</a>	
Brake boosterBrake booster .....	<a href="#">BR-17</a>	Component Location (auto A/C) .....	<a href="#">ATC-32</a>	G
Brake control valve (Proportioning valve)Brake control valve (Proportioning valve) .....	<a href="#">BR-31</a>	Component Location (manual A/C) .....	<a href="#">MTC-29</a>	
Brake fluid changeBrake fluid change .....	<a href="#">BR-9</a>	Compressor clutch removal and installation ..	<a href="#">ATC-123</a> , <a href="#">MTC-85</a>	H
Brake fluid level .....	<a href="#">MA-32</a>	Compressor mounting .....	<a href="#">ATC-122</a> , <a href="#">MTC-83</a> , <a href="#">MTC-84</a>	
Brake fluid level and line checkBrake fluid level and line check .....	<a href="#">BR-9</a>	Compressor precaution .....	<a href="#">ATC-9</a> , <a href="#">MTC-9</a>	
Brake hydraulic lineBake hydraulic line .....	<a href="#">BR-10</a>	Compressor special service tool .....	<a href="#">ATC-12</a> , <a href="#">MTC-12</a>	
Brake inspection .....	<a href="#">MA-32</a>	Condenser .....	<a href="#">ATC-126</a> , <a href="#">MTC-88</a>	I
Brake lines and cables inspection .....	<a href="#">MA-32</a>	Connector inspection .....	<a href="#">GI-22</a>	
Brake master cylinderBrake master cylinder .....	<a href="#">BR-13</a>	Console box - See Instrument panel .....	<a href="#">IP-10</a>	
Brake pedalBrake pedal .....	<a href="#">BR-6</a>	CONSULT for engine .....	<a href="#">EC-106</a> , <a href="#">EC-729</a>	J
Brake switch .....	<a href="#">EC-548</a> , <a href="#">EC-1219</a>	CONSULT for TCS .....	<a href="#">BRC-58</a>	
BRK/SW - Wiring diagram .....	<a href="#">EC-549</a> , <a href="#">EC-1220</a>	CONSULT general information .....	<a href="#">GI-35</a>	
Bulb specifications .....	<a href="#">LT-146</a>	Contaminated refrigerant .....	<a href="#">MTC-3</a>	K
Bumper, front .....	<a href="#">EI-13</a>	Control unit .....	<a href="#">ATC-102</a> , <a href="#">MTC-67</a>	
Bumper, rear .....	<a href="#">EI-15</a>	Control units (terminal arrangement) .....	<a href="#">PG-67</a>	
BYPS/V - Wiring diagram ..	<a href="#">EC-511</a> , <a href="#">EC-519</a> , <a href="#">EC-1176</a> , <a href="#">EC-1183</a>	Controller Area Network (CAN) ..	<a href="#">LAN-3</a> , <a href="#">LAN-7</a> , <a href="#">LAN-28</a> , <a href="#">LAN-45</a>	L
<b>C</b>				
Camshaft .....	<a href="#">EM-36</a> , <a href="#">EM-136</a>	Converter housing installation .....	<a href="#">AT-356</a>	
Camshaft inspection .....	<a href="#">EM-38</a> , <a href="#">EM-141</a>	COOL/F - Wiring diagram ..	<a href="#">EC-241</a> , <a href="#">EC-446</a> , <a href="#">EC-1112</a>	
Camshaft position sensor (PHASE) ..	<a href="#">EC-290</a> , <a href="#">EC-943</a>	Coolant mixture ratio .....	<a href="#">MA-13</a>	
CAN - Wiring diagram ..	<a href="#">EC-138</a> , <a href="#">EC-762</a> , <a href="#">LAN-8</a> , <a href="#">LAN-29</a> , <a href="#">LAN-46</a>	Coolant overtemperarute enrichment protection ..	<a href="#">EC-237</a>	I DX
CAN (Controller Area Network) ..	<a href="#">LAN-3</a> , <a href="#">LAN-7</a> , <a href="#">LAN-28</a> , <a href="#">LAN-45</a>	Coolant replacement .....	<a href="#">CO-6</a> , <a href="#">CO-28</a> , <a href="#">MA-14</a>	
CAN communication ..	<a href="#">EC-34</a> , <a href="#">EC-137</a> , <a href="#">EC-652</a> , <a href="#">EC-761</a> , <a href="#">AT-185</a> , <a href="#">BRC-71</a> , <a href="#">LAN-3</a> , <a href="#">LAN-7</a> , <a href="#">LAN-28</a> , <a href="#">LAN-45</a>	Coolant replacementVQ35DE .....	<a href="#">MA-22</a>	
Canister-See EVAP canister .....	<a href="#">EC-616</a> , <a href="#">EC-1289</a>	Cooling circuit (engine) .....	<a href="#">CO-31</a>	
CHARGE - Wiring diagram .....	<a href="#">SC-26</a>	Cooling fan motor .....	<a href="#">EC-248</a> , <a href="#">EC-453</a> , <a href="#">EC-1119</a>	
Charging system .....	<a href="#">SC-25</a>	Cooling unit (A/C evaporator) .....	<a href="#">ATC-112</a> , <a href="#">ATC-128</a> , <a href="#">MTC-73</a> , <a href="#">MTC-90</a>	
Chassis and body maintenance .....	<a href="#">MA-28</a>	Corrosion protection .....	<a href="#">BL-143</a>	
Chassis and body maintenanceSchedule 1 .....	<a href="#">MA-9</a>	Coupling sleeve (M/T) .....	<a href="#">MT-20</a>	
Chassis and body maintenanceSchedule 2 .....	<a href="#">MA-11</a>	Crankcase ventilation system - See Positive crankcase ventilation .....	<a href="#">EC-625</a> , <a href="#">EC-1298</a>	
CHIME - Wiring diagram .....	<a href="#">DI-49</a>	Crankshaft .....	<a href="#">EM-70</a>	
CIGAR - Wiring diagram .....	<a href="#">WW-28</a>	Crankshaft position sensor (POS) .....	<a href="#">EC-283</a> , <a href="#">EC-936</a>	
Cigarette lighter .....	<a href="#">WW-28</a>	Crash zone sensor .....	<a href="#">SRS-50</a>	
Circuit breaker .....	<a href="#">PG-63</a>	Cylinder block .....	<a href="#">EM-69</a> , <a href="#">EM-188</a>	
Clearance lamp .....	<a href="#">LT-109</a>	Cylinder block boring .....	<a href="#">EM-89</a>	
		Cylinder head .....	<a href="#">EM-55</a> , <a href="#">EM-166</a>	

# ALPHABETICAL INDEX

Cylinder head bolt tightening ..... [EM-172](#)

## D

Data link connector ..... [EC-612](#), [EC-1285](#)  
Data link connector for Consult ..... [EC-108](#), [EC-731](#)  
Daytime light system ..... [LT-28](#)  
Daytime running light - See Daytime light system .. [LT-28](#)  
Diagnosis sensor unit ..... [SRS-53](#)  
Diagnostic trouble code (DTC) for OBD system [EC-15](#), [EC-58](#), [EC-631](#), [EC-676](#)  
Diagnostic trouble code (DTC) inspection priority chart [EC-81](#), [EC-700](#)  
Differential gear (FF M/T) ..... [MT-23](#)  
Dimensions ..... [GI-43](#)  
DLC - Wiring diagram ..... [EC-612](#), [EC-1285](#)  
Door glass ..... [GW-34](#), [GW-37](#)  
Door glass Fitting Adjustment(Front) ..... [GW-35](#)  
Door glass Fitting Adjustment(Rear) ..... [GW-38](#)  
Door mirror ..... [GW-61](#)  
Door trim ..... [EI-27](#)  
Door, front ..... [BL-75](#), [GW-34](#)  
Door, rear ..... [BL-75](#), [GW-37](#)  
Drive belt ..... [EM-13](#)  
Drive belt inspectionQR25DE ..... [MA-14](#)  
Drive belt inspectionVQ35DE ..... [MA-21](#)  
Drive shaft (front) ..... [FAX-11](#)  
Driver air bag ..... [SRS-39](#)  
Dropping resistor (A/T) ..... [AT-159](#)  
DTC work support ..... [EC-117](#), [EC-740](#)  
DTRL - Wiring diagram ..... [LT-38](#)  
Duct and grilles ..... [ATC-117](#), [MTC-77](#)

## E

ECM input/output signal ..... [EC-99](#), [EC-721](#)  
ECM power supply [EC-130](#), [EC-382](#), [EC-755](#), [EC-1043](#)  
ECM/PW - Wiring diagram ..... [EC-383](#)  
ECTS - Wiring diagram ..... [EC-173](#), [EC-811](#), [EC-816](#)  
Electric sunroof ..... [RF-10](#)  
Electric throttle control actuator [EC-396](#), [EC-398](#), [EC-410](#), [EC-1053](#), [EC-1055](#), [EC-1067](#)  
Electrical diagnoses ..... [GI-22](#)  
Electrical load signal circuit ..... [EC-600](#), [EC-1271](#)  
Electronic ignition (EI) system ..... [EC-33](#), [EC-650](#)  
EMNT - Wiring diagram ..... [EC-1262](#)  
Engine control circuit diagram ..... [EC-97](#), [EC-719](#)  
Engine control component parts location ... [EC-93](#), [EC-713](#)  
Engine control module (ECM) ..... [EC-375](#), [EC-1036](#)  
Engine control system diagram and chart . [EC-28](#), [EC-645](#)  
Engine coolant ..... [CO-32](#)  
Engine coolant temperature sensor (ECTS) ... [EC-171](#), [EC-176](#), [EC-809](#), [EC-814](#)  
Engine fail-safe system ..... [EC-82](#), [EC-702](#)  
Engine mounting control (Front) ..... [EC-1261](#)  
Engine oil ..... [LU-17](#)

Engine oil filter replacementQR25DE ... [MA-18](#), [MA-25](#)  
Engine oil precautions ..... [GI-3](#), [GI-6](#)  
Engine oil replacementQR25DE ..... [MA-17](#), [MA-24](#)  
Engine removal ..... [EM-65](#), [EM-184](#)  
Engine serial number ..... [GI-43](#)  
ETC1 - Wiring diagram ..... [EC-399](#), [EC-1056](#)  
ETC2 - Wiring diagram ..... [EC-407](#), [EC-1064](#)  
ETC3 - Wiring diagram ..... [EC-411](#), [EC-1068](#)  
EVAP canister ..... [EC-1289](#)  
EVAP canister purge volume control solenoid valve .... [EC-314](#), [EC-476](#), [EC-616](#), [EC-970](#), [EC-1141](#), [EC-1289](#)  
EVAP canister vent control valve [EC-320](#), [EC-484](#), [EC-490](#), [EC-976](#), [EC-1149](#), [EC-1155](#)  
EVAP control system (small leak) diagnosis .. [EC-306](#), [EC-340](#), [EC-348](#), [EC-474](#), [EC-497](#), [EC-961](#), [EC-996](#), [EC-1004](#), [EC-1163](#)  
EVAP control system pressure sensor ... [EC-327](#), [EC-333](#), [EC-983](#), [EC-989](#)  
EVAP control system purge flow monitoring diagnosis . [EC-300](#), [EC-955](#)  
EVAP vapor lines inspection ..... [MA-20](#), [MA-27](#)  
Evaporative emission (EVAP) system [EC-613](#), [EC-616](#), [EC-1286](#)  
Evaporator ..... [ATC-128](#), [MTC-90](#)  
Exhaust manifold ..... [EM-118](#)  
Exhaust system ..... [EX-3](#), [EX-6](#)  
Exhaust system inspection ..... [EX-3](#), [EX-6](#), [MA-28](#)  
Expansion valve ..... [ATC-129](#), [MTC-91](#)

## F

F/PUMP - Wiring diagram ..... [EC-584](#), [EC-1255](#)  
Fan control amp. .... [ATC-116](#)  
Fan switch ..... [MTC-21](#)  
Final drive (FF M/T) ..... [MT-23](#)  
Flow charts ..... [GI-25](#)  
FLS1 - Wiring diagram ..... [EC-358](#), [EC-1014](#)  
FLS2 - Wiring diagram ..... [EC-365](#), [EC-1021](#)  
FLS3 - Wiring diagram ..... [EC-507](#), [EC-1172](#)  
Fluid temperature sensor (A/T) ..... [AT-109](#)  
Fluids ..... [MA-12](#)  
Fluorescent leak detector ..... [ATC-130](#), [MTC-91](#)  
Flywheel (clutch)Flywheel (clutch) ..... [CL-15](#)  
Fork rod (M/T) ..... [MT-22](#)  
Freeze frame data ..... [EC-59](#), [EC-677](#)  
Front bumper ..... [EI-13](#)  
Front combination lamp removal and installation [LT-25](#)  
Front disc brakeFront disc brake ..... [BR-20](#)  
Front door ..... [BL-75](#), [GW-34](#)  
Front Door Trim ..... [EI-27](#)  
Front passenger air bag ..... [SRS-43](#)  
Front seat ..... [SE-14](#)  
Front seat belt ..... [SB-3](#)  
Front seat belt pre-tensioner .... [SB-2](#), [SRS-3](#), [SRS-52](#)  
Front side air bag ..... [SRS-47](#)  
FTTS - Wiring diagram ..... [EC-234](#), [EC-892](#), [EC-896](#)  
FUEL - Wiring diagram ..... [EC-221](#), [EC-227](#)  
Fuel cut control (at no load high engine speed) [EC-34](#), [EC-651](#)

# ALPHABETICAL INDEX

Fuel gauge ..... [DI-4](#)  
Fuel injection system ..... [EC-219](#), [EC-225](#)  
Fuel injection system (Bank 1) ..... [EC-875](#), [EC-883](#)  
Fuel injection system (Bank 2) ..... [EC-875](#), [EC-883](#)  
Fuel injector and fuel tube ..... [EM-31](#), [EM-131](#)  
Fuel level sensor .. [EC-357](#), [EC-362](#), [EC-364](#), [EC-506](#),  
[EC-1013](#), [EC-1018](#), [EC-1020](#), [EC-1171](#)  
Fuel line inspection ..... [FL-3](#), [MA-17](#), [MA-24](#)  
Fuel precautions ..... [GI-3](#), [GI-5](#)  
Fuel pressure check ..... [EC-51](#), [EC-670](#)  
Fuel pressure release ..... [EC-51](#), [EC-670](#)  
Fuel pump ..... [EC-583](#), [EC-1254](#)  
Fuel system ..... [FL-3](#)  
Fuel systemCommercial Service Tools ..... [FL-2](#)  
Fuel systemPREPARATION ..... [FL-2](#)  
Fuel tank temperature sensor ... [EC-231](#), [EC-233](#), [EC-890](#), [EC-895](#)  
Fuel tank vacuum relief valve ..... [EC-1289](#)  
FUELB1 - Wiring diagram ..... [EC-877](#), [EC-885](#)  
FUELB2 - Wiring diagram ..... [EC-878](#), [EC-886](#)  
Fuse ..... [PG-63](#), [PG-72](#)  
Fuse block ..... [PG-71](#)  
Fusible link ..... [PG-63](#), [PG-72](#)

## G

Garage jack and safety stand ..... [GI-37](#)  
Gear components (M/T) ..... [MT-20](#)  
Generator ..... [SC-33](#)  
Generator - See Alternator ..... [SC-33](#)  
Generic scan tool (GST) ..... [EC-118](#), [EC-742](#)  
Glass ..... [GW-11](#), [GW-13](#), [GW-34](#), [GW-37](#)  
Glove box lamp ..... [LT-142](#)  
Grease ..... [MA-12](#)  
Ground distribution ..... [PG-26](#)

## H

H/LAMP - Wiring diagram ..... [LT-12](#)  
Handling precautions for plastics ..... [BL-161](#)  
Harness connector ..... [PG-64](#)  
Harness connector inspection ..... [GI-22](#)  
Harness layout ..... [PG-37](#)  
Hazard warning lamp ..... [LT-80](#)  
Headlamp ..... [LT-5](#)  
Headlamp removal and installation ..... [LT-25](#)  
Heated oxygen sensor 1 .... [EC-184](#), [EC-190](#), [EC-199](#),  
[EC-415](#), [EC-421](#)  
Heated oxygen sensor 1 (bank 1) .... [EC-825](#), [EC-834](#),  
[EC-845](#), [EC-1072](#), [EC-1078](#)  
Heated oxygen sensor 1 (bank 2) .... [EC-825](#), [EC-834](#),  
[EC-845](#), [EC-1072](#), [EC-1078](#)  
Heated oxygen sensor 1 heater ..... [EC-143](#)  
Heated oxygen sensor 1 heater (bank 1) ..... [EC-772](#)  
Heated oxygen sensor 1 heater (bank 2) ..... [EC-772](#)  
Heated oxygen sensor 2 .... [EC-206](#), [EC-212](#), [EC-427](#),  
[EC-434](#)  
Heated oxygen sensor 2 (bank 1) .... [EC-855](#), [EC-865](#),  
[EC-1085](#), [EC-1095](#)

Heated oxygen sensor 2 (bank 2) .... [EC-855](#), [EC-865](#),  
[EC-1085](#), [EC-1095](#)  
Heated oxygen sensor 2 heater ..... [EC-148](#)  
Heated oxygen sensor 2 heater (bank 1) ..... [EC-780](#)  
Heated oxygen sensor 2 heater (bank 2) ..... [EC-780](#)  
Heated seat ..... [SE-12](#)  
HEATER - Wiring diagram ..... [MTC-33](#)  
Heater and cooling unit (Heater core) [ATC-112](#), [ATC-113](#), [MTC-73](#), [MTC-74](#)  
Heater system - Wiring diagram ..... [MTC-33](#)  
Heater unit (heater core) [ATC-112](#), [ATC-113](#), [MTC-73](#),  
[MTC-74](#)  
Height (Dimensions) ..... [GI-43](#)  
HFC134a (R134a) system identification [ATC-5](#), [MTC-4](#)  
HFC134a (R134a) system introduction ..... [MTC-16](#)  
HFC134a (R134a) system precaution .. [ATC-4](#), [MTC-3](#)  
HFC134a (R134a) system service procedure [ATC-119](#),  
[MTC-79](#)  
HFC134a (R134a) system service tools [ATC-12](#), [MTC-12](#)  
HFC134a system service equipment precaution . [ATC-9](#), [MTC-9](#)  
HO2S1 - Wiring diagram ..... [EC-186](#), [EC-193](#), [EC-202](#)  
HO2S1H - Wiring diagram ..... [EC-145](#)  
HO2S2 - Wiring diagram ... [EC-208](#), [EC-214](#), [EC-429](#),  
[EC-436](#)  
HO2S2H - Wiring diagram ..... [EC-150](#)  
Horn ..... [WW-32](#)  
HORN - Wiring diagram ..... [WW-32](#)  
How to erase DTC for OBD system .... [EC-67](#), [EC-686](#)  
HSEAT - Wiring diagram ..... [SE-13](#)

## I

IATS - Wiring diagram ..... [EC-168](#), [EC-806](#), [EC-820](#)  
Identification ..... [MTC-4](#)  
Identification plate ..... [GI-43](#)  
Idle air volume learning ..... [EC-49](#), [EC-668](#)  
Idle mixture ratio ..... [EC-39](#), [EC-657](#)  
Idle speed ..... [EC-39](#), [EC-84](#), [EC-657](#), [EC-704](#)  
Idle speed control (ISC) .... [EC-371](#), [EC-373](#), [EC-1027](#),  
[EC-1029](#)  
Ignition coil ..... [EM-28](#), [EM-128](#), [EC-553](#), [EC-1224](#)  
Ignition control system ..... [EC-553](#), [EC-1224](#)  
Ignition key hole illumination ..... [LT-130](#)  
Ignition timing ..... [EC-39](#), [EC-84](#), [EC-657](#), [EC-704](#)  
IGNSYS - Wiring diagram ..... [EC-554](#), [EC-1225](#)  
ILL - Wiring diagram ..... [LT-138](#)  
Illumination ..... [LT-131](#)  
Illumination control ..... [ATC-142](#)  
In vehicle sensor ..... [ATC-104](#)  
INJECT - Wiring diagram ..... [EC-574](#), [EC-1245](#)  
Injector ..... [EC-573](#), [EC-1244](#)  
Input shaft (FF M/T) ..... [MT-20](#)  
Instrument panel ..... [IP-10](#)  
INT/L - Wiring diagram ..... [LT-143](#)  
Intake air temperature sensor .... [EC-166](#), [EC-179](#), [EC-804](#), [EC-818](#)  
Intake door control linkage adjustment . [ATC-66](#), [MTC-](#)

# ALPHABETICAL INDEX

48

Intake door motor [ATC-66](#), [ATC-110](#), [MTC-47](#), [MTC-71](#)  
Intake manifold ..... [EM-18](#), [EM-114](#)  
Intake sensor .... [ATC-99](#), [ATC-106](#), [MTC-65](#), [MTC-68](#)  
Intake valve timing control ..... [EC-140](#)  
Intake valve timing control (Bank 1) ..... [EC-764](#)  
Intake valve timing control (Bank 2) ..... [EC-764](#)  
Intake valve timing control solenoid valve ..... [EC-392](#)  
Interior ..... [EI-29](#)  
Interior lamp ..... [LT-123](#)  
IPDM (Intelligent power distribution module engine room) ..... [PG-14](#)  
IVC - Wiring diagram ..... [EC-393](#)  
IVCB1 - Wiring diagram ..... [EC-766](#)  
IVCB2 - Wiring diagram ..... [EC-768](#)

## J

Jacking points ..... [GI-37](#)  
Junction box (J/B) ..... [PG-71](#)

## K

Keyless entry system - See Multi-remote control system [BL-43](#)  
Knock sensor (KS) ..... [EC-279](#), [EC-932](#)  
KS - Wiring diagram ..... [EC-280](#), [EC-933](#)

## L

LAN system circuit ..... [ATC-55](#)  
Length (Dimensions) ..... [GI-43](#)  
License lamp ..... [LT-109](#)  
Lifting points ..... [GI-37](#)  
Line pressure solenoid valve ..... [AT-159](#)  
Line pressure test (A/T) ..... [AT-65](#)  
Liquid gasket application ..... [EM-5](#)  
Location of electrical units ..... [PG-60](#)  
Lubricant (R134a) A/C ..... [ATC-18](#), [MTC-18](#)  
Lubricants ..... [MA-12](#)  
Lubrication circuit (engine) ..... [LU-15](#)  
Lubrication oil A/C ..... [ATC-18](#), [MTC-18](#)  
Lubrication-locks, hinges and hood latches ..... [MA-35](#)  
Luggage compartment trim ..... [EI-35](#)

## M

M/T major overhaul ..... [MT-23](#)  
M/T oil replacementM/T oil replacement ..... [MT-10](#)  
M/T removal and installationM/T removal and installation ..... [MT-16](#)  
MAFS - Wiring diagram [EC-156](#), [EC-162](#), [EC-388](#), [EC-791](#), [EC-798](#), [EC-1049](#)  
Magnet clutch ..... [ATC-123](#), [MTC-85](#)  
MAIN - Wiring diagram ..... [EC-130](#), [EC-755](#)  
Mainshaft (M/T) ..... [MT-20](#)  
Maintenance ..... [MA-5](#)  
Maintenance (engine)QR25DE ..... [MA-14](#)  
Maintenance (engine)VQ35DE ..... [MA-21](#)

Malfunction indicator lamp (MIL) . [EC-69](#), [EC-378](#), [EC-688](#), [EC-1039](#)  
Manual air conditioner - Wiring diagram ..... [MTC-35](#)  
Manual transaxle number ..... [GI-43](#)  
Manual transmission oil replacement ..... [MA-28](#)  
Mass air flow sensor (MAFS) .... [EC-153](#), [EC-160](#), [EC-386](#), [EC-788](#), [EC-796](#), [EC-1047](#)  
Master cylinder (brake)Master cylinder (brake) [BR-13](#)  
Master cylinder (clutch)Master cylinder (clutch) ... [CL-8](#)  
METER - Wiring diagram ..... [DI-12](#), [DI-65](#)  
MIL - Wiring diagram ..... [EC-379](#), [EC-1040](#)  
Mirror, door ..... [GW-61](#)  
Mirror, out side ..... [GW-61](#)  
Misfire ..... [EC-274](#), [EC-926](#)  
Mode door control linkage adjustment . [ATC-60](#), [MTC-44](#)  
Mode door motor ..... [ATC-114](#), [MTC-75](#)  
Model variation ..... [GI-43](#)  
Multiport fuel injection (MFI) system .. [EC-31](#), [EC-648](#)  
Multiport fuel injection precautions ..... [GI-3](#), [GI-5](#)  
Multi-remote control system ..... [BL-43](#)

## N

NATS - Wiring diagram ..... [BL-118](#)  
NVH troubleshooting (BR)NVH troubleshooting (BR) ... [BR-5](#)  
NVH troubleshooting (CL)NVH troubleshooting (CL) .... [CL-4](#)  
NVH troubleshooting (EM) ..... [EM-11](#), [EM-109](#)  
NVH troubleshooting (FA) ..... [FAX-4](#)  
NVH troubleshooting (RA) ..... [RAX-4](#)  
NVH troubleshooting (RSU)NVH Troubleshooting (RSU) [RSU-4](#)  
NVH troubleshooting (ST) ..... [PS-5](#)  
NVH troubleshooting (WT)NVH troubleshooting (WT) .. [WT-2](#)

## O

O2H1B1 - Wiring diagram ..... [EC-774](#)  
O2H1B2 - Wiring diagram ..... [EC-776](#)  
O2H2B1 - Wiring diagram ..... [EC-782](#)  
O2H2B2 - Wiring diagram ..... [EC-784](#)  
O2S1B1 - Wiring diagram ... [EC-827](#), [EC-837](#), [EC-848](#)  
O2S1B2 - Wiring diagram ... [EC-829](#), [EC-839](#), [EC-850](#)  
O2S2B1 - Wiring diagram [EC-857](#), [EC-867](#), [EC-1087](#), [EC-1097](#)  
O2S2B2 - Wiring diagram [EC-859](#), [EC-869](#), [EC-1089](#), [EC-1099](#)  
Oil change (capacity)QR25DE ..... [MA-12](#)  
Oil change (capacity)VQ35DE ..... [MA-12](#)  
Oil filter ..... [LU-19](#)  
Oil pan (engine) ..... [EM-25](#), [EM-122](#)  
Oil pump (engine) ..... [LU-9](#), [LU-20](#)  
On board diagnostic system ..... [EC-54](#), [EC-672](#)  
Operating cylinder (clutch)Operating cylinder (clutch) .. [CL-10](#)  
ORVR (On-board Refueling Vapor Recovery) [EC-619](#),

# ALPHABETICAL INDEX

## [EC-1292](#)

Out side mirror ..... [GW-61](#)  
 Overdrive control switch ..... [AT-241](#)  
 Overheat ..... [EC-1109](#)  
 Overrun clutch solenoid valve ..... [AT-180](#)

## P

Park/Neutral position switch ..... [EC-544](#), [EC-1208](#)  
 Park/neutral position switch (A/T) ..... [AT-103](#)  
 Park/neutral position switch (M/T)Park/neutral position switch (M/T) ..... [MT-12](#)  
 Parking brake controlParking brake control ..... [PB-2](#)  
 Parking drum brakeParking drum brake ..... [PB-5](#)  
 Parking lamp ..... [LT-109](#)  
 PCV (positive crankcase ventilation) [EC-625](#), [EC-1298](#)  
 Periodic maintenance ..... [MA-7](#)  
 Personal lamp ..... [LT-129](#)  
 PGC/V - Wiring diagram [EC-316](#), [EC-478](#), [EC-972](#), [EC-1143](#)  
 PHASE - Wiring diagram ..... [EC-291](#)  
 PHSB1 - Wiring diagram ..... [EC-944](#)  
 PHSB2 - Wiring diagram ..... [EC-946](#)  
 Piston ring inspection ..... [EM-197](#)  
 Piston to bore clearance ..... [EM-88](#)  
 PNP/SW - Wiring diagram ..... [EC-546](#), [EC-1210](#)  
 POS - Wiring diagram ..... [EC-285](#), [EC-938](#)  
 POWER - Wiring diagram ..... [EC-1044](#), [PG-5](#)  
 Power seat ..... [SE-10](#)  
 Power steering fluid level ..... [MA-33](#)  
 Power steering oil pressure switch ..... [EC-590](#)  
 Power steering pressure (PSP) sensor ..... [EC-1031](#)  
 Power supply routing ..... [PG-3](#)  
 Power window ..... [GW-15](#)  
 PRE/SE - Wiring diagram ... [EC-329](#), [EC-335](#), [EC-985](#), [EC-991](#)  
 Precautions for Leak detection dye ..... [MTC-4](#)  
 Precautions (General) ..... [GI-3](#)  
 Precautions in repairing high strength steel .... [BL-164](#)  
 Pressure test (A/T) ..... [AT-65](#)  
 PS/SEN - Wiring diagram ..... [EC-1032](#)  
 PST/SW - Wiring diagram ..... [EC-591](#)

## R

R134a - See HFC134a ..... [MTC-3](#)  
 Radiator ..... [CO-34](#)  
 Rear bumper ..... [EI-15](#)  
 Rear combination lamp removal and installation ... [LT-122](#)  
 Rear disc brakeRear disc brake ..... [BR-26](#)  
 Rear door ..... [BL-75](#), [GW-37](#)  
 Rear seat ..... [SE-18](#)  
 Rear seat belt ..... [SB-4](#)  
 Rear suspensionRear suspension ..... [RSU-5](#)  
 Rear window ..... [GW-13](#)  
 Rear window defogger ..... [GW-41](#)  
 Refrigerant connection precaution ..... [ATC-6](#), [MTC-5](#)  
 Refrigerant discharging evacuating charging [ATC-119](#),

## [MTC-79](#)

Refrigerant general precaution ..... [ATC-5](#), [MTC-4](#)  
 Refrigerant lines ..... [ATC-119](#), [MTC-79](#)  
 Refrigerant pressure sensor . [EC-595](#), [EC-1266](#), [ATC-126](#), [MTC-57](#), [MTC-88](#)  
 Refrigeration cycle ..... [MTC-16](#)  
 Remote keyless entry system ..... [BL-43](#)  
 Reverse idler shaft (M/T) ..... [MT-20](#)  
 Reverse main gear (M/T) ..... [MT-20](#)  
 Revolution sensor (A/T) ..... [AT-115](#)  
 Road wheel size ..... [GI-43](#)  
 Rocker cover ..... [EM-34](#), [EM-134](#)  
 Room lamp ..... [LT-123](#), [LT-129](#)  
 Room lamp - See Interior lamp ..... [LT-123](#)  
 ROOM/L - Wiring diagram ..... [LT-125](#)  
 RP/SEN - Wiring diagram ..... [EC-596](#), [EC-1267](#)

## S

S/SIG - Wiring diagram ..... [EC-580](#), [EC-1251](#)  
 SAE J1930 terminology list ..... [GI-47](#)  
 SAE J1979 - Mode 1 - 7 ..... [EC-54](#), [EC-672](#)  
 SEAT - Wiring diagram ..... [SE-10](#)  
 Seat belt inspection ..... [SB-5](#), [MA-36](#)  
 Seat belt pre-tensioner disposal ..... [SRS-54](#)  
 Seat belt, front ..... [SB-3](#)  
 Seat belt, rear ..... [SB-4](#)  
 Seat, front ..... [SE-14](#)  
 Seat, rear ..... [SE-18](#)  
 SEN/PW - Wiring diagram ..... [EC-471](#), [EC-1138](#)  
 SHIFT - Wiring diagram ..... [AT-247](#)  
 Shift control components (M/T) ..... [MT-22](#)  
 Shift control components (M/T)Shift control components (M/T) ..... [MT-13](#)  
 Shift fork (M/T) ..... [MT-22](#)  
 Shift lock system ..... [AT-246](#)  
 Shift schedule ..... [AT-363](#)  
 Shift solenoid valve A (A/T) ..... [AT-165](#)  
 Shift solenoid valve B (A/T) ..... [AT-170](#)  
 Shock absorber (front) ..... [FSU-9](#)  
 Shock absorber (rear)Shock absorber (rear) ... [RSU-8](#)  
 Side air bag (satellite) sensor ..... [SRS-51](#)  
 Side curtain air bag ..... [SRS-48](#)  
 Side trim ..... [EI-29](#)  
 SMJ (super multiple junction) ..... [PG-68](#)  
 Spare tire size ..... [GI-43](#)  
 Spark plug ..... [EM-129](#)  
 Spark plug replacementQR25DE ..... [MA-19](#), [MA-26](#)  
 Specification value ..... [EC-125](#), [EC-750](#)  
 Speedometer ..... [DI-4](#)  
 Spiral cable ..... [SRS-41](#)  
 Spot lamp ..... [LT-129](#)  
 SROOF - Wiring diagram ..... [RF-11](#)  
 SRS - See Supplemental Restraint System ..... [SRS-5](#)  
 SRS - Wiring diagram ..... [SRS-12](#)  
 SRS Trouble diagnoses ..... [SRS-8](#)  
 Stabilizer bar (front) ..... [FSU-11](#)  
 Stall test (A/T) ..... [AT-61](#)  
 Standardized relay ..... [PG-69](#)

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
I DX

# ALPHABETICAL INDEX

START - Wiring diagram .....	<a href="#">SC-14</a>	TRANSMT - Wiring diagram .....	<a href="#">BL-135</a>
Start signal .....	<a href="#">EC-579</a> , <a href="#">EC-1250</a>	Tread-FR&RR (Dimensions) .....	<a href="#">GI-43</a>
Starter .....	<a href="#">SC-20</a>	Trim .....	<a href="#">EI-29</a>
Starting system .....	<a href="#">SC-9</a>	Trouble diagnoses .....	<a href="#">GI-9</a>
Steering gear and linkage inspection .....	<a href="#">MA-33</a>	Trunk lid trim .....	<a href="#">EI-35</a>
Steering knuckle .....	<a href="#">FAX-6</a>	Trunk room lamp .....	<a href="#">LT-143</a>
STEP/L - Wiring diagram .....	<a href="#">LT-104</a>	Trunk room trim .....	<a href="#">EI-35</a>
Stop lamp switch .....	<a href="#">EC-548</a> , <a href="#">EC-1219</a>	TURN - Wiring diagram .....	<a href="#">LT-87</a>
STOP/L - Wiring diagram .....	<a href="#">LT-100</a>	Turn signal lamp .....	<a href="#">LT-80</a>
Strut (front) .....	<a href="#">FSU-9</a>	Two trip detection logic .....	<a href="#">EC-54</a> , <a href="#">EC-672</a>
Sun roof, electric .....	<a href="#">RF-10</a>	Two-pole lift .....	<a href="#">GI-37</a>
Sunload sensor .....	<a href="#">ATC-105</a>		
Sunroof .....	<a href="#">RF-15</a>		
Supplemental Restraint System .....	<a href="#">SRS-5</a>		
Supplemental restraint system - Wiring diagram .....	<a href="#">SRS-12</a>		
Symbols and abbreviations .....	<a href="#">GI-8</a> , <a href="#">GI-9</a> , <a href="#">GI-20</a>		
Symptom matrix chart .....	<a href="#">EC-89</a> , <a href="#">EC-709</a>		
Synchronizer (M/T) .....	<a href="#">MT-20</a>		
System readiness test (SRT) code .....	<a href="#">EC-59</a> , <a href="#">EC-678</a>		

## T

Tachometer .....	<a href="#">DI-4</a>
Tail lamp .....	<a href="#">LT-109</a>
TAIL/L - Wiring diagram .....	<a href="#">LT-116</a>
TCM circuit diagram .....	<a href="#">AT-16</a>
TCM inspection table .....	<a href="#">AT-93</a>
TCS - Wiring diagram .....	<a href="#">BRC-54</a>
TCS component parts and connector location .....	<a href="#">BRC-53</a>
TCS control unit .....	<a href="#">BRC-47</a>
TCS self-diagnosis .....	<a href="#">BRC-64</a>
TCS wheel sensors .....	<a href="#">BRC-53</a>
Thermo control amp .....	<a href="#">ATC-107</a>
Thermostat .....	<a href="#">CO-20</a>
Three way catalyst .....	<a href="#">EM-118</a>
Three way catalyst function .....	<a href="#">EC-296</a>
Three way catalyst function (Bank 1) .....	<a href="#">EC-951</a>
Three way catalyst function (Bank 2) .....	<a href="#">EC-951</a>
Three way catalyst precautions .....	<a href="#">GI-3</a> , <a href="#">GI-5</a>
Throttle control motor relay .....	<a href="#">EC-405</a> , <a href="#">EC-1062</a>
Throttle position sensor (TPS) ..	<a href="#">EC-249</a> , <a href="#">EC-256</a> , <a href="#">EC-454</a> , <a href="#">EC-460</a> , <a href="#">EC-462</a> , <a href="#">EC-899</a> , <a href="#">EC-906</a> , <a href="#">EC-1120</a> , <a href="#">EC-1127</a> , <a href="#">EC-1129</a>
Throttle position switch .....	<a href="#">AT-241</a>
Tightening torque of standard bolts .....	<a href="#">GI-41</a>
Timing chain .....	<a href="#">EM-47</a> , <a href="#">EM-148</a>
Tire rotation .....	<a href="#">MA-31</a>
Tire size .....	<a href="#">GI-43</a>
Torque converter installation .....	<a href="#">AT-260</a> , <a href="#">AT-356</a>
Torque convertor clutch solenoid valve .....	<a href="#">AT-146</a>
Tow truck towing .....	<a href="#">GI-40</a>
Towing point .....	<a href="#">GI-40</a>
TPS1 - Wiring diagram .....	<a href="#">EC-258</a> , <a href="#">EC-908</a>
TPS2 - Wiring diagram .....	<a href="#">EC-456</a> , <a href="#">EC-1122</a>
TPS3 - Wiring diagram .....	<a href="#">EC-251</a> , <a href="#">EC-901</a>
Traction control system - Wiring diagram .....	<a href="#">BRC-54</a>
Transaxle serial number .....	<a href="#">GI-43</a>
Transmission case (M/T) .....	<a href="#">MT-19</a>

## V

Vacuum cut valve .....	<a href="#">EC-616</a> , <a href="#">EC-1187</a> , <a href="#">EC-1289</a>
Vacuum cut valve bypass valve .....	<a href="#">EC-509</a> , <a href="#">EC-516</a> , <a href="#">EC-616</a> , <a href="#">EC-1174</a> , <a href="#">EC-1180</a> , <a href="#">EC-1289</a>
Vacuum hose (brake system) Vacuum hose (brake system) .....	<a href="#">BR-19</a>
Vacuum hose drawing (Engine control) .....	<a href="#">EC-29</a> , <a href="#">EC-646</a>
Valve clearance .....	<a href="#">EM-43</a> , <a href="#">EM-143</a>
Valve guide .....	<a href="#">EM-61</a> , <a href="#">EM-180</a> , <a href="#">EM-181</a>
Valve seat .....	<a href="#">EM-62</a> , <a href="#">EM-182</a>
Valve spring .....	<a href="#">EM-64</a> , <a href="#">EM-183</a>
Vanity mirror lamp .....	<a href="#">LT-143</a>
Variable induction air control system (VIAS) ..	<a href="#">EC-564</a> , <a href="#">EC-1213</a> , <a href="#">EC-1236</a>
Vehicle identification number .....	<a href="#">GI-43</a>
Vehicle recovery (freeing a stuck vehicle) .....	<a href="#">GI-40</a>
Vehicle speed sensor (VSS) .....	<a href="#">EC-369</a> , <a href="#">EC-1025</a>
VENT/V - Wiring diagram ...	<a href="#">EC-322</a> , <a href="#">EC-486</a> , <a href="#">EC-493</a> , <a href="#">EC-978</a> , <a href="#">EC-1151</a> , <a href="#">EC-1158</a>
VIAS - Wiring diagram .....	<a href="#">EC-566</a> , <a href="#">EC-1238</a>
VIAS/V - Wiring diagram .....	<a href="#">EC-1215</a>
Viscosity number (SAE) .....	<a href="#">MA-13</a>

## W

W/ANT - Wiring diagram .....	<a href="#">AV-27</a>
WARN - Wiring diagram .....	<a href="#">DI-30</a>
Warning chime .....	<a href="#">DI-43</a>
Warning lamps .....	<a href="#">DI-22</a>
Water pump .....	<a href="#">CO-41</a>
Water temperature gauge .....	<a href="#">DI-4</a>
Wheel alignment (rear) Wheel alignment (rear) ..	<a href="#">RSU-6</a>
Wheel balance .....	<a href="#">MA-30</a>
Wheel bearing (front axle) .....	<a href="#">FAX-5</a>
Wheel bearing (rear) .....	<a href="#">RAX-5</a>
Wheel hub (front) .....	<a href="#">FAX-5</a> , <a href="#">FAX-6</a>
Wheel hub (rear) .....	<a href="#">RAX-5</a>
Wheel size .....	<a href="#">GI-43</a>
Wheelarch height Wheelarch height .....	<a href="#">RSU-11</a>
Wheelbase (Dimensions) .....	<a href="#">GI-43</a>
Width (Dimensions) .....	<a href="#">GI-43</a>
WINDOW - Wiring diagram .....	<a href="#">GW-18</a>
Window, door .....	<a href="#">GW-34</a> , <a href="#">GW-37</a>
Window, rear .....	<a href="#">GW-13</a>
Windshield .....	<a href="#">GW-11</a>
Wiper and washer .....	<a href="#">WW-3</a>



# ALPHABETICAL INDEX

---

Wiring Diagram (Cell code) list ..... [PG-57](#)  
Wiring diagrams ..... [GI-8](#), [GI-12](#)

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

IDX