

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

A

A/C - Wiring diagram	ATC-35 , MTC-35
A/C air flow	MTC-22
A/C component layout	MTC-17
A/C compressor clutch removal and installation ..	ATC-122 , MTC-85
A/C compressor description	MTC-16
A/C compressor mounting	ATC-121 , MTC-83 , MTC-84
A/C compressor precaution	ATC-9 , MTC-9
A/C compressor special service tool .	ATC-12 , MTC-12
A/C diagnostic work flow (auto A/C)	ATC-31
A/C diagnostic work flow (manual A/C)	MTC-28
A/C evaporator	ATC-126 , MTC-90
A/C HFC134a (R134a) system identification	ATC-5 , MTC-4
A/C HFC134a (R134a) system introduction ...	MTC-16
A/C HFC134a (R134a) system precaution	ATC-4 , MTC-3
A/C HFC134a (R134a) system service procedure	ATC-118 , MTC-79
A/C HFC134a (R134a) system service tools ..	ATC-12 , MTC-12
A/C HFC134a system service equipment precaution ...	ATC-9 , MTC-9
A/C lubricant (R134a)	ATC-18 , MTC-18
A/C lubrication oil	ATC-18 , MTC-18
A/C operational check	ATC-49 , MTC-38
A/C performance chart	ATC-82 , MTC-59
A/C performance test diagnoses	ATC-78 , MTC-58
A/C self-diagnoses (auto A/C)	ATC-41
A/C service data specification	ATC-132
A/C switch	MTC-21
A/C symptom chart (auto A/C)	ATC-31
A/C symptom chart (manual A/C)	MTC-28
A/C trouble diagnoses (auto A/C)	ATC-31
A/C trouble diagnoses (manual A/C)	MTC-28
A/C, A - Wiring diagram	ATC-35
A/C, M - Wiring diagram	MTC-35
A/T - Wiring diagram	AT-16
A/T fluid temperature sensor	AT-109
A/T IND - Wiring diagram	DI-40
A/T indicator	DI-40
A/T self-diagnoses	AT-41 , AT-50 , AT-51
A/T shift lock system	AT-256
A/T shift lock system - Wiring diagram	AT-257
A/T Wiring diagram AT - 1ST	AT-126
A/T Wiring diagram AT - 2ND	AT-131
A/T Wiring diagram AT - 3RD	AT-136
A/T Wiring diagram AT - 4TH	AT-141
A/T Wiring diagram AT - BA/FTS	AT-191
A/T Wiring diagram AT - CAN	AT-187
A/T Wiring diagram AT - ENG SS	AT-121
A/T Wiring diagram AT - FTS	AT-111
A/T Wiring diagram AT - LPSV	AT-161
A/T Wiring diagram AT - MAIN	AT-100
A/T Wiring diagram AT - NONDTC	AT-209
A/T Wiring diagram AT - OVRCSV	AT-183
A/T Wiring diagram AT - PNP/SW	AT-105
A/T Wiring diagram AT - SSV/A	AT-167
A/T Wiring diagram AT - SSV/B	AT-172
A/T Wiring diagram AT - TCCSIG	AT-153
A/T Wiring diagram AT - TCV	AT-148
A/T Wiring diagram AT - TPS	AT-178
A/T Wiring diagram AT - VSS A/T	AT-117
A/T Wiring diagram AT - VSSMTR	AT-198 , AT-202
ABS - Wiring diagram	BRC-13
ABS (anti-lock brake system)	BRC-5
Absolute pressure sensor	EC-810
Accelerator control system	ACC-2
Accelerator pedal position (APP) sensor	EC-534 , EC-540 , EC-553 , EC-1209 , EC-1215 , EC-1228
Accelerator pedal released position learning ..	EC-672
Active damper suspension system - Wiring diagram	FSU-4
Aiming adjustment	LT-24
Air bag	SRS-3
Air bag disposal	SRS-54
Air bag precautions	GI-3
Air bleeding (hydraulic clutch)Air bleeding (hydraulic clutch)	CL-7
Air bleeding for brake systemAir bleeding for brake system	BR-8
Air cleaner and air duct	EM-16 , EM-119
Air cleaner filter replacement	MA-18 , MA-25
Air conditioner - Wiring diagram	ATC-35 , MTC-35
Air conditioner cut control	EC-33 , EC-656
Air conditioning - See A/C	MTC-16
Air flow meter - See Mass air flow sensor	EC-155 , EC-162 , EC-377 , EC-796 , EC-804 , EC-1040
Air mix door control linkage adjustment	ATC-63
Alternator	SC-33
Ambient sensor	ATC-102
Angular tightening application	EM-5 , EM-110
Antenna	AV-26
Anti-lock brake system - See ABS	BRC-5
Anti-lock brake system - Wiring diagram	BRC-13
APPS1 - Wiring diagram	EC-536 , EC-1211
APPS2 - Wiring diagram	EC-542 , EC-1217
APPS3 - Wiring diagram	EC-555 , EC-1230
ASC/BS - Wiring diagram	EC-515 , EC-1181
ASC/SW - Wiring diagram	EC-508 , EC-1174
ASCSOF - Wiring diagram	EC-607 , EC-1284
ASCD	EC-632
ASCD (automatic speed control device)	EC-1311 , ACS-2
ASCIND - Wiring diagram	EC-615 , EC-1294
Audio	AV-4
AUDIO - Wiring diagram	AV-4 , AV-8
Auto air conditioner - Wiring diagram	ATC-35
Auto anti-dazzling inside mirror	GW-39 , GW-40
Automatic amplifier	ATC-39 , ATC-52
Automatic transaxle number	GI-44
Automatic transmission fluid replacement	MA-30

B

Back door trim	EI-27
----------------------	-----------------------

ALPHABETICAL INDEX

BACK/L - Wiring diagram	LT-108	Cigarette lighter	WW-31	
Back-up lamp switch (M/T)Back-up lamp switch	MT-12	Circuit breaker	PG-63	A
Basic inspection	EC-83 , EC-708	Clearance lamp	LT-110	
Battery	SC-4	Closed loop control	EC-31 , EC-433 , EC-654	B
Battery/Starting/Charging System Tester	SC-6 , SC-16 , SC-27	Closed loop control (Bank 1)	EC-1100	
Baulk ring (M/T)	MT-20	Closed loop control (Bank 2)	EC-1100	C
BCM (Body control module)	BCS-3	Clutch coverClutch cover	CL-15	
Block heater	EM-76 , EM-206	Clutch discClutch disc	CL-15	D
Blower motor	ATC-67 , ATC-108 , MTC-49 , MTC-70	Clutch fluid level	MA-29	
Blower resistor	MTC-76	Clutch master cylinderClutch master cylinder	CL-8	E
Blower unit	ATC-107 , MTC-69	Clutch operating cylinderClutch operating cylinder	CL-10	
Board-on lift	GI-38	Clutch pedalClutch pedal	CL-5	F
Body alignment	BL-150	Clutch release mechanismClutch release mechanism	CL-13	
Body component parts	BL-139	Coil spring (front)	FSU-9	G
Body construction	BL-149	Coil spring (rear)Coil spring	RSU-9	
Body exterior paint color	BL-138	Collision diagnosis	SRS-61	H
Body repair	BL-138	Combination lamp, front, removal and installation ..	LT-26	
Body sealing	BL-146	Combination lamp, rear, removal and installation ..	LT-123	I
Bose speaker amp.	AV-23	Combination meter	DI-4	
Brake boosterBrake booster	BR-15	Component Location (auto A/C)	ATC-32	J
Brake control valve (Proportioning valve)Brake control valve (Proportioning valve)	BR-29	Component Location (manual A/C)	MTC-29	
Brake fluid changeBrake fluid change	BR-8	Compressor clutch removal and installation .	ATC-122 , MTC-85	K
Brake fluid level	MA-33	Compressor mounting	ATC-121 , MTC-83 , MTC-84	
Brake fluid level and line checkBrake fluid level and line check	BR-8	Compressor precaution	ATC-9 , MTC-9	L
Brake hydraulic lineBake hydraulic line	BR-9	Compressor special service tool	ATC-12 , MTC-12	
Brake inspection	MA-34	Condenser	ATC-125 , MTC-88	
Brake lines and cables inspection	MA-33	Connector inspection	GI-22	
Brake master cylinderBrake master cylinder	BR-12	Console box - See Instrument panel	IP-10	
Brake pedalBrake pedal	BR-6	CONSULT for engine	EC-106 , EC-736	
Brake switch	EC-529 , EC-1204	CONSULT for TCS	BRC-60	
BRK/SW - Wiring diagram	EC-530 , EC-1205	CONSULT general information	GI-35	
Bulb specifications	LT-147	Contaminated refrigerant	MTC-3	
Bumper, front	EI-13	Control unit	ATC-101 , MTC-67	
Bumper, rear	EI-15	Control units (terminal arrangement)	PG-68	
BYPS/V - Wiring diagram .	EC-492 , EC-500 , EC-1160 , EC-1167	Controller Area Network (CAN) LAN-3 , LAN-7 , LAN-28 , LAN-45	LAN-45	
C				
Camshaft	EM-37 , EM-144	Converter housing installation	AT-366	
Camshaft inspection	EM-39 , EM-149	COOL/F - Wiring diagram ..	EC-251 , EC-438 , EC-1107	
Camshaft position sensor (PHASE) ..	EC-280 , EC-938	Coolant mixture ratio	MA-13	
CAN - Wiring diagram .	EC-139 , EC-769 , LAN-8 , LAN-29 , LAN-46	Coolant overtemperarute enrichment protection ..	EC-247	
CAN (Controller Area Network) LAN-3 , LAN-7 , LAN-28 , LAN-45		Coolant replacement	MA-15	
CAN communication EC-34 , EC-138 , EC-657 , EC-768 , AT-186 , BRC-73 , LAN-3 , LAN-7 , LAN-28 , LAN-45		Coolant replacementVQ35DE	MA-23	
Canister-See EVAP canister	EC-621 , EC-1300	Cooling circuit (engine)	CO-28	
CHARGE - Wiring diagram	SC-26	Cooling fan motor	EC-258 , EC-445 , EC-1114	
Charging system	SC-25	Cooling unit (A/C evaporator)	ATC-111 , ATC-126 , MTC-73 , MTC-90	
Chassis and body maintenance	MA-29	Corrosion protection	BL-143	
Chassis and body maintenanceSchedule 1	MA-9	Coupling sleeve (M/T)	MT-20	
Chassis and body maintenanceSchedule 2	MA-11	Crankcase ventilation system - See Positive crankcase ventilation	EC-630 , EC-1309	
CHIME - Wiring diagram	DI-48	Crankshaft	EM-77	
CIGAR - Wiring diagram	WW-31	Crankshaft position sensor (POS)	EC-274 , EC-932	
		Crash zone sensor	SRS-50	

ALPHABETICAL INDEX

Cylinder block [EM-76](#), [EM-206](#)
Cylinder block boring [EM-95](#)
Cylinder head [EM-59](#), [EM-183](#)
Cylinder head bolt tightening [EM-189](#)

D

Data link connector [EC-617](#), [EC-1296](#)
Data link connector for Consult [EC-108](#), [EC-738](#)
Daytime light system [LT-29](#)
Daytime running light - See Daytime light system .. [LT-29](#)
Diagnosis sensor unit [SRS-53](#)
Diagnostic trouble code (DTC) for OBD system [EC-15](#), [EC-56](#), [EC-636](#), [EC-681](#)
Diagnostic trouble code (DTC) inspection priority chart [EC-80](#), [EC-705](#)
Differential gear (FF M/T) [MT-23](#)
Dimensions [GI-44](#)
DLC - Wiring diagram [EC-617](#), [EC-1296](#)
Door glass [GW-34](#), [GW-37](#)
Door glass Fitting Adjustment(Front) [GW-35](#)
Door glass Fitting Adjustment(Rear) [GW-38](#)
Door mirror [GW-61](#)
Door trim [EI-27](#)
Door, front [BL-75](#), [GW-34](#)
Door, rear [BL-75](#), [GW-37](#)
Drive belt [EM-13](#)
Drive belt inspectionQR25DE [MA-15](#)
Drive belt inspectionVQ35DE [MA-22](#)
Drive shaft (front) [FAX-11](#)
Driver air bag [SRS-39](#)
Dropping resistor (A/T) [AT-159](#)
DTC work support [EC-117](#), [EC-747](#)
DTRL - Wiring diagram [LT-39](#)
Duct and grilles [ATC-116](#), [MTC-77](#)

E

ECM input/output signal [EC-99](#), [EC-727](#)
ECM power supply [EC-131](#), [EC-373](#), [EC-763](#), [EC-1036](#)
ECM/PW - Wiring diagram [EC-374](#)
ECTS - Wiring diagram [EC-175](#), [EC-819](#), [EC-830](#)
Electric sunroof [RF-10](#)
Electric throttle control actuator [EC-387](#), [EC-389](#), [EC-401](#), [EC-1046](#), [EC-1048](#), [EC-1060](#)
Electrical diagnoses [GI-22](#)
Electrical load signal circuit [EC-605](#), [EC-1282](#)
Electronic ignition (EI) system [EC-32](#), [EC-655](#)
EMNT - Wiring diagram [EC-1273](#)
Engine control circuit diagram [EC-97](#), [EC-725](#)
Engine control component parts location ... [EC-92](#), [EC-717](#)
Engine control module (ECM) [EC-366](#), [EC-1029](#)
Engine control system diagram and chart . [EC-27](#), [EC-650](#)
Engine coolant [CO-29](#)
Engine coolant temperature sensor (ECTS) ... [EC-173](#), [EC-184](#), [EC-817](#), [EC-828](#)

Engine fail-safe system [EC-82](#), [EC-707](#)
Engine mounting control (Front) [EC-1272](#)
Engine oil [LU-17](#)
Engine oil filter replacementQR25DE .. [MA-19](#), [MA-26](#)
Engine oil precautions [GI-3](#), [GI-6](#)
Engine oil replacementQR25DE [MA-18](#), [MA-25](#)
Engine removal [EM-72](#), [EM-202](#)
Engine serial number [GI-44](#)
ETC1 - Wiring diagram [EC-390](#), [EC-1049](#)
ETC2 - Wiring diagram [EC-398](#), [EC-1057](#)
ETC3 - Wiring diagram [EC-402](#), [EC-1061](#)
EVAP canister [EC-1300](#)
EVAP canister purge volume control solenoid valve [EC-305](#), [EC-456](#), [EC-621](#), [EC-964](#), [EC-1125](#), [EC-1300](#)
EVAP canister vent control valve [EC-311](#), [EC-464](#), [EC-470](#), [EC-970](#), [EC-1133](#), [EC-1139](#)
EVAP control system (small leak) diagnosis .. [EC-297](#), [EC-331](#), [EC-339](#), [EC-454](#), [EC-478](#), [EC-956](#), [EC-990](#), [EC-998](#), [EC-1123](#), [EC-1147](#)
EVAP control system pressure sensor ... [EC-318](#), [EC-324](#), [EC-977](#), [EC-983](#)
EVAP control system purge flow monitoring diagnosis . [EC-291](#), [EC-950](#)
EVAP vapor lines inspection [MA-21](#), [MA-28](#)
Evaporative emission (EVAP) system [EC-618](#), [EC-621](#), [EC-1297](#)
Evaporator [ATC-126](#), [MTC-90](#)
Exhaust manifold [EM-126](#)
Exhaust system [EX-3](#), [EX-6](#)
Exhaust system inspection [EX-3](#), [EX-6](#), [MA-29](#)
Expansion valve [ATC-127](#), [MTC-91](#)

F

F/PUMP - Wiring diagram [EC-590](#), [EC-1266](#)
Fan control amp. [ATC-115](#)
Fan switch [MTC-21](#)
Final drive (FF M/T) [MT-23](#)
Flow charts [GI-25](#)
FLS1 - Wiring diagram [EC-349](#), [EC-1007](#)
FLS2 - Wiring diagram [EC-356](#), [EC-1014](#)
FLS3 - Wiring diagram [EC-488](#), [EC-1156](#)
Fluid temperature sensor (A/T) [AT-109](#)
Fluids [MA-12](#)
Fluorescent leak detector [ATC-128](#), [MTC-91](#)
Flywheel (clutch)Flywheel (clutch) [CL-15](#)
Fork rod (M/T) [MT-22](#)
Freeze frame data [EC-57](#), [EC-682](#)
Front bumper [EI-13](#)
Front combination lamp removal and installation [LT-26](#)
Front disc brakeFront disc brake [BR-18](#)
Front door [BL-75](#), [GW-34](#)
Front Door Trim [EI-27](#)
Front passenger air bag [SRS-43](#)
Front seat [SE-14](#)
Front seat belt [SB-4](#)
Front seat belt pre-tensioner [SB-2](#), [SRS-3](#), [SRS-52](#)
Front side air bag [SRS-47](#)
FTTS - Wiring diagram [EC-244](#), [EC-909](#), [EC-913](#)

ALPHABETICAL INDEX

FUEL - Wiring diagram [EC-230](#), [EC-237](#)
 Fuel cut control (at no load high engine speed) [EC-33](#),
[EC-656](#)
 Fuel gauge [DI-4](#)
 Fuel injection system [EC-228](#), [EC-235](#)
 Fuel injection system (Bank 1) [EC-892](#), [EC-900](#)
 Fuel injection system (Bank 2) [EC-892](#), [EC-900](#)
 Fuel injector and fuel tube [EM-32](#), [EM-139](#)
 Fuel level sensor .. [EC-348](#), [EC-353](#), [EC-355](#), [EC-487](#),
[EC-1006](#), [EC-1011](#), [EC-1013](#), [EC-1155](#)
 Fuel line inspection [FL-3](#), [MA-17](#), [MA-25](#)
 Fuel precautions [GI-3](#)
 Fuel pressure check [EC-50](#), [EC-675](#)
 Fuel pressure release [EC-50](#), [EC-675](#)
 Fuel pump [EC-589](#), [EC-1265](#)
 Fuel system [FL-3](#)
 Fuel systemCommercial Service Tools [FL-2](#)
 Fuel systemPREPARATION [FL-2](#)
 Fuel systemSpecial Service Tools [FL-2](#)
 Fuel tank temperature sensor ... [EC-241](#), [EC-243](#), [EC-907](#), [EC-912](#)
 Fuel tank vacuum relief valve [EC-1300](#)
 FUELB1 - Wiring diagram [EC-894](#), [EC-902](#)
 FUELB2 - Wiring diagram [EC-895](#), [EC-903](#)
 Fuse [PG-63](#), [PG-72](#)
 Fuse block [PG-71](#)
 Fusible link [PG-63](#), [PG-72](#)

G

Garage jack and safety stand [GI-38](#)
 Gear components (M/T) [MT-20](#)
 Generator [SC-33](#)
 Generator - See Alternator [SC-33](#)
 Generic scan tool (GST) [EC-118](#), [EC-749](#)
 Glass [GW-11](#), [GW-13](#), [GW-34](#), [GW-37](#)
 Glove box lamp [LT-143](#)
 Grease [MA-12](#)
 Ground distribution [PG-26](#)

H

H/LAMP - Wiring diagram [LT-13](#)
 Handling precautions for plastics [BL-161](#)
 Harness connector [PG-64](#)
 Harness connector inspection [GI-22](#)
 Harness layout [PG-37](#)
 Hazard warning lamp [LT-81](#)
 Headlamp [LT-6](#)
 Headlamp removal and installation [LT-26](#)
 Heated oxygen sensor 1 [EC-192](#), [EC-198](#), [EC-207](#),
[EC-406](#), [EC-412](#)
 Heated oxygen sensor 1 (bank 1) [EC-839](#), [EC-848](#),
[EC-860](#), [EC-1065](#), [EC-1071](#)
 Heated oxygen sensor 1 (bank 2) [EC-839](#), [EC-848](#),
[EC-860](#), [EC-1065](#), [EC-1071](#)
 Heated oxygen sensor 1 heater [EC-144](#)
 Heated oxygen sensor 1 heater (bank 1) [EC-779](#)
 Heated oxygen sensor 1 heater (bank 2) [EC-779](#)

Heated oxygen sensor 2 [EC-214](#), [EC-220](#), [EC-418](#),
[EC-425](#)
 Heated oxygen sensor 2 (bank 1) [EC-870](#), [EC-881](#),
[EC-1078](#), [EC-1089](#)
 Heated oxygen sensor 2 (bank 2) [EC-870](#), [EC-881](#),
[EC-1078](#), [EC-1089](#)
 Heated oxygen sensor 2 heater [EC-150](#)
 Heated oxygen sensor 2 heater (bank 1) [EC-787](#)
 Heated oxygen sensor 2 heater (bank 2) [EC-787](#)
 Heated seat [SE-12](#)
 HEATER - Wiring diagram [MTC-33](#)
 Heater and cooling unit (Heater core) [ATC-111](#), [ATC-112](#), [MTC-73](#), [MTC-74](#)
 Heater system - Wiring diagram [MTC-33](#)
 Heater unit (heater core) [ATC-111](#), [ATC-112](#), [MTC-73](#),
[MTC-74](#)
 Height (Dimensions) [GI-44](#)
 HFC134a (R134a) system identification [ATC-5](#), [MTC-4](#)
 HFC134a (R134a) system introduction [MTC-16](#)
 HFC134a (R134a) system precaution .. [ATC-4](#), [MTC-3](#)
 HFC134a (R134a) system service procedure [ATC-118](#),
[MTC-79](#)
 HFC134a (R134a) system service tools [ATC-12](#), [MTC-12](#)
 HFC134a system service equipment precaution . [ATC-9](#), [MTC-9](#)
 HO2S1 - Wiring diagram [EC-194](#), [EC-201](#), [EC-210](#)
 HO2S1H - Wiring diagram [EC-146](#)
 HO2S2 - Wiring diagram ... [EC-216](#), [EC-223](#), [EC-420](#),
[EC-428](#)
 HO2S2H - Wiring diagram [EC-152](#)
 Horn [WW-35](#)
 HORN - Wiring diagram [WW-35](#)
 How to erase DTC for OBD system [EC-66](#), [EC-691](#)
 HSEAT - Wiring diagram [SE-13](#)

I

IATS - Wiring diagram [EC-170](#), [EC-814](#), [EC-834](#)
 Identification [MTC-4](#)
 Identification plate [GI-44](#)
 Idle air volume learning [EC-48](#), [EC-673](#)
 Idle mixture ratio [EC-38](#), [EC-662](#)
 Idle speed [EC-38](#), [EC-83](#), [EC-662](#), [EC-708](#)
 Idle speed control (ISC) [EC-362](#), [EC-364](#), [EC-1020](#),
[EC-1022](#)
 Ignition coil [EM-29](#), [EM-136](#), [EC-559](#), [EC-1235](#)
 Ignition control system [EC-559](#), [EC-1235](#)
 Ignition key hole illumination [LT-131](#)
 Ignition timing [EC-38](#), [EC-83](#), [EC-662](#), [EC-708](#)
 IGNSYS - Wiring diagram [EC-560](#), [EC-1236](#)
 ILL - Wiring diagram [LT-139](#)
 Illumination [LT-132](#)
 Illumination control [LT-143](#)
 In vehicle sensor [ATC-103](#)
 INJECT - Wiring diagram [EC-580](#), [EC-1256](#)
 Injector [EC-579](#), [EC-1255](#)
 Input shaft (FF M/T) [MT-20](#)
 Instrument panel [IP-10](#)

ALPHABETICAL INDEX

INT/L - Wiring diagram [LT-144](#)
Intake air temperature sensor ... [EC-168](#), [EC-187](#), [EC-812](#), [EC-832](#)
Intake door control linkage adjustment . [ATC-66](#), [MTC-48](#)
Intake door motor [ATC-66](#), [ATC-109](#), [MTC-46](#), [MTC-71](#)
Intake manifold [EM-18](#), [EM-121](#)
Intake sensor [ATC-98](#), [ATC-105](#), [MTC-65](#), [MTC-68](#)
Intake valve timing control [EC-141](#)
Intake valve timing control (Bank 1) [EC-771](#)
Intake valve timing control (Bank 2) [EC-771](#)
Intake valve timing control solenoid valve [EC-383](#)
Interior [EI-29](#)
Interior lamp [LT-124](#)
IPDM (Intelligent power distribution module engine room) [PG-14](#)
IVC - Wiring diagram [EC-384](#)
IVCB1 - Wiring diagram [EC-773](#)
IVCB2 - Wiring diagram [EC-775](#)

J

Jacking points [GI-38](#)
Junction box (J/B) [PG-71](#)

K

Keyless entry system - See Multi-remote control system [BL-43](#)
Knock sensor (KS) [EC-270](#), [EC-928](#)
KS - Wiring diagram [EC-271](#), [EC-929](#)

L

LAN system circuit [ATC-54](#)
Length (Dimensions) [GI-44](#)
License lamp [LT-110](#)
Lifting points [GI-38](#)
Line pressure solenoid valve [AT-159](#)
Line pressure test (A/T) [AT-65](#)
Liquid gasket application [EM-6](#), [EM-111](#)
Location of electrical units [PG-60](#)
Lubricant (R134a) A/C [ATC-18](#), [MTC-18](#)
Lubricants [MA-12](#)
Lubrication circuit (engine) [LU-15](#)
Lubrication oil A/C [ATC-18](#), [MTC-18](#)
Lubrication-locks, hinges and hood latches [MA-37](#)
Luggage compartment trim [EI-35](#)

M

M/T major overhaul [MT-23](#)
M/T oil replacementM/T oil replacement [MT-10](#)
M/T removal and installationM/T removal and installation [MT-16](#)
MAFS - Wiring diagram [EC-158](#), [EC-164](#), [EC-379](#), [EC-799](#), [EC-806](#), [EC-1042](#)
Magnet clutch [ATC-122](#), [MTC-85](#)
MAIN - Wiring diagram [EC-131](#), [EC-763](#)

Mainshaft (M/T) [MT-20](#)
Maintenance [MA-5](#)
Maintenance (engine)QR25DE [MA-15](#)
Maintenance (engine)VQ35DE [MA-22](#)
Malfunction indicator lamp (MIL) . [EC-68](#), [EC-369](#), [EC-693](#), [EC-1032](#)
Manual air conditioner - Wiring diagram [MTC-35](#)
Manual transaxle number [GI-44](#)
Manual transmission oil replacement [MA-29](#)
Mass air flow sensor (MAFS) [EC-155](#), [EC-162](#), [EC-377](#), [EC-796](#), [EC-804](#), [EC-1040](#)
Master cylinder (brake)Master cylinder (brake) [BR-12](#)
Master cylinder (clutch)Master cylinder (clutch) ... [CL-8](#)
METER - Wiring diagram [DI-12](#), [DI-66](#)
MIL - Wiring diagram [EC-370](#), [EC-1033](#)
Mirror, door [GW-61](#)
Mirror, out side [GW-61](#)
Misfire [EC-265](#), [EC-922](#)
Mode door control linkage adjustment . [ATC-60](#), [MTC-44](#)
Mode door motor [ATC-113](#), [MTC-75](#)
Model variation [GI-44](#)
Multiport fuel injection (MFI) system ... [EC-30](#), [EC-653](#)
Multiport fuel injection precautions [GI-3](#), [GI-5](#)
Multi-remote control system [BL-43](#)

N

NATS - Wiring diagram [BL-118](#)
NVH troubleshooting (BR)NVH troubleshooting (BR) ... [BR-5](#)
NVH troubleshooting (CL)NVH troubleshooting (CL) [CL-4](#)
NVH troubleshooting (EM) [EM-11](#), [EM-116](#)
NVH troubleshooting (FA) [FAX-4](#)
NVH troubleshooting (RA) [RAX-4](#)
NVH troubleshooting (RSU)NVH Troubleshooting (RSU) [RSU-4](#)
NVH troubleshooting (ST) [PS-5](#)
NVH troubleshooting (WT)NVH troubleshooting (WT) .. [WT-2](#)

O

O2H1B1 - Wiring diagram [EC-781](#)
O2H1B2 - Wiring diagram [EC-783](#)
O2H2B1 - Wiring diagram [EC-789](#)
O2H2B2 - Wiring diagram [EC-791](#)
O2S1B1 - Wiring diagram ... [EC-841](#), [EC-851](#), [EC-863](#)
O2S1B2 - Wiring diagram ... [EC-843](#), [EC-853](#), [EC-865](#)
O2S2B1 - Wiring diagram [EC-872](#), [EC-883](#), [EC-1080](#), [EC-1091](#)
O2S2B2 - Wiring diagram [EC-874](#), [EC-885](#), [EC-1082](#), [EC-1093](#)
Oil change (capacity)QR25DE [MA-12](#)
Oil change (capacity)VQ35DE [MA-12](#)
Oil filter [LU-19](#)
Oil pan (engine) [EM-25](#), [EM-129](#)
Oil pump (engine) [LU-9](#), [LU-20](#)

ALPHABETICAL INDEX

Oil seal replacement (engine) [EM-56](#), [EM-179](#)
 On board diagnostic system [EC-53](#), [EC-677](#)
 Operating cylinder (clutch)Operating cylinder (clutch) .
[CL-10](#)
 ORVR (On-board Refueling Vapor Recovery) [EC-624](#),
[EC-1303](#)
 Out side mirror [GW-61](#)
 Overdrive control switch [AT-250](#)
 Overheat [EC-1104](#)
 Overrun clutch solenoid valve [AT-181](#)

P

Park/Neutral position switch [EC-525](#), [EC-1193](#)
 Park/neutral position switch (A/T) [AT-103](#)
 Park/neutral position switch (M/T)Park/neutral position
 switch (M/T) [MT-12](#)
 Parking brake controlParking brake control [PB-2](#)
 Parking drum brakeParking drum brake [PB-5](#)
 Parking lamp [LT-110](#)
 PCV (positive crankcase ventilation) [EC-630](#), [EC-1309](#)
 Periodic maintenance [MA-7](#)
 Personal lamp [LT-130](#)
 PGC/V - Wiring diagram [EC-307](#), [EC-458](#), [EC-966](#), [EC-1127](#)
 PHASE - Wiring diagram [EC-281](#)
 PHSB1 - Wiring diagram [EC-939](#)
 PHSB2 - Wiring diagram [EC-941](#)
 Piston ring inspection [EM-216](#)
 Piston to bore clearance [EM-95](#)
 PNP/SW - Wiring diagram [EC-527](#), [EC-1195](#)
 POS - Wiring diagram [EC-275](#), [EC-933](#)
 POWER - Wiring diagram [EC-1037](#), [PG-5](#)
 Power seat [SE-10](#)
 Power steering fluid level [MA-35](#)
 Power steering oil pressure switch [EC-596](#)
 Power steering pressure (PSP) sensor [EC-1024](#)
 Power supply routing [PG-3](#)
 Power window [GW-15](#)
 PRE/SE - Wiring diagram ... [EC-320](#), [EC-326](#), [EC-979](#),
[EC-985](#)
 Precautions for Leak detection dye [MTC-4](#)
 Precautions (General) [GI-3](#)
 Precautions in repairing high strength steel [BL-164](#)
 Pressure test (A/T) [AT-65](#)
 PS/SEN - Wiring diagram [EC-1025](#)
 PST/SW - Wiring diagram [EC-597](#)

R

R134a - See HFC134a [MTC-3](#)
 Radiator [CO-31](#)
 Radio - See Audio [AV-4](#)
 Rear bumper [EI-15](#)
 Rear combination lamp removal and installation ... [LT-123](#)
 Rear disc brakeRear disc brake [BR-24](#)
 Rear door [BL-75](#), [GW-37](#)
 Rear seat [SE-18](#)

Rear seat belt [SB-5](#)
 Rear suspensionRear suspension [RSU-5](#)
 Rear window [GW-13](#)
 Rear window defogger [GW-41](#)
 Refrigerant connection precaution [ATC-6](#), [MTC-5](#)
 Refrigerant discharging evacuating charging [ATC-118](#),
[MTC-79](#)
 Refrigerant general precaution [ATC-5](#), [MTC-4](#)
 Refrigerant lines [ATC-118](#), [MTC-79](#)
 Refrigerant pressure sensor . [EC-600](#), [EC-1277](#), [ATC-125](#), [MTC-57](#), [MTC-88](#)
 Refrigeration cycle [MTC-16](#)
 Remote keyless entry system [BL-43](#)
 Reverse idler shaft (M/T) [MT-20](#)
 Reverse main gear (M/T) [MT-20](#)
 Revolution sensor (A/T) [AT-115](#)
 Road wheel size [GI-44](#)
 Rocker cover [EM-35](#), [EM-142](#)
 Room lamp [LT-124](#), [LT-130](#)
 Room lamp - See Interior lamp [LT-124](#)
 ROOM/L - Wiring diagram [LT-126](#)
 RP/SEN - Wiring diagram [EC-601](#), [EC-1278](#)

S

S/SIG - Wiring diagram [EC-586](#), [EC-1262](#)
 SAE J1930 terminology list [GI-48](#)
 SAE J1979 - Mode 1 - 7 [EC-53](#), [EC-677](#)
 SEAT - Wiring diagram [SE-10](#)
 Seat belt inspection [SB-6](#), [MA-37](#)
 Seat belt pre-tensioner disposal [SRS-54](#)
 Seat belt, front [SB-4](#)
 Seat belt, rear [SB-5](#)
 Seat, front [SE-14](#)
 Seat, rear [SE-18](#)
 SEN/PW - Wiring diagram [EC-451](#), [EC-1120](#)
 SHIFT - Wiring diagram [AT-257](#)
 Shift control components (M/T) [MT-22](#)
 Shift control components (M/T)Shift control components
 (M/T) [MT-13](#)
 Shift fork (M/T) [MT-22](#)
 Shift lock system [AT-256](#)
 Shift schedule [AT-373](#)
 Shift solenoid valve A (A/T) [AT-165](#)
 Shift solenoid valve B (A/T) [AT-170](#)
 Shock absorber (front) [FSU-9](#)
 Shock absorber (rear)Shock absorber (rear) [RSU-9](#)
 Side air bag (satellite) sensor [SRS-51](#)
 Side curtain air bag [SRS-48](#)
 Side trim [EI-29](#)
 Spare tire size [GI-44](#)
 Spark plug [EM-137](#)
 Spark plug replacementQR25DE [MA-19](#), [MA-27](#)
 Specification value [EC-126](#), [EC-758](#)
 Speedometer [DI-4](#)
 Spiral cable [SRS-41](#)
 Spot lamp [LT-130](#)
 SROOF - Wiring diagram [RF-11](#)
 SRS - See Supplemental Restraint System [SRS-5](#)

ALPHABETICAL INDEX

SRS - Wiring diagram	SRS-12	Tow truck towing	GI-41
SRS Trouble diagnoses	SRS-8	Towing point	GI-41
Stabilizer bar (front)	FSU-11	TPS1 - Wiring diagram	EC-261 , EC-918
Stall test (A/T)	AT-61	TPS2 - Wiring diagram	EC-180 , EC-824
Standardized relay	PG-69	TPS3 - Wiring diagram	EC-548 , EC-1223
START - Wiring diagram	SC-14	Traction control system - See TCS	BRC-47
Start signal	EC-585 , EC-1261	Traction control system - Wiring diagram	BRC-56
Starter	SC-20	Transaxle serial number	GI-44
Starting system	SC-9	Transmission case (M/T)	MT-19
Steering gear and linkage inspection	MA-35	TRANSMT - Wiring diagram	BL-135
Steering knuckle	FAX-6	Tread-FR&RR (Dimensions)	GI-44
STEP/L - Wiring diagram	LT-105	Trim	EI-29
Stop lamp switch	EC-529 , EC-1204	Trouble diagnoses	GI-9
STOP/L - Wiring diagram	LT-101	Trunk lid trim	EI-35
Strut (front)	FSU-9	Trunk room lamp	LT-144
Sun roof, electric	RF-10	Trunk room trim	EI-35
Sunload sensor	ATC-104	TURN - Wiring diagram	LT-88
Sunroof	RF-15	Turn signal lamp	LT-81
Supplemental Restraint System	SRS-5	Two trip detection logic	EC-53 , EC-677
Supplemental restraint system - Wiring diagram	SRS-12	Two-pole lift	GI-38
Symbols and abbreviations	GI-8 , GI-9 , GI-20		
Symptom matrix chart	EC-87 , EC-713		
Synchronizer (M/T)	MT-20		
System readiness test (SRT) code	EC-58 , EC-683		

T

Tachometer	DI-4
Tail lamp	LT-110
TAIL/L - Wiring diagram	LT-117
TCM circuit diagram	AT-16
TCM inspection table	AT-93
TCS - Wiring diagram	BRC-56
TCS (traction control system)	BRC-47
TCS actuator	BRC-49 , BRC-92
TCS component parts and connector location	BRC-55
TCS control unit	BRC-49 , BRC-92
TCS self-diagnosis	BRC-66
TCS system components	BRC-48
TCS wheel sensors	BRC-55 , BRC-90
Thermo control amp	ATC-106
Thermostat	CO-18
Three way catalyst	EM-126
Three way catalyst function	EC-286
Three way catalyst function (Bank 1)	EC-946
Three way catalyst function (Bank 2)	EC-946
Three way catalyst precautions	GI-3 , GI-5
Throttle control motor relay	EC-396 , EC-1055
Throttle position sensor (TPS)	EC-178 , EC-259 , EC-446 , EC-448 , EC-546 , EC-822 , EC-916 , EC-1115 , EC-1117 , EC-1221
Throttle position switch	AT-250
Tightening torque of standard bolts	GI-42
Timing chain	EM-48 , EM-157
Tire rotation	MA-33
Tire size	GI-44
Torque converter installation	AT-270 , AT-366
Torque convertor clutch solenoid valve	AT-146

V

Vacuum cut valve	EC-621 , EC-1171 , EC-1300
Vacuum cut valve bypass valve	EC-490 , EC-497 , EC-621 , EC-1158 , EC-1164 , EC-1300
Vacuum hose (brake system)	BR-17
Vacuum hose drawing (Engine control)	EC-28 , EC-651
Valve clearance	EM-44 , EM-153
Valve guide	EM-67 , EM-198
Valve seat	EM-69 , EM-200
Valve spring	EM-70 , EM-201
Vanity mirror lamp	LT-144
Variable induction air control system (VIAS)	EC-570 , EC-1198 , EC-1247
Vehicle identification number	GI-44
Vehicle recovery (freeing a stuck vehicle)	GI-41
Vehicle speed sensor (VSS)	EC-360 , EC-1018
VENT/V - Wiring diagram	EC-313 , EC-466 , EC-473 , EC-972 , EC-1135 , EC-1142
VIAS - Wiring diagram	EC-572 , EC-1249
VIAS/V - Wiring diagram	EC-1200
Viscosity number (SAE)	MA-13

W

W/ANT - Wiring diagram	AV-27
WARN - Wiring diagram	DI-30
Warning chime	DI-42
Warning lamps	DI-22
Water pump	CO-37
Water temperature gauge	DI-4
Wheel alignment (rear)	RSU-6
Wheel balance	MA-31
Wheel bearing (front axle)	FAX-5
Wheel bearing (rear)	RAX-5
Wheel hub (front)	FAX-5 , FAX-6
Wheel hub (rear)	RAX-5

ALPHABETICAL INDEX

Wheel sensors (ABS)	BRC-7 , BRC-42	
Wheel sensors (TCS)	BRC-90	A
Wheel size	GI-44	
Wheelarch heightWheelarch height .	FSU-17 , RSU-12	
Wheelbase (Dimensions)	GI-44	B
Width (Dimensions)	GI-44	
WINDOW - Wiring diagram	GW-18	
Window antenna	AV-26	C
Window, door	GW-34 , GW-37	
Window, rear	GW-13	
Windshield	GW-11	
WIPER - Wiring diagram	WW-11	D
Wiper and washer	WW-4	
Wiring Diagram (Cell code) list	PG-57	
Wiring diagrams	GI-8 , GI-12	E
		F
		G
		H
		I
		J
		K
		L