

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

| Numerics | |
|--|--|
| 2nd brake | AT-652 |
| 2nd coast brake | AT-652 |
| 2nd coast brake hub | AT-658 |
| 3METER - Wiring diagram | DI-21 |
| A | |
| A/C - Wiring diagram | ATC-33 , MTC-33 |
| A/C compressor clutch removal and installation .. | ATC-108 , MTC-94 |
| A/C compressor mounting . | ATC-107 , ATC-108 , MTC-93 , MTC-94 |
| A/C compressor precaution | ATC-10 , MTC-10 |
| A/C compressor special service tool . | ATC-13 , MTC-13 |
| A/C diagnostic work flow (auto A/C) | ATC-28 |
| A/C diagnostic work flow (manual A/C) | MTC-28 |
| A/C evaporator | ATC-114 , MTC-100 |
| A/C HFC134a (R134a) system identification | ATC-6 , MTC-6 |
| A/C HFC134a (R134a) system precaution | ATC-4 , MTC-4 |
| A/C HFC134a (R134a) system service procedure | ATC-103 , MTC-89 |
| A/C HFC134a (R134a) system service tools .. | ATC-13 , MTC-13 |
| A/C HFC134a system service equipment precaution ... | ATC-10 , MTC-10 |
| A/C lubricant (R134a) | ATC-19 , MTC-19 |
| A/C lubrication oil | ATC-19 , MTC-19 |
| A/C operational check | ATC-39 , MTC-40 |
| A/C performance chart | ATC-70 , MTC-67 |
| A/C service data specification | ATC-120 |
| A/C symptom chart (auto A/C) | ATC-28 |
| A/C symptom chart (manual A/C) | MTC-28 |
| A/C trouble diagnoses (auto A/C) | ATC-28 |
| A/C trouble diagnoses (manual A/C) | MTC-28 |
| A/C, A - Wiring diagram | ATC-33 |
| A/C, M - Wiring diagram | MTC-33 , MTC-35 |
| A/F - Wiring diagram ... | EC-445 , EC-450 , EC-455 , EC-462 , EC-470 , EC-476 , EC-485 |
| A/FH - Wiring diagram | EC-374 |
| A/T - Wiring diagram | AT-19 |
| A/T fluid checking | AT-396 , AT-435 |
| A/T fluid replacement | AT-396 |
| A/T fluid temperature sensor | AT-111 , AT-476 , AT-481 |
| A/T IND - Wiring diagram | DI-42 |
| A/T indicator | DI-42 |
| A/T self-diagnoses | AT-44 , AT-54 , AT-55 , AT-456 , AT-461 |
| A/T shift lock system | AT-258 , AT-614 |
| A/T shift lock system - Wiring diagram | AT-259 , AT-615 |
| A/T trouble diagnoses | AT-425 |
| A/T Wiring diagram AT - 1ST | AT-128 , AT-497 |
| A/T Wiring diagram AT - 2ND | AT-133 , AT-501 |
| A/T Wiring diagram AT - 3RD | AT-138 , AT-507 |
| A/T Wiring diagram AT - 4TH | AT-143 , AT-513 |
| A/T Wiring diagram AT - 5TH | AT-518 |
| A/T Wiring diagram AT - BA/FTS | AT-194 |
| A/T Wiring diagram AT - CAN | AT-190 , AT-465 |
| A/T Wiring diagram AT - ENG SS | AT-123 |
| A/T Wiring diagram AT - FTS | AT-113 , AT-477 |
| A/T Wiring diagram AT - FTSP | AT-482 |
| A/T Wiring diagram AT - LPSV | AT-163 |
| A/T Wiring diagram AT - MAIN | AT-102 |
| A/T Wiring diagram AT - MMSW | AT-580 |
| A/T Wiring diagram AT - NONDTC | AT-211 |
| A/T Wiring diagram AT - OVRCSV | AT-185 |
| A/T Wiring diagram AT - PC/A | AT-526 |
| A/T Wiring diagram AT - PC/B | AT-561 |
| A/T Wiring diagram AT - PC/C | AT-570 |
| A/T Wiring diagram AT - PC/CS | AT-575 |
| A/T Wiring diagram AT - PNP/SW | AT-107 , AT-472 |
| A/T Wiring diagram AT - PWR/IN | AT-586 |
| A/T Wiring diagram AT - SFTFNC | AT-566 |
| A/T Wiring diagram AT - SSV/A | AT-169 , AT-531 |
| A/T Wiring diagram AT - SSV/B | AT-174 , AT-536 |
| A/T Wiring diagram AT - SSV/C | AT-541 |
| A/T Wiring diagram AT - SSV/CS | AT-546 |
| A/T Wiring diagram AT - SSV/D | AT-551 |
| A/T Wiring diagram AT - SSV/E | AT-556 |
| A/T Wiring diagram AT - TCCSIG | AT-155 , AT-523 |
| A/T Wiring diagram AT - TCV | AT-150 |
| A/T Wiring diagram AT - TPS | AT-180 |
| A/T Wiring diagram AT - TRSC | AT-487 |
| A/T Wiring diagram AT - VSS A/T | AT-119 |
| A/T Wiring diagram AT - VSSATC | AT-491 |
| A/T Wiring diagram AT - VSSMTR | AT-201 , AT-204 |
| ABS - Wiring diagram | BRC-13 |
| ABS (anti-lock brake system) | BRC-5 |
| Accelerator control system | ACC-2 |
| Accelerator pedal position (APP) sensor | EC-542 , EC-549 , EC-564 , EC-1258 , EC-1265 , EC-1279 |
| Accelerator pedal released position learning .. | EC-711 |
| Active damper suspension system - Wiring diagram | FSU-4 |
| AF1B1-Wiring diagram . | EC-1134 , EC-1142 , EC-1150 , EC-1159 , EC-1169 , EC-1178 , EC-1190 |
| AF1B2-Wiring diagram . | EC-1136 , EC-1144 , EC-1152 , EC-1161 , EC-1171 , EC-1180 , EC-1192 |
| AF1HB1-Wiring diagram | EC-1047 |
| AF1HB2-Wiring diagram | EC-1049 |
| Aiming adjustment | LT-28 |
| Air bag | SRS-3 |
| Air bag precautions | GI-3 |
| Air bleeding (hydraulic clutch)Air bleeding (hydraulic clutch) | CL-7 |
| Air bleeding for brake systemAir bleeding for brake system | BR-8 |
| Air cleaner and air duct | EM-17 , EM-120 |
| Air cleaner filter replacement | MA-18 , MA-25 |
| Air conditioner - Wiring diagram | ATC-33 , MTC-33 |
| Air conditioner cut control | EC-647 |
| Air flow meter - See Mass air flow sensor | EC-178 , EC-187 , EC-806 , EC-815 |
| Air fuel ratio sensor 1 .. | EC-443 , EC-448 , EC-453 , EC-460 , EC-467 , EC-473 , EC-482 , EC-1132 , EC-1140 , EC- |

ALPHABETICAL INDEX

[1148](#), [EC-1157](#), [EC-1166](#), [EC-1175](#), [EC-1187](#)
 Air fuel ratio sensor 1 heater [EC-373](#), [EC-1045](#)
 Ambient sensor [ATC-88](#)
 Angular tightening application [EM-6](#), [EM-110](#)
 Anti-lock brake system - See ABS [BRC-5](#)
 Anti-lock brake system - Wiring diagram [BRC-13](#)
 APPS1 - Wiring diagram [EC-544](#), [EC-1260](#)
 APPS2 - Wiring diagram [EC-551](#), [EC-1267](#)
 APPS3 - Wiring diagram [EC-566](#), [EC-1281](#)
 ASC/BS - Wiring diagram [EC-513](#), [EC-1229](#)
 ASC/SW - Wiring diagram [EC-506](#), [EC-1222](#)
 ASCBOF - Wiring diagram [EC-612](#), [EC-1334](#)
 ASCD [EC-34](#), [EC-648](#)
 ASCD (automatic speed control device) [ACS-2](#)
 ASCIND - Wiring diagram [EC-621](#), [EC-1344](#)
 Audio [AV-6](#)
 AUDIO - Wiring diagram [AV-7](#), [AV-13](#)
 Auto air conditioner - Wiring diagram [ATC-33](#)
 Auto anti-dazzling inside mirror [GW-40](#), [GW-41](#)
 Automatic amplifier [ATC-37](#), [ATC-41](#), [MTC-38](#), [MTC-42](#)
 Automatic transaxle number [GI-46](#)
 Automatic transmission fluid replacement [MA-31](#)
 AV and NAVI control unit [AV-65](#)
 AV communication line [AV-88](#)

B

B/COMP - Wiring diagram [DI-63](#)
 B5 brake [AT-660](#)
 Back door trim [EI-30](#)
 BACK/L - Wiring diagram [LT-98](#)
 Back-up lamp switch (M/T)Back-up lamp switch ... [MT-13](#), [MT-77](#)
 Basic inspection [EC-75](#), [EC-693](#)
 Battery [SC-4](#)
 Battery/Starting/Charging System Tester [SC-6](#), [SC-13](#), [SC-23](#)
 Baulk ring (M/T) [MT-21](#), [MT-85](#)
 BCM (Body control module) [BCS-3](#)
 Block heater [EM-75](#), [EM-224](#)
 Blower motor [ATC-55](#), [ATC-93](#), [MTC-53](#), [MTC-79](#)
 Blower unit [ATC-92](#), [MTC-78](#)
 Board-on lift [GI-40](#)
 Body alignment [BL-140](#)
 Body component parts [BL-129](#)
 Body construction [BL-139](#)
 Body exterior paint color [BL-128](#)
 Body repair [BL-128](#)
 Body sealing [BL-136](#)
 Brake boosterBrake booster [BR-15](#)
 Brake control valve (Proportioning valve)Brake control valve (Proportioning valve) [BR-39](#)
 Brake fluid changeBrake fluid change [BR-8](#)
 Brake fluid level [MA-34](#)
 Brake fluid level and line checkBrake fluid level and line check [BR-8](#)
 Brake hydraulic lineBake hydraulic line [BR-9](#)
 Brake inspection [MA-35](#)
 Brake lines and cables inspection [MA-34](#)

Brake master cylinderBrake master cylinder [BR-12](#)
 Brake pedalBrake pedal [BR-6](#)
 Brake switch [EC-537](#), [EC-1253](#)
 BRK/SW - Wiring diagram [EC-538](#), [EC-1254](#)
 Bulb specifications [LT-144](#)
 Bumper, front [EI-14](#)
 Bumper, rear [EI-16](#)

C

Cabin air filter [ATC-94](#), [MTC-80](#), [MA-28](#)
 Camshaft [EM-37](#), [EM-182](#)
 Camshaft inspection [EM-39](#), [EM-44](#), [EM-187](#)
 Camshaft position sensor (PHASE) .. [EC-280](#), [EC-928](#)
 CAN - Wiring diagram [EC-167](#), [EC-791](#), [LAN-34](#), [LAN-51](#), [LAN-70](#), [LAN-91](#), [LAN-115](#), [LAN-136](#), [LAN-160](#), [LAN-186](#), [LAN-212](#), [LAN-239](#)
 CAN (Controller Area Network) [LAN-21](#)
 CAN communication [EC-166](#), [EC-790](#), [AT-188](#), [AT-416](#), [AT-464](#), [BRC-7](#), [BRC-50](#), [LAN-21](#)
 Canister-See EVAP canister [EC-40](#), [EC-656](#)
 CHARGE - Wiring diagram [SC-22](#)
 Charging system [SC-21](#)
 Chassis and body maintenance [MA-28](#)
 Chassis and body maintenanceSchedule 1 [MA-9](#)
 Chassis and body maintenanceSchedule 2 [MA-11](#)
 CHIME - Wiring diagram [DI-47](#)
 CIGAR - Wiring diagram [WW-32](#)
 Cigarette lighter [WW-32](#)
 Circuit breaker [PG-65](#)
 Clearance lamp [LT-100](#)
 Closed loop control [EC-30](#), [EC-420](#), [EC-644](#)
 Clutch coverClutch cover [CL-18](#)
 Clutch discClutch disc [CL-18](#)
 Clutch fluid level [MA-28](#)
 Clutch master cylinderClutch master cylinder [CL-8](#)
 Clutch operating cylinderClutch operating cylinder [CL-11](#)
 Clutch pedalClutch pedal [CL-5](#)
 Clutch release mechanismClutch release mechanism . [CL-14](#)
 Coil spring (front) [FSU-9](#)
 Coil spring (rear)Coil spring [RSU-9](#)
 Collision diagnosis [SRS-57](#)
 Combination lamp, front, removal and installation .. [LT-30](#)
 Combination lamp, rear, removal and installation [LT-97](#)
 Combination meter [DI-4](#), [DI-18](#)
 Combination meter removal and installation - See Instrument panel [DI-18](#)
 Combination switch [LT-89](#)
 COMM - Wiring diagram [AV-88](#)
 Component Location (auto A/C) [ATC-29](#)
 Component Location (manual A/C) [MTC-29](#)
 Compressor clutch removal and installation . [ATC-108](#), [MTC-94](#)
 Compressor mounting .. [ATC-107](#), [ATC-108](#), [MTC-93](#), [MTC-94](#)
 Compressor precaution [ATC-10](#), [MTC-10](#)

A
B
C
D
E
F
G
H
I
J
K
L

INDEX

ALPHABETICAL INDEX

Compressor special service tool [ATC-13](#), [MTC-13](#)
Condenser [ATC-113](#), [MTC-99](#)
Connector inspection [GI-23](#)
Console box - See Instrument panel [IP-10](#)
CONSULT for ABS [BRC-16](#)
CONSULT for engine [EC-128](#)
CONSULT for TCS [BRC-59](#)
CONSULT general information [GI-36](#)
CONSULT-II for engine [EC-750](#)
Control units (terminal arrangement) [PG-69](#)
Controller Area Network (CAN) [LAN-21](#)
Converter housing installation [AT-369](#)
COOL/F - Wiring diagram [EC-425](#), [EC-1115](#)
Coolant mixture ratio [MA-14](#)
Coolant replacement [MA-15](#)
Coolant replacementVQ35DE [MA-22](#)
Cooling circuit (engine) [CO-26](#)
Cooling fan motor [EC-432](#), [EC-1122](#)
Cooling unit (A/C evaporator) [ATC-95](#), [ATC-114](#), [MTC-81](#), [MTC-100](#)
Corrosion protection [BL-133](#)
Coupling sleeve (M/T) [MT-21](#), [MT-85](#)
Crankcase ventilation system - See Positive crankcase ventilation [EC-50](#), [EC-665](#)
Crankshaft [EM-76](#)
Crankshaft position sensor (POS) [EC-273](#), [EC-921](#)
Crash zone sensor [SRS-52](#)
Cylinder block [EM-75](#), [EM-224](#)
Cylinder block boring [EM-94](#)
Cylinder head [EM-59](#), [EM-200](#)
Cylinder head bolt tightening [EM-206](#)

D

Data link connector [EC-623](#)
Daytime light system [LT-33](#)
Daytime running light - See Daytime light system .. [LT-33](#)
DEF - Wiring diagram [GW-44](#)
Diagnosis sensor unit [SRS-55](#)
Diagnostic trouble code (DTC) for OBD system [EC-15](#), [EC-56](#), [EC-627](#), [EC-669](#)
Diagnostic trouble code (DTC) inspection priority chart [EC-105](#), [EC-722](#)
Differential gear (FF A/T) [AT-665](#)
Differential gear (FF M/T) [MT-24](#)
Dimensions [GI-46](#)
Display Control Unit [AV-156](#)
Display Unit [AV-156](#)
DLC - Wiring diagram [EC-623](#)
Door glass [GW-34](#), [GW-37](#)
Door glass Fitting Adjustment(Front) [GW-36](#)
Door mirror [GW-57](#)
Door trim [EI-30](#)
Door, front [BL-72](#), [GW-34](#)
Door, rear [BL-72](#), [GW-37](#)
Drive belt [EM-15](#)
Drive belt inspectionQR25DE [MA-15](#)
Drive belt inspectionVQ35DE [MA-22](#)

Drive shaft (front) [FAX-11](#)
Driver air bag [SRS-43](#)
Dropping resistor (A/T) [AT-161](#)
DTC work support [EC-138](#), [EC-761](#)
DTRL - Wiring diagram [LT-38](#)
Duct and grilles [ATC-101](#), [MTC-87](#)

E

ECM input/output signal [EC-120](#)
ECM power supply [EC-159](#), [EC-378](#), [EC-783](#), [EC-1053](#)
ECM/PW - Wiring diagram [EC-379](#), [EC-1054](#)
ECTS - Wiring diagram [EC-201](#), [EC-828](#)
EGR function [EC-937](#), [EC-1199](#)
EGR temperature sensor [EC-952](#)
EGR volume control valve [EC-945](#)
EGR/TS - Wiring diagram [EC-955](#)
EGRC1 - Wiring diagram [EC-941](#), [EC-1203](#)
EGVC/V - Wiring diagram [EC-947](#)
Electric sunroof [RF-10](#)
Electric throttle control actuator [EC-386](#), [EC-388](#), [EC-399](#), [EC-1066](#), [EC-1068](#)
Electrical diagnoses [GI-23](#)
Electrical load signal circuit [EC-610](#), [EC-1332](#)
Electronic ignition (EI) system [EC-31](#), [EC-645](#)
EMNT - Wiring diagram [EC-1323](#)
Engine control circuit diagram [EC-118](#), [EC-738](#)
Engine control component parts location [EC-112](#)
Engine control module (ECM) [EC-370](#), [EC-1042](#)
Engine control system diagram and chart . [EC-28](#), [EC-642](#)
Engine coolant [CO-28](#)
Engine coolant temperature sensor (ECTS) .. [EC-199](#), [EC-211](#), [EC-826](#), [EC-838](#)
Engine fail-safe system [EC-107](#), [EC-724](#)
Engine mounting control (Front) [EC-1322](#)
Engine oil [LU-20](#)
Engine oil filter replacementQR25DE .. [MA-19](#), [MA-26](#)
Engine oil precautions [GI-3](#), [GI-7](#)
Engine oil replacementQR25DE [MA-18](#), [MA-25](#)
Engine removal [EM-71](#), [EM-219](#)
Engine serial number [GI-46](#)
ETC1 - Wiring diagram [EC-389](#), [EC-1069](#)
ETC2 - Wiring diagram [EC-396](#), [EC-1076](#)
ETC3 - Wiring diagram [EC-400](#), [EC-1080](#)
EVAP canister [EC-40](#), [EC-656](#)
EVAP canister purge volume control solenoid valve [EC-306](#), [EC-491](#), [EC-977](#), [EC-1206](#)
EVAP canister vent control valve [EC-312](#), [EC-498](#), [EC-984](#), [EC-1214](#)
EVAP control system (small leak) diagnosis .. [EC-298](#), [EC-335](#), [EC-343](#), [EC-969](#), [EC-1008](#)
EVAP control system pressure sensor ... [EC-319](#), [EC-322](#), [EC-328](#), [EC-991](#), [EC-994](#), [EC-1000](#)
EVAP control system purge flow monitoring diagnosis . [EC-292](#), [EC-964](#)
EVAP vapor lines inspection [MA-21](#), [MA-27](#)
Evaporative emission (EVAP) system [EC-37](#), [EC-651](#)
Evaporator [ATC-114](#), [MTC-100](#)

ALPHABETICAL INDEX

Exhaust manifold [EM-134](#)
Exhaust system [EX-3](#), [EX-6](#)
Exhaust system inspection [EX-3](#), [EX-6](#), [MA-28](#)
Expansion valve [ATC-115](#), [MTC-101](#)

F

F/PUMP - Wiring diagram [EC-599](#), [EC-1317](#)
Fan control amp. [ATC-100](#), [MTC-86](#)
Final drive (FF M/T) [MT-24](#)
Flow charts [GI-26](#)
Fluid temperature sensor (A/T) .. [AT-111](#), [AT-476](#), [AT-481](#)
Fluids [MA-12](#)
Fluorescent leak detector [ATC-116](#), [MTC-102](#)
Flywheel (clutch)Flywheel (clutch) [CL-18](#)
Foot lamp [LT-115](#)
Fork rod (M/T) [MT-23](#), [MT-87](#)
Freeze frame data [EC-57](#), [EC-674](#)
Front bumper [EI-14](#)
Front combination lamp removal and installation [LT-30](#)
Front disc brakeFront disc brake [BR-19](#), [BR-25](#)
Front door [BL-72](#), [GW-34](#)
Front Door Trim [EI-30](#)
Front passenger air bag [SRS-47](#)
Front seat [SE-15](#)
Front seat belt [SB-4](#)
Front seat belt pre-tensioner [SB-2](#), [SRS-3](#), [SRS-54](#)
FTTS - Wiring diagram [EC-248](#), [EC-252](#), [EC-892](#), [EC-896](#)
FUEL - Wiring diagram [EC-235](#), [EC-242](#)
Fuel cut control (at no load high engine speed) [EC-32](#), [EC-646](#)
Fuel gauge [DI-4](#)
Fuel injection system [EC-233](#), [EC-240](#)
Fuel injection system (Bank 1) [EC-868](#), [EC-879](#)
Fuel injection system (Bank 2) [EC-868](#), [EC-879](#)
Fuel injector and fuel tube [EM-32](#), [EM-147](#)
Fuel level sensor [EC-353](#), [EC-355](#), [EC-357](#), [EC-1025](#), [EC-1027](#), [EC-1029](#)
Fuel line inspection [FL-3](#), [MA-17](#), [MA-24](#)
Fuel precautions [GI-3](#), [GI-5](#)
Fuel pressure check [EC-95](#), [EC-714](#)
Fuel pressure release [EC-95](#), [EC-714](#)
Fuel pump [EC-598](#), [EC-1316](#)
Fuel system [FL-3](#)
Fuel systemCommercial Service Tools [FL-2](#)
Fuel systemPREPARATION [FL-2](#)
Fuel systemSpecial Service Tools [FL-2](#)
Fuel tank temperature sensor ... [EC-246](#), [EC-251](#), [EC-890](#), [EC-895](#)
Fuel tank vacuum relief valve [EC-40](#), [EC-656](#)
FUELB1 - Wiring diagram [EC-870](#), [EC-881](#)
FUELB2 - Wiring diagram [EC-871](#), [EC-882](#)
Fuse [PG-65](#), [PG-73](#)
Fuse block [PG-72](#)
Fusible link [PG-65](#), [PG-73](#)

G

Garage jack and safety stand [GI-40](#)
Gear components (M/T) [MT-21](#), [MT-85](#)
Generic scan tool (GST) [EC-140](#), [EC-763](#)
Glass [GW-11](#), [GW-13](#), [GW-34](#), [GW-37](#)
Glove box lamp [LT-143](#)
GPS antenna [AV-64](#)
Grease [MA-12](#)
Ground distribution [PG-28](#)

H

H/LAMP - Wiring diagram [LT-9](#)
H/MIRROR - Wiring diagram [GW-45](#)
Handling precautions for plastics [BL-151](#)
Harness connector [PG-66](#)
Harness connector inspection [GI-23](#)
Harness layout [PG-39](#)
Hazard warning lamp [LT-72](#)
Headlamp [LT-6](#)
Headlamp removal and installation [LT-30](#)
Heated oxygen sensor 2 [EC-219](#), [EC-225](#), [EC-404](#), [EC-412](#)
Heated oxygen sensor 2 (bank 1) ... [EC-846](#), [EC-856](#), [EC-1084](#), [EC-1096](#)
Heated oxygen sensor 2 (bank 2) ... [EC-846](#), [EC-856](#), [EC-1084](#), [EC-1096](#)
Heated oxygen sensor 2 heater [EC-173](#)
Heated oxygen sensor 2 heater (bank 1) [EC-797](#)
Heated oxygen sensor 2 heater (bank 2) [EC-797](#)
Heated seat [SE-12](#)
Heater and cooling unit (Heater core) [ATC-95](#), [ATC-96](#), [MTC-81](#), [MTC-82](#)
Heater unit (heater core) .. [ATC-95](#), [ATC-96](#), [MTC-81](#), [MTC-82](#)
Height (Dimensions) [GI-46](#)
HFC134a (R134a) system identification [ATC-6](#), [MTC-6](#)
HFC134a (R134a) system precaution .. [ATC-4](#), [MTC-4](#)
HFC134a (R134a) system service procedure [ATC-103](#), [MTC-89](#)
HFC134a (R134a) system service tools [ATC-13](#), [MTC-13](#)
HFC134a system service equipment precaution . [ATC-10](#), [MTC-10](#)
HO2S2 - Wiring diagram [EC-221](#), [EC-228](#), [EC-407](#), [EC-415](#)
HO2S2H - Wiring diagram [EC-175](#)
Homelink universal transceiver [BL-126](#)
Horn [WW-36](#)
HORN - Wiring diagram [WW-36](#)
How to erase DTC for OBD system [EC-65](#)
HSEAT - Wiring diagram [SE-13](#)

I

IATS - Wiring diagram [EC-196](#), [EC-823](#)
Identification plate [GI-46](#)
Idle air volume learning [EC-93](#), [EC-712](#)

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

Idle mixture ratio [EC-81](#), [EC-700](#)
Idle speed [EC-75](#), [EC-81](#)
Idle speed control (ISC) ... [EC-361](#), [EC-363](#), [EC-1033](#),
[EC-1035](#)
Ignition coil [EM-29](#), [EM-144](#), [EC-572](#), [EC-1287](#)
Ignition control system [EC-572](#), [EC-1287](#)
Ignition key hole illumination [LT-134](#)
Ignition timing [EC-75](#), [EC-81](#)
IGNSYS - Wiring diagram [EC-573](#), [EC-1288](#)
ILL - Wiring diagram [LT-139](#)
Illumination [LT-135](#)
Illumination control [LT-143](#)
In vehicle sensor [ATC-89](#)
In-cabin Microfilter [ATC-94](#), [MTC-80](#), [MA-28](#)
INJECT - Wiring diagram [EC-593](#), [EC-1309](#)
Injector [EC-592](#), [EC-1308](#)
Input shaft (FF M/T) [MT-21](#), [MT-85](#)
Instrument panel [IP-10](#)
Intake air temperature sensor ... [EC-194](#), [EC-214](#), [EC-822](#), [EC-841](#)
Intake door motor [ATC-54](#), [ATC-97](#), [MTC-52](#), [MTC-83](#)
Intake manifold [EM-19](#), [EM-129](#)
Intake sensor [ATC-84](#), [ATC-91](#), [MTC-73](#), [MTC-77](#)
Intake valve timing control [EC-169](#)
Intake valve timing control (Bank 1) [EC-793](#)
Intake valve timing control (Bank 2) [EC-793](#)
Intake valve timing control solenoid valve [EC-382](#)
Intake valve timing control solenoid valve (Bank 1) [EC-1057](#)
Intake valve timing control solenoid valve (Bank 2) [EC-1057](#)
Integrated homelink transmitter [BL-126](#)
Integrated homelink transmitter - See Homelink universal transceiver [BL-126](#)
Interior [EI-32](#)
Interior lamp [LT-115](#)
Interior lamp on-off control [LT-115](#)
IPDM (Intelligent power distribution module engine room) [PG-15](#)
IVC - Wiring diagram [EC-383](#)
IVCB1 - Wiring diagram [EC-1058](#)
IVCB2 - Wiring diagram [EC-1060](#)
IVIS (Infiniti vehicle immobilizer system) precautions ... [GI-3](#)

J

Jacking points [GI-40](#)
Junction box (J/B) [PG-72](#)

K

Key illumination [LT-115](#)
Keyless entry system - See Multi-remote control system [BL-46](#)
Knock sensor (KS) [EC-269](#), [EC-916](#)
KS - Wiring diagram [EC-270](#), [EC-917](#)

L

LAN system circuit [ATC-42](#), [MTC-44](#)
Length (Dimensions) [GI-46](#)
License lamp [LT-100](#)
Lifting points [GI-40](#)
Line pressure solenoid valve [AT-161](#)
Line pressure test (A/T) [AT-71](#), [AT-437](#)
Liquid gasket application [EM-6](#), [EM-110](#), [LU-2](#), [LU-15](#),
[CO-3](#), [CO-21](#)
Location of electrical units [PG-62](#)
Lubricant (R134a) A/C [ATC-19](#), [MTC-19](#)
Lubricants [MA-12](#)
Lubrication circuit (engine) [LU-18](#)
Lubrication oil A/C [ATC-19](#), [MTC-19](#)
Lubrication-locks, hinges and hood latches [MA-37](#)
Luggage compartment trim [EI-37](#)

M

M/T major overhaul [MT-24](#), [MT-88](#)
M/T oil replacementM/T oil replacement [MT-11](#), [MT-75](#)
M/T removal and installationM/T removal and installation
[MT-17](#)
MAFS - Wiring diagram [EC-181](#), [EC-189](#), [EC-809](#), [EC-817](#)
Magnet clutch [ATC-108](#), [MTC-94](#)
MAIN - Wiring diagram [EC-159](#), [EC-783](#)
Mainshaft (M/T) [MT-21](#), [MT-85](#)
Maintenance [MA-5](#)
Maintenance (engine)QR25DE [MA-15](#)
Maintenance (engine)VQ35DE [MA-22](#)
Malfunction indicator lamp (MIL) [EC-67](#), [EC-685](#)
Manual air conditioner - Wiring diagram [MTC-33](#)
Manual transaxle number [GI-46](#)
Manual transmission oil replacement [MA-29](#)
Map lamp [LT-115](#)
Mass air flow sensor (MAFS) ... [EC-178](#), [EC-187](#), [EC-806](#), [EC-815](#)
Master cylinder (brake)Master cylinder (brake) [BR-12](#)
Master cylinder (clutch)Master cylinder (clutch) ... [CL-8](#)
METER - Wiring diagram [DI-9](#)
MIL data link connectors circuit [EC-1346](#)
MIL/DL - Wiring diagram [EC-1346](#)
Mirror, door [GW-57](#)
Mirror, out side [GW-57](#)
Misfire [EC-262](#), [EC-906](#)
Mode door motor [ATC-98](#), [MTC-84](#)
Model variation [GI-46](#)
Multiport fuel injection (MFI) system ... [EC-29](#), [EC-643](#)
Multiport fuel injection precautions [GI-3](#), [GI-6](#)
Multi-remote control system [BL-46](#)
Multi-remote control system - See Remote keyless entry system [BL-16](#)

N

NATS - Wiring diagram [BL-110](#)
NAVI - Wiring diagram [AV-81](#)

ALPHABETICAL INDEX

NAVI Control Unit [AV-156](#)
 NVH troubleshooting (BR)NVH troubleshooting (BR) .. [BR-5](#)
 NVH troubleshooting (CL)NVH troubleshooting (CL) ... [CL-4](#)
 NVH troubleshooting (EM) [EM-13](#), [EM-117](#)
 NVH troubleshooting (FA) [FAX-4](#)
 NVH troubleshooting (RA) [RAX-4](#)
 NVH troubleshooting (RSU)NVH Troubleshooting (RSU) [RSU-4](#)
 NVH troubleshooting (ST) [PS-4](#)
 NVH troubleshooting (WT)NVH troubleshooting (WT) . [WT-2](#)
 NVIS (Nissan vehicle immobilizer system) precautions [GI-3](#)

O

O2H2B1 - Wiring diagram [EC-799](#)
 O2H2B2 - Wiring diagram [EC-801](#)
 O2S2B1 - Wiring diagram [EC-848](#), [EC-859](#), [EC-1087](#), [EC-1099](#)
 O2S2B2 - Wiring diagram [EC-850](#), [EC-861](#), [EC-1089](#), [EC-1101](#)
 Oil change (capacity)QR25DE [MA-12](#)
 Oil change (capacity)VQ35DE [MA-13](#)
 Oil filter [LU-23](#)
 Oil pan (engine) [EM-26](#)
 Oil pressure (engine) [LU-8](#)
 Oil pump (A/T) [AT-652](#)
 Oil pump (engine) [LU-11](#), [LU-24](#)
 Oil seal replacement (engine) [EM-56](#), [EM-195](#)
 On board diagnostic system [EC-668](#)
 One-way clutch No.1 [AT-658](#)
 One-way clutch outer race sub assembly [AT-658](#)
 Operating cylinder (clutch)Operating cylinder (clutch) . [CL-11](#)
 ORVR (On-board Refueling Vapor Recovery) . [EC-44](#), [EC-660](#)
 Out side mirror [GW-57](#)
 Overdrive control switch [AT-252](#)
 Overheat [EC-421](#), [EC-1111](#)
 Overrun clutch solenoid valve [AT-183](#)

P

Park/Neutral position switch [EC-524](#), [EC-1240](#)
 Park/neutral position switch (A/T) [AT-105](#), [AT-471](#)
 Park/neutral position switch (M/T)Park/neutral position switch (M/T) [MT-13](#), [MT-77](#)
 Parking brake controlParking brake control [PB-2](#)
 Parking drum brakeParking drum brake [PB-5](#)
 Parking lamp [LT-100](#)
 PCV (positive crankcase ventilation) ... [EC-50](#), [EC-665](#)
 Periodic maintenance [MA-7](#)
 Personal lamp [LT-115](#)
 PGC/V - Wiring diagram [EC-308](#), [EC-493](#), [EC-979](#), [EC-1208](#)
 PHASE - Wiring diagram [EC-282](#)

PHSB1 - Wiring diagram [EC-930](#)
 PHSB2 - Wiring diagram [EC-932](#)
 Piston ring inspection [EM-234](#)
 Piston to bore clearance [EM-94](#)
 PNP/SW - Wiring diagram [EC-526](#), [EC-1242](#)
 POS - Wiring diagram [EC-275](#), [EC-923](#)
 POWER - Wiring diagram [PG-6](#)
 Power door lock [BL-16](#)
 Power seat [SE-10](#)
 Power steering fluid level [MA-36](#)
 Power steering pressure (PSP) sensor [EC-365](#)
 Power supply routing [PG-4](#)
 Power window [GW-15](#)
 PRE/SE - Wiring diagram ... [EC-324](#), [EC-330](#), [EC-996](#), [EC-1002](#)
 Precautions (General) [GI-3](#), [GI-4](#)
 Precautions in repairing high strength steel [BL-154](#)
 Pressure control solenoid valve A [AT-525](#)
 Pressure control solenoid valve B [AT-560](#)
 Pressure control solenoid valve C [AT-569](#)
 Pressure test (A/T) [AT-71](#), [AT-437](#)
 PS/SEN - Wiring diagram [EC-366](#), [EC-1038](#)

R

Radiator [CO-30](#)
 Radio - See Audio [AV-6](#)
 Rear bumper [EI-16](#)
 Rear combination lamp removal and installation [LT-97](#)
 Rear disc brakeRear disc brake [BR-32](#)
 Rear door [BL-72](#), [GW-37](#)
 Rear seat [SE-22](#)
 Rear seat belt [SB-5](#)
 Rear suspensionRear suspension [RSU-5](#)
 Rear window [GW-13](#)
 Rear window defogger [GW-42](#)
 Refrigerant connection precaution [ATC-6](#), [MTC-6](#)
 Refrigerant discharging evacuating charging [ATC-103](#), [MTC-89](#)
 Refrigerant general precaution [ATC-5](#), [MTC-5](#)
 Refrigerant lines [ATC-103](#), [MTC-89](#)
 Refrigerant pressure sensor . [EC-605](#), [EC-1327](#), [ATC-113](#), [MTC-99](#)
 Remote keyless entry system [BL-16](#), [BL-46](#)
 Removal and installation (A/T) [AT-624](#)
 Reverse idler shaft (M/T) [MT-21](#), [MT-85](#)
 Reverse main gear (M/T) [MT-21](#), [MT-85](#)
 Revolution sensor (A/T) [AT-117](#), [AT-490](#)
 Road wheel size [GI-46](#)
 Rocker cover [EM-35](#), [EM-150](#)
 Room lamp [LT-115](#), [LT-133](#)
 Room lamp - See Interior lamp [LT-115](#)
 ROOM/L - Wiring diagram [LT-120](#), [LT-123](#)
 RP/SEN - Wiring diagram [EC-606](#), [EC-1328](#)

S

SAE J1930 terminology list [GI-52](#)
 SAE J1979 - Service \$01 - 09 [EC-53](#), [EC-668](#)

A
B
C
D
E
F
G
H
I
J
K
L

INDEX

ALPHABETICAL INDEX

| | | | |
|--|--|--|--|
| SEAT - Wiring diagram | SE-10 | TAIL/L - Wiring diagram | LT-103 |
| Seat belt inspection | SB-6 , MA-38 | TCM circuit diagram | AT-19 , AT-434 |
| Seat belt, front | SB-4 | TCM inspection table | AT-99 , AT-453 |
| Seat belt, rear | SB-5 | TCS - Wiring diagram | BRC-56 |
| Seat, front | SE-15 | TCS (traction control system) | BRC-47 |
| Seat, rear | SE-22 | TCS actuator | BRC-49 , BRC-89 |
| SEN/PW - Wiring diagram | EC-439 , EC-1128 | TCS component parts and connector location | BRC-54 |
| SHIFT - Wiring diagram | AT-259 , AT-615 | TCS control unit | BRC-49 , BRC-89 |
| Shift control components (M/T) | MT-23 , MT-87 | TCS self-diagnosis | BRC-59 , BRC-65 |
| Shift control components (M/T)Shift control components (M/T) | MT-14 , MT-78 | TCS system components | BRC-48 |
| Shift fork (M/T) | MT-23 , MT-87 | TCS wheel sensors | BRC-54 , BRC-87 |
| Shift lock system | AT-258 , AT-614 | Thermostat | CO-16 |
| Shift schedule | AT-376 , AT-444 | Three way catalyst | EM-134 |
| Shift solenoid valve A (A/T) | AT-167 , AT-530 | Three way catalyst function | EC-287 |
| Shift solenoid valve B (A/T) | AT-172 , AT-535 | Three way catalyst function (Bank 1) | EC-959 |
| Shift solenoid valve C (A/T) | AT-540 | Three way catalyst function (Bank 2) | EC-959 |
| Shift solenoid valve D (A/T) | AT-550 | Three way catalyst precautions | GI-3 , GI-5 |
| Shift solenoid valve E (A/T) | AT-555 | Throttle control motor | EC-1079 |
| Shock absorber (front) | FSU-10 | Throttle control motor relay | EC-394 , EC-1074 |
| Shock absorber (rear)Shock absorber (rear) | RSU-8 | Throttle position sensor (TPS) .. | EC-204 , EC-255 , EC-434 , EC-436 , EC-557 , EC-831 , EC-899 , EC-1123 , EC-1125 , EC-1272 |
| Side air bag (satellite) sensor | SRS-53 | Throttle position switch | AT-252 |
| Side curtain air bag | SRS-50 | Tightening torque of standard bolts | GI-44 |
| Side trim | EI-32 | Time lag test | AT-436 |
| Spare tire size | GI-46 | Timing chain | EM-48 , EM-161 |
| Spark plug | EM-145 | Tire rotation | MA-34 |
| Spark plug replacementQR25DE | MA-19 , MA-26 | Tire size | GI-46 |
| Specification value | EC-148 , EC-772 | Torque converter installation .. | AT-274 , AT-369 , AT-625 |
| Speedometer | DI-4 | Torque convertor clutch solenoid valve ... | AT-148 , AT-522 |
| Spiral cable | SRS-45 | Tow truck towing | GI-43 |
| Spot lamp | LT-133 | Towing point | GI-43 |
| SROOF - Wiring diagram | RF-12 | TPS1 - Wiring diagram | EC-257 , EC-901 |
| SRS - See Supplemental Restraint System | SRS-5 | TPS2 - Wiring diagram | EC-206 , EC-833 |
| SRS - Wiring diagram | SRS-13 | TPS3 - Wiring diagram | EC-559 , EC-1274 |
| SRS Trouble diagnoses | SRS-9 | Traction control system - See TCS | BRC-47 |
| Stabilizer bar (front) | FSU-11 | Traction control system - Wiring diagram | BRC-56 |
| Stall test (A/T) | AT-68 , AT-435 | Transaxle case cover | AT-660 |
| Standardized relay | PG-70 | Transaxle serial number | GI-46 |
| START - Wiring diagram | SC-10 | Transmission case (M/T) | MT-20 , MT-84 |
| Starting system | SC-9 | TRANSMT - Wiring diagram | BL-126 |
| Steering gear and linkage inspection | MA-35 | Tread-FR&RR (Dimensions) | GI-46 |
| Steering knuckle | FAX-6 | Trim | EI-32 |
| Step lamp | LT-115 | Triple meter | DI-19 |
| Stop lamp switch | EC-537 , EC-1253 | Trouble diagnoses | GI-9 |
| STOP/L - Wiring diagram | LT-95 | Trunk lid trim | EI-37 |
| Strut (front) | FSU-9 | Trunk room trim | EI-37 |
| Sun roof, electric | RF-10 | Turbine revolution sensor | AT-486 |
| Sunload sensor | ATC-90 | TURN - Wiring diagram | LT-76 |
| Sunroof | RF-24 | Turn signal lamp | LT-72 |
| Supplemental Restraint System | SRS-5 | Two trip detection logic | EC-53 , EC-668 |
| Symbols and abbreviations | GI-8 , GI-21 | Two-pole lift | GI-40 |
| Symptom matrix chart | EC-108 , EC-725 | | |
| Synchronizer (M/T) | MT-21 , MT-85 | | |
| System readiness test (SRT) code | EC-58 , EC-674 | | |

T

| | |
|------------------|------------------------|
| Tachometer | DI-4 |
| Tail lamp | LT-100 |

V

| | |
|--|--|
| Vacuum hose (brake system)Vacuum hose (brake system) | BR-17 |
| Vacuum hose drawing (Engine control) .. | EC-117 , EC- |

ALPHABETICAL INDEX

736

Valve clearance [EM-45](#), [EM-191](#)
Valve guide [EM-66](#), [EM-215](#)
Valve seat [EM-68](#), [EM-217](#)
Valve spring [EM-69](#), [EM-218](#)
Variable induction air control system (VIAS) .. [EC-532](#),
[EC-583](#), [EC-1248](#), [EC-1300](#)
Vehicle identification number [GI-46](#)
Vehicle recovery (freeing a stuck vehicle) [GI-43](#)
Vehicle speed sensor (VSS) [EC-359](#), [EC-1031](#)
VENT/V - Wiring diagram ... [EC-314](#), [EC-500](#), [EC-986](#),
[EC-1216](#)
VIAS - Wiring diagram [EC-585](#), [EC-1302](#)
VIAS/V - Wiring diagram [EC-533](#), [EC-1249](#)
VIN registration [EC-92](#), [EC-711](#)
Viscosity number (SAE) [MA-14](#)

W

W/ANT - Wiring diagram [AV-60](#)
WARN - Wiring diagram [DI-34](#)
Warning chime [DI-45](#)
Warning lamps [DI-30](#)
Water pump [CO-37](#)
Water temperature gauge [DI-4](#)
Wheel alignment (rear)Wheel alignment (rear) . [RSU-6](#)
Wheel balance [MA-32](#)
Wheel bearing (front axle) [FAX-5](#)
Wheel bearing (rear) [RAX-5](#)
Wheel hub (front) [FAX-5](#), [FAX-6](#)
Wheel hub (rear) [RAX-5](#)
Wheel sensors (ABS) [BRC-7](#), [BRC-42](#)
Wheel sensors (TCS) [BRC-50](#), [BRC-87](#)
Wheel size [GI-46](#)
Wheelarch heightWheelarch height . [FSU-19](#), [RSU-13](#)
Wheelbase (Dimensions) [GI-46](#)
Width (Dimensions) [GI-46](#)
WINDOW - Wiring diagram [GW-18](#)
Window antenna [AV-59](#)
Window, door [GW-34](#), [GW-37](#)
Window, rear [GW-13](#)
Windshield [GW-11](#)
WIPER - Wiring diagram [WW-8](#)
Wiper and washer [WW-4](#)
Wiring Diagram (Cell code) list [PG-59](#)
Wiring diagrams [GI-8](#), [GI-14](#)

A
B
C
D
E
F
G
H
I
J
K
L

INDEX