

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

Numerics

2-4WD shift solenoid valve	TF-97
4LO indicator lamp	TF-91
4WD shift indicator lamp	TF-85
4WD shift switch	TF-97
4WD solenoid valve	TF-97
4WD warning lamp	TF-13

A

A/C air flow	ATC-29 , MTC-27
A/C compressor clutch removal and installation ..	ATC-165 , MTC-141
A/C compressor mounting	ATC-164 , MTC-140
A/C compressor precaution	ATC-11 , MTC-10
A/C compressor special service tool .	ATC-14 , MTC-13
A/C control operation (auto A/C)	ATC-26 , MTC-25
A/C diagnostic work flow (auto A/C)	ATC-118
A/C evaporator	ATC-171 , MTC-147
A/C HFC134a (R134a) system identification	ATC-7 , MTC-6
A/C HFC134a (R134a) system precaution	ATC-5 , MTC-4
A/C HFC134a (R134a) system service procedure	ATC-160 , MTC-136
A/C HFC134a (R134a) system service tools ..	ATC-14 , MTC-13
A/C HFC134a system service equipment precaution ...	ATC-11 , MTC-10
A/C lubricant (R134a)	ATC-22 , MTC-21
A/C lubrication oil	ATC-22 , MTC-21
A/C operational check	ATC-55 , ATC-58 , MTC-49 , MTC-51
A/C self-diagnoses (auto A/C)	ATC-53 , ATC-118
A/C service data specification	ATC-178 , MTC-154
A/C trouble diagnoses (auto A/C)	ATC-33 , MTC-31
A/C, A - Wiring diagram	ATC-41 , MTC-38
A/T - Wiring diagram	AT-49
A/T fluid checking	AT-12 , AT-55 , MA-21
A/T fluid cooler cleaning	AT-12
A/T fluid replacement	AT-12 , MA-23
A/T fluid temperature sensor	AT-128
A/T IND - Wiring diagram	DI-40
A/T indicator	DI-40
A/T shift lock system	AT-230
A/T trouble diagnoses	AT-40
ABS - Wiring diagram	BRC-16
ABS (anti-lock brake system)	BRC-7
Accelerator control system	ACC-2
Accelerator pedal position (APP) sensor .	EC-534 , EC-540 , EC-554
Accelerator pedal released position learning	EC-43
AF1B1-Wiring diagram	EC-429 , EC-437 , EC-445 , EC-454 , EC-464 , EC-473 , EC-485
AF1B2-Wiring diagram	EC-431 , EC-439 , EC-447 , EC-456 , EC-466 , EC-475 , EC-487
AF1HB1-Wiring diagram	EC-353
AF1HB2-Wiring diagram	EC-355

Aiming adjustment	LT-30 , LT-73
Air bag	SRS-3
Air bag precautions	AP-2
Air cleaner and air duct	EM-14
Air cleaner filter replacement	MA-16
Air conditioner cut control	EC-29
Air flow meter - See Mass air flow sensor	EC-144 , EC-152
Air fuel ratio sensor 1 ..	EC-427 , EC-435 , EC-443 , EC-452 , EC-461 , EC-470 , EC-482
Air fuel ratio sensor 1 heater	EC-352
Air mix. door motor	ATC-66 , MTC-59
All - mode 4WD system	TF-10
Ambient sensor	ATC-123 , ATC-134
Angular tightening application	EM-3
APPS1 - Wiring diagram	EC-536
APPS2 - Wiring diagram	EC-542
APPS3 - Wiring diagram	EC-556
ASC/BS - Wiring diagram	EC-517
ASC/SW - Wiring diagram	EC-510
ASCSOF - Wiring diagram	EC-592
ASCD	EC-617
ASCD (automatic speed control device)	ACS-2
ASCIND - Wiring diagram	EC-599
ATP switch	TF-98
ATP warning lamp	TF-90
Audio	AV-6
AUDIO - Wiring diagram	AV-13
Auto air conditioner - Wiring diagram	ATC-41 , MTC-38
Auto anti-dazzling inside mirror	GW-71 , GW-72
Autolamp	LT-46
Automatic amplifier	ATC-59 , MTC-52
Automatic transmission number	GI-48
AV and NAVI control unit	AV-80
AV communication line	AV-104

B

Back door	BL-96
Back door trim	EI-27
Back sonar	DI-59
BACK/L - Wiring diagram	LT-101
Back-up lamp	LT-101
Ball joint (front)	FSU-14
Battery	SC-4
Battery/Starting/Charging System Tester	SC-6 , SC-12 , SC-19
BCM (Body control module)	BCS-3
Blower motor ...	ATC-81 , ATC-138 , MTC-70 , MTC-114
Body alignment	BL-162
Body component parts	BL-149
Body construction	BL-161
Body exterior paint color	BL-148
Body mounting	BL-147
Body repair	BL-148
Body sealing	BL-158
Bose speaker amp.	AV-8
Brake booster	BR-16
Brake fluid level	MA-29

ALPHABETICAL INDEX

Brake hydraulic line	BR-11	Connecting rod bushing clearance	EM-92	
Brake inspection	MA-30	Console box - See Instrument panel	IP-10	A
Brake lines and cables inspection	MA-29	CONSULT for all-mode 4WD	TF-30	
Brake master cylinder	BR-14	CONSULT for VDC	BRC-28	B
Brake switch	EC-529	Control units (terminal arrangement)	PG-69	
BRK/SW - Wiring diagram	EC-530	Control valve (A/T)	AT-34	B
Bulb specifications	LT-162	Control valve (Transfer)	TF-121	
Bumper, front	EI-13	Controller Area Network (CAN) RSU-6 , WT-9 , BRC-10 , SE-16 , LAN-15 , LAN-43 , LAN-73 , LAN-107 , LAN-136 , LAN-168		C
Bumper, rear	EI-15	Converter housing installation	AT-254 , AT-257	
C				
Camshaft	EM-43	COOL/F - Wiring diagram	EC-411	D
Camshaft inspection	EM-46	Coolant mixture ratio	MA-12	
Camshaft position sensor (PHASE)	EC-259	Coolant replacement	MA-13	E
CAN - Wiring diagram EC-134 , LAN-17 , LAN-45 , LAN-75 , LAN-109 , LAN-138 , LAN-170		Cooling circuit (engine)	CO-7	E
CAN (Controller Area Network) RSU-6 , WT-9 , BRC-10 , SE-16 , LAN-15 , LAN-43 , LAN-73 , LAN-107 , LAN-136 , LAN-168		Cooling fan	CO-13	
CAN communication EC-30 , EC-133 , AT-100 , RSU-6 , WT-9 , BRC-10 , SE-16 , LAN-15 , LAN-43 , LAN-73 , LAN-107 , LAN-136 , LAN-168		Cooling fan motor	EC-417	F
Canister-See EVAP canister	EC-606	Cooling unit (A/C evaporator)	ATC-142 , ATC-171 , MTC-118 , MTC-147	F
Center case (Transfer)	TF-115	Corrosion protection	BL-155	G
CHARGE - Wiring diagram	SC-18	Crankcase ventilation system - See Positive crankcase ventilation	EC-615	G
Charging system	SC-17	Crankshaft	EM-75	
Chassis and body maintenance	MA-20	Crankshaft position sensor (POS)	EC-253	H
Chassis and body maintenanceSchedule 1	MA-8	Crash zone sensor	SRS-54	H
Chassis and body maintenanceSchedule 2	MA-10	CVT shift lock system - Wiring diagram	AT-231	
CHIME - Wiring diagram	DI-45	Cylinder block boring	EM-95	I
Circuit breaker	PG-65	D		
Closed loop control	EC-26	D/LOCK - Wiring diagram	BL-20	J
Closed loop control (Bank 1)	EC-405	Daytime light system	LT-33	J
Closed loop control (Bank 2)	EC-405	Daytime running light - See Daytime light system ..	LT-33	
Clutch drum (Transfer)	TF-118	Diagnosis sensor unit	SRS-57	K
Clutch force release limit adjustment	TF-41	Diagnostic trouble code (DTC) for OBD system ..	EC-8	K
Clutch pressure switch (Transfer)	TF-97	Differential carrier assembly	RFD-12	
Coil spring (front)	FSU-9	Differential carrier disassembly	RFD-14	L
Collision diagnosis	SRS-59	Differential gear oil replacement	MA-26	
Combination lamp, front, removal and installation ..	LT-32	Dimensions	GI-49	
Combination lamp, rear, removal and installation ..	LT-117	Direct clutch solenoid valve	AT-154 , AT-157	
Combination meter	DI-5	Display and amp.assembly	ATC-59 , MTC-52	I DX
Combination switch	LT-92	Display Control Unit	AV-175	
COMBSW - Wiring diagram	LT-92	Dome light - See Interior lamp	LT-124	
COMM - Wiring diagram	AV-104	Door glass	GW-63 , GW-66	
COMPAS - Wiring diagram	DI-27	Door lock	BL-119	
Compass	DI-26	Door mirror lamp	LT-124	
Component Location (auto A/C)	ATC-37 , MTC-34	Door trim	EI-27	
Compressor clutch removal and installation ATC-165 , MTC-141		Door, front	BL-116 , GW-63	
Compressor mounting	ATC-164 , MTC-140	Door, rear	BL-116 , GW-66	
Compressor precaution	ATC-11 , MTC-10	Drive belt	EM-12	
Compressor special service tool	ATC-14 , MTC-13	Drive chain (Transfer)	TF-117	
Condenser	ATC-169 , MTC-145	Drive pinion diff. inspection	RFD-13	
Connecting rod	EM-92	Drive pinion height	RFD-18	
Connecting rod bearing clearance	EM-92	Drive shaft (rear)	RAX-7	
		Driver air bag	SRS-44	
		DTRL - Wiring diagram	LT-36	
		Duct and grilles	ATC-155 , MTC-131	
		DVD Player	AV-76	

ALPHABETICAL INDEX

E

ECM power supply [EC-126](#), [EC-359](#)
ECM/PW - Wiring diagram [EC-360](#)
ECTS - Wiring diagram [EC-165](#)
Electric sunroof [RF-10](#)
Electric throttle control actuator [EC-363](#), [EC-365](#)
Electrical load signal circuit [EC-590](#)
Electrical units location [PG-62](#)
Electronic ignition (EI) system [EC-27](#)
Engine control module (ECM) [EC-349](#)
Engine control system diagram and chart [EC-22](#)
Engine coolant [CO-9](#)
Engine coolant temperature sensor (ECTS) ... [EC-163](#),
[EC-176](#)
Engine oil [LU-7](#)
Engine oil filter replacement [MA-17](#)
Engine oil precautions [GI-6](#)
Engine oil replacement [MA-17](#)
Engine removal [EM-70](#)
Engine room cover [EM-11](#)
Engine serial number [GI-48](#)
ETC1 - Wiring diagram [EC-366](#)
ETC2 - Wiring diagram [EC-373](#)
ETC3 - Wiring diagram [EC-377](#)
EVAP canister [EC-606](#)
EVAP canister purge volume control solenoid valve ...
[EC-283](#), [EC-494](#)
EVAP canister vent control valve [EC-290](#), [EC-502](#)
EVAP control system (small leak) diagnosis .. [EC-274](#),
[EC-314](#)
EVAP control system pressure sensor [EC-297](#), [EC-300](#), [EC-306](#)
EVAP control system purge flow monitoring diagnosis
[EC-269](#)
EVAP vapor lines inspection [MA-19](#)
Evaporative emission (EVAP) system [EC-603](#)
Evaporator [ATC-171](#), [MTC-147](#)
Exhaust manifold [EM-19](#)
Exhaust system [EX-3](#)
Exhaust system inspection [EX-3](#)
Expansion valve [ATC-173](#), [MTC-149](#)

F

F/FOG - Wiring diagram [LT-66](#)
F/PUMP - Wiring diagram [EC-580](#)
Final drive pre-inspection [FFD-15](#), [RFD-13](#)
Final drive removal and installation .. [FFD-12](#), [RFD-10](#)
Flow charts [GI-27](#)
Fluid temperature sensor (A/T) [AT-128](#)
Fluids [MA-11](#)
Fluorescent leak detector [ATC-174](#), [MTC-150](#)
Fog lamp, front [LT-64](#)
Foot lamp [LT-125](#)
Front brake solenoid valve [AT-148](#), [AT-151](#)
Front bumper [EI-13](#)
Front case (Transfer) [TF-127](#)
Front combination lamp removal and installation [LT-32](#)

Front door [BL-116](#), [BL-119](#), [GW-63](#)
Front Door Trim [EI-27](#)
Front drive shaft (Transfer) [TF-117](#)
Front fog lamp [LT-64](#)
Front passenger air bag [SRS-49](#)
Front seat [SE-92](#)
Front seat belt [SB-3](#)
Front seat belt pre-tensioner [SRS-3](#), [SRS-56](#)
Front washer [WW-4](#)
Front wiper [WW-4](#)
FTTS - Wiring diagram [EC-225](#), [EC-230](#)
Fuel cut control (at no load high engine speed) [EC-29](#)
Fuel filter replacement [FL-5](#)
Fuel gauge [DI-5](#)
Fuel injector and fuel tube [EM-29](#)
Fuel level sensor [EC-332](#), [EC-334](#), [EC-336](#)
Fuel line inspection [FL-3](#)
Fuel precautions [GI-5](#)
Fuel pressure check [EC-45](#)
Fuel pressure release [EC-45](#)
Fuel pump [EC-579](#)
Fuel pump and gauge [FL-5](#)
Fuel system [FL-3](#)
Fuel tank [FL-10](#)
Fuel tank temperature sensor [EC-223](#), [EC-229](#)
Fuel tank vacuum relief valve [EC-606](#)
FUEL B1 - Wiring diagram [EC-208](#), [EC-217](#)
FUEL B2 - Wiring diagram [EC-209](#), [EC-218](#)
Fuse [PG-65](#), [PG-75](#)
Fuse and fusible link box [PG-75](#)
Fuse block [PG-74](#)
Fusible link [PG-65](#), [PG-75](#)

G

Garage jack and safety stand [GI-40](#)
Gauges [DI-5](#)
Generator [SC-17](#)
Glass [GW-11](#), [GW-63](#), [GW-66](#)
Glove box lamp [LT-147](#)
GPS antenna [AV-79](#)
Grease [MA-11](#)
Ground distribution [PG-29](#)

H

Handling precautions for plastics [BL-178](#)
Harness connector [PG-66](#)
Harness layout [PG-39](#)
Hazard warning lamp [LT-75](#)
Headlamp removal and installation [LT-32](#)
Heated oxygen sensor 2 (bank 1) [EC-184](#), [EC-194](#),
[EC-381](#), [EC-393](#)
Heated oxygen sensor 2 (bank 2) [EC-184](#), [EC-194](#),
[EC-381](#), [EC-393](#)
Heated oxygen sensor 2 heater (bank 1) [EC-136](#)
Heated oxygen sensor 2 heater (bank 2) [EC-136](#)
Heated seat [SE-87](#)
Heater and cooling unit (Heater core) . [ATC-142](#), [ATC-](#)

ALPHABETICAL INDEX

[145](#), [MTC-118](#), [MTC-121](#)

Heater unit (heater core) ... [ATC-142](#), [ATC-145](#), [MTC-118](#), [MTC-121](#)

Height (Dimensions) [GI-49](#)

HFC134a (R134a) system identification [ATC-7](#), [MTC-6](#)

HFC134a (R134a) system precaution .. [ATC-5](#), [MTC-4](#)

HFC134a (R134a) system service procedure [ATC-160](#), [MTC-136](#)

HFC134a (R134a) system service tools [ATC-14](#), [MTC-13](#)

HFC134a system service equipment precaution [ATC-11](#), [MTC-10](#)

High & low reverse clutch solenoid valve . [AT-160](#), [AT-163](#)

Homelink universal transceiver [BL-144](#)

Horn [WW-56](#)

HORN - Wiring diagram [WW-56](#)

HSEAT - Wiring diagram [SE-89](#)

I

IATS - Wiring diagram [EC-160](#)

Identification plate [GI-47](#)

Idle air volume learning [EC-43](#)

Idle mixture ratio [EC-32](#)

Idle speed [EC-32](#)

Idle speed control (ISC) [EC-340](#), [EC-342](#)

Ignition coil [EM-26](#), [EC-561](#)

Ignition control system [EC-561](#)

Ignition key hole illumination [LT-124](#)

Ignition timing [EC-32](#)

IGNSYS - Wiring diagram [EC-562](#)

ILL - Wiring diagram [LT-152](#)

Illumination [LT-146](#)

Illumination control [LT-161](#)

In vehicle sensor [ATC-126](#), [ATC-135](#)

INJECT - Wiring diagram [EC-574](#)

Injector [EC-573](#)

Input clutch solenoid valve [AT-142](#), [AT-145](#)

Instrument panel [IP-10](#)

Instrument panel speaker [AV-63](#)

Intake air temperature sensor [EC-159](#), [EC-179](#)

Intake door control linkage adjustment . [ATC-76](#), [ATC-78](#), [MTC-65](#), [MTC-68](#)

Intake door motor .. [ATC-74](#), [ATC-149](#), [MTC-64](#), [MTC-125](#)

Intake manifold [EM-15](#)

Intake sensor [ATC-131](#), [ATC-137](#), [MTC-109](#), [MTC-113](#)

Integrated homelink transmitter - See Homelink universal transceiver [BL-144](#)

Interior [EI-30](#)

Interior lamp [LT-124](#)

Interior lamp on-off control [LT-125](#)

Internal gear (Transfer) [TF-129](#)

IPDM (Intelligent power distribution module engine room) [PG-17](#)

J

Jacking points [GI-40](#)

Junction box (J/B) [PG-74](#)

K

Key illumination [LT-125](#)

KEYLES - Wiring diagram [BL-44](#)

Keyless entry system - See Multi-remote control system

[BL-38](#)

Knock sensor (KS) [EC-248](#)

KS - Wiring diagram [EC-249](#)

L

Length (Dimensions) [GI-49](#)

License lamp [LT-103](#)

Lifting points [GI-41](#)

Line pressure solenoid valve [AT-121](#)

Line pressure switch (Transfer) [TF-97](#)

Line pressure test (A/T) [AT-56](#)

Liquid gasket application [LU-2](#), [FFD-2](#)

Location of electrical units [PG-62](#)

Low coast brake solenoid valve [AT-166](#), [AT-169](#)

Low tire pressure warning system [WT-7](#)

Low tire pressure warning system - trouble diagnoses [WT-10](#)

Low tire pressure warning system - Wiring diagram [WT-10](#)

Lubricant (R134a) A/C [ATC-22](#), [MTC-21](#)

Lubricants [MA-11](#)

Lubrication circuit (engine) [LU-5](#)

Lubrication oil A/C [ATC-22](#), [MTC-21](#)

Lubrication-locks, hinges and hood latches [MA-32](#)

M

MAFS - Wiring diagram [EC-147](#), [EC-154](#)

Magnet clutch [ATC-102](#), [ATC-165](#), [MTC-92](#), [MTC-141](#)

MAIN - Wiring diagram [EC-126](#)

Main oil pump (Transfer) [TF-124](#)

Mainshaft (Transfer) [TF-118](#)

Maintenance (engine)Schedule 1 [MA-7](#)

Maintenance (engine)Schedule 2 [MA-9](#)

Major overhaul (Final drive) [FFD-14](#), [RFD-14](#)

Major overhaul (Transfer) [TF-112](#)

Map lamp [LT-125](#)

Mass air flow sensor (MAFS) [EC-144](#), [EC-152](#)

Meter [DI-5](#)

METER - Wiring diagram [DI-10](#)

MIL data link connectors circuit [EC-601](#)

MIL/DL - Wiring diagram [EC-601](#)

Misfire [EC-241](#)

Mode door control linkage adjustment .. [ATC-64](#), [MTC-56](#)

Mode door motor .. [ATC-62](#), [ATC-150](#), [MTC-55](#), [MTC-126](#)

Model variation [GI-46](#)

A

B

C

D

E

F

G

H

I

J

K

L

IDX

ALPHABETICAL INDEX

Multiport fuel injection (MFI) system [EC-25](#)
 Multiport fuel injection precautions [GI-5](#)
 Multi-remote control system [BL-38](#)
 Multi-remote control system - See Remote keyless entry system [BL-38](#)

N

NATS - Wiring diagram [BL-128](#)
 NAVI - Wiring diagram [AV-96](#)
 NAVI Control Unit [AV-174](#)
 Neutral-4LO switch [TF-98](#)
 Nissan torque demand (NTD) control system [EC-28](#)
 NVH troubleshooting (AX) [FAX-4](#)
 NVH troubleshooting (EM) [EM-9](#)
 NVH troubleshooting (Final drive) [RFD-5](#)
 NVH troubleshooting (Propeller shaft) [PR-3](#)
 NVH troubleshooting (RAX) [RAX-4](#)
 NVH troubleshooting (RSU) [RSU-5](#)
 NVH troubleshooting (ST) [PS-5](#)
 NVH troubleshooting (WT)NVH troubleshooting (WT) . [WT-3](#)
 NVIS (Nissan vehicle immobilizer system) [BL-125](#)

O

O2H2B1 - Wiring diagram [EC-138](#)
 O2H2B2 - Wiring diagram [EC-140](#)
 O2S2B1 - Wiring diagram .. [EC-186](#), [EC-197](#), [EC-384](#), [EC-396](#)
 O2S2B2 - Wiring diagram .. [EC-188](#), [EC-199](#), [EC-386](#), [EC-398](#)
 Oil cooler (engine) [LU-10](#)
 Oil filter [LU-9](#)
 Oil filter (Transfer) [TF-109](#)
 Oil pan (engine) [EM-22](#)
 Oil pressure (engine) [LU-7](#)
 Oil pressure relief valve (engine) [LU-5](#)
 Oil pump (engine) [LU-12](#)
 Oil seal replacement (engine) [EM-56](#)
 Oil seal replacement (front of final drive) [FFD-8](#), [RFD-6](#)
 Oil seal replacement (side of final drive) [FFD-10](#), [RFD-8](#)
 ORVR (On-board Refueling Vapor Recovery) . [EC-610](#)
 Overheat [EC-408](#)

P

P/SCKT - Wiring diagram [WW-54](#)
 Pantograph jack [GI-40](#)
 Park/Neutral position switch [EC-524](#)
 Park/neutral position switch (A/T) [AT-106](#)
 Parking brake control [PB-4](#)
 PCV (positive crankcase ventilation) [EC-615](#)
 Personal lamp [LT-125](#)
 PGC/V - Wiring diagram [EC-285](#), [EC-496](#)
 Pinion bearing preload diff. [RFD-22](#)
 Piston pin inspection [EM-90](#)
 Piston ring inspection [EM-91](#)

Piston to bore clearance [EM-95](#)
 Planetary carrier (Transfer) [TF-129](#)
 PNP/SW - Wiring diagram [EC-526](#)
 POS - Wiring diagram [EC-254](#)
 POWER - Wiring diagram [PG-6](#)
 Power door lock [BL-16](#)
 Power seat [SE-83](#)
 Power steering fluid level [MA-31](#)
 Power steering gear [PS-14](#)
 Power steering oil pump [PS-25](#)
 Power steering system bleeding [PS-6](#)
 Power supply routing [PG-4](#)
 Power window [GW-15](#)
 PRE/SE - Wiring diagram [EC-302](#), [EC-308](#)
 Precautions (General) [GI-3](#)
 Precautions in repairing high strength steel [BL-181](#)
 Pressure switch 1 [AT-151](#), [AT-172](#)
 Pressure switch 2 [AT-169](#)
 Pressure switch 3 [AT-145](#), [AT-175](#)
 Pressure switch 5 [AT-157](#), [AT-178](#)
 Pressure switch 6 [AT-163](#), [AT-181](#)
 Pressure test (A/T) [AT-56](#)
 Propeller shaft [PR-4](#), [PR-8](#)
 Propeller shaft inspection [MA-26](#)
 Propeller shaft on vehicle service [PR-8](#)
 Propeller shaft vibration [PR-4](#), [PR-8](#)
 PS/SEN - Wiring diagram [EC-345](#)

R

Radiator [CO-10](#)
 Radio - See Audio [AV-6](#)
 Rear Audio Remote Control Unit [AV-64](#)
 Rear axle [RAX-5](#)
 Rear bumper [EI-15](#)
 Rear case (Transfer) [TF-114](#)
 Rear combination lamp removal and installation ... [LT-117](#)
 Rear cover packing replacement diff. [RFD-24](#)
 Rear door [BL-116](#), [GW-66](#)
 Rear seat [SE-99](#)
 Rear seat belt [SB-6](#)
 Rear suspension [RSU-25](#)
 Rear washer [WW-33](#)
 Rear window defogger [GW-73](#)
 Rear wiper [WW-33](#)
 Refrigerant connection precaution [ATC-7](#), [MTC-6](#)
 Refrigerant discharging evacuating charging [ATC-160](#), [MTC-136](#)
 Refrigerant general precaution [ATC-6](#), [MTC-5](#)
 Refrigerant lines . [ATC-160](#), [ATC-168](#), [ATC-169](#), [MTC-136](#), [MTC-144](#), [MTC-145](#)
 Refrigerant pressure sensor . [EC-585](#), [ATC-107](#), [ATC-169](#), [MTC-97](#), [MTC-145](#)
 Relay box [PG-76](#)
 Remote keyless entry system [BL-38](#)
 Removal and installation (A/T) [AT-252](#), [AT-255](#)
 Removal and installation (Transfer) [TF-111](#)
 Revolution sensor (A/T) [AT-109](#)

ALPHABETICAL INDEX

Ring gear diff. inspection	RFD-13
Road wheel size	GI-49
Rocker cover	EM-33
Room lamp	LT-124
Room lamp - See Interior lamp	LT-124
ROOM/L - Wiring diagram	LT-130
RP/SEN - Wiring diagram	EC-586

S

SEAT - Wiring diagram	SE-83 , SE-84
Seat belt inspection	SB-10 , MA-33
Seat belt pre-tensioner	SRS-56
Seat belt, front	SB-3
Seat belt, rear	SB-6
Seat, front	SE-92
Seat, rear	SE-99
Self-diagnosis (Transfer)	TF-27
SEN/PW - Wiring diagram	EC-423
SHIFT - Wiring diagram	AT-231
Shift lock system	AT-230
Shock absorber (front)	FSU-9
Shock absorber (rear)	RSU-34
Side air bag (satellite) sensor	SRS-55
Side bearing preload diff.	RFD-19
Side curtain air bag	SRS-52
Side trim	EI-30
SMJ (super multiple junction)	PG-72
SONAR - Wiring diagram	DI-62
Spare tire size	GI-49
Spark plug	EM-27
Spark plug replacement	MA-18
Specification value	EC-121
Speedometer	DI-5
Spiral cable	SRS-46
SROOF - Wiring diagram	RF-13
SRS - See Supplemental Restraint System	SRS-5
SRS - Wiring diagram	SRS-12
SRS Trouble diagnoses	SRS-8
Stabilizer bar (front)	FSU-11
Stabilizer bar (rear)	RSU-41
Stall test (A/T)	AT-55
Standardized relay	PG-70
START - Wiring diagram	SC-11
Starting system	SC-10
Steering gear, linkage and transfer gear inspection	MA-30
Steering linkage	PS-14
Steering wheel and column	PS-7
Step lamp	LT-125
Stop lamp	LT-98
Stop lamp switch	EC-529
STOP/L - Wiring diagram	LT-99
Strut (front)	FSU-9
Sun gear (Transfer)	TF-129
Sun roof, electric	RF-10
Sunload sensor	ATC-129
Sunroof	RF-23
Supplemental Restraint System	SRS-5

Supplemental restraint system - Wiring diagram ..	SRS-12
Symbols and abbreviations	GI-9 , GI-22

T

Tachometer	DI-5
Tail lamp	LT-103
TAIL/L - Wiring diagram	LT-105
TCM circuit diagram	AT-48
TCM inspection table	AT-87
TCS - Wiring diagram	BRC-16
TCS (traction control system)	BRC-7
TCS component parts and connector location	BRC-14
TCS wheel sensors	BRC-14
Theft warning system - See Vehicle security (Theft warning) system	BL-67
Thermometer	DI-26
Three way catalyst	EM-19
Three way catalyst function (Bank 1)	EC-265
Three way catalyst function (Bank 2)	EC-265
Three way catalyst precautions	GI-5
Throttle control motor	EC-376
Throttle control motor relay	EC-371
Throttle position sensor (TPS) ...	EC-169 , EC-234 , EC-418 , EC-420 , EC-547
Tie-rod	PS-14
Timing chain	EM-35
Tire rotation	MA-29
Tire size	GI-49
Tooth contact diff.	RFD-20
Torque converter installation	AT-253 , AT-254 , AT-256 , AT-257
Torque convertor clutch solenoid valve	AT-115 , AT-118
Tow truck towing	GI-42
Towing point	GI-43
TPS1 - Wiring diagram	EC-236
TPS2 - Wiring diagram	EC-171
TPS3 - Wiring diagram	EC-549
Traction control system - Wiring diagram	BRC-16
Transfer control device	TF-106
Transfer control unit inspection table	TF-54
Transfer dropping resistor	TF-97
Transfer fluid temperature sensor	TF-97
Transfer motor	TF-108
Transfer motor relay	TF-98
Transfer oil replacement	MA-24
Transfer serial number	GI-48
Transmission serial number	GI-48
TRANSMT - Wiring diagram	BL-144
Tread-FR&RR (Dimensions)	GI-49
Trim	EI-30
Trouble diagnoses	GI-9
Turbine revolution sensor	AT-131
TURN - Wiring diagram	LT-78
Turn signal lamp	LT-75
Two-pole lift	GI-41

A
B
C
D
E
F
G
H
I
J
K
L

INDEX

ALPHABETICAL INDEX

V

Vacuum hose (brake system)	BR-19
Valve clearance	EM-52
Valve guide	EM-65
Vanity mirror lamp	LT-124
VDC (vehicle dynamics control)	BRC-7
VDC -Wiring diagram	BRC-16
Vehicle identification number	GI-47
Vehicle recovery (freeing a stuck vehicle)	GI-43
Vehicle security (theft warning) system	BL-67
Vehicle speed sensor (VSS)	EC-338
VEHSEC - Wiring diagram	BL-72
VENT/V - Wiring diagram	EC-292 , EC-504
Video Monitor	AV-77
Viscosity number (SAE)	MA-12

W

W/ANT - Wiring diagram	AV-66
Wait detection switch	TF-98
WARN - Wiring diagram	DI-31
Warning chime	DI-42
Warning lamps	DI-30
Washer, front	WW-4
Washer, rear	WW-33
Water pump	CO-15
Water temperature gauge	DI-5
Wheel alignment (front)	FSU-6
Wheel alignment (rear)	RSU-27
Wheel balance	MA-27
Wheel bearing (front)	FAX-5
Wheel bearing (rear)	RAX-5
Wheel hub (rear)	RAX-5
Wheel size	GI-49
Wheelbase (Dimensions)	GI-49
Width (Dimensions)	GI-49
WINDOW - Wiring diagram	GW-22
Window antenna	AV-65
Window, door	GW-63 , GW-66
Windshield	GW-11
WIP/R - Wiring diagram	WW-37
WIPER - Wiring diagram	WW-9
Wiper, front	WW-4
Wiper, rear	WW-33
Wiring Diagram (Cell code) list	PG-60
Wiring diagram (Transfer)	TF-18
Wiring diagrams	GI-15
WT-T/WARN - Wiring diagram	WT-10