

SECTION **IDX**
ALPHABETICAL INDEX

A

B

C

D

E

F

G

H

I

J

K

L

IDX

ALPHABETICAL INDEX

Numerics

2-4WD shift solenoid valve [TF-94](#), [TF-152](#), [TF-165](#)
4WD - Wiring diagram [TF-24](#)
4WD shift switch [TF-66](#)
4WD solenoid valve [TF-90](#), [TF-152](#), [TF-165](#)
4WD system description [TF-15](#)
4WD system diagram [TF-19](#)

A

A/C air flow [ATC-29](#), [MTC-28](#)
A/C compressor clutch removal and installation .. [ATC-179](#), [MTC-154](#)
A/C compressor mounting [ATC-178](#), [MTC-153](#)
A/C compressor precaution [ATC-11](#), [MTC-11](#)
A/C compressor special service tool . [ATC-14](#), [MTC-14](#)
A/C control operation (auto A/C) [ATC-26](#), [MTC-26](#)
A/C diagnostic work flow (auto A/C) ... [ATC-131](#), [MTC-118](#)
A/C evaporator [ATC-185](#), [MTC-160](#)
A/C HFC134a (R134a) system identification [ATC-7](#), [MTC-7](#)
A/C HFC134a (R134a) system precaution [ATC-5](#), [MTC-5](#)
A/C HFC134a (R134a) system service procedure [ATC-174](#), [MTC-149](#)
A/C HFC134a (R134a) system service tools .. [ATC-14](#), [MTC-14](#)
A/C HFC134a system service equipment precaution ... [ATC-11](#), [MTC-11](#)
A/C lubricant (R134a) [ATC-22](#), [MTC-22](#)
A/C lubrication oil [ATC-22](#), [MTC-22](#)
A/C operational check [ATC-57](#), [ATC-60](#), [MTC-53](#), [MTC-55](#)
A/C self-diagnoses (auto A/C) [ATC-55](#), [ATC-131](#), [MTC-118](#)
A/C service data specification [ATC-192](#), [MTC-167](#)
A/C trouble diagnoses (auto A/C) [ATC-33](#), [MTC-32](#)
A/C, A - Wiring diagram [ATC-43](#), [MTC-42](#)
A/T fluid checking [AT-13](#), [AT-50](#), [MA-22](#)
A/T fluid cooler cleaning [AT-13](#)
A/T fluid replacement [AT-13](#), [MA-24](#)
A/T fluid temperature sensor [AT-126](#)
A/T IND - Wiring diagram [DI-40](#)
A/T indicator [DI-40](#)
A/T shift lock system [AT-222](#)
A/T trouble diagnoses [AT-41](#)
A/T Wiring diagram AT - CAN [AT-96](#)
A/T Wiring diagram AT - FTS [AT-127](#)
A/T Wiring diagram AT - MAIN [AT-168](#)
A/T Wiring diagram AT - NONDTC [AT-177](#)
A/T Wiring diagram AT - PNP/SW [AT-105](#)
A/T Wiring diagram AT - STSIG [AT-100](#)
A/T Wiring diagram AT - VSS A/T [AT-110](#)
ABS - Wiring diagram [BRC-16](#)
ABS (anti-lock brake system) [BRC-7](#)
Accelerator control system [ACC-2](#)
Accelerator pedal position (APP) sensor . [EC-570](#), [EC-](#)

[576](#), [EC-590](#)

Accelerator pedal released position learning [EC-89](#)
AF1B1-Wiring diagram [EC-459](#), [EC-468](#), [EC-477](#), [EC-487](#), [EC-498](#), [EC-508](#), [EC-520](#)
AF1B2-Wiring diagram [EC-461](#), [EC-470](#), [EC-479](#), [EC-489](#), [EC-500](#), [EC-510](#), [EC-522](#)
AF1HB1-Wiring diagram [EC-384](#)
AF1HB2-Wiring diagram [EC-386](#)
Aiming adjustment [LT-28](#), [LT-72](#)
Air bag [SRS-3](#)
Air cleaner and air duct [EM-14](#)
Air cleaner filter replacement [MA-16](#)
Air conditioner cut control [EC-28](#)
Air flow meter - See Mass air flow sensor [EC-171](#), [EC-180](#)
Air fuel ratio sensor 1 .. [EC-457](#), [EC-466](#), [EC-475](#), [EC-485](#), [EC-495](#), [EC-505](#), [EC-517](#)
Air fuel ratio sensor 1 heater [EC-383](#)
Air mix. door motor [ATC-70](#), [MTC-64](#)
Ambient sensor [ATC-136](#), [ATC-147](#)
Angular tightening application [EM-3](#)
APPS1 - Wiring diagram [EC-572](#)
APPS2 - Wiring diagram [EC-578](#)
APPS3 - Wiring diagram [EC-592](#)
ASC/BS - Wiring diagram [EC-552](#)
ASC/SW - Wiring diagram [EC-545](#)
ASCBOF - Wiring diagram [EC-629](#)
ASCD [EC-29](#)
ASCD (automatic speed control device) [ACS-2](#)
ASCD brake switch [EC-550](#), [EC-628](#)
ASCD indicator lamp [EC-635](#)
ASCD steering switch [EC-543](#)
ASCIND - Wiring diagram [EC-636](#)
ATP switch [TF-107](#), [TF-110](#), [TF-115](#)
Audio [AV-6](#)
AUDIO - Wiring diagram [AV-13](#)
AUT/DP - Wiring diagram [SE-20](#)
Auto air conditioner - Wiring diagram [ATC-43](#), [MTC-42](#)
Auto anti-dazzling inside mirror [GW-70](#), [GW-71](#)
Autolamp [LT-44](#)
Automatic amplifier [ATC-61](#), [MTC-56](#)
Automatic drive positioner [SE-11](#)
Automatic transmission number [GI-49](#)
AV and NAVI control unit [AV-79](#)
AV communication line [AV-103](#)

B

Back door [BL-93](#)
Back door trim [EI-29](#)
Back sonar [DI-59](#)
BACK/L - Wiring diagram [LT-100](#)
Back-up lamp [LT-100](#)
Ball joint (front) [FSU-15](#)
Basic inspection [EC-71](#)
Battery [SC-4](#)
Battery/Starting/Charging System Tester [SC-6](#), [SC-12](#), [SC-19](#)
BCM (Body control module) [BCS-3](#)

ALPHABETICAL INDEX

Block heater	EM-73
Blower motor ...	ATC-93 , ATC-151 , MTC-82 , MTC-126
Body alignment	BL-169
Body component parts	BL-156
Body construction	BL-168
Body exterior paint color	BL-155
Body mounting	BL-154
Body repair	BL-155
Body sealing	BL-165
Bose speaker amp.	AV-8
Brake booster	BR-16
Brake fluid level	MA-28
Brake hydraulic line	BR-11
Brake inspection	MA-28
Brake lines and cables inspection	MA-28
Brake master cylinder	BR-14
Brake switch	EC-550 , EC-565 , EC-628
BRK/SW - Wiring diagram	EC-566
Bulb specifications	LT-162
Bumper, front	EI-14
Bumper, rear	EI-16

C

Camshaft	EM-43
Camshaft inspection	EM-46
Camshaft position sensor (PHASE)	EC-288
CAN - Wiring diagram	EC-161 , LAN-18 , LAN-47 , LAN-79 , LAN-113 , LAN-145 , LAN-179
CAN (Controller Area Network)	BRC-10 , SE-17 , LAN-16 , LAN-45 , LAN-77 , LAN-111 , LAN-143 , LAN-177
CAN communication ...	EC-31 , EC-160 , AT-95 , TF-20 , TF-113 , BRC-10 , SE-17 , LAN-16 , LAN-45 , LAN-77 , LAN-111 , LAN-143 , LAN-177
Canister-See EVAP canister	EC-35
Center case (Transfer)	TF-152 , TF-165
CHARGE - Wiring diagram	SC-18
Charging system	SC-17
Chassis and body maintenance	MA-21
Chassis and body maintenanceSchedule 1	MA-8
Chassis and body maintenanceSchedule 2	MA-10
CHIME - Wiring diagram	DI-45
Circuit breaker	PG-65
Closed loop control	EC-25
Closed loop control (Bank 1)	EC-434
Closed loop control (Bank 2)	EC-434
Clutch drum (Transfer)	TF-152 , TF-165
Clutch pressure switch (Transfer)	TF-152 , TF-165
Coil spring (front)	FSU-10
Collision diagnosis	SRS-61
Combination lamp, front, removal and installation ..	LT-30
Combination lamp, rear, removal and installation ..	LT-116
Combination meter	DI-5
Combination switch	LT-91
COMBSW - Wiring diagram	LT-91
COMM - Wiring diagram	AV-103
COMPAS - Wiring diagram	DI-27

Compass	DI-26
Component Location (auto A/C)	ATC-39 , MTC-38
Compressor clutch removal and installation ..	ATC-179 , MTC-154
Compressor mounting	ATC-178 , MTC-153
Compressor precaution	ATC-11 , MTC-11
Compressor special service tool	ATC-14 , MTC-14
Condenser	ATC-184 , MTC-159
Connecting rod	EM-91
Connecting rod bearing clearance	EM-91
Connecting rod bushing clearance	EM-91
Console box - See Instrument panel	IP-10
CONSULT for VDC	BRC-28
CONSULT general information	GI-37
CONSULT-II for engine	EC-124
Control units (terminal arrangement)	PG-70
Control valve (A/T)	AT-35
Control valve (Transfer)	TF-152 , TF-165
Controller Area Network (CAN)	BRC-10 , SE-17 , LAN-16 , LAN-45 , LAN-77 , LAN-111 , LAN-143 , LAN-177
Converter housing installation	AT-246 , AT-249
COOL/F - Wiring diagram	EC-440
Coolant mixture ratio	MA-12
Coolant replacement	MA-13
Cooling circuit (engine)	CO-8
Cooling fan	CO-15
Cooling fan motor	EC-447
Cooling unit (A/C evaporator)	ATC-155 , ATC-185 , MTC-130 , MTC-160
Corrosion protection	BL-162
Crankcase ventilation system - See Positive crankcase ventilation	EC-45
Crankshaft	EM-74
Crankshaft position sensor (POS)	EC-281
Crash zone sensor	SRS-56
CVT shift lock system - Wiring diagram	AT-223
Cylinder block	EM-73
Cylinder block boring	EM-94

D

D/LOCK - Wiring diagram	BL-20
Data link connector for Consult	EC-126 , EC-137
Daytime light system	LT-31
Daytime running light - See Daytime light system ..	LT-31
Diagnosis sensor unit	SRS-59
Diagnostic trouble code (DTC) for OBD system ..	EC-8 , EC-52
Diagnostic trouble code (DTC) inspection priority chart ..	EC-100
Differential carrier assembly	RFD-12
Differential carrier disassembly	RFD-14
Differential gear oil replacement	MA-25
Dimensions	GI-50
Direct clutch solenoid valve	AT-148 , AT-150
Display and amp.assembly	ATC-61 , MTC-56
Display Control Unit	AV-174
Dome light - See Interior lamp	LT-123

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

Door glass	GW-62 , GW-65	Evaporator	ATC-185 , MTC-160
Door lock	BL-126	Exhaust manifold	EM-19
Door mirror lamp	LT-123	Exhaust system	EX-3
Door trim	EI-29	Exhaust system inspection	EX-3
Door, front	BL-123 , GW-62	Expansion valve	ATC-187 , MTC-162
Door, rear	BL-123 , GW-65		
Drive belt	EM-12		
Drive chain (Transfer)	TF-147 , TF-174		
Drive pinion diff. inspection	RFD-13		
Drive pinion height	RFD-18		
Drive shaft (rear)	RAX-7		
Driver air bag	SRS-46		
DTC work support	EC-133		
DTRL - Wiring diagram	LT-34		
Duct and grilles	ATC-169 , MTC-144		
DVD Player	AV-75		

E

ECM input/output signal	EC-116 , EC-138
ECM power supply	EC-154 , EC-390
ECM relay	EC-154
ECM/PW - Wiring diagram	EC-391
ECTS - Wiring diagram	EC-194
Electric sunroof	RF-10
Electric throttle control actuator	EC-394 , EC-396
Electrical load signal circuit	EC-627
Electrical units location	PG-62
Electronic ignition (EI) system	EC-26
Engine control circuit diagram	EC-114
Engine control component parts location	EC-107
Engine control module (ECM)	EC-380
Engine control system diagram	EC-23
Engine coolant	CO-10
Engine coolant temperature sensor (ECTS) ...	EC-192 , EC-205
Engine fail-safe system	EC-102
Engine oil	LU-7
Engine oil filter replacement	MA-17
Engine oil precautions	GI-7
Engine oil replacement	MA-17
Engine removal	EM-69
Engine room cover	EM-11
Engine serial number	GI-49
ETC1 - Wiring diagram	EC-397
ETC2 - Wiring diagram	EC-404
ETC3 - Wiring diagram	EC-408
EVAP canister	EC-35
EVAP canister purge volume control solenoid valve ...	EC-315 , EC-529
EVAP canister vent control valve	EC-322 , EC-537
EVAP control system (small leak) diagnosis ..	EC-306 , EC-346 , EC-354
EVAP control system pressure sensor	EC-329 , EC-332 , EC-338
EVAP control system purge flow monitoring diagnosis	EC-301
EVAP vapor lines inspection	MA-20
Evaporative emission (EVAP) system	EC-32

F

F/FOG - Wiring diagram	LT-64
F/PUMP - Wiring diagram	EC-617
Final drive pre-inspection	FFD-14 , RFD-13
Final drive removal and installation ..	FFD-11 , RFD-10
Flow charts	GI-27
Fluid temperature sensor (A/T)	AT-126
Fluids	MA-11
Fluorescent leak detector	ATC-188 , MTC-163
Fog lamp, front	LT-62
Foot lamp	LT-124
Freeze frame data	EC-53 , EC-127
Front brake solenoid valve	AT-144 , AT-146
Front bumper	EI-14
Front case (Transfer)	TF-147 , TF-174
Front combination lamp removal and installation	LT-30
Front door	BL-123 , BL-126 , GW-62
Front Door Trim	EI-29
Front drive shaft (Transfer)	TF-147 , TF-174
Front fog lamp	LT-62
Front passenger air bag	SRS-51
Front seat	SE-89
Front seat belt	SB-3
Front seat belt pre-tensioner	SRS-3 , SRS-58
Front washer	WW-4
Front wiper	WW-4
FTTS - Wiring diagram	EC-252 , EC-257
Fuel cut control (at no load high engine speed)	EC-27
Fuel filter replacement	FL-5
Fuel gauge	DI-5
Fuel injection system (Bank 1)	EC-233 , EC-242
Fuel injection system (Bank 2)	EC-233 , EC-242
Fuel injector and fuel tube	EM-29
Fuel level sensor	EC-363 , EC-365 , EC-367
Fuel line inspection	FL-3
Fuel pressure check	EC-92
Fuel pressure release	EC-92
Fuel pump	EC-616
Fuel pump and gauge	FL-5
Fuel system	FL-3
Fuel tank	FL-10
Fuel tank temperature sensor	EC-250 , EC-256
Fuel tank vacuum relief valve	EC-35
FUELB1 - Wiring diagram	EC-235 , EC-244
FUELB2 - Wiring diagram	EC-236 , EC-245
Fuse	PG-65 , PG-76
Fuse and fusible link box	PG-76
Fuse block	PG-75
Fusible link	PG-65 , PG-76

ALPHABETICAL INDEX

G

Garage jack and safety stand [GI-40](#)
 Gauges [DI-5](#)
 Generator [SC-17](#)
 Generic scan tool (GST) [EC-136](#)
 Glass [GW-11](#), [GW-62](#), [GW-65](#)
 Glove box lamp [LT-147](#)
 GPS antenna [AV-78](#)
 Grease [MA-11](#)
 Ground distribution [PG-29](#)

H

Handling precautions for plastics [BL-185](#)
 Harness connector [PG-66](#)
 Harness layout [PG-39](#)
 Hazard warning lamp [LT-74](#)
 Headlamp removal and installation [LT-30](#)
 Heated oxygen sensor 2 (bank 1) [EC-213](#), [EC-222](#),
[EC-412](#), [EC-423](#)
 Heated oxygen sensor 2 (bank 2) [EC-213](#), [EC-222](#),
[EC-412](#), [EC-423](#)
 Heated oxygen sensor 2 heater (bank 1) [EC-163](#)
 Heated oxygen sensor 2 heater (bank 2) [EC-163](#)
 Heated seat [SE-86](#)
 Heater and cooling unit (Heater core) . [ATC-155](#), [ATC-159](#), [MTC-130](#), [MTC-134](#)
 Heater unit (heater core) [ATC-155](#), [ATC-159](#), [MTC-130](#), [MTC-134](#)
 Height (Dimensions) [GI-50](#)
 HFC134a (R134a) system identification [ATC-7](#), [MTC-7](#)
 HFC134a (R134a) system precaution .. [ATC-5](#), [MTC-5](#)
 HFC134a (R134a) system service procedure [ATC-174](#),
[MTC-149](#)
 HFC134a (R134a) system service tools [ATC-14](#), [MTC-14](#)
 HFC134a system service equipment precaution [ATC-11](#), [MTC-11](#)
 High & low reverse clutch solenoid valve . [AT-152](#), [AT-154](#)
 Homelink universal transceiver [BL-151](#)
 Horn [WW-59](#)
 HORN - Wiring diagram [WW-59](#)
 How to erase DTC for OBD system [EC-61](#)
 HSEAT - Wiring diagram [SE-87](#)

I

IATS - Wiring diagram [EC-189](#)
 Identification plate [GI-48](#)
 Idle air volume learning [EC-90](#)
 Idle mixture ratio [EC-78](#)
 Idle speed [EC-71](#), [EC-76](#)
 Idle speed control (ISC) [EC-371](#), [EC-373](#)
 Ignition coil [EM-26](#), [EC-598](#)
 Ignition control system [EC-598](#)
 Ignition key hole illumination [LT-123](#)
 Ignition timing [EC-71](#), [EC-76](#)

IGNSYS - Wiring diagram [EC-599](#)
 ILL - Wiring diagram [LT-152](#)
 Illumination [LT-146](#)
 In vehicle sensor [ATC-139](#), [ATC-148](#)
 INJECT - Wiring diagram [EC-611](#)
 Injector [EC-610](#)
 Input clutch solenoid valve [AT-140](#), [AT-142](#)
 Instrument panel [IP-10](#)
 Instrument panel speaker [AV-62](#)
 Intake air temperature sensor [EC-188](#), [EC-208](#)
 Intake door control linkage adjustment . [ATC-85](#), [ATC-88](#), [MTC-74](#), [MTC-78](#)
 Intake door motor . [ATC-83](#), [ATC-163](#), [MTC-73](#), [MTC-138](#)
 Intake manifold [EM-15](#)
 Intake sensor [ATC-144](#), [ATC-150](#), [MTC-121](#), [MTC-125](#)
 Integrated homelink transmitter - See Homelink universal transceiver [BL-151](#)
 Interior [EI-32](#)
 Interior lamp [LT-123](#)
 Interior lamp on-off control [LT-124](#)
 Internal gear (Transfer) [TF-147](#), [TF-174](#)
 IPDM (Intelligent power distribution module engine room) [PG-17](#)
 IVIS (Infiniti vehicle immobilizer system) precautions ... [GI-3](#)

J

Jacking points [GI-40](#)
 Junction box (J/B) [PG-75](#)

K

Key illumination [LT-124](#)
 KEYLES - Wiring diagram [BL-45](#)
 Knock sensor (KS) [EC-276](#)
 KS - Wiring diagram [EC-277](#)

L

Length (Dimensions) [GI-50](#)
 License lamp [LT-102](#)
 Lifting points [GI-41](#)
 Line pressure solenoid valve [AT-119](#)
 Line pressure switch (Transfer) [TF-152](#), [TF-165](#)
 Line pressure test (A/T) [AT-51](#)
 Location of electrical units [PG-62](#)
 Low coast brake solenoid valve [AT-156](#), [AT-158](#)
 Low tire pressure warning system [WT-8](#)
 Low tire pressure warning system - trouble diagnoses [WT-11](#)
 Low tire pressure warning system - Wiring diagram [WT-11](#)
 Lubricant (R134a) A/C [ATC-22](#), [MTC-22](#)
 Lubricants [MA-11](#)
 Lubrication circuit (engine) [LU-5](#)
 Lubrication oil A/C [ATC-22](#), [MTC-22](#)
 Lubrication-locks, hinges and hood latches [MA-31](#)

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

M

MAFS - Wiring diagram [EC-174](#), [EC-182](#)
Magnet clutch [ATC-115](#), [ATC-179](#), [MTC-103](#), [MTC-154](#)
MAIN - Wiring diagram [EC-154](#)
Main oil pump (Transfer) [TF-152](#), [TF-165](#)
Mainshaft (Transfer) [TF-152](#), [TF-165](#)
Maintenance (engine)Schedule 1 [MA-7](#)
Maintenance (engine)Schedule 2 [MA-9](#)
Major overhaul (Final drive) [FFD-13](#), [RFD-14](#)
Major overhaul (Transfer) [TF-144](#)
Malfunction indicator lamp (MIL) [EC-63](#)
Map lamp [LT-124](#)
Mass air flow sensor (MAFS) [EC-171](#), [EC-180](#)
Meter [DI-5](#)
METER - Wiring diagram [DI-10](#)
MIL data link connectors circuit [EC-638](#)
MIL/DL - Wiring diagram [EC-638](#)
MIRROR - Wiring diagram [GW-96](#)
Misfire [EC-268](#)
Mode door control linkage adjustment .. [ATC-66](#), [MTC-60](#)
Mode door motor .. [ATC-64](#), [ATC-164](#), [MTC-59](#), [MTC-139](#)
Model variation [GI-46](#)
Multiport fuel injection (MFI) system [EC-24](#)
Multiport fuel injection precautions [GI-6](#)
Multi-remote control system - See Remote keyless entry system [BL-39](#)

N

NATS - Wiring diagram [BL-135](#)
NAVI - Wiring diagram [AV-95](#)
NAVI Control Unit [AV-173](#)
Neutral-4LO switch [TF-62](#)
NVH troubleshooting (AX) [FAX-4](#)
NVH troubleshooting (EM) [EM-9](#)
NVH troubleshooting (Final drive) [RFD-5](#)
NVH troubleshooting (Propeller shaft) [PR-3](#)
NVH troubleshooting (RAX) [RAX-4](#)
NVH troubleshooting (RSU) [RSU-5](#)
NVH troubleshooting (ST) [PS-5](#)
NVH troubleshooting (Transfer) [TF-10](#)
NVH troubleshooting (WT)NVH troubleshooting (WT) . [WT-4](#)
NVIS (Nissan vehicle immobilizer system) [BL-132](#)
NVIS (Nissan vehicle immobilizer system) precautions [GI-3](#)

O

O2H2B1 - Wiring diagram [EC-165](#)
O2H2B2 - Wiring diagram [EC-167](#)
O2S2B1 - Wiring diagram .. [EC-215](#), [EC-225](#), [EC-415](#), [EC-426](#)
O2S2B2 - Wiring diagram .. [EC-217](#), [EC-227](#), [EC-417](#), [EC-428](#)
Oil cooler (engine) [LU-11](#)

Oil filter [LU-10](#)
Oil filter (Transfer) [TF-141](#)
Oil pan (engine) [EM-22](#)
Oil pressure (engine) [LU-7](#)
Oil pressure relief valve (engine) [LU-5](#)
Oil pump (engine) [LU-13](#)
Oil seal replacement (engine) [EM-55](#)
Oil seal replacement (front of final drive) [FFD-7](#), [RFD-6](#)
Oil seal replacement (side of final drive) [FFD-9](#), [RFD-8](#)
On board diagnostic system [EC-48](#)
ORVR (On-board Refueling Vapor Recovery) .. [EC-39](#)
Overheat [EC-437](#)

P

P/SCKT - Wiring diagram [WW-57](#)
Pantograph jack [GI-40](#)
Park/Neutral position switch [EC-560](#)
Park/neutral position switch (A/T) [AT-104](#)
Parking brake control [PB-4](#)
PCV (positive crankcase ventilation) [EC-45](#)
Personal lamp [LT-124](#)
PGC/V - Wiring diagram [EC-317](#), [EC-531](#)
PHASE - Wiring diagram [EC-290](#)
Pinion bearing preload diff. [RFD-22](#)
Piston pin inspection [EM-89](#)
Piston ring inspection [EM-90](#)
Piston to bore clearance [EM-94](#)
Planetary carrier (Transfer) [TF-147](#), [TF-174](#)
PNP/SW - Wiring diagram [EC-562](#)
POS - Wiring diagram [EC-283](#)
POWER - Wiring diagram [PG-6](#)
Power door lock [BL-16](#)
Power seat [SE-82](#)
Power steering fluid level [MA-29](#)
Power steering gear [PS-14](#)
Power steering oil pump [PS-25](#)
Power steering pressure (PSP) sensor [EC-375](#)
Power steering system bleeding [PS-6](#)
Power supply routing [PG-4](#)
Power window [GW-15](#)
PRE/SE - Wiring diagram [EC-334](#), [EC-340](#)
Precautions (General) [GI-4](#)
Precautions in repairing high strength steel [BL-188](#)
Pressure switch 1 [AT-146](#), [AT-160](#)
Pressure switch 2 [AT-158](#)
Pressure switch 3 [AT-142](#), [AT-162](#)
Pressure switch 5 [AT-150](#), [AT-164](#)
Pressure switch 6 [AT-154](#), [AT-166](#)
Pressure test (A/T) [AT-51](#)
Propeller shaft [PR-4](#), [PR-8](#)
Propeller shaft inspection [MA-25](#)
Propeller shaft on vehicle service [PR-8](#)
Propeller shaft vibration [PR-4](#), [PR-8](#)
PS/SEN - Wiring diagram [EC-376](#)

R

R/VIEW - Wiring diagram [DI-73](#)

ALPHABETICAL INDEX

Radiator	CO-12	SMJ (super multiple junction)	PG-73	
Radio - See Audio	AV-6	SONAR - Wiring diagram	DI-62	A
Rear Audio Remote Control Unit	AV-63	Spare tire size	GI-50	
Rear axle	RAX-5	Spark plug	EM-27	
Rear bumper	EI-16	Spark plug replacement	MA-18	B
Rear case (Transfer)	TF-146 , TF-179	Specification value	EC-143	
Rear combination lamp removal and installation ...	LT-116	Speedometer	DI-5	
Rear cover packing replacement diff.	RFD-24	Spiral cable	SRS-48	C
Rear door	BL-123 , GW-65	SROOF - Wiring diagram	RF-13	
Rear seat	SE-96	SRS - See Supplemental Restraint System	SRS-5	
Rear seat belt	SB-6	SRS - Wiring diagram	SRS-12	D
Rear suspension	RSU-25	SRS Trouble diagnoses	SRS-8	
Rear view monitor	DI-70	Stabilizer bar (front)	FSU-12	
Rear washer	WW-36	Stabilizer bar (rear)	RSU-41	
Rear window defogger	GW-72	Stall test (A/T)	AT-50	E
Rear wiper	WW-36	Standardized relay	PG-71	
Refrigerant connection precaution	ATC-7 , MTC-7	START - Wiring diagram	SC-11	
Refrigerant discharging evacuating charging	ATC-174 , MTC-149	Starting system	SC-10	F
Refrigerant general precaution	ATC-6 , MTC-6	Steering gear, linkage and transfer gear inspection	MA-29	
Refrigerant lines ATC-174 , ATC-182 , ATC-183 , MTC-149 , MTC-157 , MTC-158		Steering linkage	PS-14	
Refrigerant pressure sensor . EC-622 , ATC-184 , MTC-159		Steering wheel and column	PS-7	G
Relay box	PG-77	Step lamp	LT-124	
Remote keyless entry system	BL-39	Stop lamp	LT-97	
Removal and installation (A/T)	AT-244 , AT-247	Stop lamp switch	EC-550 , EC-565 , EC-628	H
Removal and installation (Transfer)	TF-143	STOP/L - Wiring diagram	LT-98	
Revolution sensor (A/T)	AT-108	Strut (front)	FSU-10	
Ring gear diff. inspection	RFD-13	Sub-oil pump (Transfer)	TF-152 , TF-165	I
Road wheel size	GI-50	Sun gear (Transfer)	TF-147 , TF-174	
Rocker cover	EM-33	Sun roof, electric	RF-10	
Room lamp	LT-123	Sunload sensor	ATC-142	J
Room lamp - See Interior lamp	LT-123	Sunroof	RF-24	
ROOM/L - Wiring diagram	LT-129	Supplemental Restraint System	SRS-5	
RP/SEN - Wiring diagram	EC-623	Supplemental restraint system - Wiring diagram .	SRS-12	K

S

SAE J1979 - Service \$01 - 09	EC-48
SEAT - Wiring diagram	SE-82 , SE-83
Seat belt inspection	SB-10 , MA-32
Seat belt pre-tensioner	SRS-58
Seat belt, front	SB-3
Seat belt, rear	SB-6
Seat, front	SE-89
Seat, rear	SE-96
Self-diagnosis (Transfer)	TF-50
SEN/PW - Wiring diagram	EC-453
SHIFT - Wiring diagram	AT-223
Shift control (Transfer)	TF-147 , TF-174
Shift lock system	AT-222
Shock absorber (front)	FSU-10
Shock absorber (rear)	RSU-34
Side air bag (satellite) sensor	SRS-57
Side bearing preload diff.	RFD-19
Side curtain air bag	SRS-54
Side trim	EI-32

T

Tachometer	DI-5
Tail lamp	LT-102
TAIL/L - Wiring diagram	LT-104
TCM circuit diagram	AT-49
TCM inspection table	AT-82
TCS - Wiring diagram	BRC-16
TCS (traction control system)	BRC-7
TCS component parts and connector location	BRC-14
TCS wheel sensors	BRC-14
Theft warning system - See Vehicle security (Theft warning) system	BL-69
Thermometer	DI-26
Three way catalyst	EM-19
Three way catalyst function (Bank 1)	EC-295
Three way catalyst function (Bank 2)	EC-295
Three way catalyst precautions	GI-5
Throttle control motor	EC-407
Throttle control motor relay	EC-402

IDX

ALPHABETICAL INDEX

Throttle position sensor (TPS) .. EC-198 , EC-261 , EC-448 , EC-450 , EC-583	
Throttle valve closed position learning	EC-89
Tie-rod	PS-14
Timing chain	EM-35
Tire rotation	MA-28
Tire size	GI-50
Tooth contact diff.	RFD-20
Torque converter installation AT-245 , AT-246 , AT-248 , AT-249	
Torque convertor clutch solenoid valve ... AT-115 , AT-117	
Tow truck towing	GI-42
Towing point	GI-43
TPS1 - Wiring diagram	EC-263
TPS2 - Wiring diagram	EC-200
TPS3 - Wiring diagram	EC-585
Traction control system - Wiring diagram	BRC-16
Transfer control device	TF-76 , TF-80 , TF-138
Transfer control unit inspection table	TF-36
Transfer dropping resistor	TF-90
Transfer fluid temperature sensor TF-104 , TF-152 , TF-165	
Transfer motor	TF-102 , TF-140
Transfer motor relay	TF-102
Transfer oil replacement	MA-24
Transfer serial number	GI-49
Transmission serial number	GI-49
Tread-FR&RR (Dimensions)	GI-50
Trim	EI-32
TRNSCV - Wiring diagram	BL-151
Trouble diagnoses	GI-11
Turbine revolution sensor	AT-131
TURN - Wiring diagram	LT-77
Turn signal lamp	LT-74
Two trip detection logic	EC-48
Two-pole lift	GI-41

V

Vacuum hose (brake system)	BR-19
Vacuum hose drawing (Engine control)	EC-113
Valve clearance	EM-51
Valve guide	EM-65
Vanity mirror lamp	LT-123
VDC (vehicle dynamics control)	BRC-7
VDC -Wiring diagram	BRC-16
Vehicle identification number	GI-48
Vehicle recovery (freeing a stuck vehicle)	GI-43
Vehicle security (theft warning) system	BL-69
Vehicle speed sensor (VSS)	EC-369
VEHSEC - Wiring diagram	BL-73
VENT/V - Wiring diagram	EC-324 , EC-539
Video Monitor	AV-76
VIN registration	EC-89
Viscosity number (SAE)	MA-12

W

W/ANT - Wiring diagram	AV-65
Wait detection switch	TF-69
WARN - Wiring diagram	DI-31
Warning chime	DI-42
Warning lamps	DI-30
Washer, front	WW-4
Washer, rear	WW-36
Water pump	CO-17
Water temperature gauge	DI-5
Wheel alignment (front)	FSU-6
Wheel alignment (rear)	RSU-27
Wheel bearing (front)	FAX-5
Wheel bearing (rear)	RAX-5
Wheel hub (rear)	RAX-5
Wheel size	GI-50
Wheelbase (Dimensions)	GI-50
Width (Dimensions)	GI-50
WINDOW - Wiring diagram	GW-22
Window antenna	AV-64
Window, door	GW-62 , GW-65
Windshield	GW-11
WIP/R - Wiring diagram	WW-40
WIPER - Wiring diagram	WW-11
Wiper, front	WW-4
Wiper, rear	WW-36
Wiring Diagram (Cell code) list	PG-60
Wiring diagrams	GI-15
WT-T/WARN - Wiring diagram	WT-11