

LT
SECTION
LIGHTING SYSTEM

A
B
C
D
E
F
G
H
I
J
LT
L
M

CONTENTS

<p>PRECAUTIONS 4</p> <p style="padding-left: 20px;">Precautions for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" 4</p> <p style="padding-left: 20px;">General precautions for service operations 4</p> <p>HEADLAMP (FOR USA) 5</p> <p style="padding-left: 20px;">Component Parts and Harness Connector Location... 5</p> <p style="padding-left: 20px;">System Description 5</p> <p style="padding-left: 40px;">OUTLINE 6</p> <p style="padding-left: 40px;">BATTERY SAVER CONTROL 7</p> <p style="padding-left: 40px;">AUTO LIGHT OPERATION 7</p> <p style="padding-left: 40px;">VEHICLE SECURITY SYSTEM (PANIC ALARM)... 7</p> <p style="padding-left: 20px;">CAN Communication System Description 7</p> <p style="padding-left: 20px;">Schematic 8</p> <p style="padding-left: 20px;">Wiring Diagram — H/LAMP — 9</p> <p style="padding-left: 20px;">Terminals and Reference Values for BCM 13</p> <p style="padding-left: 20px;">Terminals and Reference Values for IPDM E/R 14</p> <p style="padding-left: 20px;">How to Proceed With Trouble Diagnosis 14</p> <p style="padding-left: 20px;">Preliminary Check 15</p> <p style="padding-left: 40px;">CHECK POWER SUPPLY AND GROUND CIRCUIT 15</p> <p style="padding-left: 20px;">CONSULT-II Function (BCM) 17</p> <p style="padding-left: 40px;">CONSULT-II OPERATION 17</p> <p style="padding-left: 40px;">WORK SUPPORT 18</p> <p style="padding-left: 40px;">DATA MONITOR 18</p> <p style="padding-left: 40px;">ACTIVE TEST 19</p> <p style="padding-left: 40px;">SELF-DIAGNOSTIC RESULTS 19</p> <p style="padding-left: 20px;">CONSULT-II Function (IPDM E/R) 20</p> <p style="padding-left: 40px;">CONSULT-II OPERATION 20</p> <p style="padding-left: 40px;">DATA MONITOR 21</p> <p style="padding-left: 40px;">ACTIVE TEST 21</p> <p style="padding-left: 20px;">Headlamp HI Does Not Illuminate (Both Sides) 22</p> <p style="padding-left: 20px;">Headlamp HI Does Not Illuminate (One Side) 24</p> <p style="padding-left: 20px;">High Beam Indicator Lamp Does Not Illuminate ... 25</p> <p style="padding-left: 20px;">Headlamp LO Does Not Illuminate (Both Sides) ... 25</p> <p style="padding-left: 20px;">Headlamp LO Does Not Illuminate (One Side) 27</p> <p style="padding-left: 20px;">Headlamps Do Not Turn OFF 28</p> <p style="padding-left: 20px;">Aiming Adjustment 29</p> <p style="padding-left: 20px;">Headlamp Aiming 30</p> <p style="padding-left: 40px;">LOW BEAM AND HIGH BEAM 30</p>	<p style="padding-left: 20px;">Bulb Replacement 30</p> <p style="padding-left: 40px;">HEADLAMP (OUTER SIDE), FOR LOW BEAM.. 30</p> <p style="padding-left: 40px;">HEADLAMP (INNER SIDE), FOR HIGH BEAM.. 30</p> <p style="padding-left: 40px;">FRONT TURN SIGNAL/PARKING LAMP 31</p> <p style="padding-left: 40px;">FRONT SIDE MARKER LAMP 31</p> <p style="padding-left: 20px;">Removal and Installation 31</p> <p style="padding-left: 40px;">FRONT COMBINATION LAMP 31</p> <p style="padding-left: 20px;">Disassembly and Assembly 32</p> <p style="padding-left: 40px;">FRONT COMBINATION LAMP 32</p> <p>HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM - 33</p> <p style="padding-left: 20px;">Component Parts and Harness Connector Location.. 33</p> <p style="padding-left: 20px;">System Description 34</p> <p style="padding-left: 40px;">OUTLINE 34</p> <p style="padding-left: 40px;">DAYTIME LIGHT OPERATION 34</p> <p style="padding-left: 40px;">COMBINATION SWITCH READING FUNCTION.. 35</p> <p style="padding-left: 40px;">AUTO LIGHT OPERATION 35</p> <p style="padding-left: 20px;">CAN Communication System Description 35</p> <p style="padding-left: 20px;">Schematic 36</p> <p style="padding-left: 20px;">Wiring Diagram — DTRL — 37</p> <p style="padding-left: 20px;">Terminals and Reference Values for BCM 41</p> <p style="padding-left: 20px;">How to Proceed With Trouble Diagnosis 42</p> <p style="padding-left: 20px;">Preliminary Check 42</p> <p style="padding-left: 40px;">CHECK BCM CONFIGURATION 42</p> <p style="padding-left: 40px;">INSPECTION FOR POWER SUPPLY AND GROUND CIRCUIT 42</p> <p style="padding-left: 40px;">INSPECTION PARKING BRAKE SWITCH CIRCUIT 43</p> <p style="padding-left: 20px;">CONSULT-II Functions 44</p> <p style="padding-left: 20px;">Daytime Light Control Does Not Operate Properly (Normal Headlamps Operate Properly) 44</p> <p style="padding-left: 20px;">Aiming Adjustment 47</p> <p style="padding-left: 40px;">HEADLAMP 47</p> <p style="padding-left: 20px;">Bulb Replacement 47</p> <p style="padding-left: 40px;">HEADLAMP 47</p> <p style="padding-left: 20px;">Removal and Installation 47</p> <p style="padding-left: 40px;">FRONT COMBINATION LAMP 47</p> <p style="padding-left: 20px;">Disassembly and Assembly 47</p> <p style="padding-left: 40px;">FRONT COMBINATION LAMP 47</p> <p>AUTO LIGHT SYSTEM 48</p>
---	--

Component Parts and Harness Connector Location..	48	HAZARD LAMP OPERATION	80
System Description	49	REMOTE KEYLESS ENTRY SYSTEM OPERA-	
OUTLINE	49	TION	81
COMBINATION SWITCH READING FUNCTION..	49	COMBINATION SWITCH READING FUNCTION..	81
EXTERIOR LAMP BATTERY SAVER CONTROL..	49	CAN Communication System Description	81
DELAY TIMER FUNCTION	49	Schematic	82
CAN Communication System Description	50	Wiring Diagram — TURN —	83
Major Components and Functions	50	Terminals and Reference Values for BCM	86
Schematic	51	How to Proceed With Trouble Diagnosis	87
Wiring Diagram — AUTO/L —	52	Preliminary Check	88
Terminals and Reference Values for BCM	55	CHECK POWER SUPPLY AND GROUND CIR-	
Terminals and Reference Values for IPDM E/R	56	CUIT	88
How to Proceed With Trouble Diagnosis	57	CONSULT-II Function (BCM)	89
Preliminary Check	57	CONSULT-II OPERATION	89
SETTING CHANGE FUNCTIONS	57	DATA MONITOR	90
CHECK POWER SUPPLY AND GROUND CIR-		ACTIVE TEST	90
CUIT	57	Front Turn Signal Lamp Does Not Operate	91
CONSULT-II Function (BCM)	59	Door Mirror Turn Signal Lamp Does Not Operate...	92
CONSULT-II OPERATION	59	Rear Turn Signal Lamp Does Not Operate	93
WORK SUPPORT	60	Hazard Warning Lamp Does Not Operate But Turn	
DATA MONITOR	60	Signal Lamps Operate	94
ACTIVE TEST	61	Turn Signal Indicator Lamp Does Not Operate	95
CONSULT-II Function (IPDM E/R)	61	Bulb Replacement	96
CONSULT-II OPERATION	62	FRONT TURN SIGNAL LAMP	96
DATA MONITOR	62	Rear Turn Signal Lamp	96
ACTIVE TEST	63	Removal and Installation	96
Trouble Diagnosis Chart by Symptom	64	FRONT TURN SIGNAL LAMP	96
Lighting Switch Inspection	64	Rear Turn Signal Lamp	96
Optical Sensor System Inspection	65	LIGHTING AND TURN SIGNAL SWITCH	97
Removal and Installation	66	Removal and Installation	97
OPTICAL SENSOR	66	REMOVAL	97
FRONT FOG LAMP	67	INSTALLATION	97
Component Parts and Harness Connector Location..	67	HAZARD SWITCH	98
System Description	67	Removal and Installation	98
OUTLINE	67	REMOVAL	98
COMBINATION SWITCH READING FUNCTION..	68	INSTALLATION	98
EXTERIOR LAMP BATTERY SAVER CONTROL..	68	COMBINATION SWITCH	99
CAN Communication System Description	68	Wiring Diagram — COMBSW —	99
Wiring Diagram — F/FOG —	69	Combination Switch Reading Function	100
Terminals and Reference Values for BCM	71	CONSULT-II Function (BCM)	100
Terminals and Reference Values for IPDM E/R	72	CONSULT-II OPERATION	100
How to Proceed With Trouble Diagnosis	72	DATA MONITOR	101
Preliminary Check	73	Combination Switch Inspection	102
CHECK BCM CONFIGURATION	73	Removal and Installation	104
CHECK POWER SUPPLY AND GROUND CIR-		COMBINATION SWITCH	104
CUIT	73	Switch Circuit Inspection	104
CONSULT-II Functions	74	COMBINATION SWITCH	104
Front Fog Lamps Do Not Illuminate (Both Sides) ...	74	STOP LAMP	105
Front Fog Lamp Does Not Illuminate (One Side) ...	75	System Description	105
Aiming Adjustment	77	Wiring Diagram — STOP/L —	106
Bulb Replacement	78	Bulb Replacement	107
FRONT FOG LAMP	78	HIGH-MOUNTED STOP LAMP	107
Removal and Installation	78	Stop Lamp	107
FRONT FOG LAMP	78	Removal and Installation	107
TURN SIGNAL AND HAZARD WARNING LAMPS..	79	HIGH-MOUNTED STOP LAMP	107
Component Parts and Harness Connector Location..	79	Stop Lamp	107
System Description	79	BACK-UP LAMP	108
OUTLINE	79	Wiring Diagram — BACK/L —	108
TURN SIGNAL OPERATION	79	Bulb Replacement	109

BACK-UP LAMP	109	Component Parts and Harness Connector Location	133	
Removal and Installation	109	System Description	134	A
BACK-UP LAMP	109	POWER SUPPLY AND GROUND	134	
PARKING, LICENSE PLATE AND TAIL LAMPS ...	110	SWITCH OPERATION	135	
Component Parts and Harness Connector Location	110	ROOM LAMP TIMER OPERATION	136	B
System Description	110	INTERIOR LAMP BATTERY SAVER CONTROL	136	
OPERATION BY LIGHTING SWITCH	111	Schematic	138	
COMBINATION SWITCH READING FUNCTION	111	Wiring Diagram — INT/L —	140	C
EXTERIOR LAMP BATTERY SAVER CONTROL	111	Terminals and Reference Values for BCM	147	
CAN Communication System Description	111	How to Proceed With Trouble Diagnosis	148	
Schematic	112	Preliminary Check	148	
Wiring Diagram — TAIL/L —	113	INSPECTION FOR POWER SUPPLY AND		D
Terminals and Reference Values for BCM	116	GROUND CIRCUIT	148	
Terminals and Reference Values for IPDM E/R ...	117	CONSULT-II Function (BCM)	149	
How to Proceed With Trouble Diagnosis	117	CONSULT-II OPERATION	149	E
Preliminary Check	118	WORK SUPPORT	150	
CHECK POWER SUPPLY AND GROUND CIR-		DATA MONITOR	150	
CUIT	118	ACTIVE TEST	151	F
CONSULT-II Functions	119	Room/Map/Personal Lamp Control Does Not Oper-		
Parking, License Plate and/or Tail Lamps Do Not		ate	151	
Illuminate	119	Personal Lamp Control Does Not Operate (Room/		G
Parking, License Plate and Tail Lamps Do Not Turn		Map Lamps Operate)	153	
OFF (After Approx. 10 Minutes)	122	All Step/Foot/Puddle Lamps Do Not Operate	154	
Bulb Replacement	123	All Interior Room Lamps Do Not Operate	155	
FRONT PARKING LAMP	123	Ignition Keyhole Illumination Control Does Not		H
Tail Lamp	123	Operate	155	
REAR COMBINATION LAMP	124	Bulb Replacement	157	
Bulb Replacement	124	PUDDLE LAMP	157	I
REMOVAL	124	ILLUMINATION	158	
INSTALLATION	124	Component Parts and Harness Connector Location	158	
Removal and Installation	124	System Description	158	J
REAR COMBINATION LAMP	124	ILLUMINATION OPERATION BY LIGHTING		
TRAILER TOW	125	SWITCH	159	
Component Parts and Harness Connector Location	125	EXTERIOR LAMP BATTERY SAVER CONTROL	160	
System Description	125	CAN Communication System Description	160	LT
TRAILER TAIL LAMP OPERATION	126	Schematic	161	
TRAILER BRAKE, TURN SIGNAL AND HAZARD		Wiring Diagram — ILL —	165	
LAMP OPERATION	126	Removal and Installation	174	L
TRAILER BRAKE OPERATION	127	ILLUMINATION CONTROL SWITCH	174	
TRAILER POWER SUPPLY OPERATION	127	BULB SPECIFICATIONS	175	
Schematic	128	Headlamp	175	M
Wiring Diagram — T/TOW —	129	Exterior Lamp	175	
INTERIOR ROOM LAMP	133	Interior Lamp/Illumination	175	

PRECAUTIONS

PRECAUTIONS

PF:00011

Precautions for Supplemental Restraint System (SRS) “AIR BAG” and “SEAT BELT PRE-TENSIONER”

EKS00ASG

The Supplemental Restraint System such as “AIR BAG” and “SEAT BELT PRE-TENSIONER”, used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

General precautions for service operations

EKS00ASH

- Never work with wet hands.
- Turn the lighting switch OFF before disconnecting and connecting the connector.
- When checking the headlamp on/off operation, check it on vehicle and with the power connected to the vehicle-side connector.
- Do not touch the headlamp bulb glass surface with bare hands or allow oil or grease to get on it. Do not touch the headlamp bulb just after the headlamp is turned off, because it is very hot.
- When the bulb has burned out, wrap it in a thick vinyl bag and discard. Do not break the bulb.
- Leaving the bulb removed from the headlamp housing for a long period of time can deteriorate the performance of the lens and reflector (dirt, clouding). Always prepare a new bulb and have it on hand when replacing the bulb.
- Do not use organic solvent (paint thinner or gasoline) to clean lamps and to remove old sealant.


HEADLAMP (FOR USA)

PFPP:26010

EKS00ASJ

HEADLAMP (FOR USA)

Component Parts and Harness Connector Location

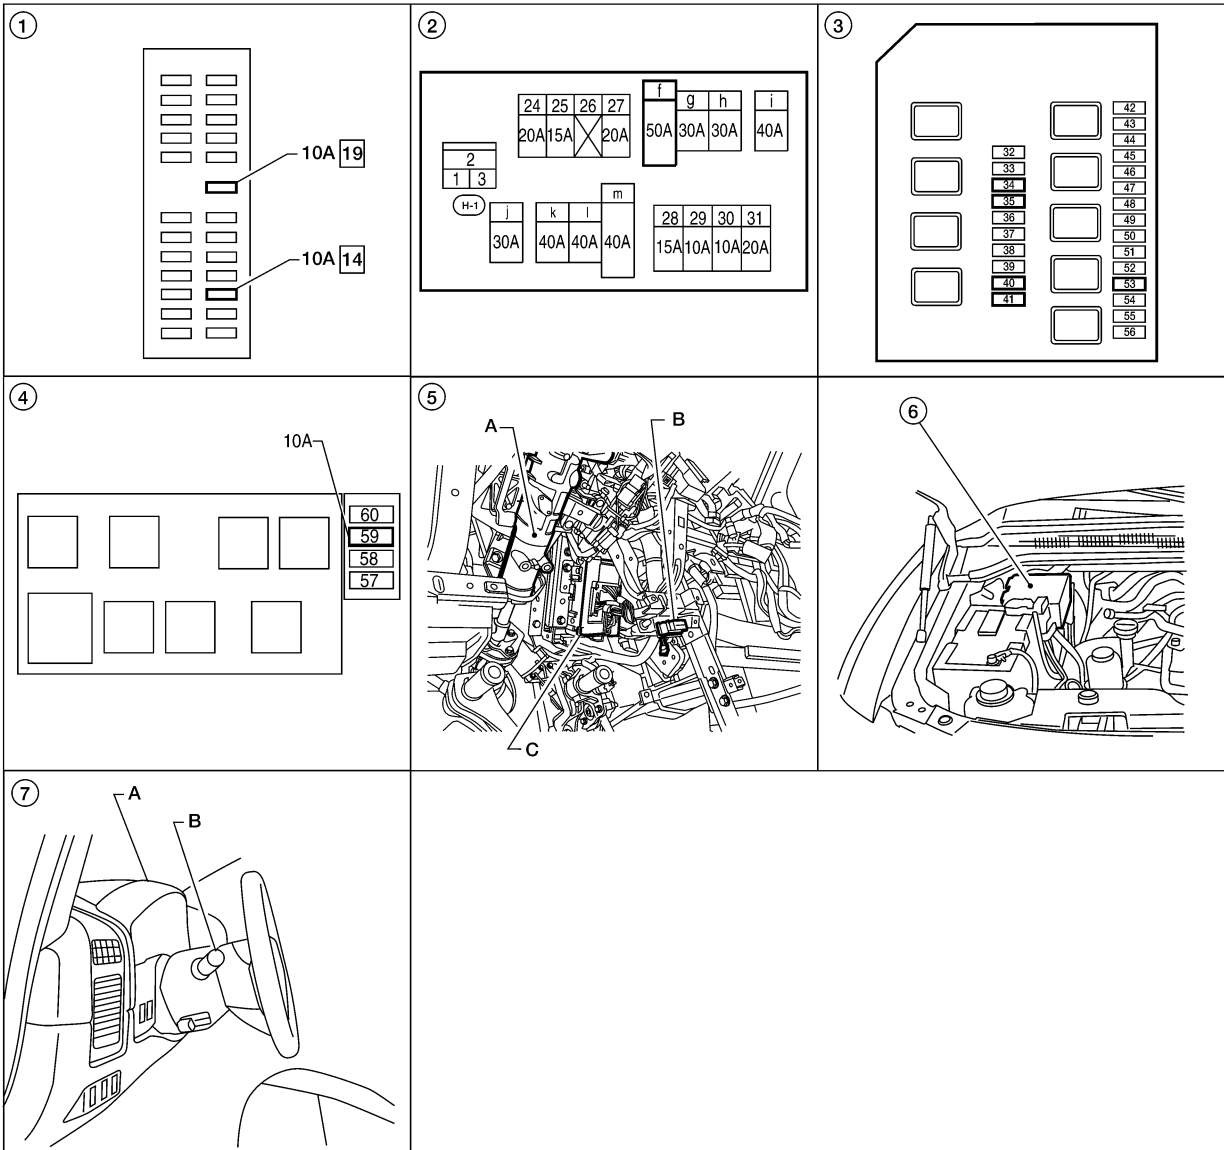

1. Fuse block (J/B)
2. Fuse and fusible link box
3. IPDM E/R fuse layout
4. Fuse and relay box
5. A. Steering column
B. Data link connector M22
C. BCM M18, M19, M20
(View with instrument lower panel LH removed)
6. IPDM E/R E118, E119, E120, E121, E122, E123, E124
7. A. Combination meter M24
B. Combination switch (lighting switch) M28

WKIA4518E

System Description

EKS00ASK

Control of the headlamp system operation is dependent upon the position of the combination switch (lighting switch). When the lighting switch is placed in the 2ND position, the BCM (body control module) receives input requesting the headlamps (and tail lamps) illuminate. This input is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The CPU (central processing unit) of the IPDM E/R controls the headlamp high and headlamp low relay coils. When energized, these relays direct power to the respective headlamps, which then illuminate.

HEADLAMP (FOR USA)

OUTLINE

Power is supplied at all times

- to ignition relay, located in the IPDM E/R, and
- to headlamp high relay, located in the IPDM E/R, and
- to headlamp low relay, located in the IPDM E/R, and
- through 50A fusible link (letter f , located in the fuse and fusible link box)
- to BCM terminal 70, and
- through 20A fuse (No. 53, located in the IPDM E/R)
- to CPU of the IPDM E/R.

With the ignition switch in the ON or START position, power is supplied

- to ignition relay, located in the IPDM E/R, and
- through 10A fuse (No. 59, located in the fuse and relay box)
- to BCM terminal 38.

Ground is supplied

- to BCM terminal 67
- through grounds M57, M61 and M79, and
- to IPDM E/R terminals 38 and 59
- through grounds E9, E15 and E24.

Low Beam Operation

With the lighting switch in 2ND position, the BCM receives input requesting the headlamps to illuminate. This input is communicated to the IPDM E/R across the CAN communication lines. The CPU of the IPDM E/R controls the headlamp low relay coil. When energized, this relay directs power

- through 15A fuse (No. 41, located in the IPDM E/R)
- through IPDM E/R terminal 54
- to front combination lamp RH terminal 1, and
- through 15A fuse (No. 40, located in the IPDM E/R)
- through IPDM E/R terminal 52
- to front combination lamp LH terminal 1.

Ground is supplied

- to front combination lamp LH and RH terminal 4
- through grounds E9, E15 and E24.

With power and ground supplied, low beam headlamps illuminate.

High Beam Operation/Flash-to-Pass Operation

With the lighting switch in 2ND position and placed in HIGH or PASS position, the BCM receives input requesting the headlamp high beams to illuminate. This input is communicated to the IPDM E/R across the CAN communication lines. The CPU of the combination meter controls the ON/OFF status of the HIGH BEAM indicator. The CPU of the IPDM E/R controls the headlamp high relay coil. When energized, this relay directs power

- through 10A fuse (No. 34, located in the IPDM E/R)
- through IPDM E/R terminal 56
- to front combination lamp RH terminal 2, and
- through 10A fuse (No. 35, located in the IPDM E/R)
- through IPDM E/R terminal 55
- to front combination lamp LH terminal 2.

Ground is supplied

- to front combination lamp LH and RH terminal 3
- through grounds E9, E15 and E24.

With power and ground supplied, the high beam headlamps illuminate.

HEADLAMP (FOR USA)

BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 2ND position (ON), and the ignition switch is turned from ON or ACC to OFF, the battery saver control feature is activated. Under this condition, the headlamps remain illuminated for 5 minutes, unless the combination switch (lighting switch) position is changed. If the combination switch (lighting switch) position is changed, then the headlamps are turned off.

AUTO LIGHT OPERATION

Refer to [LT-49, "System Description"](#) for auto light operation.

VEHICLE SECURITY SYSTEM (PANIC ALARM)

The vehicle security system (panic alarm) will flash the high beams if the system is triggered. Refer to [BL-72, "PANIC ALARM OPERATION"](#).

CAN Communication System Description

EKS00ASL

Refer to [LAN-25, "CAN COMMUNICATION"](#).


A
B
C
D
E
F
G
H
I
J
L
M

LT

HEADLAMP (FOR USA)

Schematic

EKS00ASM

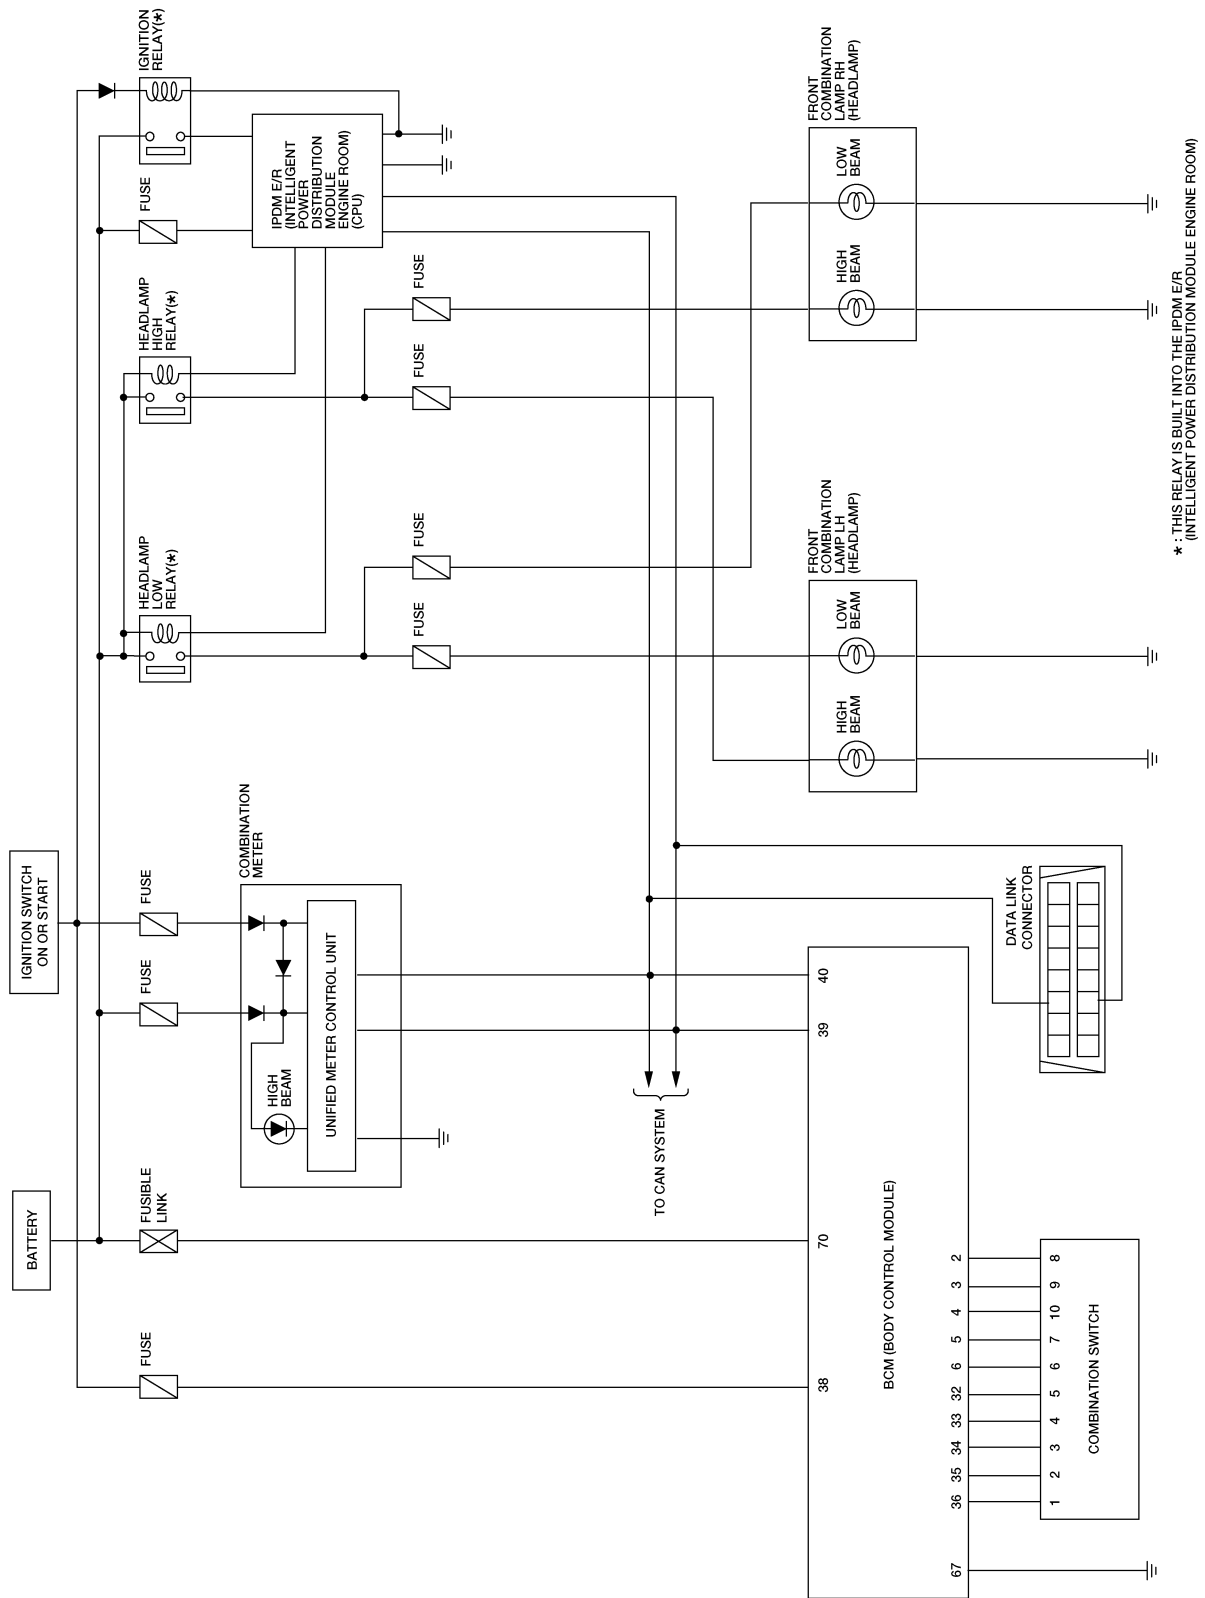

WKWA3455E


HEADLAMP (FOR USA)

Wiring Diagram — H/LAMP —



EKS00ASN

LT-H/LAMP-01

— : DATA LINE

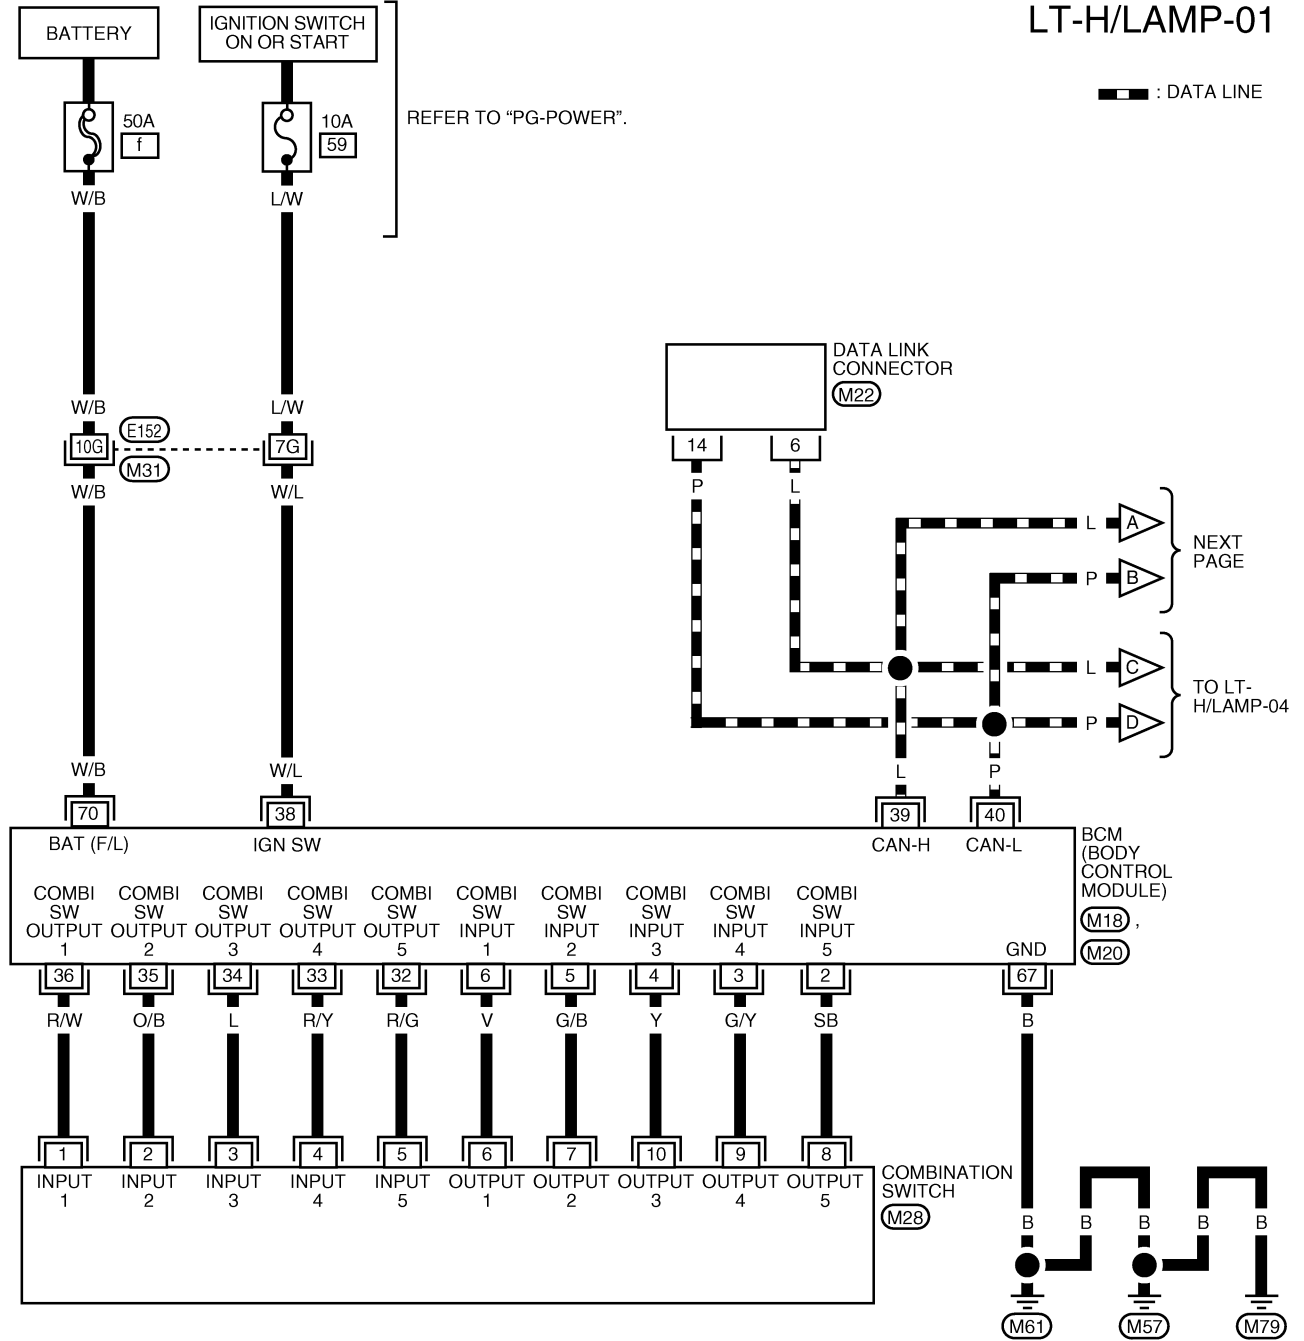

REFER TO "PG-POWER".

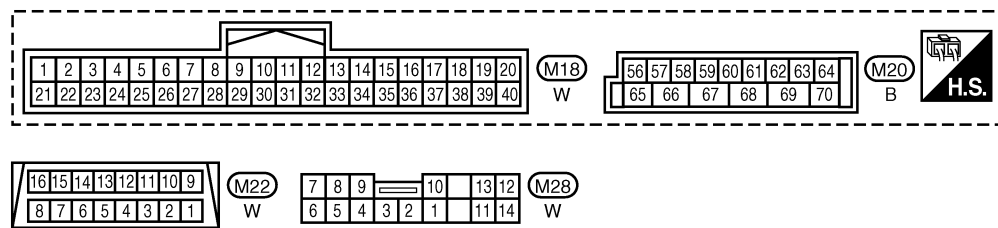
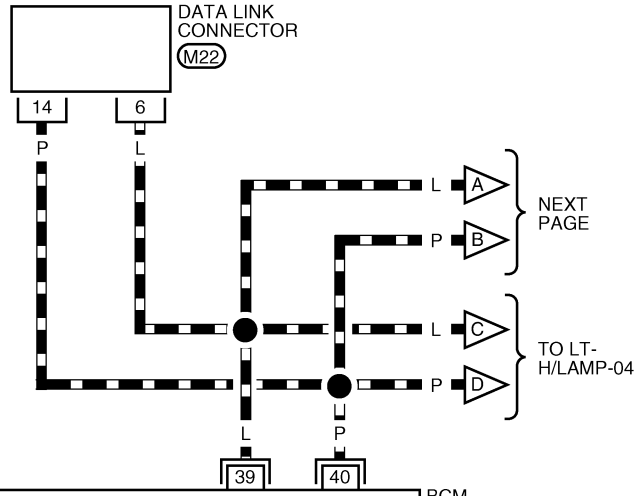


REFER TO THE FOLLOWING.
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)

A
B
C
D
E
F
G
H
I
J
LT
L
M



HEADLAMP (FOR USA)

 LT-H/LAMP-02

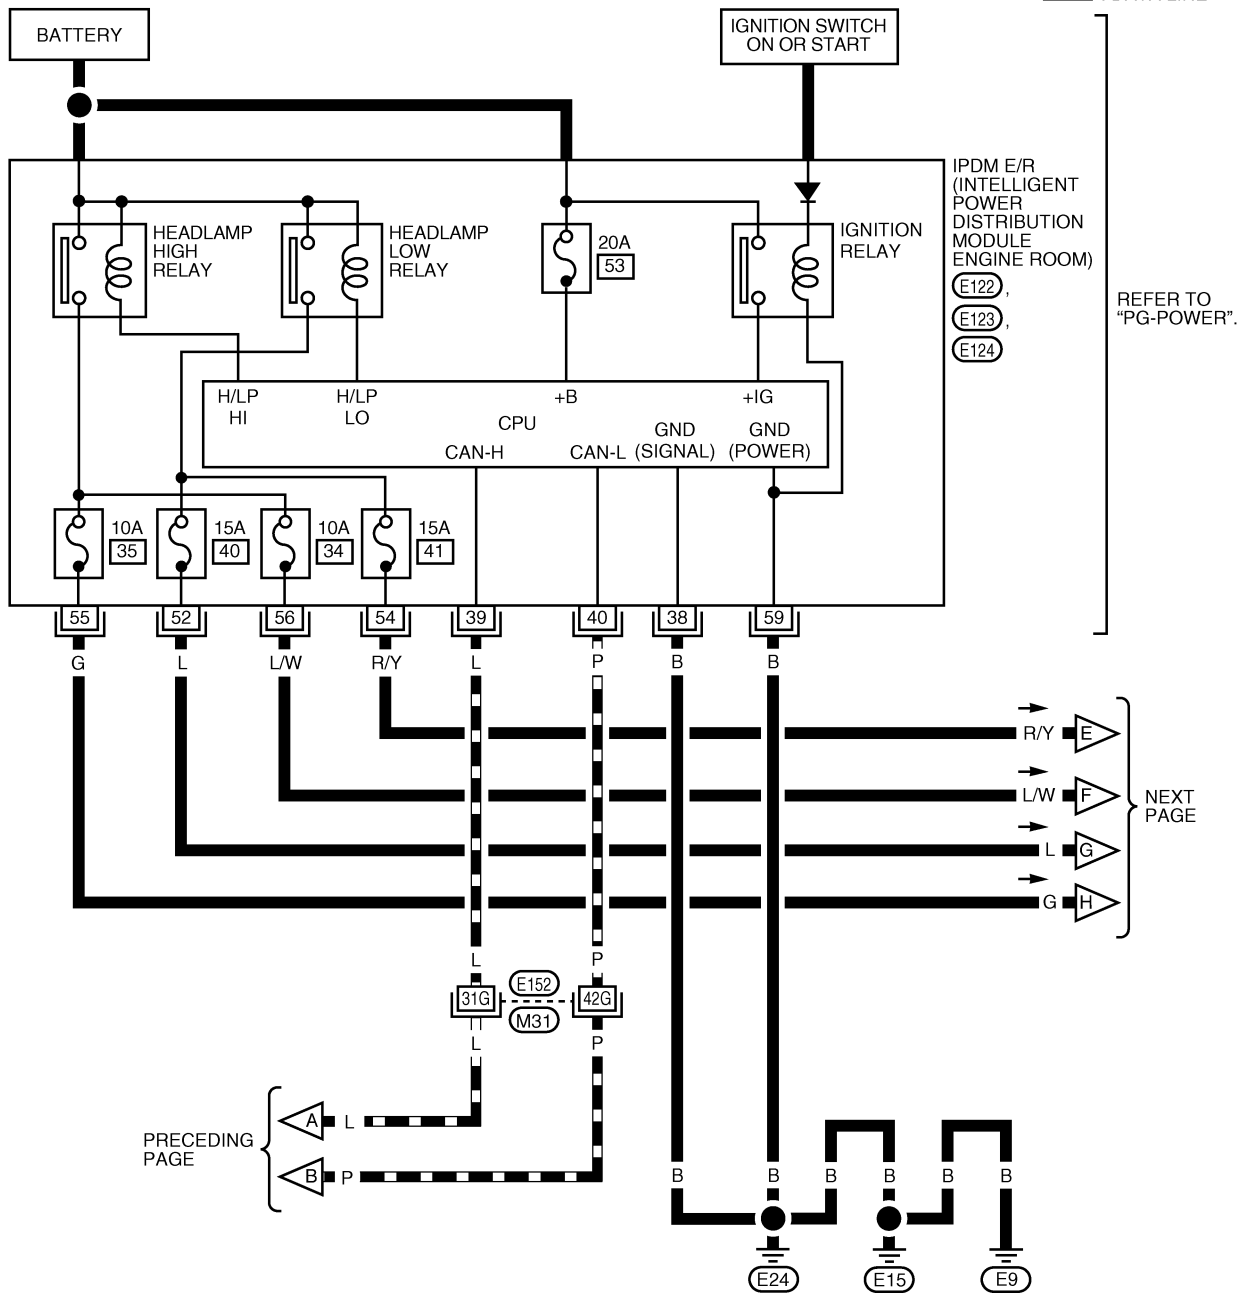

HEADLAMP (FOR USA)

 LT-H/LAMP-03



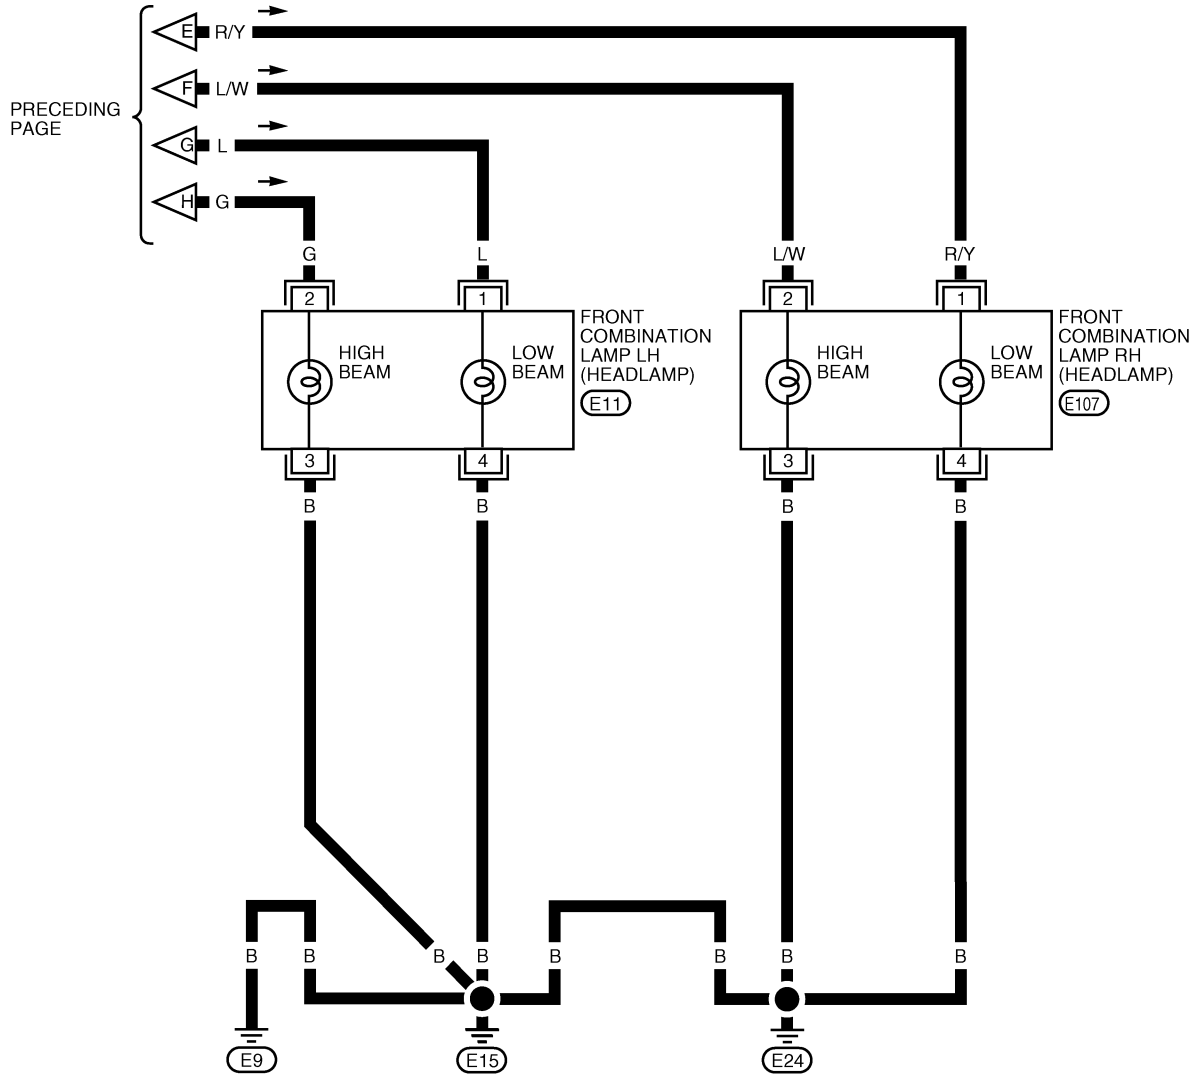


WKWA1475E

HEADLAMP (FOR USA)

LT-H/LAMP-04

  — : DATA LINE

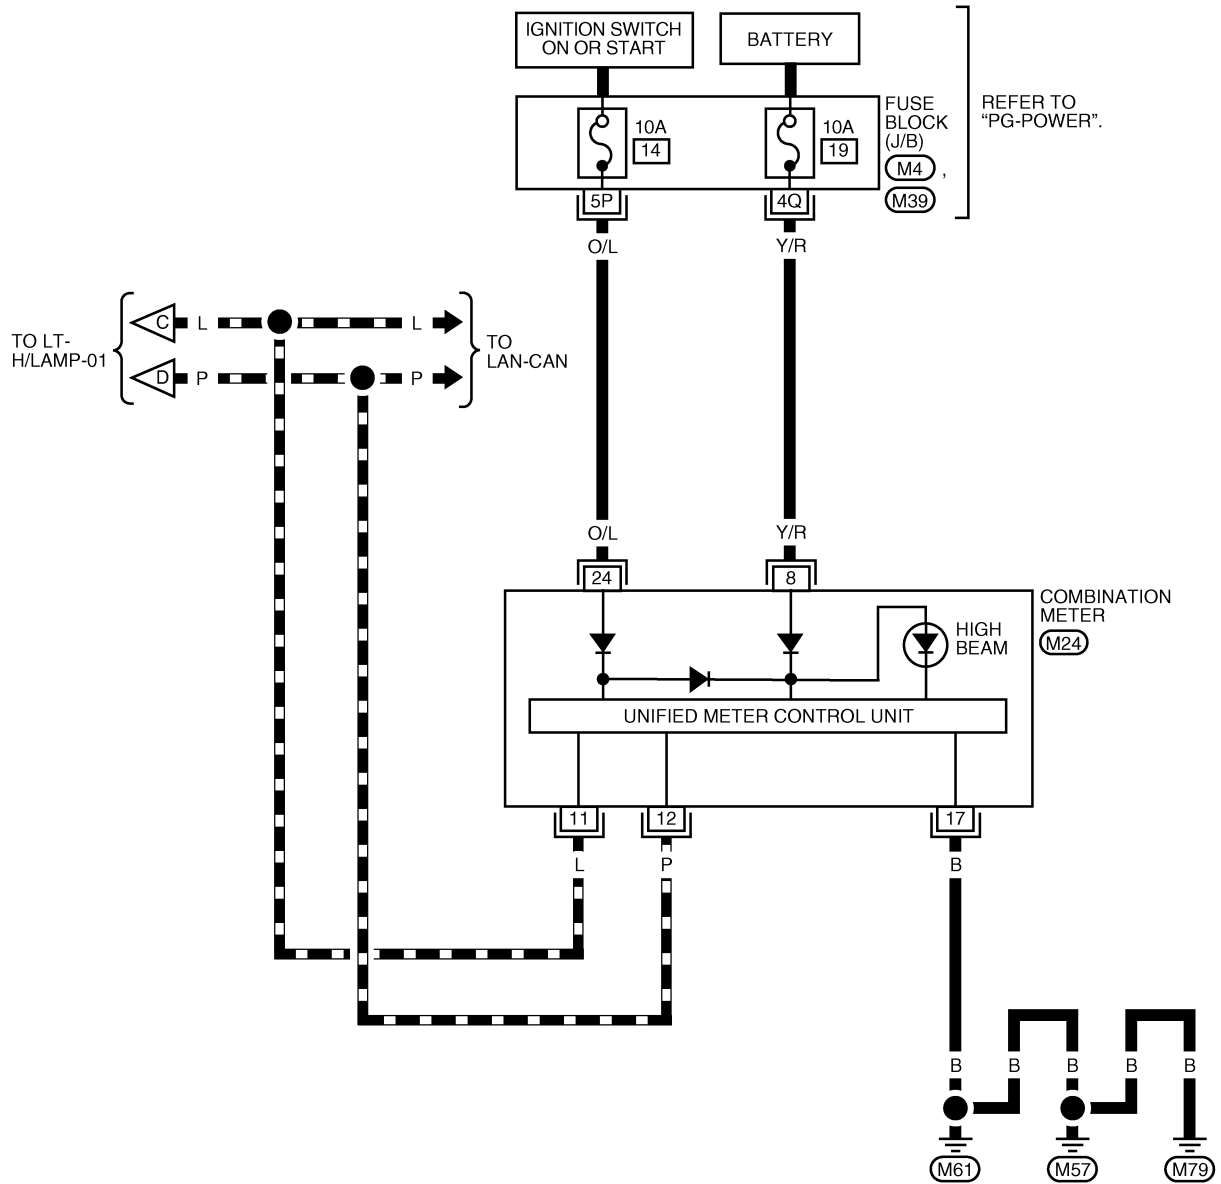

WKWA3458E

HEADLAMP (FOR USA)


Terminals and Reference Values for BCM

EKS00ASO

Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)
			Ignition switch	Operation or condition	
2	SB	Combination switch input 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	<p style="text-align: right;">SKIA5291E</p>
3	G/Y	Combination switch input 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	<p style="text-align: right;">SKIA5292E</p>
4	Y	Combination switch input 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	<p style="text-align: right;">SKIA5291E</p>
5	G/B	Combination switch input 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	<p style="text-align: right;">SKIA5292E</p>
6	V	Combination switch input 1			
32	R/G	Combination switch output 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	<p style="text-align: right;">SKIA5291E</p>
33	R/Y	Combination switch output 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	<p style="text-align: right;">SKIA5292E</p>
34	L	Combination switch output 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	<p style="text-align: right;">SKIA5291E</p>

A
B
C
D
E
F
G
H
I
J
LT
L
M

HEADLAMP (FOR USA)

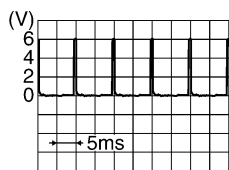Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)
			Ignition switch	Operation or condition	
35	O/B	Combination switch output 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5292E
36	R/W	Combination switch output 1			
38	W/L	Ignition switch (ON)	ON	—	Battery voltage
39	L	CAN-H	—	—	—
40	P	CAN-L	—	—	—
67	B	Ground	ON	—	0V
70	W/B	Battery power supply (fusible link)	OFF	—	Battery voltage

Terminals and Reference Values for IPDM E/R

EKS00ASP

Terminal No.	Wire color	Signal name	Measuring condition		Reference value (V) (Approx.)	
			Ignition switch	Operation or condition		
38	B	Ground	ON	—	0V	
39	L	CAN-H	—	—	—	
40	P	CAN-L	—	—	—	
52	L	Headlamp low (LH)	ON	Lighting switch 2ND position	OFF	0V
					ON	Battery voltage
54	R/Y	Headlamp low (RH)	ON	Lighting switch 2ND position	OFF	0V
					ON	Battery voltage
55	G	Headlamp high (LH)	ON	Lighting switch HIGH or PASS position	OFF	0V
					ON	Battery voltage
56	L/W	Headlamp high (RH)	ON	Lighting switch HIGH or PASS position	OFF	0V
					ON	Battery voltage
59	B	Ground	ON	—	0V	

How to Proceed With Trouble Diagnosis

EKS00ASQ

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-5, "System Description"](#).
3. Perform the Preliminary Check. Refer to [LT-15, "Preliminary Check"](#).
4. Check symptom and repair or replace the cause of malfunction.
5. Does the headlamp operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

HEADLAMP (FOR USA)

Preliminary Check CHECK POWER SUPPLY AND GROUND CIRCUIT

EKS00ASR

1. CHECK FUSES OR FUSIBLE LINK

Check for blown fuses or fusible link.

Unit	Power source	Fuse and fusible link No.
BCM	Battery	f
	Ignition switch ON or START position	59
IPDM E/R	Battery	34
		35
		40
		41
		53

Refer to [LT-9, "Wiring Diagram — H/LAMP —"](#) .

OK or NG

OK >> GO TO 2.

NG >> If fuse or fusible link is blown, be sure to eliminate cause of malfunction before installing new fuse or fusible link. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#) .

2. CHECK POWER SUPPLY CIRCUIT


1. Disconnect BCM connectors.
2. Check voltage between BCM harness connector and ground.

BCM		(-)	Ignition switch position		
(+) Connector			Terminal	OFF	ACC
M18	38	Ground	0V	0V	Battery voltage
M20	70		Battery voltage	Battery voltage	Battery voltage

OK or NG

OK >> GO TO 3.

NG >> Check harness for open between BCM and fuse or fusible link.

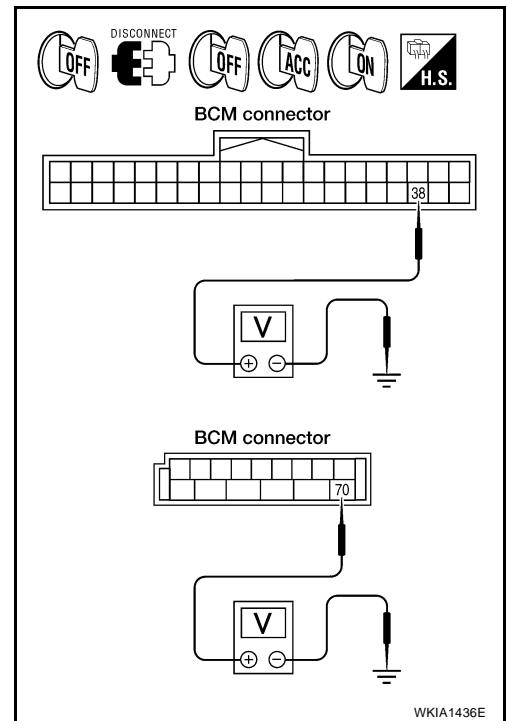

HEADLAMP (FOR USA)


3. CHECK GROUND CIRCUIT

Check continuity between BCM harness connector and ground.

BCM		Continuity
Connector	Terminal	
M20	67	Ground Yes

OK or NG

- OK >> Inspection End.
- NG >> Check ground circuit harness.

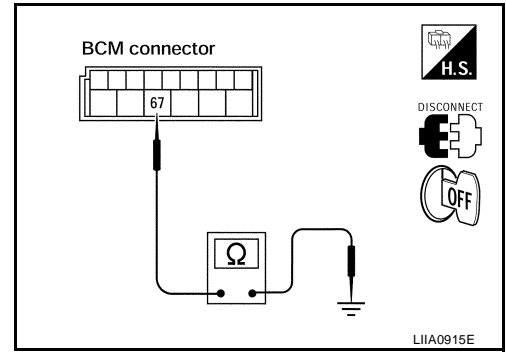

HEADLAMP (FOR USA)

CONSULT-II Function (BCM)

EKS00ASS

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


BCM diagnostic test item	Diagnostic mode	Description
Inspection by part	WORK SUPPORT	Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed.
	DATA MONITOR	Displays BCM input/output data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
	SELF-DIAG RESULTS	Displays BCM self-diagnosis results.
	CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
	ECU PART NUMBER	BCM part number can be read.
	CONFIGURATION	Performs BCM configuration read/write functions.

CONSULT-II OPERATION


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.


1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn ignition switch ON.

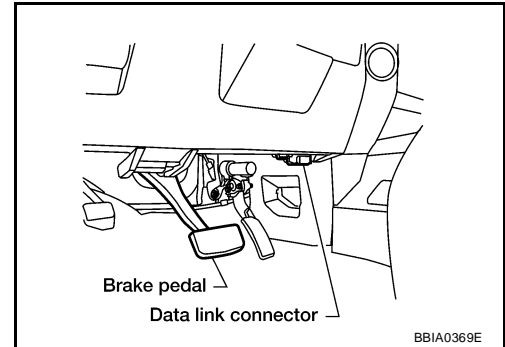

2. Touch "START (NISSAN BASED VHCL)".

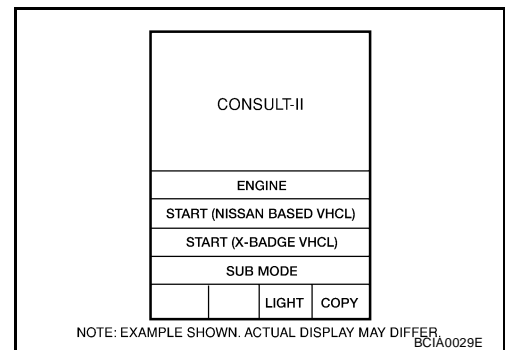

3. Touch "BCM" on "SELECT SYSTEM" screen. If "BCM" is not indicated, go to [GI-39, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

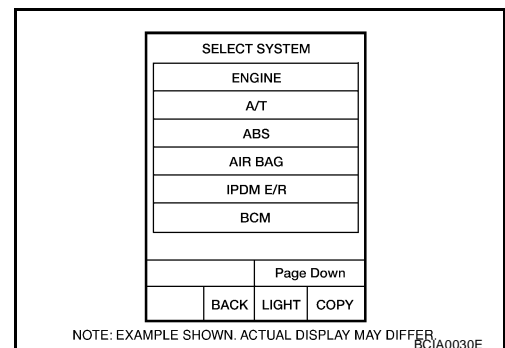

HEADLAMP (FOR USA)

4. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.

SELECT TEST ITEM			
HEAD LAMP			
WIPER			
FLASHER			
AIR CONDITIONER			
COMB SW			
BCM			
Scroll Up		Page Down	
BACK	LIGHT	COPY	
LKIA0183E			

WORK SUPPORT

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "WORK SUPPORT" on "SELECT DIAG MODE" screen.
3. Touch item on "SELECT WORK ITEM" screen.
4. Touch "START".
5. Touch "CHANGE SETT".
6. The setting will be changed and "CUSTOMIZING COMPLETED" will be displayed.
7. Touch "END".

Display Item List

Item	Description	CONSULT-II	Factory setting
BATTERY SAVER SET	Exterior lamp battery saver control mode can be changed in this mode. Selects exterior lamp battery saver control mode between ON/OFF.	ON	×
		OFF	—

DATA MONITOR

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on the "SELECT MONITOR ITEM" screen.

ALL SIGNALS	Monitors all the signals.
SELECTION FROM MENU	Selects and monitors individual signal.

4. Touch "START".
5. When "SELECTION FROM MENU" is selected, touch individual items to be monitored. When "ALL SIGNALS" is selected, all the items will be monitored.
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

Display Item List

Monitor item	Contents
IGN ON SW "ON/OFF"	Displays "IGN position (ON)/OFF, ACC position (OFF)" judged from the ignition switch signal.
ACC ON SW "ON/OFF"	Displays "ACC (ON)/OFF, Ignition OFF (OFF)" status judged from ignition switch signal.
HI BEAM SW "ON/OFF"	Displays status (high beam switch: ON/Others: OFF) of high beam switch judged from lighting switch signal.
HEAD LAMP SW 1 "ON/OFF"	Displays status (headlamp switch 1: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.
HEAD LAMP SW 2 "ON/OFF"	Displays status (headlamp switch 2: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.
LIGHT SW 1ST "ON/OFF"	Displays status (lighting switch 1st position: ON/Others: OFF) of lighting switch judged from lighting switch signal.

HEADLAMP (FOR USA)

Monitor item	Contents
AUTO LIGHT SW "ON/OFF"	Displays status of the lighting switch as judged from the lighting switch signal. (AUTO position: ON/Other than AUTO position: OFF)
PASSING SW "ON/OFF"	Displays status (flash-to-pass switch: ON/Others: OFF) of flash-to-pass switch judged from lighting switch signal.
FR FOG SW "ON/OFF"	Displays status (front fog lamp switch: ON/Others: OFF) of front fog lamp switch judged from lighting switch signal.
DOOR SW-DR "ON/OFF"	Displays status of the front door LH as judged from the front door switch LH signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-AS "ON/OFF"	Displays status of the front door RH as judged from the front door switch RH signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-RR "ON/OFF"	Displays status of the rear door as judged from the rear door switch (RH) signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-RL "ON/OFF"	Displays status of the rear door as judged from the rear door switch (LH) signal. (Door is open: ON/Door is closed: OFF)
BACK DOOR SW "ON/OFF"	Displays status of the back door as judged from the back door switch signal. (Door is open: ON/Door is closed: OFF)
TURN SIGNAL R "ON/OFF"	Displays status (Turn right: ON/Others: OFF) as judged from lighting switch signal.
TURN SIGNAL L "ON/OFF"	Displays status (Turn left: ON/Others: OFF) as judged from lighting switch signal.
CARGO LAMP SW "ON/OFF"	Displays status of cargo lamp switch.
OPTICAL SENSOR [0 - 5V]	Displays "ambient light (close to 5V when dark/close to 0V when light)" judged from optical sensor signal.

ACTIVE TEST

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
3. Touch item to be tested and check operation of the selected item.
4. During the operation check, touching "BACK" deactivates the operation.

Display Item List

Test item	Description
TAIL LAMP	Allows tail lamp relay to operate by switching ON-OFF.
HEAD LAMP	Allows headlamp relay (HI, LO) to operate by switching ON-OFF.
FR FOG LAMP	Allows fog lamp relay to operate by switching ON-OFF.
CARGO LAMP	Allows cargo lamp to operate by switching ON-OFF.
CORNERING LAMP	Not used.

SELF-DIAGNOSTIC RESULTS

Operation Procedure

1. Touch "BCM" on "SELECT TEST ITEM" screen.
2. Touch "SELF-DIAG RESULTS" on "SELECT DIAG MODE" screen.
3. Self-diagnostic results are displayed.

Display Item List

Monitored item	CONSULT-II display	Description
CAN communication	CAN communication [U1000]	Malfunction is detected in CAN communication.
CAN communication system	CAN communication system 1 to 6 [U1000]	Malfunction is detected in CAN system.

HEADLAMP (FOR USA)

EKS00AST

CONSULT-II Function (IPDM E/R)

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


IPDM E/R diagnostic mode	Description
SELF-DIAG RESULTS	Displays IPDM E/R self-diagnosis results.
DATA MONITOR	Displays IPDM E/R input/output data in real time.
CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.

CONSULT-II OPERATION


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.


1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn the ignition switch ON.

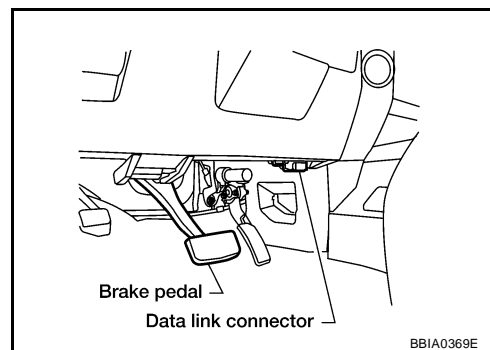

2. Touch "START (NISSAN BASED VHCL)".

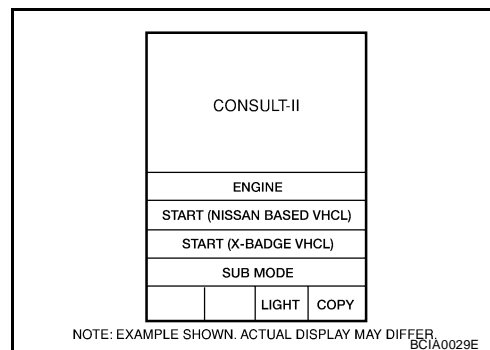


3. Touch "IPDM E/R" on "SELECT SYSTEM" screen. If "IPDM E/R" is not displayed, refer to [GI-39, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

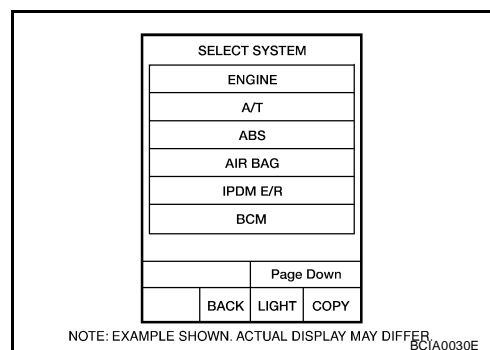

HEADLAMP (FOR USA)

- Select the desired part to be diagnosed on the "SELECT DIAG MODE" screen.

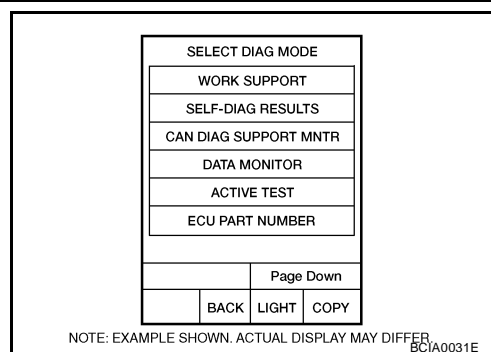

DATA MONITOR

Operation Procedure

- Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
- Touch "ALL SIGNALS", "MAIN SIGNALS" or "SELECTION FROM MENU" on the "SELECT MONITOR ITEM" screen.

ALL SIGNALS	All items will be monitored.
MAIN SIGNALS	Monitor the predetermined item.
SELECTION FROM MENU	Select any item for monitoring.

- Touch "START".
- Touch the required monitoring item on "SELECTION FROM MENU". In "ALL SIGNALS", all items are monitored. In "MAIN SIGNALS", predetermined items are monitored.
- Touch "RECORD" while monitoring to record the status of the item being monitored. To stop recording, touch "STOP".

All Items, Main Items, Select Item Menu

Item name	CONSULT-II screen display	Display or unit	Monitor item selection			Description
			ALL SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
Parking, license plate and tail lamps request	TAIL&CLR REQ	ON/OFF	×	×	×	Signal status input from BCM
Headlamp low beam request	HL LO REQ	ON/OFF	×	×	×	Signal status input from BCM
Headlamp high beam request	HL HI REQ	ON/OFF	×	×	×	Signal status input from BCM
Daytime lights request	DTRL REQ	ON/OFF	×	–	×	Signal status input from BCM
Front fog lamps request	FR FOG REQ	ON/OFF	×	×	×	Signal status input from BCM

NOTE:

Perform monitoring of IPDM E/R data with the ignition switch ON. When the ignition switch is at ACC, the display may not be correct.

ACTIVE TEST

Operation Procedure

- Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
- Touch "EXTERNAL LAMPS" on "SELECT TEST ITEM" screen.
- Touch item to be tested, and check operation.
- Touch "START".
- Touch "STOP" while testing to stop the operation.

HEADLAMP (FOR USA)

Test item	CONSULT-II screen display	Description
Tail lamp relay output	TAIL LAMP	Allows tail lamp relay to operate by switching operation ON-OFF at your option.
Headlamp relay (HI, LO) output	LAMPS	Allows headlamp relay (HI, LO) to operate by switching operation (OFF, HI, LO) at your option (Head lamp high beam repeats ON-OFF every 1 second).
Front fog lamp relay (FOG) output		Allows fog lamp relay (FOG) to operate by switching operation ON-OFF at your option.

Headlamp HI Does Not Illuminate (Both Sides)

EKS00ASU

1. CHECK COMBINATION SWITCH INPUT SIGNAL

Select "BCM" on CONSULT-II. With "HEAD LAMP" data monitor, make sure "HI BEAM SW" turns ON-OFF linked with operation of lighting switch.

When lighting switch is in HIGH position : HI BEAM SW ON

OK or NG

OK >> GO TO 2.

NG >> Check lighting switch. Refer to [LT-102, "Combination Switch Inspection"](#).

DATA MONITOR	
MONITOR	
HI BEAM SW	ON

SKIA4193E

2. HEADLAMP ACTIVE TEST

1. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
2. Select "EXTERNAL LAMPS" on "SELECT TEST ITEM" screen.
3. Touch "HI" on "ACTIVE TEST" screen.
4. Make sure headlamp high beam operates.

Headlamp high beam should operate.

OK or NG

OK >> GO TO 3.

NG >> GO TO 4.

ACTIVE TEST			
EXTERNAL LAMPS	OFF		
TAIL			
LO	HI		
FOG			
MODE	BACK	LIGHT	COPY

WKIA1438E

3. CHECK IPDM E/R

1. Select "IPDM E/R" on CONSULT-II, and select "DATA MONITOR" on "SELECT DIAG MODE" screen.
2. Make sure "HL LO REQ" and "HL HI REQ" turns ON when lighting switch is in HIGH position.

**When lighting switch is in HIGH position : HL LO REQ ON
: HL HI REQ ON**

OK or NG

OK >> Replace IPDM E/R. Refer to [PG-30, "Removal and Installation of IPDM E/R"](#).

NG >> Replace BCM. Refer to [BCS-20, "Removal and Installation"](#).


DATA MONITOR			
MONITOR			
HL LO REQ	ON		
HL HI REQ	ON		
Page Down			
RECORD			
MODE	BACK	LIGHT	COPY

SKIA5775E

HEADLAMP (FOR USA)

4. CHECK HEADLAMP INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect front combination lamp RH and LH connectors.
3. Turn ignition switch ON.
4. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
5. Select "EXTERNAL LAMPS" on "SELECT TEST ITEM" screen.
6. Touch "HI" on "ACTIVE TEST" screen.
7. When headlamp high beam is operating, check voltage between front combination lamp RH and LH harness connector and ground.

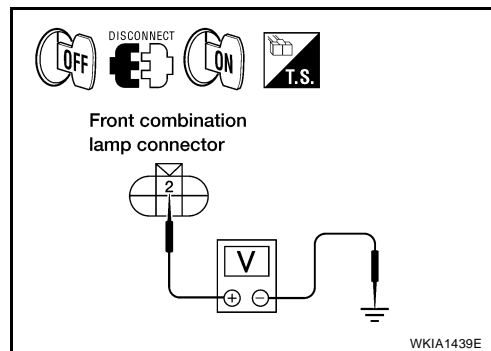

Front combination lamp		Terminal	(-)	Voltage
(+)				
Connector				
RH	E107	2	Ground	Battery voltage
LH	E11			

OK or NG

OK >> GO TO 6.

NG >> GO TO 5.


5. CHECK HEADLAMP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector E123 terminal 56 and front combination lamp RH harness connector E107 terminal 2.

56 - 2 : Continuity should exist.

4. Check continuity between IPDM E/R harness connector E123 terminal 55 and front combination lamp LH harness connector E11 terminal 2.

55 - 2 : Continuity should exist.

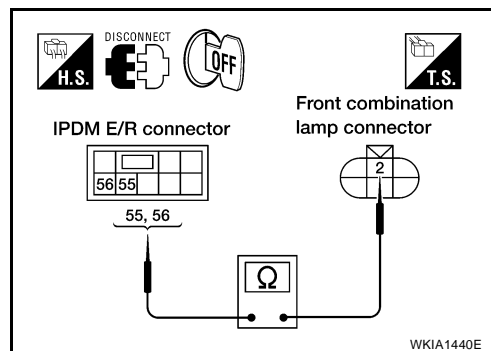

OK or NG

OK >> Replace IPDM E/R. Refer to [PG-30, "Removal and Installation of IPDM E/R"](#).

NG >> Repair harness or connector.

6. CHECK HEADLAMP GROUND

1. Check continuity between front combination lamp RH harness connector E107 terminal 3 and ground.

3 - Ground : Continuity should exist.


2. Check continuity between front combination lamp LH harness connector E11 terminal 3 and ground.

3 - Ground : Continuity should exist.

OK or NG

OK >> Check front combination lamp connector for damage or poor connection. Repair as necessary.

NG >> Repair harness or connector.

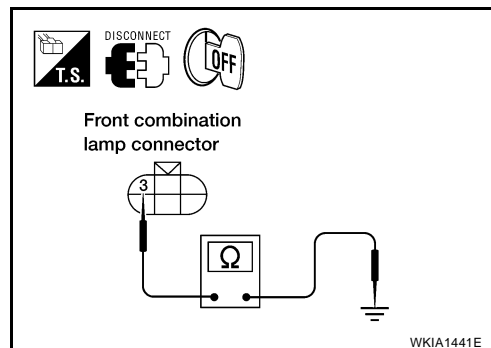

HEADLAMP (FOR USA)

EKS00ASV

Headlamp HI Does Not Illuminate (One Side)

1. BULB INSPECTION

Inspect inoperative headlamp bulb.

OK or NG

OK >> GO TO 2.

NG >> Replace headlamp bulb. Refer to [LT-30, "HEADLAMP \(INNER SIDE\), FOR HIGH BEAM"](#).

2. CHECK POWER TO HEADLAMP


1. Disconnect inoperative front combination lamp connector.
2. Turn the high beam headlamps ON.
3. Check voltage between inoperative front combination lamp terminal and ground.

Front combination lamp		Terminal	(-)	Voltage (Approx.)
(+)				
Connector		2	Ground	Battery voltage
RH	E107			
LH	E11			

OK or NG

OK >> GO TO 3.

NG >> GO TO 4.

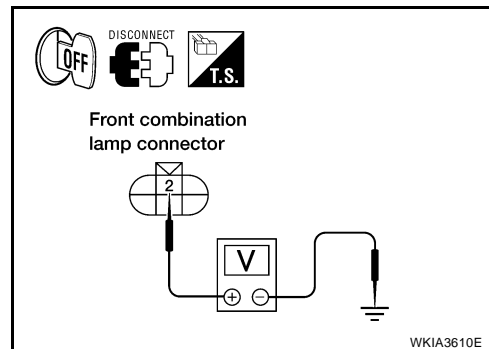

3. CHECK HEADLAMP GROUND


1. Turn the high beam headlamps OFF.
2. Check continuity between inoperative front combination lamp connector and ground.

Front combination lamp		Terminal	Ground	Continuity
Connector				
RH	E107	3	Ground	Yes
LH	E11			

OK or NG

OK >> Check front combination lamp connector for damage or poor connection. Repair as necessary.

NG >> Repair open circuit in harness between inoperative front combination lamp and ground.

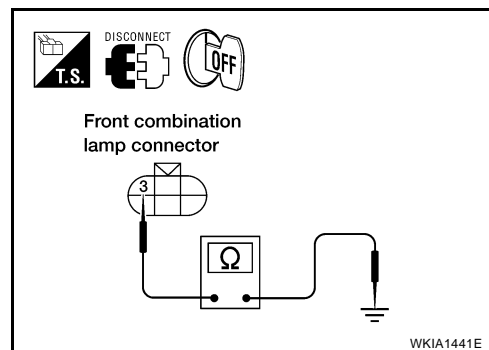

HEADLAMP (FOR USA)

4. INSPECTION BETWEEN IPDM E/R AND HEADLAMPS


1. Disconnect IPDM E/R connector and inoperative front combination lamp connector.
2. Check continuity between IPDM E/R harness connector terminals and inoperative front combination lamp harness connector terminals.

IPDM E/R		Front combination lamp		Continuity	
Connector	Terminal	Connector	Terminal		
E123	56	RH	E107	2	Yes
	55	LH	E11		

OK or NG

OK >> Replace IPDM E/R. Refer to [PG-30, "Removal and Installation of IPDM E/R"](#).

NG >> Check for short circuits and open circuits in harness between IPDM E/R and front combination lamp. Repair as necessary.

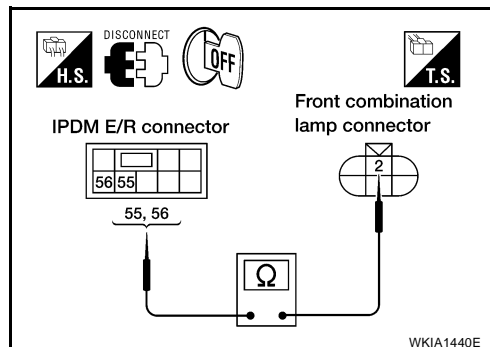

High Beam Indicator Lamp Does Not Illuminate

EKS00ASW

1. BULB INSPECTION

Inspect CAN communication system. Refer to [LAN-25, "CAN COMMUNICATION"](#).

OK or NG

OK >> Replace combination meter. Refer to [IP-13, "COMBINATION METER"](#).

NG >> Repair as necessary.

Headlamp LO Does Not Illuminate (Both Sides)

EKS00ASX

1. CHECK COMBINATION SWITCH INPUT SIGNAL


Select "BCM" on CONSULT-II. With "HEAD LAMP" data monitor, make sure "HEAD LAMP SW 1" and "HEAD LAMP SW 2" turns ON-OFF linked with operation of lighting switch.

When lighting switch is in 2ND position :
HEAD LAMP SW 1 ON
HEAD LAMP SW 2 ON

OK or NG

OK >> GO TO 2.

NG >> Check lighting switch. Refer to [LT-102, "Combination Switch Inspection"](#).

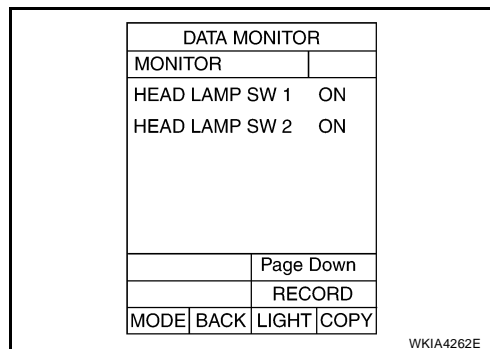

2. HEADLAMP ACTIVE TEST


1. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
2. Select "EXTERNAL LAMPS" on "SELECT TEST ITEM" screen.
3. Touch "LO" on "ACTIVE TEST" screen.
4. Make sure headlamp low beam operates.

Headlamp low beam should operate.

OK or NG

OK >> GO TO 3.

NG >> GO TO 4.

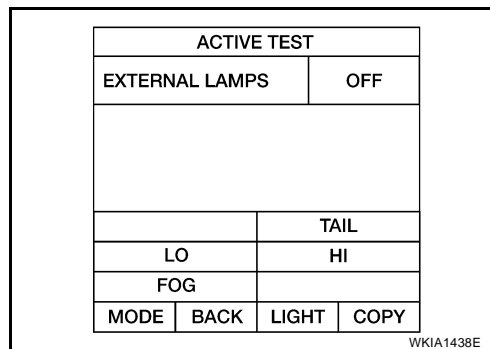

HEADLAMP (FOR USA)


3. CHECK IPDM E/R

1. Select "IPDM E/R" on CONSULT-II, and select "DATA MONITOR" on "SELECT DIAG MODE" screen.
2. Make sure "HL LO REQ" turns ON when lighting switch is in 2ND position.

When lighting switch is in 2ND position : HL LO REQ ON

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-30, "Removal and Installation of IPDM E/R"](#) .
- NG >> Replace BCM. Refer to [BCS-20, "Removal and Installation"](#) .

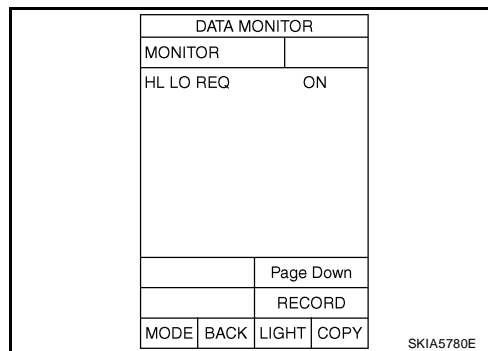


4. CHECK HEADLAMP INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect front combination lamp RH and LH connectors.
3. Turn ignition switch ON.
4. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
5. Select "EXTERNAL LAMPS" on "SELECT TEST ITEM" screen.
6. Touch "LO" on "ACTIVE TEST" screen.
7. When headlamp low beam is operating, check voltage between front combination lamp RH and LH harness connector and ground.

Front combination lamp (+)		Terminal	(-)	Voltage
Connector				
RH	E107	1	Ground	Battery voltage
LH	E11			

OK or NG

- OK >> GO TO 6.
- NG >> GO TO 5.

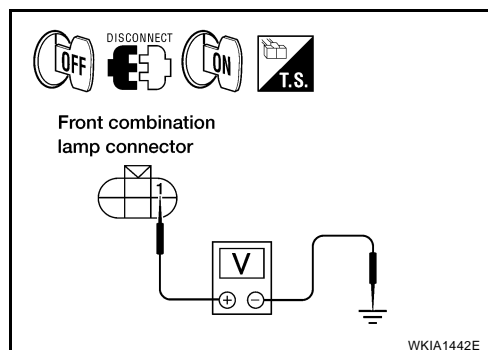

5. CHECK HEADLAMP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector E123 terminal 54 and front combination lamp RH harness connector E107 terminal 1.


54 - 1 : Continuity should exist.

4. Check continuity between IPDM E/R harness connector E123 terminal 52 and front combination lamp LH harness connector E11 terminal 1.

52 - 1 : Continuity should exist.

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-30, "Removal and Installation of IPDM E/R"](#) .
- NG >> Repair harness or connector.

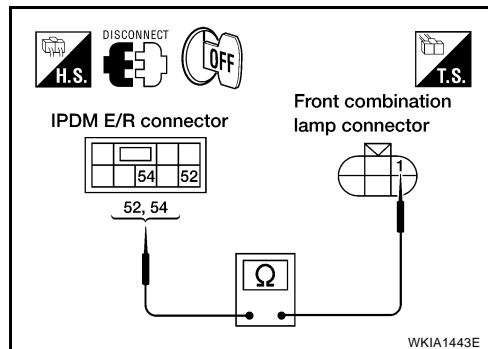

HEADLAMP (FOR USA)

6. CHECK HEADLAMP GROUND

1. Turn ignition switch OFF.
2. Check continuity between front combination lamp RH harness connector E107 terminal 4 and ground.

4 - Ground : Continuity should exist.


3. Check continuity between front combination lamp LH harness connector E11 terminal 4 and ground.

4 - Ground : Continuity should exist.

OK or NG

OK >> Check front combination lamp connector for damage or poor connection. Repair as necessary.

NG >> Repair harness or connector.

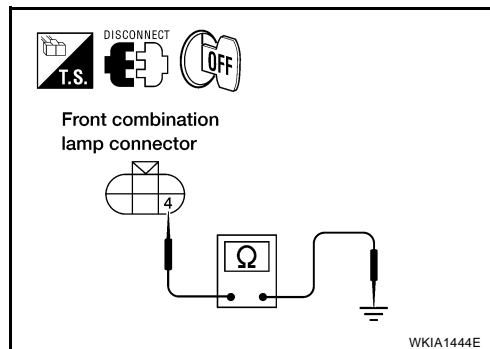

Headlamp LO Does Not Illuminate (One Side)

EKS00ASY

1. BULB INSPECTION

Inspect inoperative headlamp bulb.

OK or NG

OK >> GO TO 2.

NG >> Replace headlamp bulb. Refer to [LT-30, "HEADLAMP \(OUTER SIDE\), FOR LOW BEAM"](#).

2. CHECK POWER TO HEADLAMP


1. Disconnect inoperative front combination lamp connector.
2. Turn the low beam headlamps ON.
3. Check voltage between inoperative front combination lamp connector terminal and ground.

Front combination lamp (+)		Terminal	(-)	Voltage (Approx.)
Connector				
RH	E107	1	Ground	Battery voltage
LH	E11			

OK or NG

OK >> GO TO 3.

NG >> GO TO 4.

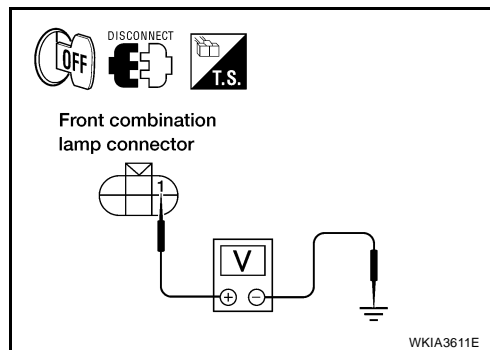

3. CHECK HEADLAMP GROUND


1. Turn the low beam headlamps OFF.
2. Check continuity between inoperative front combination lamp connector terminal and ground.

Front combination lamp		Terminal		Continuity
Connector				
RH	E107	4	Ground	Yes
LH	E11			

OK or NG

OK >> Check front combination lamp and IPDM E/R connector. Repair as necessary.

NG >> Repair open circuit in harness between inoperative front combination lamp and ground.

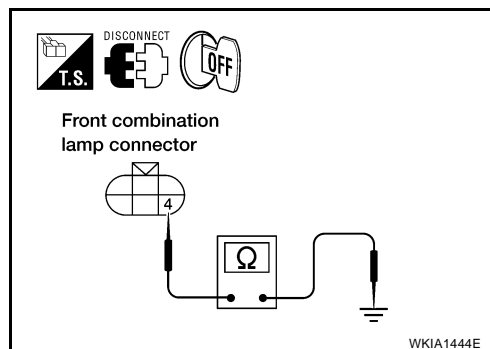

HEADLAMP (FOR USA)


4. INSPECTION BETWEEN IPDM E/R AND HEADLAMPS

1. Disconnect IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector terminals inoperative front combination lamp harness connector terminals.

IPDM E/R		Front combination lamp		Continuity	
Connector	Terminal	Connector	Terminal		
E123	54	RH	E107	1	Yes
	52	LH	E11		

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-30, "Removal and Installation of IPDM E/R"](#).
- NG >> Check for short circuits and open circuits in harness between IPDM E/R and front combination lamp. Repair as necessary.

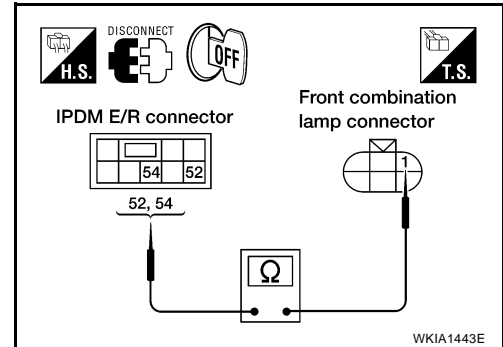

Headlamps Do Not Turn OFF

1. CHECK COMBINATION SWITCH INPUT SIGNAL

Select "BCM" on CONSULT-II. With "HEAD LAMP" data monitor, make sure "HEAD LAMP SW 1" and "HEAD LAMP SW 2" turns ON-OFF linked with operation of lighting switch.

When lighting switch is in OFF position : HEAD LAMP SW 1 OFF
: HEAD LAMP SW 2 OFF

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-30, "Removal and Installation of IPDM E/R"](#).
- NG >> GO TO 2.

DATA MONITOR	
MONITOR	
HEAD LAMP SW 1	OFF
HEAD LAMP SW 2	OFF

2. CHECK LIGHTING SWITCH

Check lighting switch. Refer to [LT-102, "Combination Switch Inspection"](#).

OK or NG

- OK >> GO TO 3.
- NG >> Replace lighting switch. Refer to [LT-104, "Removal and Installation"](#).

3. CHECKING CAN COMMUNICATIONS BETWEEN BCM AND IPDM E/R

Select "BCM" on CONSULT-II and perform self-diagnosis for BCM.

Display of self-diagnosis results


- NO DTC>> Replace IPDM E/R. Refer to [PG-30, "Removal and Installation of IPDM E/R"](#).
- CAN COMM CIRCUIT>> Refer to [BCS-13, "CAN Communication Inspection Using CONSULT-II \(Self-Diagnosis\)"](#).

SELF-DIAG RESULTS			
DTC RESULTS		TIME	
CAN COMM CIRCUIT [U1000]		PAST	
ERASE		PRINT	
MODE	BACK	LIGHT	COPY

HEADLAMP (FOR USA)

Aiming Adjustment

EKS00A70

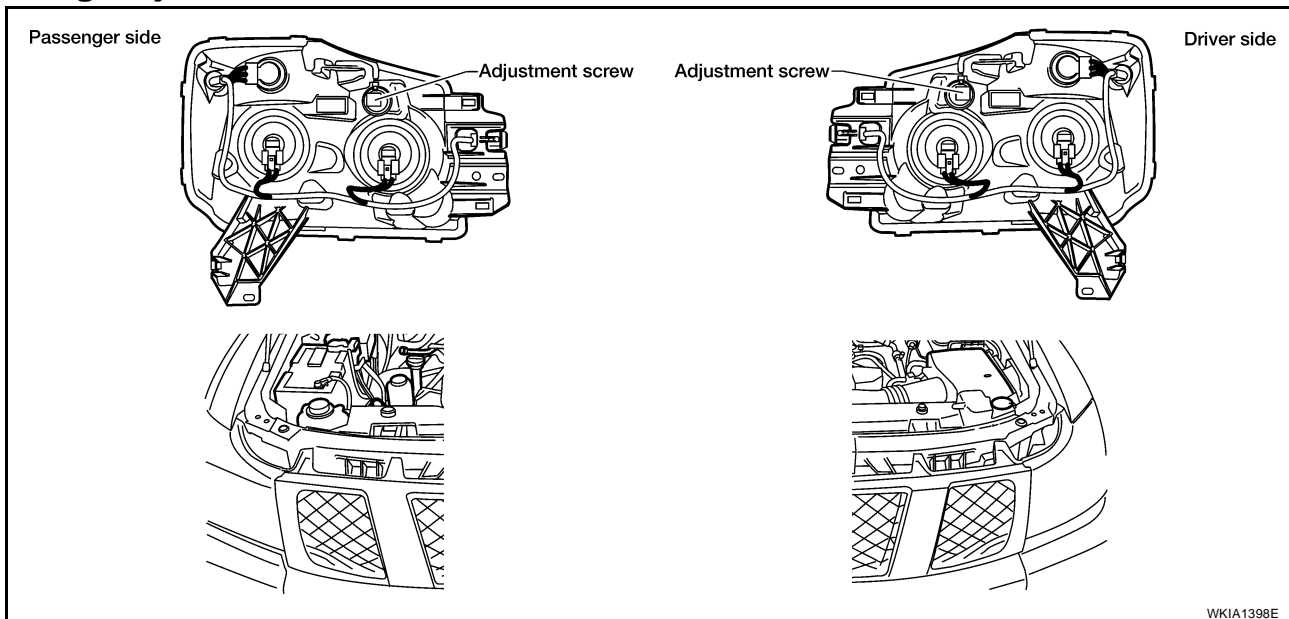

For details, refer to the regulations in your state.

NOTE:


- If the vehicle front body has been repaired and/or the headlamp assembly has been replaced, check aiming.
- Before performing aiming adjustment, check the following:
 - Ensure all tires are inflated to correct pressure.
 - Place vehicle and screen on level surface.
 - Ensure there is no load in vehicle other than the driver (or equivalent weight placed in driver's position). Coolant and engine oil filled to correct level, and fuel tank full.
 - Confirm spare tire, jack and tools are properly stowed.
- Aim each headlamp individually and ensure other headlamp beam pattern is blocked from screen.

A
B
C
D
E
F
G
H
I
J
LT
L
M

HEADLAMP (FOR USA)

Headlamp Aiming

EKS00GAT

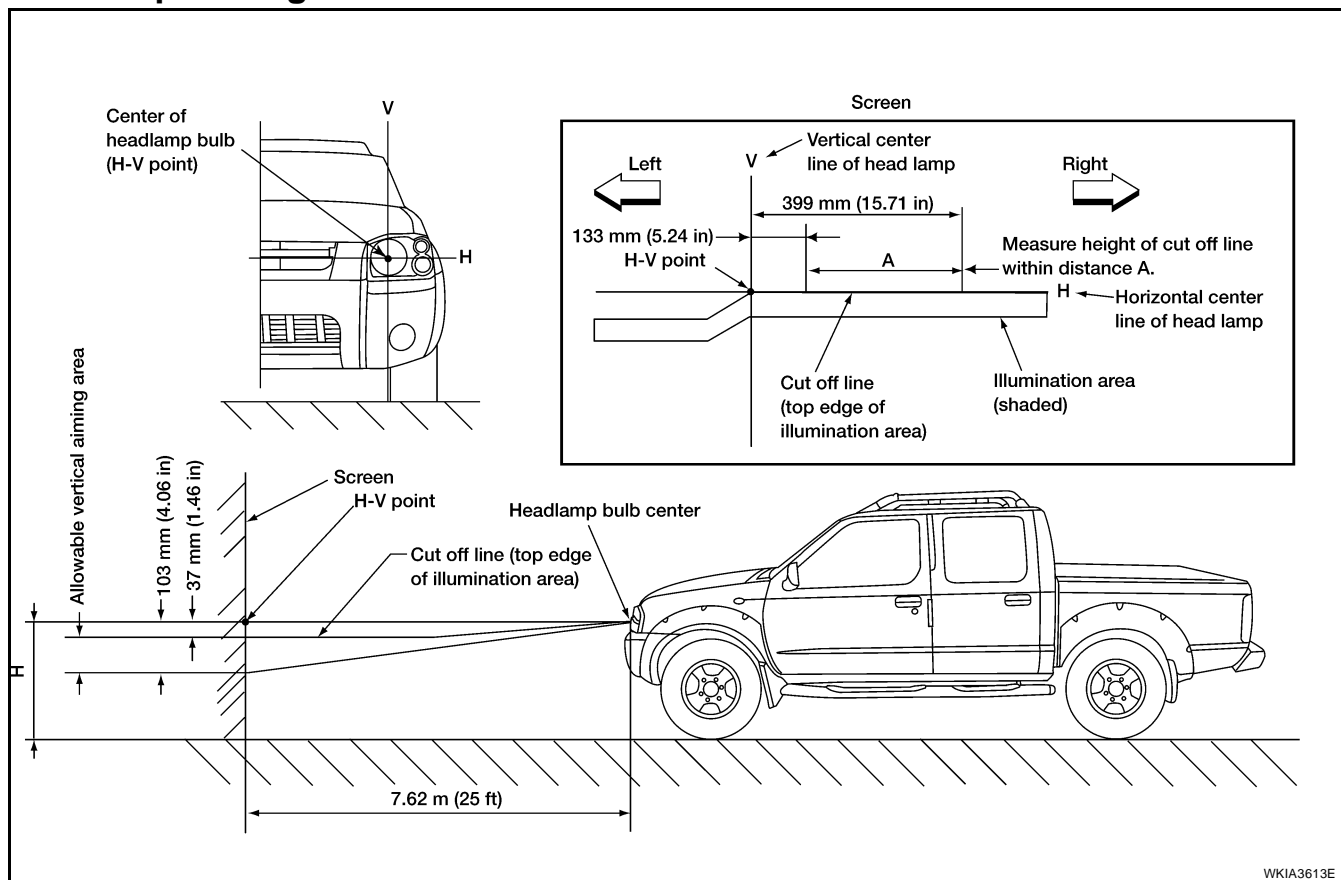

WKIA3613E

NOTE:

Basic illuminating area for adjustment should be within the range shown on the aiming chart. Adjust headlamps accordingly.

LOW BEAM AND HIGH BEAM

1. Turn headlamp low beam on.
2. Use adjusting screw to perform aiming adjustment.

Bulb Replacement

HEADLAMP (OUTER SIDE), FOR LOW BEAM

Removal

NOTE:

Reach through wheel opening for access.

1. Turn headlamp switch OFF.
2. Disconnect electrical connector.
3. Turn headlamp bulb counterclockwise.
4. Remove headlamp bulb.

Installation

Installation is in the reverse order of removal.

HEADLAMP (INNER SIDE), FOR HIGH BEAM

Removal

1. Turn headlamp switch OFF.
2. Disconnect electrical connector.
3. Turn headlamp bulb counterclockwise.
4. Remove headlamp bulb.

EKS00AT1

HEADLAMP (FOR USA)

Installation

Installation is in the reverse order of removal.

FRONT TURN SIGNAL/PARKING LAMP

Removal

NOTE:

Reach through wheel opening for access.

1. Turn bulb socket counterclockwise.
2. Remove bulb socket.
3. Pull bulb to remove it from the socket.

Installation

Installation is in the reverse order of removal.

FRONT SIDE MARKER LAMP

Removal

NOTE:

Reach through wheel opening for access.

1. Turn the bulb socket counterclockwise.
2. Remove bulb socket.
3. Pull bulb to remove it from the socket.

Installation

Installation is in the reverse order of removal.

CAUTION:


After installing the bulb, be sure to install the bulb socket securely to ensure watertightness.

Removal and Installation FRONT COMBINATION LAMP

EKS00AT2

Removal

1. Remove the grille. Refer to [EI-17, "Removal and Installation"](#).
2. Remove the front bumper filler panel.
3. Disconnect the connector.
4. Remove front combination lamp bolts.

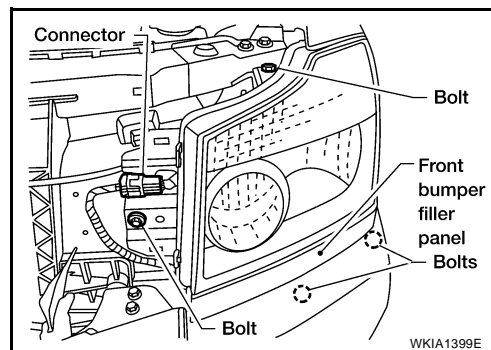

5. Remove front combination lamp.


Installation

Installation is in the reverse order of removal.

HEADLAMP (FOR USA)

Disassembly and Assembly FRONT COMBINATION LAMP

EKS00AT3

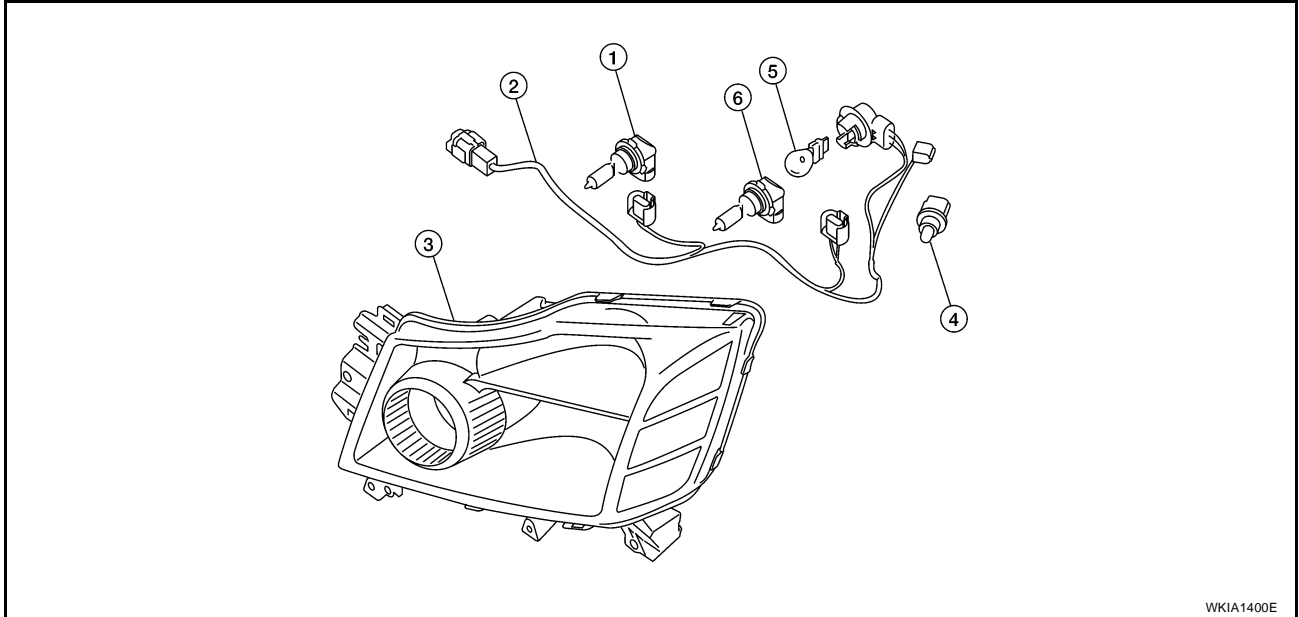

WKIA1400E


- | | | |
|------------------------------|----------------------------------|-----------------------------|
| 1. Headlamp bulb (High beam) | 2. Wiring harness assembly | 3. Headlamp assembly |
| 4. Side marker lamp bulb | 5. Parking/turn signal lamp bulb | 6. Headlamp bulb (Low beam) |

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM - Component Parts and Harness Connector Location

PF2:26010

EKS00AT4

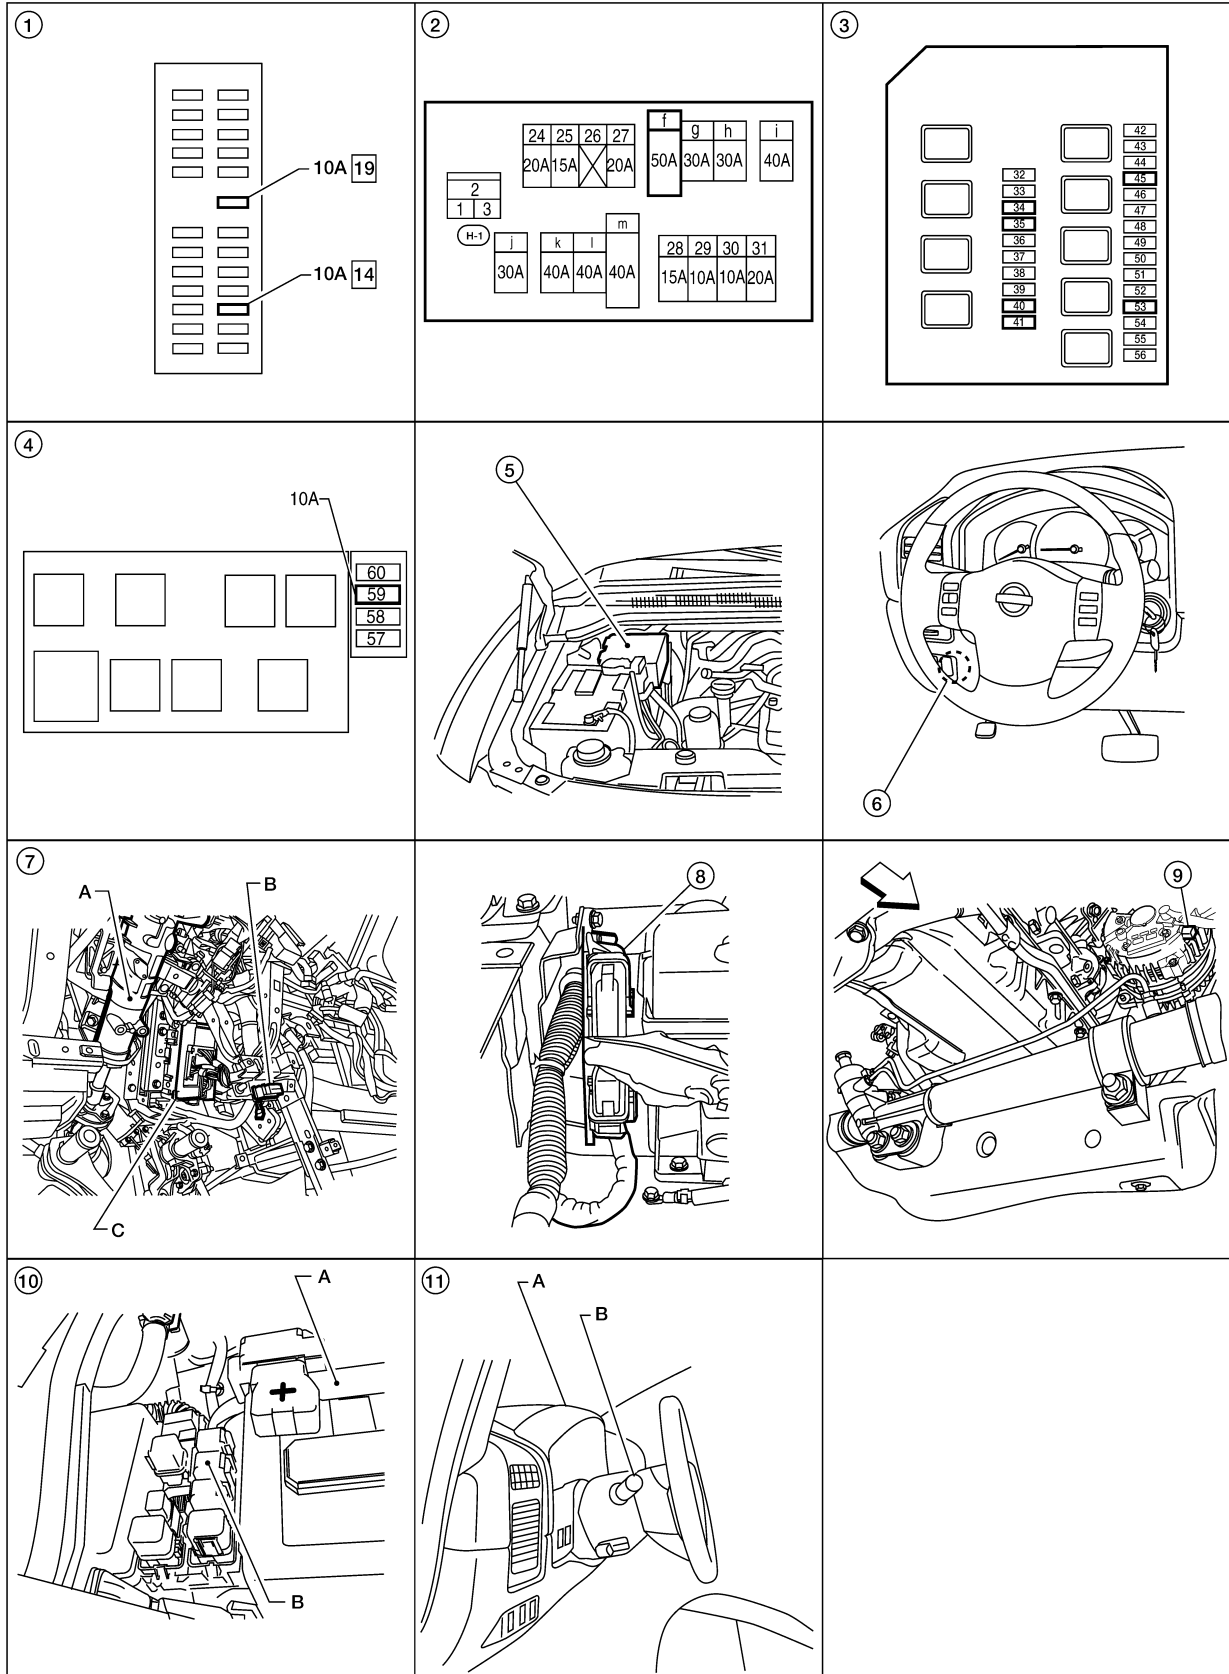

A
B
C
D
E
F
G
H
I
J
LT
L
M

WKIA4519E

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

⇐ Front

- | | | |
|--|---|--|
| 1. Fuse Block (J/B) | 2. Fuse and fusible link box | 3. IPDM E/R fuse layout |
| 4. Fuse and relay box | 5. IPDM E/R E118, E119, E120, E121, E122, E123, E124 | 6. Parking brake switch M11 |
| 7. A. Steering column
B. Data link connector M22
C. BCM M18, M19, M20
(View with instrument lower panel LH removed) | 8. ECM E16
(View with battery removed) | 9. Generator E205
(View from under vehicle) |
| 10. A. Battery
B. Daytime light relay E103 | 11. A. Combination meter M24
B. Combination switch (lighting switch) M28 | |

System Description

EKS00AT5

Daytime light system turns on daytime light lamps while driving. Daytime light lamps are not turned on if engine is activated with parking brake on. Take off parking brake to turn on daytime light lamps. The lamps turn off when lighting switch is in the 2ND position or AUTO position (Headlamp is "ON") and when lighting switch is in the PASSING position. (Daytime light lamps are not turned off only by parking brake itself.) A parking brake signal and engine run or stop signal are sent to BCM (body control module) by CAN communication line.

OUTLINE

Power is supplied at all times

- to ignition relay, located in the IPDM E/R (intelligent power distribution module engine room), and
- through 50A fusible link (letter f , located in the fuse and fusible link box)
- to BCM terminal 70, and
- through 20A fuse (No. 53, located in the IPDM E/R)
- to CPU (central processing unit) of the IPDM E/R, and
- through 10A fuse [No. 19, located in the fuse block (J/B)]
- to combination meter terminal 8, and
- through 10A fuse (No. 45, located in the IPDM E/R)
- to daytime light relay terminals 2 and 5.

When the ignition switch is in ON or START position, power is supplied

- to ignition relay, located in the IPDM E/R, and
- through 10A fuse (No. 59, located in the fuse and relay box)
- to BCM terminal 38, and
- through 10A fuse [No. 14, located in the fuse block (J/B)]
- to combination meter terminal 24.

Ground is supplied

- to BCM terminal 67 and
- to combination meter terminal 17
- through grounds M57, M61 and M79.

DAYTIME LIGHT OPERATION

With the engine running, the lighting switch in the OFF or 1ST position and parking brake released, the IPDM E/R receives input requesting the daytime lights illuminate. This input is communicated across the CAN communication lines. The CPU of the IPDM E/R controls the daytime light relay coil. When energized, this relay directs power

- through daytime light relay terminal 3
- through front combination lamp LH terminal 3
- through front combination lamp LH terminal 2
- through IPDM E/R terminal 55
- through 10A fuse (No. 35, located in the IPDM E/R)
- through 10A fuse (No. 34, located in the IPDM E/R)

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

- through IPDM E/R terminal 56
- to front combination lamp RH terminal 2.

Ground is supplied

- to front combination lamp RH terminal 3
- through grounds E9, E15 and E24.

With power and ground supplied, the daytime lights illuminate. The high beam headlamps are now wired in series and illuminate at a reduced intensity.

COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#) .

AUTO LIGHT OPERATION

For auto light operation, refer to [LT-49, "System Description"](#) .

CAN Communication System Description

Refer to [LAN-25, "CAN COMMUNICATION"](#) .


EKS00AT6

A
B
C
D
E
F
G
H
I
J
LT
L
M

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

Schematic

EKS00AT7

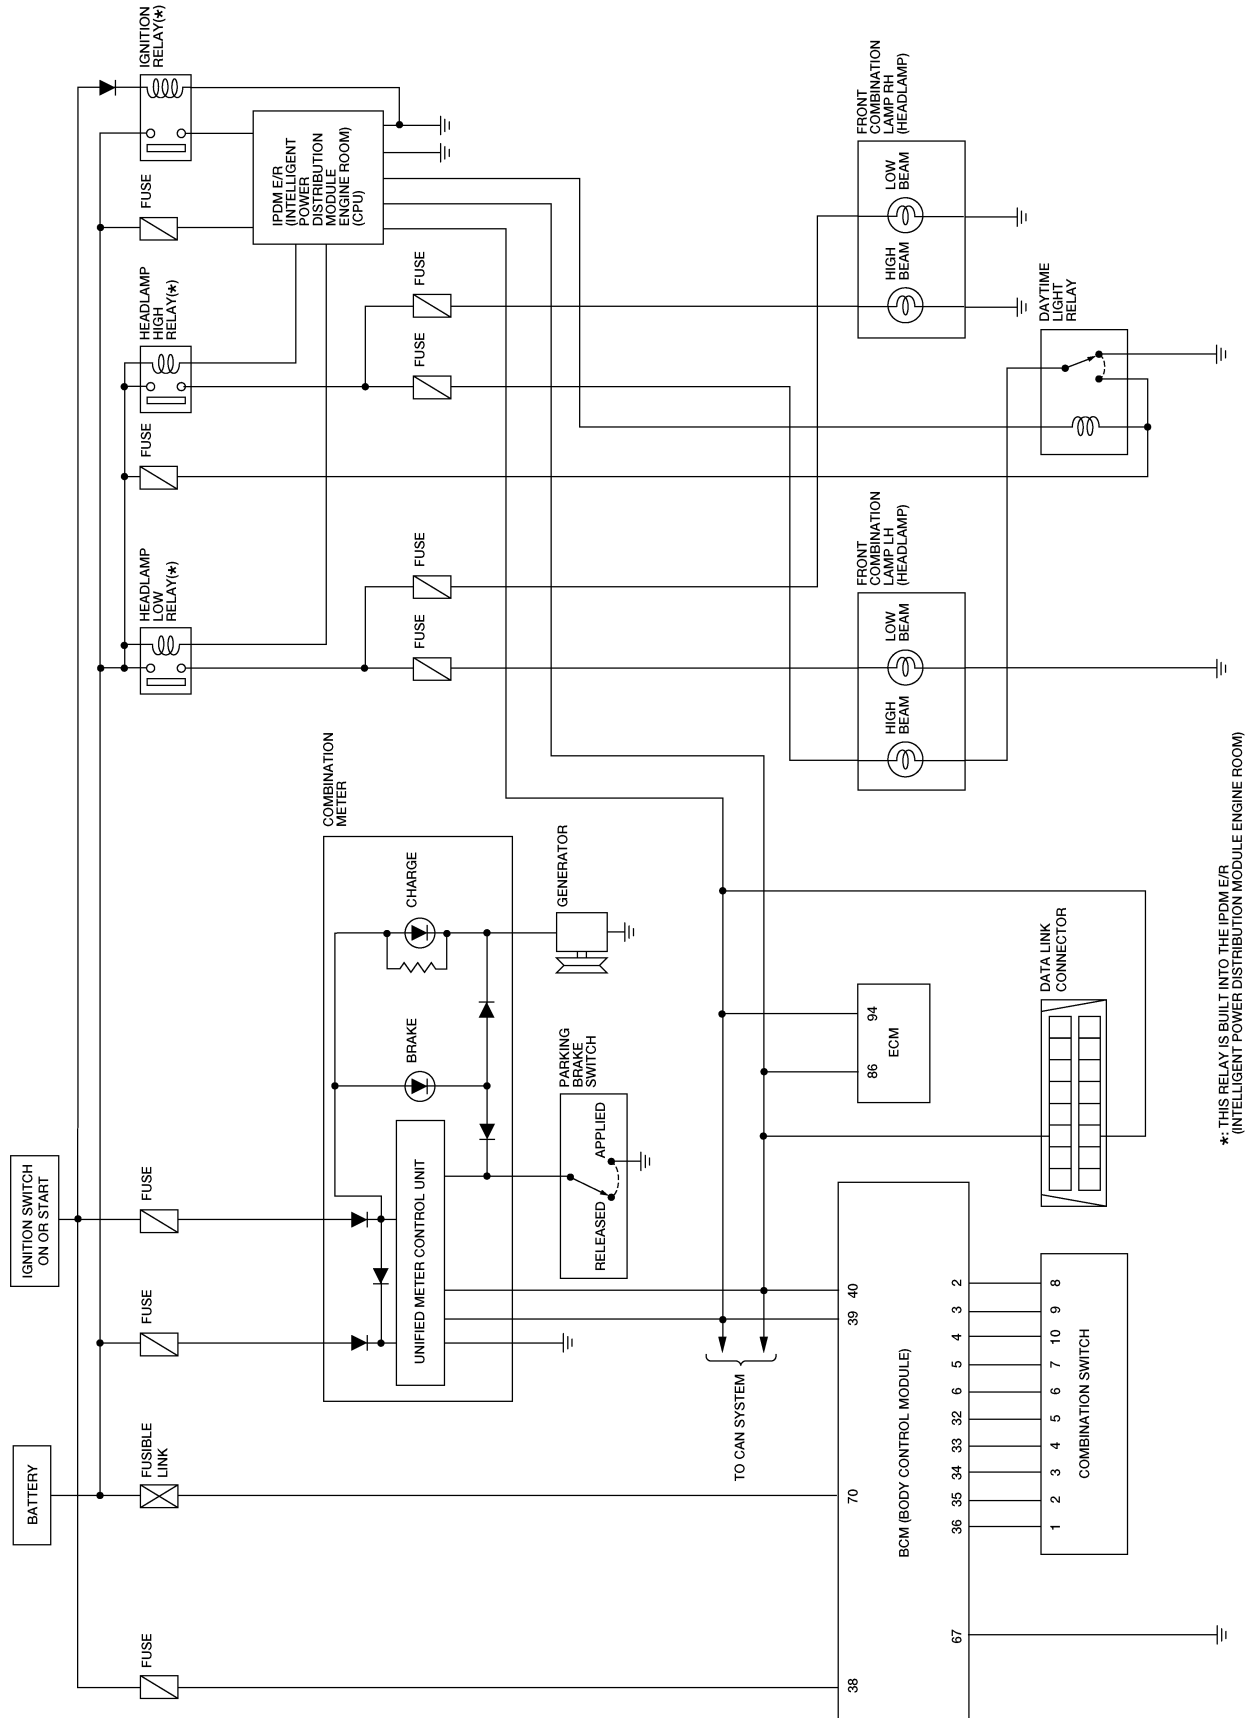

*: THIS RELAY IS BUILT INTO THE IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

WKWA3459E

 
 

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

Wiring Diagram — DTRL —

EKS00AT8

LT-DTRL-01

— : DATA LINE


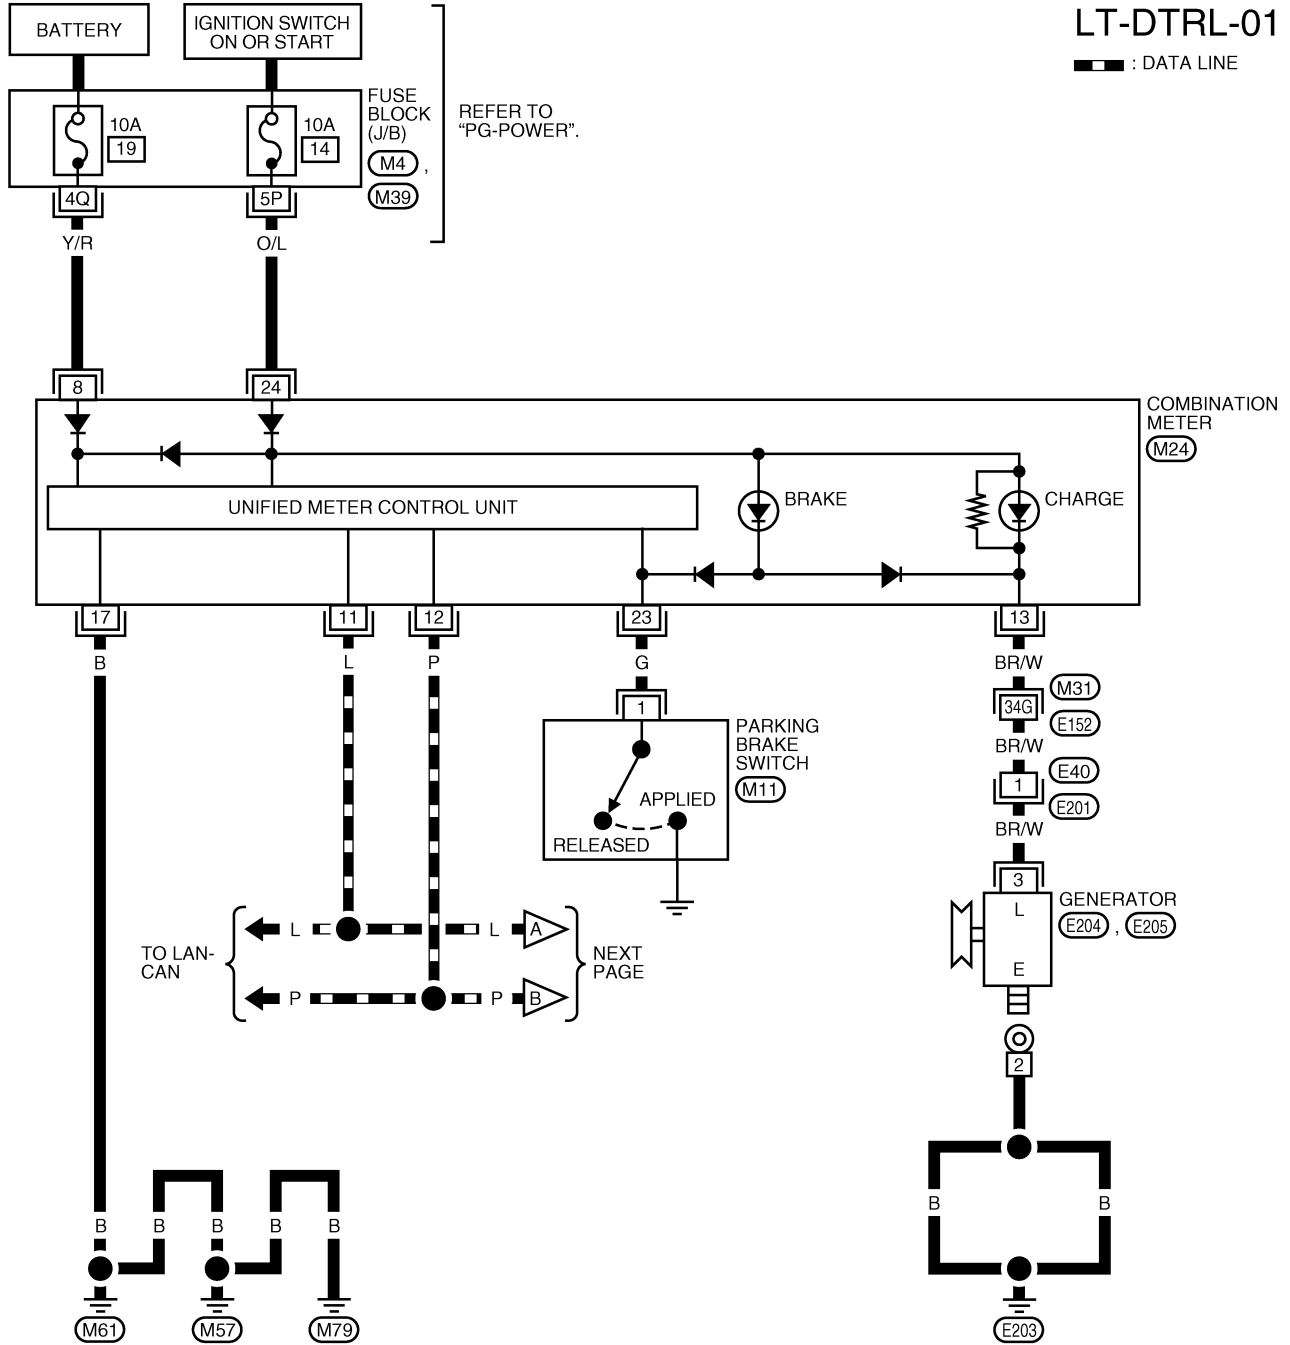


REFER TO THE FOLLOWING.
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA3460E

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

LT-DTRL-02

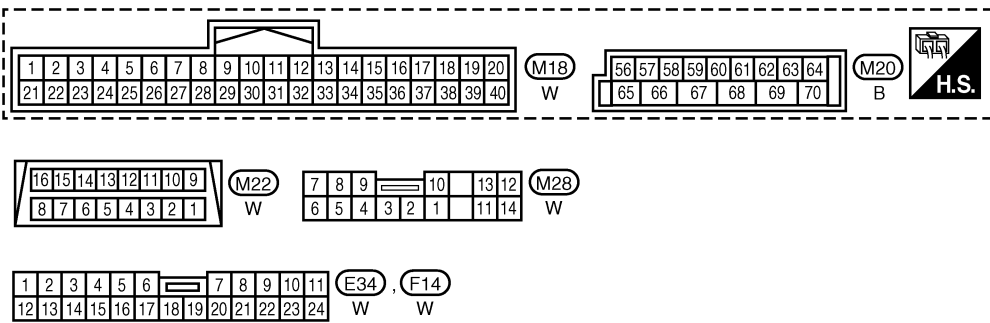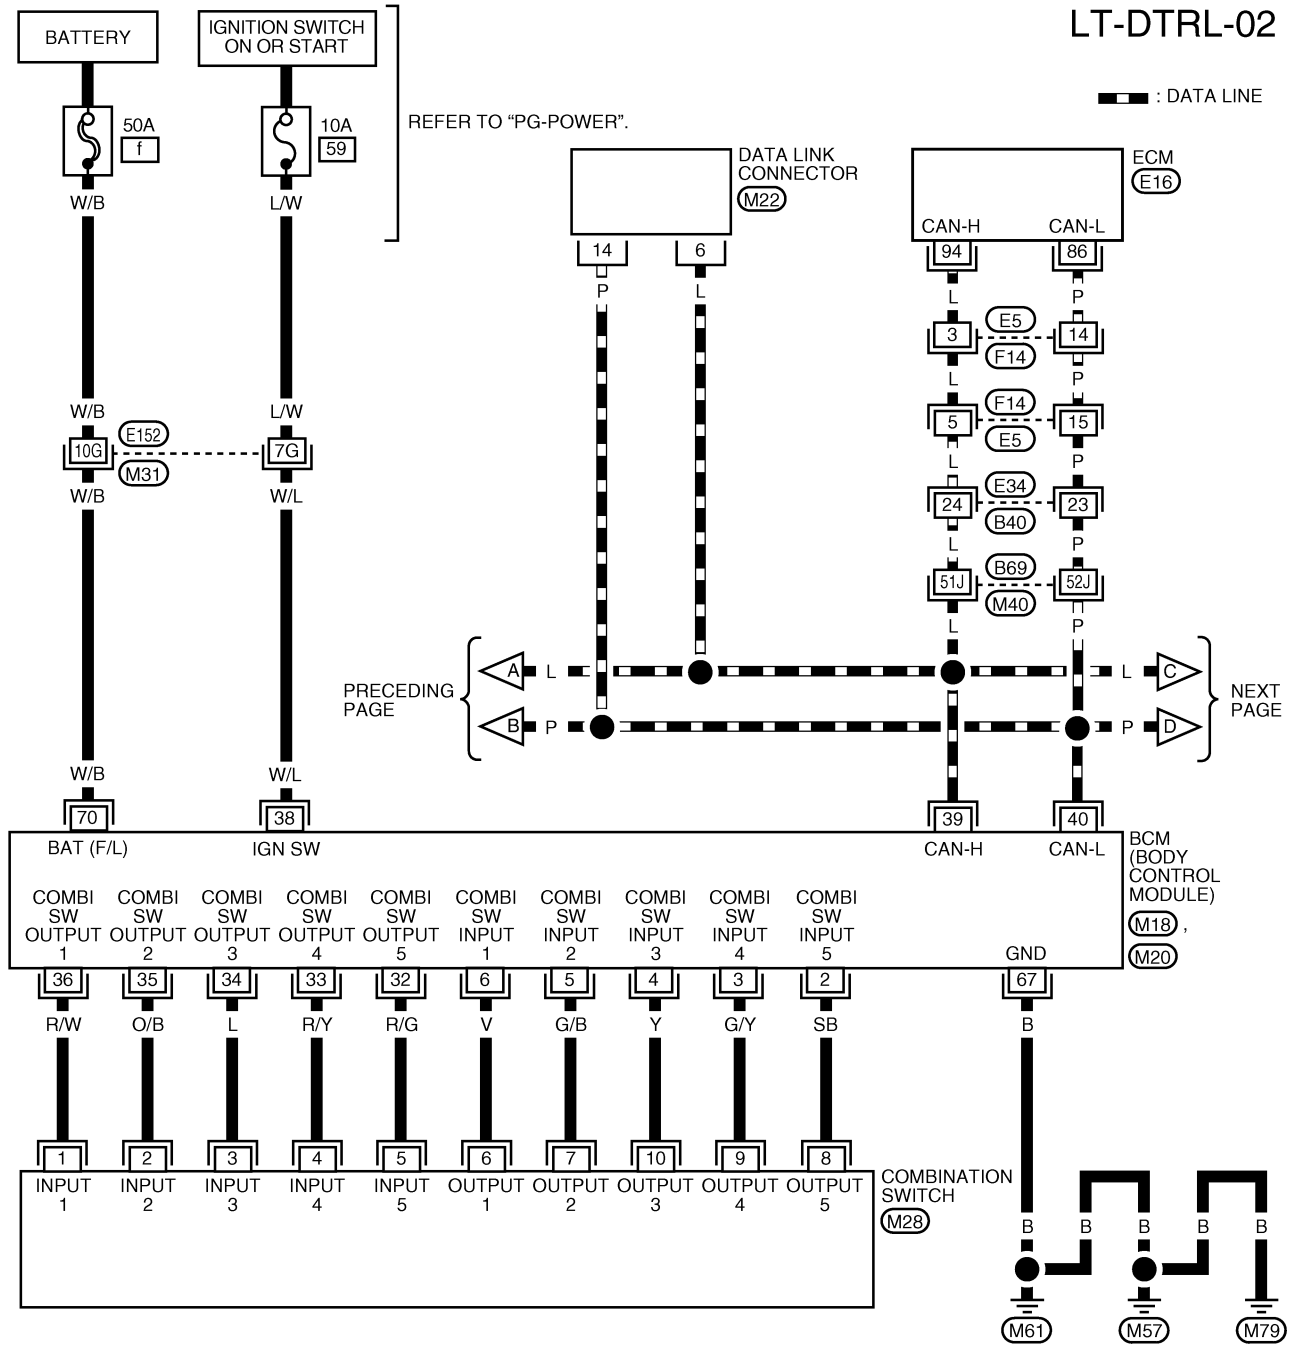

REFER TO THE FOLLOWING.


- (E16) - ELECTRICAL UNITS
- (M31), (M40) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA3461E

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

LT-DTRL-03

— : DATA LINE

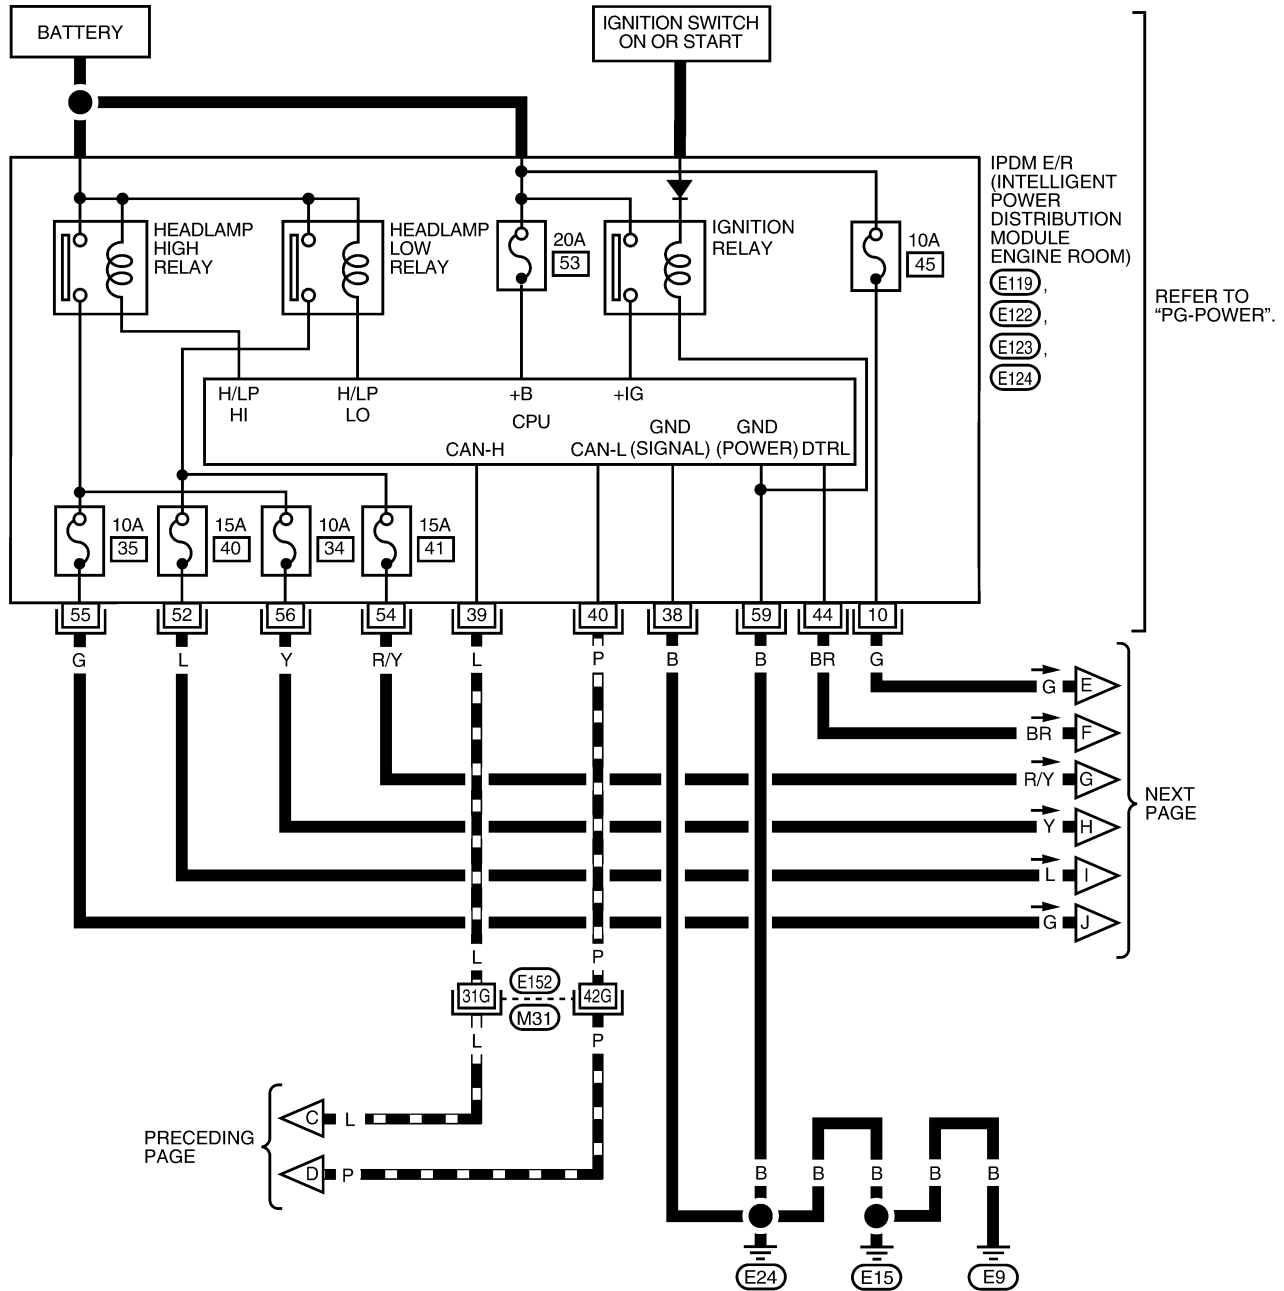

A
B
C
D
E
F
G
H
I
J
LT
L
M



3	4	5	6	7	8	9	E119	37	38	39	40	41	42	E122	49	50	51	E123	57	58	59	E124	
10	11	12	13	14	15	16	W	43	44	45	46	47	48	W	52	53	54	55	56	60	61	62	B

REFER TO THE FOLLOWING.
(M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA3462E

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

 LT-DTRL-04

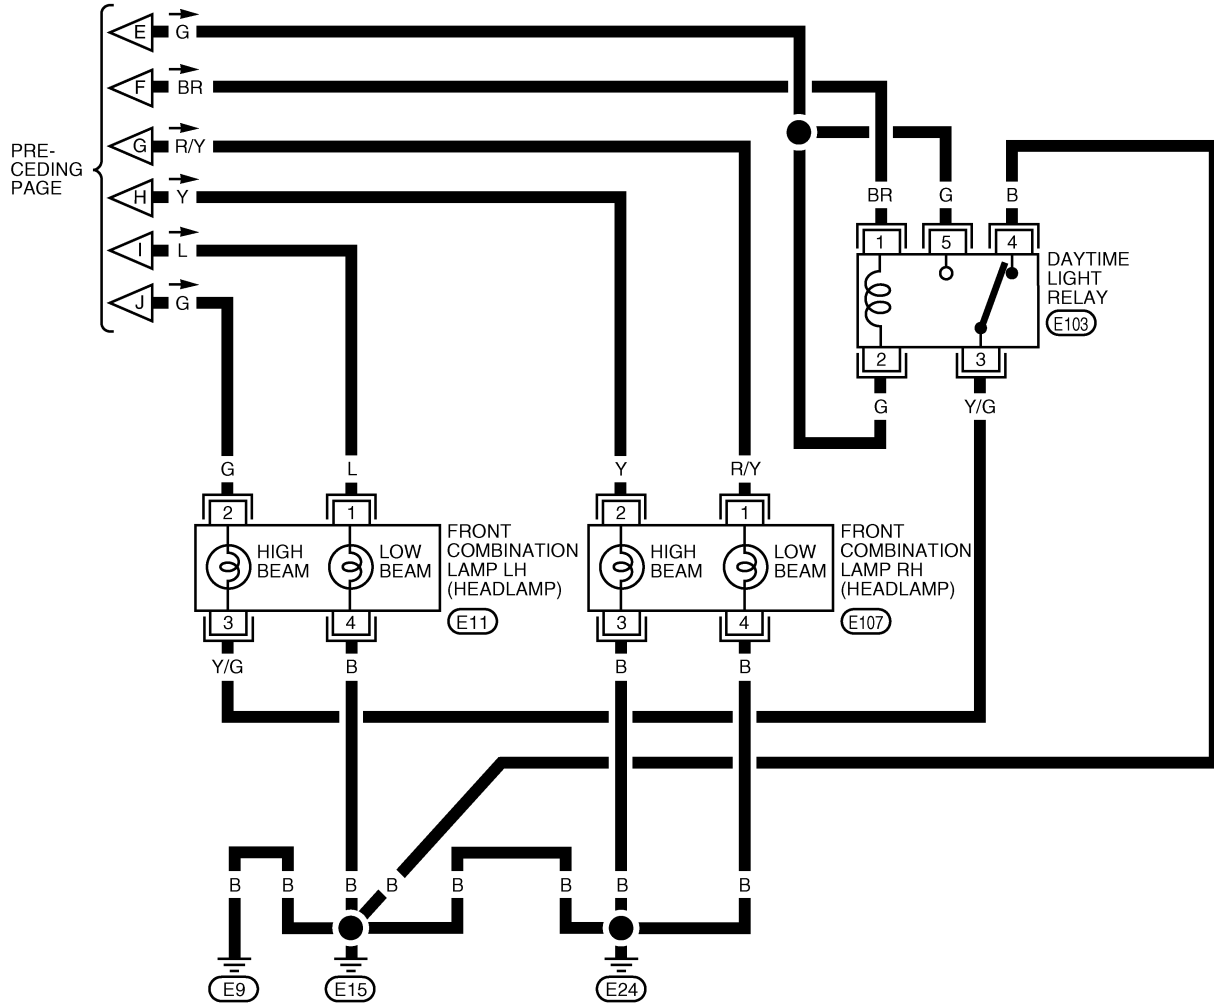

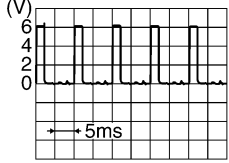
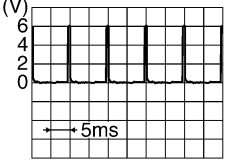
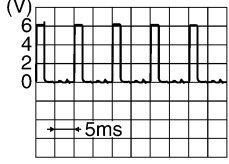
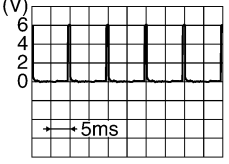
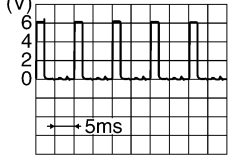


WKWA3463E

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -


Terminals and Reference Values for BCM

EKS00AT9

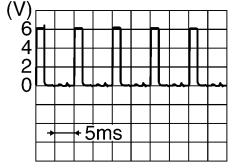Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)
			Ignition switch	Operation or condition	
2	SB	Combination switch input 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>
3	G/Y	Combination switch input 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5292E</p>
4	Y	Combination switch input 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>
5	G/B	Combination switch input 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5292E</p>
6	V	Combination switch input 1			
32	R/G	Combination switch output 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>
33	R/Y	Combination switch output 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5292E</p>
34	L	Combination switch output 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>

A
B
C
D
E
F
G
H
I
J
LT
L
M

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

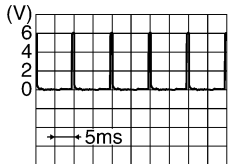Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)
			Ignition switch	Operation or condition	
35	O/B	Combination switch output 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5292E
36	R/W	Combination switch output 1			
38	W/L	Ignition switch (ON)	ON	—	Battery voltage
39	L	CAN-H	—	—	—
40	P	CAN-L	—	—	—
67	B	Ground	ON	—	0V
70	W/B	Battery power supply (fusible link)	OFF	—	Battery voltage

How to Proceed With Trouble Diagnosis

EKS00ATA

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-34, "System Description"](#).
3. Perform the Preliminary Check. Refer to [LT-42, "Preliminary Check"](#).
4. Check symptom and repair or replace the cause of malfunction.
5. Does the headlamp operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

Preliminary Check

EKS00ATB

CHECK BCM CONFIGURATION

1. CHECK BCM CONFIGURATION

Confirm BCM configuration for "DTRL" is set to "WITH". Refer to [BCS-14, "READ CONFIGURATION PROCEDURE"](#).

OK or NG

- OK >> Continue preliminary check. Refer to [LT-42, "INSPECTION FOR POWER SUPPLY AND GROUND CIRCUIT"](#).
- NG >> Change BCM configuration for "DTRL" to "WITH". Refer to [BCS-16, "WRITE CONFIGURATION PROCEDURE"](#).

INSPECTION FOR POWER SUPPLY AND GROUND CIRCUIT

1. CHECK FUSES

Check for blown fuses or fusible link.

Unit	Power source	Fuse and fusible link No.
BCM	Battery	f
	Ignition switch ON or START position	59
Daytime light relay	Battery	45

Refer to [LT-37, "Wiring Diagram — DTRL —"](#).

OK or NG

- OK >> GO TO 2.
- NG >> If fuse or fusible link is blown, be sure to eliminate cause of malfunction before installing new fuse or fusible link. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#).

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -


2. CHECK POWER SUPPLY CIRCUIT

1. Disconnect BCM connectors.
2. Check voltage between BCM harness connector and ground.

BCM		(-)	Ignition switch position		
(+) Terminal			OFF	ACC	ON
Connector	Terminal	Ground	0V	0V	Battery voltage
M18	38		Battery voltage	Battery voltage	Battery voltage
M20	70				

OK or NG

- OK >> GO TO 3.
 NG >> Check harness for open between BCM and fuse or fusible link.

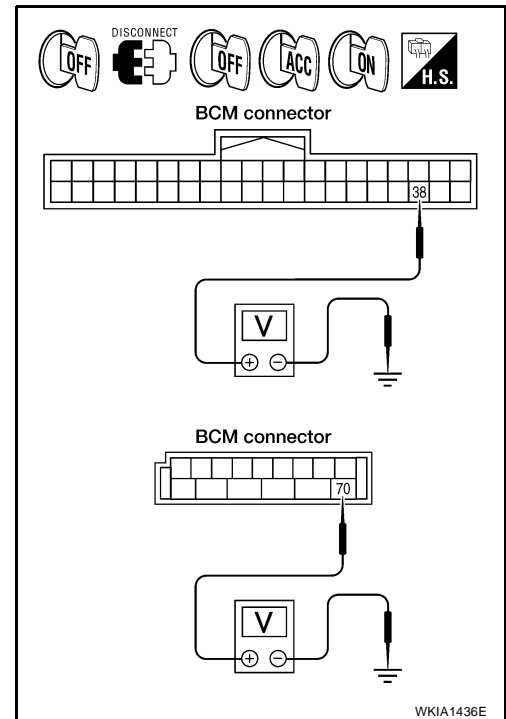


3. CHECK GROUND CIRCUIT

Check continuity between BCM harness connector and ground.

BCM		Continuity
Connector	Terminal	
M20	67	Ground Yes

OK or NG

- OK >> Inspection End.
 NG >> Check ground circuit harness.

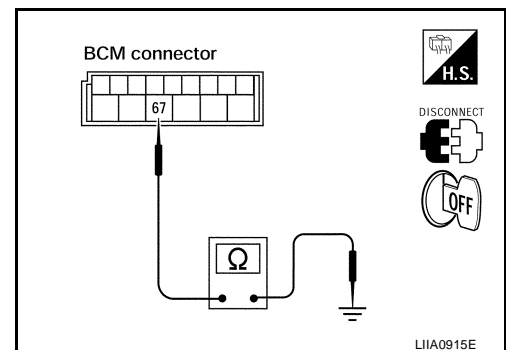

INSPECTION PARKING BRAKE SWITCH CIRCUIT

1. CHECK BRAKE INDICATOR

1. Turn ignition switch ON.
2. Apply parking brake.
3. Release parking brake.

Brake indicator in combination meter should illuminate when parking brake is applied and turn OFF when released.

OK or NG

- OK >> Inspection End.
 NG >> GO TO 2.

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -


2. CHECK PARKING BRAKE SWITCH SIGNAL

1. Turn ignition switch OFF.
2. Disconnect parking brake switch connector.
3. Turn ignition switch ON.
4. Check voltage between parking brake switch harness connector M11 terminal 1 and ground.

1 - Ground : Battery voltage should exist.

OK or NG

- OK >> Replace parking brake switch.
- NG >> GO TO 3.

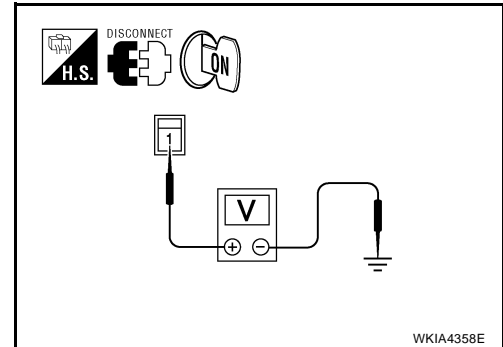


3. CHECK PARKING BRAKE SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter connector.
3. Check continuity between combination meter harness connector M24 terminal 23 and parking brake switch harness connector M11 terminal 1.

1 - 23 : Continuity should exist.

OK or NG

- OK >> Replace combination meter. Refer to [IP-13, "COMBINATION METER"](#).
- NG >> Repair harness or connector.

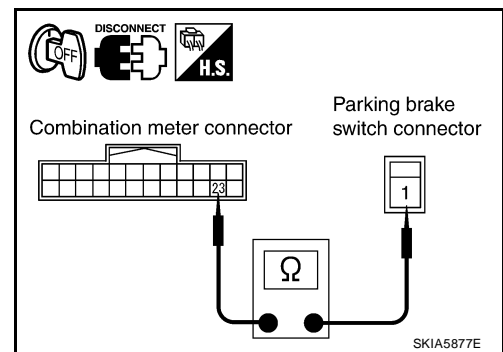

CONSULT-II Functions

EKS00ATC

Refer to [LT-17, "CONSULT-II Function \(BCM\)"](#) in HEADLAMP (FOR USA).

Refer to [LT-20, "CONSULT-II Function \(IPDM E/R\)"](#) in HEADLAMP (FOR USA).

Daytime Light Control Does Not Operate Properly (Normal Headlamps Operate Properly)

EKS00G9S

1. DAYTIME LIGHT ACTIVE TEST


Ⓟ With CONSULT-II

1. Select "BCM" on CONSULT-II, and select "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
3. Select "DAYTIME RUNNING LIGHT" on "SELECT TEST ITEM" screen.
4. Touch "ON" screen.
5. Make sure daytime light operation.

Daytime light should operate.

OK or NG

- OK >> GO TO 2.
- NG >> GO TO 4.

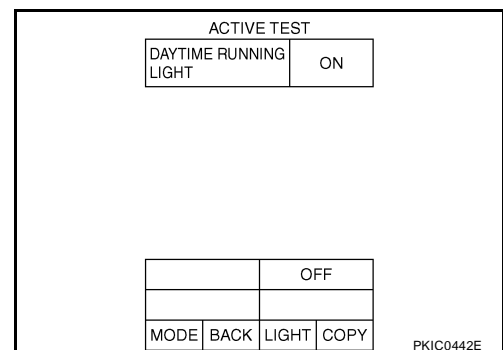

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

2. CHECK INPUT SIGNAL

1. Select "BCM" on CONSULT-II. With "HEAD LAMP" data monitor, make sure "ENGINE RUN" turns ON-OFF linked with operation of engine running or stop.

Engine running : **ENGINE RUN ON**
Engine stop : **ENGINE RUN OFF**

2. Select "BCM" on CONSULT-II. With "HEAD LAMP" data monitor, make sure "PKB SW" turns ON-OFF linked with operation of parking brake switch.

Parking brake ON : **PKB SW ON**
Parking brake OFF : **PKB SW OFF**

DATA MONITOR			
MONITOR			
ENGINE RUN	ON		
PKB SW	ON		
		RECORD	
MODE	BACK	LIGHT	COPY

PKIA7591E

OK or NG

OK >> GO TO 3.

NG >> Check BCM CAN communication system. Refer to [BCS-13, "CAN Communication Inspection Using CONSULT-II \(Self-Diagnosis\)"](#).

3. CHECK INPUT SIGNAL

1. Start engine and release parking brake. Headlamp switch OFF.
2. Select "IPDM E/R" on CONSULT-II. With "DATA MONITOR", make sure "DTRL REQ" turns ON-OFF linked with operation of parking brake switch.

Parking brake ON : **DTRL REQ ON**
Parking brake OFF : **DTRL REQ OFF**

OK or NG

OK >> Replace IPDM E/R. Refer to [PG-30, "Removal and Installation of IPDM E/R"](#).

NG >> Replace BCM. Refer to [BCS-20, "Removal and Installation"](#).

DATA MONITOR			
MONITOR			
DTRL REQ	OFF		
		RECORD	
MODE	BACK	LIGHT	COPY

SKIB4913E

4. CHECK DAYTIME LIGHT RELAY POWER SUPPLY CIRCUIT


1. Turn ignition switch OFF.
2. Remove daytime light relay.
3. Check voltage between daytime light relay harness connector E103 terminals 2, 5 and ground.

2, 5 - Ground : **Battery voltage**

OK or NG

OK >> GO TO 5.

NG >> Repair harness or connector.

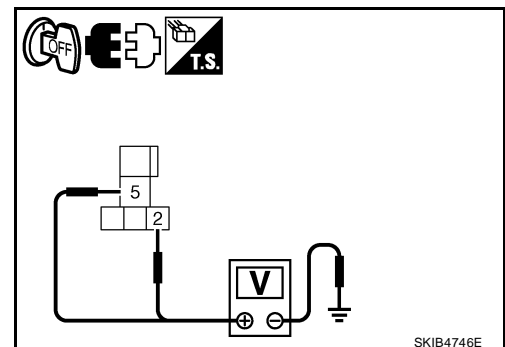

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -


5. CHECK DAYTIME LIGHT RELAY

1. Apply battery voltage to daytime light relay terminal 2 and ground terminal 1.
2. Check continuity between terminals 3 and 5.

3 - 5 : Continuity should exist.

OK or NG

- OK >> GO TO 6.
 NG >> Replace daytime light relay.

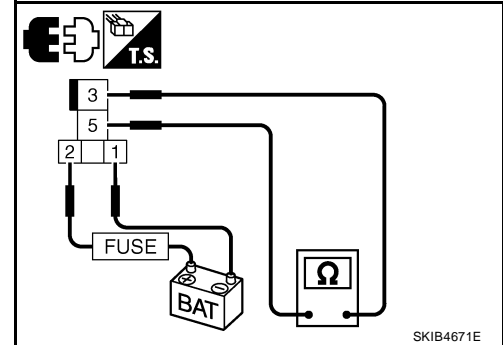


6. CHECK CIRCUIT BETWEEN DAYTIME LIGHT RELAY AND IPDM E/R

1. Disconnect IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector (A) E122 terminal 44 and daytime light relay harness connector (B) E103 terminal 1.

44 - 1 : Continuity should exist.

OK or NG

- OK >> GO TO 7.
 NG >> Repair harness or connector.

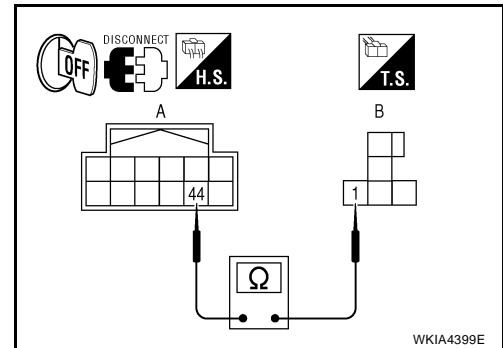

7. CHECK DAYTIME LIGHT RELAY SIGNAL

1. Connect IPDM E/R connector.
2. Install daytime light relay.
3. Turn ignition switch ON.
4. Apply parking brake.
5. Check voltage between IPDM E/R harness connector E122 terminal 44 and ground.



44 - Ground : Battery voltage

6. Start engine and release parking brake. Headlamp switch OFF.
7. Check voltage between IPDM E/R harness connector E122 terminal 44 and ground.

44 - Ground : Approx. 0V

OK or NG

- OK >> Check connecting condition daytime relay harness connector.
 NG >> GO TO 8.

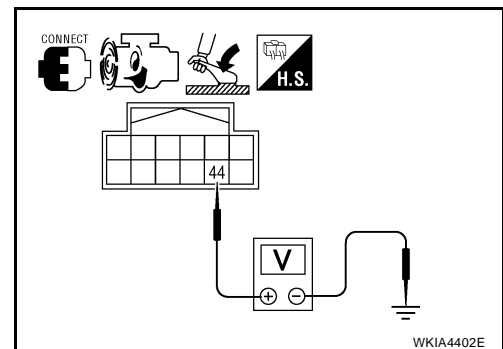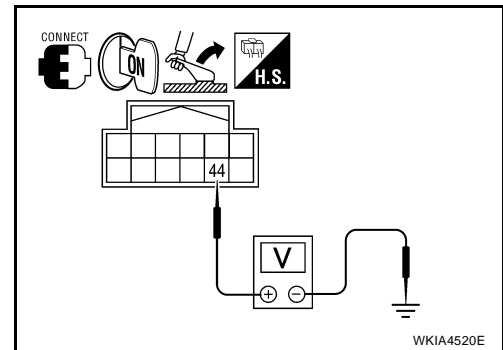

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

8. CHECK CAN COMMUNICATIONS

Select "BCM" by CONSULT-II, and perform self-diagnosis for BCM.

Displayed self-diagnosis results

NO DTC>> Replace BCM. Refer to [BCS-20, "Removal and Installation"](#) .

CAN COMM CIRCUIT>> Check BCM CAN communication system.
Refer to [BCS-13, "CAN Communication Inspection Using CONSULT-II \(Self-Diagnosis\)"](#) .

SELF-DIAG RESULTS			
DTC RESULTS		TIME	
CAN COMM CIRCUIT [U1000]		PAST	
ERASE		PRINT	
MODE	BACK	LIGHT	COPY

SKIA1039E

Aiming Adjustment HEADLAMP

Refer to [LT-29, "Aiming Adjustment"](#) .

Bulb Replacement HEADLAMP

Refer to [LT-30, "Bulb Replacement"](#) .

Removal and Installation FRONT COMBINATION LAMP

Refer to [LT-31, "Removal and Installation"](#) .

Disassembly and Assembly FRONT COMBINATION LAMP

Refer to [LT-32, "Disassembly and Assembly"](#) .

EKS00ATE

EKS00ATF

EKS00ATG

EKS00ATH

A
B
C
D
E
F
G
H
I
J
LT
L
M


AUTO LIGHT SYSTEM

AUTO LIGHT SYSTEM

PFP:28491

Component Parts and Harness Connector Location

EKS00AT1

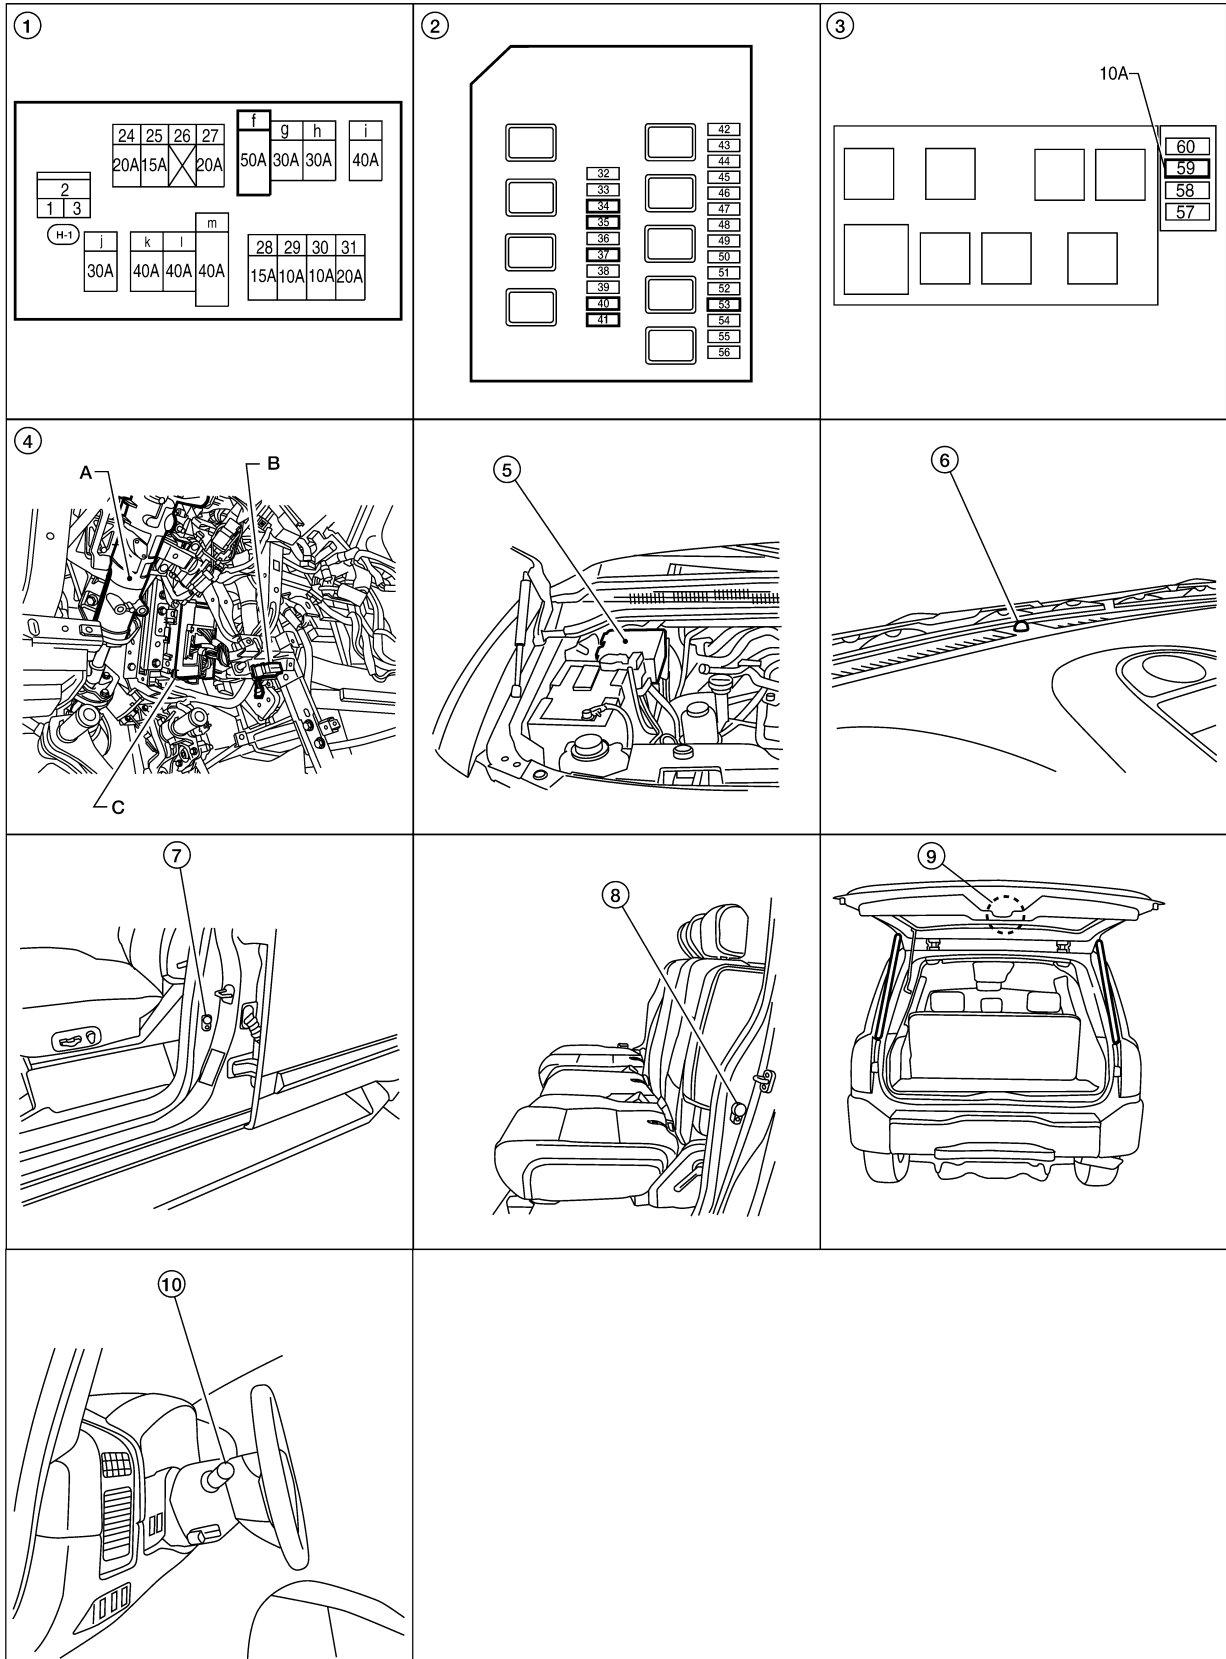

WKIA4521E

AUTO LIGHT SYSTEM

- | | | | |
|--|--|--|---|
| 1. Fuse and fusible link box Fuse Block (J/B) | 2. IPDM E/R fuse layout | 3. Fuse and relay box | A |
| 4. A. Steering column
B. Data link connector M22
C. BCM M18, M19, M20
(View with instrument lower panel LH removed) | 5. IPDM E/R E118, E119, E120, E121, E122, E123, E124 | 6. Optical sensor M402 | B |
| 7. Front door switch LH B8, RH B108 | 8. Rear door switch LH B18, RH B116 | 9. Back door switch D502 (without power back door)
Back door latch (door ajar switch) D503 (with power back door) | C |
| 10. Combination switch (lighting switch) M28 | | | D |

System Description

EKS00ATJ

Automatically turns on/off the parking lamps and the headlamps in accordance with ambient light. Timing for when the lamps turn on/off can be selected using four modes.

OUTLINE

The auto light control system uses an optical sensor that detects outside brightness.

When the lighting switch is in "AUTO" position, it automatically turns on/off the parking lamps and the headlamps in accordance with the ambient light. Sensitivity can be adjusted in four steps. For the details of the setting, refer to [LT-57, "SETTING CHANGE FUNCTIONS"](#).

Optical sensor ground is supplied

- to optical sensor terminal 3
- through BCM (body control module) terminal 18.

When ignition switch is turned to "ON" position and when outside brightness is darker than prescribed level, input is supplied

- to BCM terminal 58
- through optical sensor terminal 4.

The headlamps will then illuminate. For a description of headlamp operation, refer to [LT-5, "System Description"](#).

COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#).

EXTERIOR LAMP BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the AUTO position, and the ignition switch is turned from ON or ACC to OFF, and one of the front doors is opened, the battery saver control feature is activated.

Under this condition, the headlamps remain illuminated for 5 minutes, then the headlamps are turned off. Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-II.

DELAY TIMER FUNCTION

When the ignition switch is ON and auto light switch is ON, the BCM turns on/off the headlamps. In delay timer function, ignition is OFF, auto light sensor power source is OFF and the headlamps are not turned on/off by the BCM. On condition that:

- when the state of ignition switch ON or ACC is ON and output judgment by auto light function is headlamp ON changes to ignition switch and ACC are OFF and any door switch is ON, output judgment by BCM should be headlamp ON for 5 minutes by timer. After time out, output judgment by BCM should be headlamp OFF.
- when the state of any door switch is turned to ON from OFF while 45 second or 5 minute timer is counting, timer stops, and restarts counting for 5 minutes, then BCM judges output as headlamp ON. After time out, BCM judges output as headlamp OFF.
- when the state of front door switch LH, front door switch RH, rear door switch LH, rear door switch RH or back door latch (door ajar switch) is ON turns to all door switches are OFF while 45 second or 5 minute timer is counting, timer stops, and restarts counting for 45 seconds, then BCM judges output as headlamp ON. After timer out, BCM judges output as headlamp OFF.

AUTO LIGHT SYSTEM

- when the state is ignition switch ON or ACC is ON or auto light switch OFF while timer is counting, timer stops counting and BCM turns on/off lamps according to headlamp function, front fog lamp function, auto light function and headlamp battery save function.

Delay timer control mode can be changed by the function setting of CONSULT-II.

CAN Communication System Description

EKS00ATK

Refer to [LAN-25, "CAN COMMUNICATION"](#) .

Major Components and Functions


EKS00ATL

Components	Functions
BCM	<ul style="list-style-type: none">● Turns on/off circuits of tail light and headlamp according to signals from light sensor, lighting switch (AUTO), front door switch LH, front door switch RH, rear door switch, back door switch (without power back door), back door latch (door ajar switch) (with power back door), and ignition switch (ON, OFF).
Optical sensor	<ul style="list-style-type: none">● Converts ambient light (lux) to voltage, and sends it to BCM. (Detects lightness of 50 to 1,300 lux)

AUTO LIGHT SYSTEM

Schematic

EKS00ATM

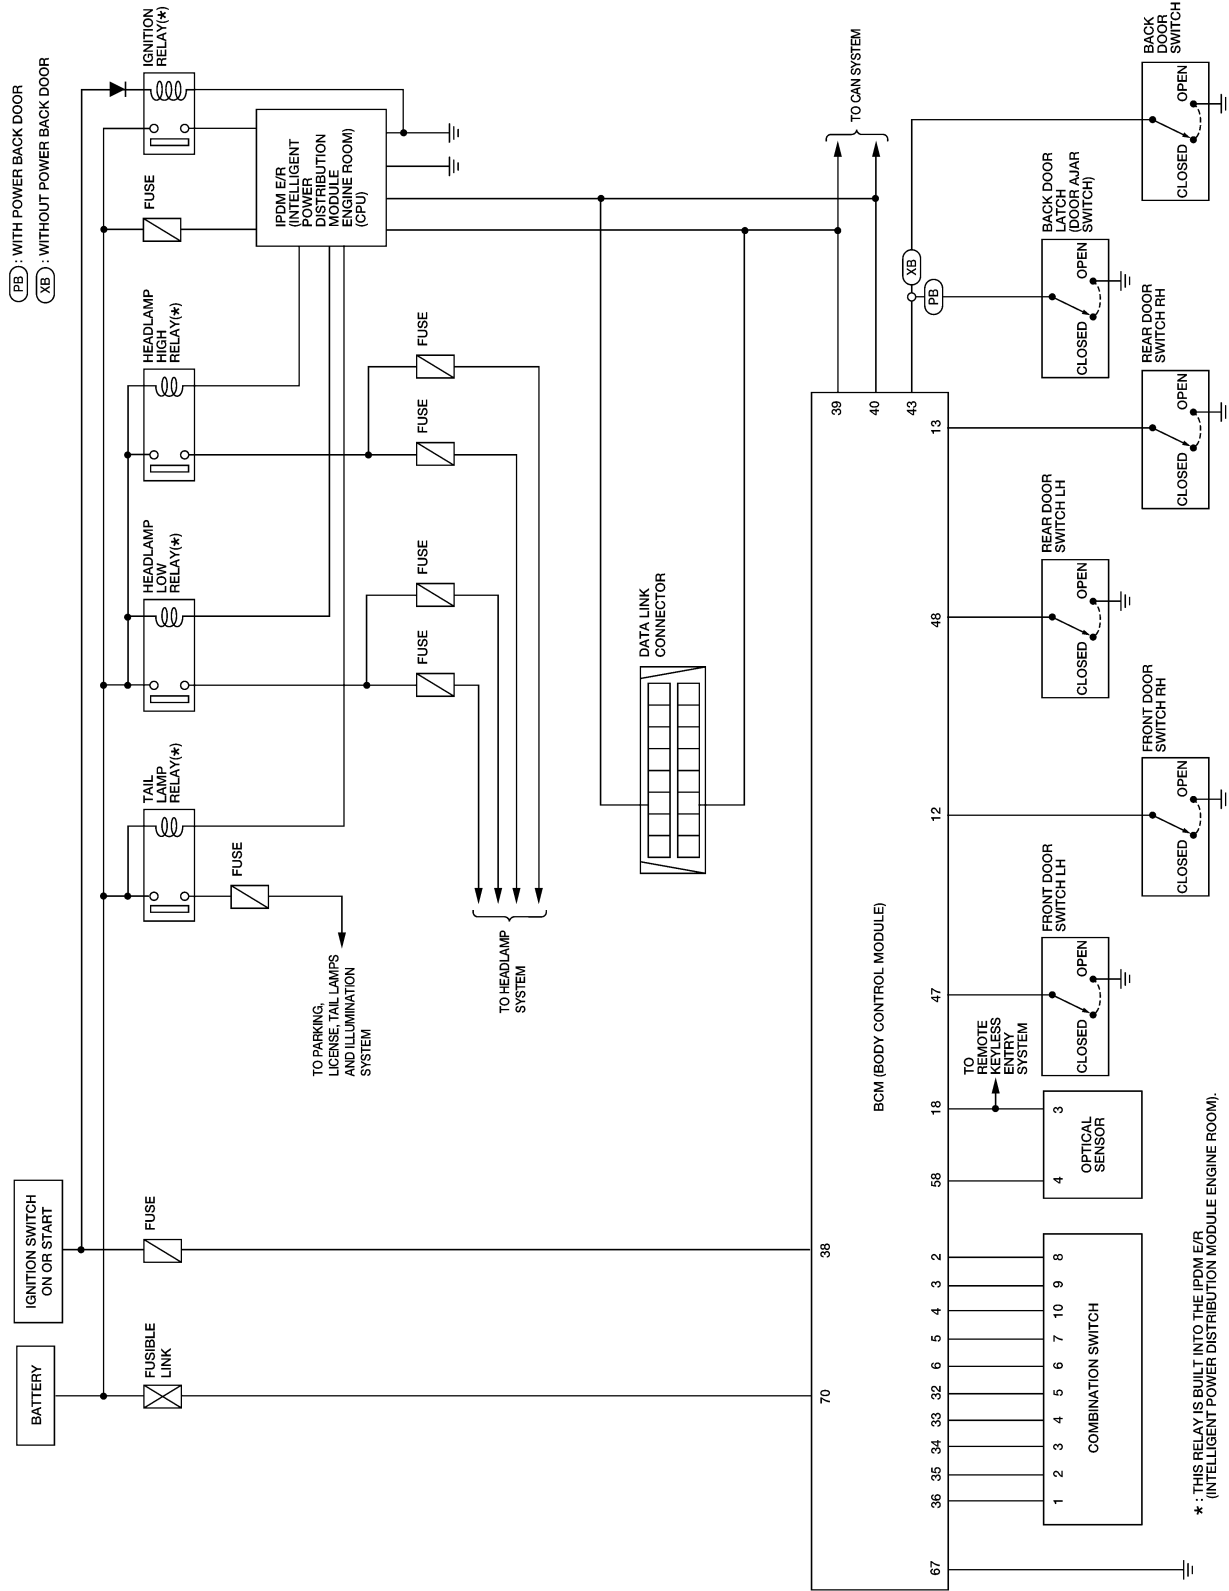

WKWA3464E

A
B
C
D
E
F
G
H
I
J
K
L
M




AUTO LIGHT SYSTEM

Wiring Diagram — AUTO/L —

EKS00ATN

LT-AUTO/L-01

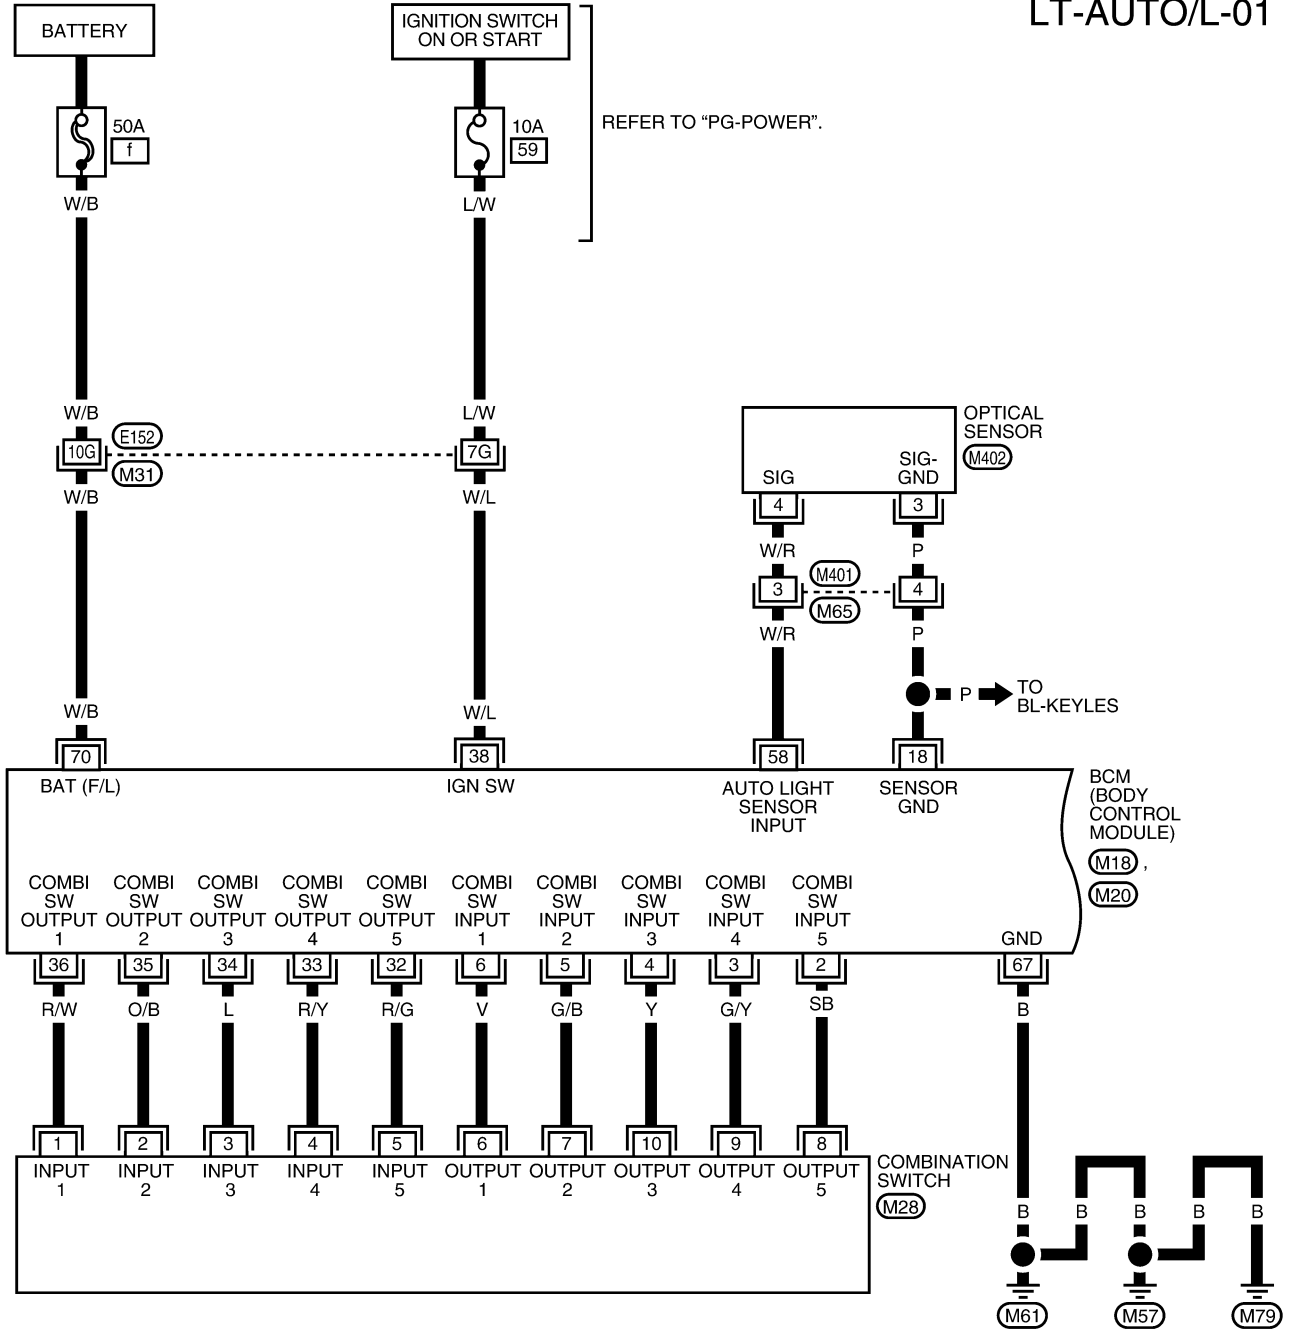


REFER TO "PG-POWER".

TO BL-KEYLES

BCM (BODY CONTROL MODULE)
M18, M20

COMBINATION SWITCH (M28)

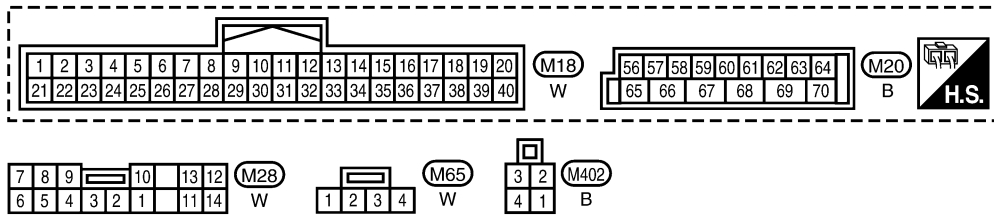

REFER TO THE FOLLOWING.
M31 - SUPER MULTIPLE JUNCTION (SMJ)

WKWA3465E



AUTO LIGHT SYSTEM

LT-AUTO/L-02

— : DATA LINE

(PB) : WITH POWER BACK DOOR

(XB) : WITHOUT POWER BACK DOOR

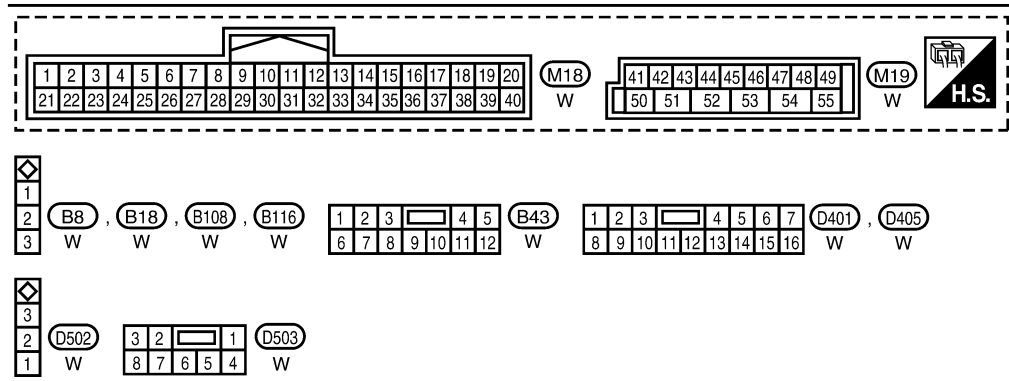
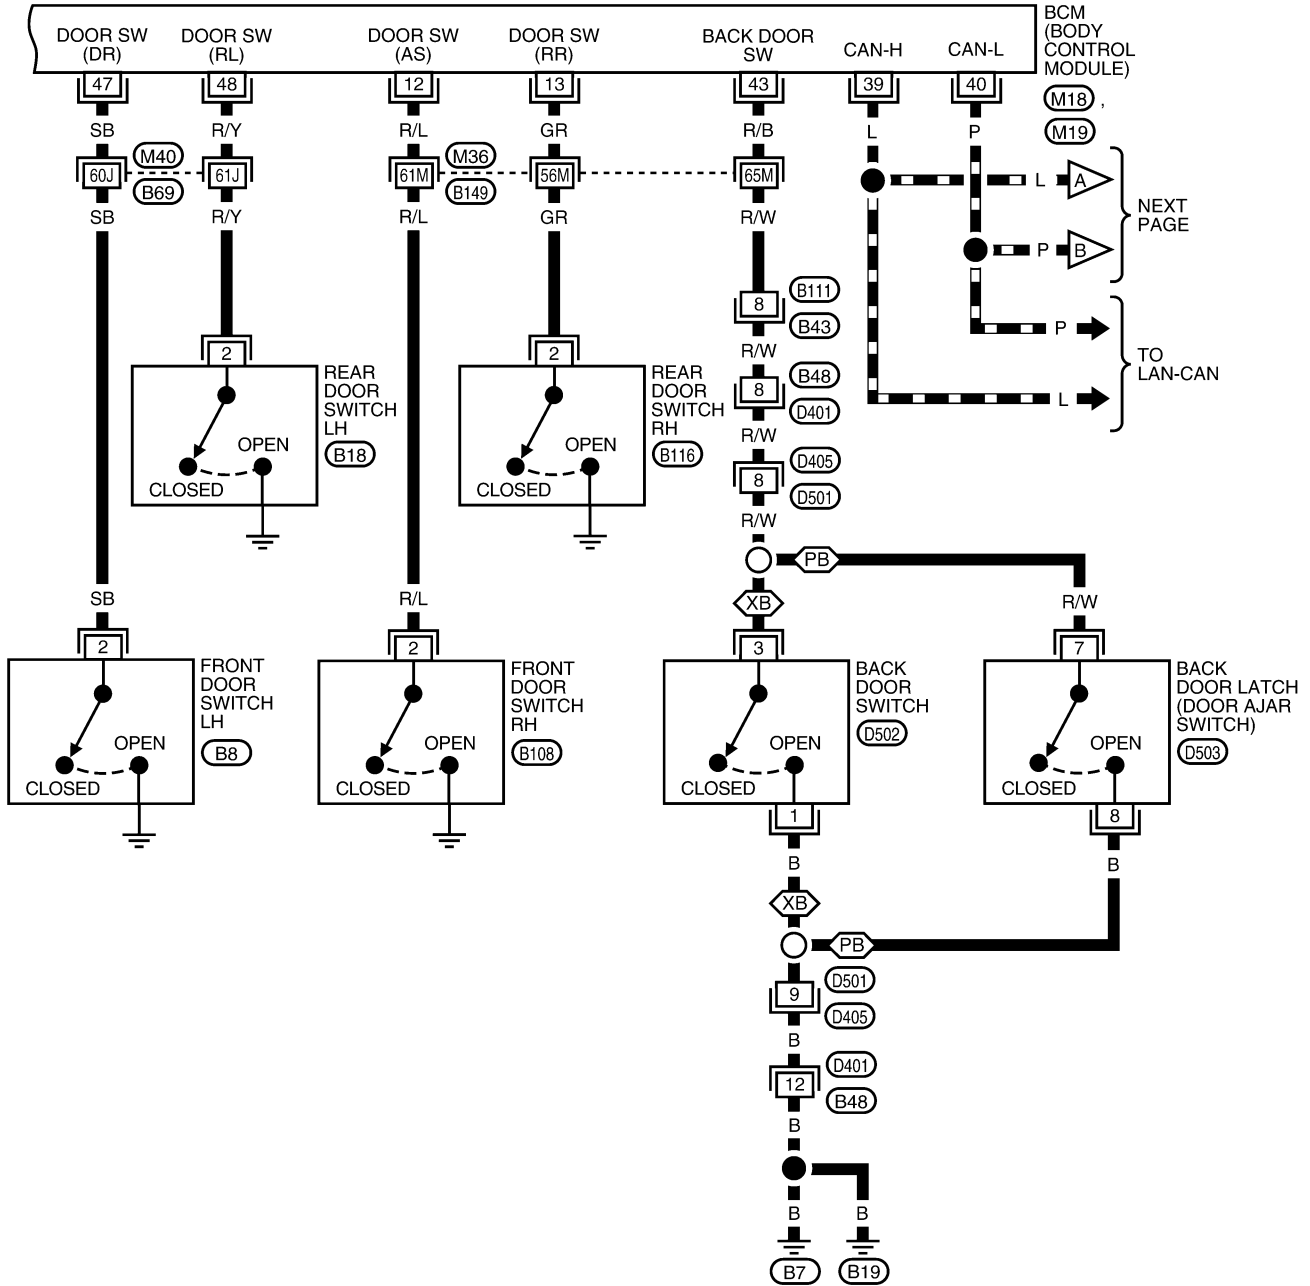


REFER TO THE FOLLOWING.
 (M36), (M40) - SUPER
 MULTIPLE JUNCTION (SMJ)

WKWA2404E

AUTO LIGHT SYSTEM

 LT-AUTO/L-03

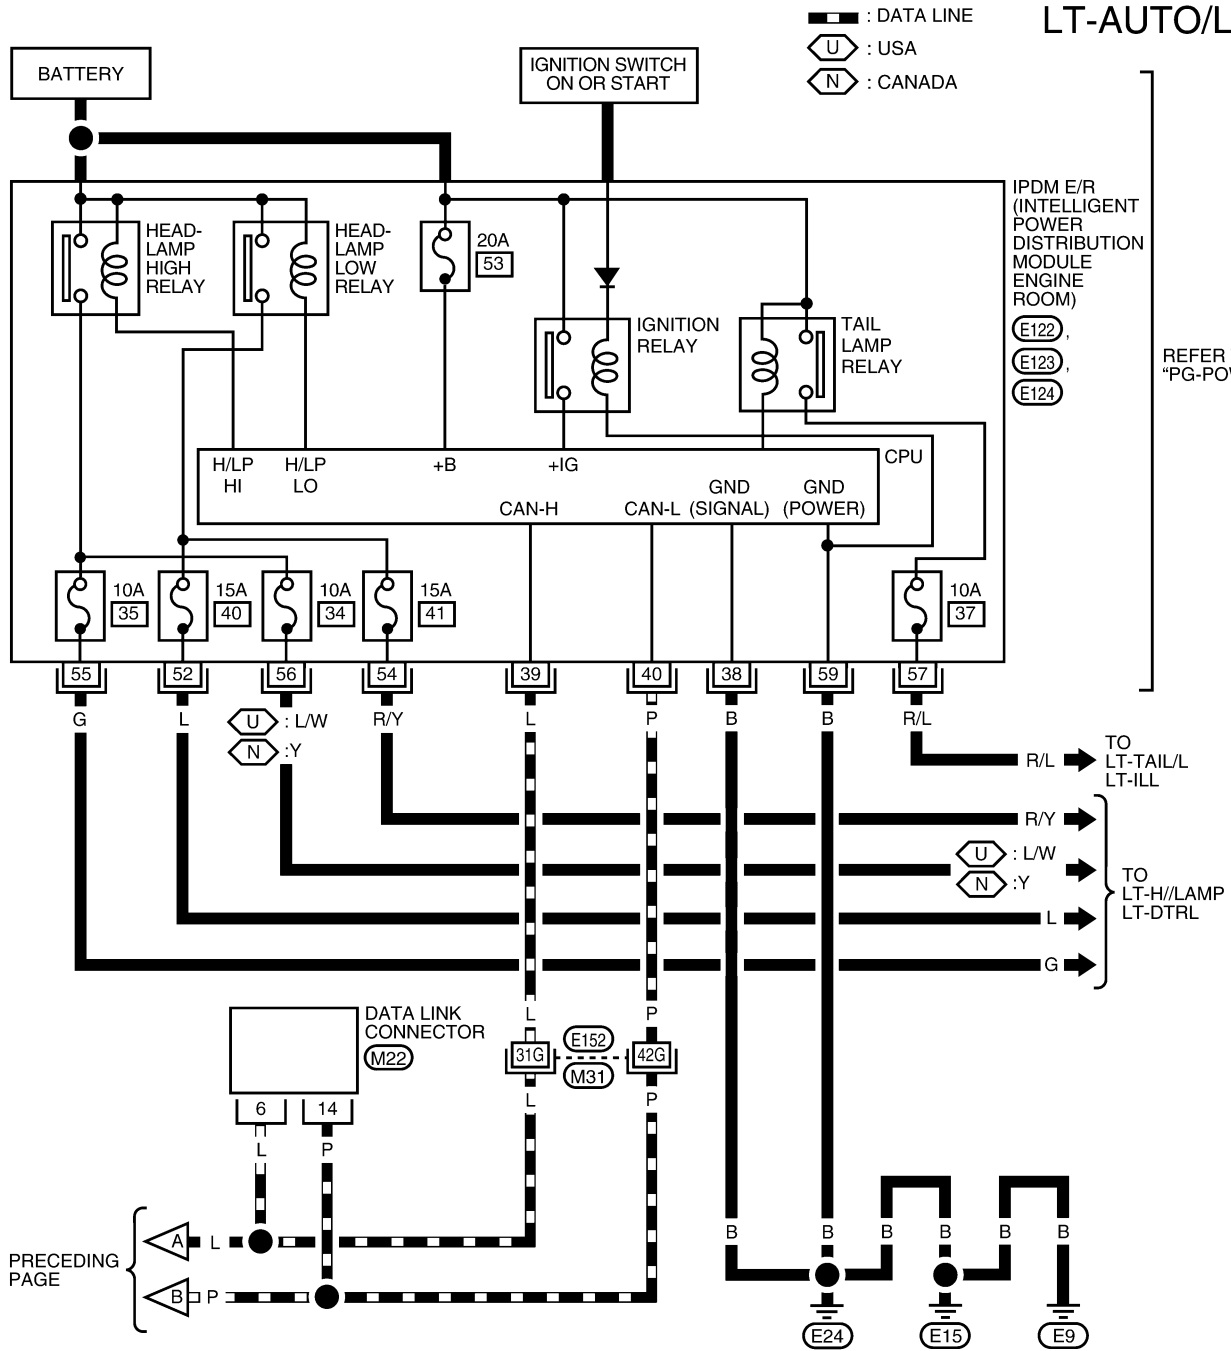

REFER TO THE FOLLOWING.
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA2405E

AUTO LIGHT SYSTEM



Terminals and Reference Values for BCM

EKS00ATO

Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)				
			Ignition switch	Operation or condition					
2	SB	Combination switch input 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	<p style="text-align: right;">SKIA5291E</p>				
3	G/Y	Combination switch input 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	<p style="text-align: right;">SKIA5292E</p>				
4	Y	Combination switch input 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	<p style="text-align: right;">SKIA5291E</p>				
5	G/B	Combination switch input 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	<p style="text-align: right;">SKIA5292E</p>				
6	V	Combination switch input 1							
12	R/L	Front door switch RH signal	OFF	Front door switch RH	<table border="1"> <tr> <td>ON (open)</td> <td>0V</td> </tr> <tr> <td>OFF (closed)</td> <td>Battery voltage</td> </tr> </table>	ON (open)	0V	OFF (closed)	Battery voltage
ON (open)	0V								
OFF (closed)	Battery voltage								
13	GR	Rear door switch RH and back door switch signal	OFF	Rear door switch RH or back door switch	<table border="1"> <tr> <td>ON (open)</td> <td>0V</td> </tr> <tr> <td>OFF (closed)</td> <td>Battery voltage</td> </tr> </table>	ON (open)	0V	OFF (closed)	Battery voltage
ON (open)	0V								
OFF (closed)	Battery voltage								
18	P	Sensor ground	ON	—	0V				
32	R/G	Combination switch output 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	<p style="text-align: right;">SKIA5291E</p>				
33	R/Y	Combination switch output 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	<p style="text-align: right;">SKIA5292E</p>				

A
B
C
D
E
F
G
H
I
J
LT
L
M

AUTO LIGHT SYSTEM

Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)	
			Ignition switch	Operation or condition		
34	L	Combination switch output 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5291E	
35	O/B	Combination switch output 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5292E	
36	R/W	Combination switch output 1				
38	W/L	Ignition switch (ON)	ON	—	Battery voltage	
39	L	CAN-H	—	—	—	
40	P	CAN-L	—	—	—	
43	R/B	Back door switch signal	OFF	Back door switch	ON (open)	0V
					OFF (closed)	Battery voltage
47	SB	Front door switch LH signal	OFF	Front door switch LH	ON (open)	0V
					OFF (closed)	Battery voltage
48	R/Y	Rear door switch LH signal	OFF	Rear door switch LH	ON (open)	0V
					OFF (closed)	Battery voltage
58	W/R	Optical sensor signal	ON	When optical sensor is illuminated	3.1V or more ^{Note}	
				When optical sensor is not illuminated	0.6V or less	
67	B	Ground	ON	—	0V	
70	W/B	Battery power supply	OFF	—	Battery voltage	

NOTE:

Optical sensor must be completely subjected to work lamp light. If the optical sensor is insufficiently illuminated, the measured value may not satisfy standard.

Terminals and Reference Values for IPDM E/R

EKS00ATP

Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)	
			Ignition switch	Operation or condition		
38	B	Ground	ON	—	0V	
39	L	CAN-H	—	—	—	
40	P	CAN-L	—	—	—	
52	L	Headlamp low (LH)	ON	Lighting switch 2ND position	OFF	0V
					ON	Battery voltage
54	R/Y	Headlamp low (RH)	ON	Lighting switch 2ND position	OFF	0V
					ON	Battery voltage
55	G	Headlamp high (LH)	ON	Lighting switch HIGH or PASS position	OFF	0V
					ON	Battery voltage

AUTO LIGHT SYSTEM

Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)
			Ignition switch	Operation or condition	
56	L/W ¹ γ ²	Headlamp high (RH)	ON	Lighting switch HIGH or PASS position	0V
					Battery voltage
57	R/L	Parking, license, and tail lamp	ON	Lighting switch 1ST position	0V
					Battery voltage
59	B	Ground	ON	—	0V

1. USA
2. Canada

How to Proceed With Trouble Diagnosis

EKS00ATQ

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-49, "System Description"](#).
3. Carry out the Preliminary Check. Refer to [LT-57, "Preliminary Check"](#).
4. Check symptom and repair or replace the cause of malfunction. Refer to [LT-64, "Trouble Diagnosis Chart by Symptom"](#).
5. Does the auto light system operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

Preliminary Check

EKS00ATR

SETTING CHANGE FUNCTIONS

- Sensitivity of auto light system can be adjusted using CONSULT-II. Refer to [LT-60, "WORK SUPPORT"](#).

CHECK POWER SUPPLY AND GROUND CIRCUIT

1. CHECK FUSES OR FUSIBLE LINK

Check for blown fuses or fusible link.

Unit	Power source	Fuse and fusible link No.
BCM	Battery	f
	Ignition switch ON or START position	59
IPDM E/R	Battery	34
		35
		40
		41
		53

Refer to [LT-52, "Wiring Diagram — AUTO/L —"](#).

OK or NG

OK >> GO TO 2.

NG >> If fuse or fusible link is blown, be sure to eliminate cause of malfunction before installing new fuse or fusible link. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#).

AUTO LIGHT SYSTEM

2. CHECK POWER SUPPLY CIRCUIT


1. Disconnect BCM connectors.
2. Check voltage between BCM harness connector and ground.

BCM (+)		(-)	Ignition switch position		
Connector	Terminal		OFF	ACC	ON
M18	38	Ground	0V	0V	Battery voltage
M20	70		Battery voltage	Battery voltage	Battery voltage

OK or NG

OK >> GO TO 3.

NG >> Check harness for open between BCM and fuse or fusible link.

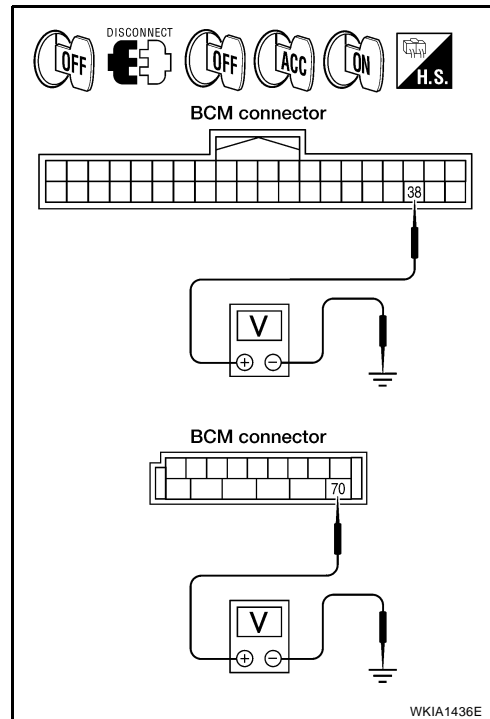

3. CHECK GROUND CIRCUIT


Check continuity between BCM harness connector and ground.

BCM			Continuity
Connector	Terminal		
M20	67	Ground	Yes

OK or NG

OK >> Inspection End.

NG >> Check ground circuit harness.

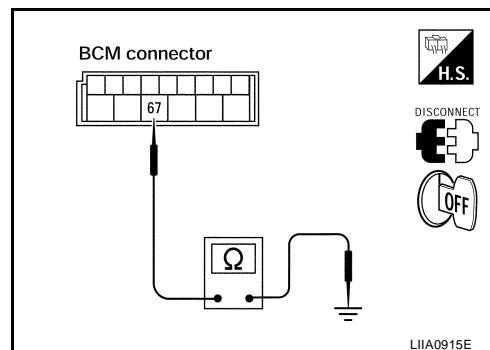

AUTO LIGHT SYSTEM

CONSULT-II Function (BCM)

EKS00ATS

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


BCM diagnostic test item	Diagnostic mode	Description
Inspection by part	WORK SUPPORT	Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed.
	DATA MONITOR	Displays BCM input/output data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
	SELF-DIAG RESULTS	Displays BCM self-diagnosis results.
	CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
	ECU PART NUMBER	BCM part number can be read.
	CONFIGURATION	Performs BCM configuration read/write functions.

CONSULT-II OPERATION


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.


1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn ignition switch ON.

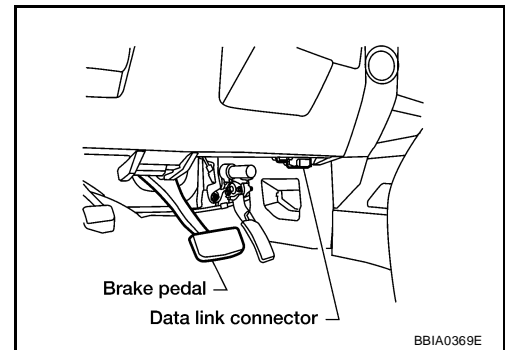

2. Touch "START (NISSAN BASED VHCL)".

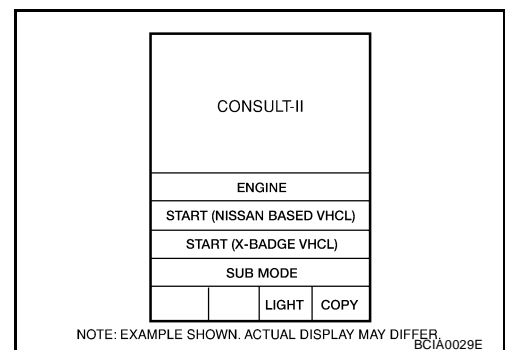

3. Touch "BCM" on "SELECT SYSTEM" screen.
If "BCM" is not indicated, go to [GI-39, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

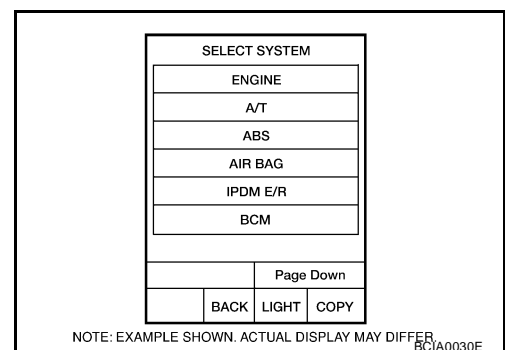

AUTO LIGHT SYSTEM

4. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.

SELECT TEST ITEM			
HEAD LAMP			
WIPER			
FLASHER			
AIR CONDITIONER			
COMB SW			
BCM			
Scroll Up		Page Down	
	BACK	LIGHT	COPY

LKIA0183E

WORK SUPPORT

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "WORK SUPPORT" on "SELECT DIAG MODE" screen.
3. Touch "CUSTOM A/LIGHT SETTING" or "ILL DELAY SET" on "SELECT WORK ITEM" screen.
4. Touch "START".
5. Touch "MODE 1-4" of setting to be changed (CUSTOM A/LIGHT SETTING). Touch "MODE1-8" of setting to be changed (ILL DELAY SET).
6. Touch "CHANGE SETT".
7. The setting will be changed and "CUSTOMIZING COMPLETED" will be displayed.
8. Touch "END".

Work Support Setting Item

- Sensitivity of auto light can be selected and set from four modes.

Work item	Description
CUSTOM A/LIGHT SETTING	Auto light sensitivity can be changed in this mode. Sensitivity can be adjusted in four modes. ● MODE 1 (Normal-default)/ MODE 2 (Desensitized)/MODE 3 (Sensitive)/MODE4 (Insensitive)
ILL DELAY SET	Auto light delay off timer period can be changed in this mode. Selects auto light delay off timer period among eight modes. ● MODE 1 (45 sec.)/MODE 2 (OFF)/MODE 3 (30 sec.)/MODE 4 (60 sec.)/MODE 5 (90 sec.)/MODE 6 (120 sec.)/MODE 7 (150 sec.)/MODE 8 (180 sec.)

DATA MONITOR

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on the "SELECT MONITOR ITEM" screen.

ALL SIGNALS	Monitors all the signals.
SELECTION FROM MENU	Selects and monitors individual signal.

4. Touch "START".
5. When "SELECTION FROM MENU" is selected, touch individual items to be monitored. When "ALL SIGNALS" is selected, all the items will be monitored.
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

Display Item List

Monitor item	Contents	Contents
IGN ON SW	"ON/OFF"	Displays "IGN position (ON)/OFF, ACC position (OFF)" judged from the ignition switch signal.
ACC ON SW	"ON/OFF"	Displays "ACC (ON)/OFF, Ignition OFF (OFF)" status judged from ignition switch signal.
HI BEAM SW	"ON/OFF"	Displays status (high beam switch: ON/Others: OFF) of high beam switch judged from lighting switch signal.

AUTO LIGHT SYSTEM

Monitor item	Contents
HEAD LAMP SW 1 "ON/OFF"	Displays status (headlamp switch 1: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.
HEAD LAMP SW 2 "ON/OFF"	Displays status (headlamp switch 2: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.
LIGHT SW 1ST "ON/OFF"	Displays status (lighting switch 1st position: ON/Others: OFF) of lighting switch judged from lighting switch signal.
AUTO LIGHT SW "ON/OFF"	Displays status of the lighting switch as judged from the lighting switch signal. (AUTO position: ON/Other than AUTO position: OFF)
PASSING SW "ON/OFF"	Displays status (flash-to-pass switch: ON/Others: OFF) of flash-to-pass switch judged from lighting switch signal.
FR FOG SW "ON/OFF"	Displays status (front fog lamp switch: ON/Others: OFF) of front fog lamp switch judged from lighting switch signal.
DOOR SW-DR "ON/OFF"	Displays status of the front door LH as judged from the front door switch LH signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-AS "ON/OFF"	Displays status of the front door RH as judged from the front door switch RH signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-RR "ON/OFF"	Displays status of the rear door as judged from the rear door switch (RH) signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-RL "ON/OFF"	Displays status of the rear door as judged from the rear door switch (LH) signal. (Door is open: ON/Door is closed: OFF)
BACK DOOR SW "ON/OFF"	Displays status of the back door as judged from the back door switch signal. (Door is open: ON/Door is closed: OFF)
TURN SIGNAL R "ON/OFF"	Displays status (Turn right: ON/Others: OFF) as judged from lighting switch signal.
TURN SIGNAL L "ON/OFF"	Displays status (Turn left: ON/Others: OFF) as judged from lighting switch signal.
CARGO LAMP SW "ON/OFF"	Displays status of cargo lamp.
OPTICAL SENSOR [0 - 5V]	Displays "ambient light (close to 5V when dark/close to 0V when light)" judged from optical sensor signal.

ACTIVE TEST

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
3. Touch item to be tested and check operation of the selected item.
4. During the operation check, touching "BACK" deactivates the operation.

Display Item List

Test item	Description
TAIL LAMP	Allows tail lamp relay to operate by switching ON-OFF.
HEAD LAMP	Allows headlamp relay (HI, LO) to operate by switching ON-OFF.
FR FOG LAMP	Allows fog lamp relay to operate by switching ON-OFF.
CARGO LAMP	Allows cargo lamp to operate by switching ON-OFF.

CONSULT-II Function (IPDM E/R)

EKS00ATT

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.

IPDM E/R diagnostic mode	Description
SELF-DIAG RESULTS	Displays IPDM E/R self-diagnosis results.
DATA MONITOR	Displays IPDM E/R input/output data in real time.
CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.


AUTO LIGHT SYSTEM

CONSULT-II OPERATION


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.


1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn the ignition switch ON.

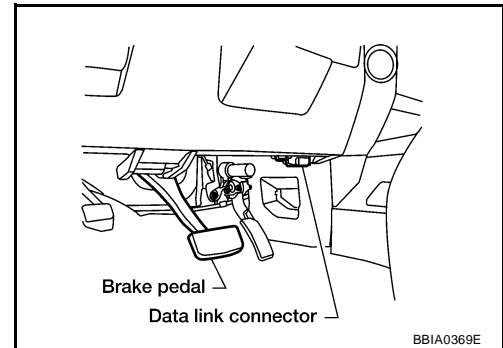


2. Touch "START (NISSAN BASED VHCL)".

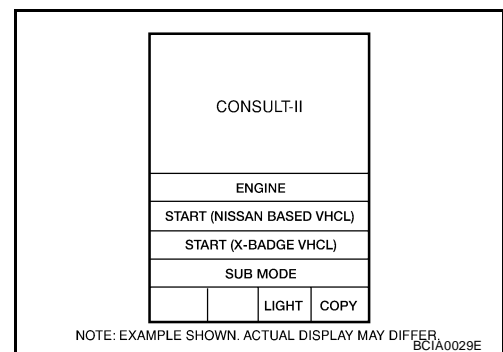

3. Touch "IPDM E/R" on "SELECT SYSTEM" screen.
If "IPDM E/R" is not displayed, go to [GI-39, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

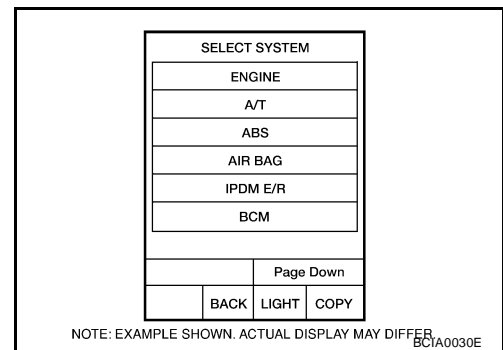

4. Select the desired part to be diagnosed on the "SELECT DIAG MODE" screen.

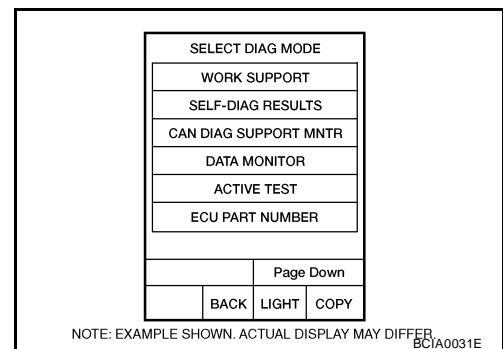

DATA MONITOR

Operation Procedure

1. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
2. Touch "ALL SIGNALS", "MAIN SIGNALS" or "SELECTION FROM MENU" on the "SELECT MONITOR ITEM" screen.

AUTO LIGHT SYSTEM

ALL SIGNALS	All items will be monitored.
MAIN SIGNALS	Monitor the predetermined item.
SELECTION FROM MENU	Select any item for monitoring.

3. Touch "START".
4. Touch the required monitoring item on "SELECTION FROM MENU". In "ALL SIGNALS", all items are monitored. In "MAIN SIGNALS", predetermined items are monitored.
5. Touch "RECORD" while monitoring to record the status of the item being monitored. To stop recording, touch "STOP".

All Items, Main Items, Select Item Menu

Item name	CONSULT-II screen display	Display or unit	Monitor item selection			Description
			ALL SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
Parking, license plate and tail lamps request	TAIL&CLR REQ	ON/OFF	×	×	×	Signal status input from BCM
Headlamp low beam request	HL LO REQ	ON/OFF	×	×	×	Signal status input from BCM
Headlamp high beam request	HL HI REQ	ON/OFF	×	×	×	Signal status input from BCM
Front fog lamps request	FR FOG REQ	ON/OFF	×	×	×	Signal status input from BCM

NOTE:

Perform monitoring of IPDM E/R data with the ignition switch ON. When the ignition switch is at ACC, the display may not be correct.

ACTIVE TEST

Operation Procedure

1. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
2. Touch item to be tested, and check operation.
3. Touch "START".
4. Touch "STOP" while testing to stop the operation.

Test item	CONSULT-II screen display	Description
Tail lamp relay output	TAIL LAMP	Allows tail lamp relay to operate by switching operation ON-OFF at your option.
Headlamp relay (HI, LO) output	LAMPS	Allows headlamp relay (HI, LO) to operate by switching operation (OFF, HI, LO) at your option (Headlamp high beam repeats ON-OFF every 1 second).
Front fog lamp relay output		Allows fog lamp relay to operate by switching operation ON-OFF at your option.

AUTO LIGHT SYSTEM

Trouble Diagnosis Chart by Symptom

EKS00ATU

Trouble phenomenon	Malfunction system and reference
<ul style="list-style-type: none"> ● Parking lamps and headlamps will not illuminate when outside of the vehicle becomes dark. (Lighting switch 1st position and 2nd position operate normally.) ● Parking lamps and headlamps will not go out when outside of the vehicle becomes light. (Lighting switch 1st position and 2nd position operate normally.) ● Headlamps go out when outside of the vehicle becomes light, but parking lamps stay on. 	<ul style="list-style-type: none"> ● Refer to LT-60, "WORK SUPPORT" . ● Refer to LT-64, "Lighting Switch Inspection" . ● Refer to LT-65, "Optical Sensor System Inspection" . <p>If above systems are normal, replace BCM. Refer to BCS-20, "Removal and Installation" .</p>
<p>Parking lamps illuminate when outside of the vehicle becomes dark, but headlamps stay off. (Lighting switch 1st position and 2nd position operate normally.)</p>	<ul style="list-style-type: none"> ● Refer to LT-60, "WORK SUPPORT" . ● Refer to LT-65, "Optical Sensor System Inspection" . <p>If above systems are normal, replace BCM. Refer to BCS-20, "Removal and Installation" .</p>
<p>Auto light adjustment system will not operate. (Lighting switch AUTO, 1st position and 2nd position operate normally.)</p>	<ul style="list-style-type: none"> ● Refer to LT-65, "Optical Sensor System Inspection" . <p>If above system is normal, replace BCM. Refer to BCS-20, "Removal and Installation" .</p>
<p>Auto light adjustment system will not operate.</p>	<ul style="list-style-type: none"> ● CAN communication line to BCM inspection. Refer to BCS-13, "CAN Communication Inspection Using CONSULT-II (Self-Diagnosis)" .
<p>Shut off delay feature will not operate.</p>	<ul style="list-style-type: none"> ● CAN communication line inspection between BCM and combination meter. Refer to BCS-13, "CAN Communication Inspection Using CONSULT-II (Self-Diagnosis)" . ● Refer to BL-28, "Door Switch Check" . <p>If above system is normal, replace BCM. Refer to BCS-20, "Removal and Installation" .</p>

Lighting Switch Inspection

EKS00ATV

1. CHECK LIGHTING SWITCH INPUT SIGNAL

Ⓜ With CONSULT-II

Select "BCM" on CONSULT-II. With "HEAD LAMP" data monitor, make sure "AUTO LIGHT SW" turns ON-OFF linked with operation of lighting switch.

When lighting switch is in AUTO position : AUTO LIGHT SW ON

ⓧ Without CONSULT-II

Refer to [LT-102, "Combination Switch Inspection"](#) .

OK or NG

OK >> Inspection End.

NG >> Check lighting switch. Refer to [LT-102, "Combination Switch Inspection"](#) .

DATA MONITOR	
MONITOR	
AUTO LIGHT SW	ON

SKIA4196E

AUTO LIGHT SYSTEM

EKS00ATW

Optical Sensor System Inspection

1. CHECK OPTICAL SENSOR INPUT SIGNAL

④ With CONSULT-II

Select "BCM" on CONSULT-II. With "OPTICAL SENSOR" data monitor, check difference in the voltage when the optical sensor is illuminated and not illuminated.

Illuminated

OPTICAL SENSOR : 3.1V or more

Not illuminated

OPTICAL SENSOR : 0.6V or less

NOTE:

Optical sensor must be completely subjected to work lamp light. If the optical sensor is insufficiently illuminated, the measured value may not satisfy the standard.


⊗ Without CONSULT-II

GO TO 2.

OK or NG

OK >> Inspection End.

NG >> GO TO 2.

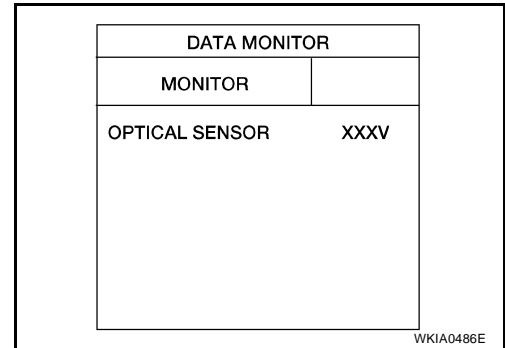


2. CHECK OPTICAL SENSOR SIGNAL GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector and optical sensor connector.
3. Check continuity (open circuit) between BCM harness connector M18 terminal 18 and optical sensor harness connector M402 terminal 3.

18 - 3 : Continuity should exist.

4. Check continuity (short circuit) between BCM harness connector M18 terminal 18 and ground.

18 - Ground : Continuity should not exist.

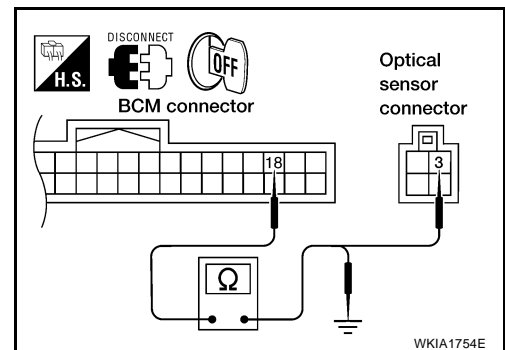

OK or NG

OK >> GO TO 3.

NG >> Repair harness or connector.


3. CHECK OPTICAL SENSOR SIGNAL CIRCUIT

1. Check continuity (open circuit) between BCM harness connector M20 terminal 58 and optical sensor harness connector M402 terminal 4.

58 - 4 : Continuity should exist.

2. Check continuity (short circuit) between BCM harness connector M20 terminal 58 and ground.

58 - Ground : Continuity should not exist.

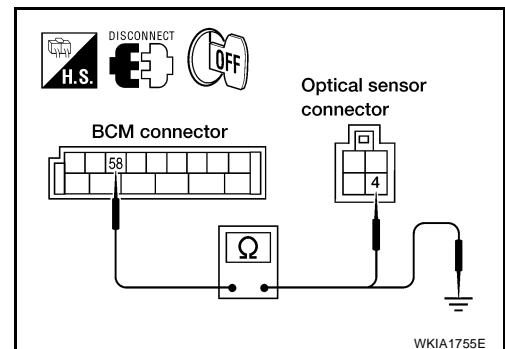

OK or NG

OK >> Replace optical sensor. Refer to [LT-66, "Removal and Installation"](#). Recheck sensor output with CONSULT-II.

If NG, replace BCM. Refer to [BCS-20, "Removal and Installation"](#).

NG >> Repair harness or connector.


AUTO LIGHT SYSTEM

EKS00ATX

Removal and Installation OPTICAL SENSOR

Removal

1. Remove defroster grille. Refer to [IP-10. "INSTRUMENT PANEL"](#).
2. Disconnect the connector.
3. Turn the optical sensor counterclockwise to remove it from defroster grille.

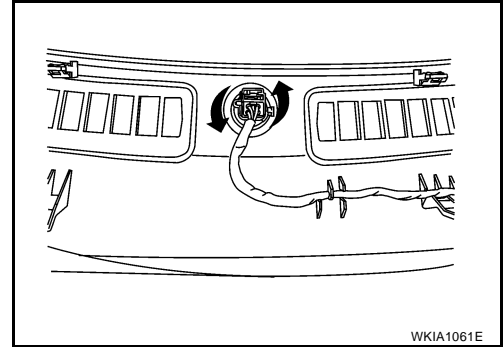

Installation

Installation is in the reverse order of removal.


FRONT FOG LAMP

PF26150

EKS00ATY

FRONT FOG LAMP

Component Parts and Harness Connector Location

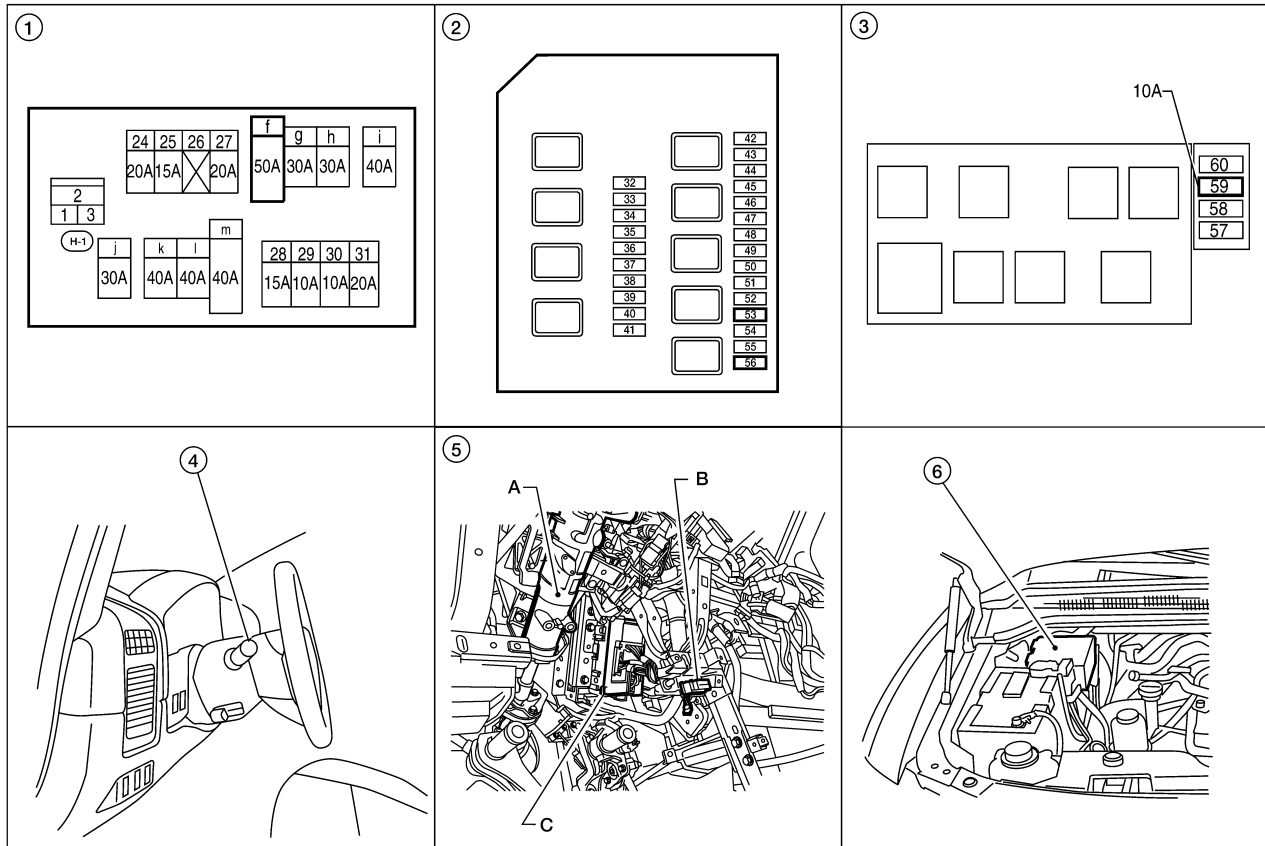

1. Fuse and fusible link box
2. IPDM E/R fuse layout
3. Fuse and relay box
4. Combination switch (lighting switch) M28
5. A. Steering column
B. Data link connector M22
C. BCM M18, M19, M20
(View with instrument lower panel LH removed)
6. IPDM E/R E118, E119, E120, E121, E122, E123, E124

System Description

EKS00ATZ

Control of the fog lamps is dependent upon the position of the combination switch (lighting switch). The lighting switch must be in the 2ND position or AUTO position (LOW beam is ON) for front fog lamp operation. When the lighting switch is placed in the fog lamp position, the BCM (body control module) receives input signal requesting the fog lamps to illuminate. When the headlamps are illuminated, this input signal is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The CPU (central processing unit) of the IPDM E/R controls the front fog lamp relay coil. When activated, this relay directs power to the front fog lamps.

OUTLINE

Power is supplied at all times

- to ignition relay, located in the IPDM E/R, and
- to front fog lamp relay, located in the IPDM E/R, and
- through 20A fuse (No. 53, located in the IPDM E/R)
- to CPU of the IPDM E/R, and
- through 50A fusible link (letter f , located in the fuse and fusible link box)
- to BCM terminal 70.

When the ignition switch is in ON or START position, power is supplied

- to ignition relay, located in the IPDM E/R, and
- through 10A fuse (No. 59, located in the fuse and relay box)

A
B
C
D
E
F
G
H
I
J

LT

L
M

FRONT FOG LAMP

- to BCM terminal 38.

Ground is supplied

- to BCM terminal 67
- through grounds M57, M61 and M79, and
- to IPDM E/R terminals 38 and 59
- through grounds E9, E15 and E24.

FOG LAMP OPERATION

The fog lamp switch is built into the combination switch. The lighting switch must be in the 2ND position or AUTO position (LOW beam is ON) and the fog lamp switch must be ON for fog lamp operation.

With the fog lamp switch in the ON position, the CPU of the IPDM E/R grounds the coil side of the front fog lamp relay. The front fog lamp relay then directs power

- through 20A fuse (No. 56, located in the IPDM E/R)
- through IPDM E/R terminal 50
- to front fog lamp LH terminal 1, and
- through IPDM E/R terminal 51
- to front fog lamp RH terminal 1.

Ground is supplied

- to front fog lamp LH and RH terminal 2
- through grounds E9, E15 and E24.

With power and ground supplied, the front fog lamps illuminate.

COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#) .

EXTERIOR LAMP BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 2ND position (ON), the fog lamp switch is ON, and the ignition switch is turned from ON or ACC to OFF, the battery saver control feature is activated.

Under this condition, the fog lamps (and headlamps) remain illuminated for 5 minutes, then the fog lamps (and headlamps) are turned off.

Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-II.

CAN Communication System Description

EKS00AU0

Refer to [LAN-25, "CAN COMMUNICATION"](#) .



FRONT FOG LAMP

Wiring Diagram — F/FOG —

EKS00AU1

LT-F/FOG-01

— : DATA LINE

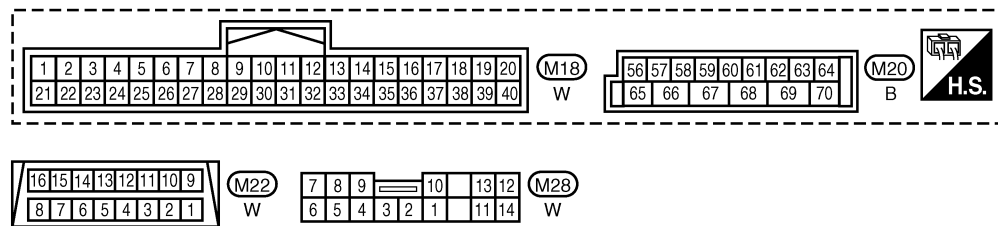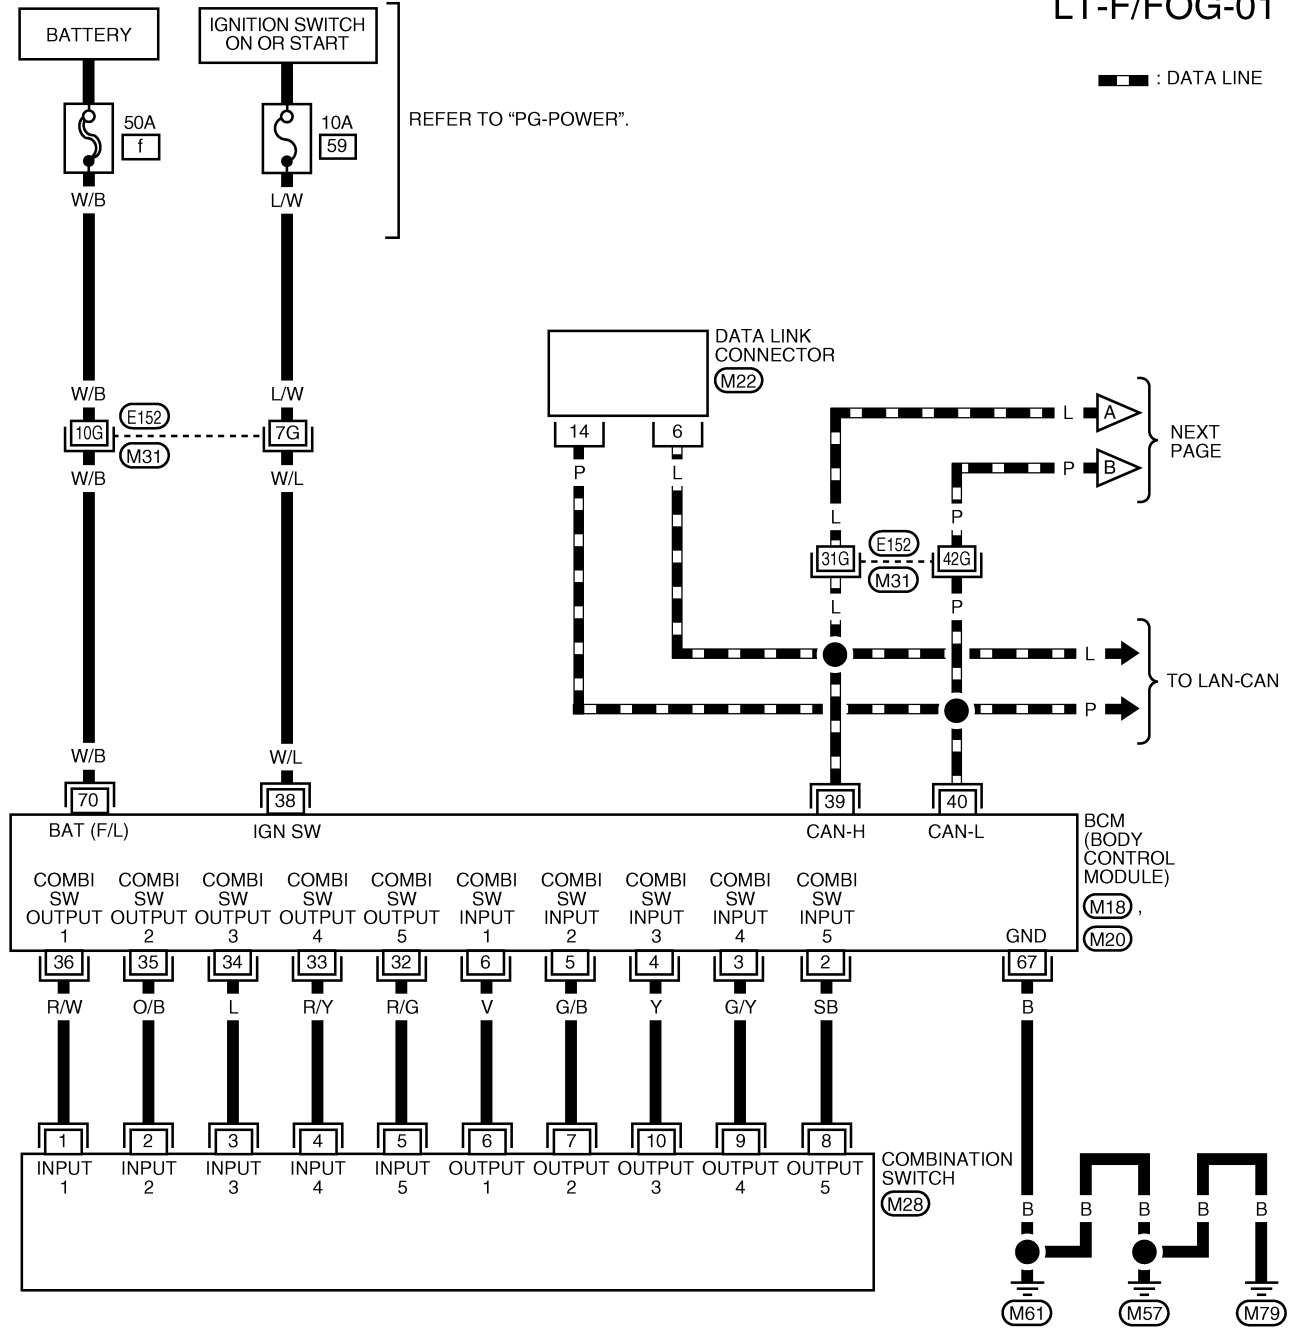


WKWA3466E


FRONT FOG LAMP

LT-F/FOG-02

— : DATA LINE

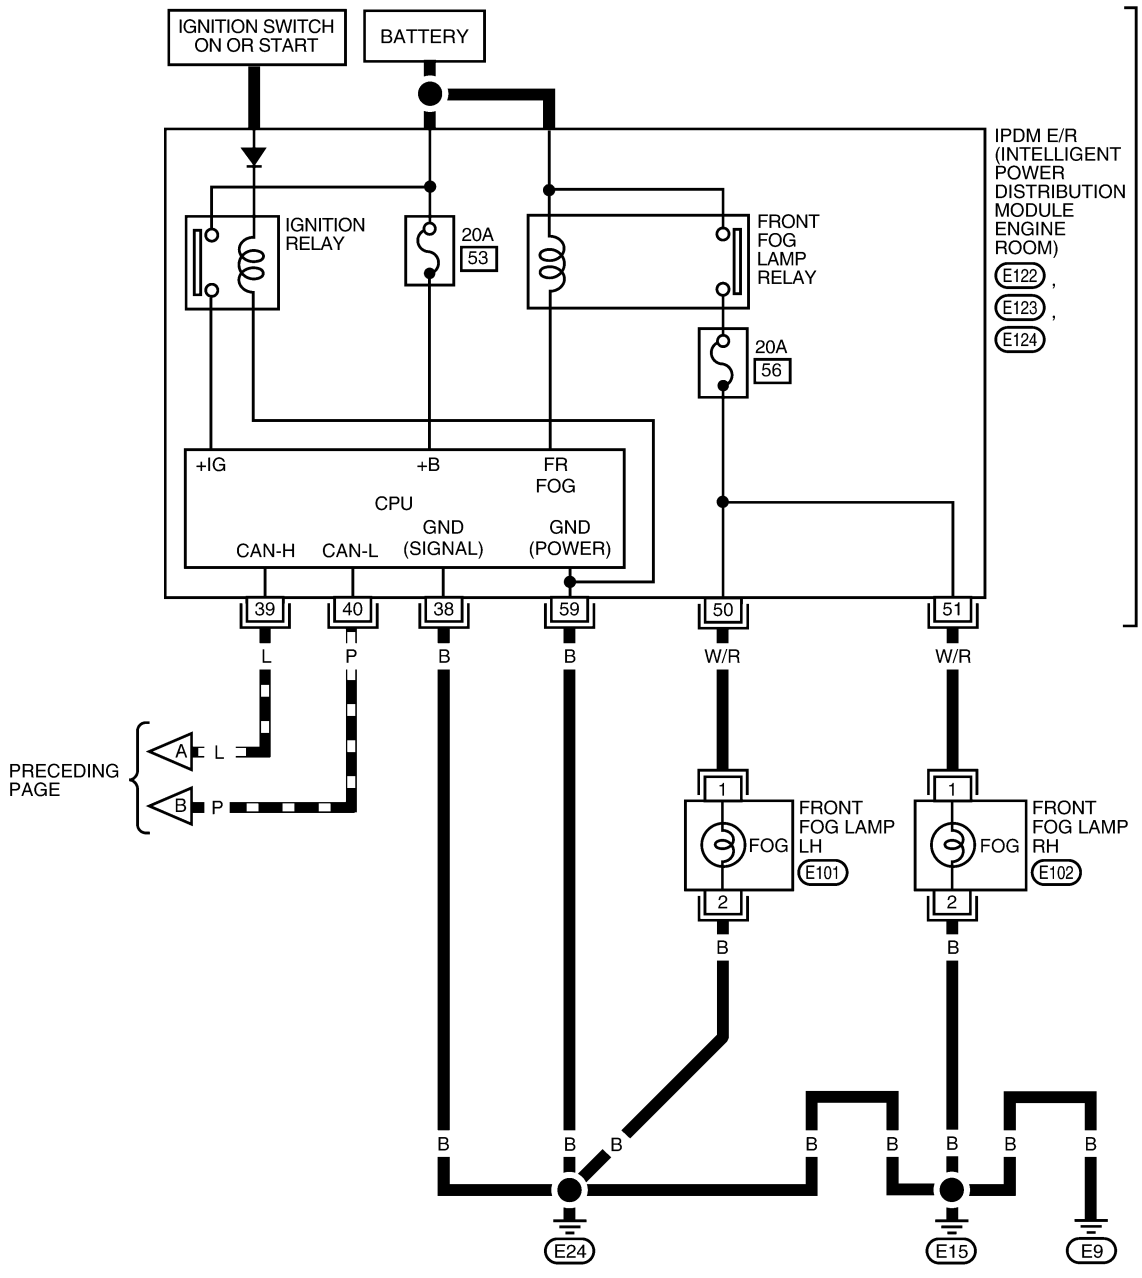

PRECEDING PAGE

 








WKWA3467E

FRONT FOG LAMP

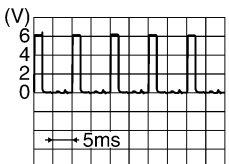Terminals and Reference Values for BCM

EKS00AU2

Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)
			Ignition switch	Operation or condition	
2	SB	Combination switch input 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>
3	G/Y	Combination switch input 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5292E</p>
4	Y	Combination switch input 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>
5	G/B	Combination switch input 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5292E</p>
6	V	Combination switch input 1			
32	R/G	Combination switch output 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>
33	R/Y	Combination switch output 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5292E</p>
34	L	Combination switch output 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>

A
B
C
D
E
F
G
H
I
J
LT
L
M

FRONT FOG LAMP

Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)
			Ignition switch	Operation or condition	
35	O/B	Combination switch output 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	
36	R/W	Combination switch output 1			
38	W/L	Ignition switch (ON)	ON	—	Battery voltage
39	L	CAN-H	—	—	—
40	P	CAN-L	—	—	—
67	B	Ground	ON	—	0V
70	W/B	Battery power supply (fusible link)	OFF	—	Battery voltage

Terminals and Reference Values for IPDM E/R

EKS00AU3

Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)	
			Ignition switch	Operation or condition		
38	B	Ground	ON	—	0V	
39	L	CAN-H	—	—	—	
40	P	CAN-L	—	—	—	
50	W/R	Front fog lamp (LH)	ON	Lighting switch must be in the 2ND position or AUTO position (LOW beam is ON) and the front fog lamp switch must be ON	OFF	0V
					ON	Battery voltage
51	W/R	Front fog lamp (RH)	ON	Lighting switch must be in the 2ND position or AUTO position (LOW beam is ON) and the front fog lamp switch must be ON	OFF	0V
						ON
59	B	Ground	ON	—	0V	

EKS00AU4

How to Proceed With Trouble Diagnosis

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-67, "System Description"](#) .
3. Perform the Preliminary Check. Refer to [LT-73, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction.
5. Does the front fog lamp operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

FRONT FOG LAMP

EKS00AU5

Preliminary Check CHECK BCM CONFIGURATION

1. CHECK BCM CONFIGURATION

Confirm BCM configuration for "FR FOG LAMP" is set to "WITH". Refer to [BCS-14, "READ CONFIGURATION PROCEDURE"](#).

OK or NG

- OK >> Continue preliminary check. Refer to [LT-73, "CHECK POWER SUPPLY AND GROUND CIRCUIT"](#).
- NG >> Change BCM configuration for "FR FOG LAMP" to "WITH". Refer to [BCS-16, "WRITE CONFIGURATION PROCEDURE"](#).

CHECK POWER SUPPLY AND GROUND CIRCUIT

1. CHECK FUSES OR FUSIBLE LINK

Check for blown fuses or fusible link.

Unit	Power source	Fuse and fusible link No.
BCM	Battery	f
	Ignition switch ON or START position	59
IPDM E/R	Battery	53
	Battery (Fog lamps ON)	56

Refer to [LT-69, "Wiring Diagram — F/FOG —"](#).

OK or NG

- OK >> GO TO 2.
- NG >> If fuse or fusible link is blown, be sure to eliminate cause of malfunction before installing new fuse or fusible link. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#).


2. CHECK POWER SUPPLY CIRCUIT

1. Disconnect BCM connectors.
2. Check voltage between BCM harness connector and ground.

BCM (+)		(-)	Ignition switch position		
Connector	Terminal		OFF	ACC	ON
M18	38	Ground	0V	0V	Battery voltage
M20	70		Battery voltage	Battery voltage	Battery voltage

OK or NG

- OK >> GO TO 3.
- NG >> Check harness for open between BCM and fuse or fusible link.

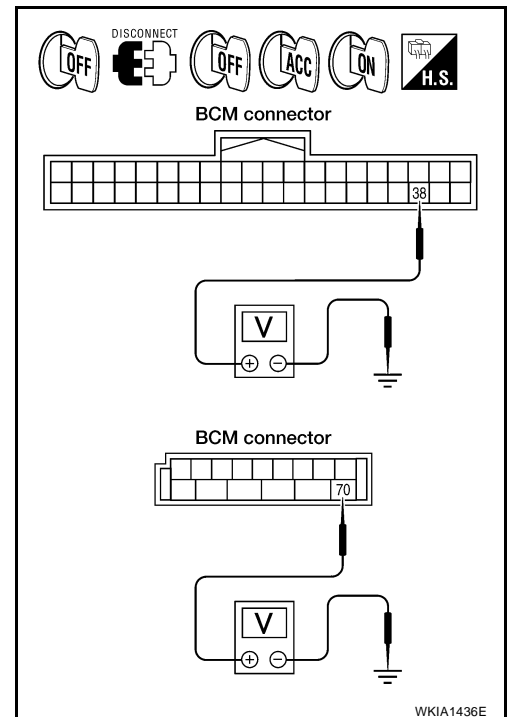

FRONT FOG LAMP


3. CHECK GROUND CIRCUIT

Check continuity between BCM harness connector and ground.

BCM			Continuity
Connector	Terminal		
M20	67	Ground	Yes

OK or NG

- OK >> Inspection End.
- NG >> Check ground circuit harness.

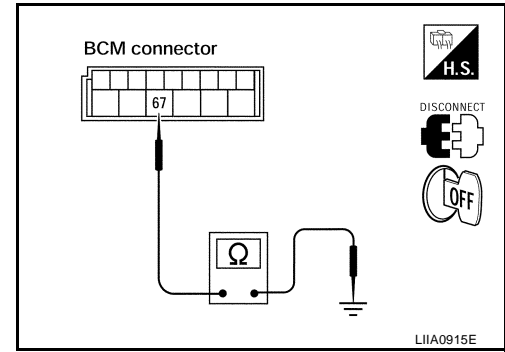

EKS00AU6

CONSULT-II Functions

Refer to [LT-17, "CONSULT-II Function \(BCM\)"](#) in HEADLAMP (FOR USA).

Refer to [LT-20, "CONSULT-II Function \(IPDM E/R\)"](#) in HEADLAMP (FOR USA).

Front Fog Lamps Do Not Illuminate (Both Sides)

EKS00AU7


1. CHECK COMBINATION SWITCH INPUT SIGNAL

Select "BCM" on CONSULT-II. With "HEAD LAMP" data monitor, make sure "FR FOG SW" turns ON-OFF linked with operation of lighting switch.

When lighting switch is in FOG position : FR FOG SW ON

OK or NG

- OK >> GO TO 2.
- NG >> Check lighting switch. Refer to [LT-102, "Combination Switch Inspection"](#).

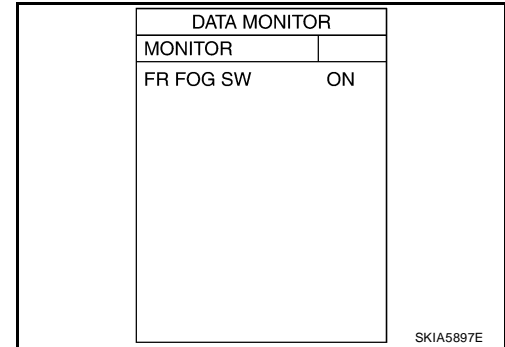

SKIA5897E


2. FOG LAMP ACTIVE TEST

1. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
2. Select "EXTERNAL LAMPS" on "SELECT TEST ITEM" screen.
3. Touch "FOG" on "ACTIVE TEST" screen.
4. Make sure fog lamps operate.

Fog lamps should operate.

OK or NG

- OK >> GO TO 3.
- NG >> GO TO 4.

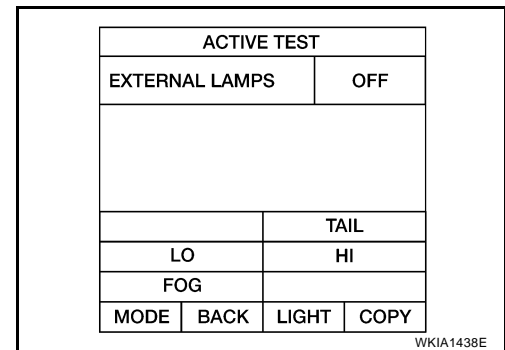

WKIA1438E

FRONT FOG LAMP

3. CHECK IPDM E/R

1. Select "IPDM E/R" on CONSULT-II, and select "DATA MONITOR" on "SELECT DIAG MODE" screen.
2. Make sure "FR FOG REQ" turns ON when lighting switch is in FOG position.

When lighting switch is in FOG position : FR FOG REQ ON

OK or NG

OK >> Replace IPDM E/R. Refer to [PG-30, "Removal and Installation of IPDM E/R"](#) .

NG >> Replace BCM. Refer to [BCS-20, "Removal and Installation"](#) .

DATA MONITOR			
MONITOR			
FR FOG REQ		ON	
		Page Down	
		RECORD	
MODE	BACK	LIGHT	COPY

SKIA5898E

4. IPDM E/R INSPECTION


1. Turn ignition switch OFF.
2. Disconnect front fog lamp left/right harness connector.
3. Start auto active test. Refer to [PG-24, "Auto Active Test"](#) .
4. When front fog lamp relay is operating, check voltage between left/right front fog lamp connector terminals and ground.

Terminals				Voltage (Approx.)
(+)		Terminal	(-)	
Front fog lamp connector				
LH	E101	1	Ground	Battery voltage
RH	E102			

OK or NG

OK >> Check front fog lamp bulbs and replace as necessary.

NG >> Replace IPDM E/R. Refer to [PG-30, "Removal and Installation of IPDM E/R"](#) .

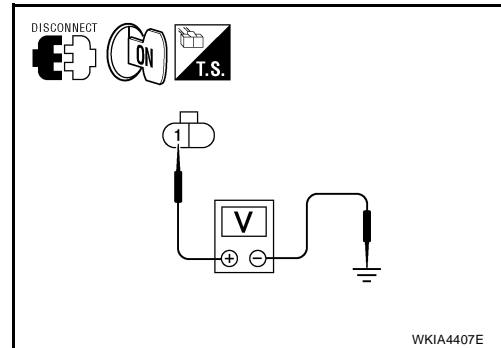

Front Fog Lamp Does Not Illuminate (One Side)

EKS00A08

1. BULB INSPECTION

Inspect bulb of lamp which does not illuminate.

OK or NG

OK >> GO TO 2.

NG >> Replace lamp bulb. Refer to [LT-78, "Bulb Replacement"](#) .

FRONT FOG LAMP


2. INSPECTION BETWEEN IPDM E/R AND FRONT FOG LAMPS

1. Disconnect IPDM E/R connector and inoperative front fog lamp connector.
2. Check continuity between IPDM E/R harness connector terminals and front fog lamp harness connector terminal.

A		B		Continuity
IPDM E/R connector	Terminal	Front fog lamp connector	Terminal	
E123	50	LH	E101	Yes
	51	RH	E102	

OK or NG

- OK >> Check ground circuit. If OK, replace IPDM E/R. Refer to [PG-30, "Removal and Installation of IPDM E/R"](#) . If NG, repair harness or connector.
- NG >> Check for short circuits and open circuits in harness between IPDM E/R and front fog lamps.

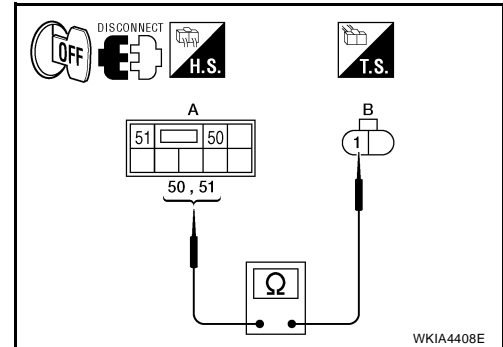

FRONT FOG LAMP

EKS00AU9

Aiming Adjustment


The fog lamp is a semi-sealed beam type which uses a replaceable halogen bulb. Before performing aiming adjustment, make sure of the following.

- Keep all tires inflated to correct pressure.
- Place vehicle on level ground.
- See that vehicle is unloaded (except for full levels of coolant, engine oil and fuel, and spare tire, jack, and tools). Have the driver or equivalent weight placed in driver seat.


Adjust aiming in the vertical direction by turning the adjustment screw.

NOTE:


Access adjustment screw from underneath front bumper. Use a T-3 (3 mm) Torx® bit or a 3 mm allen wrench to adjust. Turn screw clockwise to raise pattern and counterclockwise to lower pattern.

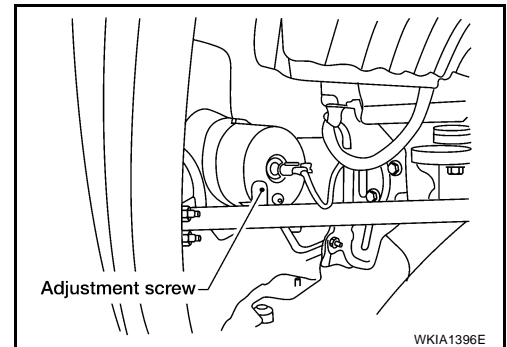

1. Set the distance between the screen and the center of the fog lamp lens as shown.
2. Turn front fog lamps ON.

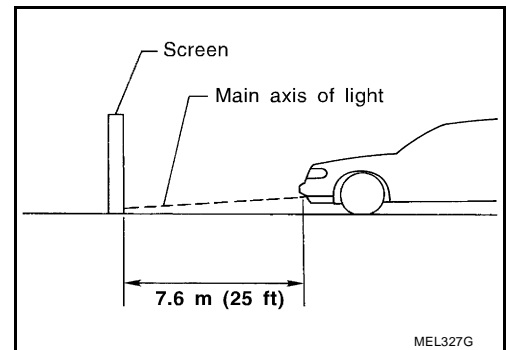

3. Adjust front fog lamps using adjusting screw so that the top edge of the high intensity zone is 100 mm (4 in) below the height of the fog lamp centers as shown.
- When performing adjustment, if necessary, cover the headlamps and opposite fog lamp.

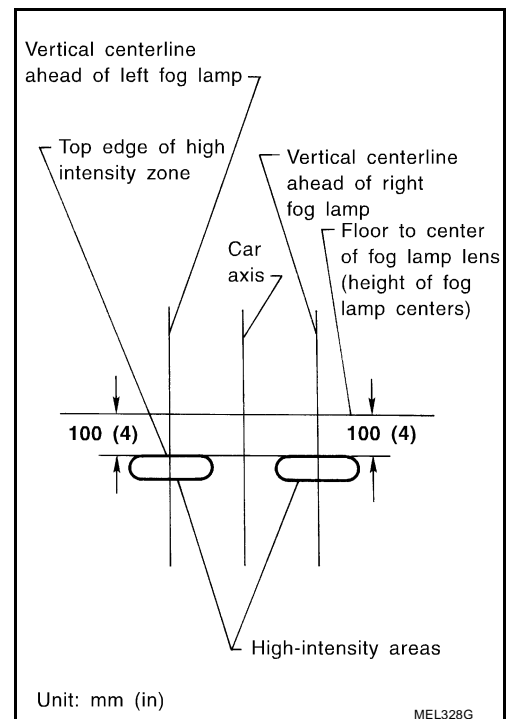

A
B
C
D
E
F
G
H
I
J
LT
L
M

FRONT FOG LAMP

Bulb Replacement FRONT FOG LAMP


EKS00AUA

CAUTION:

- Do not touch the glass of bulb directly by hand. Keep grease and other oily substances away from it. Do not touch bulb by hand while it is lit or right after being turned off. Burning may result.
- Do not leave bulb out of fog lamp reflector for a long time because dust, moisture smoke, etc. may affect the performance of fog lamp. When replacing bulb, be sure to replace it with new one.

Removal

1. Disconnect front fog lamp connector.
2. Turn front fog lamp socket counterclockwise to remove it.

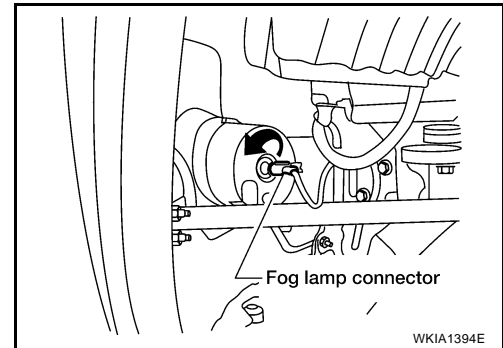

Installation

Installation is in the reverse order of removal.


Removal and Installation FRONT FOG LAMP

EKS00AUB

Removal

CAUTION:

- Do not touch the glass of bulb directly by hand. Keep grease and other oily substances away from it. Do not touch bulb by hand while it is lit or right after being turned off. Burning may result.
 - Do not leave bulb out of fog lamp reflector for a long time because dust, moisture smoke, etc. may affect the performance of fog lamp. When replacing bulb, be sure to replace it with new one.
1. Position the fender protector aside.
 2. Disconnect electrical connector.
 3. Remove nut and pull fog lamp out of front fascia.

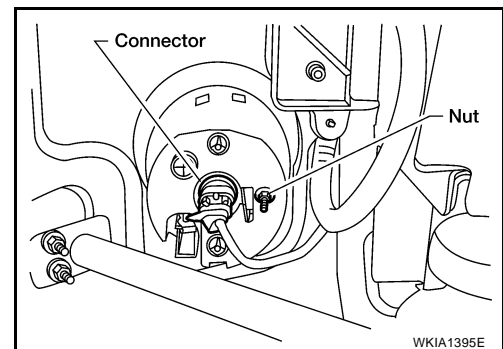

Installation

Installation is in the reverse order of removal.


TURN SIGNAL AND HAZARD WARNING LAMPS

PF26120

EKS00AUC

TURN SIGNAL AND HAZARD WARNING LAMPS

Component Parts and Harness Connector Location

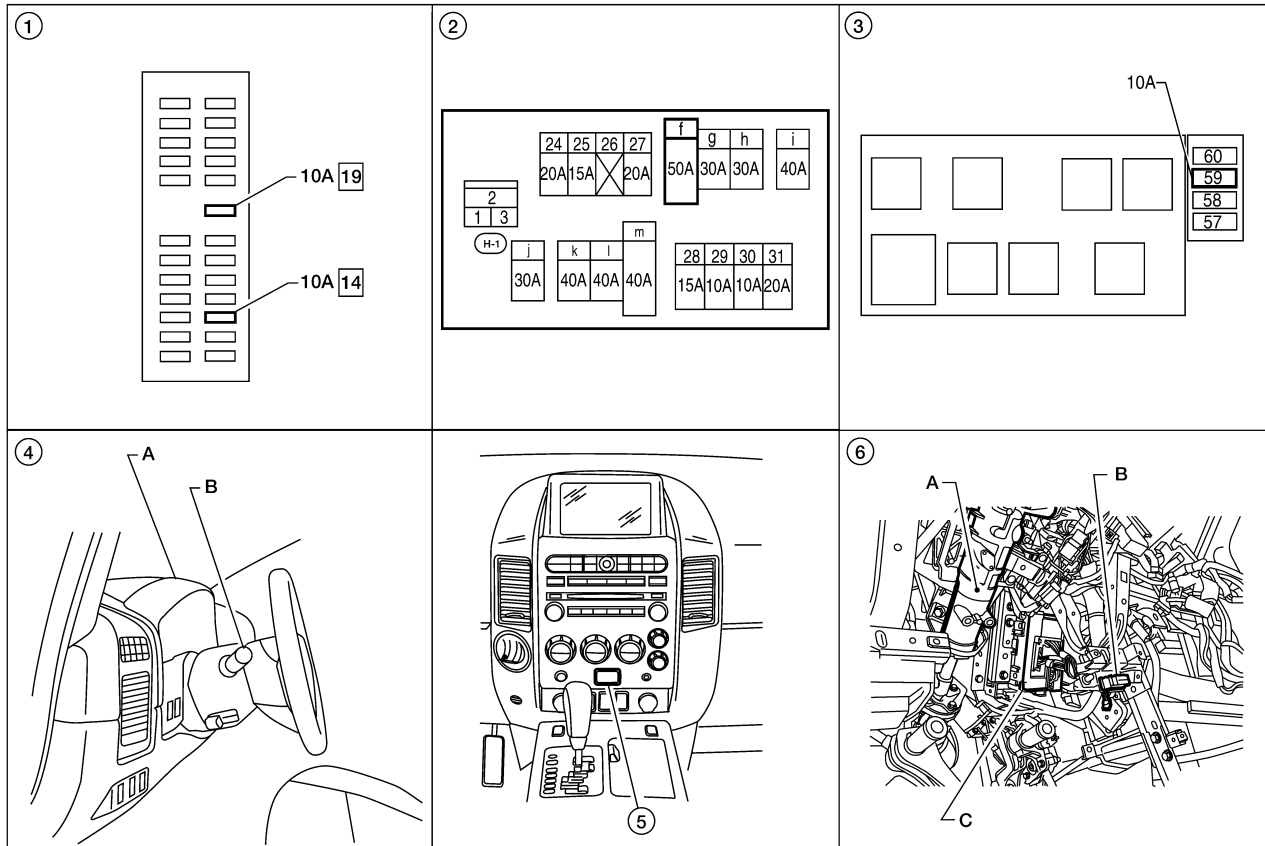

1. Fuse block (J/B)
2. IPDM E/R fuse layout
3. Fuse and relay box
4. A. Combination meter M24
B. Combination switch (lighting switch) M28
5. Hazard switch M55
6. A. Steering column
B. Data link connector M22
C. BCM M18, M19, M20
(View with instrument lower panel LH removed)

System Description OUTLINE

EKS00AUD

Power is supplied at all times

- through 50A fusible link (letter f , located in the fuse and fusible link box)
- to BCM (body control module) terminal 70, and
- through 10A fuse [No. 19, located in the fuse block (J/B)]
- to combination meter terminal 8.

TURN SIGNAL OPERATION

When the ignition switch is in the ON or START position, power is supplied

- through 10A fuse (No. 59, located in the fuse and relay box)
- to BCM terminal 38, and
- through 10A fuse [No. 14, located in the fuse block (J/B)]
- to combination meter terminal 24.

Ground is supplied

- to BCM terminal 67 and
- to combination meter terminal 17
- through grounds M57, M61 and M79.

A
B
C
D
E
F
G
H
I
J

LT

L
M

TURN SIGNAL AND HAZARD WARNING LAMPS

LH Turn

When the turn signal switch is moved to the left position, the BCM, interpreting it as turn signal is ON, outputs turn signal from BCM terminal 60.

The BCM supplies power

- through BCM terminal 60
- to front combination lamp LH terminal 5
- through front combination lamp LH terminal 4
- to grounds E9, E15 and E24, and
- to door mirror LH terminal 15 (with automatic drive positioner)
- through door mirror LH terminal 11
- to grounds M57, M61 and M79, and
- to rear combination lamp LH terminal 4
- through rear combination lamp LH terminal 6
- to grounds B7 and B19.

BCM sends signal to combination meter through CAN communication lines, and turns on turn signal indicator lamp within combination meter.

RH Turn

When the turn signal switch is moved to the right position, the BCM, interpreting it as turn signal is ON, outputs turn signal from BCM terminal 61.

The BCM supplies power

- through BCM terminal 61
- to front combination lamp RH terminal 5
- through front combination lamp RH terminal 4
- to grounds E9, E15 and E24, and
- to door mirror RH terminal 15 (with automatic drive positioner)
- through door mirror RH terminal 11
- to grounds M57, M61 and M79, and
- to rear combination lamp RH terminal 4
- through rear combination lamp terminal 6
- to grounds B117 and B132.

BCM sends signal to combination meter through CAN communication lines, and turns on turn signal indicator lamp within combination meter.

HAZARD LAMP OPERATION

Power is supplied at all times

- through 50A fusible link (letter f , located in the fuse and fusible link box)
- to BCM terminal 70, and
- through 10A fuse [No. 19, located in the fuse block (J/B)]
- to combination meter terminal 8.

Ground is supplied

- to BCM terminal 67 and
- to combination meter terminal 17
- through grounds M57, M61 and M79.

When the hazard switch is depressed, ground is supplied

- to BCM terminal 29
- through hazard switch terminal 4
- through hazard switch terminal 6
- through grounds M57, M61 and M79.

When the hazard switch is depressed, the BCM, interpreting it as hazard warning lamps are ON, outputs turn signal from BCM terminals 60 and 61.

The BCM supplies power

TURN SIGNAL AND HAZARD WARNING LAMPS

- through BCM terminals 60 and 61
- to front combination lamp LH and RH terminal 5
- through front combination lamp LH and RH terminal 4
- to grounds E9, E15 and E24, and
- to door mirror LH and RH terminal 15 (with automatic drive positioner)
- through door mirror LH and RH terminal 11
- to grounds M57, M61 and M79, and
- to rear combination lamp LH terminal 4
- through rear combination lamp LH terminal 6
- to grounds B7 and B19, and
- to rear combination lamp RH terminal 4
- through rear combination lamp RH terminal 6
- to grounds B117 and B132.

A
B
C
D
E

BCM sends signal to combination meter through CAN communication lines, and turns on turn signal indicator lamps within combination meter.

REMOTE KEYLESS ENTRY SYSTEM OPERATION

Power is supplied at all times

- through 50A fusible link (letter f , located in the fuse and fusible link box)
- to BCM terminal 70, and
- through 10A fuse [No. 19, located in the fuse block (J/B)]
- to combination meter terminal 8.

F
G
H

Ground is supplied

- to BCM terminal 67 and
- to combination meter terminal 17
- through grounds M57, M61 and M79.

I
J

When the remote keyless entry system is triggered by input from the keyfob, the BCM, interpreting it as turn signal is ON, outputs turn signal from BCM terminals 60 and 61.

The BCM supplies power

- through BCM terminals 60 and 61
- to front combination lamp LH and RH terminal 5
- through front combination lamp LH and RH terminal 4
- to grounds E9, E15 and E24, and
- to door mirror LH and RH terminal 15 (with automatic drive positioner)
- through door mirror LH and RH terminal 11
- to grounds M57, M61 and M79, and
- to rear combination lamp LH terminal 4
- through rear combination lamp LH terminal 6
- to grounds B7 and B19, and
- to rear combination lamp RH terminal 4
- through rear combination lamp RH terminal 6
- to grounds B117 and B132.

LT
L
M

BCM sends signal to combination meter through CAN communication lines, and turns on turn signal indicator lamps within combination meter.

With power and input supplied, the BCM controls the flashing of the hazard warning lamps when keyfob is used to activate the remote keyless entry system.

COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#) .

CAN Communication System Description


Refer to [LAN-25, "CAN COMMUNICATION"](#) .

EKS00AUE

TURN SIGNAL AND HAZARD WARNING LAMPS

Schematic

EKS00GAU

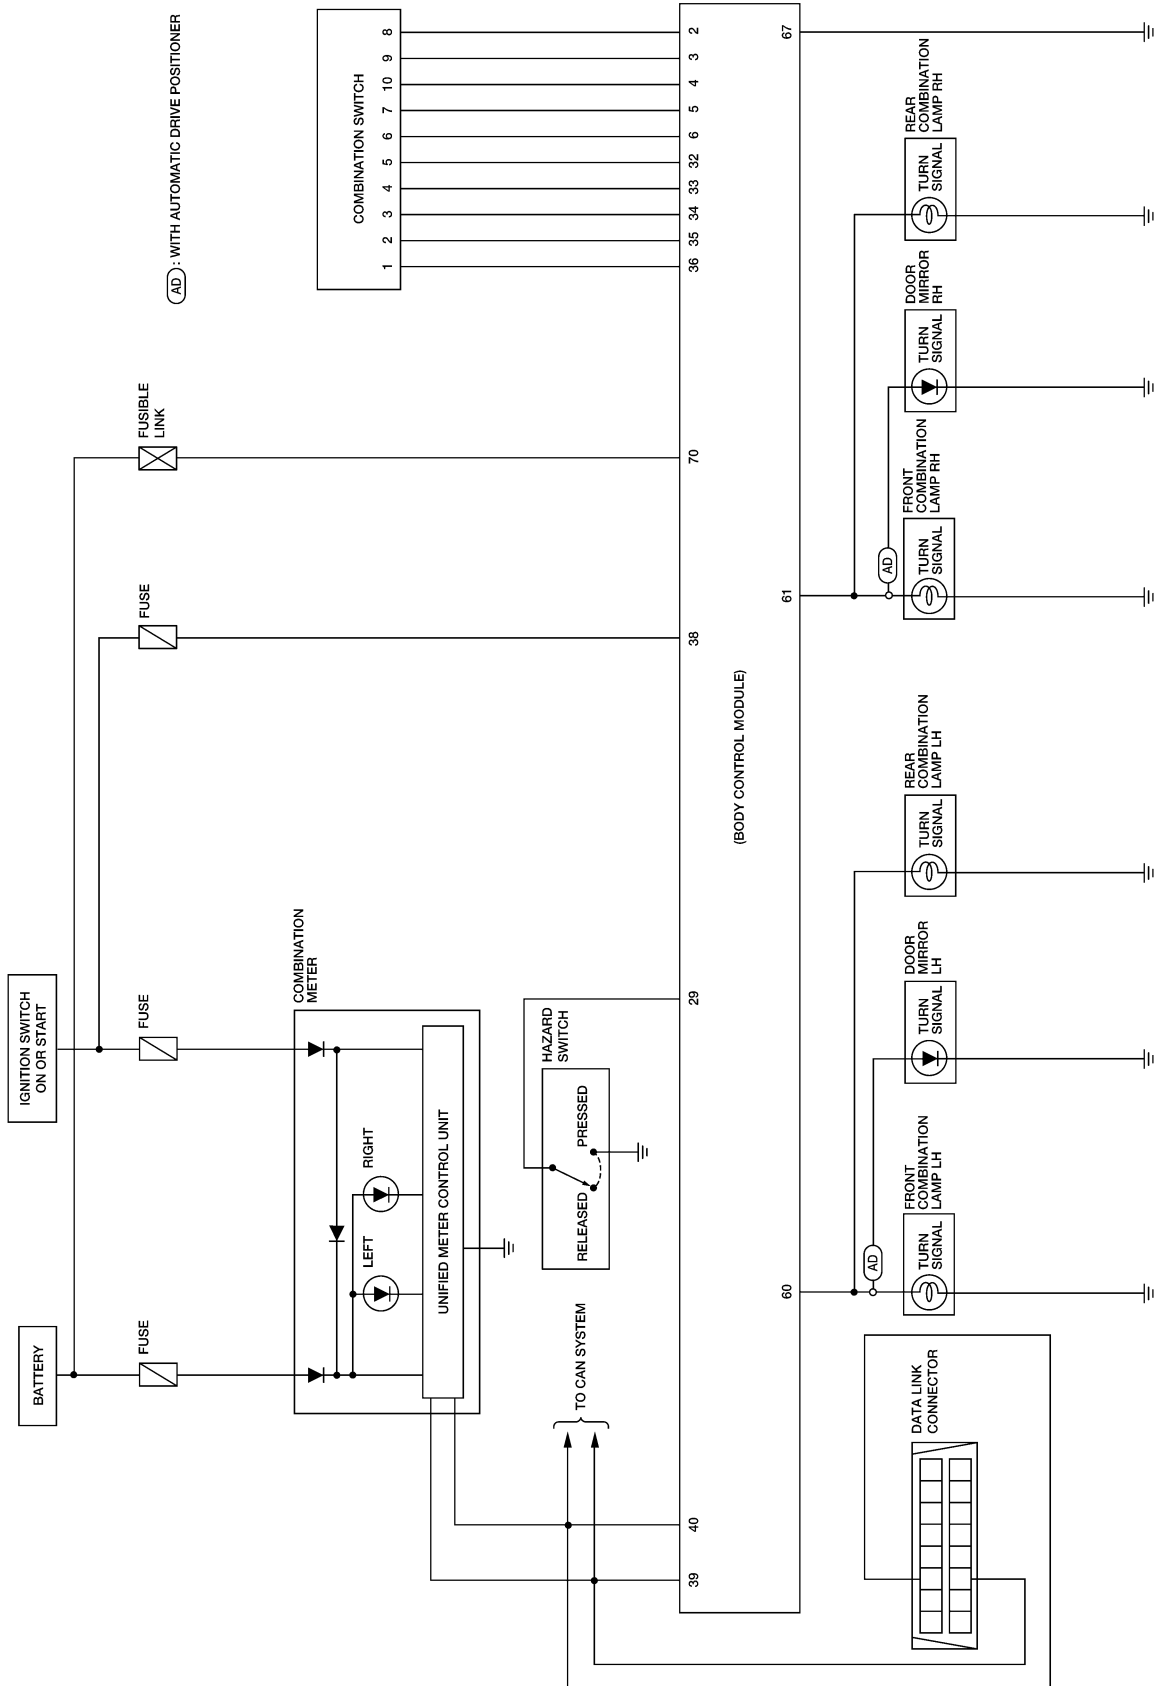

WKWA3468E

 
 
 

TURN SIGNAL AND HAZARD WARNING LAMPS

Wiring Diagram — TURN —

EKS00AUF

LT-TURN-01

— : DATA LINE


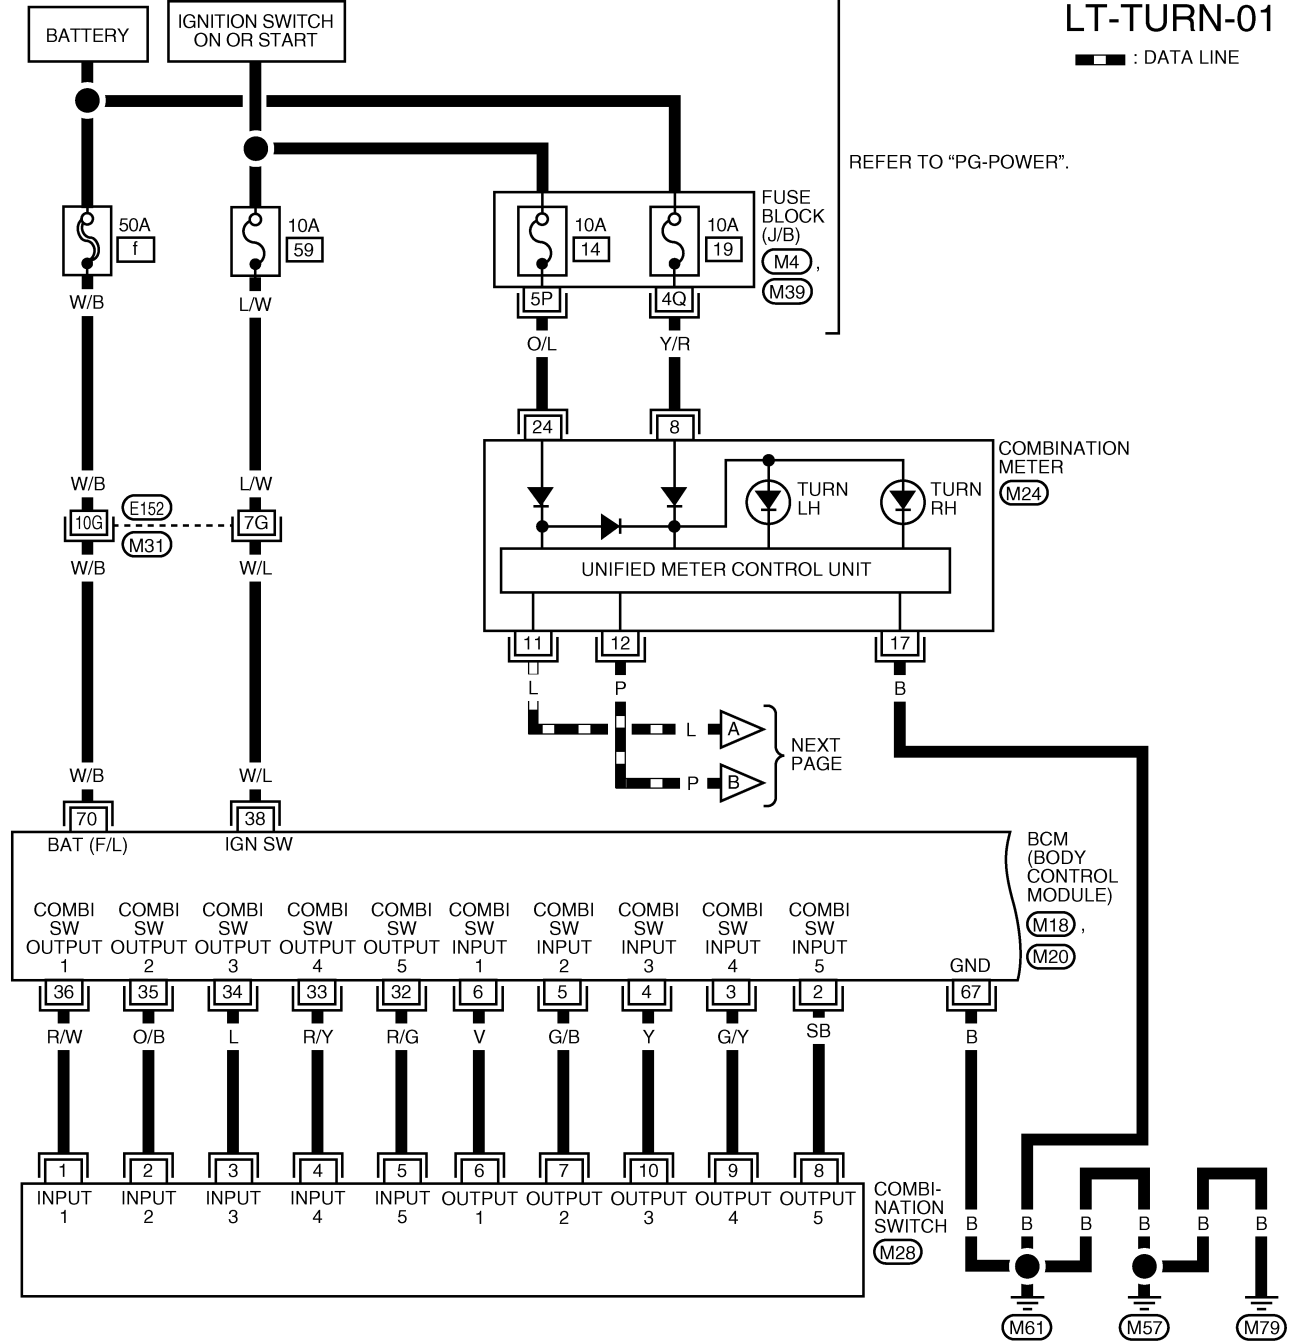


REFER TO THE FOLLOWING.
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA3469E

TURN SIGNAL AND HAZARD WARNING LAMPS

LT-TURN-02

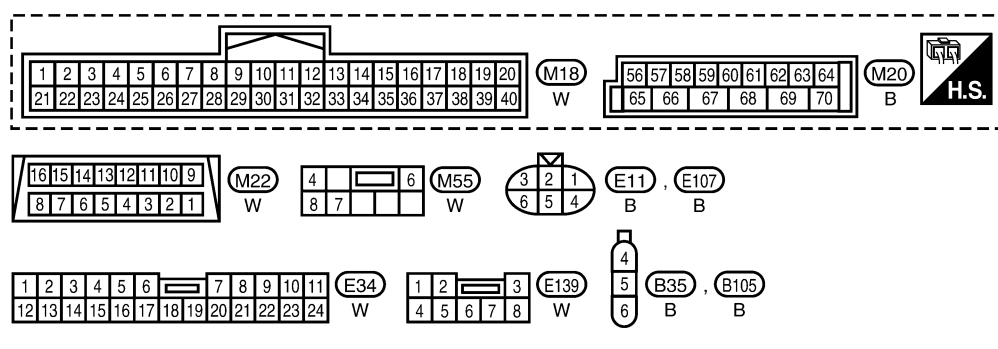
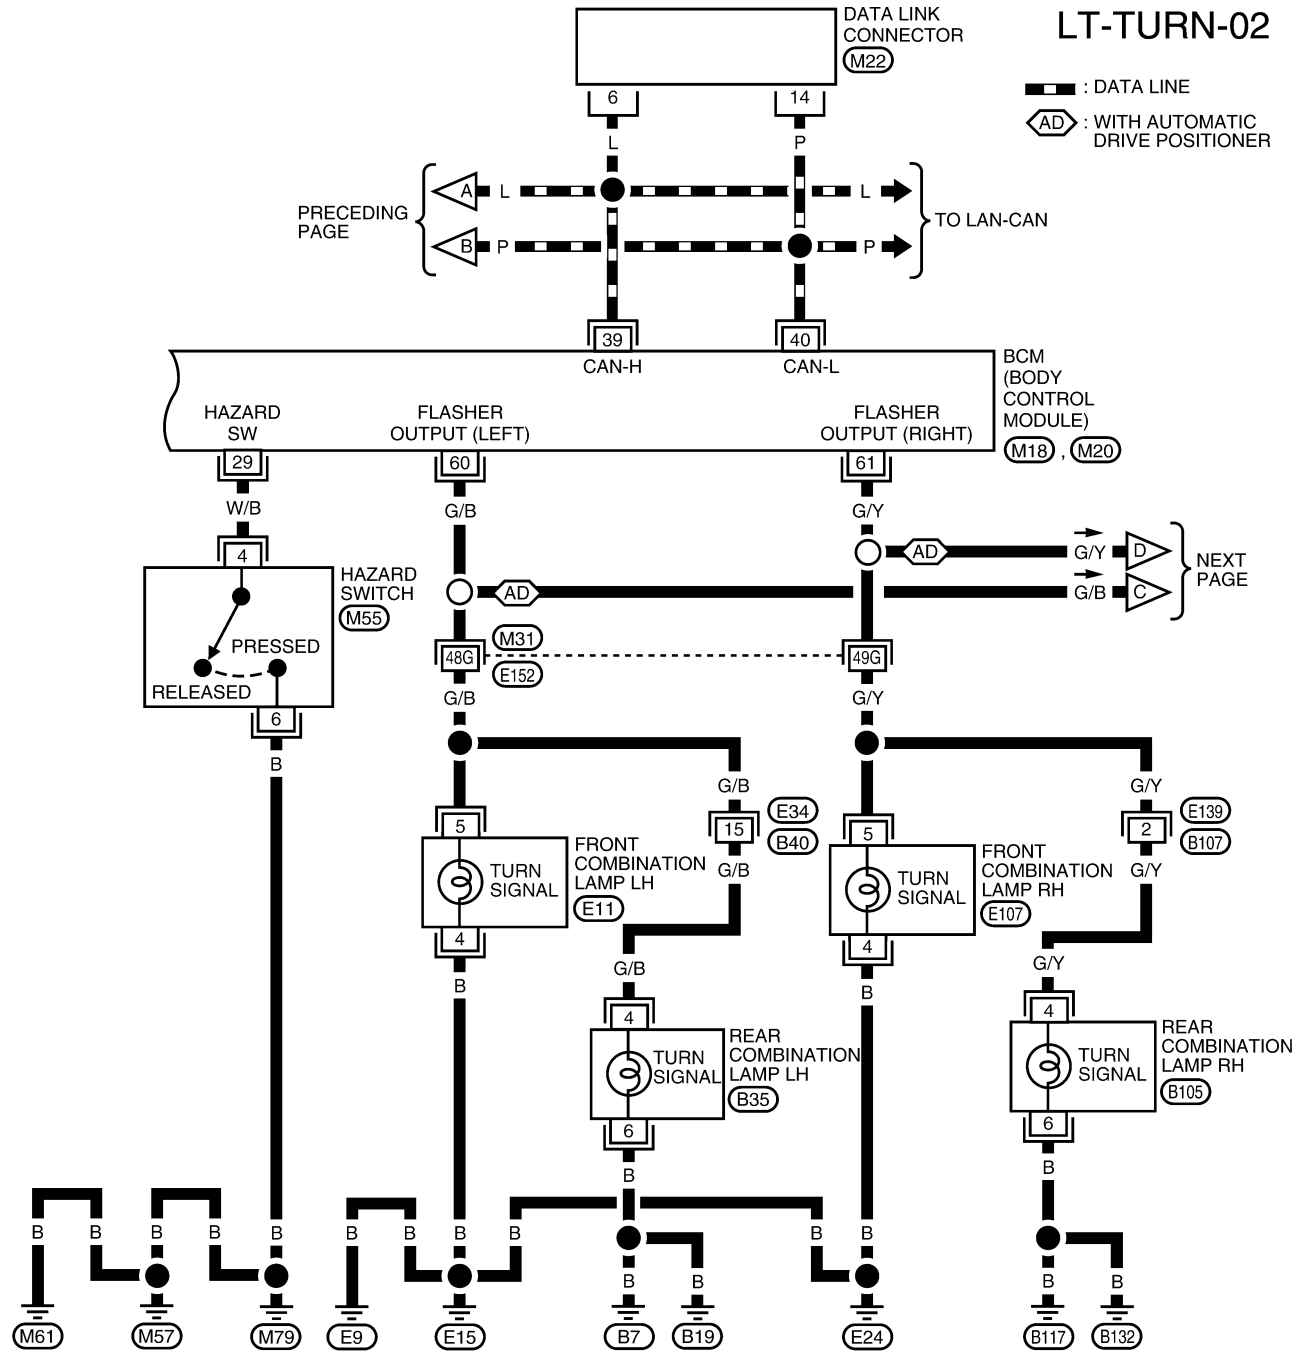


REFER TO THE FOLLOWING.
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA3470E

TURN SIGNAL AND HAZARD WARNING LAMPS

LT-TURN-03


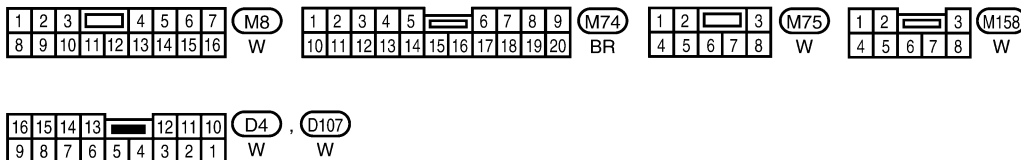
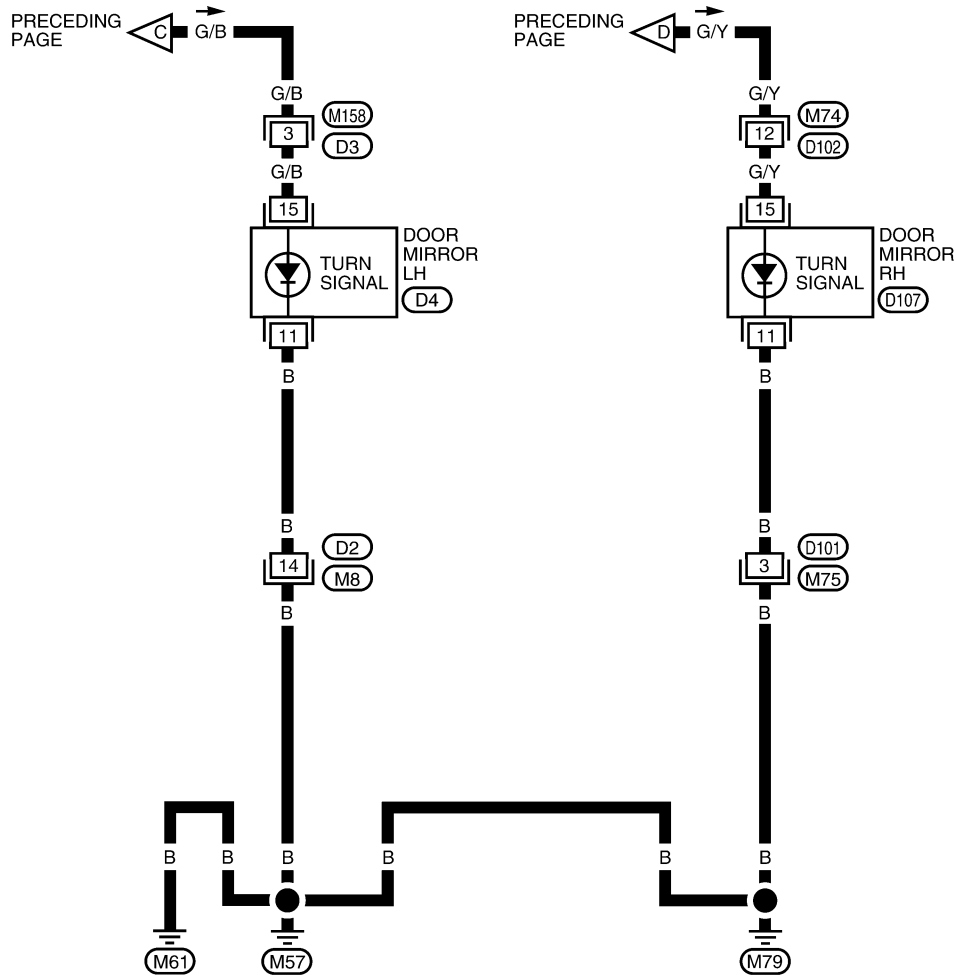





WKWA3471E





TURN SIGNAL AND HAZARD WARNING LAMPS

Terminals and Reference Values for BCM

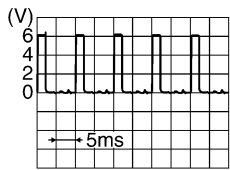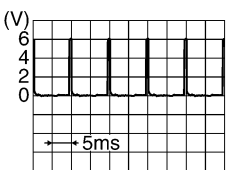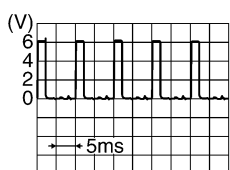EKS00AUG

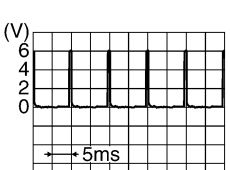Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)				
			Ignition switch	Operation or condition					
2	SB	Combination switch input 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>				
3	G/Y	Combination switch input 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5292E</p>				
4	Y	Combination switch input 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>				
5	G/B	Combination switch input 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5292E</p>				
6	V	Combination switch input 1							
29	W/B	Hazard switch signal	OFF	Hazard switch	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 50%; text-align: center;">ON</td> <td style="text-align: center;">0V</td> </tr> <tr> <td style="width: 50%; text-align: center;">OFF</td> <td style="text-align: center;">5V</td> </tr> </table>	ON	0V	OFF	5V
ON	0V								
OFF	5V								
32	R/G	Combination switch output 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>				
33	R/Y	Combination switch output 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5292E</p>				

TURN SIGNAL AND HAZARD WARNING LAMPS

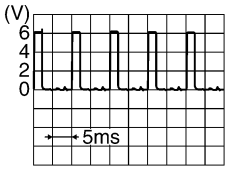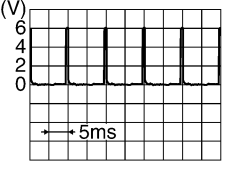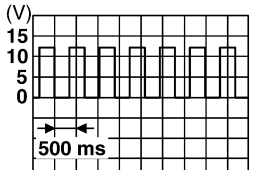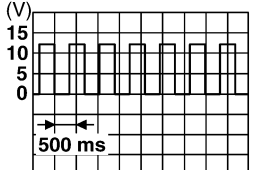Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)
			Ignition switch	Operation or condition	
34	L	Combination switch output 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5291E
35	O/B	Combination switch output 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5292E
36	R/W	Combination switch output 1			
38	W/L	Ignition switch (ON)	ON	—	Battery voltage
39	L	CAN-H	—	—	—
40	P	CAN-L	—	—	—
60	G/B	Turn signal (left)	ON	Combination switch Turn left ON	 SKIA3009J
61	G/Y	Turn signal (right)	ON	Combination switch Turn right ON	 SKIA3009J
67	B	Ground	ON	—	0V
70	W/B	Battery power supply	OFF	—	Battery voltage

How to Proceed With Trouble Diagnosis

EKS00AUH

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-79, "System Description"](#) .
3. Perform preliminary check. Refer to [LT-88, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction.
5. Do turn signal and hazard warning lamps operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

TURN SIGNAL AND HAZARD WARNING LAMPS

EKS00AUI

Preliminary Check CHECK POWER SUPPLY AND GROUND CIRCUIT

1. CHECK FUSES OR FUSIBLE LINK

Check for blown fuses or fusible link.

Unit	Power source	Fuse and fusible link No.
BCM	Battery	f
	Ignition switch ON or START position	59

Refer to [LT-83, "Wiring Diagram — TURN —"](#) .

OK or NG

OK >> GO TO 2.

NG >> If fuse or fusible link is blown, be sure to eliminate cause of malfunction before installing new fuse or fusible link. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#) .

2. CHECK POWER SUPPLY CIRCUIT


1. Disconnect BCM connectors.
2. Check voltage between BCM harness connector and ground.

BCM (+)		(-)	Ignition switch position		
Connector	Terminal		OFF	ACC	ON
M18	38	Ground	0V	0V	Battery voltage
M20	70		Battery voltage	Battery voltage	Battery voltage

OK or NG

OK >> GO TO 3.

NG >> Check harness for open between BCM and fuse or fusible link.

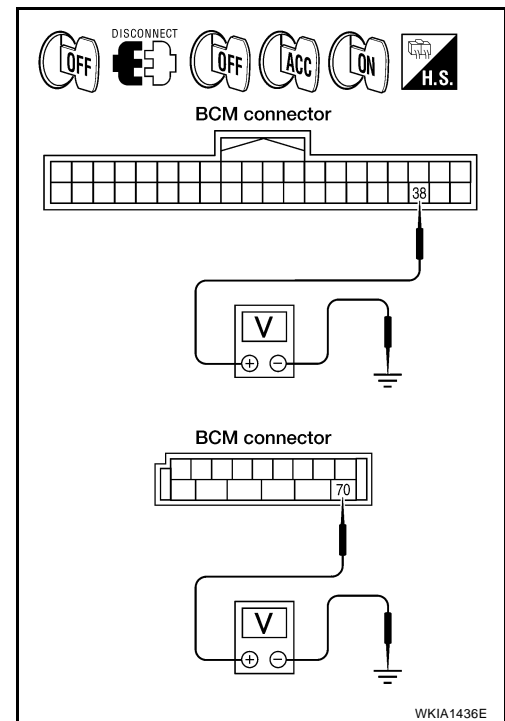

WKIA1436E

3. CHECK GROUND CIRCUIT


Check continuity between BCM harness connector and ground.

BCM		Continuity
Connector	Terminal	
M20	67	Ground Yes

OK or NG

OK >> Inspection End.

NG >> Check ground circuit harness.

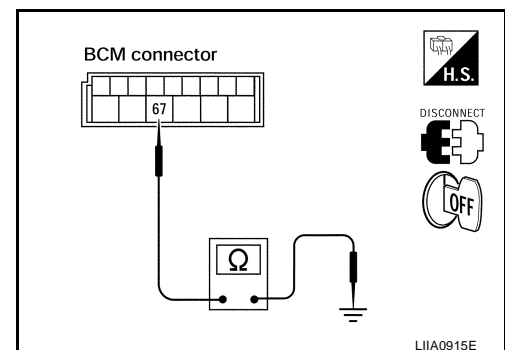

LIA0915E

TURN SIGNAL AND HAZARD WARNING LAMPS

CONSULT-II Function (BCM)

EKS00AUJ

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


BCM diagnostic test item	Diagnostic mode	Description
Inspection by part	WORK SUPPORT	Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed.
	DATA MONITOR	Displays BCM input/output data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
	SELF-DIAG RESULTS	Displays BCM self-diagnosis results.
	CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
	ECU PART NUMBER	BCM part number can be read.
	CONFIGURATION	Performs BCM configuration read/write functions.

CONSULT-II OPERATION


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.


1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn ignition switch ON.

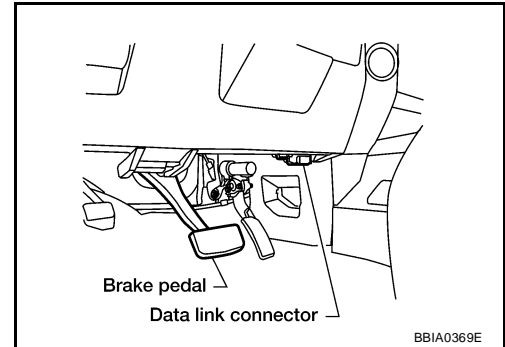

2. Touch "START (NISSAN BASED VHCL)".

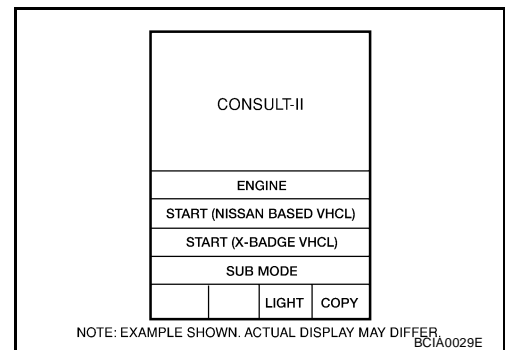

3. Touch "BCM" on "SELECT SYSTEM" screen. If "BCM" is not indicated, go to [GI-39, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

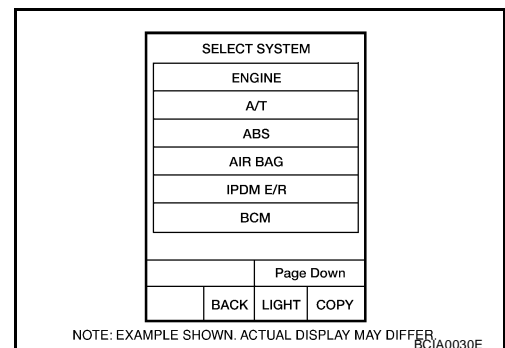

TURN SIGNAL AND HAZARD WARNING LAMPS

4. Touch "FLASHER" on "SELECT TEST ITEM" screen.

SELECT TEST ITEM			
HEAD LAMP			
WIPER			
FLASHER			
AIR CONDITIONER			
COMB SW			
BCM			
Scroll Up		Page Down	
	BACK	LIGHT	COPY

LKIA0183E

DATA MONITOR

Operation Procedure

1. Touch "FLASHER" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on the "SELECT MONITOR ITEM" screen.

ALL SIGNALS	Monitors all the signals.
SELECTION FROM MENU	Selects and monitors the individual signal.

4. Touch "START".
5. When "SELECTION FROM MENU" is selected, touch items to be monitored. When "ALL SIGNALS" is selected, all the items will be monitored.
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

Display Item List

Monitor item	Contents
IGN ON SW "ON/OFF"	Displays "IGN position (ON)/OFF, ACC position (OFF)" judged from the ignition switch signal.
HAZARD SW "ON/OFF"	Displays "Hazard ON (ON)/Hazard OFF (OFF)" status, determined from hazard switch signal.
TURN SIGNAL R "ON/OFF"	Displays "Turn right (ON)/Other (OFF)" status, determined from lighting switch signal.
TURN SIGNAL L "ON/OFF"	Displays "Turn left (ON)/Other (OFF)" status, determined from lighting switch signal.
BRAKE SW "ON/OFF"	Displays status of stop lamp switch.

ACTIVE TEST

Operation Procedure

1. Touch "FLASHER" on "SELECT TEST ITEM" screen.
2. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
3. Touch item to be tested and check operation of the selected item.
4. During the operation check, touching "BACK" or "OFF" deactivates the operation.

Display Item List

Test item	Description
FLASHER (RH)	Turn signal lamp (right) can be operated by any ON-OFF operations.
FLASHER (LH)	Turn signal lamp (left) can be operated by any ON-OFF operations.

TURN SIGNAL AND HAZARD WARNING LAMPS

EKS00AUK

Front Turn Signal Lamp Does Not Operate

1. CHECK COMBINATION SWITCH INPUT SIGNAL

Ⓜ With CONSULT-II

Select "BCM" on CONSULT-II. With "FLASHER" data monitor, make sure "TURN SIGNAL R" and "TURN SIGNAL L" turns ON-OFF linked with operation of lighting switch.

**When lighting switch is in : TURN SIGNAL R ON
TURN RH position**

**When lighting switch is in : TURN SIGNAL L ON
TURN LH position**

ⓧ Without CONSULT-II

Refer to [LT-102, "Combination Switch Inspection"](#).

OK or NG

OK >> GO TO 2.

NG >> Check lighting switch. Refer to [LT-102, "Combination Switch Inspection"](#).

DATA MONITOR	
MONITOR	
TURN SIGNAL R	ON
TURN SIGNAL L	ON

SKIA4499E

2. ACTIVE TEST

Ⓜ With CONSULT-II

1. Select "FLASHER" during active test. Refer to [LT-90, "ACTIVE TEST"](#).

2. Make sure "FLASHER RH" and "FLASHER LH" operate.

ⓧ Without CONSULT-II

GO TO 3.

OK or NG

OK >> Replace BCM. Refer to [BCS-20, "Removal and Installation"](#).

NG >> GO TO 3.

ACTIVE TEST	
FLASHER	OFF
RH	LH
MODE	BACK
LIGHT	COPY

SKIA6190E

3. CHECK TURN SIGNAL LAMPS CIRCUIT

1. Turn ignition switch OFF.

2. Disconnect BCM connector and front combination lamp LH and RH connectors.

3. Check continuity between BCM harness connector M20 terminal 60 and front combination lamp LH harness connector E11 terminal 5.

60 - 5 : Continuity should exist.


4. Check continuity between BCM harness connector M20 terminal 61 and front combination lamp RH harness connector E107 terminal 5.

61 - 5 : Continuity should exist.

OK or NG

OK >> GO TO 4.

NG >> Repair harness or connector.

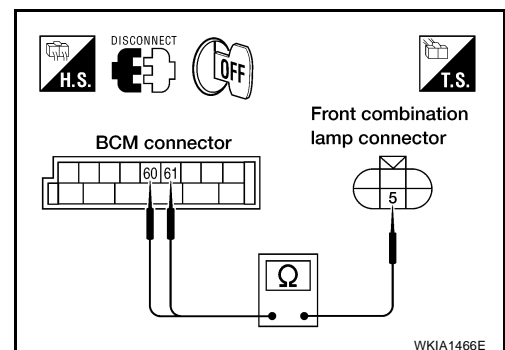

TURN SIGNAL AND HAZARD WARNING LAMPS

4. CHECK GROUND

1. Check continuity between front combination lamp LH harness connector E11 terminal 4 and ground.


4 - Ground : Continuity should exist.

2. Check continuity between front combination lamp RH harness connector E107 terminal 4 and ground.

4 - Ground : Continuity should exist.

OK or NG

- OK >> GO TO 5.
- NG >> Repair harness or connector.

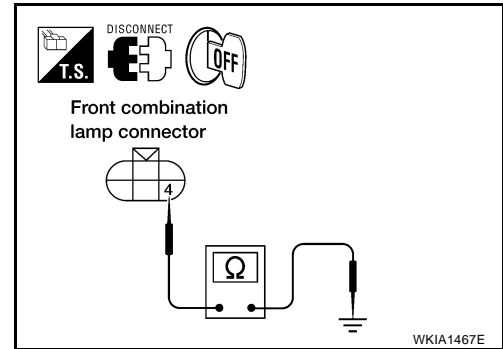

5. CHECK BULB

Check bulb standard of each turn signal lamp is correct. Refer to [LT-175, "Exterior Lamp"](#) .

OK or NG

- OK >> Replace BCM if turn signal lamps do not work after setting the connector again. Refer to [BCS-20, "Removal and Installation"](#) .
- NG >> Replace turn signal lamp bulb. Refer to [LT-31, "FRONT TURN SIGNAL/PARKING LAMP"](#) .

Door Mirror Turn Signal Lamp Does Not Operate

EKS00GAV

1. CHECK COMBINATION SWITCH INPUT SIGNAL

☑ With CONSULT-II

Select "BCM" on CONSULT-II. With "FLASHER" data monitor, make sure "TURN SIGNAL R" and "TURN SIGNAL L" turns ON-OFF linked with operation of lighting switch.

**When lighting switch is in : TURN SIGNAL R ON
TURN RH position**

**When lighting switch is in : TURN SIGNAL L ON
TURN LH position**

☒ Without CONSULT-II

Refer to [LT-102, "Combination Switch Inspection"](#) .

OK or NG

- OK >> GO TO 2.
- NG >> Check lighting switch. Refer to [LT-102, "Combination Switch Inspection"](#) .

DATA MONITOR	
MONITOR	
TURN SIGNAL R	ON
TURN SIGNAL L	ON

SKIA4499E

2. ACTIVE TEST

☑ With CONSULT-II

1. Select "FLASHER" during active test. Refer to [LT-90, "ACTIVE TEST"](#) .

2. Make sure "FLASHER RH" and "FLASHER LH" operate.

☒ Without CONSULT-II

GO TO 3.

OK or NG

- OK >> Replace BCM. Refer to [BCS-20, "Removal and Installation"](#) .
- NG >> GO TO 3.

ACTIVE TEST			
FLASHER		OFF	
RH	LH		
MODE	BACK	LIGHT	COPY

SKIA6190E

TURN SIGNAL AND HAZARD WARNING LAMPS


3. CHECK TURN SIGNAL LAMPS CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector and door mirror LH/RH connector.
3. Check continuity between BCM harness connector M20 (A) terminal 60 (LH), 61 (RH) and door mirror harness connector (LH D4), (RH D107) (B) terminal 15.

60, 61 - 15 : Continuity should exist.

OK or NG

- OK >> GO TO 4.
NG >> Repair harness or connector.

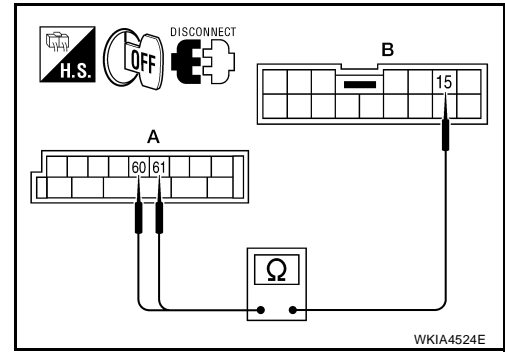


4. CHECK GROUND

1. Check continuity between door mirror harness connector (LH D4), (RH D107) terminal 11 and ground.

11 - Ground : Continuity should exist.

OK or NG

- OK >> Replace door mirror turn signal.
NG >> Repair harness or connector.

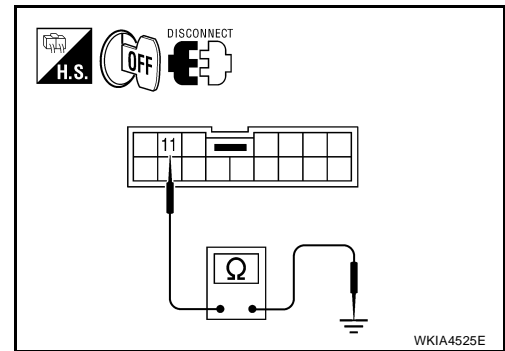

Rear Turn Signal Lamp Does Not Operate

1. CHECK TAIL LAMPS AND STOP LAMPS

Check bulb standard of each turn signal lamp is correct. Refer to [LT-175, "Exterior Lamp"](#).

OK or NG

- OK >> GO TO 2.
NG >> Replace turn signal lamp bulb. Refer to [LT-124, "Bulb Replacement"](#).

2. CHECK TURN SIGNAL LAMPS CIRCUIT

1. Disconnect BCM connector and rear combination lamp connector.
2. Check continuity between BCM harness connector M20 terminal 61 and rear combination lamp RH harness connector B105 terminal 4.


61 - 4 : Continuity should exist.

3. Check continuity between BCM harness connector M20 terminal 60 and rear combination lamp LH harness connector B35 terminal 4.

60 - 4 : Continuity should exist.

OK or NG

- OK >> GO TO 3.
NG >> Repair harness or connector.

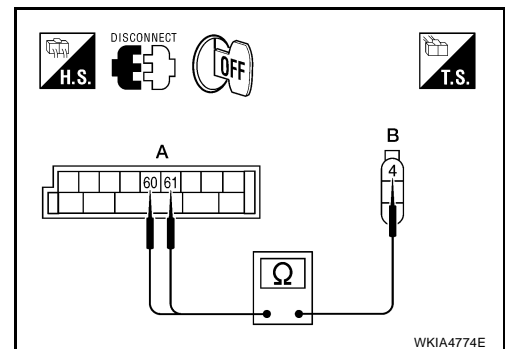

TURN SIGNAL AND HAZARD WARNING LAMPS


3. CHECK GROUND CIRCUIT

Check continuity between rear combination lamp harness connector B35 LH and B105 RH terminal 6 and ground.

6 - Ground : Continuity should exist.

OK or NG

- OK >> Check rear combination lamp connector for proper connection. Repair as necessary.
- NG >> Repair harness or connector.

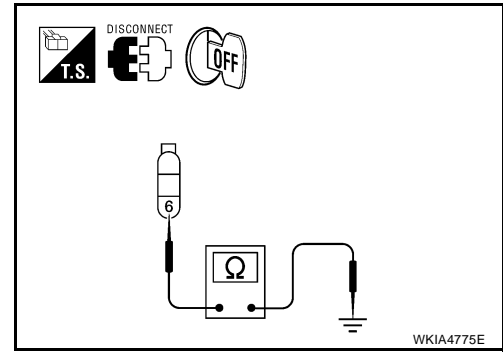

Hazard Warning Lamp Does Not Operate But Turn Signal Lamps Operate

EKS00AUM

1. CHECK BULB

Make sure bulb standard of each turn signal lamp is correct. Refer to [LT-175, "Exterior Lamp"](#).

OK or NG


- OK >> GO TO 2.
- NG >> Replace turn signal lamp bulb. Refer to [LT-31, "FRONT TURN SIGNAL/PARKING LAMP"](#) for front turn signal bulb. Refer to [LT-124, "Bulb Replacement"](#) for rear turn signal bulb.

2. CHECK HAZARD SWITCH INPUT SIGNAL

Ⓜ With CONSULT-II

Select "BCM" on CONSULT-II. With "FLASHER" data monitor, make sure "HAZARD SW" turns ON-OFF linked with operation of hazard switch.

When hazard switch is in ON position : HAZARD SW ON

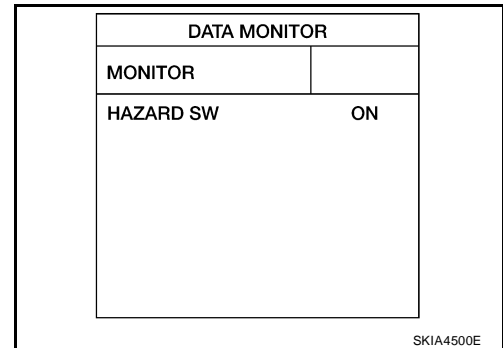


ⓧ Without CONSULT-II

Check voltage between BCM harness connector M18 terminal 29 and ground.

BCM		(-)	Condition	Voltage (Approx.)
(+)				
Connector	Terminal			
M18	29	Ground	Hazard switch is ON	0V
			Hazard switch is OFF	5V

OK or NG

- OK >> Replace BCM. Refer to [BCS-20, "Removal and Installation"](#).
- NG >> GO TO 3.

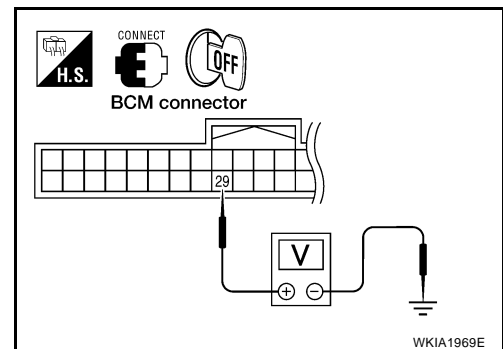

TURN SIGNAL AND HAZARD WARNING LAMPS


3. CHECK HAZARD SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector and hazard switch connector.
3. Check continuity between BCM harness connector M18 terminal 29 and hazard switch harness connector M55 terminal 4.

29 - 4 : Continuity should exist.

OK or NG

- OK >> GO TO 4.
 NG >> Repair harness or connector.

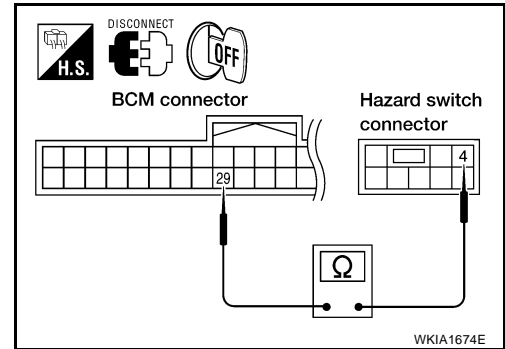


4. CHECK GROUND

Check continuity between hazard switch harness connector M55 terminal 6 and ground.

6 - Ground : Continuity should exist.

OK or NG

- OK >> GO TO 5.
 NG >> Repair harness or connector.

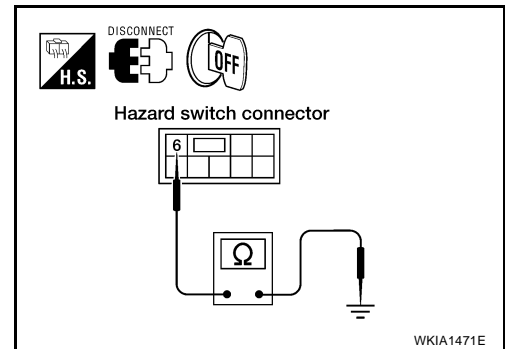


5. CHECK HAZARD SWITCH

1. Disconnect hazard switch connector.
2. Check continuity of hazard switch.

Hazard switch		Condition	Continuity
Terminal			
4	6	Hazard switch is ON	Yes
		Hazard switch is OFF	No

OK or NG

- OK >> Replace BCM if hazard warning lamps do not work after setting the connector again. Refer to [BCS-20, "Removal and Installation"](#) .
 NG >> Replace hazard switch. Refer to [LT-98, "Removal and Installation"](#) .

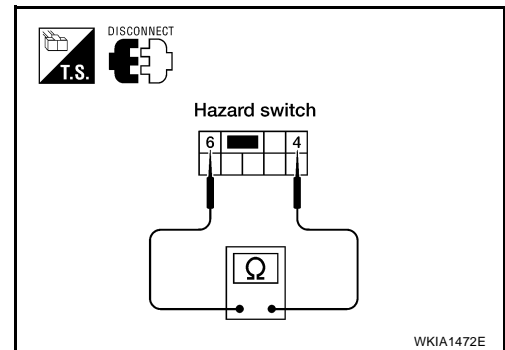

Turn Signal Indicator Lamp Does Not Operate

EKS00AUN

1. CHECK CAN COMMUNICATION SYSTEM

Check CAN communication. Refer to [LAN-25, "CAN COMMUNICATION"](#) .

OK or NG

- OK >> Replace combination meter. Refer to [IP-13, "COMBINATION METER"](#) .
 NG >> Repair as necessary.

TURN SIGNAL AND HAZARD WARNING LAMPS

Bulb Replacement

FRONT TURN SIGNAL LAMP

EKS00AU0

Refer to [LT-31, "FRONT TURN SIGNAL/PARKING LAMP"](#) .

Rear Turn Signal Lamp

EKS00AUP

Refer to [LT-124, "Bulb Replacement"](#) .

Removal and Installation

FRONT TURN SIGNAL LAMP

EKS00AUQ

Refer to [LT-31, "Removal and Installation"](#) .

Rear Turn Signal Lamp

EKS00AUR

Refer to [LT-124, "Removal and Installation"](#) .

LIGHTING AND TURN SIGNAL SWITCH

LIGHTING AND TURN SIGNAL SWITCH


PF25540

Removal and Installation

EKS00AUS

REMOVAL

1. Remove steering column cover.
2. While pressing tabs, pull lighting and turn signal switch toward driver door and disconnect from the base.

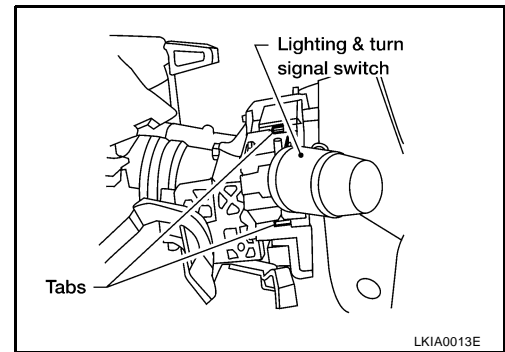

INSTALLATION

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
LT
L
M

LT

HAZARD SWITCH

HAZARD SWITCH


PF2:25290

Removal and Installation

EKS00AUT

REMOVAL

1. Remove cluster lid C. Refer to [IP-11, "CLUSTER LID C"](#).
2. While pressing the tab, push out the hazard switch.

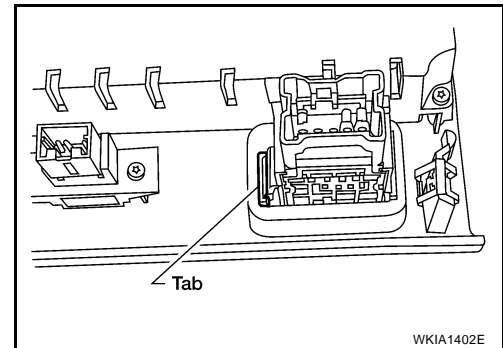

INSTALLATION

Installation is in the reverse order of removal.

COMBINATION SWITCH

PF25567



EKS00AUU

COMBINATION SWITCH

Wiring Diagram — COMBSW —

LT-COMBSW-01

▬ : DATA LINE

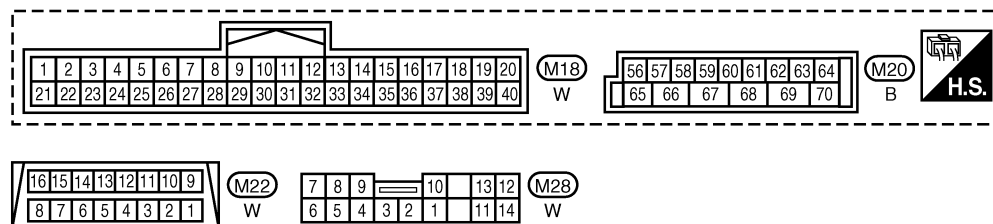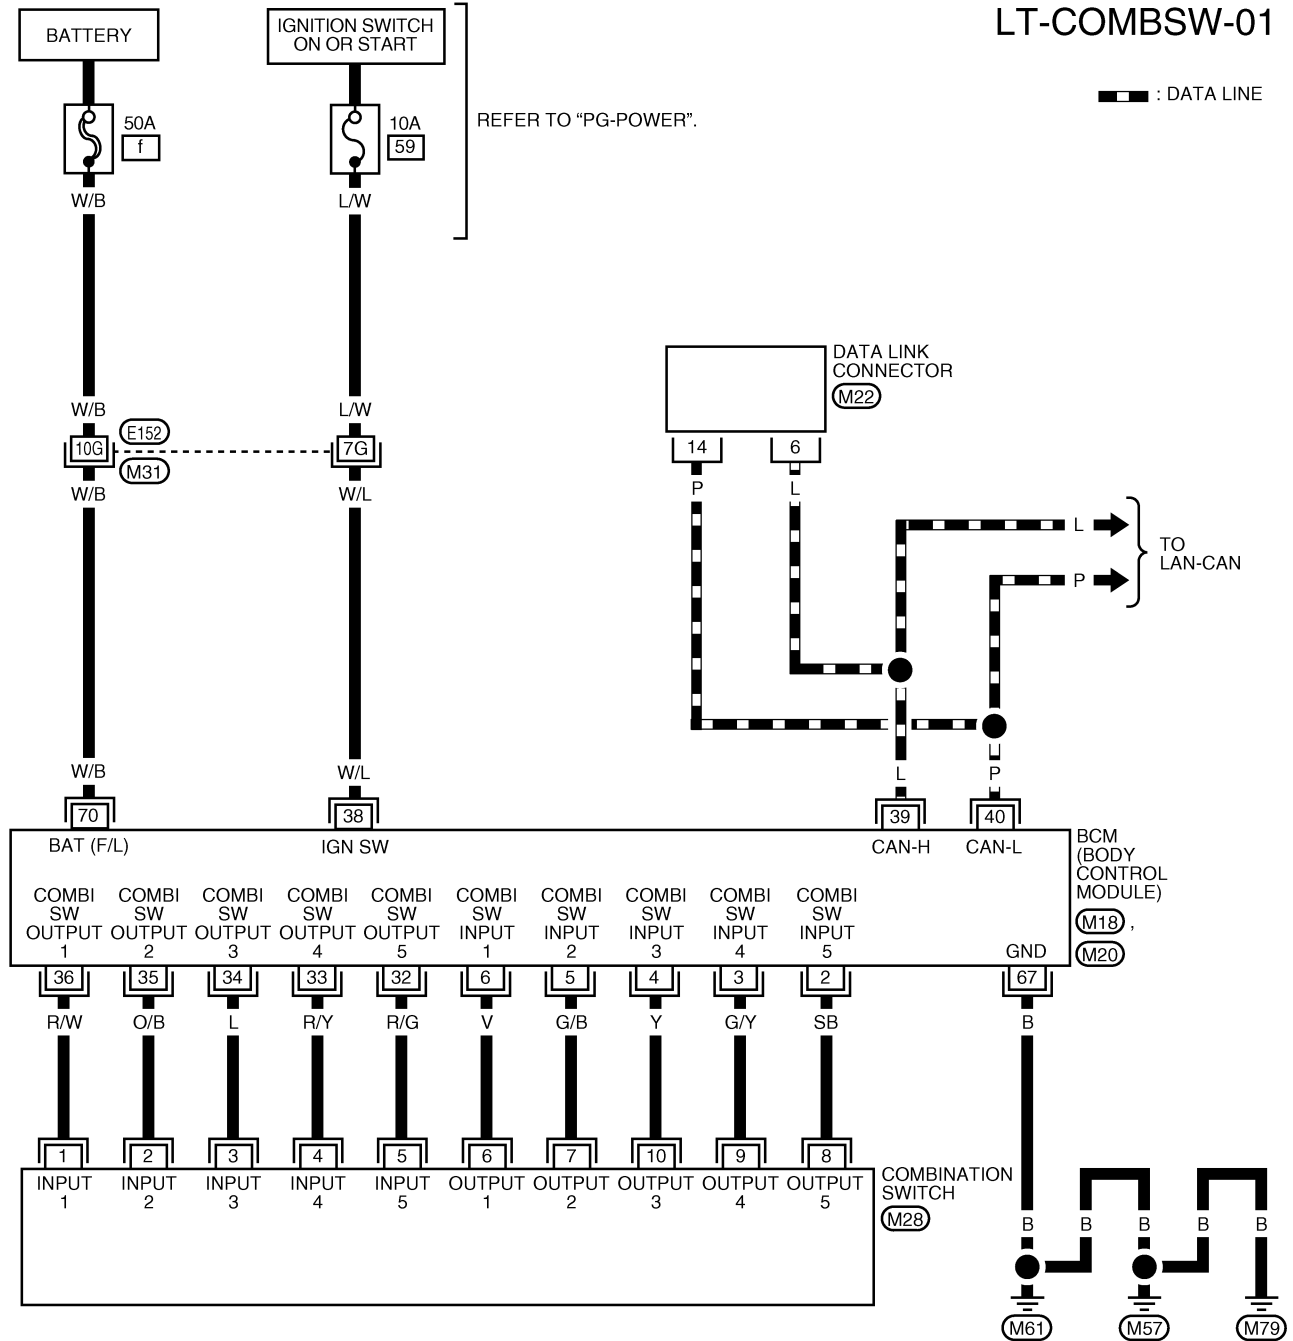

REFER TO THE FOLLOWING.
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA3472E

COMBINATION SWITCH

Combination Switch Reading Function

EKS00AUV

For details, refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#).

CONSULT-II Function (BCM)

EKS00AUW

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


BCM diagnostic test item	Diagnostic mode	Description
Inspection by part	WORK SUPPORT	Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed.
	DATA MONITOR	Displays BCM input/output data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
	SELF-DIAG RESULTS	Displays BCM self-diagnosis results.
	CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
	ECU PART NUMBER	BCM part number can be read.
	CONFIGURATION	Performs BCM configuration read/write functions.

CONSULT-II OPERATION


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.


1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn ignition switch ON.

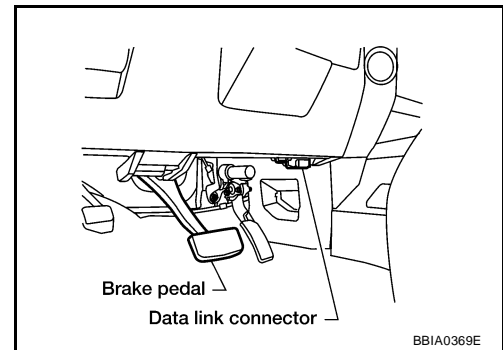

2. Touch "START (NISSAN BASED VHCL)".

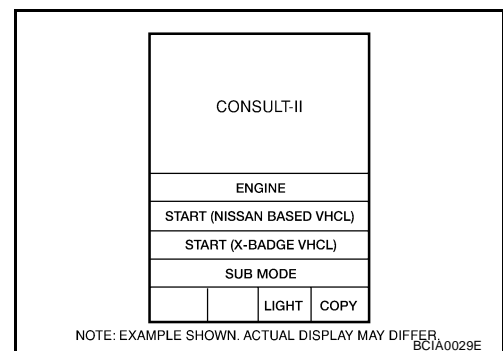


3. Touch "BCM" on "SELECT SYSTEM" screen.
If "BCM" is not indicated, go to [GI-39, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

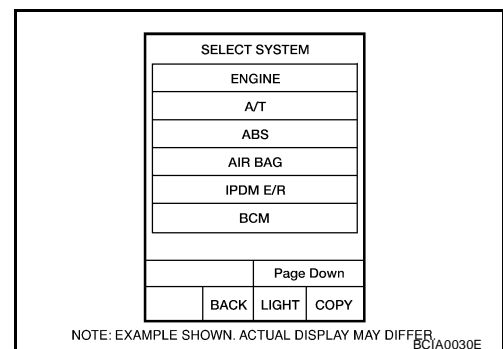

COMBINATION SWITCH

4. Touch "COMB SW" on "SELECT TEST ITEM" screen.

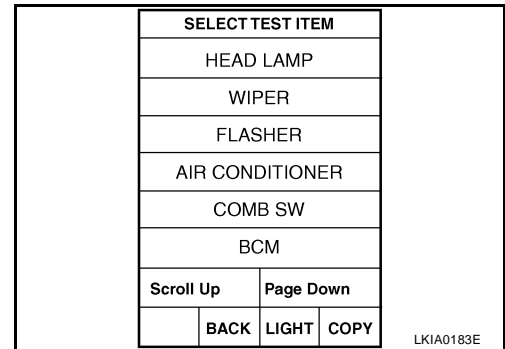

DATA MONITOR

Operation Procedure

1. Touch "COMB SW" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on "SELECT MONITOR ITEM" screen.

ALL SIGNALS	Monitors all the signals.
SELECTION FROM MENU	Selects and monitors individual signal.

4. Touch "START".
5. When "SELECTION FROM MENU" is selected, touch items to be monitored. When "ALL SIGNALS" is selected, all the signals will be monitored.
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

Display Item List

Monitor item name "OPERATION OR UNIT"	Contents
TURN SIGNAL R "ON/OFF"	Displays "Turn Right (ON)/Other (OFF)" status, determined from lighting switch signal.
TURN SIGNAL L "ON/OFF"	Displays "Turn Left (ON)/Other (OFF)" status, determined from lighting switch signal.
HI BEAM SW "ON/OFF"	Displays status (high beam switch: ON/Others: OFF) of high beam switch judged from lighting switch signal.
HEAD LAMP SW 1 "ON/OFF"	Displays "Headlamp switch 1 (ON)/Other (OFF)" status, determined from lighting switch signal.
HEAD LAMP SW 2 "ON/OFF"	Displays status (headlamp switch 2: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.
LIGHT SW 1ST "ON/OFF"	Displays status (lighting switch 1st position: ON/Others: OFF) of lighting switch judged from lighting switch signal.
PASSING SW "ON/OFF"	Displays status (flash-to-pass switch: ON/Others: OFF) of flash-to-pass switch judged from lighting switch signal.
AUTO LIGHT SW "ON/OFF"	Displays "Auto light switch (ON)/Other (OFF)" status, determined from lighting switch signal.
FR FOG SW "ON/OFF"	Displays "Front fog lamp switch (ON)/Other (OFF)" status, determined from lighting switch signal.
FR WIPER HI "ON/OFF"	Displays "Front Wiper HI (ON)/Other (OFF)" status, determined from wiper switch signal.
FR WIPER LOW "ON/OFF"	Displays "Front Wiper LOW (ON)/Other (OFF)" status, determined from wiper switch signal.
FR WIPER INT "ON/OFF"	Displays "Front Wiper INT (ON)/Other (OFF)" status, determined from wiper switch signal.
FR WASHER SW "ON/OFF"	Displays "Front Washer Switch (ON)/Other (OFF)" status, determined from wiper switch signal.
INT VOLUME [1 - 7]	Displays intermittent operation knob setting (1 - 7), determined from wiper switch signal.
RR WIPER ON "ON/OFF"	Displays "Rear Wiper (ON)/(OFF)" status, determined from wiper switch signal.
RR WIPER INT "ON/OFF"	Displays "Rear Wiper INT (ON)/(OFF)" status, determined from wiper switch signal.
RR WASHER SW "ON/OFF"	Displays "Rear Washer (ON)/(OFF)" status, determined from wiper switch signal.

COMBINATION SWITCH

EKS00AUX

Combination Switch Inspection

1. SYSTEM CHECK

Referring to table below, check to which system the malfunctioning switch belongs.

System 1	System 2	System 3	System 4	System 5
—	FR WASHER	FR WIPER LO	TURN LH	TURN RH
FR WIPER HI	—	FR WIPER INT	PASSING	HEAD LAMP1
INT VOLUME 1	RR WASHER	—	HEAD LAMP2	HI BEAM
RR WIPER INT	INT VOLUME 3	AUTO LIGHT	—	TAIL LAMP
INT VOLUME 2	RR WIPER ON	—	FR FOG	—

>> GO TO 2.

2. SYSTEM CHECK

 With CONSULT-II

CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.

1. Connect CONSULT-II, and select "COMB SW" on "SELECT TEST ITEM" screen.
2. Select "DATA MONITOR".
3. Select "START", and confirm that other switches in malfunctioning system operate normally.

Example: When auto light switch is malfunctioning, confirm that "FRONT WIPER LOW" and "FRONT WIPER INT" in System 3, to which the auto light switch belongs, turn ON-OFF normally.

DATA MONITOR			
MONITOR			
TURN SIGNAL R		OFF	
TURN SIGNAL L		OFF	
HIBEAM SW		OFF	
HEAD LAMP SW1		OFF	
HEAD LAMP SW2		OFF	
LIGHT SW 1ST		OFF	
PASSING SW		OFF	
AUTO LIGHT SW		OFF	
FR FOG SW		OFF	
		Page Down	
		RECORD	
MODE	BACK	LIGHT	COPY

SKIA7075E

 Without CONSULT-II

Operate combination switch, and confirm that other switches in malfunctioning system operate normally.

Example: When auto light switch is malfunctioning, confirm that "FRONT WIPER LOW" and "FRONT WIPER INT" in System 3, to which the auto light switch belongs, operate normally.

Check results

Other switches in malfunctioning system operate normally.>> Replace lighting switch or wiper switch.


Other switches in malfunctioning system do not operate normally.>> GO TO 3.

COMBINATION SWITCH

3. HARNESS INSPECTION

1. Turn ignition switch OFF.
2. Disconnect BCM and combination switch connectors.
3. Check for continuity between BCM harness connector of the suspect system and the corresponding combination switch connector terminals.

Suspect system	BCM		Combination switch		Continuity	
	Connector	Terminal	Connector	Terminal		
1	M18	Input 1	6	M28	6	Yes
		Output 1	36		1	
2		Input 2	5		7	
		Output 2	35		2	
3		Input 3	4		10	
		Output 3	34		3	
4		Input 4	3		9	
		Output 4	33		4	
5		Input 5	2		8	
		Output 5	32		5	

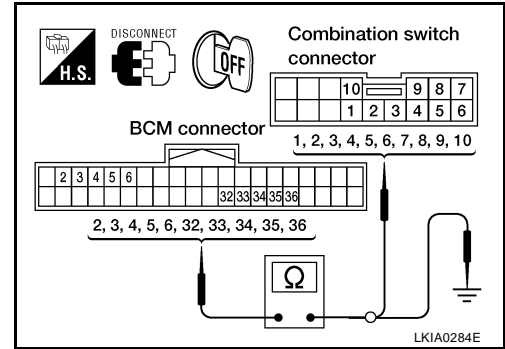

4. Check for continuity between each terminal of BCM harness connector in suspect malfunctioning system and ground.

Suspect system	BCM		Continuity		
	Connector	Terminal			
1	M18	Input 1	6	Ground	No
		Output 1	36		
2		Input 2	5		
		Output 2	35		
3		Input 3	4		
		Output 3	34		
4		Input 4	3		
		Output 4	33		
5		Input 5	2		
		Output 5	32		

OK or NG

OK >> GO TO 4.

NG >> Check harness between BCM and combination switch for open or short circuit.

COMBINATION SWITCH


4. BCM OUTPUT TERMINAL INSPECTION

1. Turn lighting switch and wiper switch to OFF.
2. Set wiper dial to position 4.
3. Connect BCM and combination switch connectors.
4. Turn ignition switch ON, and check combination switch input (BCM output) terminal voltage waveform of suspect malfunctioning system.

Suspect system	Combination switch		
	(+)		
	Connector	Terminal	
1	M28	Input 1	1
2		Input 2	2
3		Input 3	3
4		Input 4	4
5		Input 5	5

OK or NG

- OK >> Open circuit in combination switch, GO TO 5.
 NG >> Replace BCM. Refer to [BCS-20, "Removal and Installation"](#) .

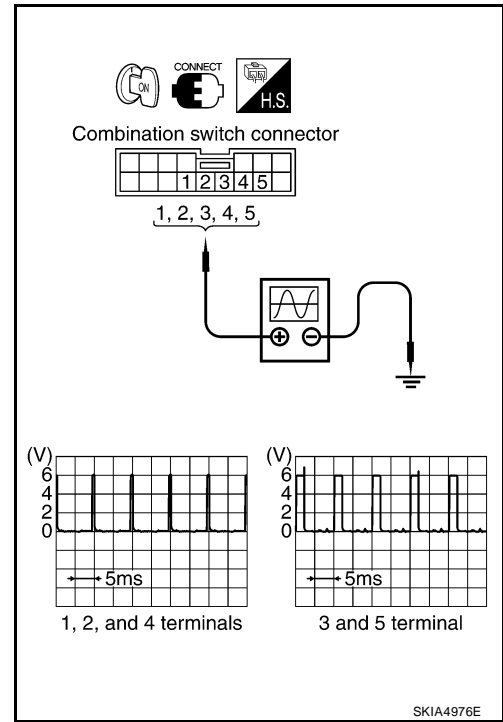

5. COMBINATION SWITCH INSPECTION

Referring to table below, perform combination switch inspection.

Procedure									
1	2		3	4		5	6		7
Replace lighting switch.	Confirm check results.	OK	INSPECTION END	Confirm check results.	OK	INSPECTION END	Confirm check results.	OK	INSPECTION END
		NG	Replace wiper switch.		NG	Replace switch base.		NG	Confirm symptom again.

>> Inspection End.

Removal and Installation COMBINATION SWITCH

Refer to [PS-13, "Disassembly and Assembly"](#) .

Switch Circuit Inspection COMBINATION SWITCH

Refer to [LT-102, "Combination Switch Inspection"](#) .

EKS00AUZ

EKS00AUZ

STOP LAMP

STOP LAMP

PFP:26550

System Description

EKS00AV0

Power is supplied at all times

- through 10A fuse [No. 20, located in fuse block (J/B)]
- to stop lamp switch terminal 1 and
- to stop lamp relay terminal 1.

When the brake pedal is pressed, the stop lamp switch is closed and power is supplied

- through stop lamp switch terminal 2
- to stop lamp relay terminal 3, and
- through stop lamp relay terminal 4
- to rear combination lamp LH and RH terminal 1, and
- to high-mounted stop lamp terminal 1.

Ground is supplied

- to rear combination lamp LH terminal 3, and
- to high-mounted stop lamp terminal 2
- through grounds B7 and B19, and
- to rear combination lamp RH terminal 3
- through grounds B117 and B132.

With power and ground supplied, the stop lamps illuminate.

A

B

C

D

E

F

G

H

I

J

LT

L

M



STOP LAMP

Wiring Diagram — STOP/L —

EKS00AV1

LT-STOP/L-01

⬡TT⬡ : TRAILER TOW 7 PIN

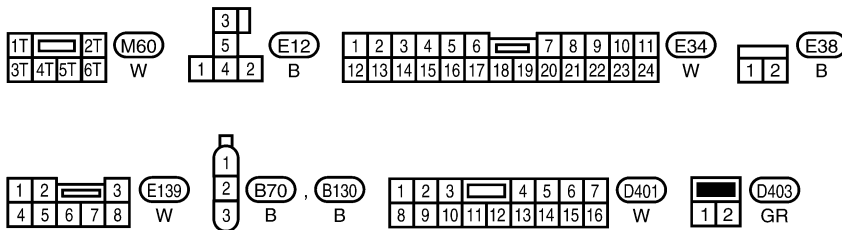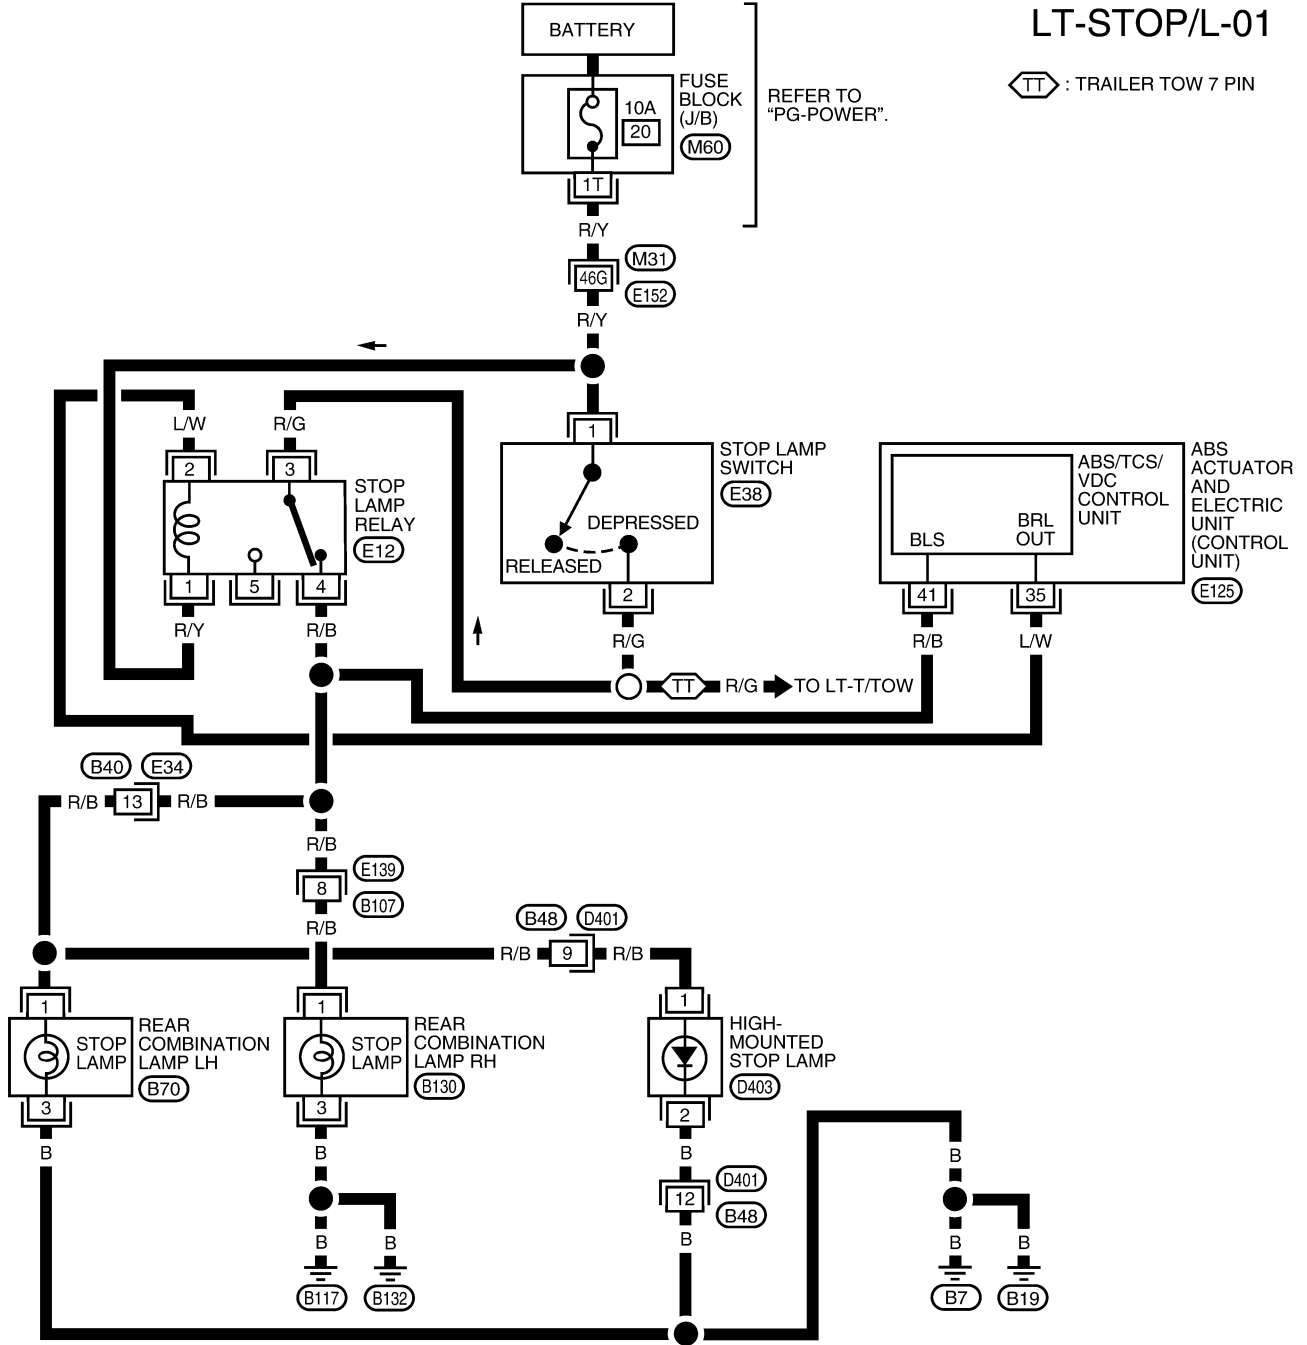

REFER TO THE FOLLOWING.

- ⬡M31⬡ - SUPER MULTIPLE JUNCTION (SMJ)
- ⬡E125⬡ - ELECTRICAL UNITS

WKWA3473E

STOP LAMP

Bulb Replacement HIGH-MOUNTED STOP LAMP

EKS00AV2

NOTE:

High-mounted stop lamp bulbs are not serviceable.

Stop Lamp

EKS00AV3


Refer to [LT-124, "Bulb Replacement"](#) .

Removal and Installation HIGH-MOUNTED STOP LAMP

EKS00GAW

Removal

1. Remove back door upper finisher. Refer to [EI-39, "Removal and Installation"](#) .
2. Remove 2 nuts and remove high-mounted stop lamp.

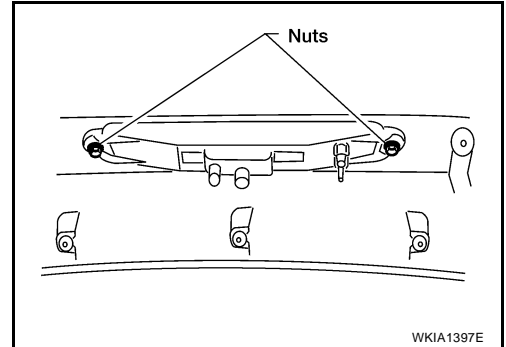

Installation

Installation is in the reverse order of removal.

Stop Lamp

EKS00GAX

Refer to [LT-124, "Removal and Installation"](#) .

A
B
C
D
E
F
G
H
I
J
L
M

LT



BACK-UP LAMP

PF2:26550

BACK-UP LAMP

Wiring Diagram — BACK/L —

EKS00AV4

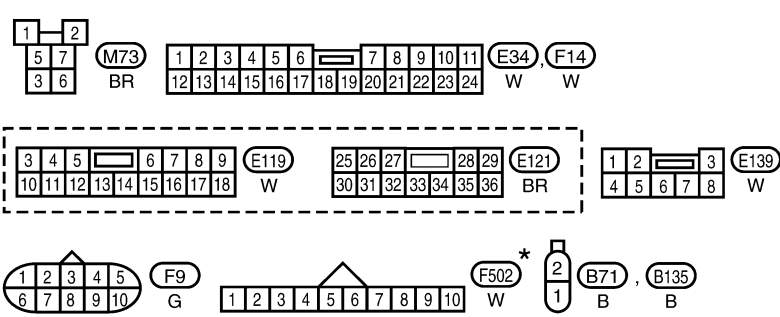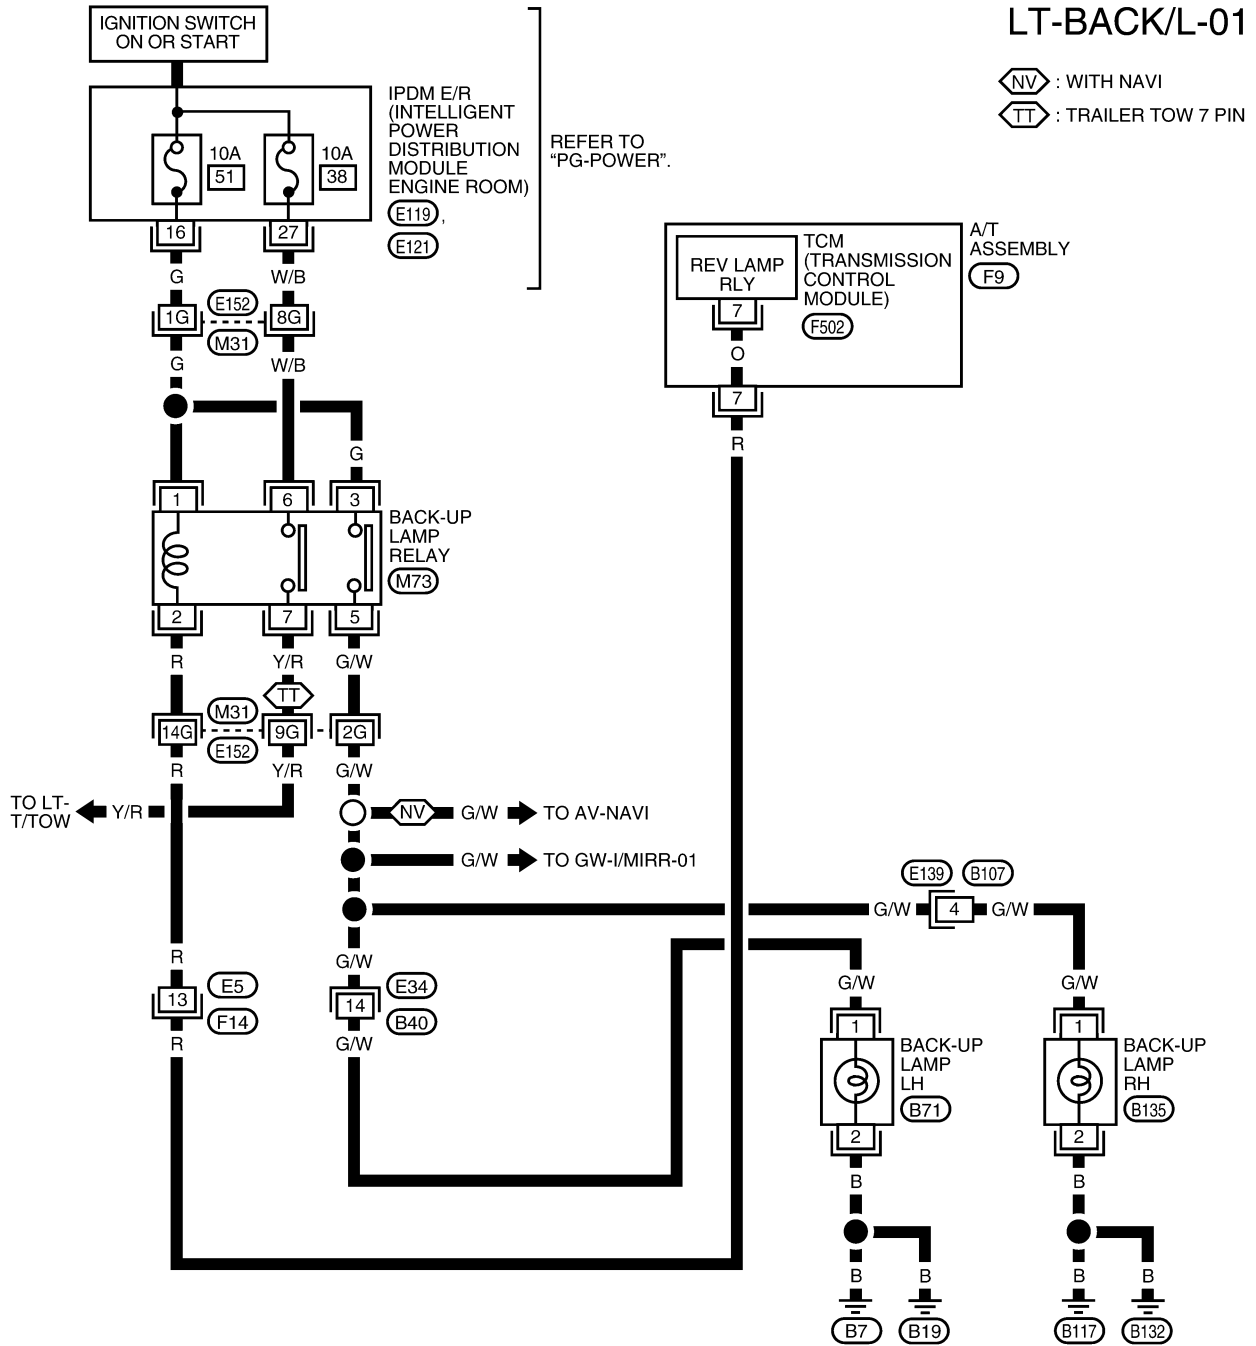

REFER TO THE FOLLOWING.
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)

*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

WKWA3474E

BACK-UP LAMP

Bulb Replacement BACK-UP LAMP

EKS00AV5

A

Refer to [LT-124, "Bulb Replacement"](#) .

Removal and Installation BACK-UP LAMP

EKS00AV6

B

Refer to [LT-124, "Removal and Installation"](#) .

C

D

E

F

G

H

I

J

LT

L

M


PARKING, LICENSE PLATE AND TAIL LAMPS

PARKING, LICENSE PLATE AND TAIL LAMPS

PF2:26550

Component Parts and Harness Connector Location

EKS00AV7

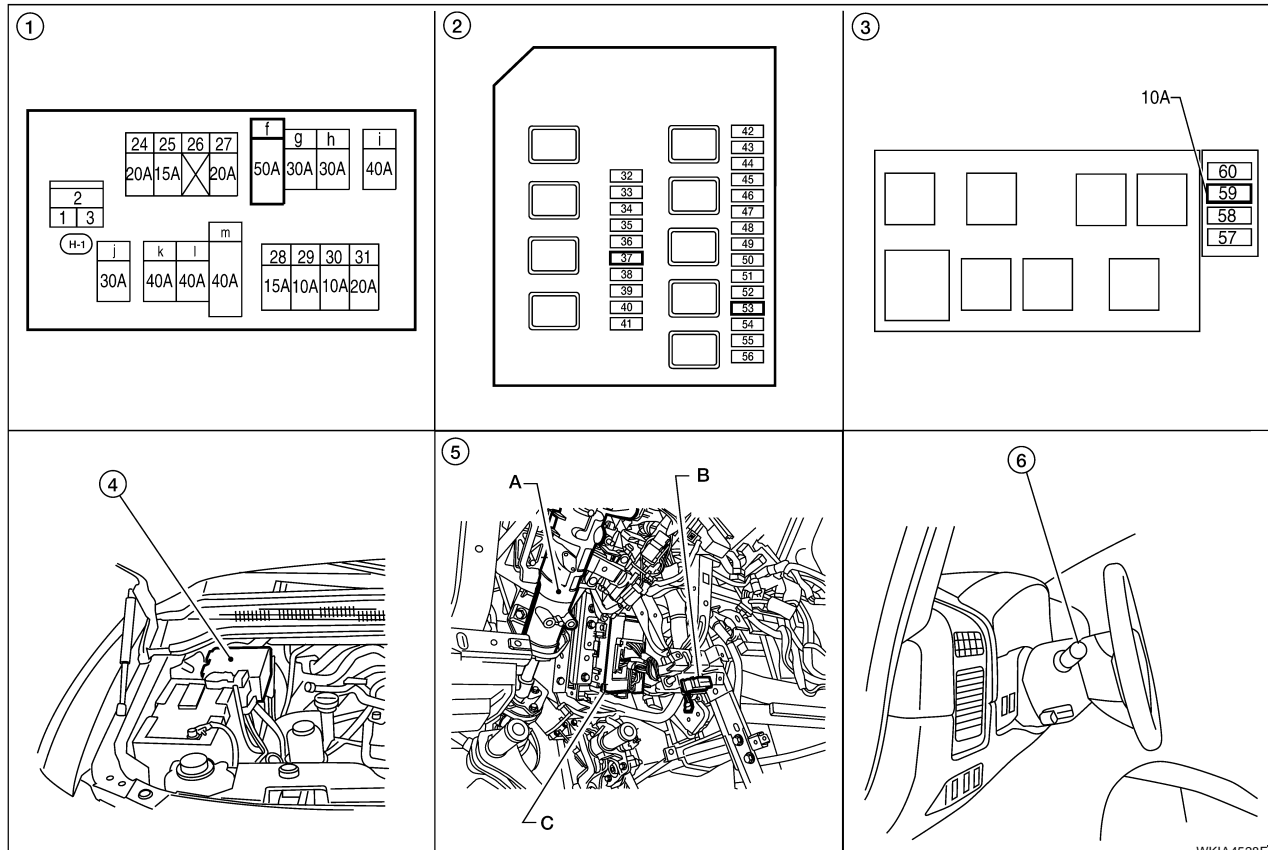

1. Fuse and fusible link box
2. IPDM E/R fuse layout
3. Fuse and relay box
4. IPDM E/R E118, E119, E120, E121, E122, E123, E124
5. A. Steering column
B. Data link connector M22
C. BCM M18, M19, M20
(View with instrument lower panel LH removed)
6. Combination switch (lighting switch) M28

System Description

EKS00AV8

Control of the parking, license plate, and tail lamp operation is dependent upon the position of the lighting switch (combination switch). When the lighting switch is placed in the 1ST position, the BCM (body control module) receives input signal requesting the parking, license plate, side marker and tail lamps to illuminate. This input signal is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The CPU (central processing unit) of the IPDM E/R controls the tail lamp relay coil. This relay, when energized, directs power to the parking, license plate and tail lamps, which then illuminate.

Power is supplied at all times

- to ignition relay, located in the IPDM E/R, and
- to tail lamp relay, located in the IPDM E/R, and
- through 20A fuse (No. 53, located in the IPDM E/R)
- to CPU of the IPDM E/R, and
- through 50A fusible link (letter f, located in the fuse and fusible link box)
- to BCM terminal 70.

With the ignition switch in the ON or START position, power is supplied

- to ignition relay, located in the IPDM E/R, and
- through 10A fuse (No. 59, located in the fuse and relay box)
- to BCM terminal 38.

PARKING, LICENSE PLATE AND TAIL LAMPS

Ground is supplied

- to BCM terminal 67
- through grounds M57, M61 and M79, and
- to IPDM E/R terminals 38 and 59
- through grounds E9, E15 and E24.

OPERATION BY LIGHTING SWITCH

With the lighting switch in the 1ST or 2ND position (or if the auto light system is activated), the BCM receives input signal requesting the parking, license plate, side marker and tail lamps to illuminate. This input signal is communicated to the IPDM E/R across the CAN communication lines. The CPU of the IPDM E/R controls the tail lamp relay coil, which when energized, directs power

- through 10A fuse (No. 37, located in the IPDM E/R)
- through IPDM E/R terminal 57
- to front combination lamp LH and RH terminal 6
- to license plate lamps terminal 1 and
- to rear combination lamp LH and RH terminal 2.

Ground is supplied

- to front combination lamp LH and RH terminal 4, and
- to license plate lamps terminal 2
- through grounds E9, E15 and E24, and
- to rear combination lamp LH terminal 3
- through grounds B7 and B19, and
- to rear combination lamp RH terminal 3
- through grounds B117 and B132.

With power and ground supplied, the parking, license plate and tail lamps illuminate.

COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#) .

EXTERIOR LAMP BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 1ST (or 2ND) position, and the ignition switch is turned from ON or ACC to OFF, the battery saver control feature is activated.

Under this condition, the parking, license and tail lamps remain illuminated for 5 minutes, then the parking, license plate and tail lamps are turned off.

Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-II.

CAN Communication System Description

Refer to [LAN-25, "CAN COMMUNICATION"](#) .

A

B

C

D

E

F

G

H

I

J

LT

L


EKS00AV9

M

PARKING, LICENSE PLATE AND TAIL LAMPS

Schematic

EKS00AVA

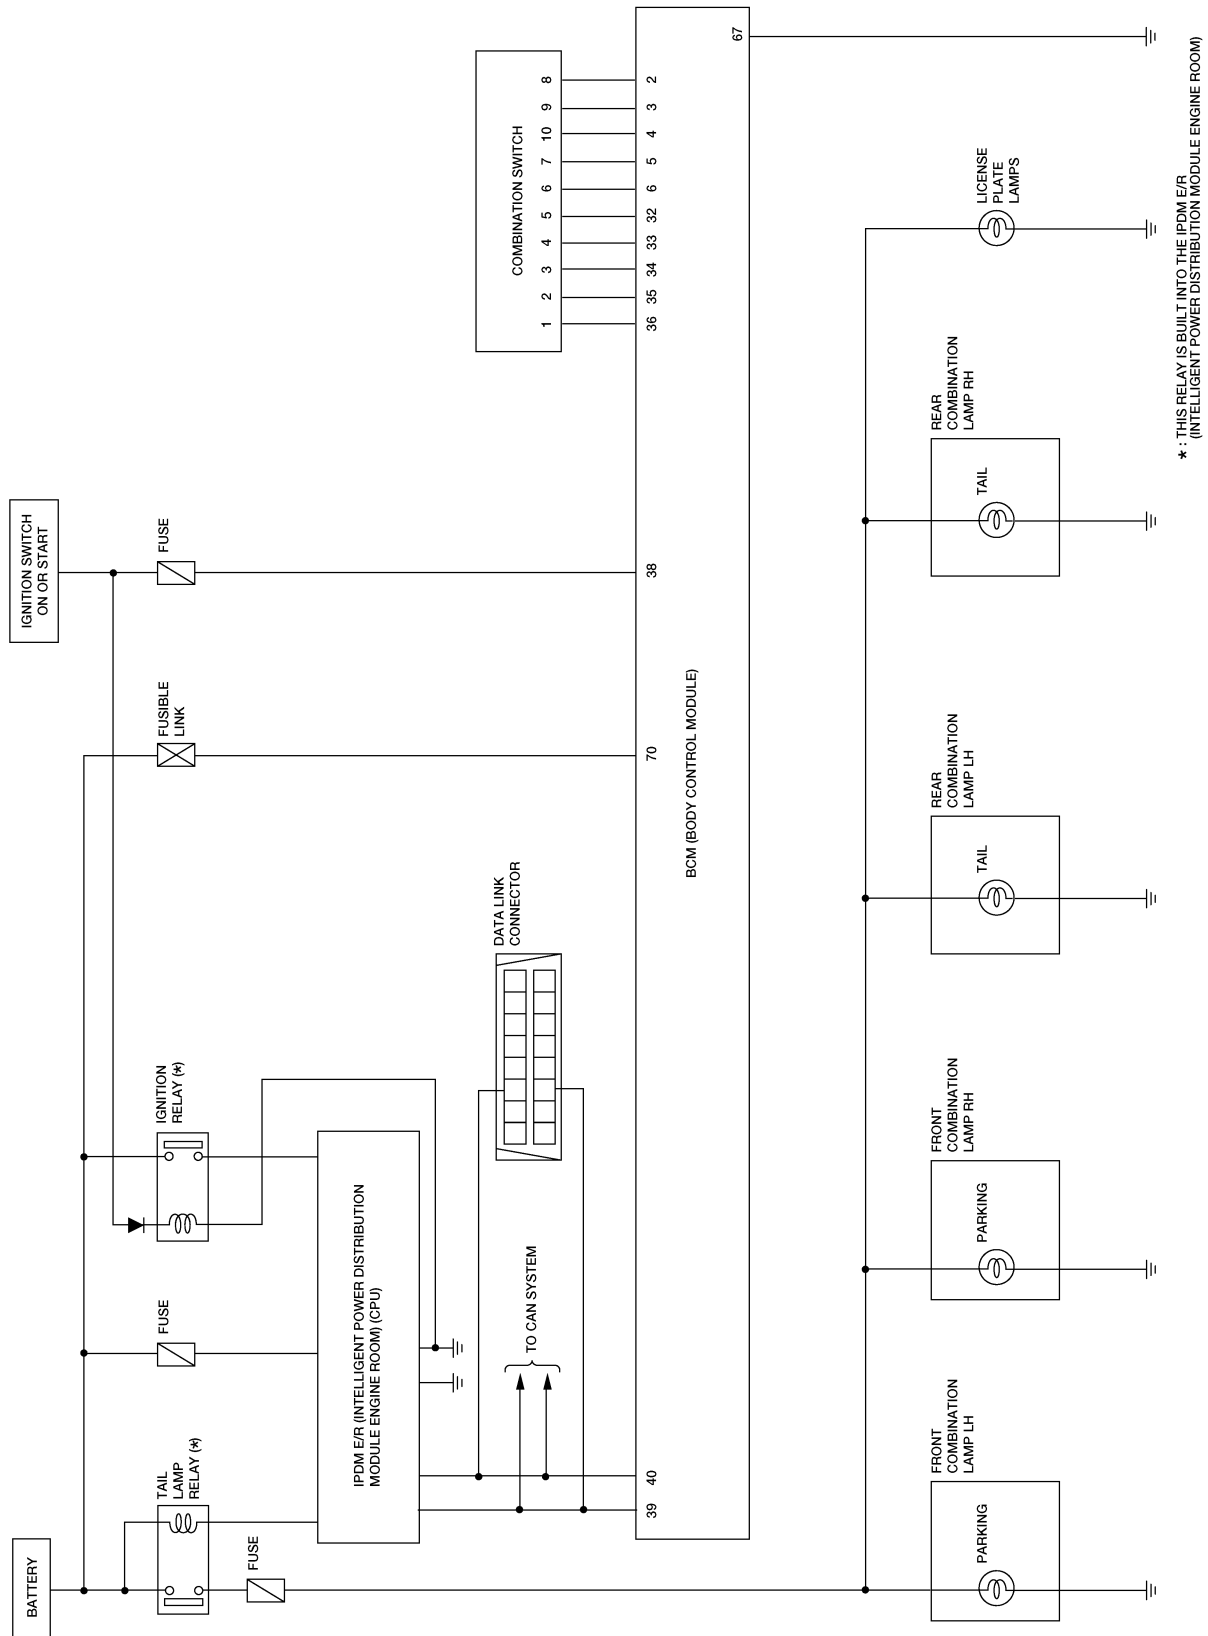

WKWA3475E



PARKING, LICENSE PLATE AND TAIL LAMPS

Wiring Diagram — TAIL/L —

EKS00AVB

LT-TAIL/L-01

— : DATA LINE

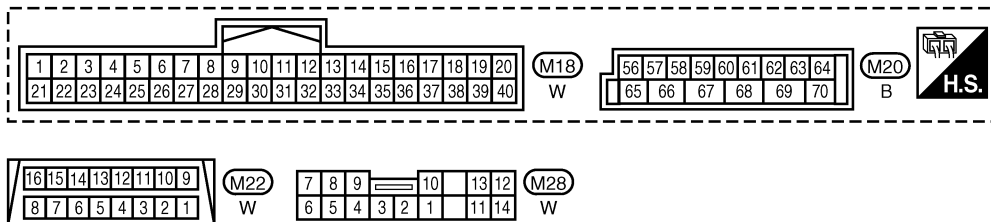
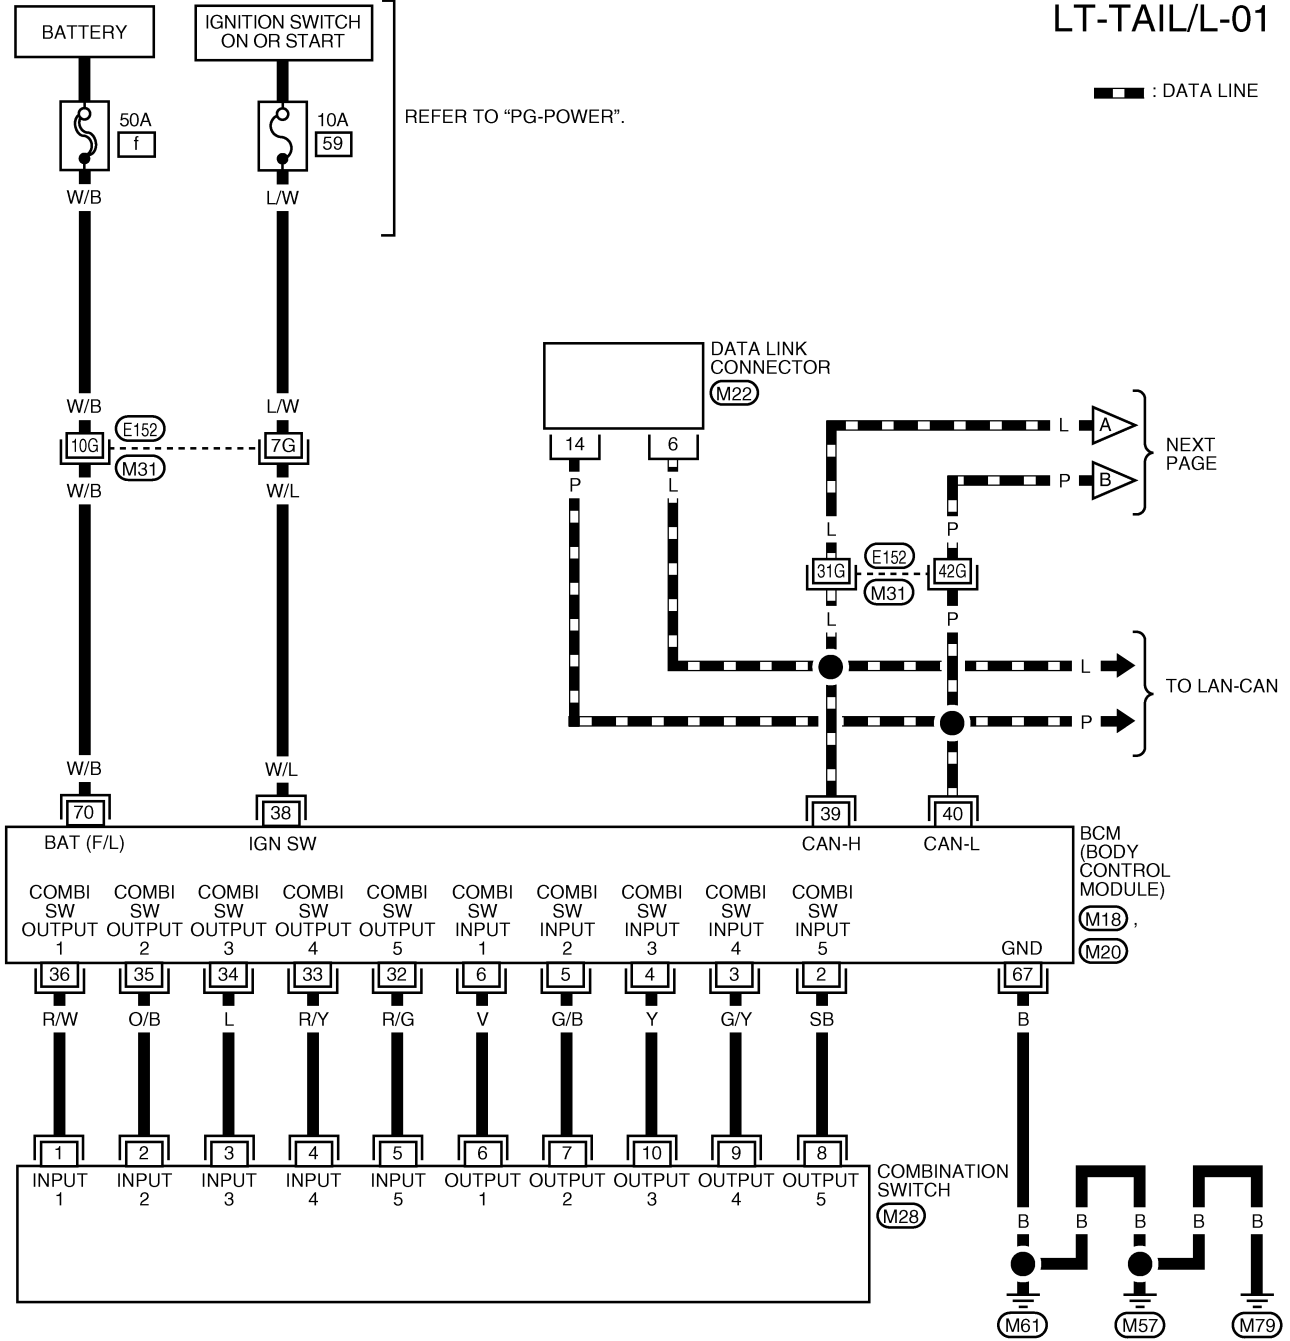


REFER TO THE FOLLOWING.
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA3476E

PARKING, LICENSE PLATE AND TAIL LAMPS

 LT-TAIL/L-03

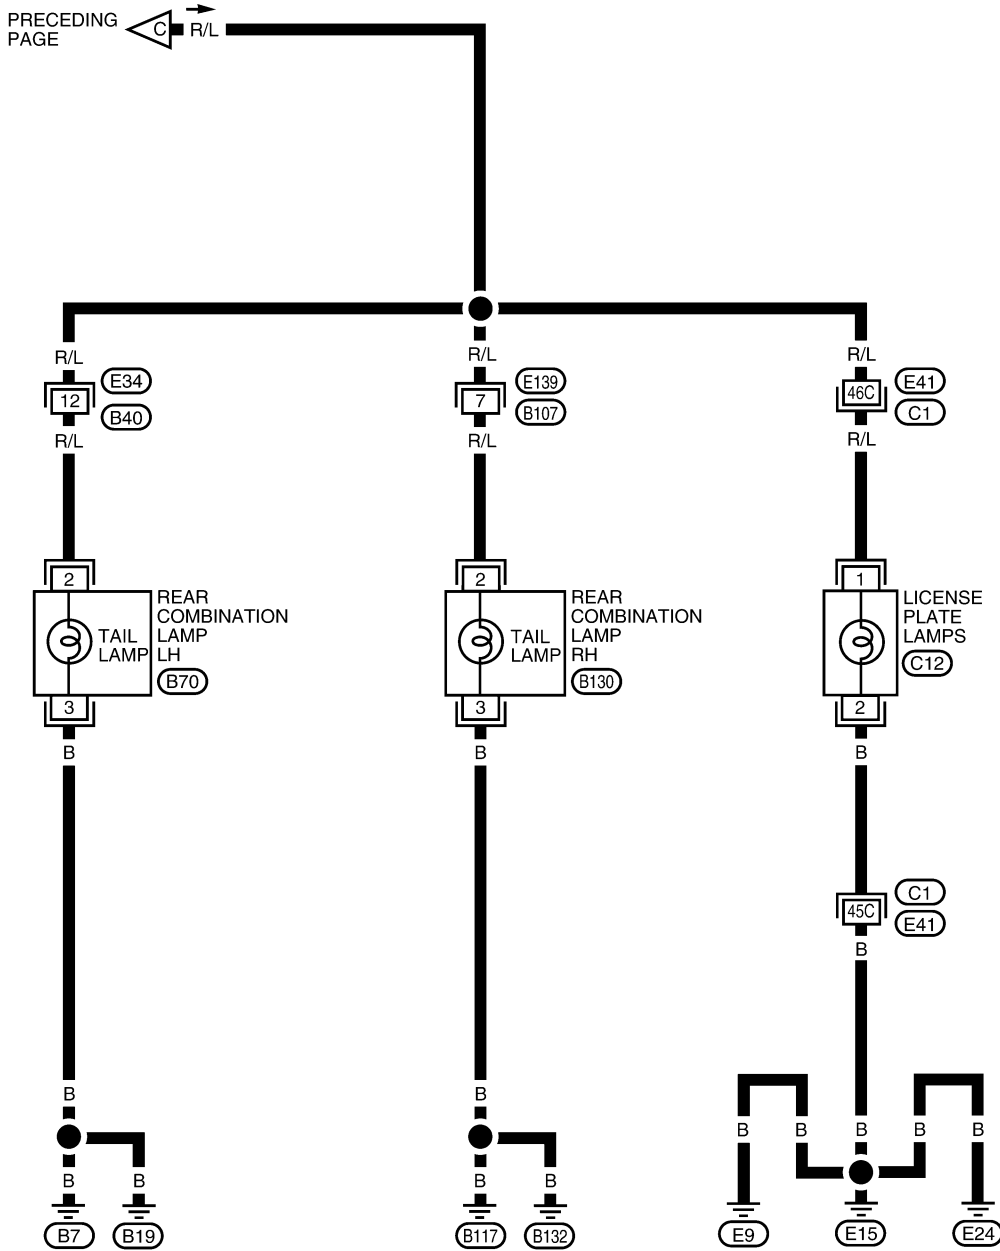



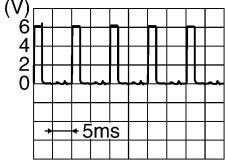
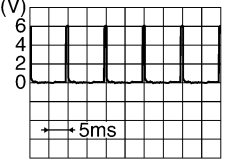
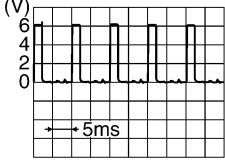
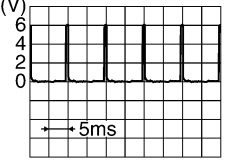
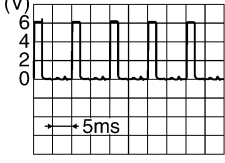
REFER TO THE FOLLOWING.
 (C1) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA3477E

PARKING, LICENSE PLATE AND TAIL LAMPS

Terminals and Reference Values for BCM

EKS00AVC

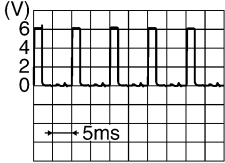Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)
			Ignition switch	Operation or condition	
2	SB	Combination switch input 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>
3	G/Y	Combination switch input 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>
4	Y	Combination switch input 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>
5	G/B	Combination switch input 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>
6	V	Combination switch input 1			
32	R/G	Combination switch output 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>
33	R/Y	Combination switch output 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>
34	L	Combination switch output 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>

PARKING, LICENSE PLATE AND TAIL LAMPS

Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)
			Ignition switch	Operation or condition	
35	O/B	Combination switch output 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	
36	R/W	Combination switch output 1			
38	W/L	Ignition switch (ON)	ON	—	Battery voltage
39	L	CAN-H	—	—	—
40	P	CAN-L	—	—	—
67	B	Ground	ON	—	0V
70	W/B	Battery power supply (fusible link)	OFF	—	Battery voltage

Terminals and Reference Values for IPDM E/R

EKS00AVD

Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)	
			Ignition switch	Operation or condition		
38	B	Ground	ON	—	0V	
39	L	CAN-H	—	—	—	
40	P	CAN-L	—	—	—	
57	R/L	Parking, license, and tail lamp	ON	Lighting switch 1ST position	OFF	0V
					ON	Battery voltage
59	B	Ground	ON	—	0V	

How to Proceed With Trouble Diagnosis

EKS00AVE

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-110, "System Description"](#) .
3. Carry out the Preliminary Check. Refer to [LT-118, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction.
5. Do the parking, license and tail lamps operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

LT

PARKING, LICENSE PLATE AND TAIL LAMPS

EKS00AVF

Preliminary Check CHECK POWER SUPPLY AND GROUND CIRCUIT

1. CHECK FUSES OR FUSIBLE LINK

Check for blown fuses or fusible link.

Unit	Power source	Fuse and fusible link No.
BCM	Battery	f
	Ignition switch ON or START position	59
IPDM E/R	Battery	53
	Battery (Tail lamps ON)	37

Refer to [LT-113, "Wiring Diagram — TAIL/L —"](#) .

OK or NG

OK >> GO TO 2.

NG >> If fuse or fusible link is blown, be sure to eliminate cause of malfunction before installing new fuse or fusible link. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#) .

2. CHECK POWER SUPPLY CIRCUIT


1. Disconnect BCM connectors.
2. Check voltage between BCM harness connector and ground.

BCM		(-)	Ignition switch position		
(+)			OFF	ACC	ON
Connector	Terminal				
M18	38	Ground	0V	0V	Battery voltage
M20	70		Battery voltage	Battery voltage	Battery voltage

OK or NG

OK >> GO TO 3.

NG >> Check harness for open between BCM and fuse or fusible link.

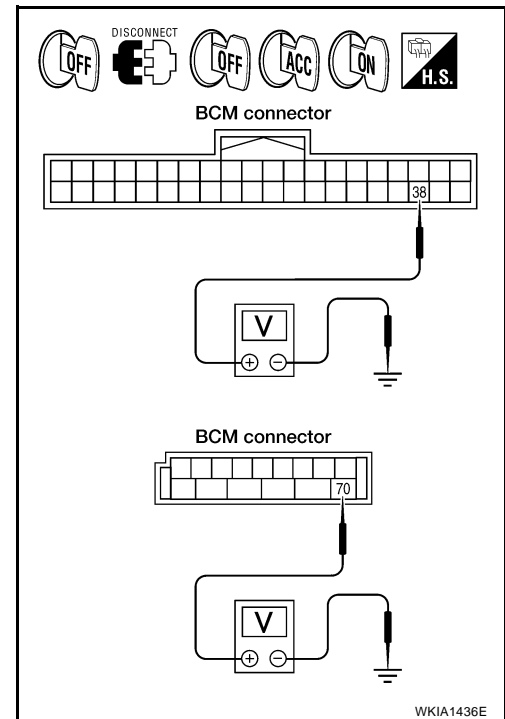

3. CHECK GROUND CIRCUIT


Check continuity between BCM harness connector and ground.

BCM		Continuity
Connector	Terminal	
M20	67	Ground Yes

OK or NG

OK >> Inspection End.

NG >> Check ground circuit harness.

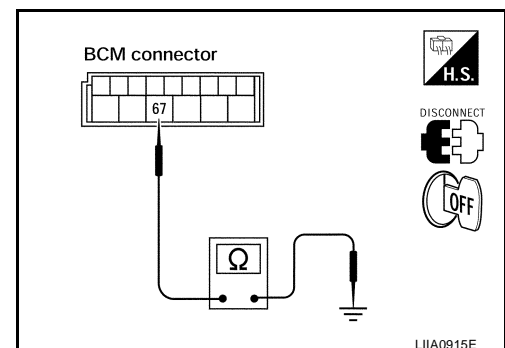

PARKING, LICENSE PLATE AND TAIL LAMPS

CONSULT-II Functions

EKS00AVG

Refer to [LT-17, "CONSULT-II Function \(BCM\)"](#) in HEADLAMP (FOR USA).
 Refer to [LT-20, "CONSULT-II Function \(IPDM E/R\)"](#) in HEADLAMP (FOR USA).

Parking, License Plate and/or Tail Lamps Do Not Illuminate

EKS00AVH

1. CHECK COMBINATION SWITCH INPUT SIGNAL

☐ With CONSULT-II

Select "BCM" on CONSULT-II. With "HEAD LAMP" data monitor, make sure "LIGHT SW 1ST" turns ON-OFF linked with operation of lighting switch.

**When lighting switch is in : LIGHT SW 1ST ON
1ST position**

DATA MONITOR	
MONITOR	
LIGHT SW 1ST	ON

SKIA5956E

☒ Without CONSULT-II

Refer to [LT-102, "Combination Switch Inspection"](#).

OK or NG

OK >> GO TO 2.

NG >> Check lighting switch. Refer to [LT-102, "Combination Switch Inspection"](#).

2. ACTIVE TEST

☐ With CONSULT-II

1. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
2. Select "EXTERNAL LAMPS" on "SELECT TEST ITEM" screen.
3. Touch "TAIL" on "ACTIVE TEST" screen.
4. Make sure parking, license plate and tail lamp operation.

Parking, license plate and tail lamp should operate

ACTIVE TEST			
EXTERNAL LAMPS		OFF	
		TAIL	
LO		HI	
FOG			
MODE	BACK	LIGHT	COPY

WKIA1438E

☒ Without CONSULT-II

1. Start auto active test. Refer to [PG-24, "Auto Active Test"](#).
2. Make sure parking, license plate and tail lamp operation.

Parking, license plate and tail lamp should operate

OK or NG

OK >> GO TO 3.

NG >> GO TO 4.

3. CHECK IPDM E/R

1. Select "IPDM E/R" on CONSULT-II, and select "DATA MONITOR" on "SELECT DIAG MODE" screen.
2. Make sure "TAIL&CLR REQ" turns ON when lighting switch is in 1ST position.

**When lighting switch is in : TAIL&CLR REQ ON
1ST position**

DATA MONITOR			
MONITOR			
TAIL&CLR REQ		ON	
		RECORD	
MODE	BACK	LIGHT	COPY

SKIA5958E

OK or NG

OK >> Replace IPDM E/R. Refer to [PG-30, "Removal and Installation of IPDM E/R"](#).

NG >> Replace BCM. Refer to [BCS-20, "Removal and Installation"](#).

PARKING, LICENSE PLATE AND TAIL LAMPS

4. CHECK INPUT SIGNAL


④ With CONSULT-II

1. Turn ignition switch OFF.
2. Disconnect front combination lamp, license plate lamps and rear combination lamp connectors.
3. Turn ignition switch ON.
4. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
5. Select "TAIL LAMP" on "SELECT TEST ITEM" screen.
6. Touch "ON" on "ACTIVE TEST" screen.
7. When tail lamp is operating, check voltage between front combination lamp, license plate lamps, rear combination lamp harness connector and ground.


⊗ Without CONSULT-II

1. Start auto active test. Refer to [PG-24, "Auto Active Test"](#).
2. When tail lamp is operating, check voltage between front combination lamp, license plate lamps, rear combination lamp harness connector and ground.


Front combination lamp		Terminal	(-)	Voltage
(+) Connector				
RH	E107	6	Ground	Battery voltage
LH	E11			

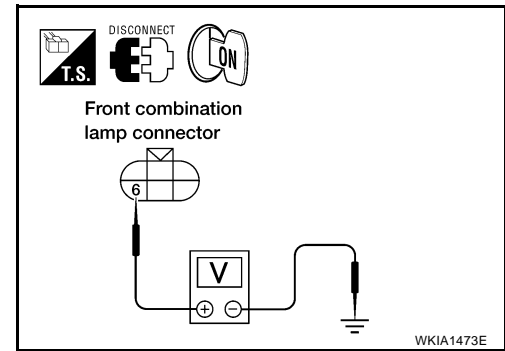

License plate lamps		Terminal	(-)	Voltage
(+) Connector				
C12		1	Ground	Battery voltage

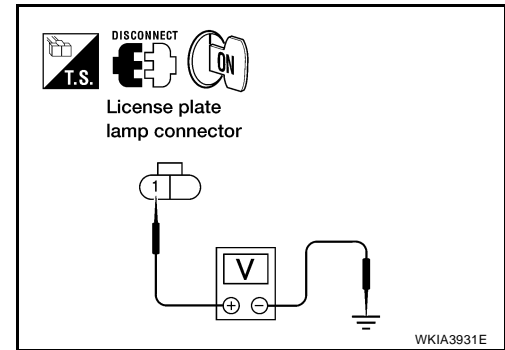

Rear combination lamp		Terminal	(-)	Voltage
(+) Connector				
RH	B130	2	Ground	Battery voltage
LH	B70			

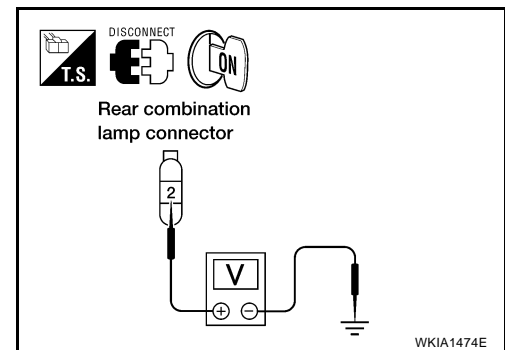

OK or NG


- OK >> GO TO 6.
 NG >> GO TO 5.

PARKING, LICENSE PLATE AND TAIL LAMPS

5. CHECK PARKING, LICENSE PLATE AND TAIL LAMP CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and front combination lamp harness connector.

IPDM E/R		Front combination lamp		Continuity
Connector	Terminal	Connector	Terminal	
E124	57	RH	E107	Yes
		LH	E11	

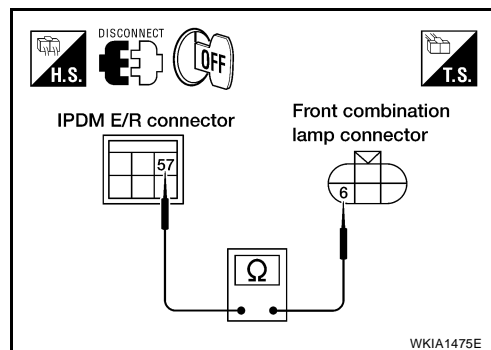


4. Check continuity between IPDM E/R harness connector and license plate lamps harness connector.

IPDM E/R		License plate lamps		Continuity
Connector	Terminal	Connector	Terminal	
E124	57	C12	1	Yes

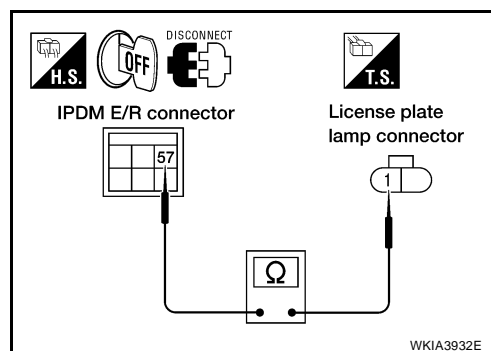

5. Check continuity between IPDM E/R harness connector and rear combination lamp harness connector.

IPDM E/R		Rear combination lamp		Continuity
Connector	Terminal	Connector	Terminal	
E124	57	RH	B130	Yes
		LH	B70	

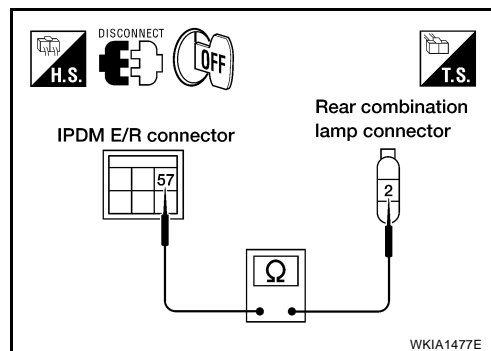

OK or NG


- OK >> Replace IPDM E/R. Refer to [PG-30, "Removal and Installation of IPDM E/R"](#) .
- NG >> Repair harness or connector.

PARKING, LICENSE PLATE AND TAIL LAMPS

6. CHECK GROUND


1. Turn ignition switch OFF.
2. Check continuity between front combination lamp harness connector and ground.

Front combination lamp		Terminal	Ground	Continuity
Connector				
RH	E107	4	Ground	Yes
LH	E11			

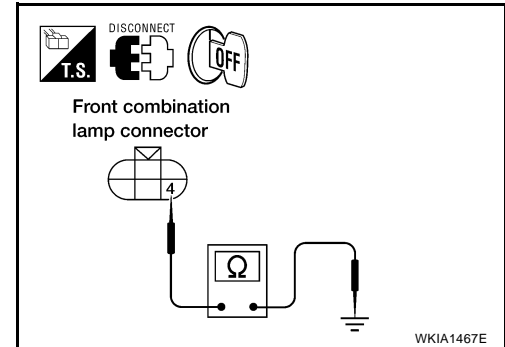


3. Check continuity between license plate lamps harness connector and ground.

License plate lamps		Terminal	Ground	Continuity
Connector				
C12		2	Ground	Yes

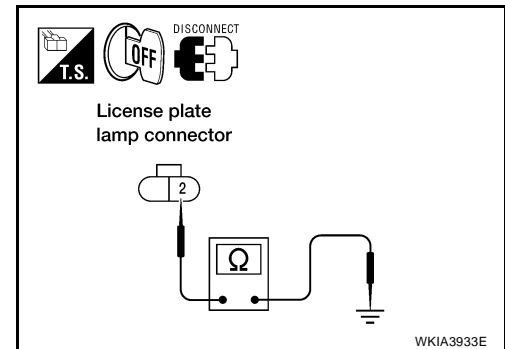

4. Check continuity between rear combination lamp harness connector and ground.

Rear combination lamp		Terminal	Ground	Continuity
Connector				
RH	B130	3	Ground	Yes
LH	B70			

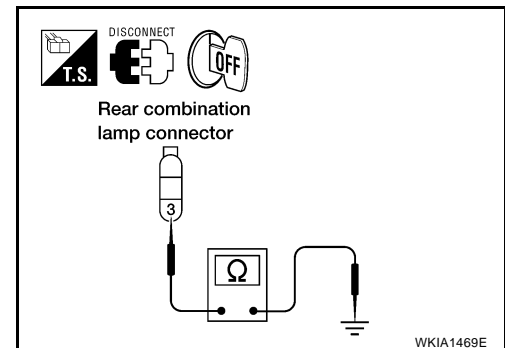

OK or NG

- OK >> Check bulbs.
 NG >> Repair harness or connector.

Parking, License Plate and Tail Lamps Do Not Turn OFF (After Approx. 10 Minutes)

EKS00AVI

1. CHECK IPDM E/R

1. Turn ignition switch ON. Turn the combination switch (lighting switch) to the OFF position. Turn ignition switch OFF.
2. Verify that the parking, license plate, and tail lamps turn on and off after approximately 10 minutes.

OK or NG

- OK >> Ignition relay malfunction. Refer to [PG-19, "Function of Detecting Ignition Relay Malfunction"](#) .
 NG >> Inspection End.

PARKING, LICENSE PLATE AND TAIL LAMPS

Bulb Replacement FRONT PARKING LAMP

EKS00AVJ

A

Refer to [LT-31, "FRONT TURN SIGNAL/PARKING LAMP"](#) .

Tail Lamp

EKS00AVK

B

Refer to [LT-124, "Bulb Replacement"](#) .

C

D

E

F

G

H

I

J

LT

L

M

REAR COMBINATION LAMP


REAR COMBINATION LAMP

PFP:26554

Bulb Replacement REMOVAL

EKS00AVL

1. Remove rear combination lamp mounting bolts.

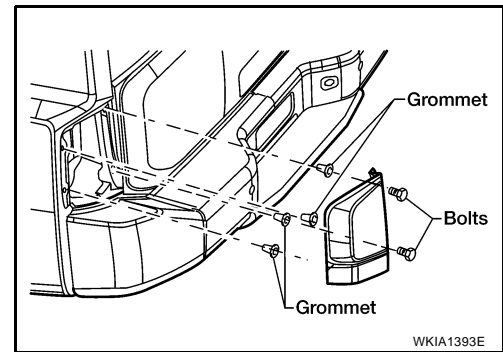

2. Pull rear combination lamp to remove from the vehicle.
3. Turn bulb socket counterclockwise and unlock it.
4. Remove bulb.

INSTALLATION


Installation is in the reverse order of removal.

Removal and Installation REAR COMBINATION LAMP

EKS00AVM

Removal

1. Remove rear combination lamp mounting bolts.

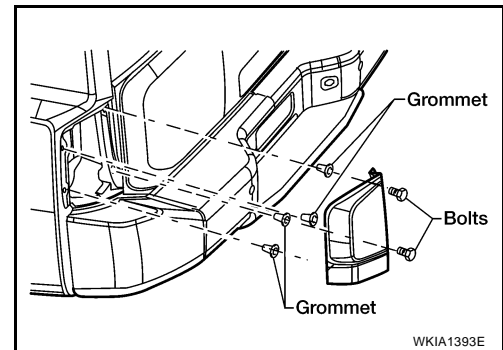

2. Pull rear combination lamp to remove from the vehicle.
3. Disconnect rear combination lamp connector.

Installation

Installation is in the reverse order of removal.


TRAILER TOW

PFP:93020

EKS00AVN

TRAILER TOW

Component Parts and Harness Connector Location

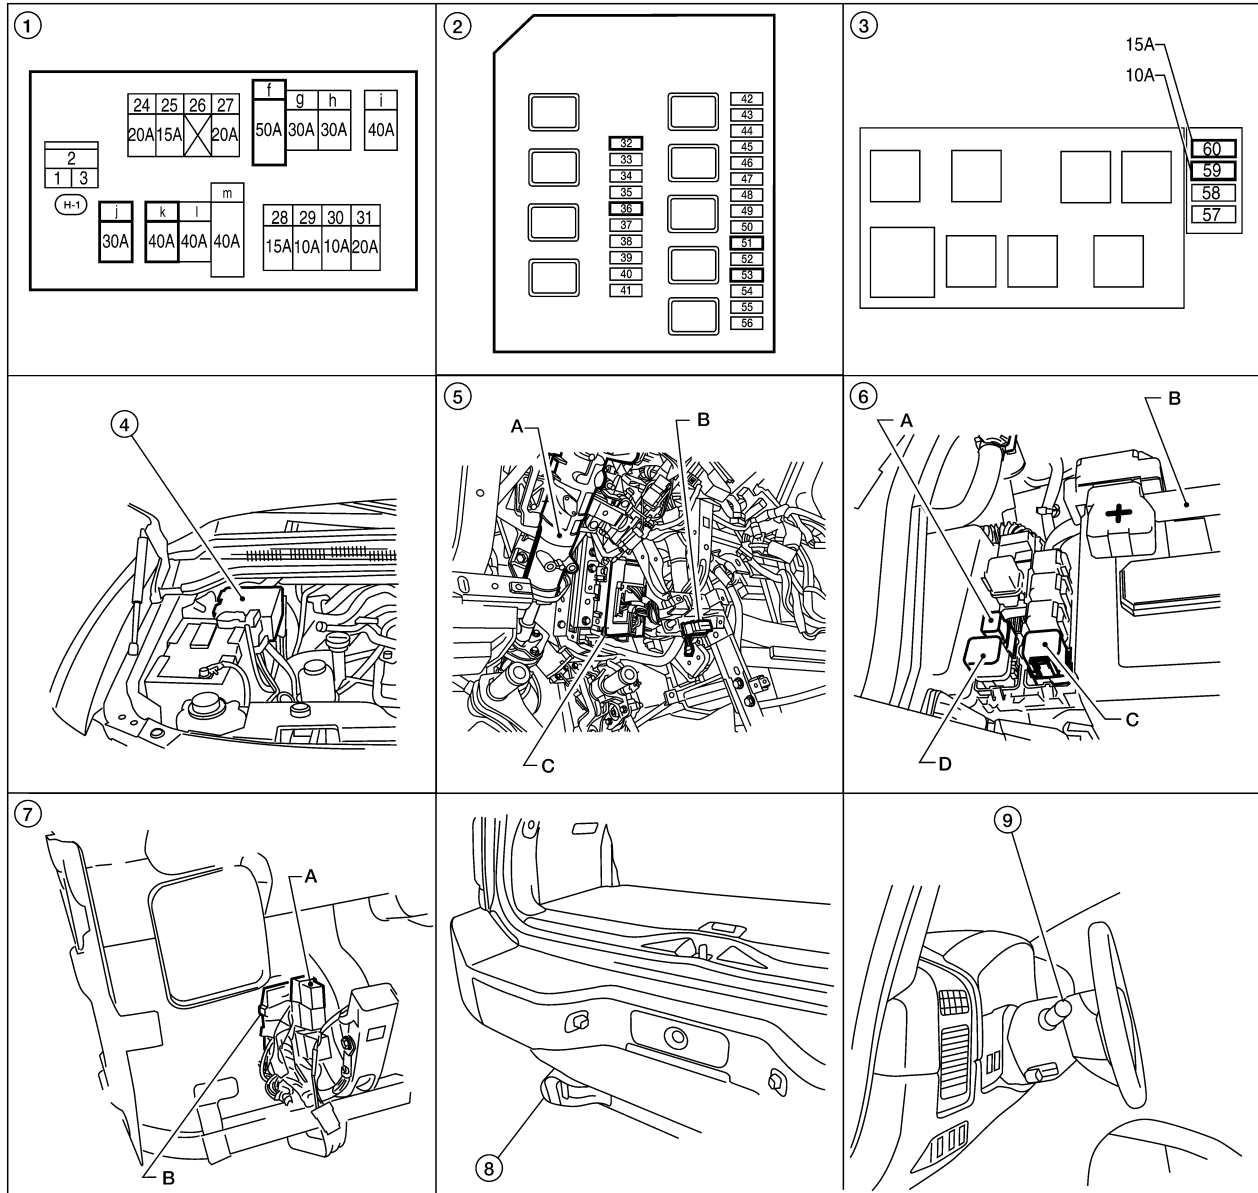

- | | | |
|--|--|--|
| 1. Fuse and fusible link box | 2. IPDM E/R fuse layout | 3. Fuse and relay box |
| 4. IPDM E/R E118, E119, E120, E121, E122, E123, E124 | 5. A. Steering column
B. Data link connector M22
C. BCM M18, M19, M20
(View with instrument lower panel LH removed) | 6. A. Trailer turn relay LH E156
B. Battery
C. Trailer tow relay 2 E140
D. Trailer turn relay RH E157 |
| 7. A. Trailer tow relay 1 M51
B. Electric brake (pre-wiring) M76
(View with instrument lower panel LH removed) | 8. Trailer connector C2 | 9. Combination switch (lighting switch) M28 |

System Description

EKS00AVO

Power is supplied at all times

- to ignition relay, located in the IPDM E/R (intelligent power distribution module engine room), and
- through 50A fusible link (letter f , located in the fuse and fusible link box)
- to BCM (body control module) terminal 70 and
- to and through 15A fuse (No. 60, located in the fuse and relay box)

A
B
C
D
E
F
G
H
I
J
LT
L
M

TRAILER TOW

- to trailer turn relay LH and RH terminal 5, and
- through 10A fuse (No. 32, located in the IPDM E/R)
- through IPDM E/R terminal 61
- to trailer tow relay 1 terminal 3, and
- through 20A fuse (No. 53, located in the IPDM E/R)
- to CPU (central processing unit) of the IPDM E/R, and
- through 30A fusible link (letter **j**, located in the fuse and fusible link box)
- to trailer tow relay 2 terminals 3 and 6, and
- through 40A fusible link (letter **k**, located in the fuse and fusible link box)
- to electric brake (pre-wiring) terminal 5.

With the ignition switch in the ON or START position, power is supplied

- to ignition relay, located in the IPDM E/R, and
- through 10A fuse (No. 59, located in the fuse and relay box)
- to BCM terminal 38, and
- through 10A fuse (No. 51, located in the IPDM E/R)
- to trailer tow relay 2 terminal 1.

Ground is supplied

- to BCM terminal 67
- to electric brake (pre-wiring) terminal 1, and
- to trailer tow relay 1 terminal 2
- through grounds M57, M61 and M79, and
- to IPDM E/R terminals 38 and 59
- to trailer tow relay 2 terminal 2
- to trailer connector terminal 2 and
- to trailer turn relay LH and RH terminal 2
- through grounds E9, E15 and E24.

TRAILER TAIL LAMP OPERATION

The trailer tail lamps are controlled by the trailer tow relay 1.

With the lighting switch in the parking and tail lamp ON (1ST) position, AUTO position (and the auto light system is activated) or headlamp ON (2ND) position, power is supplied

- through the tail lamp relay (located in the IPDM E/R)
- through 10A fuse (No. 36, located in the IPDM E/R)
- to IPDM E/R terminal 49
- to trailer tow relay 1 terminal 1.

When energized, trailer tow relay 1 supplies tail lamp power to trailer connector terminal 6.

TRAILER BRAKE, TURN SIGNAL AND HAZARD LAMP OPERATION

The trailer brake, turn signal and hazard lamps are controlled by the BCM through trailer turn relays (LH and RH). When the brake pedal is depressed, the BCM receives stop lamp switch signal through CAN communication. If the brake pedal is depressed or either turn signal or the hazard lamps are turned on, the BCM supplies voltage to the trailer turn relays (LH and RH) to make them cycle on and off.

Trailer turn relay LH output is supplied

- through BCM terminal 52
- to trailer turn relay LH terminal 1.

Trailer turn relay RH output is supplied

- through BCM terminal 51
- to trailer turn relay RH terminal 1.

Left trailer brake, turn signal and hazard lamp output is supplied

- through trailer turn relay LH terminal 3
- to trailer connector terminal 1.

TRAILER TOW

Right trailer brake, turn signal and hazard lamp output is supplied

- through trailer turn relay RH terminal 3
- to trailer connector terminal 4.

A

TRAILER BRAKE OPERATION

The trailer brake is controlled by the electric brake. The electric brake receives stop lamp switch signal at electric brake (pre-wiring) terminal 2 when the brake pedal is depressed.

B

When the brake pedal is depressed, power is supplied by the electric brake

- through electric brake (pre-wiring) terminal 3
- to trailer connector terminal 3.

C

TRAILER POWER SUPPLY OPERATION

The trailer power supply is controlled by the trailer tow relay 2.

D

When the ignition switch is in the ON or START position, power is supplied

- through 10A fuse (No. 51, located in the IPDM E/R)
- to IPDM E/R terminal 16
- to trailer tow relay 2 terminal 1.

E

When energized, the trailer tow relay 2 supplies power

F

- through trailer tow relay 2 terminals 5 and 7
- to trailer connector terminal 5.

G

H

I

J

LT


L

M

TRAILER TOW

Schematic

EKS00AVP

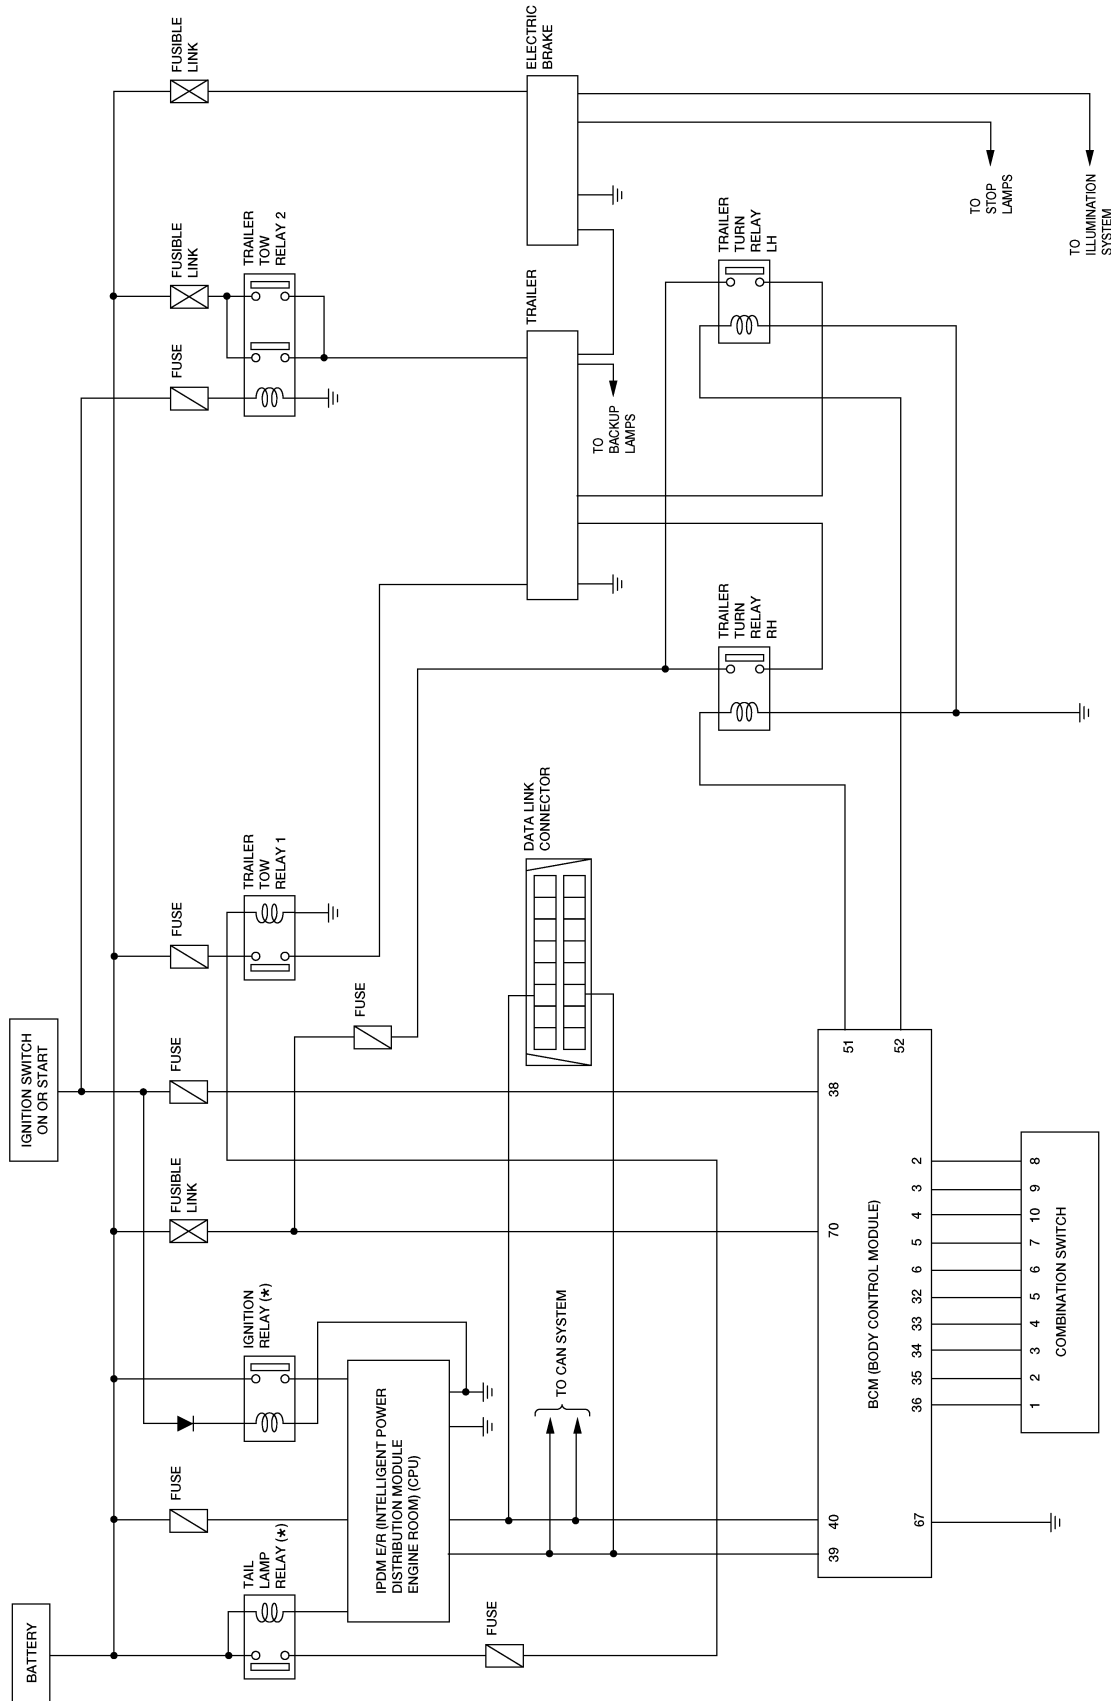


* : THIS RELAY IS BUILT INTO THE IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

WKWA3478E


TRAILER TOW

EKS00AV0

Wiring Diagram — T/TOW —


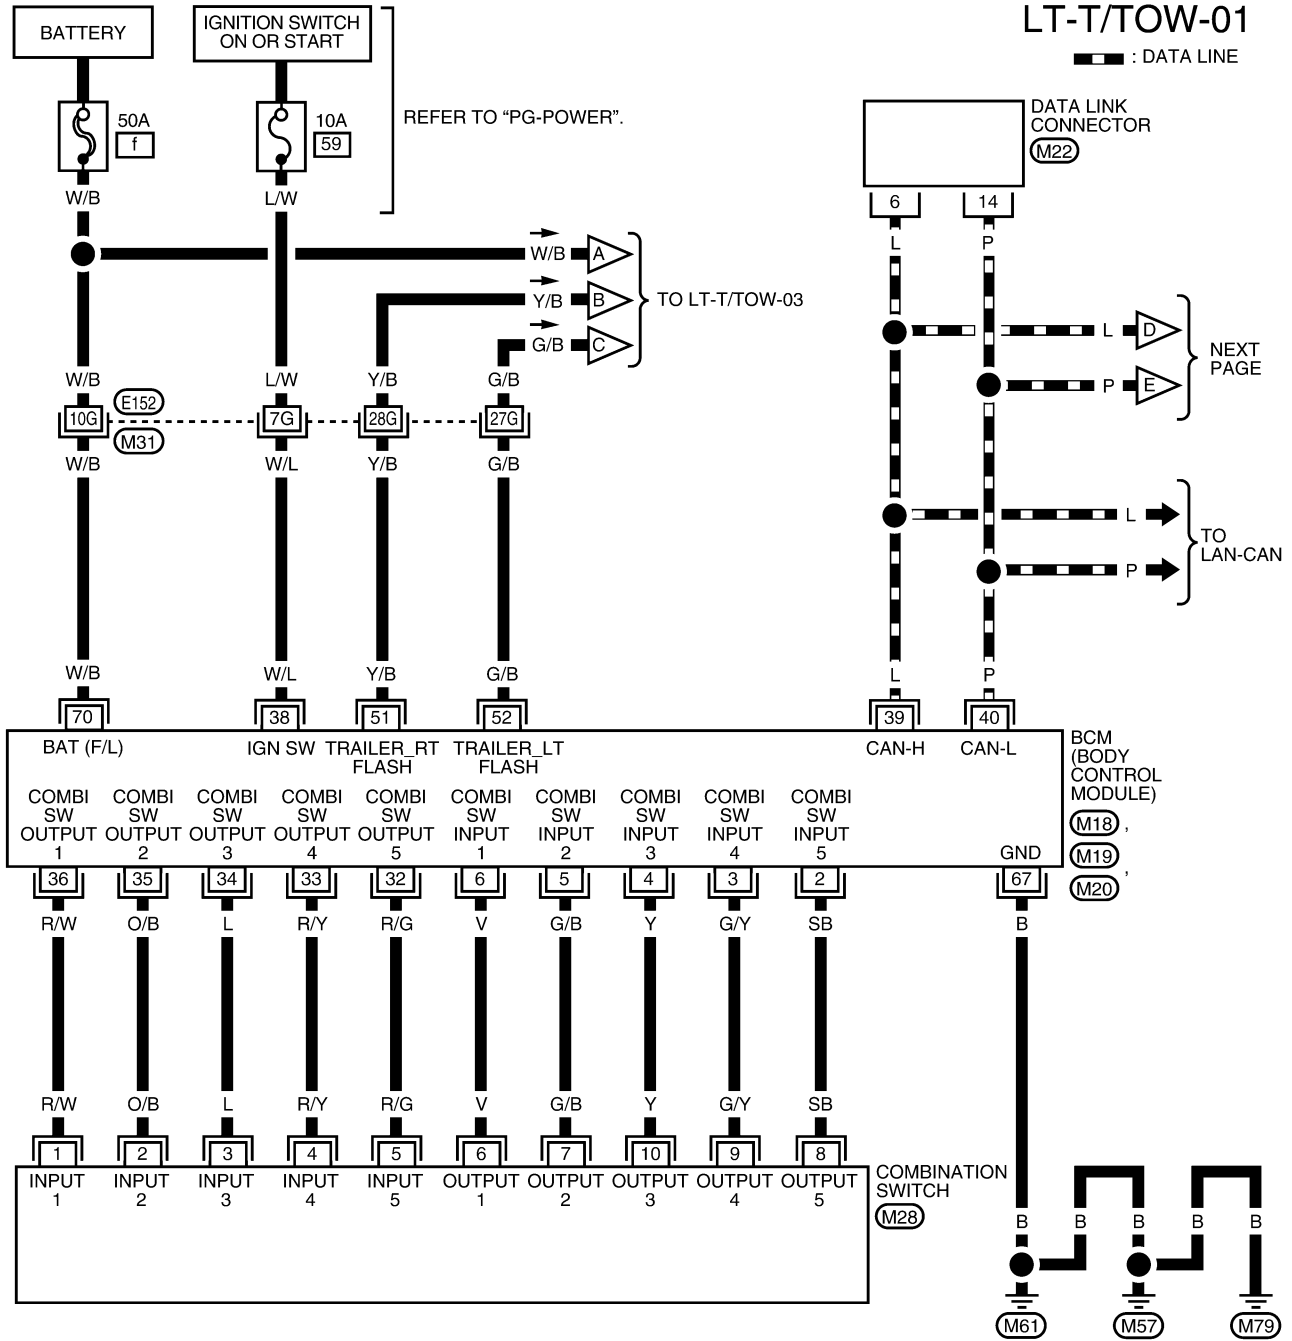


A
B
C
D
E
F
G
H
I
J
LT
L
M

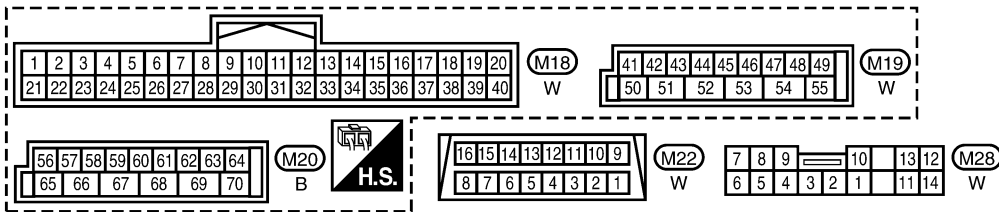

TRAILER TOW

LT-T/TOW-02

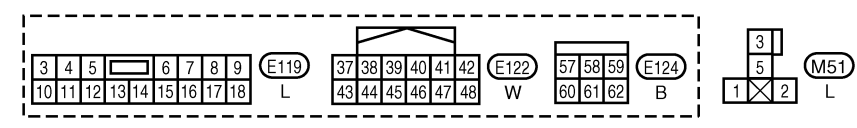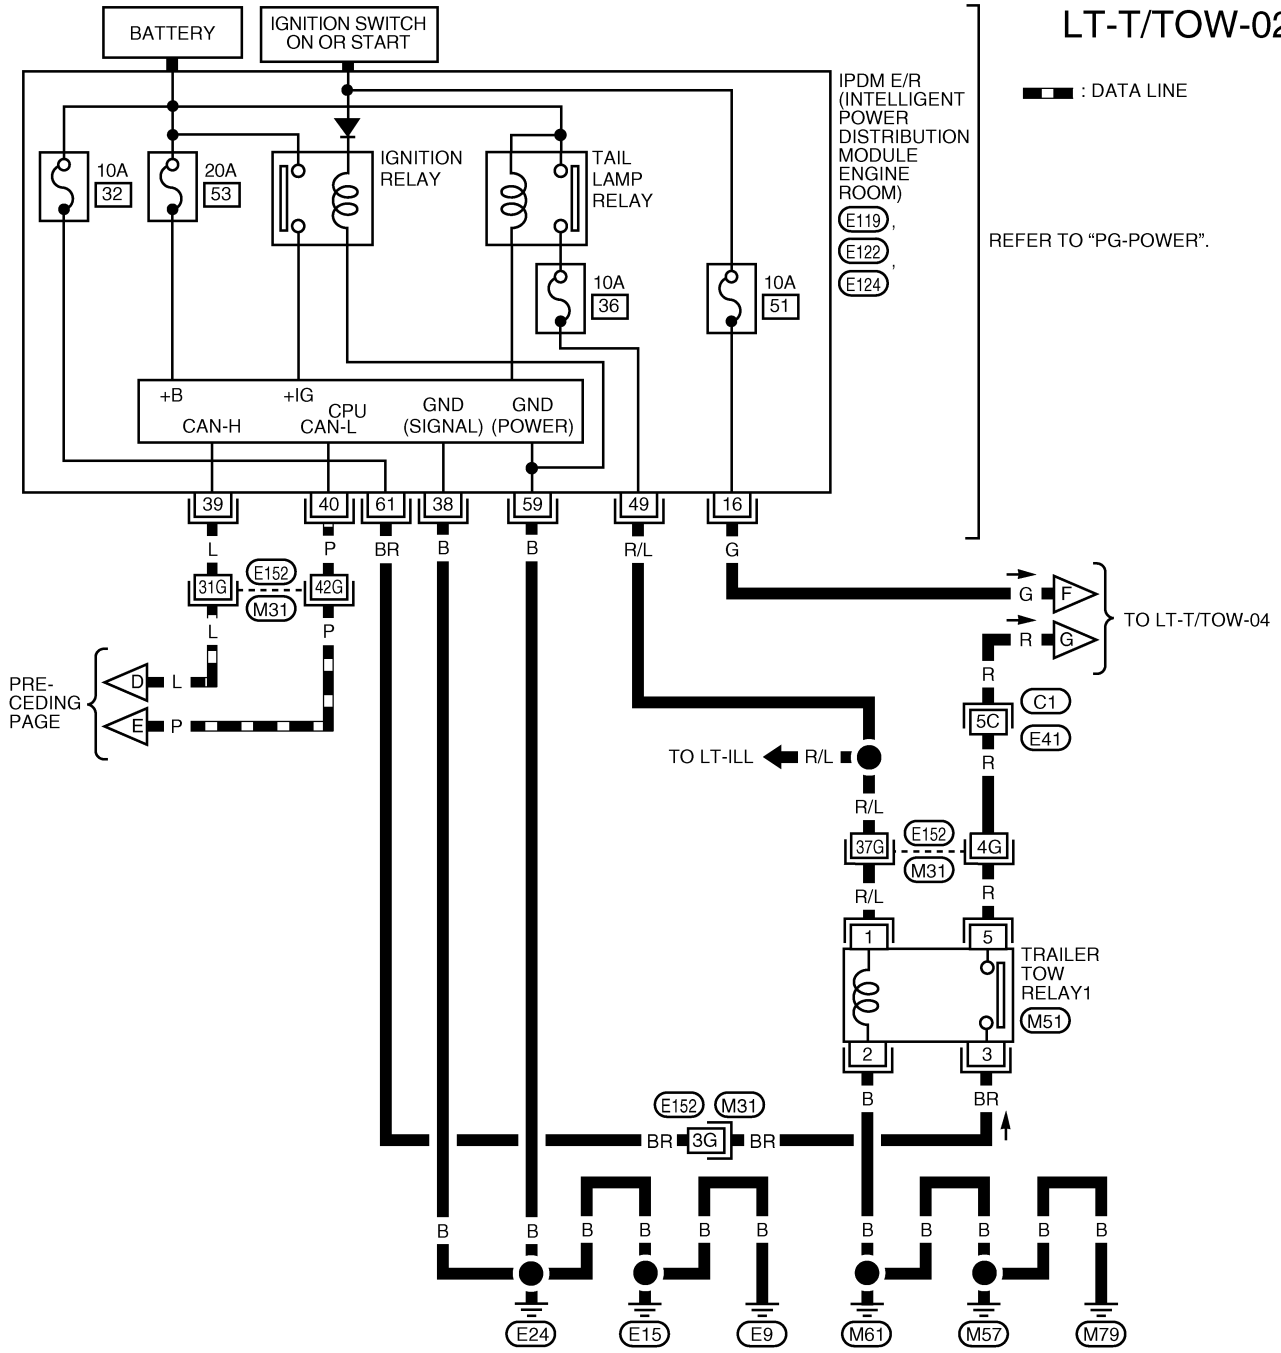

REFER TO THE FOLLOWING.
 (M31), (C1) - SUPER
 MULTIPLE JUNCTION (SMJ)

WKWA3480E


INTERIOR ROOM LAMP

INTERIOR ROOM LAMP

Component Parts and Harness Connector Location

PFP:26410

EKS00AVR

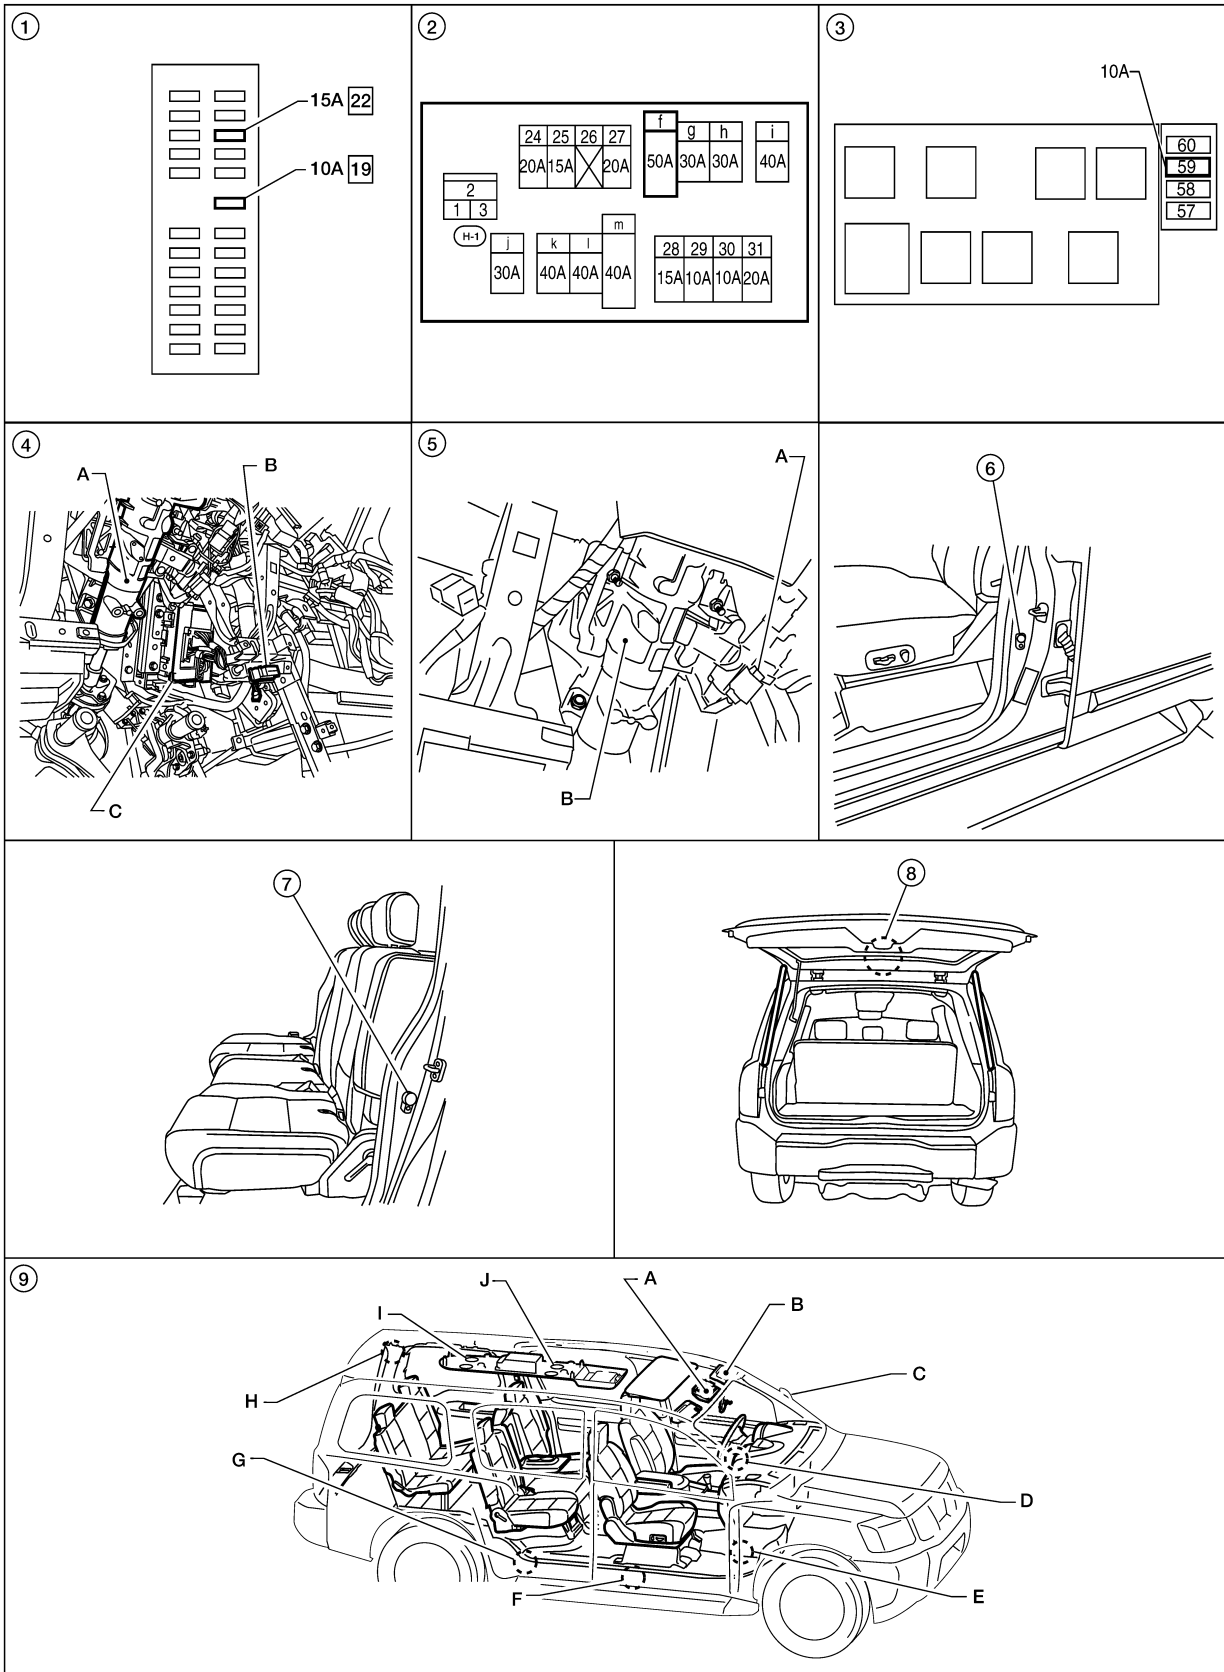

A
B
C
D
E
F
G
H
I
J

LT

L
M

WKIA4535E

INTERIOR ROOM LAMP

-
- | | | |
|--|--|--|
| 1. Fuse Block (J/B) | 2. Fuse and fusible link box | 3. IPDM E/R fuse layout |
| 4. A. Steering column
B. Data link connector M22
C. BCM M18, M19, M20
(View with instrument lower panel LH removed) | 5. A. Key switch and key lock solenoid M27
B. Steering column assembly | 6. Front door switch LH B8, RH B108 |
| 7. Rear door switch LH B18, RH B116 | 8. Back door switch D502 (without power back door)
Back door latch (door ajar switch) D503 (with power back door) | |
| 9. A. Front room/map lamp assembly R102
B. Vanity lamp LH R3, RH R8
C. Door mirror (puddle lamp) LH D4, RH D107 | D. Ignition keyhole illumination M150
E. Foot lamp LH M99, RH M100
F. Front step lamp LH D11, RH D109 | G. Rear step lamp LH D206, RH D306
H. Cargo lamp B153
I. Personal lamps 3rd row R205
J. Personal lamps 2nd row R203 |

System Description

EKS00AVS

When room lamp and personal lamp switch is in DOOR position, room lamp and personal lamp ON/OFF is controlled by timer according to signals from switches including key switch and key lock solenoid, front door switch LH side, unlock signal from keyfob, door lock and unlock switch, key cylinder lock and unlock switch, ignition switch, and glass hatch ajar switch.

When room lamp and personal lamp turns ON, there is a gradual brightening over 1 second. When room lamp and personal lamp turns OFF, there is a gradual dimming over 1 second.

The room lamp and personal lamp timer is controlled by the BCM (body control module).

Room lamp and personal lamp timer control settings can be changed with CONSULT-II.

Ignition keyhole illumination turns ON when front door LH is opened (door switch ON) or key is removed from key cylinder. Illumination turns OFF when front door LH is closed (door switch OFF).

Step and foot lamps turn ON when front or rear doors are opened (door switch ON). Lamps turn OFF when front and rear doors are closed (all door switches OFF).

POWER SUPPLY AND GROUND

Power is supplied at all times

- through 10A fuse [No. 19, located in the fuse block (J/B)]
- to key switch and key lock solenoid terminal 3, and
- through 15A fuse [No. 22, located in the fuse block (J/B)]
- to BCM terminal 57, and
- through 50A fusible link (letter f , located in the fuse and fusible link box)
- to BCM terminal 70.

When the key is inserted in key switch and key lock solenoid, power is supplied

- through key switch and key lock solenoid terminal 4
- to BCM terminal 37.

With the ignition switch in the ON or START position, power is supplied

- through 10A fuse (No. 59, located in the fuse and relay box)
- to BCM terminal 38.

Ground is supplied

- to BCM terminal 67
- through grounds M57, M61 and M79.

When the front door LH is opened, ground is supplied

- to BCM terminal 47
- through front door switch LH terminal 2
- through case ground of front door switch LH.

When the front door RH is opened, ground is supplied

- to BCM terminal 12
- through front door switch RH terminal 2
- through case ground of front door switch RH.

INTERIOR ROOM LAMP

When the rear door LH is opened, ground is supplied

- to BCM terminal 48
- through rear door switch LH terminal 2
- through case ground of rear door switch LH.

A

When the rear door RH is opened, ground is supplied

- to BCM terminal 13
- through rear door switch RH terminal 2
- through case ground of rear door switch RH.

B

When the liftgate is opened, ground is supplied

- to BCM terminal 43
- through back door switch terminal 3 (without power back door)
- through back door switch terminal 1 (without power back door), or
- through back door latch (door ajar switch) terminal 7 (with power back door)
- through back door latch (door ajar switch) terminal 8 (with power back door)
- through grounds B7 and B19.

C

D

E

When the glass hatch is opened, ground is supplied

- to BCM terminal 42
- through glass hatch ajar switch terminal 1
- through case ground of glass hatch ajar switch.

F

G

When the front door LH or RH is unlocked by the door lock and unlock switch, BCM receives serial data

- to BCM terminal 22
- through main power window and door lock/unlock switch terminal 14 or power window and door lock/unlock switch RH terminal 16.

H

The main power window and door lock/unlock switch receives a ground signal

- to main power window and door lock/unlock switch terminal 17
- through grounds M57, M61 and M79.

I

The power window and door lock/unlock switch RH receives a ground signal

- to front power window and door lock/unlock switch terminal 11
- through grounds M57, M61 and M79.

J

When the front door LH is unlocked by the key, the BCM receives serial data

- to BCM terminal 22
- through main power window and door lock/unlock switch terminal 14.

LT

And the main power window and door lock/unlock switch receives a ground signal

- to main power window and door lock/unlock switch terminal 6
- through front door lock assembly LH (key cylinder switch) terminal 6
- through front door lock assembly LH (key cylinder switch) terminal 5
- through grounds M57, M61 and M79.

L

M

When a signal, or combination of signals is received by BCM, ground is supplied

- to door mirror LH and RH terminal 13 (with puddle lamps)
- to front room/map lamp assembly terminal 1 and
- through front room/map lamp assembly terminal 2
- to personal lamps terminal 1
- through BCM terminal 63, and
- to cargo lamp terminal 1 (when cargo lamp switch is in DOOR position)
- through BCM terminal 49.

With power and ground supplied, the lamps illuminate.

SWITCH OPERATION

When any door switch is ON (door is opened), ground is supplied

- to front and rear step lamps LH and RH terminal 2

INTERIOR ROOM LAMP

- to foot lamp LH and RH terminal 2 (with foot lamps)
- through BCM terminal 62, and
- to ignition keyhole illumination terminal 2
- through BCM terminal 1.

And power is supplied

- through BCM terminal 56
- to ignition keyhole illumination terminal 1
- to front and rear step lamps LH and RH terminal 1
- to door mirror LH and RH terminal 12 (with puddle lamps)
- to foot lamp LH and RH terminal 1 (with foot lamps)
- to front room/map lamp assembly terminal 6
- to vanity lamp LH and RH terminal 1
- to personal lamp 2nd row and 3rd row terminal 3, and
- to cargo lamp terminal 2.

When map lamp switch is ON, ground is supplied

- to front room/map lamp assembly terminal 5
- through grounds M57, M61 and M79.

When vanity lamp (LH or RH) is ON, ground is supplied

- to vanity lamp (LH or RH) terminal 2
- through grounds M57, M61 and M79.

When cargo lamp is ON, ground is supplied through cargo lamp case ground.

ROOM LAMP TIMER OPERATION

When lamp switch is in DOOR position, and when all conditions below are met, BCM performs timer control (maximum 30 seconds) for interior room lamp and map lamp ON/OFF.

Power is supplied

- through 10A fuse [No. 19, located in the fuse block (J/B)]
- to key switch and key lock solenoid terminal 3.

Key is removed from ignition key cylinder (key switch OFF), power will not be supplied to BCM terminal 37.

Serial data is supplied

- to BCM terminal 22
- through main power window and door lock/unlock switch terminal 14.

At the time that front door LH is opened, BCM detects that front door LH is unlocked. It determines that interior room lamp and map lamp timer operation conditions are met, and turns the interior room lamps ON for 30 seconds.

Key is in ignition key cylinder (key switch ON), power is supplied

- through key switch and key lock solenoid terminal 4
- to BCM terminal 37.

When key is removed from key switch and key lock solenoid (key switch OFF), power supply to BCM terminal 37 is terminated. BCM detects that key has been removed, determines that interior room lamp and map lamp timer conditions are met, and turns the interior room lamps ON for 30 seconds.

When front door LH opens → closes, and the key is not inserted in the key switch and key lock solenoid (key switch OFF), BCM terminal 47 changes between 0V (door open) → 12V (door closed). The BCM determines that conditions for interior room lamp operation are met and turns the interior room lamp ON for 30 seconds.

Timer control is canceled under the following conditions.

- Front door LH is locked [when locked by keyfob, main power window and door lock/unlock switch, or front door lock assembly LH (key cylinder switch)]
- Front door LH is opened (front door switch LH turns ON)
- Ignition switch ON.

INTERIOR LAMP BATTERY SAVER CONTROL

If interior lamp is left ON, it will not be turned off even when door is closed.

BCM turns off interior lamp automatically to save battery 30 minutes after ignition switch is turned off.

INTERIOR ROOM LAMP

BCM controls interior lamps listed below:

- Vanity lamp
- Front room/map lamp
- Cargo lamp
- Personal lamps
- Step lamps
- Puddle lamps (with puddle lamps)
- Foot lamps (with foot lamps)
- Ignition keyhole illumination

After lamps turn OFF by the battery saver system, the lamps illuminate again when

- signal received from keyfob, or main power window and door lock/unlock switch or front door lock assembly LH (key cylinder switch) is locked or unlocked
- door is opened or closed
- key is removed from ignition key cylinder (key switch OFF) or inserted in ignition key cylinder (key switch ON).

Interior lamp battery saver control period can be changed by the function setting of CONSULT-II.

A

B

C

D

E

F

G

H

I

J

LT


L

M


INTERIOR ROOM LAMP

EKS00AVT

Schematic

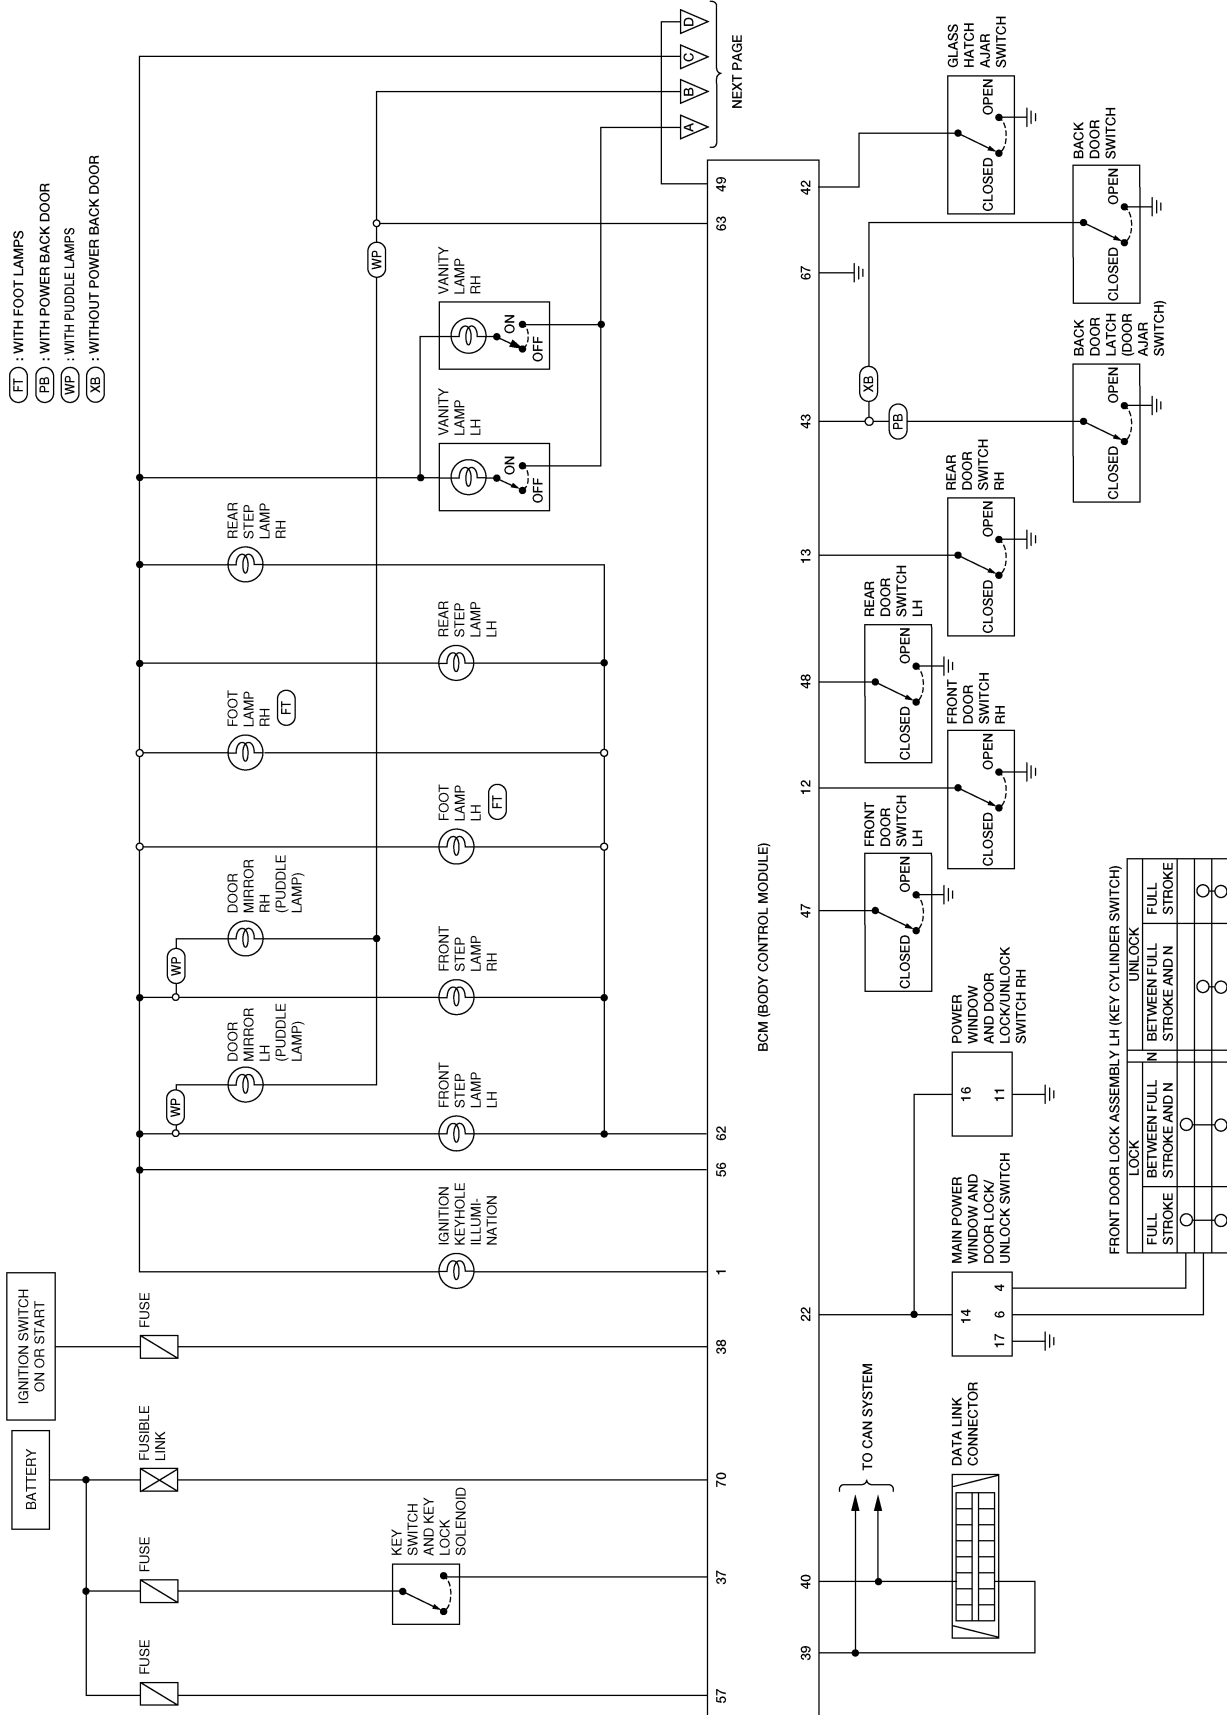

INTERIOR ROOM LAMP

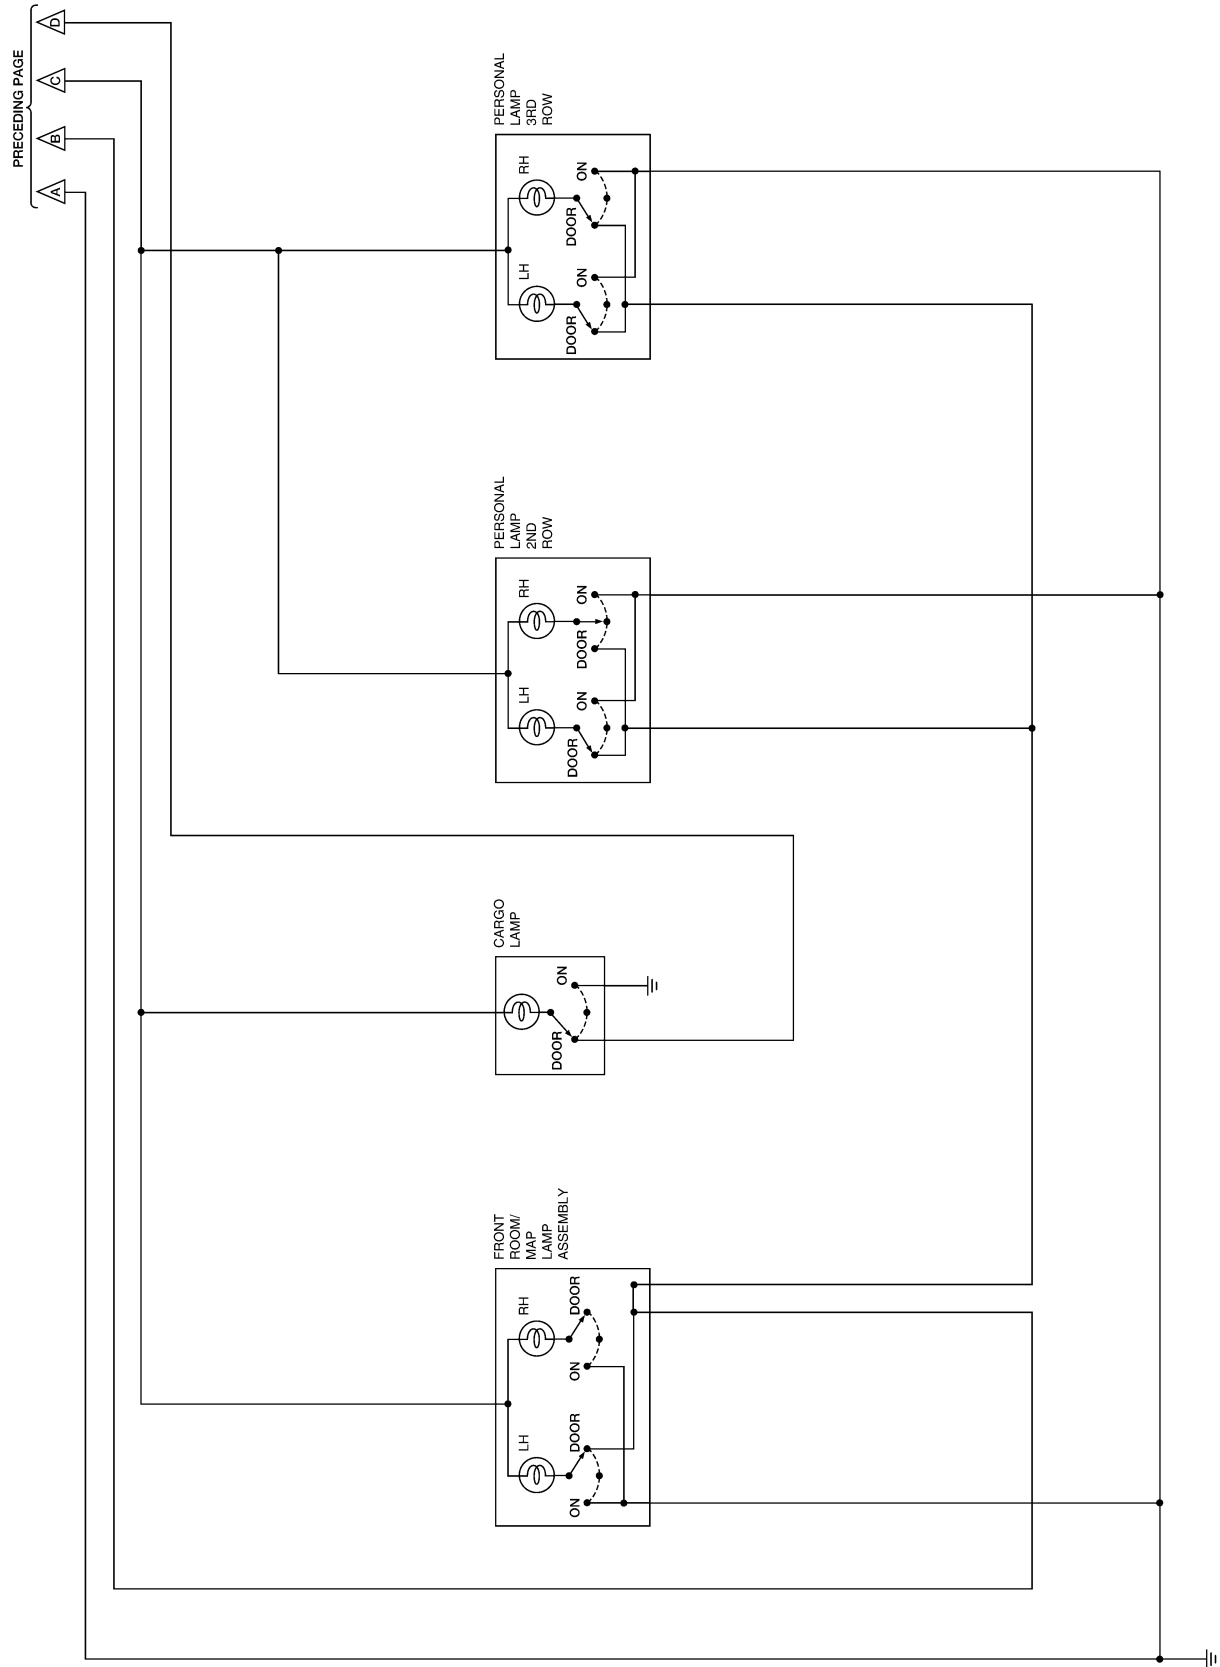

A
B
C
D
E
F
G
H
I
J
LT
L
M

WKWA3483E


 

INTERIOR ROOM LAMP

Wiring Diagram — INT/L —

EKS00AVU

LT-INT/L-01

▬ : DATA LINE

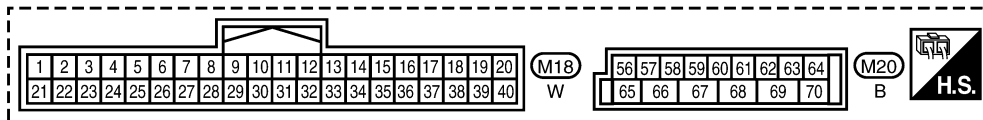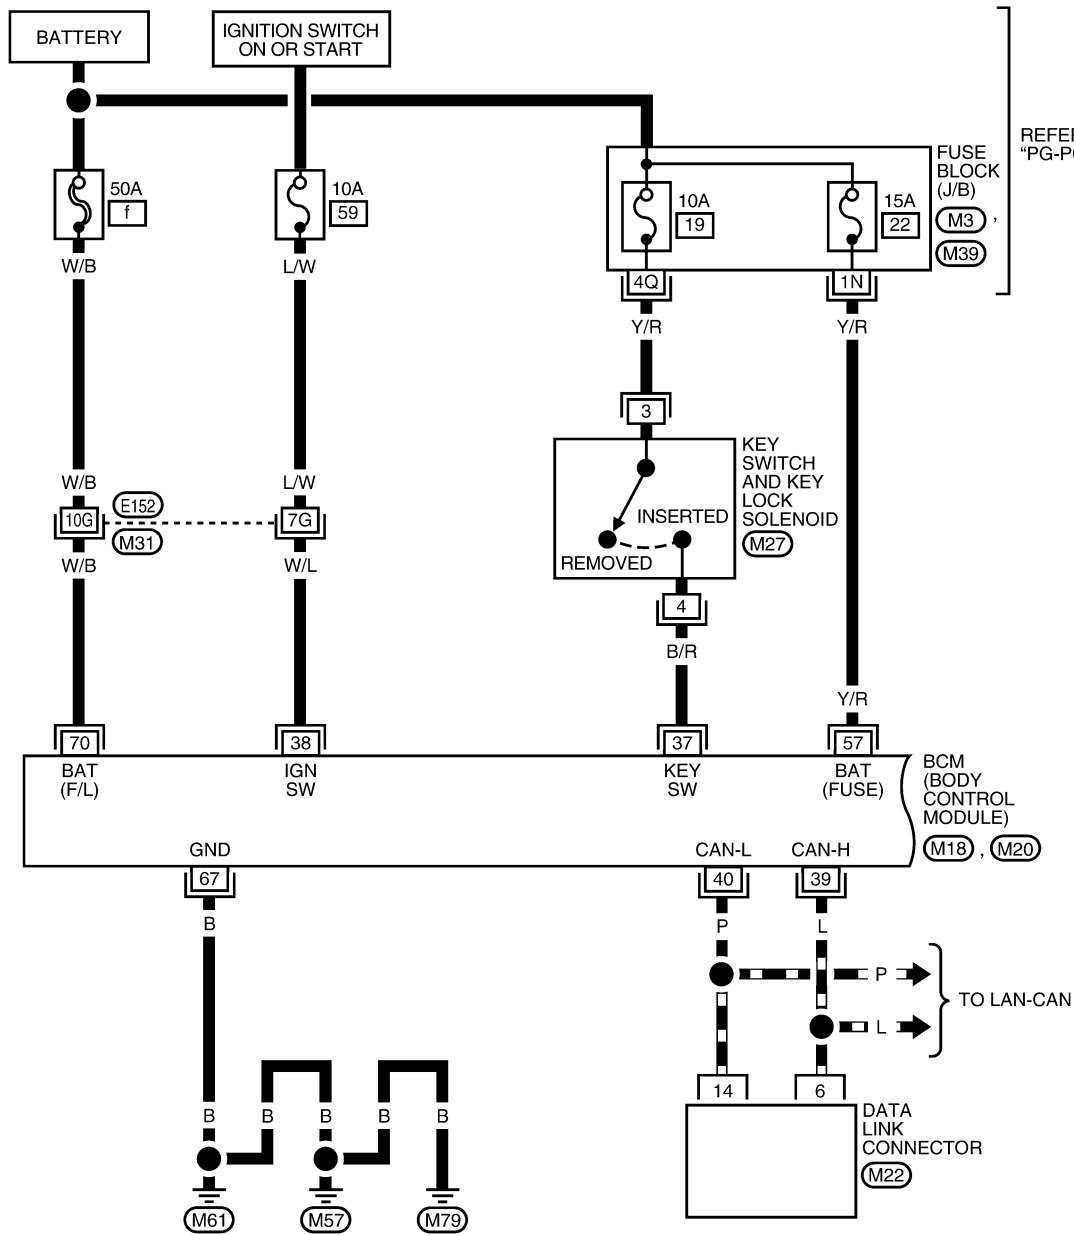



REFER TO THE FOLLOWING.
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA2422E

INTERIOR ROOM LAMP

⬡PB⬡ : WITH POWER BACK DOOR
 ⬡XB⬡ : WITHOUT POWER BACK DOOR

LT-INT/L-02

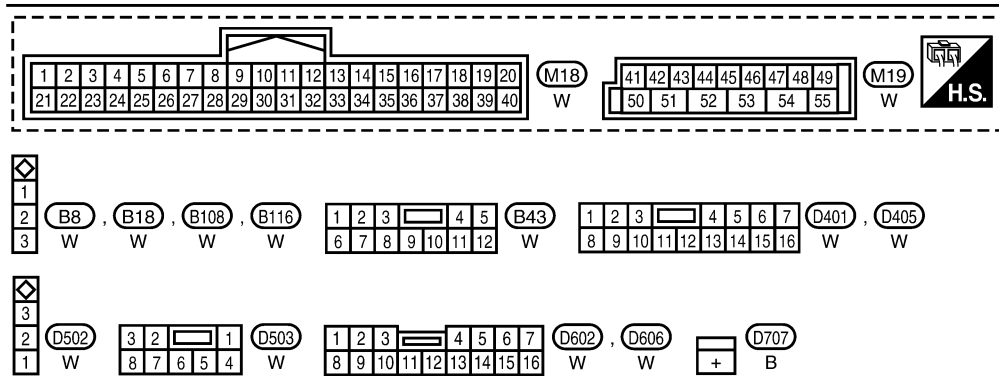
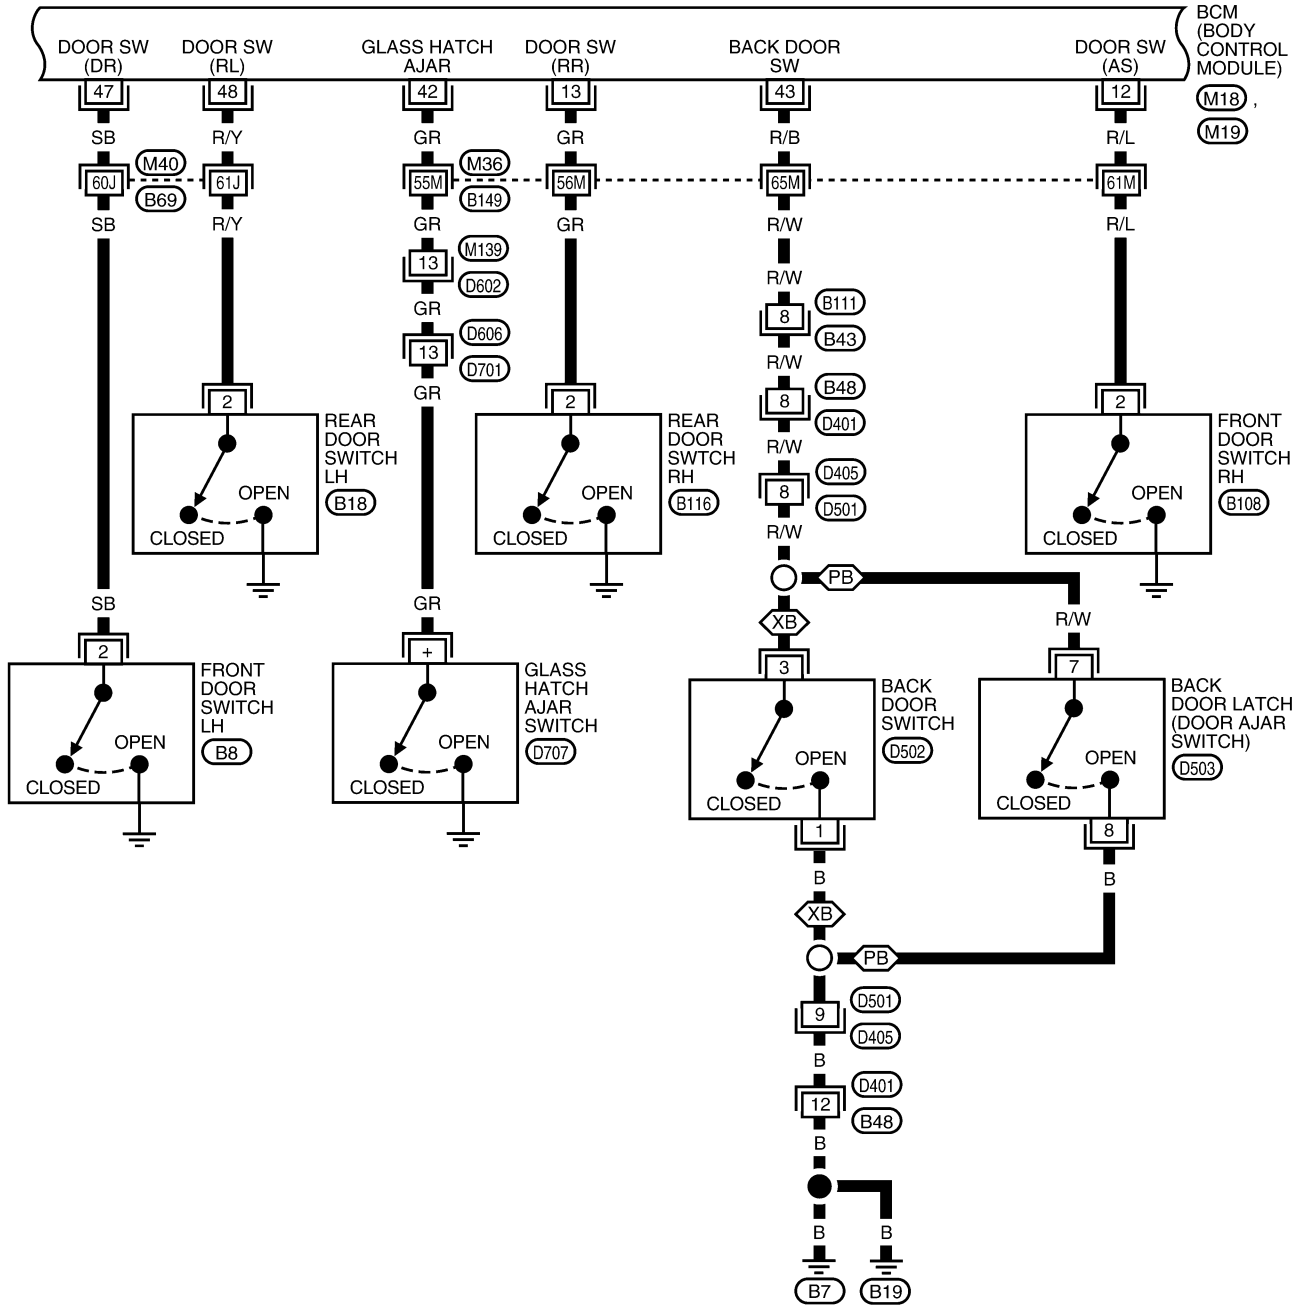


REFER TO THE FOLLOWING.
 ⬡M36⬡, ⬡M40⬡ - SUPER
 MULTIPLE JUNCTION (SMJ)

WKWA2423E

INTERIOR ROOM LAMP

LT-INT/L-03

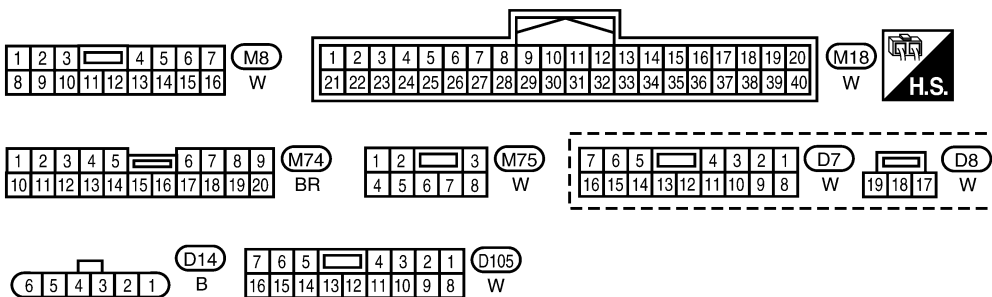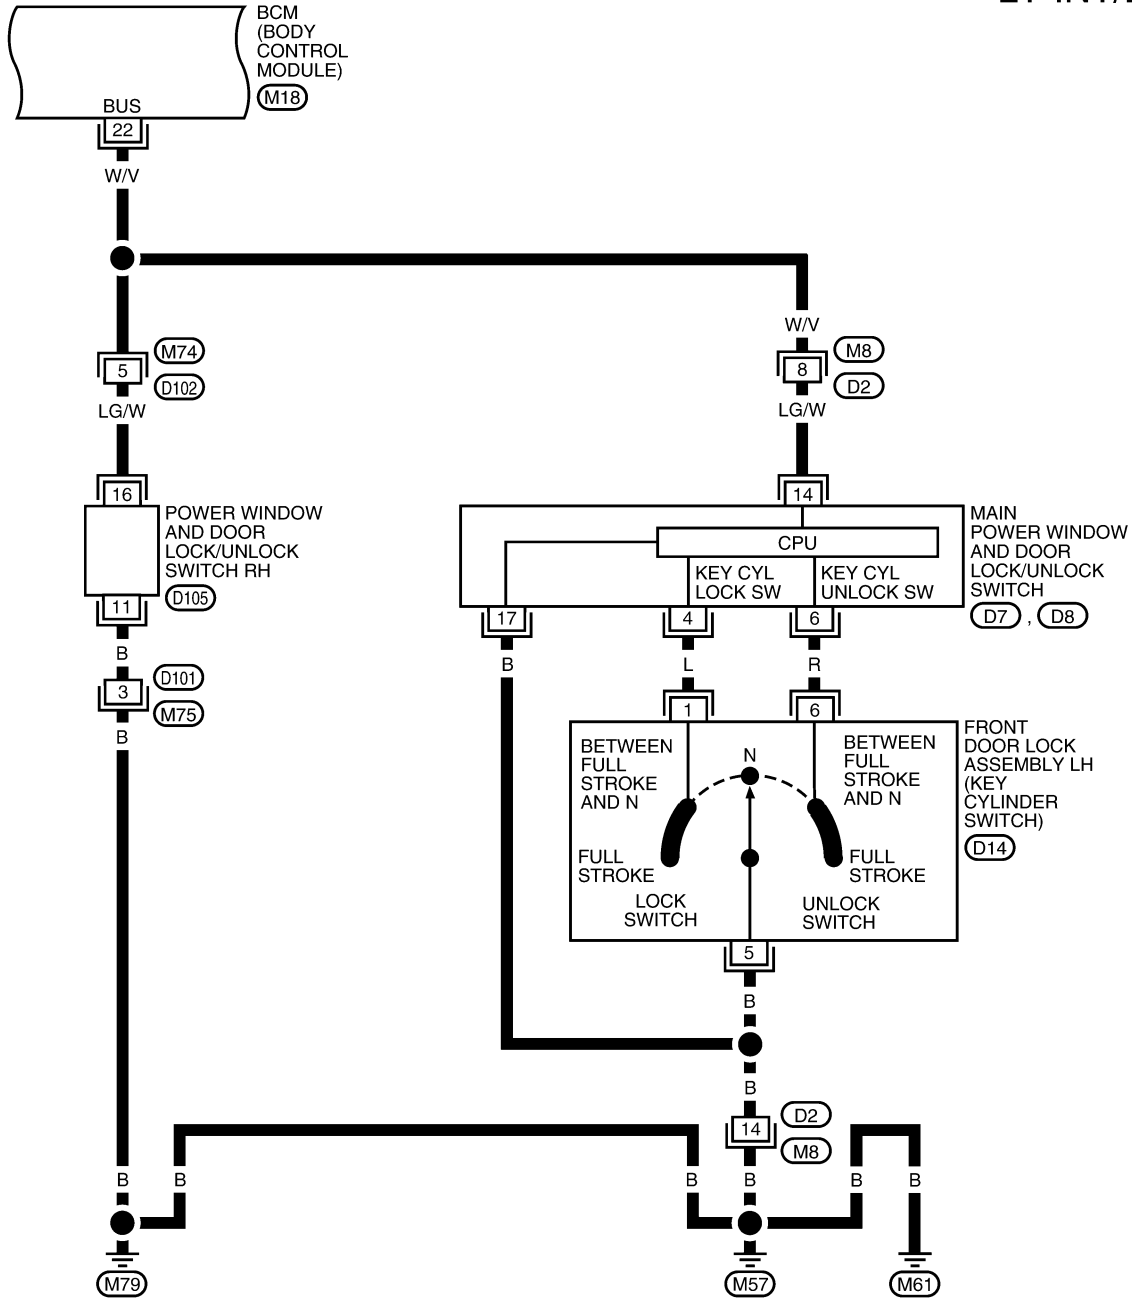


WKWA3484E

INTERIOR ROOM LAMP

LT-INT/L-04

WP : WITH PUDDLE LAMPS

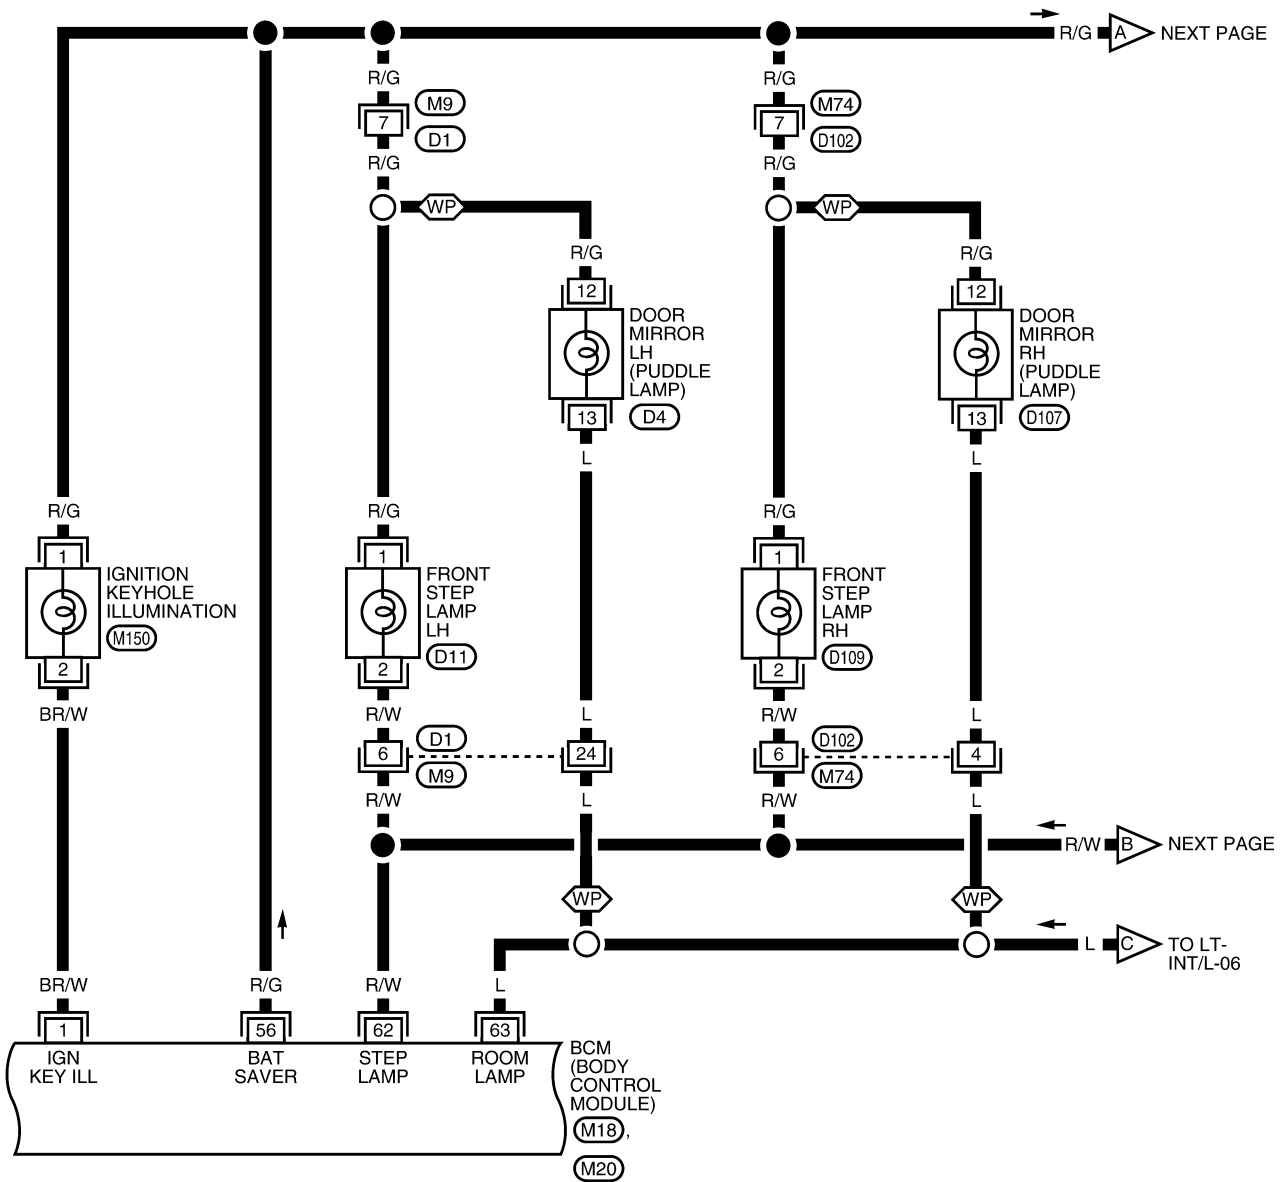

1	2	3	4	5	6	7	8	9	10	11		
12	13	14	15	16	17	18	19	20	21	22	23	24

M9
BR

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40

M18
W

56	57	58	59	60	61	62	63	64
65	66	67	68	69	70			

M20
B

1	2	3	4	5	6	7	8	9		
10	11	12	13	14	15	16	17	18	19	20

M74
BR

2	1
---	---

M150
W

16	15	14	13					
9	8	7	6	5	4	3	2	1

D4, D107
W

1	2
---	---



D11, D109
W

WKWA3832E

INTERIOR ROOM LAMP

LT-INT/L-05

 ⬡ FT ⬡ : WITH FOOT LAMPS


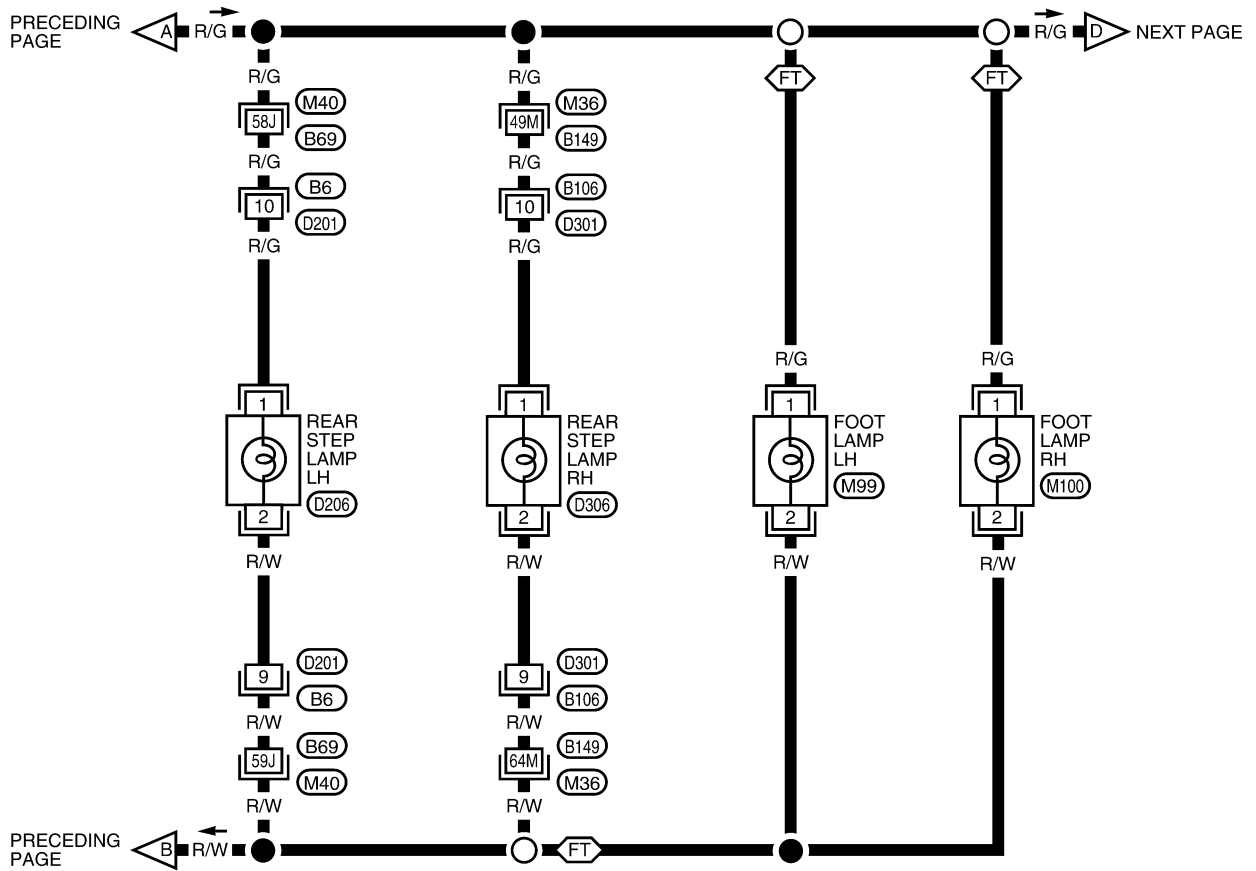


REFER TO THE FOLLOWING.
 (M36), (M40) - SUPER
 MULTIPLE JUNCTION (SMJ)

WKWA3833E

INTERIOR ROOM LAMP

 
LT-INT/L-06

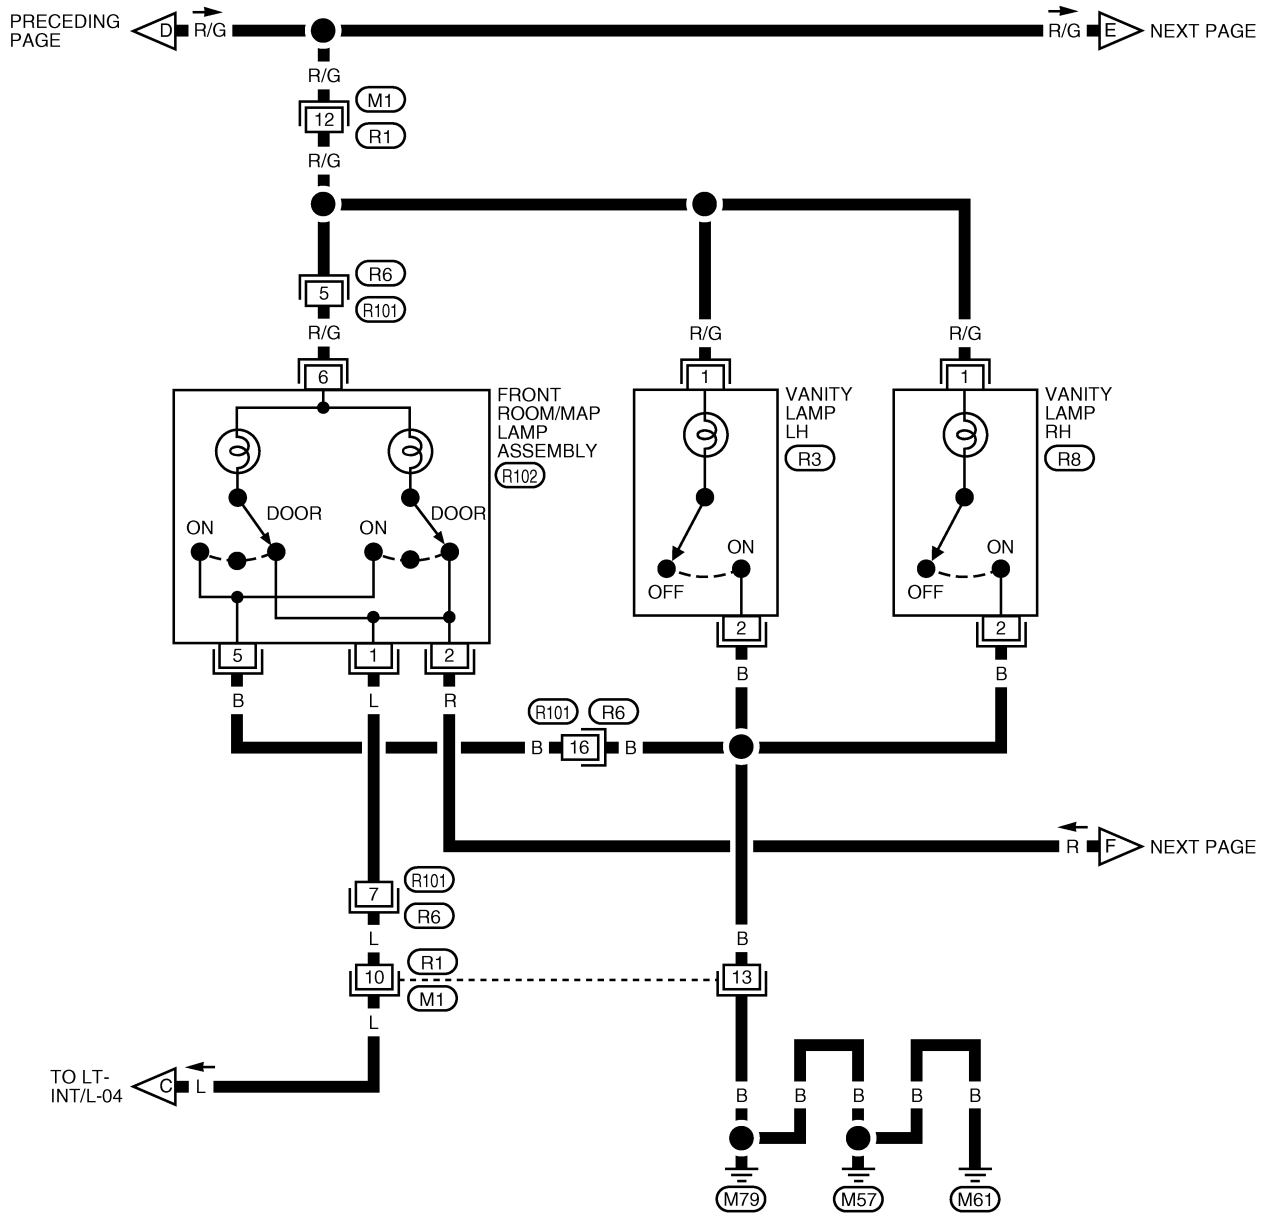







INTERIOR ROOM LAMP

LT-INT/L-07

PRECEDING PAGE

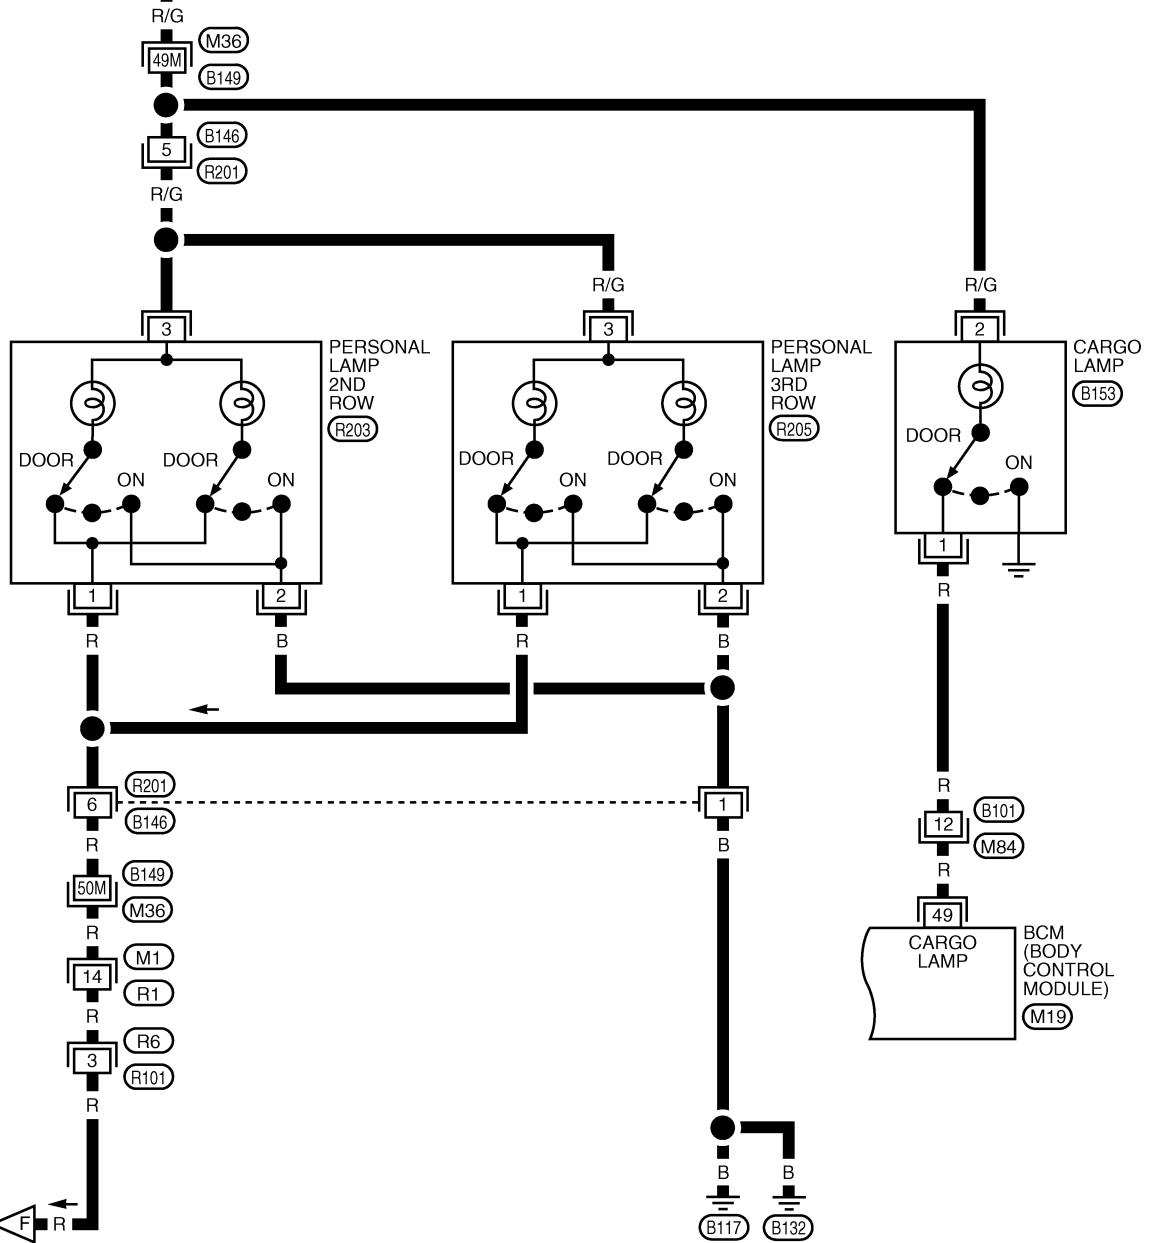

PRECEDING PAGE

      

REFER TO THE FOLLOWING.
 - SUPER MULTIPLE JUNCTION (SMJ)

WKWA3486E

INTERIOR ROOM LAMP

Terminals and Reference Values for BCM

EKS00AVV

Terminal No.	Wire color	Signal name	Measuring condition			Reference value (Approx.)	
			Ignition switch	Operation or condition			
1	BR/W	Ignition keyhole illumination signal	OFF	Door is locked. (SW OFF)		Battery voltage	
				Door is unlocked. (SW ON)		0V	
12	R/L	Front door switch RH signal	OFF	Front door switch RH	ON (open)	0V	
					OFF (closed)	Battery voltage	
13	GR	Rear door switch RH signal	OFF	Rear door switch RH	ON (open)	0V	
					OFF (closed)	Battery voltage	
22	W/V	Bus	—	—			
37	B/R	Key-in switch detection signal	OFF	Vehicle key is removed.		0V	
				Vehicle key is inserted.		Battery voltage	
38	W/L	Ignition power supply	ON	—		Battery voltage	
39	L	CAN-H	—	—		—	
40	P	CAN-L	—	—		—	
42	GR	Glass hatch ajar switch signal	OFF	Glass hatch ajar switch	ON (open)	0V	
					OFF (closed)	Battery voltage	
43	R/B	Back door switch signal ¹ Back door latch (door ajar switch) signal ²	OFF	Back door switch ¹ Back door latch (door ajar switch) ²	ON (open)	0V	
					OFF (closed)	Battery voltage	
47	SB	Front door switch LH signal	OFF	Front door switch LH	ON (open)	0V	
					OFF (closed)	Battery voltage	
48	R/Y	Rear door switch LH signal	OFF	Rear door switch LH	ON (open)	0V	
					OFF (closed)	Battery voltage	
49	R	Luggage lamp output	OFF	Any door is open (ON)		0V	
				All doors are closed (OFF)		Battery voltage	
56	R/G	Battery saver output signal	OFF	30 minutes after ignition switch is turned to OFF		0V	
			ON	—		Battery voltage	
57	Y/R	Battery power supply	OFF	—		Battery voltage	
62	R/W	Step/foot lamp signal	OFF	Any door is open (ON)		0V	
				All doors are closed (OFF)		Battery voltage	
63	L	Interior room/map lamp signal	OFF	Each interior lamp switch: DOOR position	Any door switch	ON (open)	0V
						OFF (closed)	Battery voltage
67	B	Ground	ON	—		0V	
70	W/B	Battery power supply	OFF	—		Battery voltage	

1 Without power back door

2 With power back door

INTERIOR ROOM LAMP

EKS00AVW

How to Proceed With Trouble Diagnosis

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-134, "System Description"](#).
3. Carry out the Preliminary Check. Refer to [LT-148, "Preliminary Check"](#).
4. Check symptom and repair or replace the cause of malfunction.
5. Does the interior room lamp operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

Preliminary Check

EKS00AVX

INSPECTION FOR POWER SUPPLY AND GROUND CIRCUIT

1. CHECK FUSES OR FUSIBLE LINK

Check for blown BCM fuses or fusible link.

Unit	Power source	Fuse and fusible link No.
BCM	Battery	f
		22
	Ignition switch ON or START position	59

Refer to [LT-140, "Wiring Diagram — INT/L —"](#).

OK or NG

OK >> GO TO 2.

NG >> If fuse or fusible link is blown, be sure to eliminate cause of malfunction before installing new fuse or fusible link. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#).

2. CHECK POWER SUPPLY CIRCUIT


1. Disconnect BCM connectors.
2. Check voltage between BCM connector and ground.

BCM (+)		(-)	Ignition switch position	
Connector	Terminal		OFF	ON
M18	38	Ground	0V	Battery voltage
			Battery voltage	Battery voltage
M20	57		Battery voltage	Battery voltage
	70		Battery voltage	Battery voltage

OK or NG

OK >> GO TO 3.

NG >> Check harness for open between BCM and fuse or fusible link.

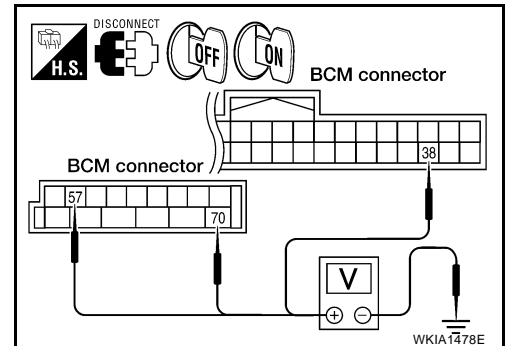

3. CHECK GROUND CIRCUIT


Check continuity between BCM and ground.

BCM		Continuity
Connector	Terminal	
M20	67	Ground Yes

OK or NG

OK >> Inspection End.

NG >> Check harness ground circuit.

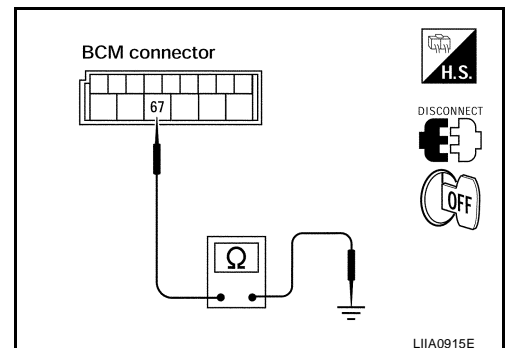

INTERIOR ROOM LAMP

CONSULT-II Function (BCM)

EKS00AVY

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


BCM diagnostic test item	Diagnostic mode	Description
Inspection by part	WORK SUPPORT	Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed.
	DATA MONITOR	Displays BCM input/output data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
	SELF-DIAG RESULTS	Displays BCM self-diagnosis results.
	CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
	ECU PART NUMBER	BCM part number can be read.
	CONFIGURATION	Performs BCM configuration read/write functions.

CONSULT-II OPERATION


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.


1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn ignition switch ON.

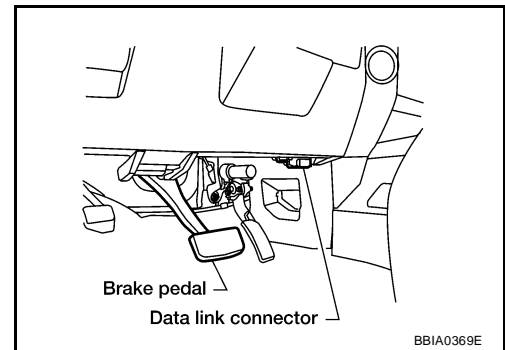

2. Touch "START (NISSAN BASED VHCL)".

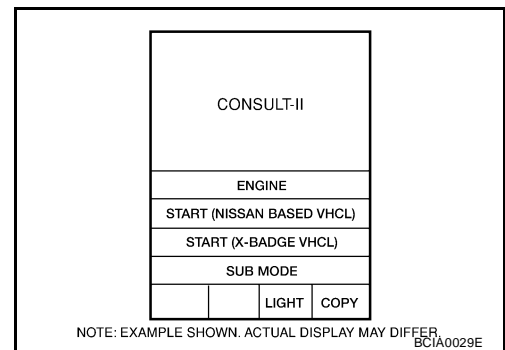


3. Touch "BCM" on "SELECT SYSTEM" screen. If "BCM" is not indicated, go to [GI-39, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

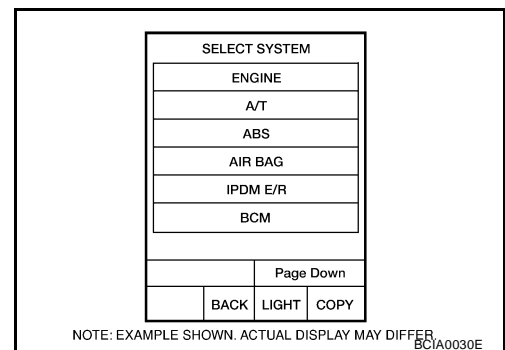

INTERIOR ROOM LAMP

4. Touch "INT LAMP" on "SELECT TEST ITEM" screen.

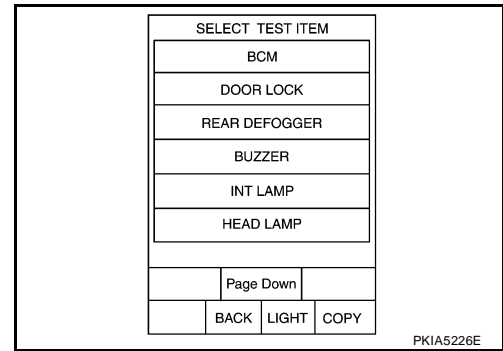

WORK SUPPORT

Operation Procedure

1. Touch "INT LAMP" on "SELECT TEST ITEM" screen.
2. Touch "WORK SUPPORT" on "SELECT DIAG MODE" screen.
3. Touch "SET I/L D-UNLCK INTCON" on "SELECT WORK ITEM" screen.
4. Touch "START".
5. Touch "CHANGE SETT".
6. The setting will be changed and "CUSTOMIZING COMPLETED" will be displayed.
7. Touch "END".

Display Item List

Item	Description	CONSULT-II
SET I/L D-UNLCK INTCON	The 30 seconds operating function of the interior room lamps and the ignition keyhole illumination can be selected when front door LH is released (unlocked).	ON/OFF
ROOM LAMP ON TIME SET	The time in order to escalate illumination can be adjusted when the interior room lamps and the ignition keyhole illumination is turned on.	MODE 1 - 7
ROOM LAMP OFF TIME SET	The time in order to diminish illumination can be adjusted when the interior room lamps and the ignition keyhole illumination is turned off.	MODE 1 - 7

Reference between "MODE" and "TIME" for "TURN ON/OFF".

MODE	1	2	3	4	5	6	7
Time (sec.)	0.5	1	2	3	4	5	0

DATA MONITOR

Operation Procedure

1. Touch "INT LAMP" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on "SELECT MONITOR ITEM" screen.

ALL SIGNALS	Monitors all the signals.
SELECTION FROM MENU	Selects and monitors the individual signal.

4. Touch "START".
5. When "SELECTION FROM MENU" is selected, touch items to be monitored. When "ALL SIGNALS" is selected, all the items will be monitored.
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

INTERIOR ROOM LAMP

Display Item List

Monitor item	Contents
IGN ON SW "ON/OFF"	Displays "IGN position (ON)/OFF, ACC position (OFF)" judged from the ignition switch signal.
KEY ON SW "ON/OFF"	Displays "Key inserted (ON)/key removed (OFF)" status judged from the key switch signal.
DOOR SW-DR "ON/OFF"	Displays status of the front door LH as judged from the front door switch LH signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-AS "ON/OFF"	Displays "Door open (ON)/Door closed (OFF)" status, determined from front door switch RH signal.
DOOR SW-RR "ON/OFF"	Displays "Door open (ON)/Door closed (OFF)" status, determined from rear door switch RH signal.
DOOR SW-RL "ON/OFF"	Displays "Door open (ON)/Door closed (OFF)" status, determined from rear door switch LH signal.
BACK DOOR SW "ON/OFF"	Displays "Door open (ON)/Door closed (OFF)" status, determined from back door switch signal.
KEY CYL LK-SW "ON/OFF"	Displays "Door locked (ON)" status, determined from key cylinder lock switch in front door LH.
KEY CYL UN-SW "ON/OFF"	Displays "Door unlocked (OFF)" status, determined from key cylinder lock switch in front door LH.
CDL LOCK SW "ON/OFF"	Displays "Door locked (ON)/Door unlocked (OFF)" status, determined from locking detection switch in front door LH.
CDL UNLOCK SW "ON/OFF"	Displays "Door unlocked (OFF)" status, determined from locking detection switch in front door RH.
KEYLESS LOCK "ON/OFF"	Displays "Locked (ON)/Other (OFF)" status, determined from lock signal.
KEYLESS UNLOCK "ON/OFF"	Displays "Unlocked (ON)/Other (OFF)" status, determined from unlock signal.

ACTIVE TEST

Operation Procedure

1. Touch "INT LAMP" on "SELECT TEST ITEM" screen.
2. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
3. Touch item to be tested and check operation of the selected item.
4. During the operation check, touching "BACK" or "OFF" deactivates the operation.

Display Item List

Test item	Description
INT LAMP	Interior room lamp can be operated by any ON-OFF operations.
IGN ILLUM	Ignition keyhole illumination can be operated by ON-OFF operation.

Room/Map/Personal Lamp Control Does Not Operate

EKS00AVZ

1. CHECK EACH SWITCH

Select "BCM" on CONSULT-II. With "INT LAMP" data monitor, make sure switches listed in display item list turn ON-OFF linked with switch operation. Refer to [LT-151, "Display Item List"](#) for switches and their functions.

OK or NG

- OK >> GO TO 2.
 NG >> Inspect malfunctioning switch system.

DATA MONITOR	
MONITOR	
IGN ON SW	ON
KEY ON SW	ON
DOOR SW-DR	ON
DOOR SW-AS	ON
DOOR SW-RR	OFF
DOOR SW-RL	OFF
BACK DOOR SW	OFF
KEY CYL LK-SW	OFF
KEY CYL UN-SW	OFF

SKIA5930E

INTERIOR ROOM LAMP

Personal Lamp Control Does Not Operate (Room/Map Lamps Operate)

EKS00AW0

1. CHECK EACH DOOR SWITCH

Select "BCM" on CONSULT-II. With "INT LAMP" data monitor, make sure switches listed in display item list turn ON-OFF linked with switch operation. Refer to [LT-135, "SWITCH OPERATION"](#) for switches and their functions.

OK or NG

- OK >> GO TO 2.
- NG >> Inspect malfunctioning door switch.

DATA MONITOR	
MONITOR	
IGN ON SW	ON
KEY ON SW	ON
DOOR SW-DR	ON
DOOR SW-AS	ON
DOOR SW-RR	OFF
DOOR SW-RL	OFF
BACK DOOR SW	OFF
KEY CYL LK-SW	OFF
KEY CYL UN-SW	OFF

SKIA5930E


2. CHECK PERSONAL LAMP OUTPUT

1. Turn ignition switch OFF.
2. Confirm lamp switch is in the DOOR position.
3. Disconnect personal lamp connector.
4. Open any door.
5. Check voltage between personal lamp harness connector terminal 3 and ground.

3 - Ground : Battery voltage should exist.

OK or NG

- OK >> GO TO 3.
- NG >> Repair harness or connector.

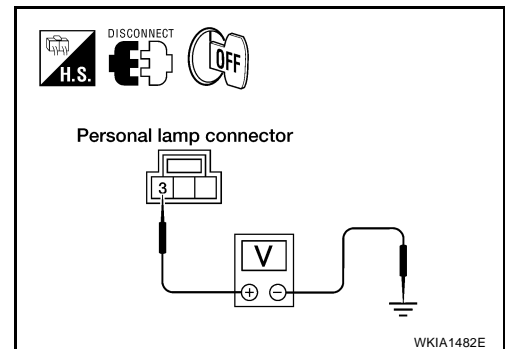


3. CHECK PERSONAL LAMP CONTROL CIRCUIT

1. Disconnect front room/map lamp assembly connector.
2. Check continuity between front room/map lamp assembly harness connector R102 terminal 2 and personal lamp harness connector terminal 1.

2 - 1 : Continuity should exist.

OK or NG

- OK >> Replace personal lamp.
- NG >> Repair harness or connector.

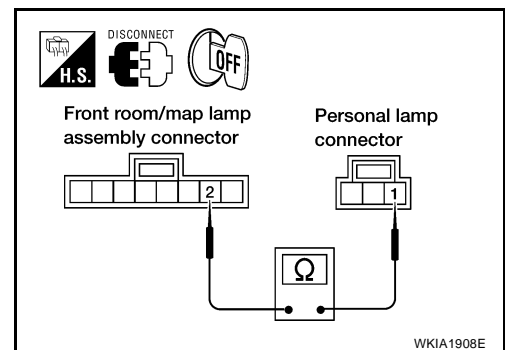

INTERIOR ROOM LAMP

EKS00AW1

All Step/Foot/Puddle Lamps Do Not Operate

1. CHECK EACH DOOR SWITCH

Select "BCM" on CONSULT-II. With "INT LAMP" data monitor, make sure switches listed in display item list turn ON-OFF linked with switch operation. Refer to [LT-151, "Display Item List"](#) for switches and their functions.

OK or NG

- OK >> GO TO 2.
- NG >> Inspect malfunctioning switch system.

DATA MONITOR	
MONITOR	
IGN ON SW	ON
KEY ON SW	ON
DOOR SW-DR	ON
DOOR SW-AS	ON
DOOR SW-RR	OFF
DOOR SW-RL	OFF
BACK DOOR SW	OFF
KEY CYL LK-SW	OFF
KEY CYL UN-SW	OFF

SKIA5930E


2. CHECK STEP LAMP POWER SUPPLY

1. Turn ignition switch OFF.
2. Check voltage between front step lamp LH harness connector D11 terminal 1 and ground.

1 - Ground : **Battery voltage should exist.**

OK or NG

- OK >> GO TO 3.
- NG >> GO TO 4.

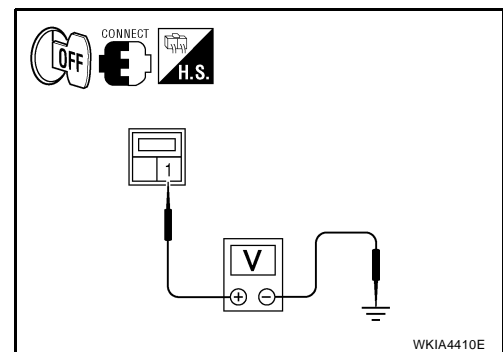


3. CHECK STEP LAMP CONTROL CIRCUIT

1. Disconnect BCM connector and front step lamp LH connector.
2. Check continuity between BCM harness connector M20 terminal 62 (A) and front step lamp LH harness connector D11 terminal 2 (B).

2 - 62 : **Continuity should exist.**

OK or NG

- OK >> Replace BCM if front step lamp does not work after setting the connector again. Refer to [BCS-20, "Removal and Installation"](#).
- NG >> Repair harness or connector.

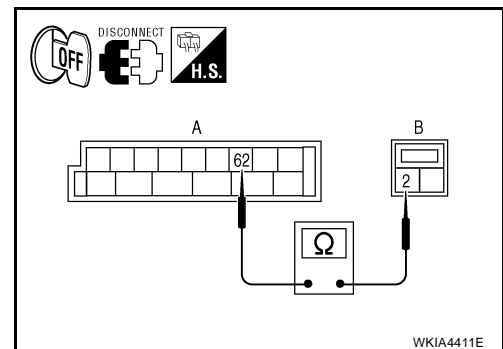


4. CHECK STEP LAMP CIRCUIT

1. Disconnect BCM connector and front step lamp LH connector.
2. Check continuity between BCM harness connector M20 terminal 56 (A) and front step lamp LH harness connector D11 terminal 1 (B).

1 - 56 : **Continuity should exist.**

OK or NG

- OK >> Replace BCM if front step lamp does not work after setting the connector again. Refer to [BCS-20, "Removal and Installation"](#).
- NG >> Repair harness or connector.

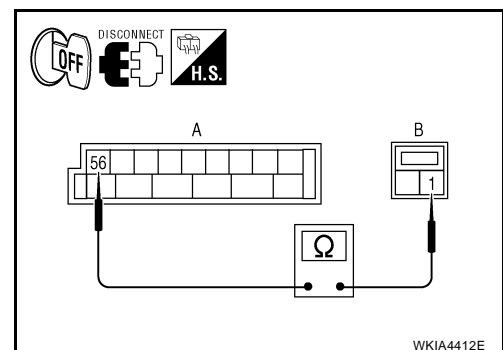

INTERIOR ROOM LAMP

All Interior Room Lamps Do Not Operate

EKS00AW2

1. CHECK POWER SUPPLY CIRCUIT


1. All interior room lamp switches are OFF.
2. Turn ignition switch ON.
3. Check voltage between BCM harness connector M20 terminal 56 and ground.

56 - Ground : Battery voltage should exist.

OK or NG

OK >> Repair harness or connector. To prevent making a short circuit, be sure to disconnect battery negative cable after repairing harness, and then reconnect.

NG >> Replace BCM. Refer to [BCS-20, "Removal and Installation"](#).

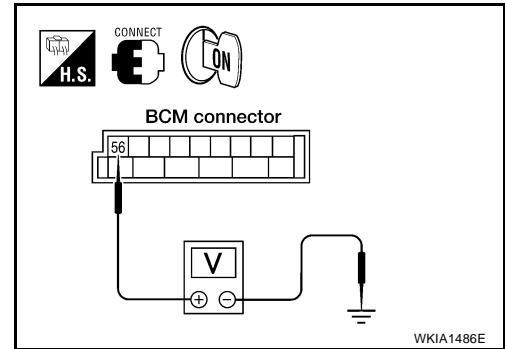

Ignition Keyhole Illumination Control Does Not Operate

EKS00D6A

1. CHECK EACH SWITCH

Select "BCM" on CONSULT-II. With "INT LAMP" data monitor, make sure switches listed in display item list turn ON-OFF linked with switch operation. Refer to [LT-151, "Display Item List"](#) for switches and their functions.

OK or NG

OK >> GO TO 2.

NG >> Inspect malfunctioning switch system.

DATA MONITOR	
MONITOR	
IGN ON SW	ON
KEY ON SW	ON
DOOR SW-DR	ON
DOOR SW-AS	ON
DOOR SW-RR	OFF
DOOR SW-RL	OFF
BACK DOOR SW	OFF
KEY CYL LK-SW	OFF
KEY CYL UN-SW	OFF

Reference code: SKIA5930E

2. ACTIVE TEST

1. Select "BCM" on CONSULT-II. Select "INT LAMP".
2. Select "IGN ILLUM" active test to make sure lamp operates.

Ignition keyhole illumination should turn ON.

OK or NG

OK >> Replace BCM. Refer to [BCS-20, "Removal and Installation"](#).

NG >> GO TO 3.

ACTIVE TEST	
IGN ILLUM	ON
	OFF

Reference code: SKIA3992E

3. CHECK IGNITION KEYHOLE ILLUMINATION INPUT


1. Check voltage between ignition keyhole illumination harness connector M150 terminal 1 and ground.

1 - Ground : Battery voltage should exist.

OK or NG

OK >> GO TO 4.

NG >> GO TO 6.

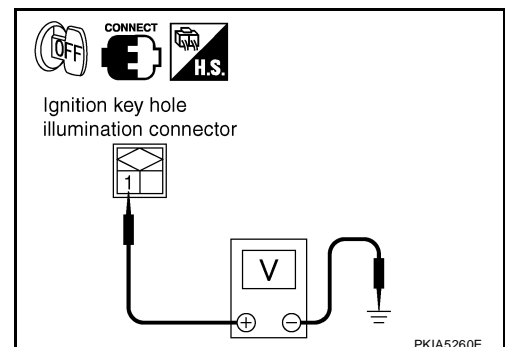

INTERIOR ROOM LAMP


4. CHECK IGNITION KEYHOLE ILLUMINATION BULB

1. Turn ignition switch OFF.
2. Disconnect ignition keyhole illumination connector.
3. Check continuity between ignition keyhole illumination terminals 1 and 2.

1 - 2 : Continuity should exist.

OK or NG

- OK >> GO TO 5.
NG >> Replace ignition keyhole illumination.

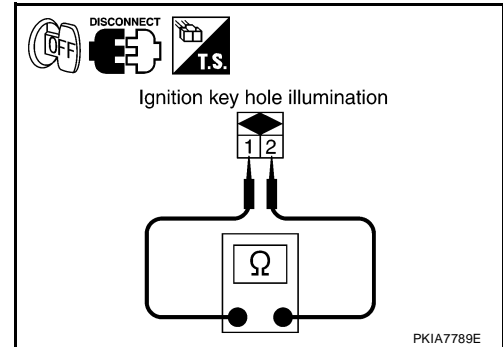


5. CHECK IGNITION KEYHOLE ILLUMINATION CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between BCM harness connector M18 terminal 1 and ignition keyhole illumination harness connector M150 terminal 2.

1 - 2 : Continuity should exist.

OK or NG

- OK >> Replace BCM if ignition keyhole illumination does not work after setting the connector again. Refer to [BCS-20, "Removal and Installation"](#).
- NG >> Repair harness or connector.

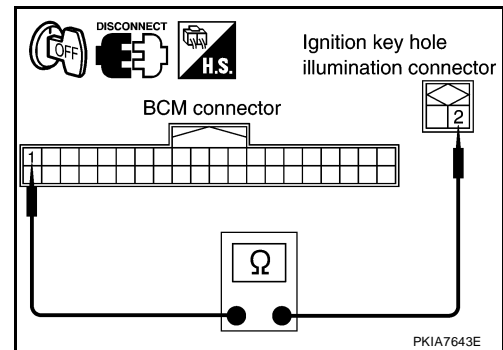


6. CHECK IGNITION KEYHOLE ILLUMINATION CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector and ignition keyhole illumination connector.
3. Check continuity between BCM harness connector M20 (A) terminal 56 and ignition keyhole illumination harness connector M150 (B) terminal 1.

1 - 56 : Continuity should exist.

OK or NG

- OK >> Replace BCM if ignition keyhole illumination does not work after setting the connector again. Refer to [BCS-20, "Removal and Installation"](#).
- NG >> Repair harness or connector.

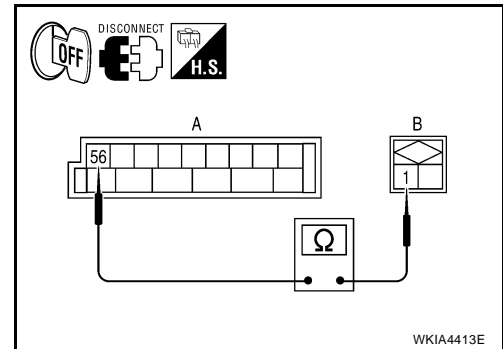


INTERIOR ROOM LAMP

Bulb Replacement PUDDLE LAMP


EKS00GAY

Removal


1. Depress tab (1) on outer edge of puddle lamp housing.

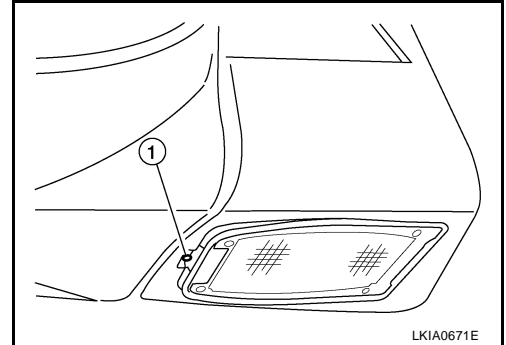

2. Lower outer edge and slide puddle lamp housing out of door mirror.
3. Twist and pull to remove puddle lamp socket (1) from puddle lamp housing (2).

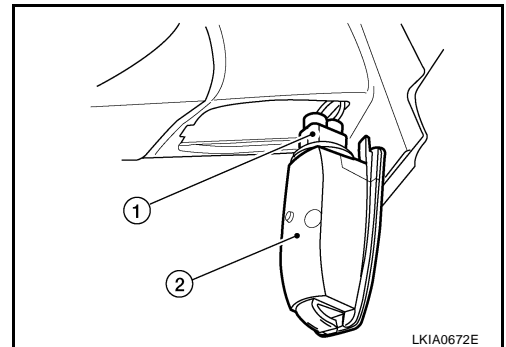

4. Pull to remove puddle lamp bulb (2) from puddle lamp (1) socket.

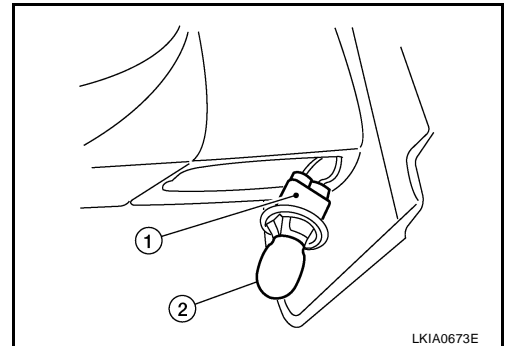

Installation

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
LT
L
M


ILLUMINATION

ILLUMINATION

PFP:27545

Component Parts and Harness Connector Location

EKS00AW3

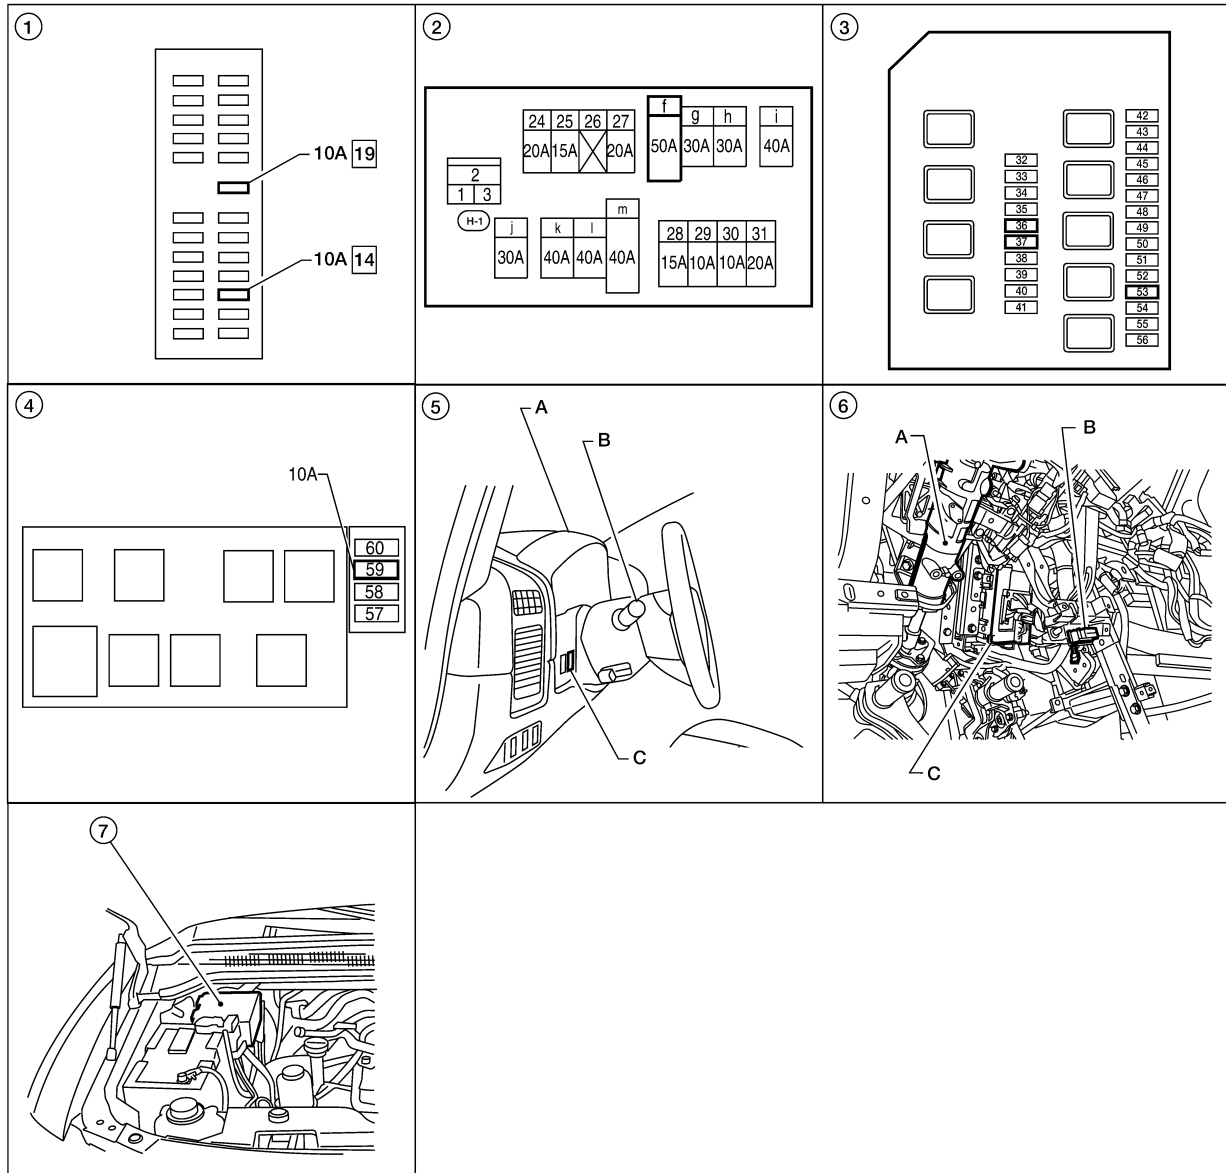

WKIA4538E

1. Fuse Block (J/B)
2. Fuse and fusible link box
3. IPDM E/R fuse layout
4. Fuse and relay box
5. A. Combination meter M24
B. Combination switch (lighting switch) M28
C. Illumination control switch M5
6. A. Steering column
B. Data link connector M22
C. BCM M18, M19, M20
(View with instrument lower panel LH removed)
7. IPDM E/R E118, E119, E120, E121, E122, E123, E124

System Description

EKS00AW4

Control of the illumination lamps operation is dependent upon the position of the lighting switch (combination switch). When the lighting switch is placed in the 1ST or 2ND position (or if the auto light system is activated) the BCM (body control module) receives input signal requesting the illumination lamps to illuminate. This input signal is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The CPU (central processing unit) of the IPDM E/R controls the tail lamp relay coil. This relay, when energized, directs power to the illumination lamps, which then illuminate. Power is supplied at all times

ILLUMINATION

- to ignition relay, located in the IPDM E/R, and
- to tail lamp relay, located in the IPDM E/R, and
- through 50A fusible link (letter f , located in the fuse and fusible link box)
- to BCM terminal 70, and
- through 20A fuse (No. 53, located in the IPDM E/R)
- to CPU of the IPDM E/R, and
- through 10A fuse [No.19, located in fuse block (J/B)]
- to combination meter terminal 8.

With the ignition switch in the ON or START position, power is supplied

- to ignition relay, located in the IPDM E/R, and
- through 10A fuse (No. 59, located in the fuse and relay box)
- to BCM terminal 38, and
- through 10A fuse [No. 14, located in the fuse block (J/B)]
- to combination meter terminal 24.

Ground is supplied

- to BCM terminal 67 and
- to combination meter terminal 17
- through grounds M57, M61 and M79, and
- to IPDM E/R terminals 38 and 59
- through grounds E9, E15 and E24.

ILLUMINATION OPERATION BY LIGHTING SWITCH

With the lighting switch in the 1ST or 2ND position (or if the auto light system is activated), the BCM receives input signal requesting the illumination lamps to illuminate. This input signal is communicated to the IPDM E/R across the CAN communication lines. The CPU of the IPDM E/R controls the tail lamp relay coil, which, when energized, directs power

- through 10A fuse (No. 36, located in the IPDM E/R)
- through IPDM E/R terminal 49
- to illumination control switch terminal 1
- to power liftgate switch terminal 3 (with power back door)
- to front room/map lamp assembly (console box illumination) terminal 7
- to hazard switch terminal 7
- to rear sonar system OFF switch terminal 3 (with rear sonar system)
- to glove box lamp terminal 1
- to door mirror remote control switch terminal 16 (with power outside mirrors)
- to display control unit terminal 14 (with NAVI)
- to compass and thermometer terminal 4
- to 4WD shift switch terminal 7 (with 4-wheel drive)
- to front air control terminal 8 (front air control with display) or terminal 23 (front air control without display)
- to rear power vent window switch terminal 5 (with rear power vent windows)
- to DVD player terminal 12 (with DVD entertainment system)
- to NAVI control unit terminal 61 (with NAVI)
- to pedal adjusting switch terminal 5
- to electric brake (pre-wiring) terminal 4 (with trailer tow)
- to A/T device terminal 11
- to front heated seat switch LH and RH terminal 5 (with heated seats)
- to VDC OFF switch terminal 3
- to tow mode switch terminal 3, and
- through 10A fuse (No. 37, located in the IPDM E/R)
- through IPDM E/R terminal 57

A

B

C

D

E

F

G

H

I

J

LT

L

M

ILLUMINATION

- to AV switch terminal 3
- to audio unit terminal 8
- to rear air control switch terminal 1 and
- to rear audio remote control unit terminal 6.

Illumination is controlled

- through illumination control switch terminal 2
- to power liftgate switch terminal 4 (with power back door)
- to front room/map lamp assembly (console box illumination) terminal 8
- to AV switch terminal 4
- to hazard switch terminal 8
- to audio unit terminal 7
- to rear sonar system OFF switch terminal 4 (with rear sonar system)
- to 4WD shift switch terminal 8 (with 4-wheel drive)
- to front air control terminal 9 (front air control with display) or terminal 24 (front air control without display)
- to rear power vent window switch terminal 6 (with rear power vent windows)
- to DVD player terminal 10 (with DVD entertainment system)
- to pedal adjusting switch terminal 6
- to A/T device terminal 12
- to front heated seat switch LH and RH terminal 6 (with heated seats)
- to VDC OFF switch terminal 4
- to tow mode switch terminal 4 and
- to combination meter terminal 18.

Ground is supplied

- to illumination control switch terminal 3
- to glove box lamp terminal 2
- to door mirror remote control switch terminal 15 (with power outside mirrors)
- to display control unit terminal 3 (with NAVI)
- to compass and thermometer terminal 7 and
- to electric brake (pre-wiring) terminal 1 (with trailer tow)
- through grounds M57, M61 and M79, and
- to NAVI control unit terminal 1 (with NAVI)
- to rear air control terminal 3 and
- to rear audio remote control unit terminal 15
- through grounds B117 and B132.

With power and ground supplied, illumination lamps illuminate.

EXTERIOR LAMP BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 1ST or 2ND position (or if auto light system is activated), and the ignition switch is turned from ON or ACC to OFF, the battery saver control function is activated. Under this condition, the illumination lamps remain illuminated for 5 minutes, then the illumination lamps are turned off.

When the lighting switch is turned from OFF to 1ST or 2ND position (or if auto light system is activated) after illumination lamps are turned off by the battery saver control, the illumination lamps illuminate again. Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-II.

CAN Communication System Description


Refer to [LAN-25, "CAN COMMUNICATION"](#) .

EKS00AW5

ILLUMINATION

Schematic

EKS00AW6

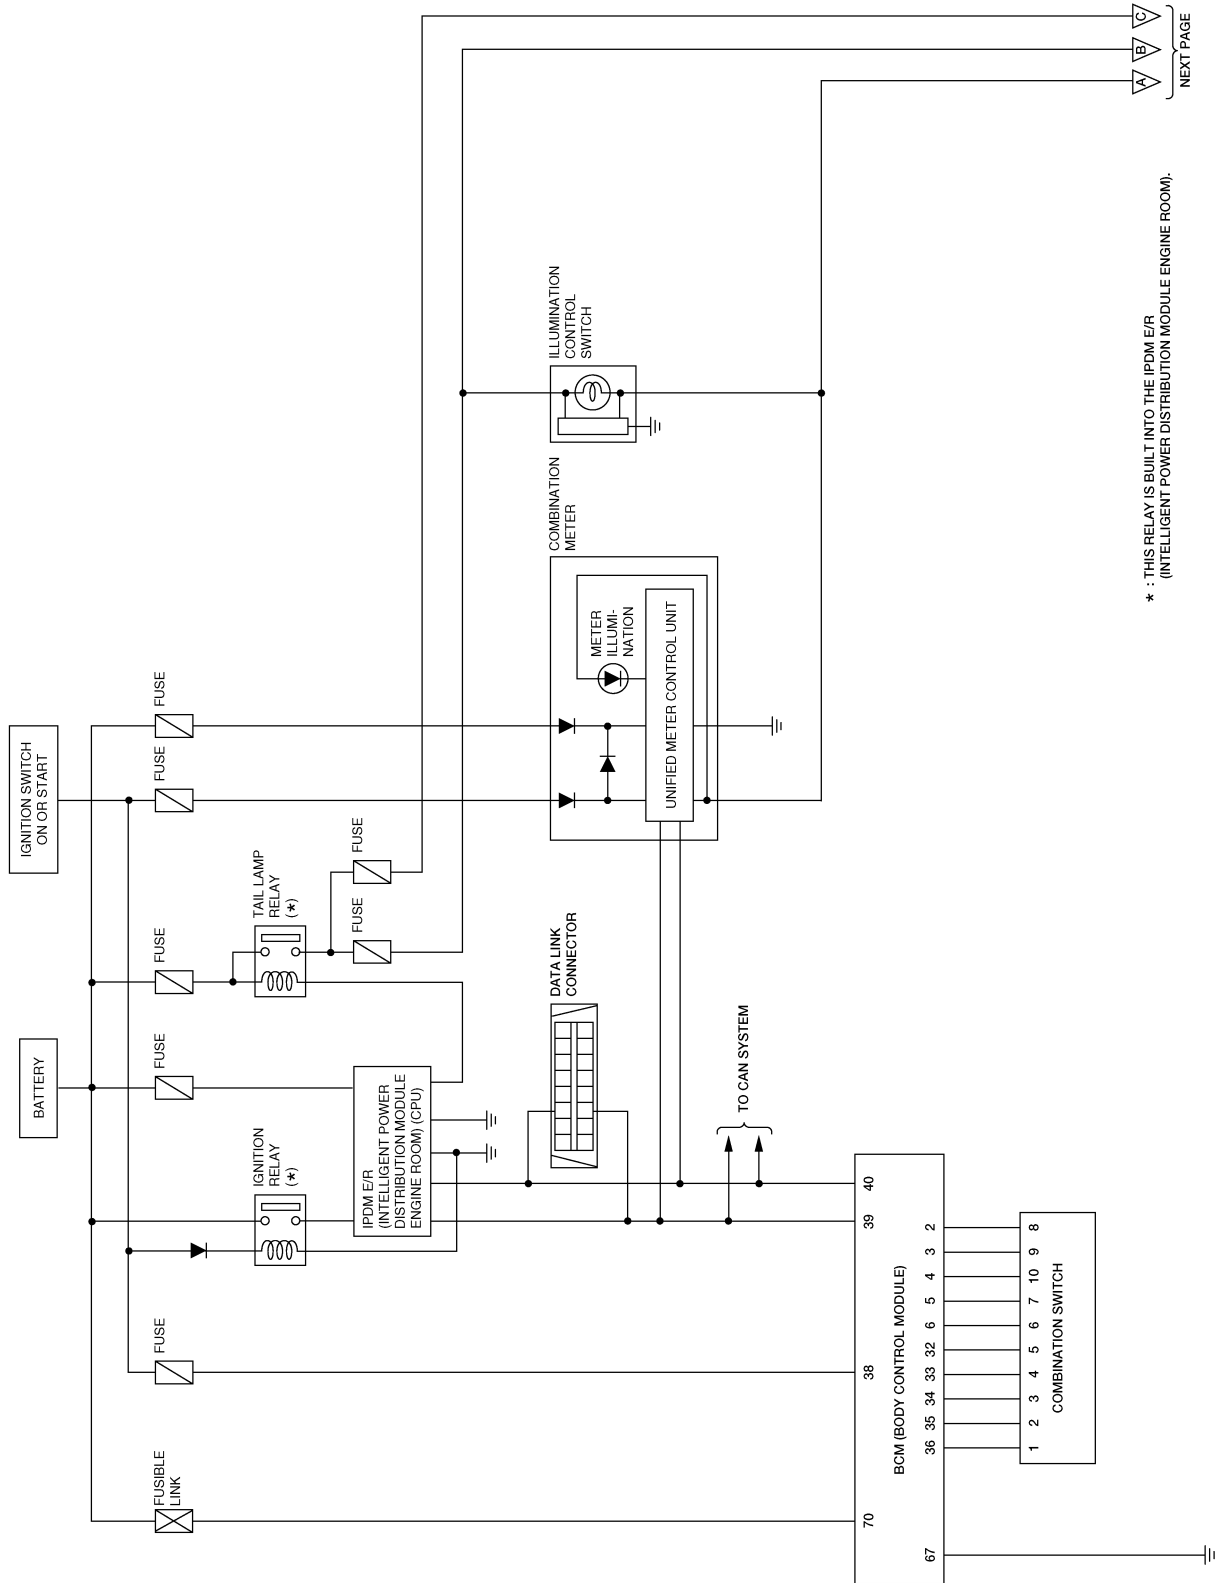


* : THIS RELAY IS BUILT INTO THE IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM).

NEXT PAGE
A
B
C
D
E
F
G
H
I
J
LT
L
M


WKWA3487E

ILLUMINATION

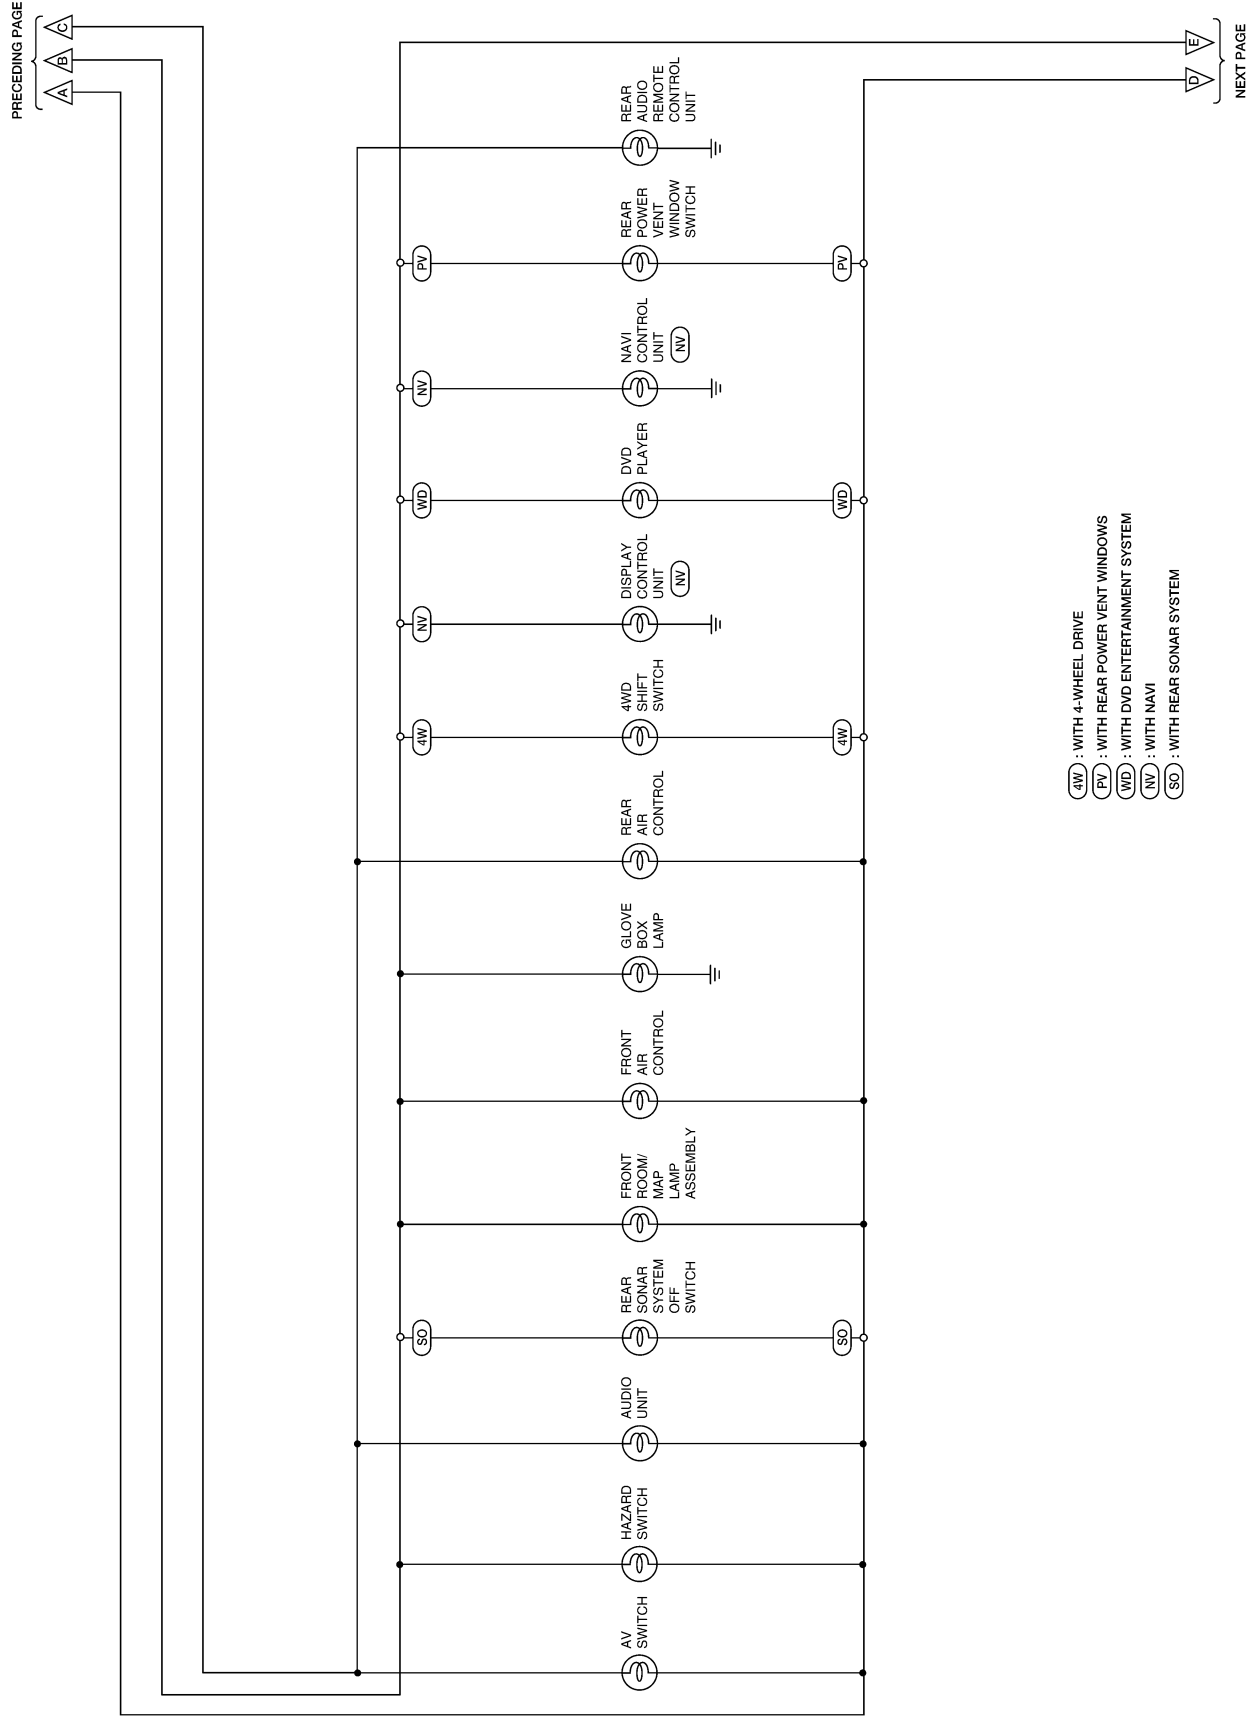


WKWA3834E

ILLUMINATION

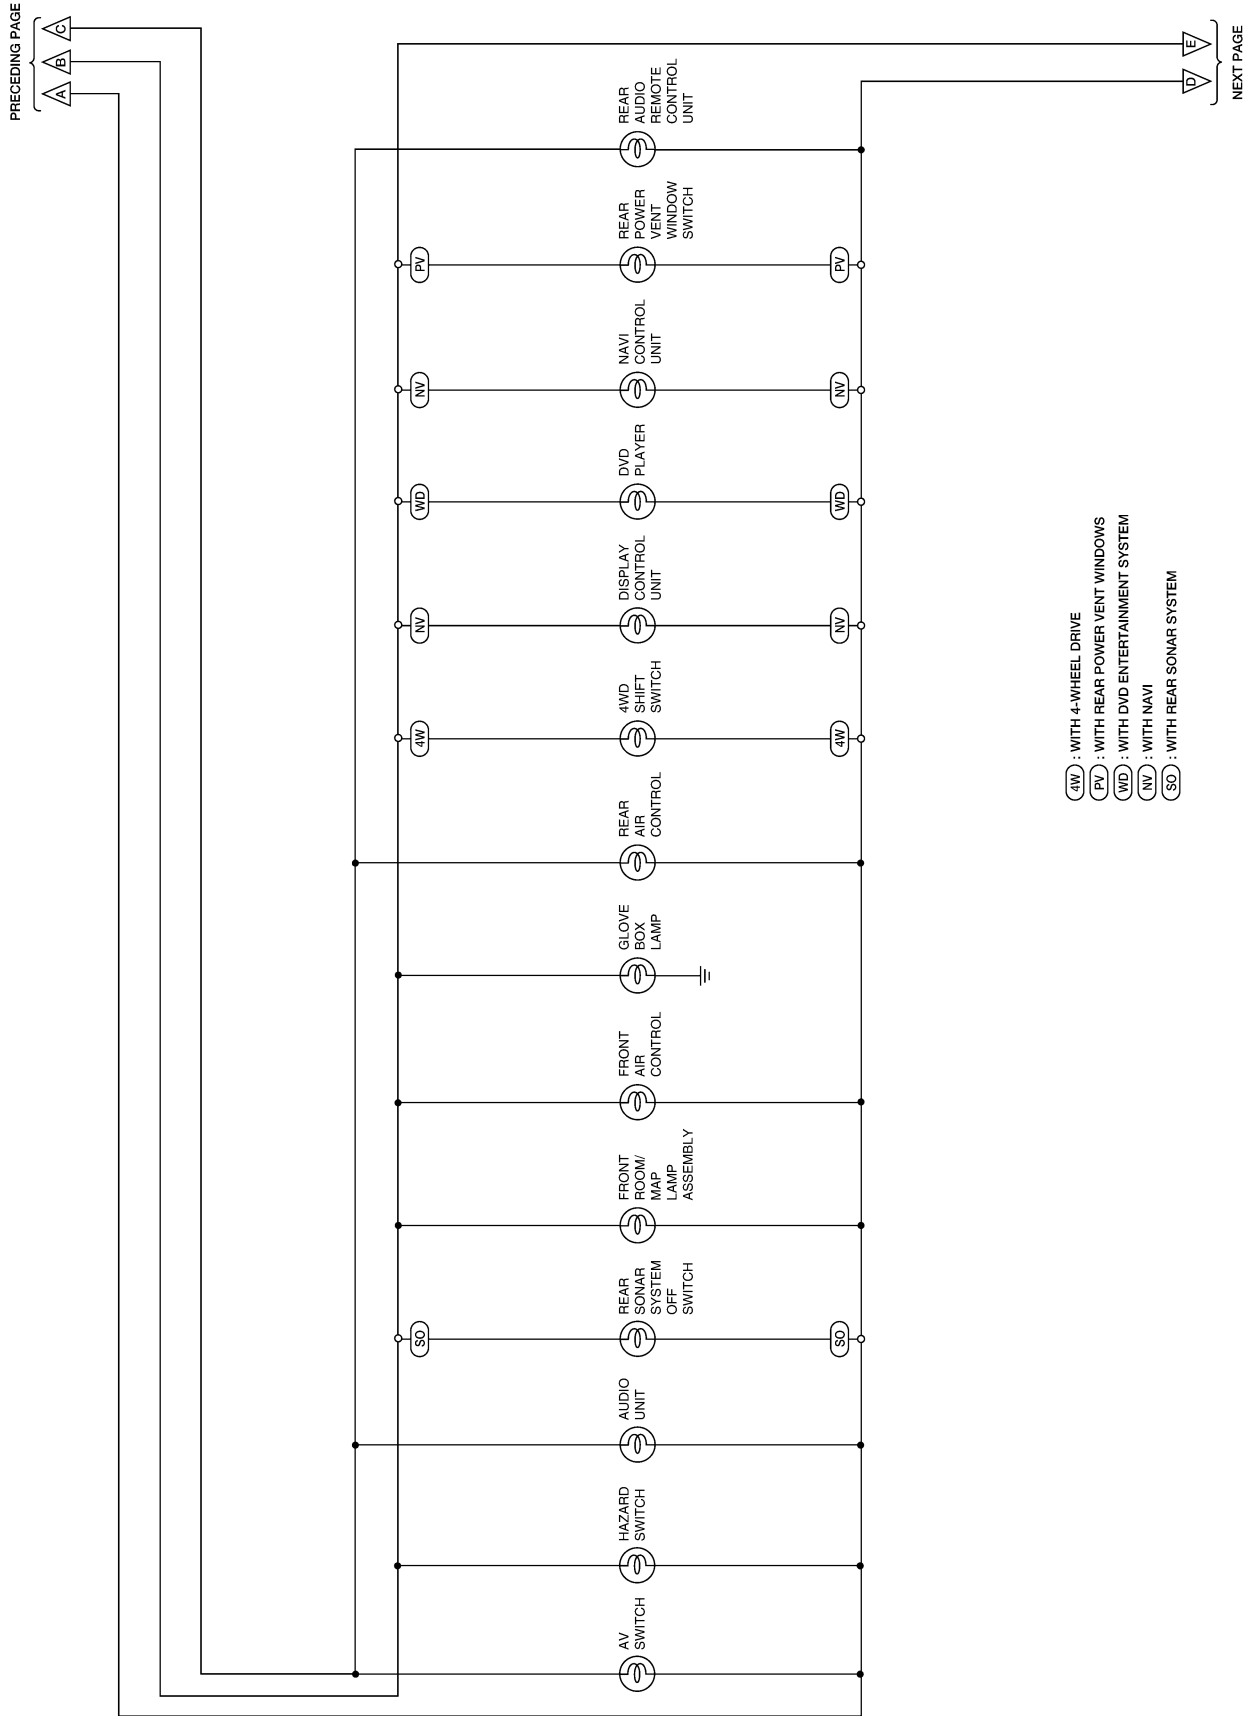

A
B
C
D
E
F
G
H
I
J
LT
L
M

ILLUMINATION

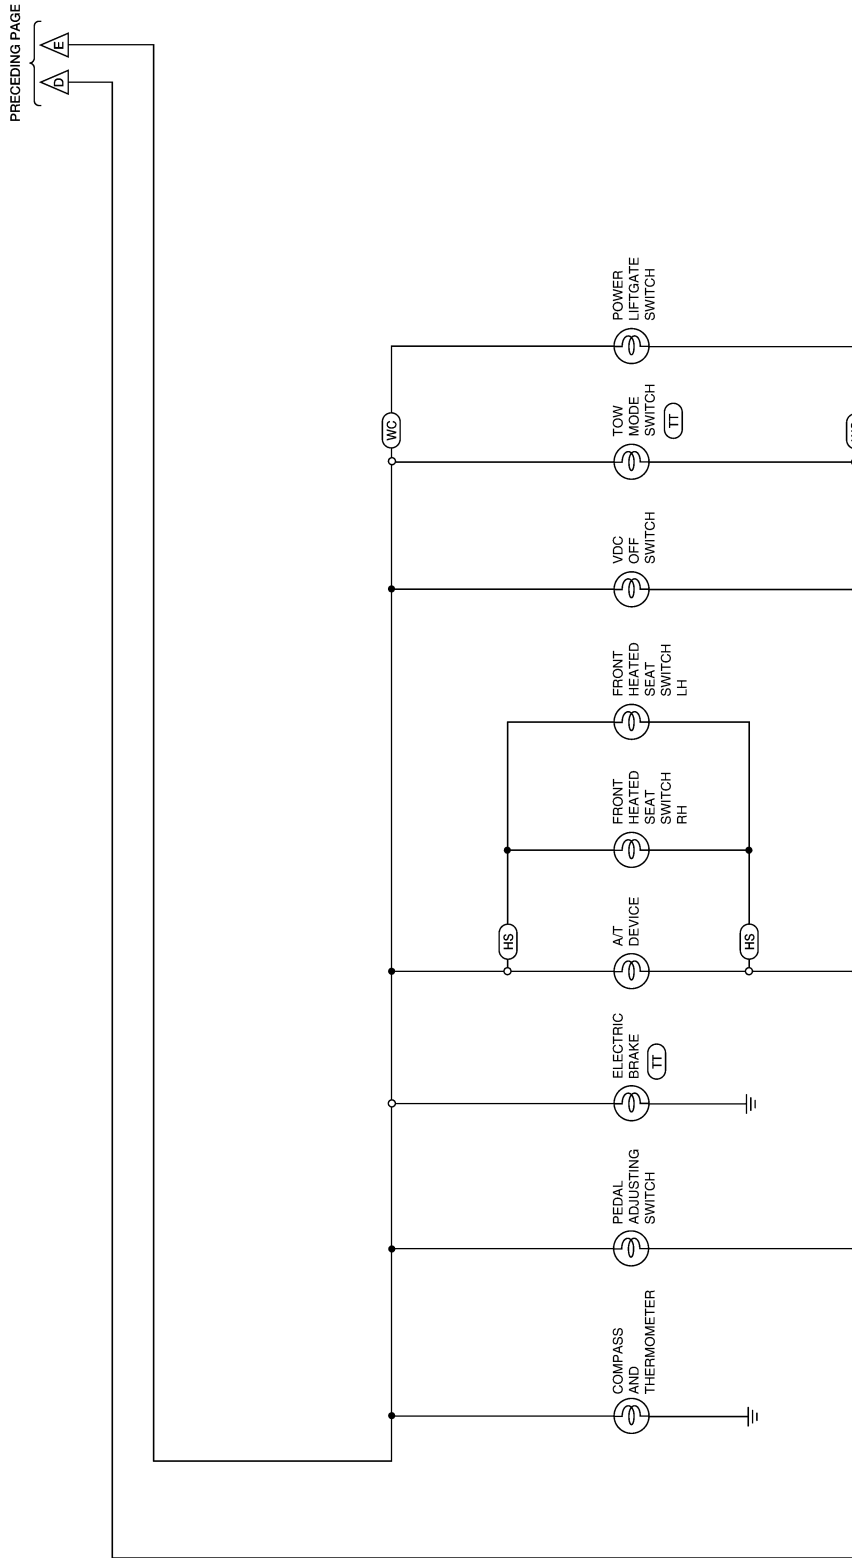

HS : WITH HEATED SEATS
 MC : WITH BACK DOOR AUTO CLOSURE SYSTEM
 TT : WITH TRAILER TOW

WKWA2437E


ILLUMINATION

Wiring Diagram — ILL —


EKS00D8B

LT-ILL-01

— : DATA LINE

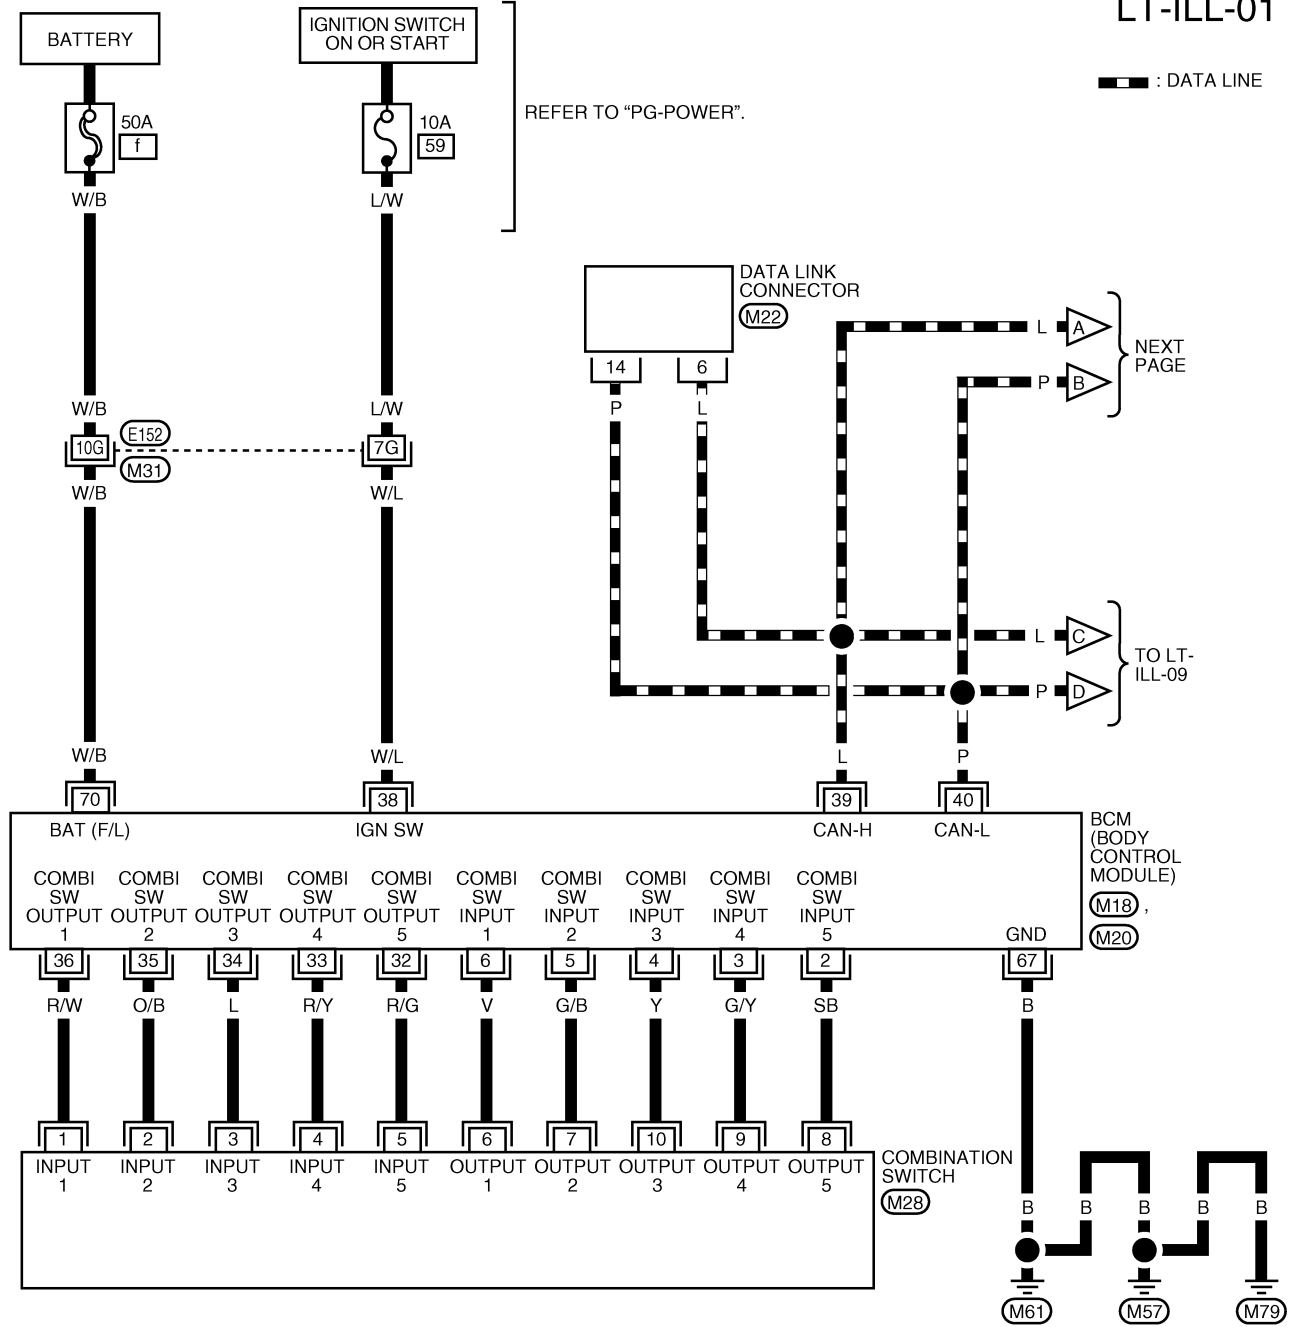


A
B
C
D
E
F
G
H
I
J
LT
L
M

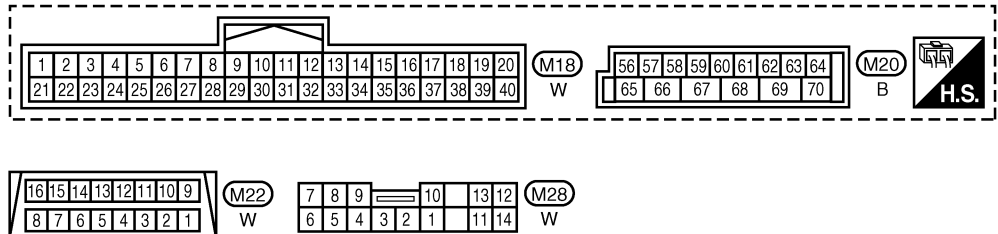

WKWA3488E


ILLUMINATION

LT-ILL-03

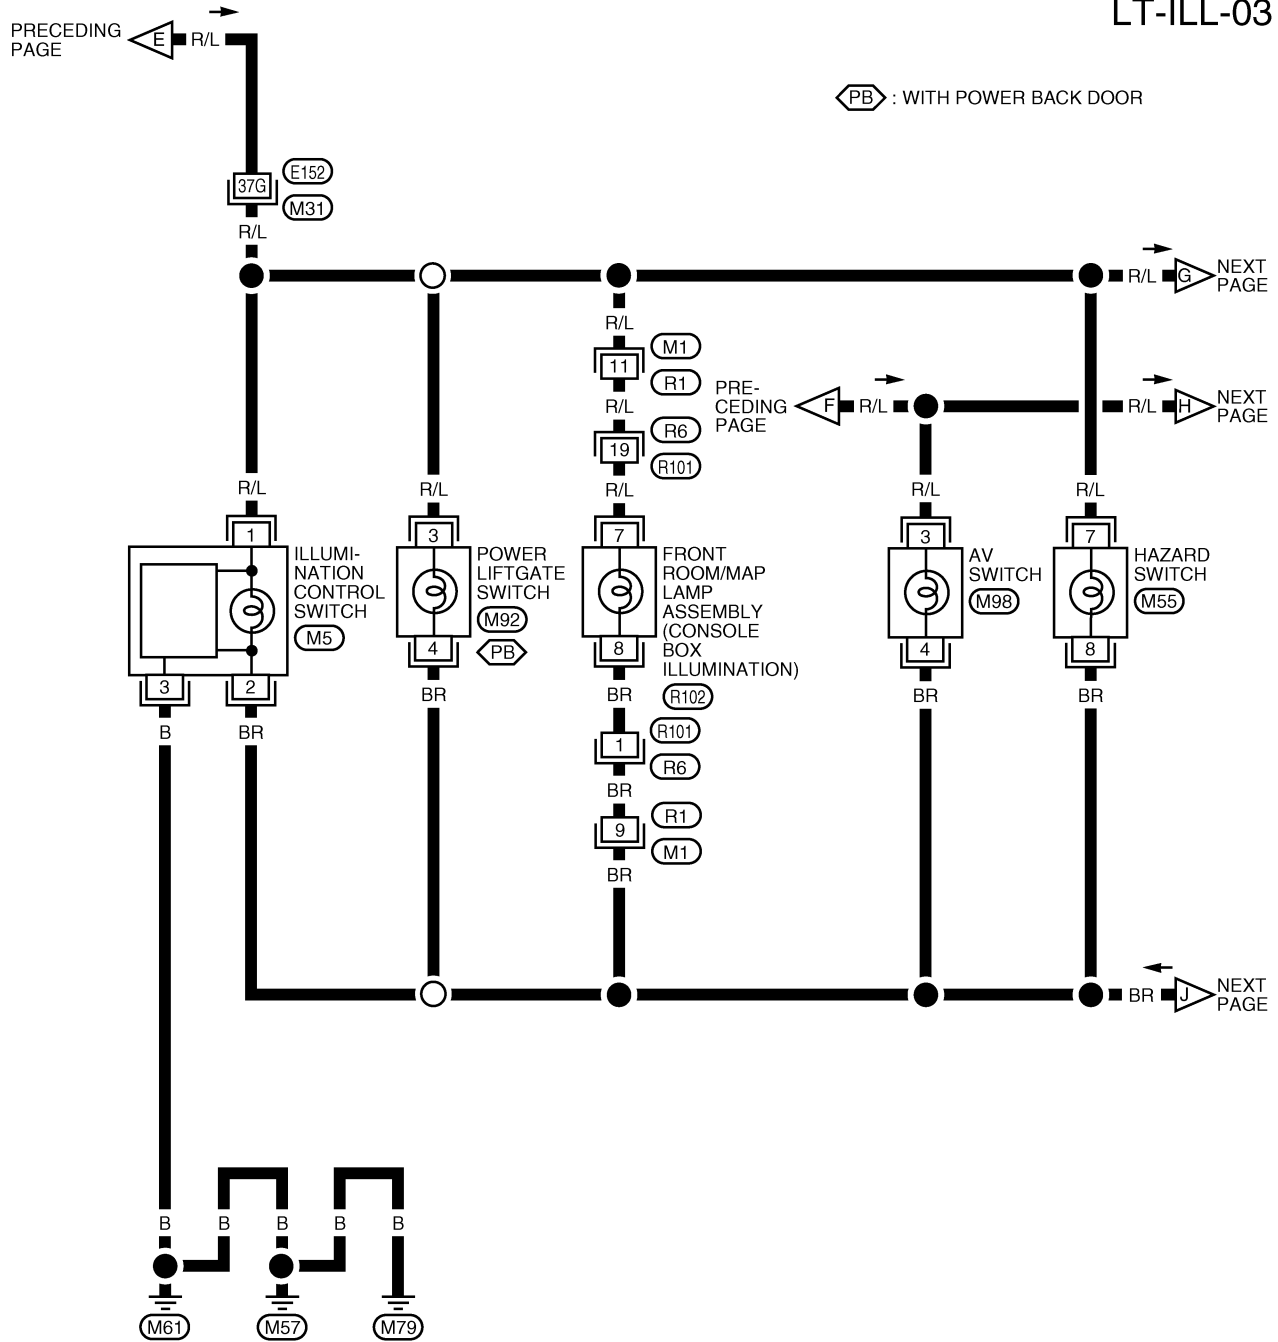

Ⓟ : WITH POWER BACK DOOR

A
B
C
D
E
F
G
H
I
J
LT
L
M

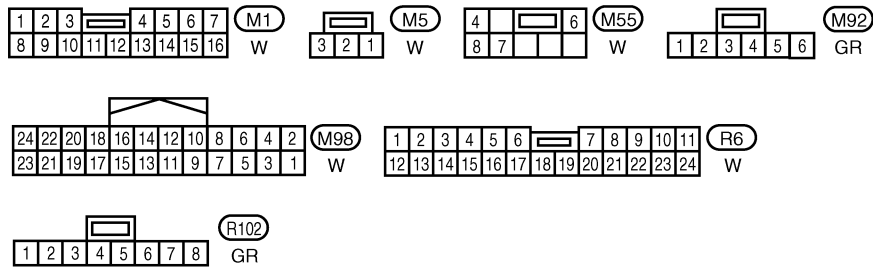

REFER TO THE FOLLOWING.
 Ⓜ31 - SUPER MULTIPLE JUNCTION (SMJ)




WKWA3489E

ILLUMINATION

LT-ILL-04

  SO : WITH REAR SONAR SYSTEM



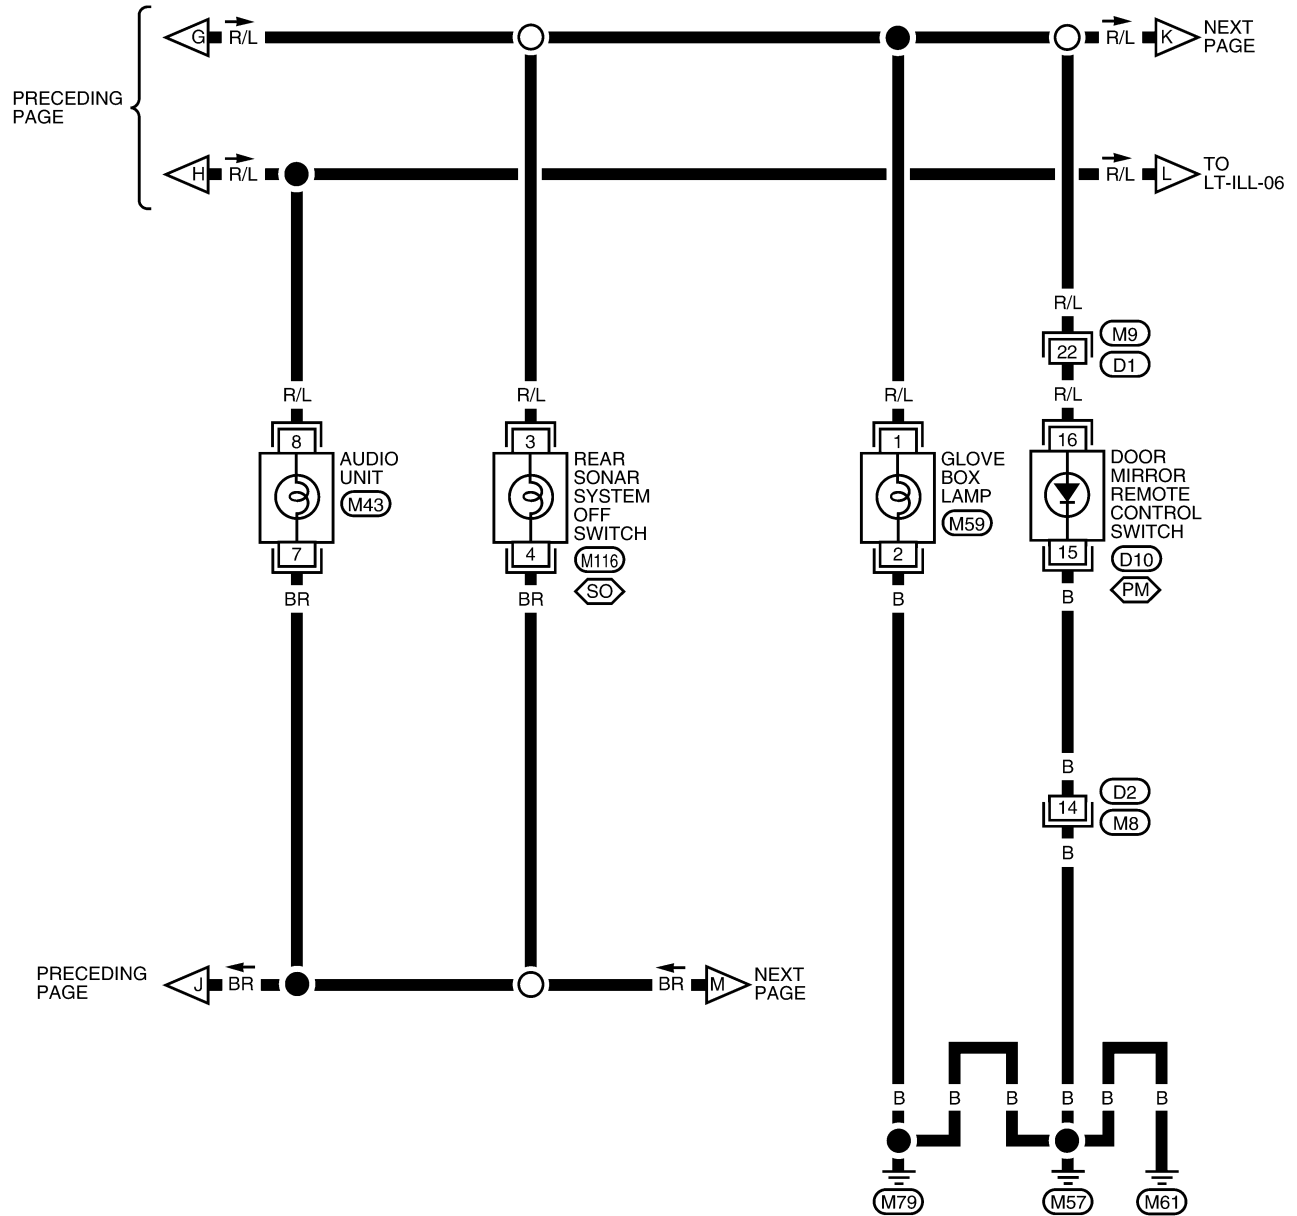

PM : WITH POWER OUTSIDE MIRRORS








WKWA3490E


ILLUMINATION

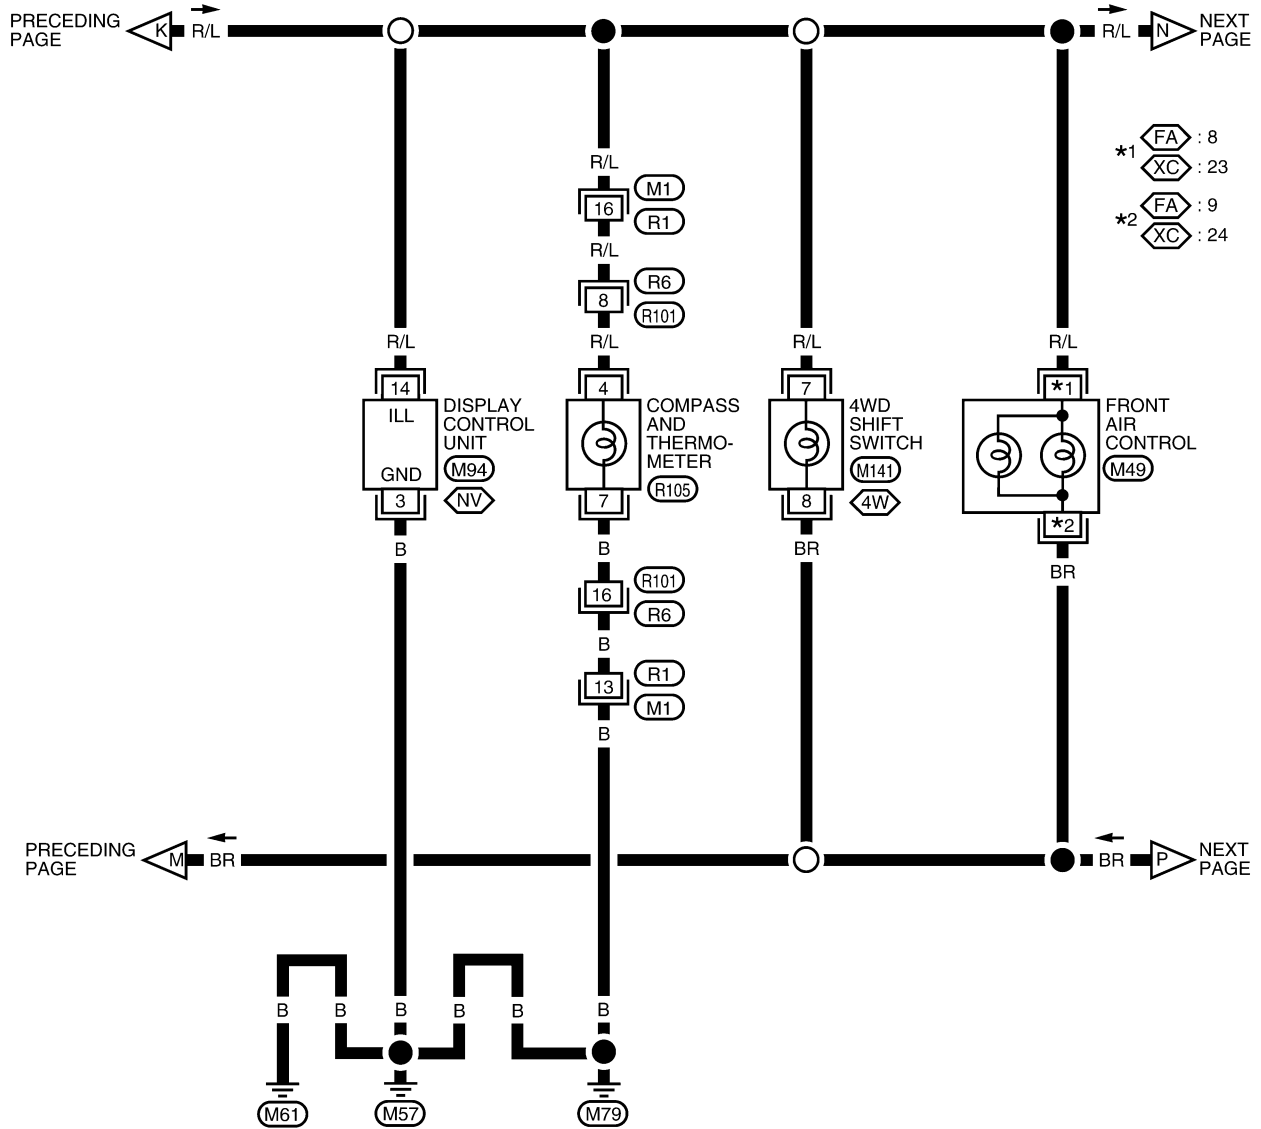LT-ILL-05

-  : WITH 4-WHEEL DRIVE
-  : FRONT AIR CONTROL WITH DISPLAY
-  : WITH NAVI
-  : FRONT AIR CONTROL WITHOUT DISPLAY



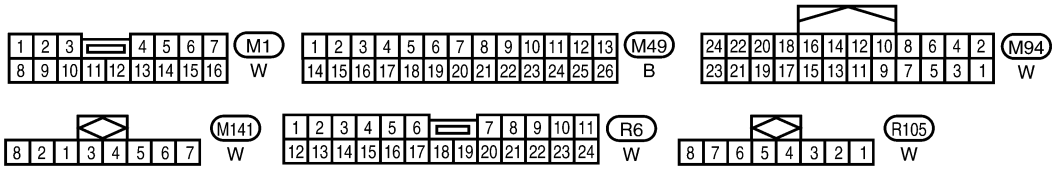


- *1  : 8
-  : 23
- *2  : 9
-  : 24






WKWA3491E

ILLUMINATION

LT-ILL-06

 -  : WITH NAVI
-  : WITH DVD ENTERTAINMENT SYSTEM
-  : WITH REAR POWER VENT WINDOWS

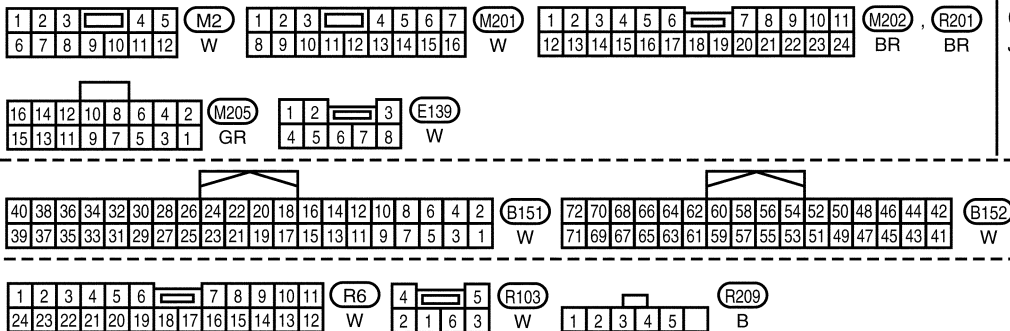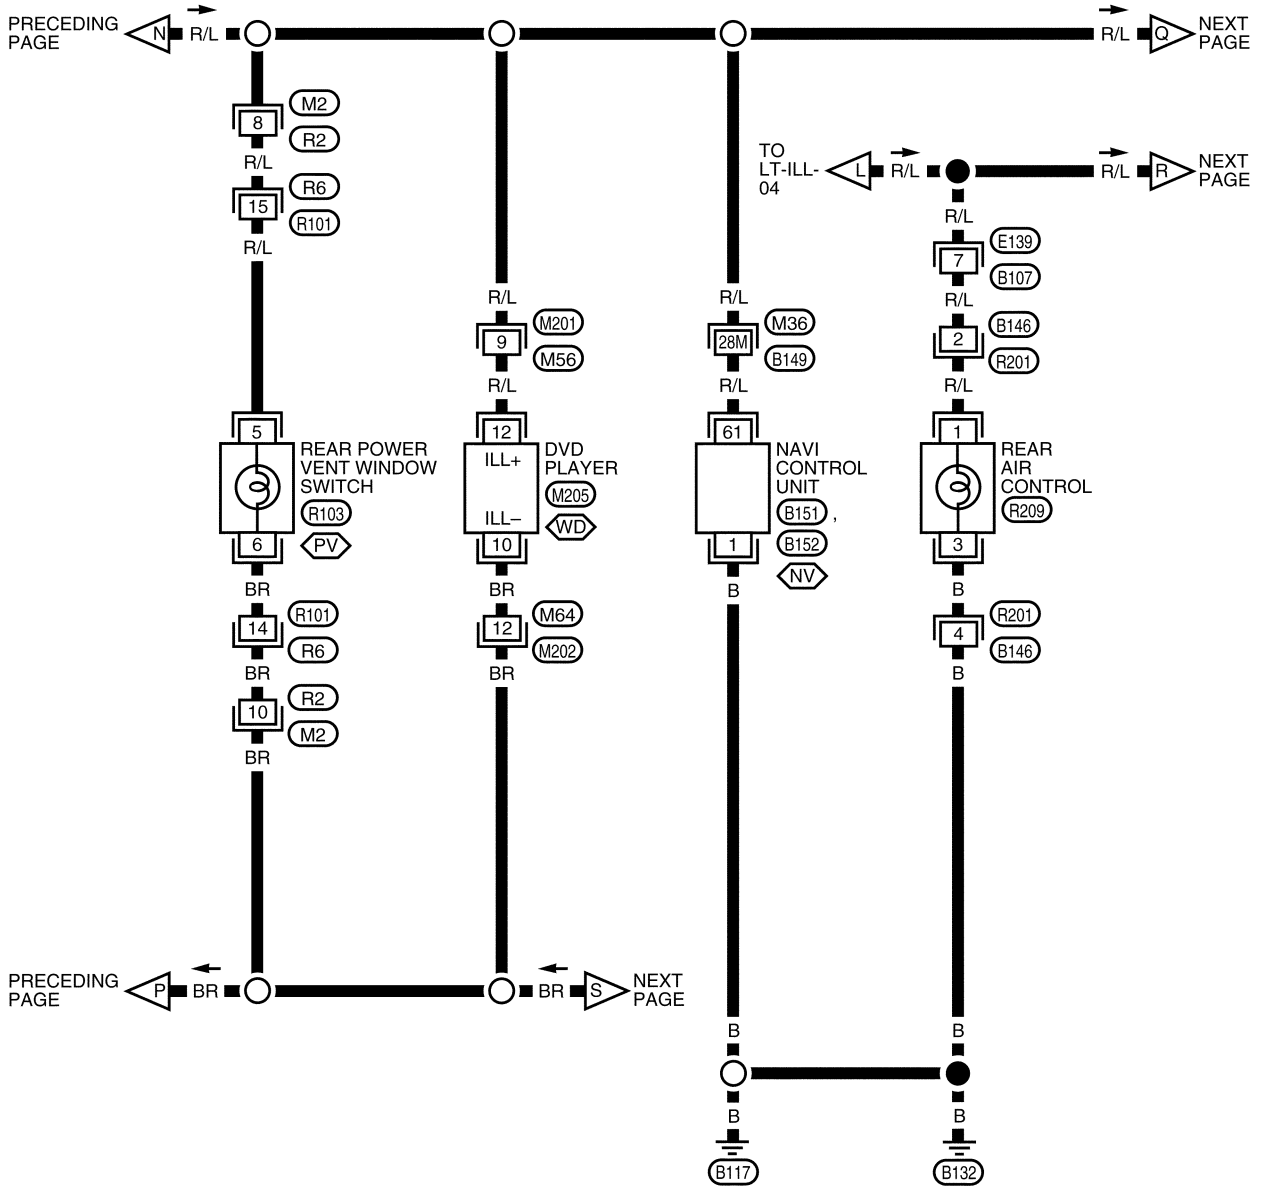



REFER TO THE FOLLOWING.
 - SUPER MULTIPLE JUNCTION (SMJ)

WKWA3527E

ILLUMINATION

LT-ILL-07

 : TRAILER TOW 7 PIN


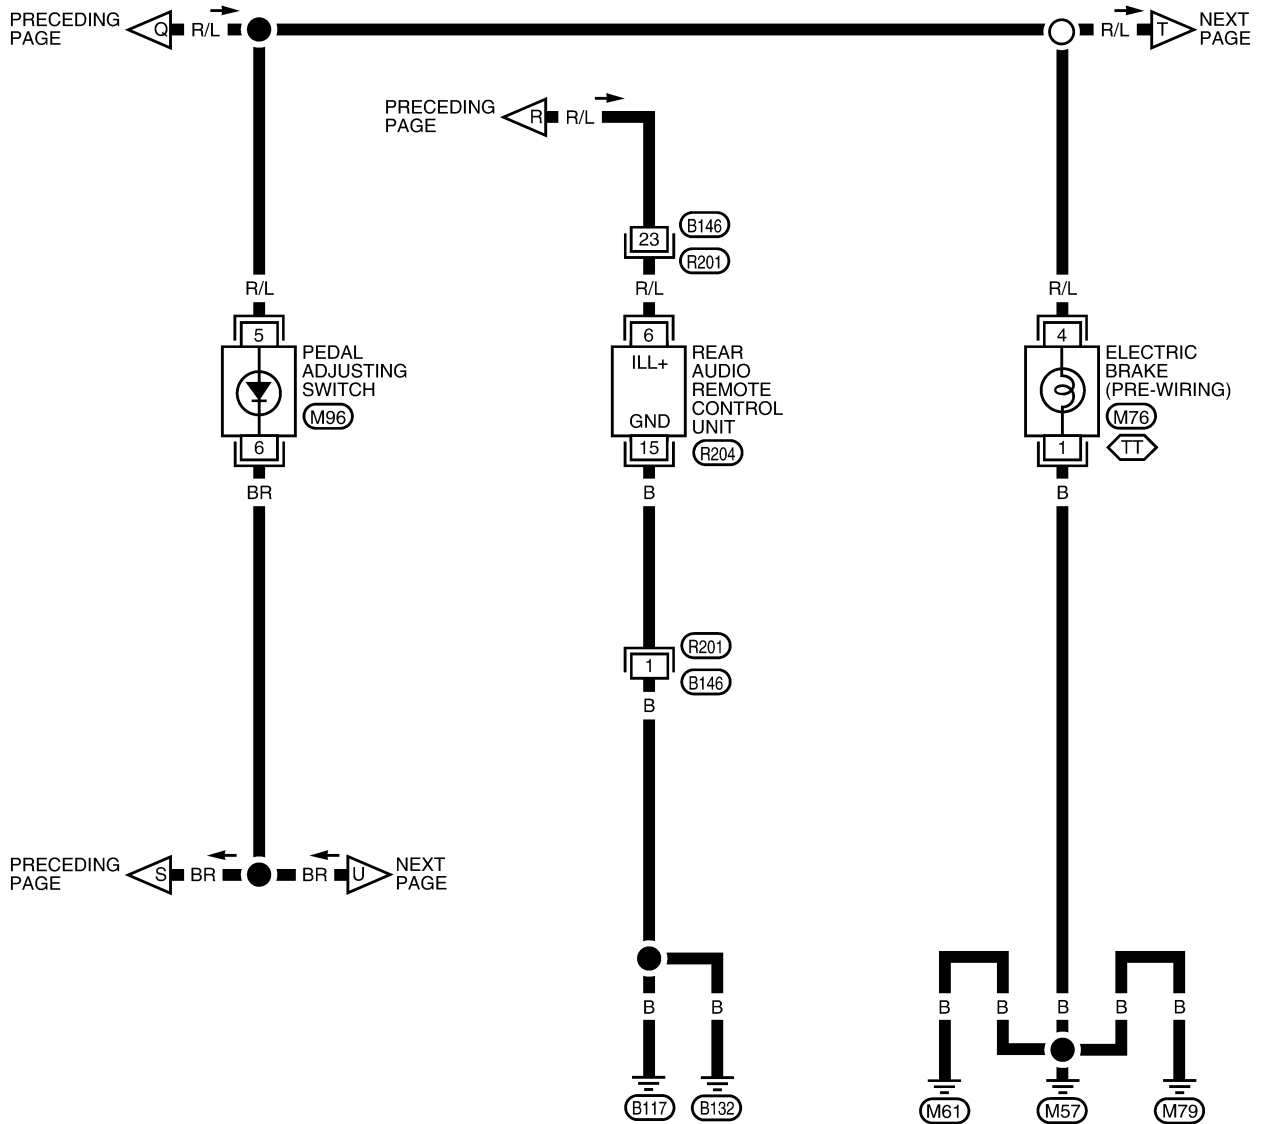


WKWA3836E

ILLUMINATION

LT-ILL-08

 HS : WITH HEATED SEATS

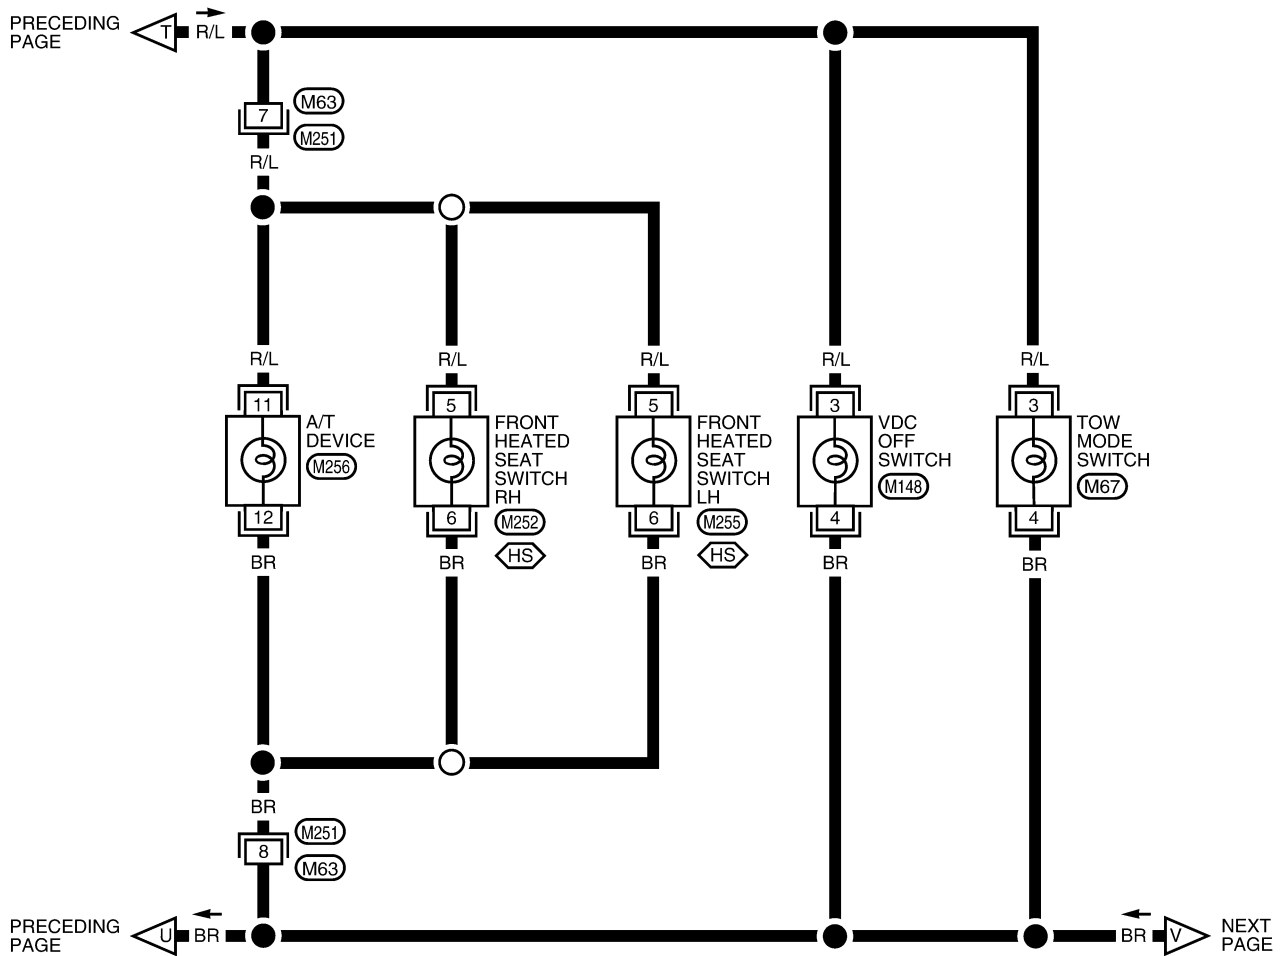


WKWA2434E

ILLUMINATION

LT-ILL-09

— : DATA LINE

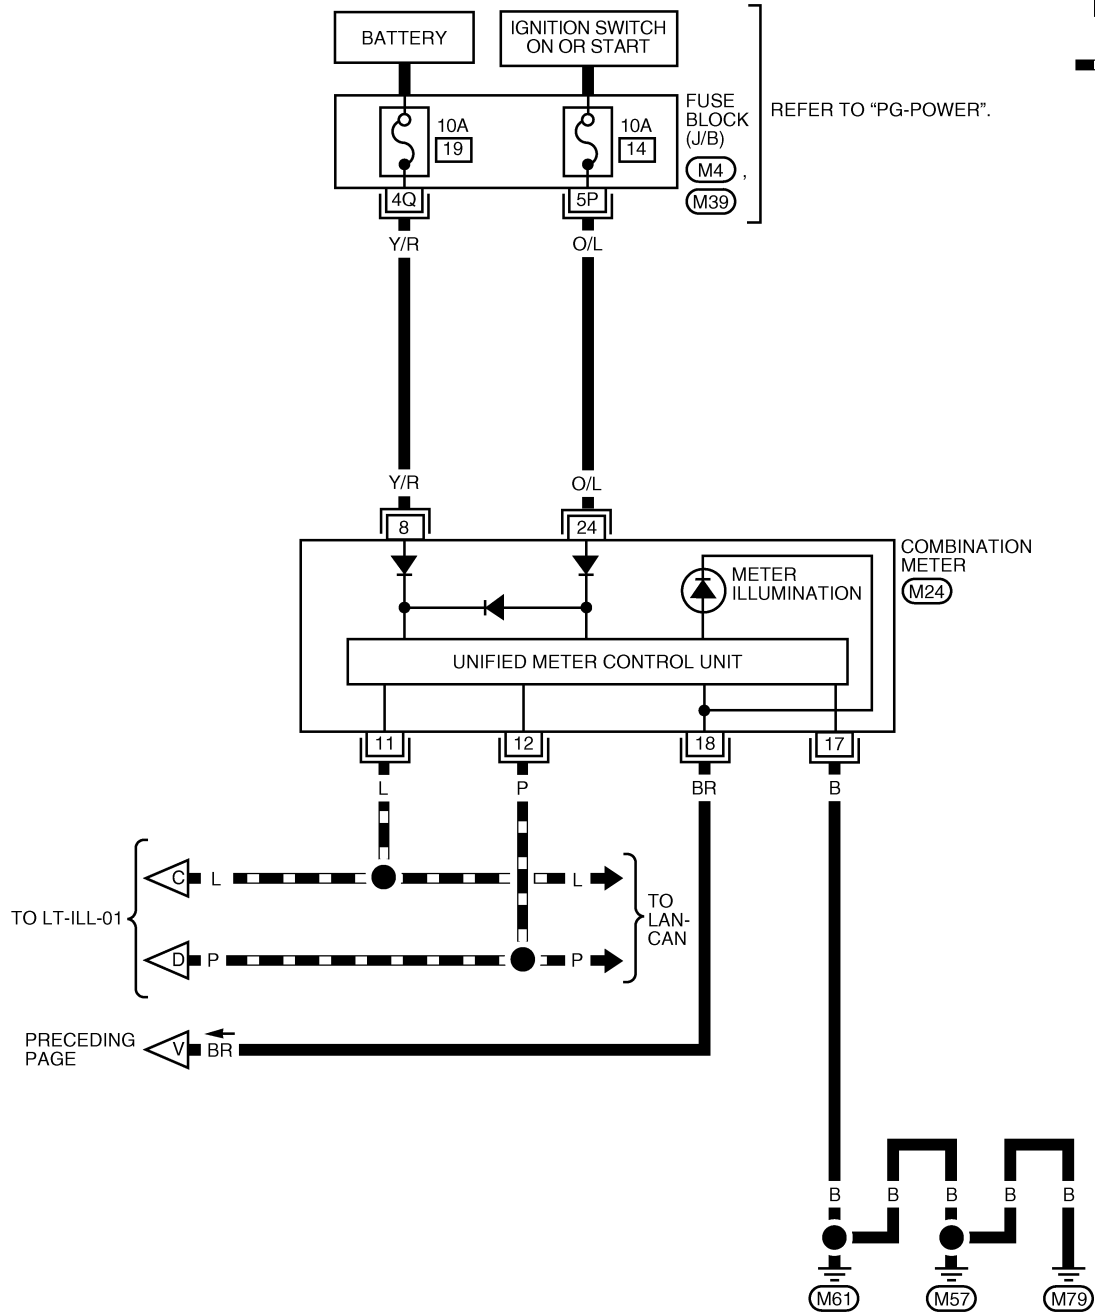

A

B

C

D

E

F

G

H

 
I

J

LT

L

M




ILLUMINATION

Removal and Installation ILLUMINATION CONTROL SWITCH

EKS00AW8

Removal

1. Remove cluster lid A. Refer to [JP-13, "COMBINATION METER"](#).
2. Carefully pry tabs and remove illumination control switch from cluster lid A.

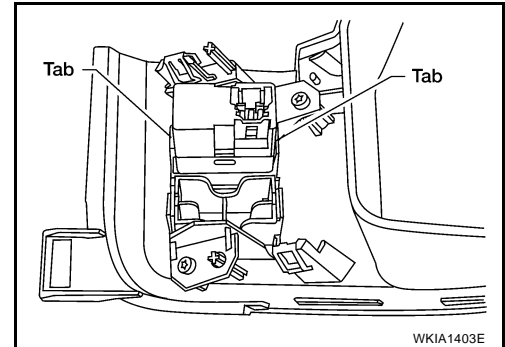

Installation

Installation is in the reverse order of removal.

BULB SPECIFICATIONS

BULB SPECIFICATIONS

PF:26297

Headlamp

EKS00AW9

Item	Wattage (W)*
Low	51 (HB4)
High	60 (HB3)

*: Always check with the Parts Department for the latest parts information.

Exterior Lamp

EKS00AWA

Item	Wattage (W)*	
Front combination lamp	Turn signal lamp/parking lamp	27/8
	Side marker	3.8
Rear combination lamp	Stop/Tail lamp	27/7
	Turn signal lamp	27
	Back-up lamp	18
Fog lamp	27	
High-mounted stop lamp	*	
License plate lamp	5	
Puddle lamp	13	

*: Always check with the Parts Department for the latest parts information.

Interior Lamp/Illumination

EKS00AWB

Item	Wattage (W)*
A/T device lamp	3
Cargo lamp	8
Foot lamp	3.4
Glove box lamp	3.4
Room/Map lamp	8
Step lamp	3.8
Vanity lamp	1.8
Personal lamp	5

*: Always check with the Parts Department for the latest parts information.

A
B
C
D
E
F
G
H
I
J
LT
L
M

BULB SPECIFICATIONS
