

SECTION **IDX**
ALPHABETICAL INDEX

A

B

C

D

E

F

G

H

I

J

K

L

IDX

ALPHABETICAL INDEX

Numerics

2-4WD shift solenoid valve	TF-93 , TF-153 , TF-166
4WD - Wiring diagram	TF-24
4WD shift switch	TF-66
4WD solenoid valve	TF-89 , TF-153 , TF-166
4WD system description	TF-15
4WD system diagram	TF-19

A

A/C air flow	ATC-30
A/C compressor clutch removal and installation ..	ATC-226
A/C compressor mounting	ATC-225
A/C compressor precaution	ATC-11
A/C compressor special service tool	ATC-14
A/C control operation (auto A/C)	ATC-27
A/C diagnostic work flow (auto A/C)	ATC-172
A/C evaporator	ATC-232
A/C HFC134a (R134a) system identification	ATC-6
A/C HFC134a (R134a) system precaution	ATC-5
A/C HFC134a (R134a) system service procedure	ATC-221
A/C HFC134a (R134a) system service tools ...	ATC-14
A/C HFC134a system service equipment precaution ...	ATC-11
A/C lubricant (R134a)	ATC-22
A/C lubrication oil	ATC-22
A/C operational check	ATC-69 , ATC-71
A/C self-diagnoses (auto A/C)	ATC-67 , ATC-172
A/C service data specification	ATC-239
A/C trouble diagnoses (auto A/C)	ATC-34
A/C, A - Wiring diagram	ATC-43
A/T fluid checking	AT-12 , AT-51 , MA-22
A/T fluid cooler cleaning	AT-14
A/T fluid replacement	AT-12 , MA-24
A/T fluid temperature sensor	AT-123
A/T IND - Wiring diagram	DI-35
A/T indicator	DI-35
A/T shift lock system	AT-216
A/T trouble diagnoses	AT-42
ABS - Wiring diagram	BRC-17
ABS (anti-lock brake system)	BRC-7
Accelerator control system	ACC-3
Accelerator pedal position (APP) sensor .	EC-602 , EC-608 , EC-622
Accelerator pedal released position learning	EC-83
AF1B1-Wiring diagram	EC-247 , EC-255 , EC-263 , EC-272 , EC-632
AF1B2-Wiring diagram	EC-249 , EC-257 , EC-265 , EC-274 , EC-634
AF1HB1-Wiring diagram	EC-180
AF1HB2-Wiring diagram	EC-182
Aiming adjustment	LT-23 , LT-58
Air bag	SRS-3
Air cleaner and air duct	EM-15
Air cleaner filter replacement	EM-16 , MA-16
Air conditioner cut control	EC-28

Air flow meter - See Mass air flow sensor	EC-202 , EC-211
Air fuel ratio sensor 1 ..	EC-244 , EC-253 , EC-261 , EC-269 , EC-630
Air fuel ratio sensor 1 heater	EC-179
Air mix. door motor	ATC-86
Ambient sensor	ATC-178 , ATC-195
Angular tightening application	EM-4
APPS1 - Wiring diagram	EC-604
APPS2 - Wiring diagram	EC-610
APPS3 - Wiring diagram	EC-624
ASC/BS - Wiring diagram	EC-570
ASC/SW - Wiring diagram	EC-563
ASCBOF - Wiring diagram	EC-642
ASCD	EC-29
ASCD (automatic speed control device)	ACS-2
ASCD brake switch	EC-568 , EC-641
ASCD indicator lamp	EC-648
ASCD steering switch	EC-561
ASCIND - Wiring diagram	EC-649
ATP switch	TF-106 , TF-109 , TF-114
Audio	AV-6
AUDIO - Wiring diagram	AV-15
AUT/DP - Wiring diagram	SE-15
Auto air conditioner - Wiring diagram	ATC-43
Auto anti-dazzling inside mirror	GW-66 , GW-67
Autolamp	LT-40
Automatic amplifier	ATC-72
Automatic drive positioner	SE-11
Automatic transmission number	GI-50

B

Back door	BL-86
Back door trim	EI-28
Back sonar	DI-50
BACK/L - Wiring diagram	LT-84
Back-up lamp	LT-84
Ball joint (front)	FSU-15
Basic inspection	EC-71
Battery	SC-4
Battery current sensor .	EC-533 , EC-540 , EC-547 , EC-554
Battery/Starting/Charging System Tester	SC-6 , SC-12 , SC-20
BCM (Body control module)	BCS-3
Block heater	EM-80
Blower motor	ATC-125 , ATC-199
Body alignment	BL-162
Body component parts	BL-149
Body construction	BL-161
Body exterior paint color	BL-148
Body mounting	BL-147
Body repair	BL-148
Body sealing	BL-158
Bose speaker amp.	AV-9
Brake booster	BR-17
Brake fluid level	MA-28
Brake hydraulic line	BR-12

ALPHABETICAL INDEX

Brake inspection [MA-28](#)
 Brake lines and cables inspection [MA-28](#)
 Brake master cylinder [BR-15](#)
 Brake switch [EC-568](#), [EC-578](#), [EC-641](#)
 BRK/SW - Wiring diagram [EC-579](#)
 Bulb specifications [LT-145](#)
 Bumper, front [EI-13](#)
 Bumper, rear [EI-15](#)

C

Cabin air filter [ATC-201](#), [MA-21](#)
 Camshaft [EM-46](#)
 Camshaft inspection [EM-49](#)
 Camshaft position sensor (PHASE) [EC-374](#)
 CAN - Wiring diagram [EC-162](#), [AT-94](#)
 CAN communication . [EC-31](#), [EC-161](#), [EC-164](#), [AT-93](#)
 Canister-See EVAP canister [EC-35](#)
 Center case (Transfer) [TF-153](#), [TF-166](#)
 CHARGE - Wiring diagram [SC-19](#)
 Charging system [SC-17](#)
 Chassis and body maintenance [MA-21](#)
 Chassis and body maintenanceSchedule 1 [MA-8](#)
 Chassis and body maintenanceSchedule 2 [MA-10](#)
 CHIME - Wiring diagram [DI-40](#)
 Circuit breaker [PG-17](#)
 Closed loop control [EC-25](#), [EC-506](#)
 Closed loop control (Bank 1) [EC-506](#)
 Closed loop control (Bank 2) [EC-506](#)
 Clutch drum (Transfer) [TF-153](#), [TF-166](#)
 Clutch pressure switch (Transfer) [TF-153](#), [TF-166](#)
 Coil spring (front) [FSU-10](#)
 Collision diagnosis [SRS-53](#)
 Combination lamp, front, removal and installation . [LT-25](#)
 Combination lamp, rear, removal and installation [LT-98](#)
 Combination meter [DI-5](#)
 Combination switch [LT-76](#)
 COMBSW - Wiring diagram [LT-76](#)
 COMM - Wiring diagram [AV-101](#)
 COMPAS - Wiring diagram [DI-24](#)
 Compass [DI-23](#)
 Component Location (auto A/C) [ATC-38](#)
 Compressor clutch removal and installation . [ATC-226](#)
 Compressor mounting [ATC-225](#)
 Compressor precaution [ATC-11](#)
 Compressor special service tool [ATC-14](#)
 Condenser [ATC-230](#)
 Connecting rod [EM-98](#)
 Connecting rod bearing clearance [EM-98](#)
 Connecting rod bushing clearance [EM-98](#)
 Console box - See Instrument panel [IP-10](#)
 CONSULT for VDC [BRC-28](#)
 CONSULT-II for engine [EC-123](#)
 Control units (terminal arrangement) [PG-71](#)
 Control valve (A/T) [AT-36](#)
 Control valve (Transfer) [TF-153](#), [TF-166](#)
 Converter housing installation [AT-240](#), [AT-244](#)
 COOL/F - Wiring diagram [EC-512](#)

Coolant mixture ratio [MA-12](#)
 Coolant replacement [CO-10](#), [MA-13](#)
 Cooling circuit (engine) [CO-8](#)
 Cooling fan [CO-17](#)
 Cooling fan control [EC-509](#)
 Cooling fan motor [EC-518](#)
 Cooling unit (A/C evaporator) [ATC-203](#), [ATC-232](#)
 Corrosion protection [BL-155](#)
 Crankcase ventilation system - See Positive crankcase ventilation [EC-45](#)
 Crankshaft [EM-81](#)
 Crankshaft position sensor (POS) [EC-367](#)
 Crash zone sensor [SRS-48](#)
 CUR/SE - Wiring diagram ... [EC-535](#), [EC-542](#), [EC-549](#), [EC-556](#)
 Cylinder block [EM-80](#)
 Cylinder block boring [EM-101](#)

D

D/LOCK - Wiring diagram [BL-20](#)
 Data link connector for Consult [EC-125](#), [EC-137](#)
 Daytime light system [LT-28](#)
 Daytime running light - See Daytime light system .. [LT-28](#)
 DEF - Wiring diagram [GW-72](#)
 Diagnosis sensor unit [SRS-51](#)
 Diagnostic trouble code (DTC) for OBD system . [EC-8](#), [EC-52](#)
 Diagnostic trouble code (DTC) inspection priority chart [EC-96](#)
 Differential carrier assembly [RFD-15](#)
 Differential gear oil replacement [MA-26](#)
 Dimensions [GI-51](#)
 Direct clutch solenoid valve [AT-143](#), [AT-145](#)
 Display and amp.assembly [ATC-72](#)
 Display Control Unit-Description [AV-90](#)
 Display Unit-Description [AV-90](#)
 Dome light - See Interior lamp [LT-107](#)
 Door glass [GW-58](#), [GW-61](#)
 Door lock [BL-119](#)
 Door mirror lamp [LT-107](#), [LT-127](#)
 Door trim [EI-28](#)
 Door, front [BL-115](#), [GW-58](#)
 Door, rear [BL-115](#), [GW-61](#)
 Drive belt [EM-13](#)
 Drive chain (Transfer) [TF-148](#), [TF-175](#)
 Drive pinion diff. inspection [RFD-18](#)
 Drive shaft (rear) [RAX-7](#)
 Driver air bag [SRS-39](#)
 DTC work support [EC-133](#)
 DTRL - Wiring diagram [LT-31](#)
 Duct and grilles [ATC-216](#)
 DVD Entertainment System [AV-79](#)
 DVD Player [AV-80](#), [AV-87](#)

E

ECM input/output signal [EC-114](#), [EC-138](#)

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

ECM power supply [EC-155](#), [EC-480](#)
 ECM relay [EC-155](#)
 ECM/PW - Wiring diagram [EC-481](#)
 ECTS - Wiring diagram [EC-225](#)
 Electric sunroof [RF-10](#)
 Electric throttle control actuator [EC-589](#), [EC-600](#)
 Electrical load signal circuit [EC-651](#)
 Electrical units location [PG-65](#)
 Electronic ignition (EI) system [EC-26](#)
 Engine control circuit diagram [EC-112](#)
 Engine control component parts location [EC-103](#)
 Engine control module (ECM) [EC-484](#)
 Engine control system diagram [EC-23](#)
 Engine coolant [CO-10](#)
 Engine coolant temperature sensor (ECTS) .. [EC-223](#),
[EC-236](#)
 Engine fail-safe system [EC-98](#)
 Engine oil [LU-8](#)
 Engine oil filter replacement [MA-17](#)
 Engine oil precautions [GI-7](#)
 Engine oil replacement [LU-9](#), [MA-17](#)
 Engine removal [EM-76](#)
 Engine room cover [EM-12](#)
 Engine serial number [GI-50](#)
 ETC1 - Wiring diagram [EC-590](#)
 ETC2 - Wiring diagram [EC-585](#)
 ETC3 - Wiring diagram [EC-596](#)
 EVAP canister [EC-35](#)
 EVAP canister purge volume control solenoid valve
[EC-400](#), [EC-408](#)
 EVAP canister vent control valve [EC-415](#), [EC-422](#)
 EVAP control system (small leak) diagnosis .. [EC-392](#),
[EC-446](#), [EC-454](#)
 EVAP control system pressure sensor [EC-429](#), [EC-432](#),
[EC-438](#)
 EVAP control system purge flow monitoring diagnosis
[EC-387](#)
 EVAP vapor lines inspection [MA-20](#)
 Evaporative emission (EVAP) system [EC-32](#)
 Evaporator [ATC-232](#)
 Exhaust manifold [EM-21](#)
 Exhaust system [EX-3](#)
 Exhaust system inspection [EX-3](#)
 Expansion valve [ATC-234](#)

F

F/FOG - Wiring diagram [LT-53](#)
 F/PUMP - Wiring diagram [EC-660](#)
 Final drive pre-inspection [FFD-15](#)
 Final drive removal and installation .. [FFD-12](#), [RFD-13](#)
 Flow charts [GI-27](#)
 Fluid temperature sensor (A/T) [AT-123](#)
 Fluids [MA-11](#)
 Fluorescent leak detector [ATC-235](#)
 Fog lamp, front [LT-51](#)
 Foot lamp [LT-107](#)
 FPCM - Wiring diagram [EC-521](#)
 Freeze frame data [EC-53](#), [EC-126](#)

Front brake solenoid valve [AT-139](#), [AT-141](#)
 Front bumper [EI-13](#)
 Front case (Transfer) [TF-148](#), [TF-175](#)
 Front combination lamp removal and installation [LT-25](#)
 Front door [BL-115](#), [BL-119](#), [GW-58](#)
 Front Door Trim [EI-28](#)
 Front drive shaft (Transfer) [TF-148](#), [TF-175](#)
 Front fog lamp [LT-51](#)
 Front passenger air bag [SRS-44](#)
 Front seat [SE-82](#)
 Front seat belt [SB-3](#)
 Front seat belt pre-tensioner [SRS-3](#), [SRS-50](#)
 Front washer [WW-4](#)
 Front wiper [WW-4](#)
 FTS - Wiring diagram [AT-124](#)
 FTTS - Wiring diagram [EC-339](#), [EC-344](#)
 Fuel cut control (at no load high engine speed) [EC-27](#)
 Fuel filter replacement [FL-5](#)
 Fuel gauge [DI-5](#)
 Fuel injection system (Bank 1) [EC-316](#), [EC-327](#)
 Fuel injection system (Bank 2) [EC-316](#), [EC-327](#)
 Fuel injector [EC-653](#)
 Fuel injector and fuel tube [EM-31](#)
 Fuel level sensor [EC-463](#), [EC-465](#), [EC-467](#)
 Fuel line inspection [FL-4](#)
 Fuel pressure check [EC-87](#)
 Fuel pressure release [EC-87](#)
 Fuel pump [EC-659](#)
 Fuel pump and gauge [FL-5](#)
 Fuel pump control module [EC-519](#)
 Fuel pump dropping resistor [EC-519](#)
 Fuel system [FL-4](#)
 Fuel tank [FL-11](#)
 Fuel tank temperature sensor [EC-337](#), [EC-343](#)
 Fuel tank vacuum relief valve [EC-35](#)
 FUEL B1 - Wiring diagram [EC-318](#), [EC-329](#)
 FUEL B2 - Wiring diagram [EC-320](#), [EC-331](#)
 Fuse [PG-17](#), [PG-77](#)
 Fuse and fusible link box [PG-77](#)
 Fuse block [PG-76](#)
 Fusible link [PG-17](#), [PG-77](#)

G

Garage jack and safety stand [GI-42](#)
 Gauges [DI-5](#)
 Generator [SC-17](#)
 Generic scan tool (GST) [EC-136](#)
 Glass [GW-11](#), [GW-58](#), [GW-61](#)
 Glove box lamp [LT-128](#)
 GPS antenna [AV-89](#)
 Grease [MA-11](#)
 Ground distribution [PG-31](#)

H

H/LAMP - Wiring diagram [LT-8](#)
 Handling precautions for plastics [BL-178](#)
 Harness connector [PG-68](#)

ALPHABETICAL INDEX

Harness layout [PG-41](#)
Hazard warning lamp [LT-60](#)
Headlamp [LT-5](#)
Headlamp removal and installation [LT-25](#)
Heated oxygen sensor 2 (bank 1) [EC-281](#), [EC-292](#), [EC-305](#)
Heated oxygen sensor 2 (bank 2) [EC-281](#), [EC-292](#), [EC-305](#)
Heated oxygen sensor 2 heater (bank 1) [EC-186](#)
Heated oxygen sensor 2 heater (bank 2) [EC-186](#)
Heated seat [SE-79](#)
Heater and cooling unit (Heater core) . [ATC-203](#), [ATC-206](#)
Heater unit (heater core) [ATC-203](#), [ATC-206](#)
Height (Dimensions) [GI-51](#)
HFC134a (R134a) system identification [ATC-6](#)
HFC134a (R134a) system precaution [ATC-5](#)
HFC134a (R134a) system service procedure [ATC-221](#)
HFC134a (R134a) system service tools [ATC-14](#)
HFC134a system service equipment precaution [ATC-11](#)
High and low reverse clutch solenoid valve [AT-147](#), [AT-149](#)
Homelink universal transceiver [BL-144](#)
Horn [WW-48](#)
HORN - Wiring diagram [WW-48](#)
How to erase DTC for OBD system [EC-61](#)
HSEAT - Wiring diagram [SE-80](#)

I

I/MIRR - Wiring diagram [GW-66](#)
IATS - Wiring diagram [EC-220](#)
Identification plate [GI-49](#)
Idle air volume learning [EC-85](#)
Idle speed [EC-71](#), [EC-81](#)
Idle speed control (ISC) [EC-471](#), [EC-473](#)
Ignition coil [EM-28](#), [EC-672](#)
Ignition control system [EC-672](#)
Ignition key hole illumination [LT-107](#)
Ignition timing [EC-71](#), [EC-81](#)
IGNSYS - Wiring diagram [EC-673](#)
ILL - Wiring diagram [LT-135](#)
Illumination [LT-128](#)
In vehicle sensor [ATC-182](#), [ATC-196](#)
In-cabin Microfilter [ATC-201](#), [MA-21](#)
INJECT - Wiring diagram [EC-654](#)
Injector [EC-653](#)
Input clutch solenoid valve [AT-135](#), [AT-137](#)
Instrument panel [IP-10](#)
INT/L - Wiring diagram [LT-113](#)
Intake air temperature sensor [EC-219](#), [EC-239](#)
Intake door control linkage adjustment [ATC-113](#), [ATC-117](#)
Intake door motor [ATC-111](#), [ATC-210](#)
Intake manifold [EM-17](#)
Intake sensor [ATC-190](#), [ATC-198](#)
Intake valve timing control (Bank 1) [EC-166](#)
Intake valve timing control (Bank 2) [EC-166](#)

Intake valve timing control position sensor (Bank 1) [EC-497](#)
Intake valve timing control position sensor (Bank 2) [EC-497](#)
Intake valve timing control solenoid valve (Bank 1) [EC-194](#)
Intake valve timing control solenoid valve (Bank 2) [EC-194](#)
Integrated homelink transmitter - See Homelink universal transceiver [BL-144](#)
Interior [EI-31](#)
Interior lamp [LT-107](#)
Interior lamp on-off control [LT-107](#)
Internal gear (Transfer) [TF-148](#), [TF-175](#)
IPDM (Intelligent power distribution module engine room) [PG-18](#)
IVCB1 - Wiring diagram [EC-195](#)
IVCB2 - Wiring diagram [EC-197](#)
IVCSB1 - Wiring diagram [EC-499](#)
IVCSB2 - Wiring diagram [EC-501](#)
IVIS (Infiniti vehicle immobilizer system) precautions ... [GI-3](#)
IVTB1 - Wiring diagram [EC-169](#)
IVTB2 - Wiring diagram [EC-171](#)

J

Jacking points [GI-42](#)
Junction box (J/B) [PG-76](#)

K

Key illumination [LT-107](#)
KEYLES - Wiring diagram [BL-43](#)
Knock sensor (KS) [EC-362](#)
KS - Wiring diagram [EC-363](#)

L

Length (Dimensions) [GI-51](#)
License lamp [LT-86](#)
Lifting points [GI-43](#)
Line pressure solenoid valve [AT-118](#)
Line pressure switch (Transfer) [TF-153](#), [TF-166](#)
Line pressure test (A/T) [AT-52](#)
Location of electrical units [PG-65](#)
Low coast brake solenoid valve [AT-151](#), [AT-153](#)
Low tire pressure warning system [WT-8](#)
Low tire pressure warning system - trouble diagnoses [WT-11](#)
Low tire pressure warning system - Wiring diagram [WT-11](#)
Lubricant (R134a) A/C [ATC-22](#)
Lubricants [MA-11](#)
Lubrication circuit (engine) [LU-6](#)
Lubrication oil A/C [ATC-22](#)
Lubrication-locks, hinges and hood latches [MA-31](#)

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

M

MAFS - Wiring diagram	EC-205 , EC-213
Magnet clutch	ATC-151 , ATC-226
MAIN - Wiring diagram	EC-155 , AT-163
Main oil pump (Transfer)	TF-153 , TF-166
Mainshaft (Transfer)	TF-153 , TF-166
Maintenance (engine)Schedule 1	MA-7
Maintenance (engine)Schedule 2	MA-9
Major overhaul (Final drive)	FFD-14
Major overhaul (Transfer)	TF-145
Malfunction indicator lamp (MIL)	EC-63
Map lamp	LT-107
Mass air flow sensor (MAFS)	EC-202 , EC-211
Meter	DI-5
METER - Wiring diagram	DI-9
MIL data link connectors circuit	EC-690
MIL/DL - Wiring diagram	EC-690
MIRROR - Wiring diagram	GW-88
Misfire	EC-355
Mode door control linkage adjustment	ATC-79
Mode door motor	ATC-76 , ATC-211
Model variation	GI-48
Multipoint fuel injection (MFI) system	EC-24
Multipoint fuel injection precautions	GI-6
Multi-remote control system - See Remote keyless entry system	BL-37

N

NATS - Wiring diagram	BL-128
NAVI - Wiring diagram	AV-93
NAVI Control Unit	AV-90
Navigation system	AV-88
Neutral-4LO switch	TF-62
NONDTC - Wiring diagram	AT-172
NVH troubleshooting (AX)	FAX-4
NVH troubleshooting (EM)	EM-10
NVH troubleshooting (Final drive)	RFD-7
NVH troubleshooting (Propeller shaft)	PR-3
NVH troubleshooting (RAX)	RAX-4
NVH troubleshooting (RSU)	RSU-5
NVH troubleshooting (ST)	PS-5
NVH troubleshooting (Transfer)	TF-10
NVH troubleshooting (WT)NVH troubleshooting (WT) . WT-4	
NVIS (Nissan vehicle immobilizer system)	BL-125
NVIS (Nissan vehicle immobilizer system) precautions GI-3	

O

O2H2B1 - Wiring diagram	EC-188
O2H2B2 - Wiring diagram	EC-190
O2S2B1 - Wiring diagram ...	EC-284 , EC-295 , EC-308
O2S2B2 - Wiring diagram ...	EC-286 , EC-297 , EC-310
Oil cooler (engine)	LU-12
Oil filter	LU-11
Oil filter (Transfer)	TF-142

Oil pan (engine)	EM-24
Oil pressure (engine)	LU-8
Oil pressure relief valve (engine)	LU-6
Oil pump (engine)	LU-14
Oil seal replacement (engine)	EM-61
Oil seal replacement (front of final drive) FFD-8 , RFD-9	
Oil seal replacement (side of final drive)	RFD-11
On board diagnostic system	EC-48
ORVR (On-board Refueling Vapor Recovery) ..	EC-39
Overheat	EC-509

P

P/SCKT - Wiring diagram	WW-46
Pantograph jack	GI-42
Park/Neutral position switch	EC-492
Park/neutral position switch (A/T)	AT-101
Parking brake control	PB-4
PCV (positive crankcase ventilation)	EC-45
Personal lamp	LT-107
PGC/V - Wiring diagram	EC-402 , EC-410
PHASE - Wiring diagram	EC-376
Pinion bearing preload diff.	RFD-26
Piston pin inspection	EM-96
Piston ring inspection	EM-97
Piston to bore clearance	EM-101
Planetary carrier (Transfer)	TF-148 , TF-175
PNP/SW - Wiring diagram	EC-494 , AT-102
POS - Wiring diagram	EC-369
POWER - Wiring diagram	PG-6
Power door lock	BL-16
Power seat	SE-75
Power steering fluid level	MA-29
Power steering gear	PS-15
Power steering oil pump	PS-22
Power steering pressure (PSP) sensor	EC-475
Power steering system bleeding	PS-6
Power supply routing	PG-4
Power window	GW-16
PRE/SE - Wiring diagram	EC-434 , EC-440
Precautions (General)	GI-4
Precautions in repairing high strength steel	BL-181
Pressure switch 1	AT-141 , AT-155
Pressure switch 2	AT-153
Pressure switch 3	AT-137 , AT-157
Pressure switch 5	AT-145 , AT-159
Pressure switch 6	AT-149 , AT-161
Pressure test (A/T)	AT-52
Propeller shaft	PR-4 , PR-8
Propeller shaft inspection	MA-25
Propeller shaft on vehicle service	PR-8
Propeller shaft vibration	PR-4 , PR-8
PS/SEN - Wiring diagram	EC-476

R

R/VIEW - Wiring diagram	DI-65
Radiator	CO-14
Radio - See Audio	AV-6

ALPHABETICAL INDEX

Rear axle	RAX-5	SROOF - Wiring diagram	RF-13	
Rear bumper	EI-15	SRS - See Supplemental Restraint System	SRS-5	A
Rear case (Transfer)	TF-147 , TF-180	SRS Trouble diagnoses	SRS-9	
Rear combination lamp removal and installation	LT-98	Stabilizer bar (front)	FSU-12	
Rear cover packing replacement diff.	RFD-28	Stabilizer bar (rear)	RSU-40	B
Rear door	BL-115 , GW-61	Stall test (A/T)	AT-51	
Rear seat	SE-96	Standardized relay	PG-72	
Rear seat belt	SB-7	START - Wiring diagram	SC-11	C
Rear suspension	RSU-24	Starting system	SC-10	
Rear view monitor	DI-61	Steering gear, linkage and transfer gear inspection	MA-29	
Rear washer	WW-29	Steering linkage	PS-15	D
Rear window defogger	GW-68	Steering wheel and column	PS-8	
Rear wiper	WW-29	Step lamp	LT-107	
Refrigerant connection precaution	ATC-6	Stop lamp	LT-81	E
Refrigerant discharging evacuating charging	ATC-221	Stop lamp switch	EC-568 , EC-578 , EC-641	
Refrigerant general precaution	ATC-6	STOP/L - Wiring diagram	LT-82	
Refrigerant lines	ATC-221 , ATC-229 , ATC-230	Strut (front)	FSU-10	F
Refrigerant pressure sensor	EC-685 , ATC-230	STSIG - Wiring diagram	AT-97	
Relay box	PG-78	Sub-oil pump (Transfer)	TF-153 , TF-166	
Remote keyless entry system	BL-37	Sun gear (Transfer)	TF-148 , TF-175	G
Removal and installation (A/T)	AT-238 , AT-241	Sun roof, electric	RF-10	
Removal and installation (Transfer)	TF-144	Sunload sensor	ATC-187	
Revolution sensor (A/T)	AT-107	Sunroof	RF-22	
Ring gear diff. inspection	RFD-18	Supplemental Restraint System	SRS-5	H
Road wheel size	GI-51	Symbols and abbreviations	GI-10 , GI-22	
Rocker cover	EM-35	Symptom matrix chart	EC-99	
Room lamp	LT-107	System readiness test (SRT) code	EC-54	I
Room lamp - See Interior lamp	LT-107			
ROOM/L - Wiring diagram	LT-113			
RP/SEN - Wiring diagram	EC-686			

S

SAE J1979 - Service \$01 - 09	EC-48	T/TOW - Wiring diagram	LT-103	J
SEAT - Wiring diagram	SE-75 , SE-76	Tachometer	DI-5	
Seat belt inspection	SB-12 , MA-32	Tail lamp	LT-86	
Seat belt pre-tensioner	SRS-50	TAIL/L - Wiring diagram	LT-89	K
Seat belt, front	SB-3	TCM inspection table	AT-83	
Seat belt, rear	SB-7	TCS - Wiring diagram	BRC-17	
Seat, front	SE-82	TCS (traction control system)	BRC-7	L
Seat, rear	SE-96	TCS component parts and connector location	BRC-14	
Self-diagnosis (Transfer)	TF-50	TCS wheel sensors	BRC-14	
SEN/PW - Wiring diagram	EC-488	Theft warning system - See Vehicle security (Theft warning) system	BL-64	
SHIFT - Wiring diagram	AT-217	Thermometer	DI-23	IDX
Shift control (Transfer)	TF-148 , TF-175	Three way catalyst	EM-21	
Shift lock system	AT-216	Three way catalyst function (Bank 1)	EC-381	
Shock absorber (front)	FSU-11	Three way catalyst function (Bank 2)	EC-381	
Shock absorber (rear)	RSU-33	Three way catalyst precautions	GI-5	
Side air bag (satellite) sensor	SRS-49	Throttle control motor	EC-595	
Side curtain air bag	SRS-47	Throttle control motor relay	EC-583	
Side trim	EI-31	Throttle position sensor (TPS)	EC-229 , EC-348 , EC-527 , EC-529 , EC-615	
SMJ (super multiple junction)	PG-74	Throttle valve closed position learning	EC-84	
SONAR - Wiring diagram	DI-53	Tie-rod	PS-15	
Spare tire size	GI-51	Timing chain	EM-37	
Spark plug	EM-29	Tire rotation	MA-28	
Spark plug replacement	MA-18	Tire size	GI-51	
Specification value	EC-144	Torque converter installation	AT-239 , AT-240 , AT-243 , AT-244	
Speedometer	DI-5	Torque convertor clutch solenoid valve	AT-114 , AT-	
Spiral cable	SRS-41			

ALPHABETICAL INDEX

116			
Tow truck towing	GI-44	Wheel bearing (front)	FAX-5
Towing point	GI-45	Wheel bearing (rear)	RAX-5
TPS1 - Wiring diagram	EC-350	Wheel hub (rear)	RAX-5
TPS2 - Wiring diagram	EC-231	Wheel size	GI-51
TPS3 - Wiring diagram	EC-617	Wheelbase (Dimensions)	GI-51
Traction control system - Wiring diagram	BRC-17	Width (Dimensions)	GI-51
Transfer control device	TF-76, TF-80, TF-137	WINDOW - Wiring diagram	GW-23
Transfer control unit inspection table	TF-35	Window antenna	AV-75
Transfer dropping resistor	TF-89	Window, door	GW-58, GW-61
Transfer fluid temperature sensor	TF-103, TF-153, TF-166	Windshield	GW-11
Transfer motor	TF-101, TF-141	WIP/R - Wiring diagram	WW-33
Transfer motor relay	TF-101	WIPER - Wiring diagram	WW-9
Transfer oil replacement	MA-25	Wiper, front	WW-4
Transfer serial number	GI-50	Wiper, rear	WW-29
Transmission serial number	GI-50	Wiring Diagram (Cell code) list	PG-62
Tread-FR&RR (Dimensions)	GI-51	Wiring diagrams	GI-15
Trim	EI-31	WT-T/WARN - Wiring diagram	WT-11
TRNSCV - Wiring diagram	BL-144		
Trouble diagnoses	GI-11		
Turbine revolution sensor	AT-105		
TURN - Wiring diagram	LT-64		
Turn signal lamp	LT-60		
Two trip detection logic	EC-48		
Two-pole lift	GI-43		

V

Vacuum hose (brake system)	BR-20
Vacuum hose drawing (Engine control)	EC-111
Valve clearance	EM-56
Valve guide	EM-71
Vanity mirror lamp	LT-107
VDC (vehicle dynamics control)	BRC-7
VDC -Wiring diagram	BRC-17
Vehicle identification number	GI-49
Vehicle recovery (freeing a stuck vehicle)	GI-45
Vehicle security (theft warning) system	BL-64
Vehicle speed sensor (VSS)	EC-469
VEHSEC - Wiring diagram	BL-68
VENT/V - Wiring diagram	EC-417, EC-424
VIN registration	EC-83
Viscosity number (SAE)	MA-12
VSS A/T - Wiring diagram	AT-109

W

W/ANT - Wiring diagram	AV-76
Wait detection switch	TF-69
WARN - Wiring diagram	DI-28
Warning chime	DI-37
Warning lamps	DI-27
Washer, front	WW-4
Washer, rear	WW-29
Water pump	CO-19
Water temperature gauge	DI-5
Wheel alignment (front)	FSU-6
Wheel alignment (rear)	RSU-26