

# SECTION SCS

## SUSPENSION CONTROL SYSTEM

A  
B  
C  
D

SCS

## CONTENTS

<b>BASIC INSPECTION .....</b>	3	Description .....	13
<b>DIAGNOSIS AND REPAIR WORKFLOW .....</b>	3	DTC Logic .....	13
Work Flow .....	3	Diagnosis Procedure .....	13
<b>FUNCTION DIAGNOSIS .....</b>	5	<b>C1806 VEHICLE HEIGHT SENSOR LOCK-ING MALFUNCTION .....</b>	14
<b>SUSPENSION CONTROL SYSTEM .....</b>	5	Description .....	14
System Diagram .....	5	DTC Logic .....	14
System Description .....	5	Diagnosis Procedure .....	14
Component Parts Location .....	6	<b>C1807 SENSOR 5V MALFUNCTION .....</b>	15
Component Description .....	6	Description .....	15
<b>DIAGNOSIS SYSTEM (SUSPENSION CON-TROL UNIT) .....</b>	7	DTC Logic .....	15
CONSULT-III Function .....	7	Diagnosis Procedure .....	15
<b>COMPONENT DIAGNOSIS .....</b>	9	<b>C1808 INTEGRAL TIME MALFUNCTION SUPPLYING AIR .....</b>	16
<b>C1801 VEHICLE HEIGHT SENSOR .....</b>	9	Description .....	16
Description .....	9	DTC Logic .....	16
DTC Logic .....	9	Diagnosis Procedure .....	16
Diagnosis Procedure .....	9	<b>POWER SUPPLY AND GROUND CIRCUIT ....</b>	17
<b>C1802 COMPRESSOR RELAY .....</b>	10	<b>SUSPENSION CONTROL UNIT .....</b>	17
Description .....	10	SUSPENSION CONTROL UNIT : Diagnosis Pro-cedure .....	17
DTC Logic .....	10	<b>SUSPENSION AIR COMPRESSOR .....</b>	17
Diagnosis Procedure .....	10	SUSPENSION AIR COMPRESSOR : Diagnosis Pro-cedure .....	17
<b>C1803 EXHAUST SOLENOID .....</b>	11	<b>HEIGHT SENSOR .....</b>	18
Description .....	11	HEIGHT SENSOR : Diagnosis Procedure .....	18
DTC Logic .....	11	<b>COMPRESSOR MOTOR RELAY .....</b>	20
Diagnosis Procedure .....	11	Description .....	20
<b>C1804 HEIGHT ADJUSTING MALFUNCTION (COMPRESSOR) .....</b>	12	Component Function Check .....	20
Description .....	12	Diagnosis Procedure .....	20
DTC Logic .....	12	<b>HEIGHT SENSOR SIGNAL CIRCUIT .....</b>	22
Diagnosis Procedure .....	12	Description .....	22
<b>C1805 HEIGHT ADJUSTING MALFUNCTION (EXH SOLENOID) .....</b>	13	Component Function Check .....	22
		Diagnosis Procedure .....	22

---

<b>EXHAUST VALVE SOLENOID CIRCUIT .....</b>	<b>23</b>	<b>SUSPENSION CONTROL SYSTEM INOPERATIVE .....</b>	<b>36</b>
Description .....	23	Description .....	36
Component Function Check .....	23	Diagnosis Procedure .....	36
Diagnosis Procedure .....	23		
<b>CK SUSP WARNING INDICATOR CONTROL CIRCUIT .....</b>	<b>25</b>	<b>SUSPENSION CONTROL SYSTEM DOES NOT RAISE .....</b>	<b>37</b>
Description .....	25	Description .....	37
Component Function Check .....	25	Diagnosis Procedure .....	37
Diagnosis Procedure .....	25		
<b>ECU DIAGNOSIS .....</b>	<b>27</b>	<b>SUSPENSION CONTROL SYSTEM DOES NOT LOWER .....</b>	<b>38</b>
<b>SUSPENSION CONTROL UNIT .....</b>	<b>27</b>	Description .....	38
Reference Value .....	27	Diagnosis Procedure .....	38
Wiring Diagram .....	28		
DTC Index .....	33		
<b>SYMPTOM DIAGNOSIS .....</b>	<b>35</b>	<b>PRECAUTION .....</b>	<b>39</b>
<b>SUSPENSION CONTROL SYSTEM .....</b>	<b>35</b>	<b>PRECAUTIONS .....</b>	<b>39</b>
Symptom Table .....	35	Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" .....	39
		Precaution for Rear Suspension .....	39

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >


## BASIC INSPECTION

### DIAGNOSIS AND REPAIR WORKFLOW

#### Work Flow

INFOID:000000001603961

#### OVERALL SEQUENCE

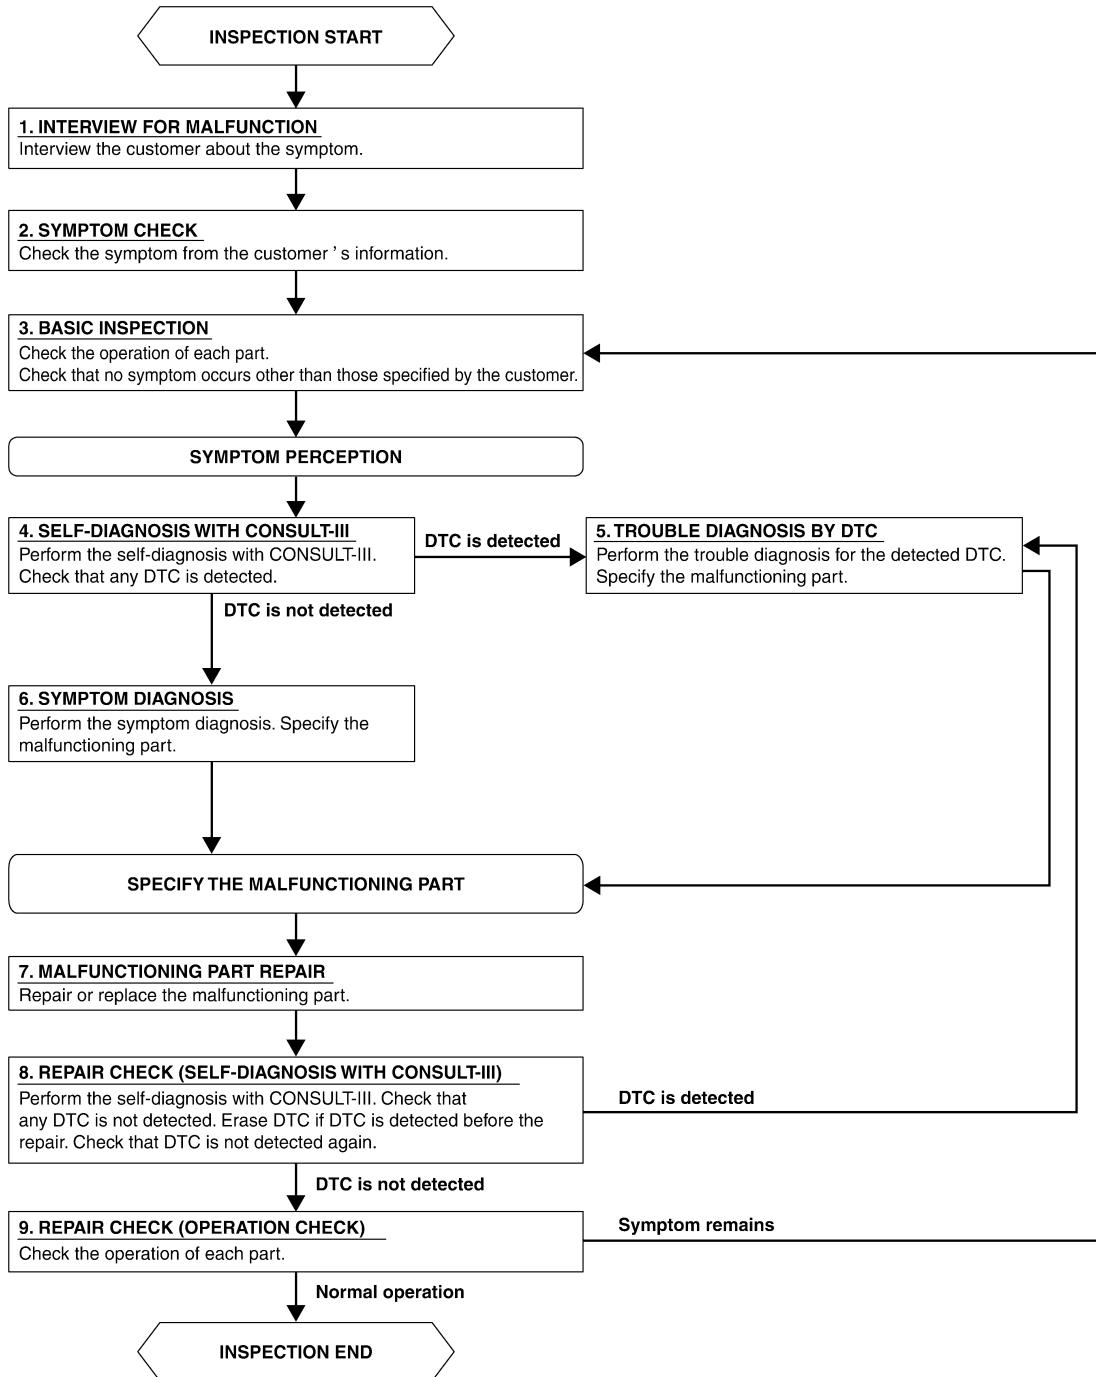

A  
B  
C  
D  
SCS  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

#### DETAILED FLOW

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

## 1. INTERVIEW FOR MALFUNCTION

Interview the customer about the symptom.

>> GO TO 2

## 2. SYMPTOM CHECK

Verify the symptom from the customer's information.

>> GO TO 3

## 3. BASIC INSPECTION

Check the operation of each part. Check that no symptoms occur other than those specified by the customer.

>> GO TO 4

## 4. SELF-DIAGNOSIS WITH CONSULT-III

Perform the self diagnosis with CONSULT-III. Check that any DTC is detected.

Is any DTC detected?

YES >> GO TO 5

NO >> GO TO 6

## 5. TROUBLE DIAGNOSIS BY DTC

Perform the trouble diagnosis for the detected DTC. Specify the malfunctioning part.

>> GO TO 7

## 6. SYMPTOM DIAGNOSIS

Perform the symptom diagnosis. Specify the malfunctioning part.

>> GO TO 7

## 7. MALFUNCTIONING PART REPAIR

Repair or replace the malfunctioning part.

>> GO TO 8

## 8. REPAIR CHECK (SELF-DIAGNOSIS WITH CONSULT-III)

Perform the self diagnosis with CONSULT-III. Verified that no DTCs are detected. Erase all DTCs detected prior to the repair. Verify that DTC is not detected again.

Is any DTC detected?

YES >> GO TO 5

NO >> GO TO 9

## 9. REPAIR CHECK (OPERATION CHECK)

Check the operation of each part.

Does it operate normally?

YES >> INSPECTION END

NO >> GO TO 3


# SUSPENSION CONTROL SYSTEM

< FUNCTION DIAGNOSIS >

## FUNCTION DIAGNOSIS SUSPENSION CONTROL SYSTEM

### System Diagram

INFOID:000000001603963

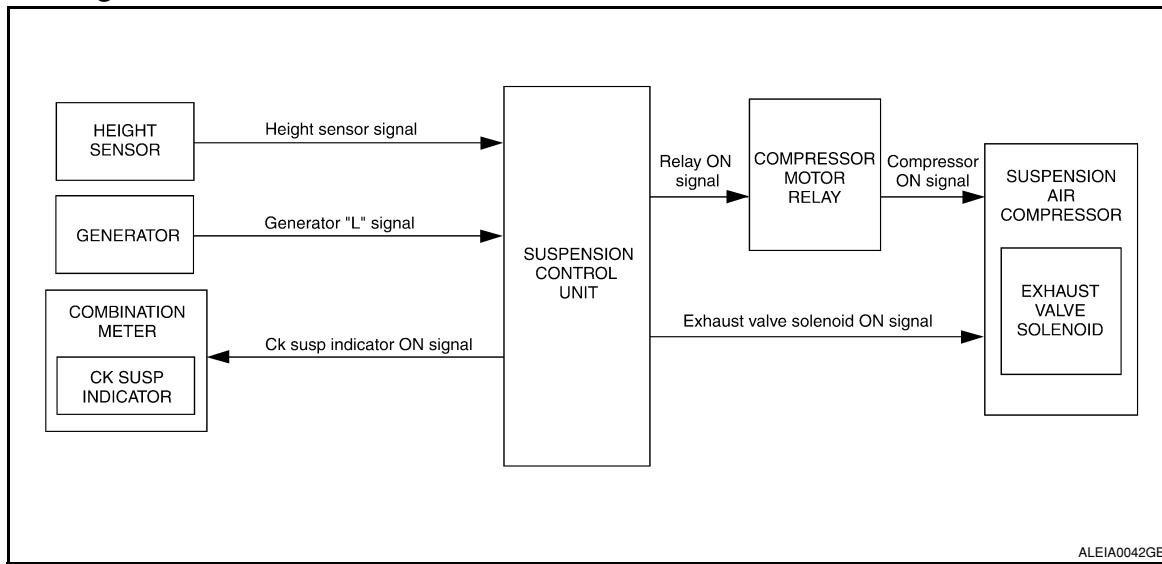

### System Description

INFOID:000000001603964

#### SUSPENSION CONTROL SYSTEM

The suspension control system consists of the following components

- Suspension control unit
- Compressor motor relay
- Suspension air compressor
- Exhaust valve solenoid (built into suspension air compressor)
- Height sensor

The suspension control unit monitors vehicle ride height as indicated by the height sensor. The suspension control unit actuates the compressor motor relay to raise the vehicle ride height. The suspension control unit actuates the exhaust valve solenoid to lower the vehicle ride height.

#### CK SUSP INDICATOR LAMP


The CK SUSP indicator lamp ground is controlled by the suspension control unit. The indicator lamp will come on for 2 seconds when the ignition switch is turned ON. If the indicator lamp does not turn OFF there is a fault detected. Refer to [SCS-7, "CONSULT-III Function"](#)

# SUSPENSION CONTROL SYSTEM

< FUNCTION DIAGNOSIS >

## Component Parts Location

INFOID:000000001603965

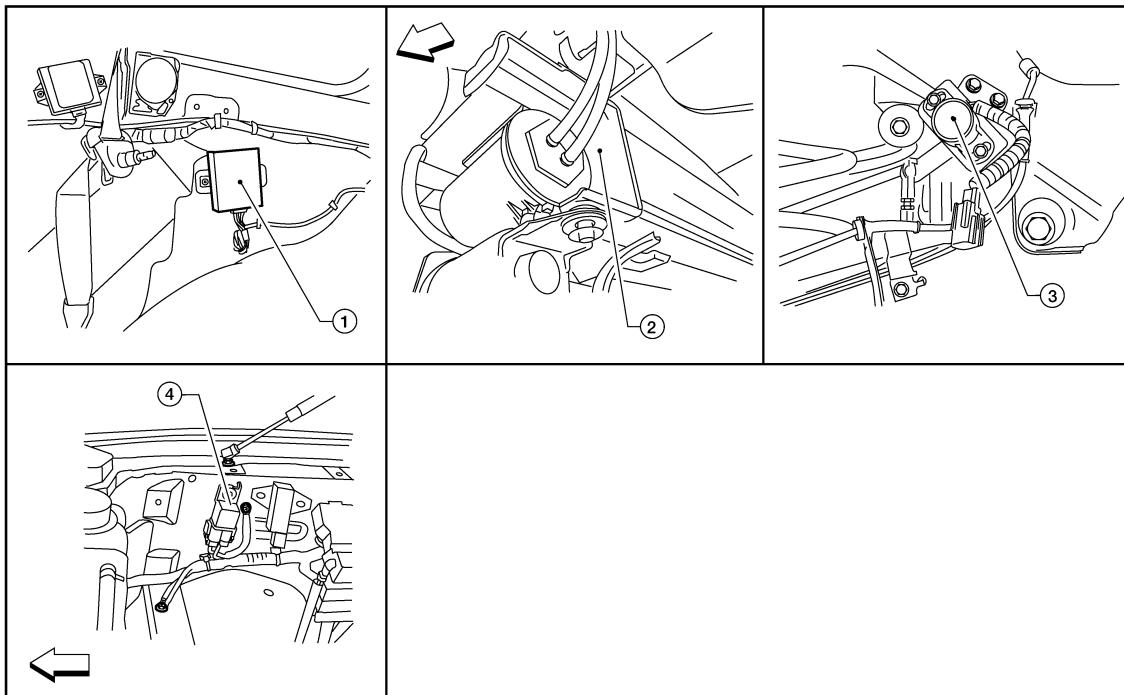

ALEIA0044ZZ

◀ :Front

1. Suspension control unit B3 (view with upper and lower luggage side finishers LH removed)
2. Suspension air compressor C9 (view under vehicle behind LH rear suspension)
3. Height sensor C8 (view under vehicle at LH rear suspension)
4. Compressor motor relay E130, E131 (view with battery removed)

## Component Description

INFOID:000000001603966

Part name	Description
Suspension control unit	<ul style="list-style-type: none"><li>• Monitors height sensor input to determine vehicle height.</li><li>• Actuates the compressor motor relay or exhaust valve solenoid to raise or lower the vehicle accordingly.</li><li>• Sends a ground signal to the combination meter to activate the CK SUSP indicator lamp.</li></ul>
Suspension air compressor (with built in exhaust valve solenoid)	<ul style="list-style-type: none"><li>• When the compressor is actuated, it pumps air into the system to raise the rear suspension.</li><li>• When the exhaust valve solenoid is actuated, it vents air from the system to lower the rear suspension.</li></ul>
Height sensor	Provides vehicle height input to the suspension control unit.

# DIAGNOSIS SYSTEM (SUSPENSION CONTROL UNIT)

< FUNCTION DIAGNOSIS >

## DIAGNOSIS SYSTEM (SUSPENSION CONTROL UNIT)

### CONSULT-III Function

INFOID:0000000001603968

CONSULT-III can display each diagnostic item using the diagnostic test modes shown following.

AIR LEVELIZER diagnosis mode	Description
WORK SUPPORT	Supports inspection and adjustment. Commands are transmitted to the suspension control unit for setting the status suitable for required operation, input/output signals are received from the suspension control unit and received data is displayed.
SELF-DIAG RESULTS	Displays suspension control unit self-diagnosis results.
DATA MONITOR	Displays suspension control unit input/output data in real time.
ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
ECU PART NUMBER	The part number of suspension control unit can be checked.

### WORK SUPPORT

Display Item List

Item	Description	Condition
STANDARD HEIGHT LEVEL	Resets the vehicle height to the initialization flag setting stored in the suspension control unit.	Vehicle unladen, set in a horizontal position and not moving. <b>NOTE:</b> Do not take your eyes off the vehicle while CONSULT-III is processing.
ADJUST HEIGHTINI	Sets the height initialization flag in the suspension control unit when the control unit has been replaced or when the initialization flag has been cleared using the "CLEAR HEIGHTINI" procedure.	Vehicle unladen, move vehicle forward and backward approx. 5 m (16.4 ft) and rock vehicle side to side. <b>NOTE:</b> Do not move vehicle while CONSULT-III is processing.
CLEAR HEIGHTINI	Clears the initialization flag in the suspension control unit.	Vehicle unladen.

### SELF-DIAG RESULTS

Display Item List

Refer to [SCS-33, "DTC Index"](#).

### DATA MONITOR

Display Item List

Display item [unit]	ALL SIGNALS	SELECTION FROM MENU
HEIGHT SEN [V]	X	X
HEIGHT CALC [mm]	X	X
SEN FIX TIME [HR]	X	X
HEIGHTINI VAL [V]	X	X
COMPRESSOR [ON/OFF]	X	X
EXH SOLENOID [ON/OFF]	X	X
ACG L [ON/OFF]	X	X

### ACTIVE TEST

**CAUTION:**

**Do not perform active test while driving.**

Display Item List

## DIAGNOSIS SYSTEM (SUSPENSION CONTROL UNIT)

### < FUNCTION DIAGNOSIS >

Test Item	Description
COMPRESSOR	ON/OFF
EXHAUST SOLENOID	ON/OFF
WARNING LAMP	ON/OFF

#### **CAUTION:**

The "COMPRESSOR active test will remain ON until it is turned off using CONSULT-III. Allowing the compressor to run for an extended period of time may cause damage to the suspension control system components due to excessive pressure.

#### **NOTE:**

- "TEST IS STOPPED" is displayed approximately 10 seconds after operation starts for all active test items except "COMPRESSOR".
- After "TEST IS STOPPED" is displayed, to perform test again, repeat step 6.

# C1801 VEHICLE HEIGHT SENSOR

< COMPONENT DIAGNOSIS >

## COMPONENT DIAGNOSIS

### C1801 VEHICLE HEIGHT SENSOR

#### Description

INFOID:000000001606091

The vehicle height sensor operates on a 5 volt reference signal from the suspension control unit. The suspension control unit also provides ground to the height sensor. Depending on vehicle height, the height sensor signal should have between 0.2V and 4.8V.

#### DTC Logic

INFOID:000000001606092

#### DTC DETECTION LOGIC

DTC	Display contents of CONSULT-III	Diagnostic item is detected when ...	Probable malfunction location	SCS
C1801	VEHICLE HEIGHT SENSOR	Vehicle height sensor voltage is less than 0.2V or greater than 4.8V for more than 60 seconds.	<ul style="list-style-type: none"><li>Height sensor power/ground supply. Refer to <a href="#">SCS-18, "HEIGHT SENSOR : Diagnosis Procedure"</a></li><li>Height sensor signal circuit. Refer to <a href="#">SCS-22, "Component Function Check"</a></li></ul>	F

#### Diagnosis Procedure

INFOID:000000001606093

##### 1. CHECK HEIGHT SENSOR OPERATION

###### ① CONSULT-III

- Turn ignition switch ON
- Select "HEIGT SEN" of AIR LEVELIZER data monitor test item.

###### HEIGHT SEN : 0.2V - 4.8V

Is the HEIGHT SEN voltage within the given range?

- YES >> Height sensor is operating normally.  
NO >> Refer to [SCS-22, "Diagnosis Procedure"](#).

# C1802 COMPRESSOR RELAY

< COMPONENT DIAGNOSIS >

## C1802 COMPRESSOR RELAY

### Description

INFOID:0000000001606094

The compressor motor relay is controlled by the suspension control unit. The suspension control unit supplies voltage to the coil side of the relay to activate it. The compressor motor relay, when activated, supplies power to the suspension air compressor.

### DTC Logic

INFOID:0000000001606095

### DTCT DETECTION LOGIC

DTC	Display contents of CONSULT-III	Diagnostic item is detected when ...	Probable malfunction location
C1802	COMPRESSOR RELAY	<ul style="list-style-type: none"><li>Driving transistor for the compressor relay is OFF and monitor voltage continues at a high level for more than 10 seconds.</li><li>Driving transistor for the compressor relay is ON and monitor voltage continues at a low level for more than 5 seconds.</li></ul>	Compressor motor relay. Refer to <a href="#">SCS-20, "Component Function Check"</a>

### Diagnosis Procedure

INFOID:0000000001606096

#### 1. CHECK COMPRESSOR MOTOR RELAY OPERATION

##### CAUTION:

The "COMPRESSOR" active test will remain ON until it is turned off using CONSULT-III. Allowing the compressor to run for an extended period of time may cause damage to the air levelizer system components due to excessive air pressure.



1. Turn ignition ON.
2. Select "COMPRESSOR" of AIR LEVELIZER active test items.
3. While operating test item, check that the suspension air compressor turns ON.

**ON : Compressor turns ON**

**OFF : Compressor turns OFF**

Does the suspension air compressor operate properly?

- YES >> Compressor motor relay and suspension air compressor are operating normally.  
NO >> Refer to [SCS-20, "Diagnosis Procedure"](#)

# C1803 EXHAUST SOLENOID

< COMPONENT DIAGNOSIS >

## C1803 EXHAUST SOLENOID

### Description

INFOID:0000000001606097

The exhaust valve solenoid controls the vent function of the suspension control system. The exhaust valve solenoid is built into the suspension air compressor. The suspension control unit supplies voltage to the exhaust valve solenoid to activate it.

### DTC Logic

INFOID:0000000001606098

### DTC DETECTION LOGIC

DTC	Display contents of CONSULT-III	Diagnostic item is detected when ...	Probable malfunction location
C1803	EXHAUST SOLENOID	<ul style="list-style-type: none"><li>Driving transistor for the exhaust valve solenoid is OFF and monitor voltage continues at a high level for more than 10 seconds.</li><li>Driving transistor for the exhaust valve solenoid is ON and monitor voltage continues at a low level for more than 5 seconds.</li></ul>	Open or short circuit in the exhaust valve solenoid control circuit. Refer to <a href="#">SCS-23, "Component Function Check"</a>

### Diagnosis Procedure

INFOID:0000000001606099

#### 1. CHECK EXHAUST SOLENOID OPERATION

##### CAUTION:

While operating this active test, the suspension control system will vent air pressure and the vehicle ride height will lower. Ensure the area around the vehicle is free from obstructions before beginning test.

##### CONSULT-III

1. Ensure the suspension control system has air pressure and is not drooping in the rear.
2. Select "EXHAUST SOLENOID" of AIR LEVELIZER active test items.
3. While operating test item, check that the exhaust valve solenoid opens to vent air from the system. The vehicle should lower when the exhaust valve solenoid is activated.

**ON : Air vents and vehicle ride height lowers**

**OFF : No air vents and vehicle ride height remains constant**

##### Does the system vent properly?

YES >> Exhaust valve solenoid is operating normally.

NO >> Refer to [SCS-23, "Description"](#)

# C1804 HEIGHT ADJUSTING MALFUNCTION (COMPRESSOR)

< COMPONENT DIAGNOSIS >

## C1804 HEIGHT ADJUSTING MALFUNCTION (COMPRESSOR)

### Description

INFOID:0000000001606262

The compressor motor relay is controlled by the suspension control unit. The suspension control unit supplies voltage to the coil side of the relay to activate it. The compressor motor relay, when activated, supplies power to the suspension air compressor.

### DTC Logic

INFOID:0000000001606263

### DTC DETECTION LOGIC

DTC	Display contents of CONSULT-III	Diagnostic item is detected when ...	Probable malfunction location
C1804	VEHICLE HEIGHT ADJUSTING MALFUNCTION (COMPRESSOR)	Continuous compressor relay ON time is more than 120 seconds.	Compressor motor relay. Refer to <a href="#">SCS-20, "Component Function Check"</a>

### Diagnosis Procedure

INFOID:0000000001606264

#### 1. CHECK COMPRESSOR MOTOR RELAY OPERATION

##### **CAUTION:**

The "COMPRESSOR" active test will remain ON until it is turned off using CONSULT-III. Allowing the compressor to run for an extended period of time may cause damage to the air levelizer system components due to excessive air pressure.

(CONSULT-III

1. Turn ignition ON.
2. Select "COMPRESSOR" of AIR LEVELIZER active test items.
3. While operating test item, check that the suspension air compressor turns ON.

**ON : Compressor turns ON**

**OFF : Compressor turns OFF**

Does the suspension air compressor operate properly?

- YES >> Compressor motor relay and suspension air compressor are operating normally.  
NO >> Refer to [SCS-20, "Diagnosis Procedure"](#)

# C1805 HEIGHT ADJUSTING MALFUNCTION (EXH SOLENOID)

< COMPONENT DIAGNOSIS >

## C1805 HEIGHT ADJUSTING MALFUNCTION (EXH SOLENOID)

### Description

INFOID:0000000001606266

The exhaust valve solenoid controls the vent function of the suspension control system. The exhaust valve solenoid is built into the suspension air compressor. The suspension control unit supplies voltage to the exhaust valve solenoid to activate it.

### DTC Logic

INFOID:0000000001606267

### DTC DETECTION LOGIC

DTC	Display contents of CONSULT-III	Diagnostic item is detected when ...	Probable malfunction location
C1805	VEHICLE HEIGHT ADJUSTING MALFUNCTION (EXHAUST SOLENOID)	Continuous exhaust valve solenoid ON time is more than 120 seconds.	Short to power in the exhaust valve solenoid control circuit. Refer to <a href="#">SCS-23, "Component Function Check"</a>

### Diagnosis Procedure

INFOID:0000000001606268

#### 1. CHECK EXHAUST SOLENOID OPERATION

##### CAUTION:

While operating this active test, the suspension control system will vent air pressure and the vehicle ride height will lower. Ensure the area around the vehicle is free from obstructions before beginning test.

##### CONSULT-III

1. Ensure the suspension control system has air pressure and is not drooping in the rear.
2. Select "EXHAUST SOLENOID" of AIR LEVELIZER active test items.
3. While operating test item, check that the exhaust valve solenoid opens to vent air from the system. The vehicle should lower when the exhaust valve solenoid is activated.

**ON : Air vents and vehicle ride height lowers**

**OFF : No air vents and vehicle ride height remains constant**

##### Does the system vent properly?

YES >> Exhaust valve solenoid is operating normally.

NO >> Refer to [SCS-23, "Description"](#)

# C1806 VEHICLE HEIGHT SENSOR LOCKING MALFUNCTION

< COMPONENT DIAGNOSIS >

## C1806 VEHICLE HEIGHT SENSOR LOCKING MALFUNCTION

### Description

INFOID:0000000001608338

The vehicle height sensor operates on a 5 volt reference signal from the suspension control unit. The suspension control unit also provides ground to the height sensor.

### DTC Logic

INFOID:0000000001608339

### DTC DETECTION LOGIC

DTC	Display contents of CONSULT-III	Diagnostic item is detected when ...	Probable malfunction location
C1806	VEHICLE HEIGHT SENSOR LOCKING MALFUNCTION	Output sensor voltage variation $\pm 0.02V$ is more than 100 seconds when vehicle height range is normal.	<ul style="list-style-type: none"><li>Height sensor power/ground supply. Refer to <a href="#">SCS-18, "HEIGHT SENSOR : Diagnosis Procedure"</a></li><li>Charging system malfunction. Refer to <a href="#">CHG-9, "Inspection Procedure"</a></li></ul>

### Diagnosis Procedure

INFOID:0000000001608340

#### 1. CHECK HEIGHT SENSOR OPERATION

##### CONSULT-III

1. Turn ignition switch ON
2. Select "HEIGT SEN" of AIR LEVELIZER data monitor test item.

**HEIGHT SEN : 0.2V - 4.8V with no more than  $\pm 0.02V$  variation**

Is the HEIGHT SEN voltage within the given range?

- YES >> Height sensor is operating normally.  
NO >> Refer to [SCS-22, "Diagnosis Procedure"](#).

# C1807 SENSOR 5V MALFUNCTION

< COMPONENT DIAGNOSIS >

## C1807 SENSOR 5V MALFUNCTION

### Description

INFOID:0000000001606257

The vehicle height sensor operates on a 5 volt reference signal from the suspension control unit. The suspension control unit also provides ground to the height sensor.

### DTC Logic

INFOID:0000000001606258

### DTC DETECTION LOGIC

DTC	Display contents of CONSULT-III	Diagnostic item is detected when ...	Probable malfunction location
C1807	SENSOR 5V MALFUNCTION	Sensor reference voltage is less than 0.8V or more than 6V for 20 seconds.	<ul style="list-style-type: none"><li>Height sensor power/ground supply. Refer to <a href="#">SCS-18, "HEIGHT SENSOR : Diagnosis Procedure"</a></li><li>Charging system malfunction. Refer to <a href="#">CHG-9, "Inspection Procedure"</a></li></ul>

### Diagnosis Procedure

INFOID:0000000001606259

#### 1. POWER SUPPLY CIRCUIT CHECK


1. Disconnect height sensor connector C8.
2. Turn the ignition switch ON.
3. Check voltage between the height sensor connector C8 terminal 1 and ground.

Connector	(+)	(-)	Voltage
C8	1	Ground	5V

Is 5V present?

YES >> System is working normally.

NO >> Check harness or connector for open or short. If OK, replace the suspension control unit. Refer to [RSU-27, "Removal and Installation"](#)

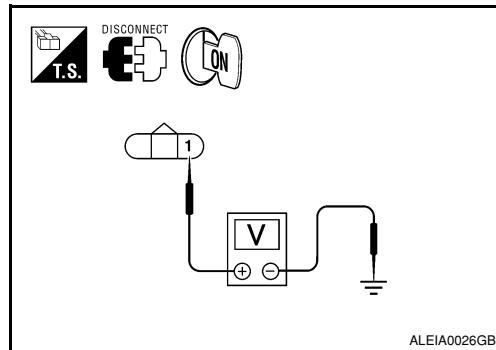

# C1808 INTEGRAL TIME MALFUNCTION SUPPLYING AIR

< COMPONENT DIAGNOSIS >

## C1808 INTEGRAL TIME MALFUNCTION SUPPLYING AIR

### Description

INFOID:0000000001606106

The suspension air compressor is supplied power by the compressor motor relay. The suspension control unit supplies power to the compressor motor relay in order to activate the relay and subsequently activate the suspension air compressor.

### DTC Logic

INFOID:0000000001606107

### DTC DETECTION LOGIC

DTC	Display contents of CONSULT-III	Diagnostic item is detected when ...	Probable malfunction location
C1808	INTEGRAL TIME MALFUNCTION SUPPLYING AIR	A suspension air compressor ON request has been in effect for 180 seconds and the suspension air compressor has not activated during that time.	<ul style="list-style-type: none"><li>Compressor motor relay. Refer to <a href="#">SCS-20, "Diagnosis Procedure"</a></li><li>Suspension air compressor. Refer to <a href="#">SCS-17, "SUSPENSION AIR COMPRESSOR : Diagnosis Procedure"</a></li></ul>

### Diagnosis Procedure

INFOID:0000000001606108

#### 1. CHECK COMPRESSOR MOTOR RELAY OPERATION

##### **CAUTION:**

The "COMPRESSOR" active test will remain ON until it is turned off using CONSULT-III. Allowing the compressor to run for an extended period of time may cause damage to the air levelizer system components due to excessive air pressure.

##### CONSULT-III

1. Turn ignition ON.
2. Select "COMPRESSOR" of AIR LEVELIZER active test items.
3. While operating test item, check that the suspension air compressor turns ON.

**ON : Compressor turns ON**

**OFF : Compressor turns OFF**

Does the suspension air compressor operate properly?

YES >> Compressor motor relay and suspension air compressor are operating normally.

NO >> Refer to [SCS-20, "Diagnosis Procedure"](#)

# POWER SUPPLY AND GROUND CIRCUIT

< COMPONENT DIAGNOSIS >

## POWER SUPPLY AND GROUND CIRCUIT SUSPENSION CONTROL UNIT

### SUSPENSION CONTROL UNIT : Diagnosis Procedure

INFOID:000000001606270

#### 1. CHECK FUSES

Check that the following fuses of the suspension control unit are not blown.

Unit	Terminals	Signal name	Fuse No.
Suspension control unit	7	Battery power	29
	6	Ignition switch ON or START	12

Are the fuses OK?


YES >> GO TO 2

NO >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse.

#### 2. POWER SUPPLY CIRCUIT CHECK

1. Disconnect suspension control unit connector B3.
2. Check voltage between the suspension control unit connector B3 and ground.

Connector	(+)	(-)	OFF	ACC	ON	START
Connector	Terminal					
B3	7	Ground	Battery voltage	Battery voltage	Battery voltage	Battery voltage
	6	Ground	0V	0V	Battery voltage	Battery voltage

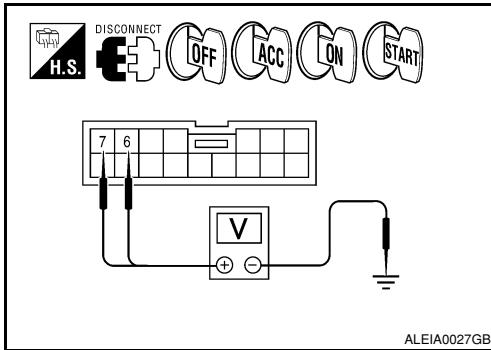

Are the voltage results as specified?

YES >> GO TO 3

NO >> • Check connector housings for disconnected or loose terminals.  
• Repair harness or connector.

#### 3. GROUND CIRCUIT CHECK


1. Turn ignition switch OFF.
2. Check continuity between suspension control unit harness connector B3 and ground.

Connector	Terminal	—	Continuity
B3	16	Ground	Yes

Is continuity present?

YES >> Inspection End.

NO >> Repair harness or connector.

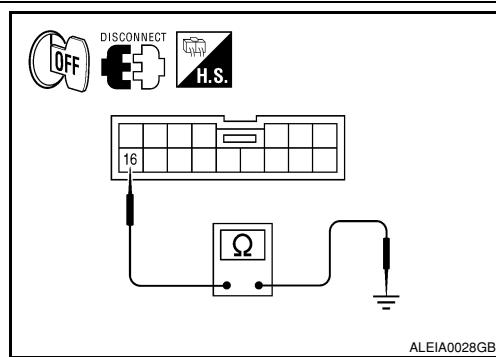

## SUSPENSION AIR COMPRESSOR

### SUSPENSION AIR COMPRESSOR : Diagnosis Procedure

INFOID:000000001603972

#### 1. CHECK COMPRESSOR MOTOR RELAY OPRATION


CONSULT-III

# POWER SUPPLY AND GROUND CIRCUIT

## < COMPONENT DIAGNOSIS >

1. Disconnect the suspension air compressor connector C9.
2. Turn ignition switch ON.
3. Select "COMPRESSOR" under AIR LEVELIZER active test items.
4. While operating the test item, check voltage at the suspension air compressor connector C9 terminal 4.

Connector	Terminal	(+)	(-)	Voltage
C9	4	Ground	Battery Voltage	

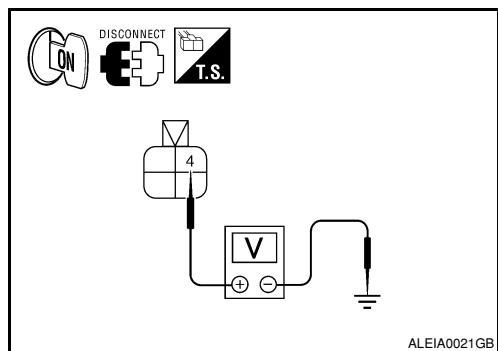

Is battery voltage present?


- YES >> GO TO 3.  
NO >> GO TO 2.

## 2. COMPRESSOR MOTOR RELAY POWER SUPPLY CIRCUIT CHECK

1. Turn ignition switch OFF.
2. Disconnect the compressor motor relay connector.
3. Check continuity between compressor motor relay connector E131 (A) terminal 3 and suspension air compressor connector C9 (B) terminal 4.

Connector	Terminal	Connector	Terminal	Continuity
E131	3	C9	4	Yes

4. Check continuity between compressor motor relay connector E131 (A) terminal 3 and ground.

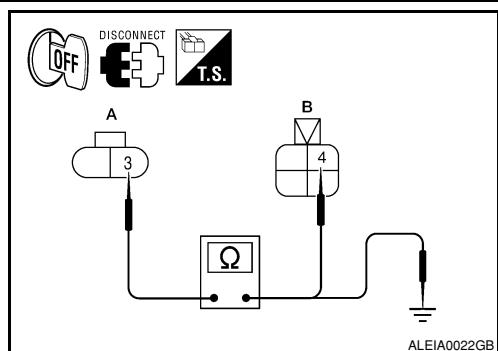

Connector	Terminal	—	Continuity
E131	3	Ground	No

Are the continuity test results as specified?

- YES >> Check compressor motor relay. Refer to [SCS-20, "Diagnosis Procedure"](#)  
NO >> Repair harness or connector.

## 3. GROUND CIRCUIT CHECK

1. Turn ignition switch OFF.
2. Check continuity between suspension air compressor connector C9 terminals 1 and 3 and ground.

Connector	Terminal	—	Continuity
C9	1	Ground	Yes

Is continuity present?


- YES >> Inspection End.  
NO >> Repair harness or connector.

## HEIGHT SENSOR

### HEIGHT SENSOR : Diagnosis Procedure

INFOID:0000000001603973

## 1. POWER SUPPLY CIRCUIT CHECK

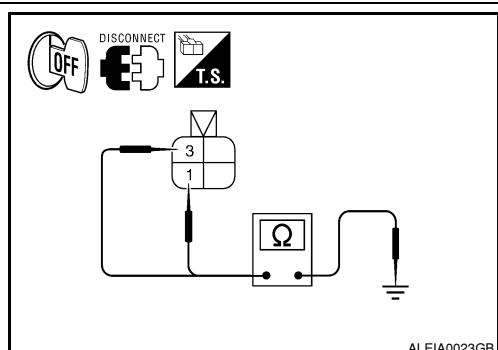

# POWER SUPPLY AND GROUND CIRCUIT

## < COMPONENT DIAGNOSIS >


1. Disconnect height sensor connector C8.
2. Turn the ignition switch ON.
3. Check voltage between the height sensor connector C8 terminal 1 and ground.

Connector	(+)	(-)	Voltage
Terminal			
C8	1	Ground	5V

Is 5V present?

YES >> GO TO 2

NO >> Check harness or connector for open or short. If OK, replace the suspension control unit. Refer to [RSU-27. "Removal and Installation"](#)

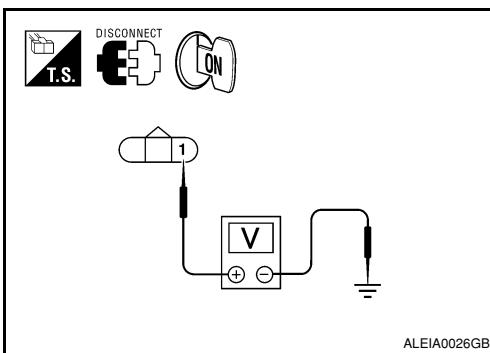

ALEIA0026GB

## 2.GROUND CIRCUIT CHECK


1. Turn ignition switch OFF.
2. Check continuity between height sensor connector C8 terminal 3 and ground.

Connector	Terminal	—	Continuity
C8	3	Ground	Yes

Is continuity present?

YES >> Ground circuit is OK.

NO >> Repair harness or connector.

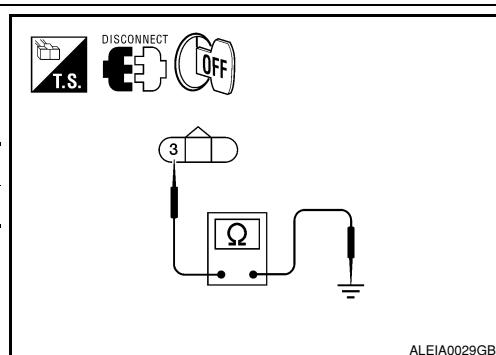

ALEIA0029GB

# COMPRESSOR MOTOR RELAY

< COMPONENT DIAGNOSIS >

## COMPRESSOR MOTOR RELAY

### Description

INFOID:0000000001604573

Receives suspension air compressor ON signal from suspension control unit. When activated, the compressor motor relay supplies power to the suspension air compressor.

### Component Function Check

INFOID:0000000001604574

#### 1. CHECK COMPRESSOR MOTOR RELAY OPERATION

##### CAUTION:

The "COMPRESSOR" active test will remain ON until it is turned off using CONSULT-III. Allowing the compressor to run for an extended period of time may cause damage to the suspension control system components due to excessive air pressure.



1. Turn ignition ON.

2. Select "COMPRESSOR" of AIR LEVELIZER active test items.

3. While operating test item, check that the suspension air compressor turns ON.

**ON : Compressor turns ON**

**OFF : Compressor turns OFF**

Does the suspension air compressor operate properly?

YES >> Compressor motor relay and suspension air compressor are operating normally.

NO >> Refer to [SCS-20, "Diagnosis Procedure"](#)

### Diagnosis Procedure

INFOID:0000000001604575

#### 1. CHECK COMPRESSOR "ON" SIGNAL FROM SUSPENSION CONTROL UNIT



1. Turn ignition switch ON.

2. Disconnect compressor motor relay connector E130.

3. Select "COMPRESSOR" of AIR LEVELIZER active test items.


4. While operating test item, check voltage to compressor motor relay connector E130 terminal 2.

Connector	(+)	(-)	Voltage
E130	2	Ground	Battery voltage

Is battery voltage present while operating test item?

YES >> GO TO 3.

NO >> GO TO 2.

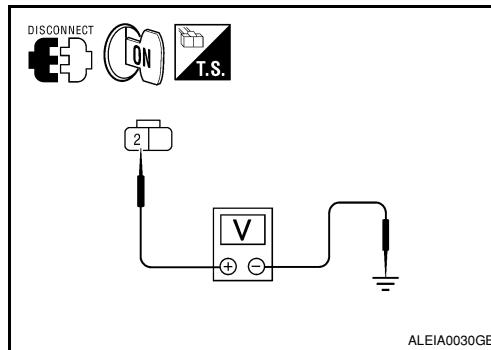

#### 2. CHECK COMPRESSOR "ON" SIGNAL CIRCUIT


1. Turn ignition switch OFF.

2. Disconnect suspension control unit connector B3.

3. Check continuity between suspension control unit connector B3 (A) terminal 1 and compressor motor relay connector E130 (B) terminal 2.

Connector	A	Connector	B	Continuity
Connector	Terminal	Connector	Terminal	Yes
B3	1	E130	2	

4. Check continuity between suspension control unit connector B3 (A) terminal 1 and ground.

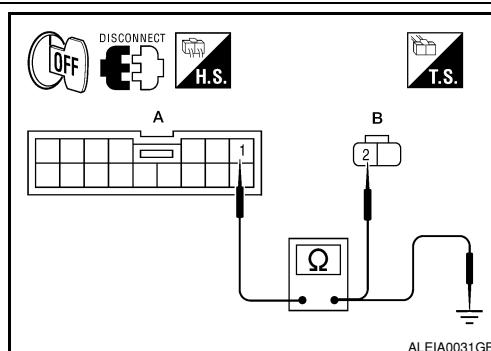

# COMPRESSOR MOTOR RELAY

## < COMPONENT DIAGNOSIS >

Connector	Terminal	—	Continuity
B3	1	Ground	No

Are the continuity test results as specified?

- YES >> Replace the suspension control unit. Refer to [RSU-27, "Removal and Installation"](#)  
NO >> Repair harness or connector.


### 3.CHECK COMPRESSOR MOTOR RELAY GROUND

1. Turn ignition switch OFF.
2. Check continuity between compressor motor relay connector E130 terminal 1 and ground.

Connector	Terminal	—	Continuity
E130	1	Ground	Yes

Is continuity present?

- YES >> GO TO 4.  
NO >> Repair harness or connector.

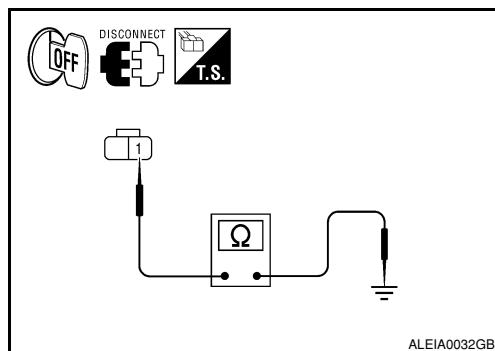


### 4.CHECK COMPRESSOR MOTOR RELAY POWER SUPPLY

1. Disconnect compressor motor relay connector E131.
2. Check voltage between compressor motor relay E131 terminal 5 and ground.

(+)	(-)	Voltage
Connector	Terminal	
E131	5	Ground
		Battery voltage

Is battery voltage present?

- YES >> GO TO 5.  
NO >> Inspect fuse and repair harness or connector.

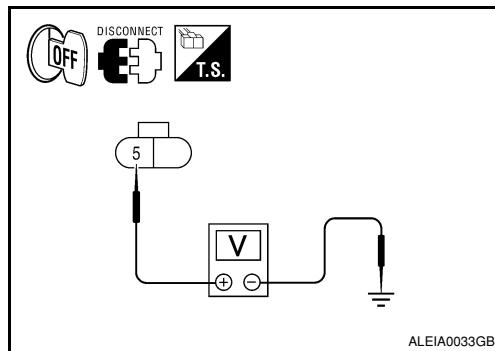


### 5.CHECK COMPRESSOR MOTOR RELAY OUTPUT

1. Connect compressor motor relay connectors E130 and E131.
2. Disconnect suspension air compressor connector C9.
3. Turn ignition ON.
4. Select "COMPRESSOR" of AIR LEVELIZER active test items.
5. Check voltage between compressor motor relay C9 terminal 4 and ground.

(+)	(-)	Voltage
Connector	Terminal	
C9	4	Ground
		Battery voltage

Is battery voltage present?

- YES >> Compressor motor relay is functioning properly.  
NO >> GO TO 6.

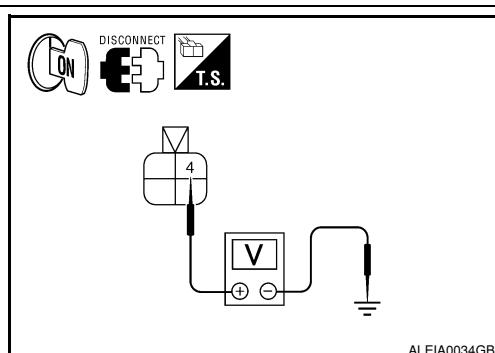

### 6.CHECK AIR COMPRESSOR POWER SUPPLY CIRCUIT

Check the air compressor power supply circuit. Refer to [SCS-17, "SUSPENSION AIR COMPRESSOR : Diagnosis Procedure"](#)

Does the power supply circuit test OK?

- YES >> Replace the compressor motor relay.  
NO >> Repair harness or connector.

# HEIGHT SENSOR SIGNAL CIRCUIT

< COMPONENT DIAGNOSIS >

## HEIGHT SENSOR SIGNAL CIRCUIT

### Description

INFOID:0000000001603974

Supplies vehicle height input to the suspension control unit.

### Component Function Check

INFOID:0000000001604553

#### 1. CHECK HEIGHT SENSOR OPERATION

##### (B) CONSULT-III

1. Select "HEIGT SEN" of AIR LEVELIZER data monitor test item.
2. While monitoring test item, add or take away weight from the rear of the vehicle. Check that the voltage value changes with vehicle height.

##### HEIGHT SEN : Voltage changes with vehicle height

Is the HEIGHT SEN data monitor responding normally?

YES >> Height sensor is operating normally.

NO >> Refer to [SCS-22, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:0000000001603975

#### 1. CHECK HEIGHT SENSOR POWER AND GROUND SUPPLY

Check height sensor power and ground supply. Refer to [SCS-18, "HEIGHT SENSOR : Diagnosis Procedure"](#)

Are the inspection results normal?

YES >> GO TO 2.


NO >> Repair harness or connector.

#### 2. CHECK HEIGHT SENSOR SIGNAL CIRCUIT

1. Disconnect suspension control unit connector B3 and height sensor connector C8.
2. Check continuity between suspension control unit connector B3 (A) terminal 3 and height sensor connector C8 (B) terminal 2.

A		B		Continuity
Connector	Terminal	Connector	Terminal	
B3	3	C8	2	Yes

3. Check continuity between display unit harness connector B3 (A) terminal 3 and ground.

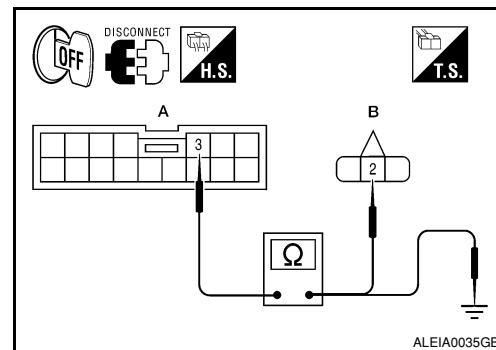

A		—		Continuity
Connector	Terminal	—	Ground	
B3	3	—	Ground	No

Are the continuity results as specified?

YES >> Replace the height sensor. Refer to [RSU-25, "Removal and Installation"](#)

NO >> Repair harness or connector.

# EXHAUST VALVE SOLENOID CIRCUIT

< COMPONENT DIAGNOSIS >

## EXHAUST VALVE SOLENOID CIRCUIT

### Description

INFOID:0000000001603976

Receives exhaust valve solenoid signal from suspension control unit. When activated, the exhaust valve solenoid releases air pressure from the suspension control system.

### Component Function Check

INFOID:0000000001604554

#### 1. CHECK EXHAUST SOLENOID OPERATION

##### CAUTION:

While operating this active test, the suspension control system will vent air pressure and the vehicle ride height will lower. Ensure the area around the vehicle is free from obstructions before beginning test.

##### CONSULT-III

1. Ensure the suspension control system has air pressure and is not drooping in the rear.
2. Select "EXHAUST SOLENOID" of AIR LEVELIZER active test items.
3. While operating test item, check that the exhaust valve solenoid opens to vent air from the system. The vehicle should lower when the exhaust valve solenoid is activated.

**ON : Air vents and vehicle ride height lowers**

**OFF : No air vents and vehicle ride height remains constant**

##### Does the system vent properly?

YES >> Exhaust valve solenoid is operating normally.

NO >> Refer to [SCS-23, "Diagnosis Procedure"](#)

### Diagnosis Procedure


INFOID:0000000001603977

#### 1. CHECK EXHAUST VALVE SOLENOID SIGNAL

##### CONSULT-III

1. Connect suspension control unit connector B3.
2. Turn ignition switch ON.
3. Select "EXHAUST SOLENOID" of AIR LEVELIZER active test items.
4. While test item is operating, check signal between suspension air compressor connector C9 terminal 2 and ground.

( + )		( - )	Voltage
Connector	Terminal	Ground	Battery voltage
C9	2		

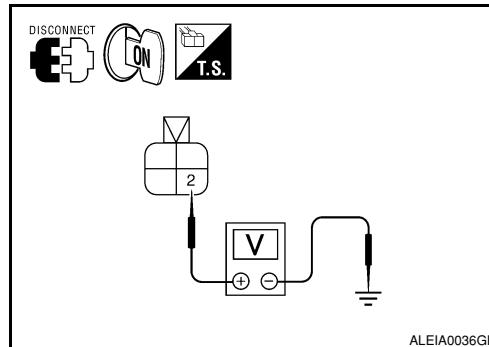

##### Is battery voltage present?


YES >> GO TO 3.

NO >> GO TO 2.

#### 2. CHECK CONTINUITY OF EXHAUST VALVE SOLENOID CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect suspension control unit connector B3 and suspension air compressor connector C9.
3. Check continuity between suspension control unit connector B3 (A) terminal 9 and suspension air compressor connector C9 (B) terminal 2.

Connector	Terminal	Connector	Terminal	Continuity
				Yes
B3	9	C9	2	

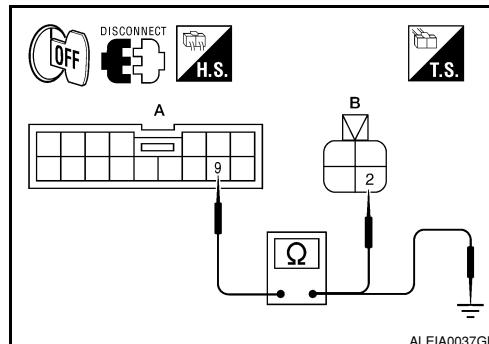

## EXHAUST VALVE SOLENOID CIRCUIT

### < COMPONENT DIAGNOSIS >

- Check continuity between suspension control unit connector B3 (A) terminal 9 and ground.

A		—	Continuity
Connector	Terminal		
B3	9	Ground	No

Are the continuity test results as specified?

- YES >> Replace the suspension control unit. Refer to [RSU-27, "Removal and Installation"](#)  
NO >> Repair harness or connector.


### 3.CHECK SUSPENSION AIR COMPRESSOR GROUND

- Turn ignition switch OFF.
- Check continuity between suspension air compressor connector C9 terminals 1 and 3 and ground.

Connector	Terminal	—	Continuity
C9	1	Ground	Yes
	3		

Is continuity present?

- YES >> Replace the suspension air compressor. Refer to [RSU-23, "Removal and Installation"](#)  
NO >> Repair harness or connector.

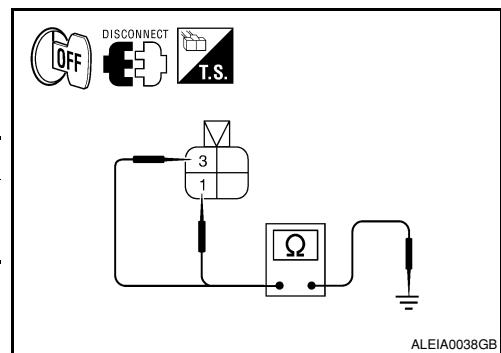

# CK SUSP WARNING INDICATOR CONTROL CIRCUIT

< COMPONENT DIAGNOSIS >

## CK SUSP WARNING INDICATOR CONTROL CIRCUIT

### Description

INFOID:0000000001606112

The CK SUSP warning lamp is controlled by a ground signal provided to the combination meter by the suspension control unit.

### Component Function Check

INFOID:0000000001606113

#### 1. CHECK WARNING LAMP OPERATION

##### ( CONSULT-III

1. Turn ignition ON.
2. Select "WARNING LAMP" of AIR LEVELIZER active test items.
3. While operating test item, check that the warning lamp activates.

**ON : Warning lamp turns ON**

**OFF : Warning lamp turns OFF**

Does the warning lamp operate properly?

YES >> Warning lamp is operating normally.

NO >> Refer to [SCS-25, "Diagnosis Procedure"](#)

### Diagnosis Procedure

INFOID:0000000001606114

#### 1. PERFORM SUSPENSION CONTROL SYSTEM SELF-DIAGNOSIS

##### ( CONSULT-III

1. Turn ignition ON.
2. Perform SELF DIAGNOSIS function of AIR LEVELIZER system.

Are any DTC's present?

YES >> Refer to [SCS-33, "DTC Index"](#)

NO >> • If warning lamp is always ON, GO TO 2.  
• If warning lamp is always OFF, GO TO 3

#### 2. CHECK SUSPENSION CONTROL UNIT WARNING LAMP CONTROL

1. Turn ignition OFF.
2. Disconnect the suspension control unit connector B3.
3. Turn ignition ON.

Does the CK SUSP warning lamp turn ON?

YES >> GO TO 3.


NO >> Replace the suspension control unit. Refer to [RSU-27, "Removal and Installation"](#)

#### 3. CHECK CONTINUITY OF WARNING LAMP CONTROL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect suspension control unit connector B3 and combination meter connector M24.
3. Check continuity between suspension control unit connector B3 (A) terminal 10 and combination meter connector M24 (B) terminal 3.

A		B		Continuity
Connector	Terminal	Connector	Terminal	
B3	10	M24	3	Yes

4. Check continuity between suspension control unit connector B3 (A) terminal 10 and ground.

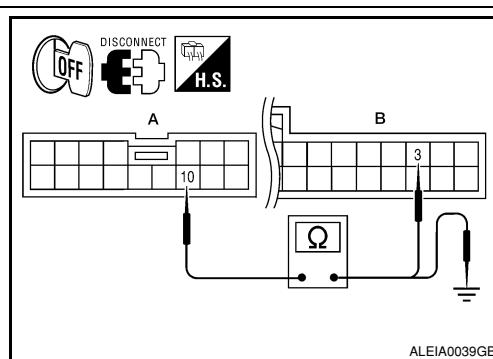

## CK SUSP WARNING INDICATOR CONTROL CIRCUIT

< COMPONENT DIAGNOSIS >

---

A		—	Continuity
Connector	Terminal		
B3	10	Ground	No

Are the continuity test results as specified?

YES    >> Replace the combination meter. Refer to [MWI-104, "Removal and Installation"](#)

NO    >> Repair harness or connector.

# SUSPENSION CONTROL UNIT

< ECU DIAGNOSIS >


## ECU DIAGNOSIS

### SUSPENSION CONTROL UNIT

Reference Value

INFOID:000000001603969

TERMINAL LAYOUT

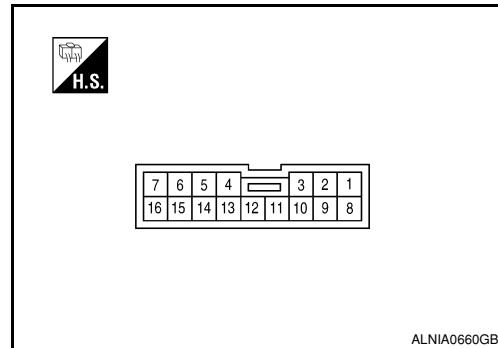

### PHYSICAL VALUES

Terminal (Wire color)		Description		Condition		Reference value (Approx.)
+	-	Signal name	Input/ Output			
1 (V)	Ground	Compressor relay output	Output	Ignition switch ON	Air levelizer raising vehicle ride height	Battery voltage
3 (W)	Ground	Height sensor input	Input	Ignition switch ON	—	0.2V - 4.8V
5 (R)	Ground	VREF output (height sensor)	Output	Ignition switch ON	—	5V
6 (G/R)	Ground	IGN power supply	Input	Ignition switch ON or START	—	Battery voltage
7 (W/L)	Ground	BAT power supply	Input	Ignition switch OFF	—	Battery voltage
8 (G/W)	Ground	Diagnostic K-line	Input/ Output	—	—	—
9 (SB)	Ground	Exhaust valve output	Output	Ignition switch ON	Air levelizer lowering vehicle ride height (venting)	Battery voltage
10 (BR)	Ground	Warning lamp output	Output	Ignition switch ON	Warning lamp ON	0V
					Warning lamp OFF	Battery voltage
14 (L)	Ground	Height sensor ground	Output	Ignition switch ON	—	Less than 0.2V
15 (BR/W)	Ground	Generator input	Input	Ignition switch ON	Charge light ON	0V
					Charge light OFF	Battery voltage
16 (B)	Ground	Suspension control unit ground	Input	Ignition switch ON	—	Less than 0.2V


## SUSPENSION CONTROL UNIT

## < ECU DIAGNOSIS >

## Wiring Diagram

INFOID:0000000001603970

## SUSPENSION CONTROL SYSTEM

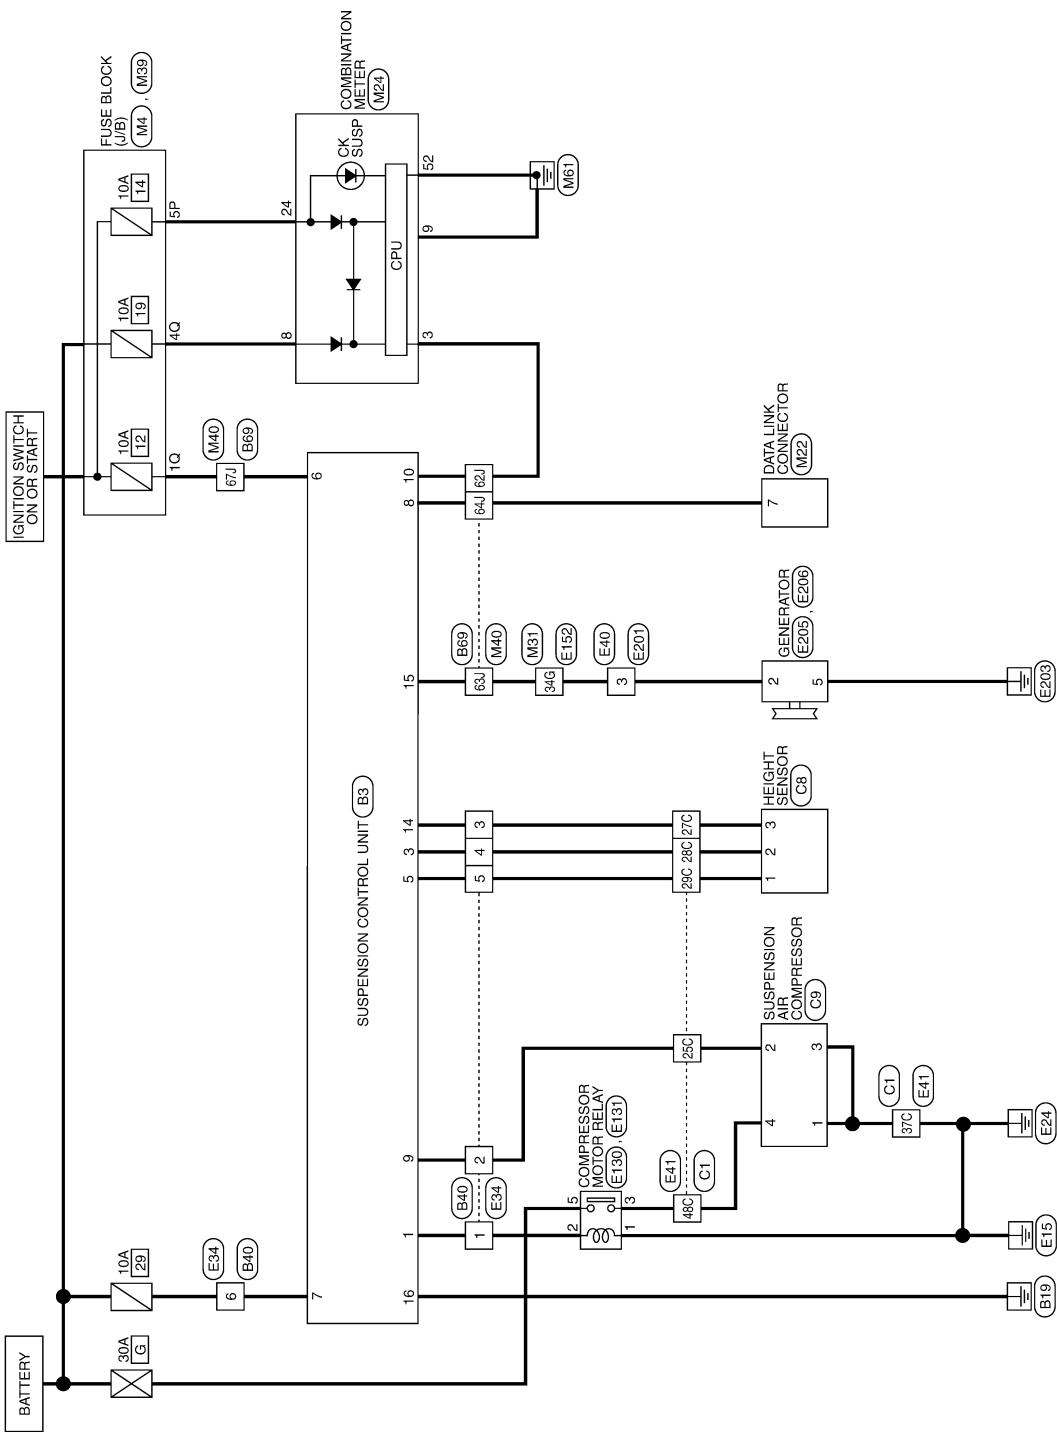


ALEWA0008GE

# SUSPENSION CONTROL UNIT


< ECU DIAGNOSIS >

## SUSPENSION CONTROL SYSTEM CONNECTORS

Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

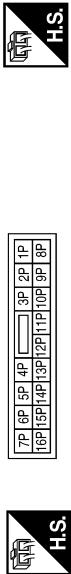


Connector No.	M31
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

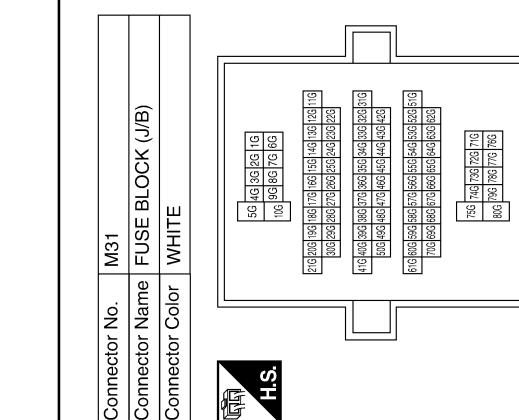


Terminal No.	Color of Wire	Signal Name
34G	BR/W	—

Connector No.	M22
Connector Name	DATA LINK CONNECTOR
Connector Color	WHITE

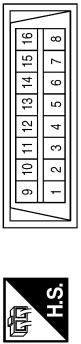


Terminal No.	Color of Wire	Signal Name
7	G/W	K-LINE

Connector No.	M39
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

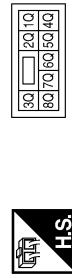

Connector No.	M24
Connector Name	COMBINATION METER
Connector Color	WHITE

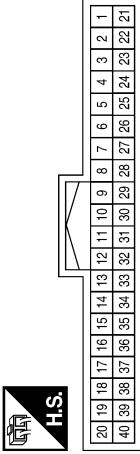

Terminal No.	Color of Wire	Signal Name
3	BR	—
8	Y/R	—
9	B	—
24	O/L	—
52	B	—

A B C D E F G H I K L M Z P


SCS

ALEIA0017GB


# SUSPENSION CONTROL UNIT

< ECU DIAGNOSIS >

Terminal No.	Color of Wire	Signal Name
62J	BR	—
63J	BR/W	—
64J	G/W	—
67J	G/R	—

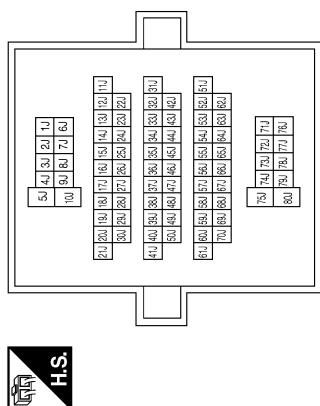

Connector No.	Connector Name	Connector Color	Wire To Wire	Signal Name
M40	WIRE TO WIRE	WHITE	—	—
62J	BR	—	—	—
63J	BR/W	—	—	—
64J	G/W	—	—	—
67J	G/R	—	—	—

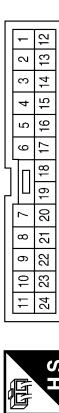


Terminal No.	Color of Wire	Signal Name
1	V	—
2	SB	—
3	L	—
4	W	—
5	R	—
6	W/L	—



Terminal No.	Color of Wire	Signal Name
1	V	—
2	SB	—
3	L	—
4	W	—
5	R	—
6	W/L	—

Connector No.	Connector Name	Connector Color	Wire To Wire	Signal Name
E41	WIRE TO WIRE	GRAY	—	—
25C	SB	—	—	—
27C	L	—	—	—
28C	W	—	—	—
29C	R	—	—	—
37C	B	—	—	—
48C	SB	—	—	—

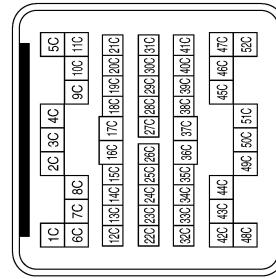

Connector No.	Connector Name	Connector Color	Wire To Wire	Signal Name
E40	WIRE TO WIRE	BLACK	—	—
3	BR/W	—	—	—




ALEIA0018GB

# SUSPENSION CONTROL UNIT

< ECU DIAGNOSIS >

A B C D E F G H I J K L M N O P SCS

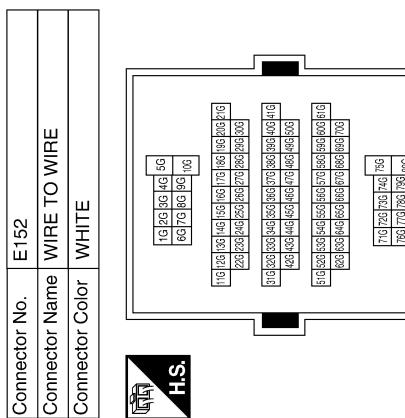

Terminal No.	Color of Wire	Signal Name
3	SB	-
5	Y/B	-

Connector No.	E130
Connector Name	COMPRESSOR MOTOR RELAY
Connector Color	WHITE

Terminal No.	Color of Wire	Signal Name
1	B	-
2	V	-

Connector No.	E201
Connector Name	WIRE TO WIRE
Connector Color	BLACK

Terminal No.	Color of Wire	Signal Name
3	BRW	-
5	BRW	-

Terminal No.	Color of Wire	Signal Name
34G	BRW	-



Connector No.	E205
Connector Name	GENERATOR
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
5	B	-


Terminal No.	Color of Wire	Signal Name
2	BRW	-

ALEIA0019GB

# SUSPENSION CONTROL UNIT


< ECU DIAGNOSIS >

Connector No.	B3
Connector Name	SUSPENSION CONTROL UNIT
Connector Color	WHITE

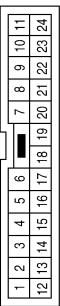


Terminal No.	Color of Wire	Signal Name
1	V	COMPRESSOR RELAY OUTPUT
3	W	HEIGHT SENSOR INPUT
5	R	VREF OUTPUT
6	G/R	IGN
7	W/L	BAT
8	G/W	K-LINE
9	SB	EXHAUST VALVE OUTPUT
10	BR	WARNING LAMP OUTPUT
14	L	HEIGHT SENSOR GND
15	BR/W	ALTERNATOR INPUT
16	B	GND

Connector No.	B3
Connector Name	SUSPENSION CONTROL UNIT
Connector Color	WHITE

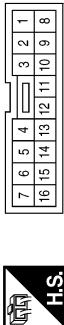


Connector No.	B40
Connector Name	WIRE TO WIRE
Connector Color	WHITE

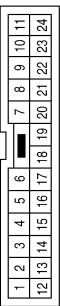

Terminal No.	Color of Wire	Signal Name
1	V	—
2	SB	—
3	L	—
4	W	—
5	R	—
6	W/L	—

Connector No.	B69
Connector Name	WIRE TO WIRE
Connector Color	WHITE

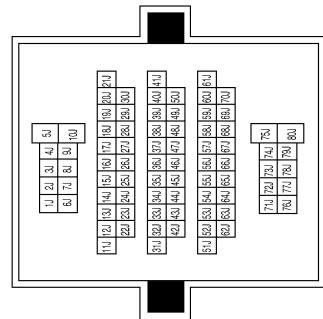

# SUSPENSION CONTROL UNIT

< ECU DIAGNOSIS >

A  
B  
C  
D

SCS

F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

Connector No.	C9
Connector Name	SUSPENSION AIR COMPRESSOR
Connector Color	BLACK






Connector No.	C8
Connector Name	HEIGHT SENSOR
Connector Color	BLACK





Connector No.	C1
Connector Name	WIRE TO WIRE
Connector Color	GRAY

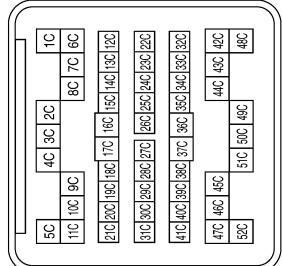



ALEIA0043GB

INFOID:0000000001603971

## DTC Index

### Self-diagnosis results display item

CONSULT-III display	Malfunction	Reference page
Vehicle height sensor [C1801]	Vehicle height sensor voltage is less than 0.2V or greater than 4.8V for more than 60 seconds.	<a href="#">SCS-9, "Diagnosis Procedure"</a>

# SUSPENSION CONTROL UNIT

< ECU DIAGNOSIS >

Compressor relay [C1802]	<ul style="list-style-type: none"><li>Driving transistor for compressor relay is OFF and monitor voltage continues at a high level for more than 10 seconds.</li><li>Driving transistor for compressor relay is ON and monitor voltage continues at a low level for more than 5 seconds.</li></ul>	<a href="#">SCS-10. "Diagnosis Procedure"</a>
Exhaust solenoid [C1803]	<ul style="list-style-type: none"><li>Driving transistor for exhaust valve solenoid is OFF and monitor voltage continues at a high level for more than 10 seconds.</li><li>Driving transistor for exhaust valve solenoid is ON and monitor voltage continues at a low level for more than 5 seconds.</li></ul>	<a href="#">SCS-11. "Diagnosis Procedure"</a>
Vehicle height adjusting malfunction (compressor)[C1804]	Continuous compressor relay ON time is more than 120 seconds.	<a href="#">SCS-12. "Diagnosis Procedure"</a>
Vehicle height adjusting malfunction (exhaust solenoid)[C1805]	Continuous exhaust valve solenoid ON time is more than 120 seconds.	<a href="#">SCS-13. "Diagnosis Procedure"</a>
Vehicle height sensor locking malfunction [C1806]	Output sensor voltage variation $\pm 0.02V$ is more than 100 seconds when vehicle height range is normal.	<a href="#">SCS-14. "Diagnosis Procedure"</a>
Sensor 5V malfunction [C1807]	Sensor reference voltage is less than 0.8V or more than 6V for 20 seconds.	<a href="#">SCS-15. "Diagnosis Procedure"</a>
Integral time malfunction by supplying air [C1808]	A suspension air compressor ON request has been in effect for 180 seconds and the suspension air compressor has not activated during that time.	<a href="#">SCS-16. "Diagnosis Procedure"</a>

# SUSPENSION CONTROL SYSTEM

< SYMPTOM DIAGNOSIS >

## SYMPTOM DIAGNOSIS SUSPENSION CONTROL SYSTEM

### Symptom Table

INFOID:0000000001603979

#### AIR LEVELIZER

Symptom	Possible cause	Reference page
Inoperative	<ul style="list-style-type: none"><li>• Suspension control unit</li><li>• Compressor motor relay</li><li>• Suspension air compressor</li></ul>	<a href="#">SCS-36, "Diagnosis Procedure"</a>
System does not raise	<ul style="list-style-type: none"><li>• Suspension control unit</li><li>• Height sensor</li><li>• Compressor motor relay</li><li>• Suspension air compressor</li><li>• Leak in system</li><li>• Restriction in system</li></ul>	<a href="#">SCS-37, "Diagnosis Procedure"</a>
System does not lower	<ul style="list-style-type: none"><li>• Suspension control unit</li><li>• Height sensor</li><li>• Compressor motor relay</li><li>• Suspension air compressor</li><li>• Restriction in system</li></ul>	<a href="#">SCS-38, "Diagnosis Procedure"</a>
CK SUSP indicator lamp always ON with key ON	<ul style="list-style-type: none"><li>• CK SUSP indicator lamp control circuit</li><li>• Suspension control unit</li></ul>	<a href="#">SCS-25, "Description"</a>

A

B

C

D

SCS

F

G

H

I

J

K

L

M

N

O

P

# SUSPENSION CONTROL SYSTEM INOPERATIVE

< SYMPTOM DIAGNOSIS >

## SUSPENSION CONTROL SYSTEM INOPERATIVE

### Description

INFOID:0000000001606154

The suspension control system does not activate. It does not raise or lower the vehicle in response to ride height changes.

### Diagnosis Procedure

INFOID:0000000001606155

#### 1. SUSPENSION CONTROL UNIT POWER AND GROUND INSPECTION

Check the suspension control unit power and ground supply. Refer to [SCS-17. "SUSPENSION CONTROL UNIT : Diagnosis Procedure"](#).

Does the suspension control unit power and ground pass inspection?

YES >> GO TO 2

NO >> Repair or replace the malfunctioning part.

#### 2. CHECK HEIGHT SENSOR SIGNAL INPUT

##### (H) CONSULT-III DATA MONITOR

1. Turn ignition switch ON.
2. Select "HEIGHT SEN" of AIR LEVELIZER data monitor item.
3. Check the monitor status.

**HEIGHT SEN** : 0.2V - 4.8V

Is the height sensor voltage normal?

YES >> GO TO 3

NO >> Check height sensor signal circuit. Refer to [SCS-22. "Diagnosis Procedure"](#).

#### 3. CHECK GENERATOR "L" CIRCUIT SIGNAL

##### (H) CONSULT-III DATA MONITOR

1. Start the engine.
2. Select "ACG L" of AIR LEVELIZER data monitor item.
3. Check the monitor status.

**ACG L** : OFF with charge light OFF  
: ON with charge light ON

Is the generator "L" signal operating normally?

YES >> GO TO 4.

NO >> Check generator L circuit. Refer to [CHG-13. "Diagnosis Procedure"](#)

#### 4. SUSPENSION AIR COMPRESSOR POWER AND GROUND INSPECTION

Check the suspension air compressor power and ground supply. Refer to [SCS-17. "SUSPENSION AIR COMPRESSOR : Diagnosis Procedure"](#).

Does the suspension air compressor power and ground pass inspection?

YES >> System is operating normally.

NO >> Repair or replace the malfunctioning part.

# SUSPENSION CONTROL SYSTEM DOES NOT RAISE

< SYMPTOM DIAGNOSIS >

## SUSPENSION CONTROL SYSTEM DOES NOT RAISE

### Description

INFOID:0000000001606156

The suspension control system does not raise the vehicle in accordance with ride height changes.

### Diagnosis Procedure

INFOID:0000000001606157

#### 1. SUSPENSION CONTROL UNIT POWER AND GROUND INSPECTION

Check the suspension control unit power and ground supply. Refer to [SCS-17, "SUSPENSION CONTROL UNIT : Diagnosis Procedure".](#)

Does the suspension control unit power and ground pass inspection?

YES >> GO TO 2

NO >> Repair or replace the malfunctioning part.

#### 2. CHECK HEIGHT SENSOR SIGNAL INPUT

##### CONSULT-III DATA MONITOR

1. Turn ignition ON.
2. Select "HEIGT SEN" of AIR LEVELIZER data monitor item.
3. Check the monitor status.

**HEIGT SEN : 0.2V - 4.8V**

Is the height sensor voltage normal?

YES >> GO TO 3

NO >> Check height sensor signal circuit. Refer to [SCS-22, "Diagnosis Procedure"](#).

#### 3. SUSPENSION AIR COMPRESSOR POWER AND GROUND INSPECTION

Check the suspension air compressor power and ground supply. Refer to [SCS-17, "SUSPENSION AIR COMPRESSOR : Diagnosis Procedure".](#)

Does the suspension air compressor power and ground pass inspection?

YES >> Inspect for a weak compressor, leak or restriction in the system. Repair or replace malfunctioning part.

NO >> Repair or replace the malfunctioning part.

# SUSPENSION CONTROL SYSTEM DOES NOT LOWER

< SYMPTOM DIAGNOSIS >

## SUSPENSION CONTROL SYSTEM DOES NOT LOWER

### Description

INFOID:0000000001606158

The suspension control system does not lower the vehicle in accordance with ride height changes.

### Diagnosis Procedure

INFOID:0000000001606159

#### 1. SUSPENSION CONTROL UNIT POWER AND GROUND INSPECTION

Check the suspension control unit power and ground supply. Refer to [SCS-17, "SUSPENSION CONTROL UNIT : Diagnosis Procedure".](#)

Does the suspension control unit power and ground pass inspection?

YES >> GO TO 2

NO >> Repair or replace the malfunctioning part.

#### 2. CHECK HEIGHT SENSOR SIGNAL INPUT

##### CONSULT-III DATA MONITOR

1. Turn ignition ON.
2. Select "HEIGHT SEN" of AIR LEVELIZER data monitor item.
3. Check the monitor status.

**HEIGHT SEN** : 0.2V - 4.8V

Is the height sensor voltage normal?

YES >> GO TO 3

NO >> Check height sensor signal circuit. Refer to [SCS-22, "Diagnosis Procedure"](#).

#### 3. EXHAUST VALVE SOLENOID CIRCUIT INSPECTION

Check the exhaust valve solenoid circuit. Refer to [SCS-23, "Component Function Check"](#).

Does the exhaust valve solenoid circuit pass inspection?

YES >> Inspect for a restriction in the system. repair or replace the malfunctioning part.

NO >> Repair or replace the malfunctioning part.

## PRECAUTIONS

< PRECAUTION >

# PRECAUTION

## PRECAUTIONS

### Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000001608361

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

#### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

SCS

### Precaution for Rear Suspension

INFOID:0000000001608362

- When installing the rubber bushings, the final tightening must be done under unladen condition and with the tires on level ground. Oil will shorten the life of the rubber bushings, so wipe off any spilled oil immediately.
- Unladen condition means the fuel tank, engine coolant and lubricants are at the full specification. The spare tire, jack, hand tools, and mats are in their designated positions.
- After installing suspension components, check the wheel alignment.
- Caulking nuts are not reusable. Always use new caulking nuts for installation. New caulking nuts are pre-oiled, do not apply any additional lubrication.