

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

A

AAC/V - Wiring diagram.....EC-437, 1051, 1649
ABS - Wiring diagramBR-47, 80, 120
ABS sensor rotorAX-13
Absolute pressure sensorEC-166, 769, 1369
A/C air flowHA-19
A/C component layoutHA-20
A/C compressor clutch removal
and installationHA-72
A/C compressor descriptionHA-17
A/C compressor precautionHA-8
A/C compressor special
service tool.....HA-12, 16
A/C control linkage adjustment
(manual A/C)HA-42
A/C control operation
(manual A/C)HA-18
A/C diagnostic work flow
(manual A/C)HA-28
A/C HFC134a (R134a)
system precautionHA-3
A/C HFC134a (R134a)
system service tools.....HA-13
A/C HFC134a system service
equipment precaution.....HA-8
A/C lubricant (R134a)HA-68
A/C lubrication oil.....HA-68
A/C operational checkHA-29
A/C pressure switch.....HA-52
A/C relayHA-52
A/C service data specificationHA-88
A/C switch.....HA-18
A/C symptom chart (manual A/C).....HA-28
A/C trouble diagnoses (manual A/C).....HA-21
A/C, M - Wiring diagram.....HA-26
Accelerator control system.....FE-3
Accelerator wire adjustment.....FE-3
Air bagRS-13, 20
Air bag disposalRS-27
Air bag precautionsGI-3
Air bleeding (hydraulic clutch).....CL-7
Air bleeding for brake system.....BR-11
Air cleaner filter replacementMA-20, 30
Air conditioner cut controlEC-39, 639, 1240
Air flow meter - See Mass
air flow sensorEC-156, 760, 1360
Air spoiler, rearBT-35
AlternatorSC-39
Antenna - See Power antenna.....EL-144
Anti-lock brake system -
Wiring diagram.....BR-47, 80, 120
ASCD (automatic speed control
device)EL-146
ASCD - Wiring diagram.....EL-151
A/T - Wiring diagramAT-10
A/T - Wiring diagram - AT - FTSAT-258

A/T - Wiring diagram - AT - MAINAT-247
A/T - Wiring diagram - AT - PNP/SWAT-252
A/T - Wiring diagram - AT - VSS A/TAT-264
A/T controlEC-1061, 1659
A/T diagnosis communication
lineEC-1171, 1774
A/T fluid temperature sensorAT-261
A/T shift lock systemAT-56, 409
A/T shift lock system - Wiring
diagramAT-58, 410
A/T trouble diagnosesAT-27
A/T Wiring diagram - AT - ENG SS.....AT-269
A/T Wiring diagram AT - 1STAT-275
A/T Wiring diagram AT - 2ND.....AT-281
A/T Wiring diagram AT - 3RD.....AT-287
A/T Wiring diagram AT - 4TH.....AT-294
A/T Wiring diagram AT - BA/FTSAT-344
A/T Wiring diagram AT - LPSV.....AT-315
A/T Wiring diagram AT - NONDTCAT-361
A/T Wiring diagram AT - OVRCSV.....AT-339
A/T Wiring diagram AT - SSV/AAT-320
A/T Wiring diagram AT - SSV/BAT-325
A/T Wiring diagram AT - TCCSIGAT-307
A/T Wiring diagram AT - TCV.....AT-301
A/T Wiring diagram AT - TPS.....AT-331
A/T Wiring diagram AT - VSSMTR.....AT-350
AT/C - Wiring diagram.....EC-1063, 1661
ATDIAG - Wiring diagram.....EC-1172, 1775
AudioEL-134
AUDIO - Wiring diagramEL-135
Audio and A/C control removal and
installation - See Instrument panel.....BT-20
Auto lock free running hubAX-10
Automatic speed control system -
See ASCD.....EL-146
Automatic transmission fluid
replacementMA-38
Automatic transmission numberGI-44
Auxiliary air control (AAC)
valve.....EC-434, 1048, 1646

B

Back doorBT-15
Back door opener - See Back doorBT-15
Back windowBT-35, 49
Back-up lampEL-49
Back-up lamp switch (M/T).....MT-8, 40
BACK/L - Wiring diagramEL-49
Ball joint (front)SU-20
Basic inspection.....EC-110, 715, 1314
Battery.....SC-4
Battery/Starting/Charging
System TesterSC-7, 19, 32
Baulk ring (M/T)MT-12, 45
Blower motor.....HA-37
Blower resistorHA-37

ALPHABETICAL INDEX

Body alignment.....BT-53
 Body mountingBT-52
 Boring/honing cylinder blockEM-47, 118
 Brake boosterBR-22
 Brake control valve (Proportioning valve).....BR-14
 Brake fluid change.....BR-9
 Brake fluid level.....MA-41
 Brake fluid level and line check.....BR-9
 Brake hydraulic lineBR-12
 Brake inspection.....MA-42
 Brake lines and cables inspectionMA-41
 Brake master cylinder.....BR-19
 Brake pedal.....BR-17
 Bulb specifications.....EL-265
 Bumper, front.....BT-12
 Bumper, rear.....BT-15
 BYPS/V - Wiring diagram.....EC-539, 547, 1158, 1165, 1761, 1768

C

Camshaft inspection.....EM-32, 96
 Camshaft position sensor (CMPS)EC-325, 967, 1565
 Canister-See EVAP
 canisterEC-40, 640, 1241
 Center bearing assembly (propeller shaft)PD-11
 Center bearing disassembly (propeller shaft)PD-9
 Center case (Transfer)TF-12
 CHARGE - Wiring diagram.....SC-30
 Charging system.....SC-29
 Chassis and body maintenance.....MA-37
 CHIME - Wiring diagramEL-98
 CIGAR - Wiring diagramEL-121
 Cigarette lighterEL-121
 Circuit breakerEL-16
 CKPS - Wiring diagram.....EC-321, 455, 963, 1091, 1561, 1694
 Closed loop control.....EC-451
 Closed loop control (Left bank).....EC-1070, 1668
 Closed loop control (Right bank)EC-1070, 1668
 Closed throttle position switchEC-440, 1054, 1652
 Clutch coverCL-12, 13
 Clutch disc.....CL-12
 Clutch fluid level.....MA-37
 Clutch master cylinderCL-8
 Clutch operating cylinderCL-9
 Clutch pedalCL-5, 6
 Clutch release bearing.....CL-10
 Clutch release mechanism.....CL-10
 Clutch withdrawal leverCL-10

CMPS - Wiring diagramEC-328, 970, 1568
 Collision diagnosisRS-63
 Combination lamp, front, removal and installation.....BT-12
 Combination lamp, rear, removal and installation.....BT-35
 Combination meterEL-69
 Combination meter removal and installation - See Instrument panel.....BT-20
 Combination switchEL-31
 Component Location (manual A/C)HA-21
 Compression pressureEM-15, 78
 Compressor clutch removal and installationHA-72
 Compressor description.....HA-17
 Compressor precautionHA-8
 Compressor special service toolHA-12, 16
 Connecting rodEM-46, 117
 Connecting rod bearing clearanceEM-50, 122
 Connecting rod bushing clearanceEM-51, 122
 Connector inspectionGI-20
 Console box - See Instrument panelBT-20
 CONSULT for ABSBR-85, 126
 CONSULT for engineEC-93, 696, 1295
 CONSULT-II general informationGI-38
 Control lever (M/T)MT-13, 47
 Control valve (A/T)AT-90, 442
 Converter housing installation.....AT-69, 422
 COOL/F - Wiring diagram.....EC-932, 1075, 1533, 1673
 Coolant mixture ratioMA-15
 Coolant replacement.....MA-17, 27
 Cooling circuit (engine)LC-10, 27
 Cooling fan.....LC-16, 33
 Cooling fan control.....EC-574, 1072, 1084, 1670
 Cooling unit (A/C evaporator).....HA-87
 Counter gear (M/T)MT-12, 45
 Counter gear (Transfer)TF-13, 23
 Coupling sleeve (M/T)MT-12, 45
 Crank angle sensor built into distributor - See Camshaft position sensorEC-325, 967, 1565
 Crankcase emission control system - See positive crankcase ventilation.....EC-55, 656, 1257
 Crankcase ventilation system - See Positive crankcase ventilationEC-55
 CrankshaftEM-48, 119
 Crankshaft position sensor (OBD).....EC-319, 453, 961, 1559
 Crankshaft position sensor (OBD) cog chippingEC-453, 1089, 1692
 Cruise control - See ASCDEL-146
 Cylinder block.....EM-44, 114
 Cylinder block boring.....EM-47, 119

GI
 MA
 EM
 LC
 EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
IDX

ALPHABETICAL INDEX

Cylinder head.....EM-29, 92
Cylinder head bolt tighteningEM-104

D

Data link connector for
 Consult.....EC-57, 696, 1295
Daytime light system.....EL-39
Daytime running light - See Daytime
 light system.....EL-39
DEF - Wiring diagramEL-125
Detonation sensor - See Knock
 sensorEC-315, 957, 1555
Diagnosis sensor unitRS-19
Diagnostic trouble code (DTC) for
 OBD systemEC-19, 618, 675, 1219, 1275
Diagnostic trouble code (DTC)
 inspection priority chart.....EC-124, 729, 1329
Differential carrier assembly.....PD-32, 57, 84
Differential carrier disassemblyPD-46, 70
Differential gear oil replacementMA-40
DimensionsGI-44
DistributorEC-37, 638, 1239
Distributor ignition (DI)
 system.....EC-37, 638, 1239
D/LOCK - Wiring diagramEL-180
Dome light - See Interior lamp.....EL-62
Door glassBT-18
Door glass Fitting AdjustmentBT-18
Door lockBT-18
Door mirrorBT-51
Door trim.....BT-30
Door, front.....BT-18
Drive belt inspection.....MA-16, 25
Drive chain (Transfer)TF-13
Drive pinion diff. inspectionPD-24, 49, 73
Drive pinion heightPD-27, 51, 80
Drive plate runout.....EM-52, 123
Drive shaft (front)AX-16
Dropping resistor (A/T)AT-317
DTC work supportEC-102, 707, 1306
DTRL - Wiring diagramEL-42

E

ECM input/output signal.....EC-135, 740, 1340
ECTS - Wiring diagram.....EC-176, 195, 778,
 796, 1378, 1396
EGR control (EGRC) - BPT valveEC-345
EGR control (EGRC) - solenoid valve.....EC-459
EGR temperature sensor.....EC-466
EGR/TS - Wiring diagram.....EC-469
EGRC/V - Wiring diagramEC-461
EGRC1 - Wiring diagramEC-337, 475
Electrical diagnosesGI-23
Electrical ignition system.....EC-37, 638, 1239

Electrical unit.....EL-273
Electrical units location.....EL-235
Electronic ignition (EI) system.....EC-37
Engine compartmentBT-54
Engine control circuit
 diagram.....EC-31, 632, 1233
Engine control component
 parts locationEC-29, 630, 1231
Engine control module
 (ECM).....EC-447, 1066, 1664
Engine control system
 diagram and chart.....EC-32, 633, 1234
Engine coolant temperature sensor
 (ECTS).....EC-174, 193, 776,
 794, 1376, 1394
Engine fail-safe systemEC-125, 730, 1330
Engine oil filter replacementMA-21, 31
Engine oil precautionsGI-7
Engine oil replacementMA-20, 30
Engine outer component parts.....EM-12, 75
Engine removal.....EM-41, 111
Engine room - See Engine
 compartment.....BT-54
Engine serial number.....GI-43
EVAP canisterEC-40, 641, 1242
EVAP canister purge volume control solenoid
 valve.....EC-498, 640, 994, 1113,
 1241, 1592, 1716
EVAP canister purge volume control
 valve.....EC-375, 498
EVAP canister vent control
 valveEC-383, 510, 526, 1001, 1125,
 1144, 1599, 1728, 1747
EVAP control system (small leak)
 diagnosisEC-42, 358, 481, 483, 979,
 1096, 1098, 1577, 1699, 1701
EVAP control system pressure
 sensorEC-391, 1007, 1605
EVAP control system purge flow
 monitoring diagnosisEC-516, 1132, 1735
EVAP system close modeEC-42
EVAP vapor lines inspection.....MA-23, 35
Evaporative emission (EVAP)
 system.....EC-40, 640, 1241
Exhaust gas recirculation
 (EGR) valveEC-333, 472
Exhaust system.....FE-8
Exhaust system inspection.....MA-37
ExteriorBT-35

F

Fan switch.....HA-36
Fast idle cam (FIC) inspection
 and adjustmentEC-660, 1261
F/FOG - Wiring diagram.....EL-51
FICD - Wiring diagramEC-610, 1211, 1814

ALPHABETICAL INDEX

Final drive disassembly.....	PD-45, 69	Front seat.....	BT-41
Final drive pre-inspection.....	PD-45, 69	Front seat belt.....	RS-5
Final drive removal and installation.....	PD-45, 69	Front suspension.....	SU-2
Finisher, interior - See Trim.....	BT-24	Front washer.....	EL-109
Floor trim.....	BT-24	Front wiper.....	EL-109
Flow charts.....	GI-23	FUEL - Wiring diagram.....	EC-288, 295
Fluid temperature sensor (A/T).....	AT-261	Fuel cut control (at no load & high engine speed).....	EC-39, 640, 1241
Fluids.....	MA-13	Fuel filler lid.....	BT-15
Flywheel (clutch).....	CL-12, 13	Fuel filter.....	EC-57
Flywheel runout.....	EM-52, 123	Fuel filter replacement.....	MA-19, 29
FO2H-L - Wiring diagram.....	EC-853, 1454	Fuel gauge.....	EL-69
FO2H-R - Wiring diagram.....	EC-852, 1453	Fuel injection system.....	EC-286, 293
Fog lamp, front.....	EL-50	Fuel injection system (Left bank).....	EC-905, 914, 1506, 1515
Fog lamp, front, removal and installation.....	BT-12	Fuel injection system (Right bank).....	EC-905, 914, 1506, 1515
Fork rod (M/T).....	MT-13, 47	Fuel injector.....	EC-588
Forward clutch.....	AT-107, 461	Fuel line inspection.....	MA-19, 29
F/PUMP - Wiring diagram.....	EC-599, 1200, 1803	Fuel precautions.....	GI-7
Freeze frame data.....	EC-74, 675, 1275	Fuel pressure check.....	EC-57, 658, 1259
FRO2 - Wiring diagram.....	EC-202, 223, 233	Fuel pressure regulator.....	EC-58, 659, 1260
FRO2/H - Wiring diagram.....	EC-240	Fuel pressure release.....	EC-57, 658, 1259
FRO2LH - Wiring diagram.....	EC-804, 832, 845, 1405, 1433, 1446	Fuel pump.....	EC-597, 1198, 1801
FRO2RH - Wiring diagram.....	EC-803, 831, 844, 1404, 1432, 1445	Fuel pump and gauge.....	FE-7
Front axle.....	AX-2	Fuel pump relay.....	EC-597
Front bumper.....	BT-12	Fuel system.....	FE-4
Front case (Transfer).....	TF-12, 25	Fuel tank temperature sensor.....	EC-300, 922, 1523
Front combination lamp removal and installation.....	BT-12	Fuel tank vacuum relief valve.....	EC-41, 641, 1242
Front disc brake.....	BR-26	FUELLH - Wiring diagram.....	EC-908, 917, 1509, 1518
Front door.....	BT-18	FUELRH - Wiring diagram.....	EC-907, 916, 1508, 1517
Front drive shaft (Transfer).....	TF-13, 22	Fuse.....	EL-16
Front final drive disassembly (4WD).....	PD-20	Fuse block.....	EL-270
Front final drive pre-inspection (4WD).....	PD-20	Fusible link.....	EL-16
Front final drive removal and installation (4WD).....	PD-19		
Front fog lamp.....	EL-50	G	
Front fog lamp removal and installation.....	BT-12		
Front heated oxygen sensor (HO2S).....	EC-198, 206, 213, 220, 231	Garage jack and safety stand.....	GI-46
Front heated oxygen sensor (HO2S) (Left bank).....	EC-799, 810, 819, 828, 842, 1400, 1411, 1420, 1429, 1443	Gauges.....	EL-69
Front heated oxygen sensor (HO2S) (Right bank).....	EC-799, 810, 819, 828, 842, 1400, 1411, 1420, 1429, 1443	Gear components (M/T).....	MT-12, 45
Front heated oxygen sensor (HO2S) heater.....	EC-238	Generator.....	SC-39
Front heated oxygen sensor heater (Left bank).....	EC-850, 1451	Generator - See Alternator.....	SC-39
Front heated oxygen sensor heater (Right bank).....	EC-850, 1451	Generic scan tool (GST).....	EC-104, 709, 1308
Front oxygen sensor (O2S) monitor.....	EC-690, 1289	Glass.....	BT-18
Front passenger air bag.....	RS-13, 23	Governor valve assembly.....	AT-100
		Grease.....	MA-13
		H	
		Harness connector.....	EL-5
		Harness connector inspection.....	GI-20
		Harness layout.....	EL-238

ALPHABETICAL INDEX

Hazard warning lampEL-54
HeadlampEL-34
Headlining - See Roof trim.....BT-32
Heated oxygen sensor
 (HO2S) (front).....EC-198, 206, 213, 220, 231
Heated oxygen sensor (HO2S)
 heater (front)EC-238
Heated oxygen sensor (HO2S)
 heater (rear)EC-281
Heated oxygen sensor
 (rear)EC-243, 253, 263, 273
HEATER - Wiring diagram.....HA-25
Heater system - Wiring diagram.....HA-25
Heater unit (heater core)HA-86
Height (Dimensions)GI-44
HFC134a (R134a) system
 precaution.....HA-3
HFC134a (R134a) system
 service toolsHA-13
HFC134a system service equipment
 precaution.....HA-8
High clutch.....AT-105, 459
H/LAMP - Wiring diagramEL-35
HoodBT-12
Horn.....EL-120
HORN - Wiring diagram.....EL-120
How to erase DTC for OBD
 system.....EC-85, 687, 1287
Hydraulic lash adjuster
 inspection.....EM-102

I

IACV-AAC valveEC-434, 1048, 1646
IACV-FICD solenoid
 valve.....EC-609, 1210, 1813
IATS - Wiring diagram.....EC-170, 773, 1373
Identification.....HA-4
Identification plateGI-42
Idle air control (IAC) system.....EC-434
Idle air control valve
 (IACV)EC-434, 1048, 1646
Idle mixture ratio.....EC-59, 662, 1262
Idle speed.....EC-59, 662, 1262
IGN/SG - Wiring diagramEC-581, 1184, 1787
Ignition control system.....EC-579, 1183, 1786
Ignition timingEC-59, 662, 1262
ILL - Wiring diagram.....EL-60
IlluminationEL-59
INJECT - Wiring diagramEC-589, 1190, 1793
InjectorEC-1189, 1792
Injector removal and
 installation.....EC-58, 659, 1260
Instrument panel.....BT-20
Intake air temperature
 sensorEC-168, 771, 1371
Intake door control linkage adjustmentHA-42

Intake manifold.....EM-12, 75
InteriorBT-24
Interior lampEL-62

J

Jacking pointsGI-46
Joint connector (J/C).....EL-272
Journal bearing assembly
 (propeller shaft)PD-11
Journal bearing disassembly
 (propeller shaft)PD-10
Jump seat.....BT-44
Junction box (J/B)EL-270

K

Keyless entry system - See
 Multi-remote control systemEL-190
Knock sensor (KS).....EC-315, 316, 957, 1555
Knuckle spindle.....AX-14
KS - Wiring diagramEC-958, 1556

L

Leaf spring (rear)SU-29
Length (Dimensions).....GI-44
License lampEL-47
Lifting points.....GI-47
Limited slip diff. adjustmentPD-76
Limited slip diff. assemblyPD-78
Limited slip diff. disassemblyPD-74
Limited slip diff. inspectionPD-75
Line pressure solenoid
 valveAT-298, 312, 317
Line pressure test (A/T)AT-30, 209
Liquid gasket application.....EM-19
Location of electrical units.....EL-235
Lock, door.....BT-18
Low and reverse brake.....AT-111, 465
LSV (Load sensing valve)BR-15
Lubricant (R134a) A/CHA-68
Lubricants.....MA-13
Lubrication circuit (engine).....LC-5, 20
Lubrication oil A/C.....HA-68
Lubrication-locks, hinges
 and hood latchesMA-44
Luggage room lampEL-62

M

MAFS - Wiring diagram.....EC-160, 764, 1364
Magnet clutchHA-72

ALPHABETICAL INDEX

MAIN - Wiring diagram.....EC-149, 754, 1354
 Main drive gear (M/T).....MT-12, 45
 Main gear (Transfer)TF-13, 23
 Mainshaft (M/T)MT-12, 45
 Mainshaft (Transfer).....TF-13, 20
 Maintenance (engine)MA-16, 25
 MAJOR OVERHALL.....AT-71, 423
 Major overhaul (Transfer).....TF-11
 Malfunction indicator lamp
 (MIL).....EC-87, 689, 1289
 Manual air conditioner -
 Wiring diagramHA-26
 Manual transmission number.....GI-43
 Manual transmission oil replacement.....MA-37
 Mass air flow sensor
 (MAFS).....EC-156, 760, 1360
 Master cylinder (brake).....BR-19
 Master cylinder (clutch).....CL-8
 MeterEL-69
 METER - Wiring diagramEL-74
 MIL & Data link connectors
 circuit.....EC-615, 1216, 1819
 MIL/DL - Wiring diagramEC-615, 1216, 1819
 MIRROR - Wiring diagramEL-145
 Mirror defogger.....EL-122
 Mirror, doorBT-51
 Mirror, out sideBT-51
 MisfireEC-306, 948, 1546
 Mode door control linkage
 adjustment.....HA-39
 Model variation.....GI-40
 Molding - See ExteriorBT-35
 M/T major overhaul.....MT-11, 44
 M/T removal and installationMT-9, 41
 MULTI - Wiring diagramEL-195
 Multi-remote control system.....EL-190
 Multiport fuel injection (MFI)
 system.....EC-35, 636, 1237
 Multiport fuel injection precautionsGI-5

N

Neutral position switch.....EC-555
 NVH troubleshooting (AX)AX-4, 27
 NVH troubleshooting (BR)BR-8
 NVH troubleshooting (CL).....CL-4
 NVH troubleshooting (EM).....EM-10, 72
 NVH troubleshooting (M/T).....MT-6, 36
 NVH troubleshooting (PD).....PD-4
 NVH troubleshooting (ST).....ST-5
 NVH troubleshooting (SU).....SU-3

O

Oil change (capacity)MA-13
 Oil pan (engine)EM-16, 80

Oil pressure (engine)LC-6, 21
 Oil pump (A/T).....AT-86, 438
 Oil pump (engine)LC-6, 21
 Oil pump regulator valve (engine)LC-7, 23
 Oil seal replacement (engine).....EM-26, 90
 Oil seal replacement (front
 final drive 4WD)PD-16
 Oil seal replacement (front of
 final drive)PD-43, 67
 On board diagnostic
 system.....EC-73, 674, 1274
 Operating cylinder (clutch).....CL-9
 ORVR (On-board Refueling
 Vapor Recovery)EC-45, 646, 1247
 Out side mirrorBT-51
 Overdrive control switch.....AT-46, 48, 406
 Overrun clutch.....AT-107, 461
 Overrun clutch solenoid valveAT-341
 Oversize piston.....EM-48, 119

P

Pantograph jackGI-46
 Park/Neutral position
 switchEC-555, 1174, 1777
 Park/neutral position
 switch (A/T).....AT-51, 254, 407
 Park/neutral position
 switch (M/T)MT-8, 40
 Parking brake control.....BR-35
 Parking lampEL-47
 PCV (positive crankcase
 ventilation).....EC-55, 656, 1257
 PCV filter replacementMA-23
 PGC/V - Wiring diagramEC-378, 501, 997,
 1116, 1595, 1719
 Pilot bushing replacement.....EM-54, 125
 Pinion bearing preload diff.....PD-27
 Pinion gear height diff.PD-27, 51, 80
 Piston assemblyEM-52, 123
 Piston pin inspectionEM-45, 116
 Piston ring inspectionEM-46, 116
 Piston to bore clearanceEM-47, 118
 PNP/SW - Wiring
 diagramEC-558, 1177, 1780
 POWER - Wiring diagramEL-11
 Power antennaEL-144
 Power door lockEL-176
 Power door mirrorEL-145
 Power steering fluid levelMA-43, ST-7
 Power steering gearST-15
 Power steering hydraulic pressure.....ST-9
 Power steering oil pressure
 switchEC-605, 1205, 1808
 Power steering oil pumpST-18
 Power steering system bleedingST-8
 Power supply routing.....EL-9

ALPHABETICAL INDEX

Power transistor & ignition
 coil.....EC-579, 1183, 1786
 Power windowEL-167
 PRE/SE - Wiring
 diagram.....EC-394, 1009, 1607
 Precations for Leak detection dye.....HA-4
 Precautions (General).....GI-4
 Pressure plate - See Clutch cover.....CL-12
 Pressure test (A/T).....AT-30, 209
 Propeller shaft.....PD-3, 5, 6
 Propeller shaft greasing.....MA-40
 Propeller shaft inspection.....MA-39
 Propeller shaft on vehicle service.....PD-8
 Propeller shaft vibration.....PD-8
 PST/SW - Wiring
 diagram.....EC-606, 1206, 1809

R

Radiator.....LC-14, 32
 Radiator fan - See Cooling fan.....LC-16, 33
 Radio - See Audio.....EL-134
 Rear air spoiler.....BT-35
 Rear axle.....AX-25
 Rear body.....BT-52
 Rear bumper.....BT-15
 Rear case (Transfer).....TF-12, 26
 Rear combination lamp removal
 and installation.....BT-35
 Rear cover packing replacement
 diff.PD-17, 43
 Rear drum brake.....BR-30
 Rear heated oxygen sensor
 (HO2S).....EC-243, 253, 263, 273, 857, 867,
 877, 887, 1458, 1468, 1478, 1488
 Rear heated oxygen sensor
 (HO2S) heater.....EC-281, 897, 1498
 Rear seat.....BT-44
 Rear seat belt.....RS-7
 Rear side window.....BT-48
 Rear suspension.....SU-24
 Rear window.....BT-49
 Rear window defogger.....EL-122
 Refrigerant connection precaution.....HA-4
 Refrigerant discharging evacuating
 charging.....HA-66
 Refrigerant general precaution.....HA-3
 Refrigerant lines.....HA-79
 Refrigeration cycle.....HA-17
 Release bearing (clutch).....CL-10
 Removal and installation (A/T).....AT-67, 420
 Removal and installation (Transfer).....TF-10
 Reverse clutch.....AT-101, 455
 Reverse idler shaft (M/T).....MT-12, 45
 Reverse lamp switch (M/T) -
 See Back-up lamp switch (M/T).....MT-8, 40
 Reverse main gear (M/T).....MT-12, 45

Revolution sensor (A/T).....AT-266
 Ring gear diff. inspection.....PD-24, 49, 73
 RO2H-L - Wiring diagram.....EC-900, 1501
 RO2H-R - Wiring diagram.....EC-899, 1500
 Road wheel size.....GI-45
 Roof trim.....BT-32
 Room lamp - See Interior lamp.....EL-62
 ROOM/L - Wiring diagram.....EL-65
 RRO2 - Wiring
 diagram.....EC-246, 256, 266, 275
 RRO2/H - Wiring diagram.....EC-283
 RRO2LH - Wiring
 diagram.....EC-861, 871, 881, 891,
 1462, 1472, 1482, 1492
 RRO2RH - Wiring
 diagram.....EC-860, 870, 880, 890,
 1461, 1471, 1481, 1491

S

SAE J1930 terminology list.....GI-51
 S/CHGR - Wiring diagram.....EC-1689
 Seal - See Exterior.....BT-35
 Seat belt inspection.....MA-45, RS-9
 Seat belt pre-tensioner.....RS-13, 19
 Seat belt pre-tensioner disposal.....RS-27
 Seat belt, front.....RS-5
 Seat belt, rear.....RS-7
 Seat, front.....BT-41
 Seat, rear.....BT-44
 Self-diagnostic results.....EC-87, 690, 1289
 SHIFT - Wiring diagram.....AT-58, 410
 Shift control (Transfer).....TF-14, 27
 Shift control components (M/T).....MT-13, 47
 Shift fork (M/T).....MT-13, 47
 Shift lever.....MT-13, 47
 Shift lock system.....AT-56, 409
 Shift schedule.....AT-141, 497
 Shift solenoid valve A
 (A/T).....AT-277, 289, 298, 322
 Shift solenoid valve B
 (A/T).....AT-277, 282, 298, 327
 Shock absorber (front).....SU-14
 Shock absorber (rear).....SU-28
 Side bearing preload (front final
 drive 4WD).....PD-25
 Side bearing preload diff.PD-50
 Side shaft diff.PD-23
 Side trim.....BT-24
 Smart entrance control unit.....EL-230
 SMJ (super multiple junction).....EL-268
 Spare tire size.....GI-45
 Spark plug replacement.....MA-22, 32
 Speedometer.....EL-69
 Spiral cable.....RS-20
 Spot lamp.....EL-62

ALPHABETICAL INDEX

SRS - See Supplemental Restraint SystemRS-13
 SRS - Wiring diagram.....RS-39
 S/SIG - Wiring diagramEC-594, 1195, 1798
 Stabilizer bar (front).....SU-17
 Stabilizer bar (rear).....SU-30
 Stall test (A/T)AT-27, 206
 Standardized relayEL-7
 START - Wiring diagram.....SC-14
 Start signal.....EC-593, 1194, 1797
 StarterSC-26
 Starting system.....SC-10
 Steering gear, linkage and transfer gear inspectionMA-43
 Steering linkage.....ST-21
 Steering switch.....EL-33
 Steering wheel and column.....ST-11
 Steering wheel play.....ST-6
 Steering wheel turning forceST-9
 Stop lampEL-48
 STOP/L - Wiring diagram.....EL-48
 Striking rod (M/T).....MT-13, 47
 Sub-gear (M/T)MT-12, 45
 SunroofBT-46
 SuperchargerEC-1686
 Supercharger bypass (SCB) valve control solenoid valveEC-1686
 Supplemental Restraint SystemRS-13
 Supplemental restraint system - Wiring diagram.....RS-39
 Symbols and abbreviations.....GI-10
 Symptom matrix chart.....EC-126, 731, 1331
 Synchronizer (M/T).....MT-12, 45
 System readiness test (SRT) codeEC-75, 676, 1276

T

Tachometer.....EL-69
 Tail lampEL-47
 TAIL/L - Wiring diagramEL-47
 TCM circuit diagramAT-156
 TCM inspection table.....AT-243
 Temperature control cable and linkage adjustmentHA-64
 TFTS - Wiring diagram.....EC-302, 924, 1525
 THEFT - Wiring diagram.....EL-214
 Theft warning system.....EL-208
 Thermal protectorHA-53
 Thermo control ampHA-54
 Thermostat.....LC-13, 30
 Three way catalyst.....EC-353
 Three way catalyst function (Left bank).....EC-974, 1572
 Three way catalyst function (Right bank)EC-974, 1572
 Three way catalyst precautions.....GI-6

Throttle bodiesEM-12, 75
 Throttle chambersEM-12, 75
 Throttle drum adjustment.....FE-3
 Throttle position sensor (TPS).....EC-179, 781, 1381
 Throttle position sensor adjustment.....EC-110, 715, 1314
 Throttle position switchAT-336, 407, EC-440, 1054, 1652
 Throwout bearing - See Clutch release bearing.....CL-10
 Tie-rodST-21
 Tie-rod ball joints.....ST-21
 Tightening torque of standard boltsGI-50
 Timing belt.....EM-83
 Timing chain.....EM-18
 Tire rotationMA-41
 Tire sizeGI-45
 Tooth contact (front final drive 4WD).....PD-31
 Tooth contact diff.PD-56, 83
 Torque converter installationAT-69, 422
 Torque convertor clutch solenoid valve.....AT-43, 303, 312
 Torsion bar springSU-14
 Tow truck towingGI-47
 Towing point.....GI-49
 TP/SW - Wiring diagramEC-442, 1056, 1654
 TPS - Wiring diagram.....EC-184, 786, 1386
 Transfer caseTF-12
 Transfer oil replacementMA-39
 Transfer serial number.....GI-43
 Transmission case (M/T)MT-11, 44
 Transmission serial numberGI-43, 44
 Tread-FR&RR (Dimensions).....GI-44
 TrimBT-24
 Trouble diagnosesGI-33
 Turbine revolution sensorAT-352
 TURN - Wiring diagram.....EL-56
 Turn signal lamp.....EL-54
 Two trip detection logicEC-73, 674, 1274
 Two-pole lift.....GI-47

U

Under body.....BT-56

V

Vacuum cut valveEC-640, 1241
 Vacuum cut valve bypass valve.....EC-537, 544, 640, 1156, 1162, 1241, 1759, 1765
 Vacuum hose (brake system)BR-24
 Vacuum hose drawing (Engine control)EC-33, 634, 1235

GI
 MA
 EM
 LC
 EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

ALPHABETICAL INDEX

Valve clearance.....	EM-38, 127	Wheel alignment (front).....	SU-7
Valve guide.....	EM-33, 98	Wheel balance.....	MA-41
Valve lifter.....	EM-37	Wheel bearing (front).....	AX-5
Valve seat.....	EM-35, 99	Wheel bearing (rear).....	AX-28
Valve spring.....	EM-37, 101	Wheel hub (front).....	AX-12
Vehicle identification number.....	GI-42	Wheel sensors (ABS).....	BR-93, 132, 152
Vehicle recovery (freeing a stuck vehicle).....	GI-49	Wheel size.....	GI-45
Vehicle speed sensor (VSS).....	EC-429, 1044, 1642	Wheelbase (Dimensions).....	GI-44
VENT/V - Wiring diagram.....	EC-385, 1003, 1127, 1147, 1601, 1730, 1750	Wide open & closed throttle position switch.....	EC-179, 781, 1381
Viscosity number (SAE).....	MA-14	Width (Dimensions).....	GI-44
VSS - Wiring diagram.....	EC-432, 1046, 1644	WINDOW - Wiring diagram.....	EL-171
<div style="border: 1px solid black; width: 300px; height: 20px; margin: 10px auto; display: flex; align-items: center; justify-content: center;">W</div>			
WARN - Wiring diagram.....	EL-85	Window, back.....	BT-35, 49
Warning chime.....	EL-95	Window, door.....	BT-18
Warning lamps.....	EL-84	Window, opera.....	BT-52
Washer, front.....	EL-109	Window, rear.....	BT-49
Water pump.....	LC-12, 29	Windshield.....	BT-47
Water temperature gauge.....	EL-69	WIPER - Wiring diagram.....	EL-112
Weatherstrip - See Exterior.....	BT-35	Wiper, front.....	EL-109
		Wiring Diagram (Cell code) list.....	EL-266
		Wiring diagrams.....	GI-11
		Withdrawal lever (clutch).....	CL-10
		Wrist pin - See Piston pin inspection.....	EM-45, 116