

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

A

A/C air flow [MTC-21](#)
A/C component layout [MTC-16](#)
A/C compressor precaution [MTC-8](#)
A/C compressor special service tool [MTC-11](#), [MTC-14](#)
A/C control operation (manual A/C) [MTC-20](#)
A/C diagnostic work flow (manual A/C) [MTC-22](#)
A/C HFC134a (R134a) system precaution [MTC-3](#)
A/C HFC134a (R134a) system service tools .. [MTC-12](#)
A/C HFC134a system service equipment precaution ... [MTC-8](#)
A/C lubricant (R134a) [MTC-17](#)
A/C lubrication oil [MTC-17](#)
A/C operational check [MTC-30](#)
A/C pressure switch [MTC-47](#)
A/C reray [MTC-47](#)
A/C switch [MTC-20](#)
A/C symptom chart (manual A/C) [MTC-22](#)
A/C, M - Wiring diagram [MTC-28](#)
A/T - Wiring diagram [AT-10](#)
A/T control [EC-1006](#), [EC-1596](#)
A/T fluid temperature sensor [AT-260](#)
A/T shift lock system [AT-51](#), [AT-395](#)
A/T shift lock system - Wiring diagram [AT-53](#), [AT-396](#)
A/T trouble diagnoses [AT-26](#)
A/T Wiring diagram AT - 1ST [AT-273](#)
A/T Wiring diagram AT - 2ND [AT-278](#)
A/T Wiring diagram AT - 3RD [AT-283](#)
A/T Wiring diagram AT - 4TH [AT-289](#)
A/T Wiring diagram AT - BA/FTS [AT-336](#)
A/T Wiring diagram AT - ENG SS [AT-267](#)
A/T Wiring diagram AT - FTS [AT-257](#)
A/T Wiring diagram AT - LPSV [AT-308](#)
A/T Wiring diagram AT - MAIN [AT-246](#)
A/T Wiring diagram AT - NONDTC [AT-353](#)
A/T Wiring diagram AT - OVRCSV [AT-331](#)
A/T Wiring diagram AT - PNP/SW [AT-251](#)
A/T Wiring diagram AT - SSV/A [AT-313](#)
A/T Wiring diagram AT - SSV/B [AT-318](#)
A/T Wiring diagram AT - TCCSIG [AT-301](#)
A/T Wiring diagram AT - TCV [AT-295](#)
A/T Wiring diagram AT - TPS [AT-324](#)
A/T Wiring diagram AT - VSS A/T [AT-263](#)
A/T Wiring diagram AT - VSSMTR [AT-342](#)
AAC/V - Wiring diagram [EC-400](#), [EC-405](#), [EC-410](#), [EC-995](#), [EC-1585](#)
ABS - Wiring diagram [BRC-13](#), [BRC-15](#)
ABS (anti-lock brake system) [BRC-7](#), [BRC-58](#)
ABS input/output signal inspection .. [BRC-21](#), [BRC-73](#)
ABS sensor rotor [FAX-15](#)
Accelerator control system [ACC-2](#)
Accelerator wire adjustment [ACC-2](#)
Air bag [SRS-42](#)
Air bag disposal [SRS-52](#)
Air bleeding (hydraulic clutch) [CL-6](#)
Air bleeding for brake system [BR-10](#)
Air cleaner filter replacement [MA-20](#), [MA-30](#)
Air conditioner cut control ... [EC-34](#), [EC-608](#), [EC-1212](#)

Air spoiler, rear [EI-30](#)
Alternator [SC-36](#)
Antenna - See Power antenna [AV-18](#)
Anti-lock brake system - See ABS [BRC-7](#), [BRC-58](#)
Anti-lock brake system - Wiring diagram [BRC-13](#), [BRC-15](#)
ASCD - Wiring diagram [ACS-8](#)
ASCD (automatic speed control device) [ACS-3](#)
AT/C - Wiring diagram [EC-1007](#), [EC-1597](#)
ATDIAG - Wiring diagram [EC-1130](#), [EC-1707](#)
Audio [AV-3](#)
AUDIO - Wiring diagram [AV-6](#)
Audio and A/C control removal and installation - See Instrument panel [IP-10](#)
Auto lock free running hub [FAX-11](#)
Automatic speed control system - See ASCD .. [ACS-3](#)
Automatic transmission fluid replacement [MA-38](#)
Automatic transmission number [GI-47](#)

B

Back door [EI-15](#)
Back door opener - See Back door [EI-15](#)
Back window [GW-13](#), [EI-30](#)
BACK/L - Wiring diagram [LT-19](#)
Back-up lamp [LT-19](#)
Back-up lamp switch (M/T) [MT-9](#), [MT-46](#)
Ball joint (front) [FSU-26](#)
Basic inspection [EC-74](#), [EC-652](#), [EC-1255](#)
Battery [SC-4](#)
Battery/Starting/Charging System Tester [SC-6](#), [SC-17](#), [SC-29](#)
Baulk ring (M/T) [MT-14](#), [MT-53](#)
Blower motor [MTC-41](#)
Blower resistor [MTC-41](#)
Body alignment [BL-64](#)
Body mounting [EI-36](#)
Boring/horning cylinder block [EM-52](#), [EM-135](#)
Brake booster [BR-18](#)
Brake fluid change [BR-9](#)
Brake fluid level [MA-41](#)
Brake fluid level and line check [BR-9](#)
Brake inspection [MA-42](#)
Brake lines and cables inspection [MA-41](#)
Brake master cylinder [BR-13](#)
Brake pedal [BR-7](#)
Bulb specifications [LT-43](#)
Bumper, front [EI-12](#)
Bumper, rear [EI-15](#)
BYPS/V - Wiring diagram . [EC-509](#), [EC-516](#), [EC-1113](#), [EC-1120](#), [EC-1690](#), [EC-1697](#)

C

Camshaft inspection [EM-35](#), [EM-110](#)
Camshaft position sensor (CMPS) .. [EC-875](#), [EC-1487](#)
CAN communication [BRC-61](#)
Center bearing assembly (propeller shaft) [PR-11](#)
Center bearing disassembly (propeller shaft) [PR-9](#)

ALPHABETICAL INDEX

Center case (Transfer)	TF-13	Cylinder head	EM-32 , EM-102	A
CHARGE - Wiring diagram	SC-27	Cylinder head bolt tightening	EM-119	
Charging system	SC-26	D		
Chassis and body maintenance	MA-36	-----		
CHIME - Wiring diagram	DI-38	D/LOCK - Wiring diagram	BL-16	B
CIGAR - Wiring diagram	WW-9	Data link connector for Consult ...	EC-46 , EC-683 , EC-1286	C
Cigarette lighter	WW-9	Daytime light system	LT-10	
Circuit breaker	PG-16	Daytime running light - See Daytime light system ..	LT-10	
CKPS - Wiring diagram EC-271 , EC-453 , EC-871 , EC-1055 , EC-1483 , EC-1646		DEF - Wiring diagram	GW-30	D
Closed loop control	EC-32 , EC-606 , EC-1210	Diagnosis sensor unit	SRS-39	
Closed throttle position switch	EC-999 , EC-1589	Diagnostic trouble code (DTC) for OBD system	EC-18 , EC-590 , EC-629 , EC-1194 , EC-1232	E
Clutch cover	CL-12 , CL-13	Diagnostic trouble code (DTC) inspection priority chart	EC-72 , EC-651 , EC-1254	
Clutch disc	CL-12	Differential carrier disassembly	RFD-15 , RFD-50	F
Clutch fluid level	MA-36	Differential gear oil replacement	MA-40	
Clutch master cylinder	CL-8	Dimensions	GI-47	G
Clutch operating cylinder	CL-9	Distributor ignition (DI) system	EC-33 , EC-607 , EC-1211	
Clutch pedal	CL-5 , CL-6	Dome light - See Interior lamp	LT-33	H
Clutch release bearing	CL-10	Door glass	GW-24	
Clutch release mechanism	CL-10	Door glass Fitting Adjustment	GW-24	
Clutch withdrawal lever	CL-10	Door lock	GW-24	
CMPS - Wiring diagram	EC-277 , EC-877 , EC-1489	Door trim	EI-24	I
Collision diagnosis	SRS-58	Door, front	GW-24	
Combination lamp, front, removal and installation	EI-12	Drive belt inspection	MA-15 , MA-24	J
Combination lamp, rear, removal and installation	EI-30	Drive chain (Transfer)	TF-14	
Combination meter	DI-3	Drive pinion diff. inspection	FFD-18 , RFD-56	
Combination meter removal and installation - See Instrument panel	IP-10	Drive pinion height	FFD-21 , RFD-25 , RFD-59	
Combination switch	LT-3	Drive plate runout	EM-58 , EM-140	
COMPAS - Wiring diagram	DI-21	Drive shaft (front)	FAX-20	K
Compass	DI-20	Dropping resistor (A/T)	AT-310	
Component Location (manual A/C)	MTC-23	DTC work support	EC-109 , EC-690 , EC-1293	
Compression pressure	EM-102	DTRL - Wiring diagram	LT-13	L
Compressor precaution	MTC-8	E		
Compressor special service tool	MTC-11 , MTC-14	-----		
Connecting rod	EM-51 , EM-134	ECM input/output signal	EC-91 , EC-673 , EC-1276	INDEX
Connecting rod bearing clearance	EM-56 , EM-139	ECM power supply	EC-121	
Connecting rod bushing clearance	EM-57 , EM-140	ECTS - Wiring diagram EC-159 , EC-179 , EC-750 , EC-1358		
Console box - See Instrument panel	IP-10	EGR/TS - Wiring diagram	EC-302 , EC-900	
CONSULT for ABS	BRC-21 , BRC-73	EGRC/V - Wiring diagram	EC-459 , EC-1061	
CONSULT for engine	EC-99 , EC-681 , EC-1284	EGRC1 - Wiring diagram	EC-287 , EC-467 , EC-886 , EC-1069	
Control lever (M/T)	MT-16 , MT-57	Engine compartment	BL-65	
Control valve (A/T)	AT-88 , AT-431	Engine control circuit diagram	EC-90 , EC-672 , EC-1275	
Converter housing installation	AT-64 , AT-408	Engine control component parts location ..	EC-88 , EC-669 , EC-1272	
Coolant mixture ratio	MA-14	Engine control system diagram and chart .	EC-29 , EC-603 , EC-1207	
Coolant replacement	MA-16 , MA-26	Engine coolant temperature sensor (ECTS) ...	EC-157 , EC-177 , EC-748 , EC-770 , EC-773 , EC-1356	
Cooling circuit (engine)	CO-7 , CO-22	Engine fail-safe system	EC-73 , EC-652 , EC-1255	
Cooling fan	CO-16 , CO-32	Engine oil filter replacement	MA-21 , MA-31	
Cooling unit (A/C evaporator)	MTC-72			
Counter gear (M/T)	MT-14 , MT-53			
Counter gear (Transfer)	TF-14			
Coupling sleeve (M/T)	MT-14 , MT-53			
Crankshaft	EM-53 , EM-136			
Crankshaft position sensor (OBD) cog chipping ...	EC-1054 , EC-1645			
Crash zone sensor	SRS-40			
Cruise control - See ASCD	ACS-3			
Cylinder block	EM-48 , EM-131			
Cylinder block boring	EM-52 , EM-136			

ALPHABETICAL INDEX

Engine oil precautions	GI-6	Front fog lamp removal and installation	EI-12
Engine oil replacement	MA-20 , MA-30	Front oxygen sensor (O2S) monitor	EC-640 , EC-1243
Engine outer component parts	EM-13 , EM-80	Front passenger air bag	SRS-46
Engine removal	EM-46 , EM-128	Front seat	SE-2
Engine room - See Engine compartment	BL-65	Front seat belt	SB-4
Engine serial number	GI-46	Front washer	WW-3
EVAP canister	EC-573 , EC-1176 , EC-1753	Front wiper	WW-3
EVAP canister purge volume control solenoid valve	EC-474 , EC-928 , EC-1075 , EC-1520 , EC-1652	FTTS - Wiring diagram	EC-246 , EC-250 , EC-845 , EC-849 , EC-1454 , EC-1458
EVAP canister vent control valve	EC-935 , EC-1084 , EC-1090 , EC-1527 , EC-1661 , EC-1667	FUEL - Wiring diagram	EC-233 , EC-240
EVAP control system (small leak) diagnosis ..	EC-372 , EC-493 , EC-574 , EC-916 , EC-955 , EC-1073 , EC-1098 , EC-1508 , EC-1547 , EC-1650 , EC-1675	Fuel cut control (at no load high engine speed)	EC-34 , EC-608 , EC-1212
EVAP control system pressure sensor	EC-941 , EC-947 , EC-1533 , EC-1539	Fuel filler lid	EI-15
EVAP control system purge flow monitoring diagnosis	EC-311 , EC-908 , EC-1500	Fuel filter	EC-47
EVAP system close mode	EC-574	Fuel gauge	DI-3
EVAP vapor lines inspection	MA-23 , MA-35	Fuel level sensor ..	EC-383 , EC-387 , EC-389 , EC-504 , EC-977 , EC-981 , EC-983 , EC-1108 , EC-1567 , EC-1571 , EC-1573 , EC-1685
Exhaust system	EX-3	Fuel line inspection	FL-2
Exterior	EI-30	Fuel precautions	GI-5

F

F/FOG - Wiring diagram	LT-21	Fuel pressure check	EC-47 , EC-623 , EC-1227
F/PUMP - Wiring diagram	EC-555 , EC-1159 , EC-1736	Fuel pressure regulator	EC-48 , EC-623 , EC-1228
Fan switch	MTC-41	Fuel pressure release	EC-46 , EC-622 , EC-1227
Fast idle cam (FIC) inspection and adjustment	EC-621 , EC-1225	Fuel system	FL-2
FICD - Wiring diagram	EC-565 , EC-1168 , EC-1745	Fuel tank temperature sensor ...	EC-843 , EC-848 , EC-1452 , EC-1457
Final drive disassembly	RFD-15 , RFD-50	Fuel tank vacuum relief valve ..	EC-573 , EC-1176 , EC-1753
Final drive pre-inspection	RFD-49	FUELB1 - Wiring diagram	EC-830 , EC-838 , EC-1439 , EC-1447
Final drive removal and installation ..	RFD-10 , RFD-47	FUELB2 - Wiring diagram	EC-831 , EC-839 , EC-1440 , EC-1448
Finisher, interior - See Trim	EI-18	Fuse	PG-16
Floor trim	EI-18	Fuse and fusible link box	PG-64
Flow charts	GI-25	Fuse block	PG-63
FLS1 - Wiring diagram	EC-384 , EC-978 , EC-1568	Fusible link	PG-16
FLS2 - Wiring diagram	EC-390 , EC-984 , EC-1574		
FLS3 - Wiring diagram	EC-505 , EC-1109 , EC-1686		
Fluid temperature sensor (A/T)	AT-260		
Fluids	MA-12		
Flywheel (clutch)	CL-12 , CL-13		
Flywheel runout	EM-58 , EM-140		
Fog lamp, front	LT-20		
Fog lamp, front, removal and installation	EI-12		
Fork rod (M/T)	MT-16 , MT-57		
Forward clutch	AT-110 , AT-453		
Freeze frame data	EC-53 , EC-629 , EC-1233		
Front bumper	EI-12		
Front case (Transfer)	TF-13		
Front combination lamp removal and installation	EI-12		
Front disc brake	BR-24		
Front door	GW-24		
Front drive shaft (Transfer)	TF-14		
Front final drive disassembly (4WD)	FFD-13		
Front final drive pre-inspection (4WD)	FFD-12		
Front final drive removal and installation (4WD)	FFD-9		
Front fog lamp	LT-20		

G

Garage jack and safety stand	GI-37
Gauges	DI-3
Gear components (M/T)	MT-14 , MT-53
Generator	SC-36
Generator - See Alternator	SC-36
Generic scan tool (GST) ...	EC-110 , EC-692 , EC-1294
Glass	GW-24
Governor valve assembly	AT-101
Grease	MA-12
Ground distribution	PG-17

H

H/LAMP - Wiring diagram	LT-6
Harness connector	PG-4
Harness layout	PG-33
Hazard warning lamp	LT-24
Headlamp	LT-5
Headlining - See Roof trim	EI-26
Heated oxygen sensor 1 ...	EC-191 , EC-198 , EC-208 ,

ALPHABETICAL INDEX

[EC-422](#), [EC-427](#)

Heated oxygen sensor 1 (bank 1) [EC-778](#), [EC-787](#), [EC-799](#), [EC-1014](#), [EC-1020](#), [EC-1387](#), [EC-1396](#), [EC-1408](#), [EC-1604](#), [EC-1610](#)
Heated oxygen sensor 1 (bank 2) [EC-787](#), [EC-799](#), [EC-1014](#), [EC-1020](#), [EC-1387](#), [EC-1396](#), [EC-1408](#), [EC-1604](#), [EC-1610](#)
Heated oxygen sensor 1 heater [EC-128](#)
Heated oxygen sensor 1 heater (bank 1) [EC-711](#), [EC-1313](#)
Heated oxygen sensor 1 heater (bank 2) [EC-711](#), [EC-1313](#)
Heated oxygen sensor 2 [EC-215](#), [EC-222](#), [EC-432](#), [EC-439](#)
Heated oxygen sensor 2 (bank 1) [EC-809](#), [EC-818](#), [EC-1027](#), [EC-1038](#), [EC-1418](#), [EC-1427](#), [EC-1617](#), [EC-1628](#)
Heated oxygen sensor 2 (bank 2) [EC-809](#), [EC-818](#), [EC-1027](#), [EC-1038](#), [EC-1418](#), [EC-1427](#), [EC-1617](#), [EC-1628](#)
Heated oxygen sensor 2 heater [EC-133](#)
Heated oxygen sensor 2 heater (bank 1) [EC-719](#), [EC-1327](#)
Heated oxygen sensor 2 heater (bank 2) [EC-719](#), [EC-1327](#)
HEATER - Wiring diagram [MTC-27](#)
Heater system - Wiring diagram [MTC-27](#)
Heater unit (heater core) [MTC-63](#)
Height (Dimensions) [GI-47](#)
HFC134a (R134a) system precaution [MTC-3](#)
HFC134a (R134a) system service tools [MTC-12](#)
HFC134a system service equipment precaution [MTC-8](#)
High clutch [AT-108](#), [AT-450](#)
Hood [EI-12](#)
Horn [WW-10](#)
HORN - Wiring diagram [WW-10](#)
How to erase DTC for OBD system ... [EC-61](#), [EC-638](#), [EC-1241](#)
Hydraulic lash adjuster inspection [EM-116](#)

I

IATS - Wiring diagram . [EC-154](#), [EC-185](#), [EC-744](#), [EC-1352](#)
Identification [MTC-5](#)
Identification plate [GI-45](#)
Idle mixture ratio [EC-36](#), [EC-610](#), [EC-1214](#)
Idle speed [EC-36](#), [EC-610](#), [EC-1214](#)
IGN/SG - Wiring diagram [EC-539](#), [EC-1143](#), [EC-1720](#)
Ignition timing [EC-36](#), [EC-610](#), [EC-1214](#)
ILL - Wiring diagram [LT-31](#)
Illumination [LT-30](#)
INJECT - Wiring diagram [EC-546](#), [EC-1149](#), [EC-1726](#)
Instrument panel [IP-10](#)
Intake air temperature sensor ... [EC-152](#), [EC-183](#), [EC-742](#), [EC-1350](#), [EC-1379](#), [EC-1382](#)
Intake manifold [EM-13](#), [EM-80](#)
Interior [EI-18](#)
Interior lamp [LT-33](#)

J

Jacking points [GI-37](#)
Journal bearing assembly (propeller shaft) [PR-12](#)
Journal bearing disassembly (propeller shaft) ... [PR-10](#)
Jump seat [SE-3](#)
Junction box (J/B) [PG-63](#)

K

Keyless entry system - See Multi-remote control system [BL-28](#)
Knock sensor (KS) [EC-266](#)
Knuckle spindle [FAX-17](#)
KS - Wiring diagram [EC-866](#), [EC-1478](#)

L

Leaf spring (rear) [RSU-10](#)
Length (Dimensions) [GI-47](#)
License lamp [LT-17](#)
Lifting points [GI-38](#)
Limited slip diff. adjustment [RFD-22](#), [RFD-58](#)
Limited slip diff. assembly [RFD-31](#), [RFD-65](#)
Limited slip diff. disassembly [RFD-19](#), [RFD-55](#)
Limited slip diff. inspection [RFD-21](#), [RFD-57](#)
Line pressure solenoid valve [AT-292](#), [AT-305](#), [AT-310](#)
Line pressure test (A/T) [AT-29](#), [AT-214](#)
Liquid gasket application [EM-5](#), [EM-20](#), [EM-73](#)
Lock, door [GW-24](#)
Low and reverse brake [AT-115](#), [AT-458](#)
Low tire pressure warning system [WT-7](#)
Low tire pressure warning system - trouble diagnoses [WT-9](#), [WT-17](#)
Low tire pressure warning system - Wiring diagram [WT-9](#)
Lubricant (R134a) A/C [MTC-17](#)
Lubricants [MA-12](#)
Lubrication circuit (engine) [LU-5](#), [LU-14](#)
Lubrication oil A/C [MTC-17](#)
Lubrication-locks, hinges and hood latches [MA-45](#)
Luggage room lamp [LT-33](#)

M

M/T major overhaul [MT-12](#), [MT-51](#)
M/T removal and installation [MT-10](#), [MT-48](#)
MAFS - Wiring diagram [EC-142](#), [EC-148](#), [EC-730](#), [EC-737](#), [EC-1338](#), [EC-1345](#)
Main drive gear (M/T) [MT-14](#), [MT-53](#)
Main gear (Transfer) [TF-14](#)
Mainshaft (M/T) [MT-14](#), [MT-53](#)
Mainshaft (Transfer) [TF-14](#)
MAJOR OVERHALL [AT-66](#), [AT-410](#)
Major overhaul (Transfer) [TF-12](#)
Malfunction indicator lamp (MIL) . [EC-62](#), [EC-640](#), [EC-1243](#)
Manual air conditioner - Wiring diagram [MTC-28](#)
Manual transmission number [GI-46](#)

ALPHABETICAL INDEX

Manual transmission oil replacement	MA-36	Pilot bushing replacement	EM-61 , EM-143
Mass air flow sensor (MAFS)	EC-139 , EC-146 , EC-727 , EC-735 , EC-1335 , EC-1343	Pinion bearing preload diff.	FFD-21
Master cylinder (brake)	BR-13	Pinion gear height diff.	FFD-21 , RFD-25 , RFD-59
Master cylinder (clutch)	CL-8	Piston assembly	EM-58 , EM-141
Meter	DI-3	Piston pin inspection	EM-50 , EM-133
METER - Wiring diagram	DI-8	Piston ring inspection	EM-51 , EM-133
MIRROR - Wiring diagram	GW-26	Piston to bore clearance	EM-52 , EM-135
Mirror defogger	GW-27	PNP/SW - Wiring diagram EC-525 , EC-1137 , EC-1714	
Misfire	EC-857 , EC-1469	POWER - Wiring diagram	PG-11
Mode door control linkage adjustment	MTC-33	Power antenna	AV-18
Molding - See Exterior	EI-30	Power steering fluid level	PS-7 , MA-43
MULTI - Wiring diagram	BL-32	Power steering hydraulic pressure	PS-9
Multipoint fuel injection (MFI) system ...	EC-31 , EC-605 , EC-1209	Power steering oil pump	PS-17
Multipoint fuel injection precautions	GI-5	Power steering system bleeding	PS-8
Multi-remote control system	BL-28	Power supply routing	PG-9

N

NVH troubleshooting (AX)	FAX-4
NVH troubleshooting (BR)	BR-6
NVH troubleshooting (CL)	CL-4
NVH troubleshooting (EM)	EM-11 , EM-78
NVH troubleshooting (M/T)	MT-6 , MT-41
NVH troubleshooting (PD)	PR-3
NVH troubleshooting (WT)NVH troubleshooting (WT) .	WT-3

O

Oil change (capacity)	MA-12
Oil pan (engine)	EM-16 , EM-88
Oil pressure (engine)	LU-7 , LU-15
Oil pump (A/T)	AT-83 , AT-426
Oil pump (engine)	LU-8 , LU-16
Oil pump regulator valve (engine)	LU-9 , LU-17
Oil seal replacement (engine)	EM-28 , EM-99
Operating cylinder (clutch)	CL-9
ORVR (On-board Refueling Vapor Recovery)	EC-1181 , EC-1758
Overdrive control switch	AT-44 , AT-392
Overheat	EC-253 , EC-448 , EC-852 , EC-1050 , EC-1461 , EC-1641
Overrun clutch	AT-110 , AT-453
Overrun clutch solenoid valve	AT-333
Oversize piston	EM-53

P

Pantograph jack	GI-37
Park/neutral position switch (A/T) .	AT-46 , AT-254 , AT-393
Park/neutral position switch (M/T)	MT-9 , MT-46
Parking brake control	PB-2
Parking lamp	LT-17
PCV filter replacement	MA-23
PGC/V - Wiring diagram EC-334 , EC-476 , EC-930 , EC-1077 , EC-1522 , EC-1654	

PRE/SE - Wiring diagram ..	EC-346 , EC-353 , EC-943 , EC-949 , EC-1535 , EC-1541
Precations for Leak detection dye	MTC-4
Precautions (General)	GI-3
Pressure plate - See Clutch cover	CL-12
Pressure test (A/T)	AT-29 , AT-214
Propeller shaft	PR-6 , PR-7
Propeller shaft greasing	MA-39
Propeller shaft inspection	MA-39
Propeller shaft on vehicle service	PR-4
Propeller shaft vibration	PR-4
PST/SW - Wiring diagram EC-561 , EC-1164 , EC-1741	

R

Radiator	CO-14 , CO-30
Radiator fan - See Cooling fan	CO-16 , CO-32
Radio - See Audio	AV-3
Rear air spoiler	EI-30
Rear body	EI-36
Rear bumper	EI-15
Rear case (Transfer)	TF-13
Rear combination lamp removal and installation	EI-30
Rear cover packing replacement diff.	RFD-9
Rear drum brake	BR-29
Rear seat	SE-3
Rear seat belt	SB-6
Rear side window	GW-11
Rear window	GW-13
Rear window defogger	GW-27
Refrigerant connection precaution	MTC-5
Refrigerant discharging evacuating charging ..	MTC-64
Refrigerant general precaution	MTC-4
Refrigerant lines	MTC-64
Refrigerant pressure sensor	MTC-48
Refrigeration cycle	MTC-15
Release bearing (clutch)	CL-10
Removal and installation (A/T)	AT-62 , AT-407
Removal and installation (Transfer)	TF-11
Reverse clutch	AT-103 , AT-445
Reverse idler shaft (M/T)	MT-14 , MT-53
Reverse lamp switch (M/T) - See Back-up lamp switch (M/T)	MT-9 , MT-46

ALPHABETICAL INDEX

Reverse main gear (M/T) [MT-14](#), [MT-53](#)
 Revolution sensor (A/T) [AT-265](#)
 Ring gear diff. inspection [FFD-18](#), [RFD-56](#)
 Road wheel size [GI-48](#)
 Roof trim [EI-26](#)
 Room lamp - See Interior lamp [LT-33](#)
 ROOM/L - Wiring diagram [LT-37](#)

S

S/CHGR - Wiring diagram [EC-1323](#)
 S/SIG - Wiring diagram ... [EC-551](#), [EC-1155](#), [EC-1732](#)
 Seal - See Exterior [EI-30](#)
 Seat belt inspection [SB-8](#), [MA-46](#)
 Seat belt pre-tensioner [SRS-39](#)
 Seat belt pre-tensioner disposal [SRS-52](#)
 Seat belt, front [SB-4](#)
 Seat belt, rear [SB-6](#)
 Seat, front [SE-2](#)
 Seat, rear [SE-3](#)
 Self-diagnostic results [EC-62](#), [EC-640](#), [EC-1243](#)
 Sheft warning system [BL-43](#)
 SHIFT - Wiring diagram [AT-53](#), [AT-396](#)
 Shift control (Transfer) [TF-15](#)
 Shift control components (M/T) [MT-16](#), [MT-57](#)
 Shift fork (M/T) [MT-16](#), [MT-57](#)
 Shift lever [MT-16](#), [MT-57](#)
 Shift lock system [AT-51](#), [AT-395](#)
 Shift schedule [AT-150](#), [AT-496](#)
 Shift solenoid valve A (A/T) . [AT-275](#), [AT-285](#), [AT-292](#),
[AT-315](#)
 Shift solenoid valve B (A/T) . [AT-275](#), [AT-280](#), [AT-292](#),
[AT-320](#)
 Shock absorber (front) [FSU-16](#)
 Shock absorber (rear) [RSU-9](#)
 Side bearing preload (front final drive 4WD) ... [FFD-19](#)
 Side bearing preload diff. [RFD-23](#)
 Side shaft diff. [FFD-17](#)
 Side trim [EI-18](#)
 Smart entrance control unit [BCS-4](#)
 SMJ (super multiple junction) [PG-61](#)
 Spare tire size [GI-48](#)
 Spark plug replacement [MA-22](#), [MA-32](#)
 Speedometer [DI-3](#)
 Spiral cable [SRS-42](#)
 Spot lamp [LT-33](#)
 Stabilizer bar (front) [FSU-20](#)
 Stabilizer bar (rear) [RSU-12](#)
 Stall test (A/T) [AT-26](#), [AT-211](#)
 Standardized relay [PG-7](#)
 START - Wiring diagram [SC-13](#)
 Starter [SC-23](#)
 Starting system [SC-9](#)
 Steering gear, linkage and transfer gear inspection
[MA-43](#)
 Steering linkage [PS-20](#)
 Steering wheel and column [PS-10](#)
 Steering wheel play [PS-6](#)
 Steering wheel turning force [PS-8](#)

Stop lamp [LT-18](#)
 STOP/L - Wiring diagram [LT-18](#)
 Striking rod (M/T) [MT-16](#), [MT-57](#)
 Sub-gear (M/T) [MT-14](#), [MT-53](#)
 Sunroof [RF-10](#)
 Symbols and abbreviations [GI-21](#)
 Symptom matrix chart [EC-84](#), [EC-665](#), [EC-1268](#)
 Synchronizer (M/T) [MT-14](#), [MT-53](#)
 System readiness test (SRT) code [EC-53](#), [EC-630](#),
[EC-1234](#)

T

Tachometer [DI-3](#)
 Tail lamp [LT-17](#)
 TAIL/L - Wiring diagram [LT-17](#)
 TCM circuit diagram [AT-165](#)
 TCM inspection table [AT-242](#)
 TCS (traction control system) [BRC-58](#)
 Temperature control cable and linkage adjustment
[MTC-58](#)
 THEFT - Wiring diagram [BL-49](#)
 Thermal protector [MTC-48](#)
 Thermometer [DI-20](#)
 Thermostat [CO-13](#), [CO-28](#)
 Three way catalyst function (Bank 1) [EC-903](#), [EC-1494](#)
 Three way catalyst function (Bank 2) [EC-903](#), [EC-1494](#)
 Three way catalyst precautions [GI-5](#)
 Throttle bodies [EM-13](#), [EM-80](#)
 Throttle chambers [EM-13](#), [EM-80](#)
 Throttle drum adjustment [ACC-2](#)
 Throttle position sensor (TPS) ... [EC-162](#), [EC-171](#), [EC-753](#),
[EC-762](#), [EC-1362](#), [EC-1371](#)
 Throttle position sensor adjustment [EC-74](#), [EC-652](#),
[EC-1255](#)
 Throttle position switch [EC-999](#), [EC-1589](#), [AT-328](#), [AT-394](#)
 Throwout bearing - See Clutch release bearing [CL-10](#)
 Tie-rod [PS-20](#)
 Tie-rod ball joints [PS-20](#)
 Timing belt [EM-91](#)
 Timing chain [EM-19](#)
 Tire rotation [MA-41](#)
 Tire size [GI-48](#)
 Tooth contact (front final drive 4WD) [FFD-25](#)
 Tooth contact diff. [RFD-29](#), [RFD-63](#)
 Torque converter installation [AT-64](#), [AT-408](#)
 Torque convertor clutch solenoid valve [AT-41](#), [AT-297](#),
[AT-305](#)
 Torsion bar spring [FSU-17](#)
 Tow truck towing [GI-39](#)
 Towing point [GI-40](#)
 TP/SW - Wiring diagram .. [EC-415](#), [EC-1001](#), [EC-1591](#)
 TPS - Wiring diagram . [EC-165](#), [EC-173](#), [EC-756](#), [EC-764](#),
[EC-1365](#), [EC-1373](#)
 Traction control system - See TCS [BRC-58](#)
 Transfer case [TF-13](#)
 Transfer oil replacement [MA-38](#)
 Transfer serial number [GI-46](#)

ALPHABETICAL INDEX

Transmission case (M/T)	MT-12 , MT-51	Window, rear	GW-13
Transmission serial number	GI-46 , GI-47	WIPER - Wiring diagram	WW-5
Tread-FR&RR (Dimensions)	GI-47	Wiper, front	WW-3
Trim	EI-18	Wiring Diagram (Cell code) list	PG-58
Trouble diagnoses	GI-8	Wiring diagrams	GI-13
Turbine revolution sensor	AT-344	Withdrawal lever (clutch)	CL-10
TURN - Wiring diagram	LT-26	Wrist pin - See Piston pin inspection ..	EM-50 , EM-133
Turn signal lamp	LT-24	WT-T/WARN - Wiring diagram	WT-9
Two trip detection logic	EC-49 , EC-625 , EC-1229		
Two-pole lift	GI-38		

U

Under body	BL-67
------------------	-----------------------

V

Vacuum cut valve bypass valve	EC-513 , EC-1111 , EC-1117 , EC-1688 , EC-1694
Vacuum hose (brake system)	BR-22
Vacuum hose drawing (Engine control)	EC-30 , EC-604 , EC-1208
Valve clearance	EM-43 , EM-145
Valve guide	EM-37 , EM-112
Valve lifter	EM-41
Valve seat	EM-39 , EM-114
Valve spring	EM-40 , EM-115
VDC (vehicle dynamics control)	BRC-58
VDC -Wiring diagram	BRC-66 , BRC-67
Vehicle identification number	GI-45
Vehicle recovery (freeing a stuck vehicle)	GI-40
VENT/V - Wiring diagram	EC-339 , EC-937 , EC-1086 , EC-1093 , EC-1529 , EC-1663 , EC-1670
Viscosity number (SAE)	MA-14
VSS - Wiring diagram	EC-395 , EC-989 , EC-1579

W

WARN - Wiring diagram	DI-26
Warning chime	DI-35
Warning lamps	DI-25
Washer, front	WW-3
Water pump	CO-10 , CO-25
Water temperature gauge	DI-3
Weatherstrip - See Exterior	EI-30
Wheel alignment (front)	FSU-10
Wheel balance	MA-41
Wheel bearing (front)	FAX-5
Wheel bearing (rear)	RAX-6
Wheel hub (front)	FAX-14
Wheel sensor (VDC)	BRC-130
Wheel sensors (ABS)	BRC-49 , BRC-130
Wheel size	GI-48
Wheelbase (Dimensions)	GI-47
Width (Dimensions)	GI-47
WINDOW - Wiring diagram	GW-18
Window, back	GW-13 , EI-30
Window, door	GW-24
Window, opera	EI-36