

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

A

A/C air flow [ATC-32](#)
A/C component layout [ATC-21](#)
A/C compressor mounting [ATC-134](#)
A/C compressor precaution [ATC-13](#)
A/C compressor special service tool [ATC-16](#)
A/C control operation (auto A/C) [ATC-29](#)
A/C diagnostic work flow (auto A/C) [ATC-93](#)
A/C evaporator [ATC-142](#)
A/C HFC134a (R134a) system precaution [ATC-6](#)
A/C HFC134a (R134a) system service procedure
[ATC-131](#)
A/C HFC134a (R134a) system service tools ... [ATC-17](#)
A/C HFC134a system service equipment precaution ...
[ATC-13](#)
A/C lubricant (R134a) [ATC-22](#)
A/C lubrication oil [ATC-148](#)
A/C operational check [ATC-55](#)
A/C self-diagnoses (auto A/C) [ATC-47](#), [ATC-93](#)
A/C service data specification [ATC-148](#)
A/C system description (auto A/C) [ATC-25](#)
A/C trouble diagnoses (auto A/C) [ATC-35](#)
A/C, A - Wiring diagram [ATC-40](#)
ABS - Wiring diagram [BRC-15](#)
Accelerator control system [ACC-3](#)
Accelerator pedal position (APP) sensor [EC-571](#),
[EC-577](#), [EC-591](#)
Accelerator pedal released position learning [EC-75](#)
AF1B1-Wiring diagram [EC-232](#), [EC-242](#), [EC-252](#),
[EC-263](#), [EC-600](#)
AF1B2-Wiring diagram [EC-234](#), [EC-244](#), [EC-254](#),
[EC-265](#), [EC-602](#)
AF1HB1-Wiring diagram [EC-163](#)
AF1HB2-Wiring diagram [EC-165](#)
Air bag [SRS-3](#)
Air bag precautions [SRS-3](#), [AP-2](#)
Air bleeding for brake system [BR-11](#)
Air cleaner and air duct [EM-16](#)
Air cleaner filter replacement [MA-16](#)
Air conditioner cut control [EC-26](#)
Air flow meter - See Mass air flow sensor [EC-187](#),
[EC-196](#)
Air fuel ratio sensor 1 [EC-229](#), [EC-240](#), [EC-250](#),
[EC-260](#), [EC-598](#)
Air fuel ratio sensor 1 heater [EC-161](#)
Air mix. door motor [ATC-66](#), [ATC-123](#)
Ambient sensor [ATC-95](#), [ATC-108](#)
Angular tightening application [EM-4](#)
APPS1 - Wiring diagram [EC-573](#)
APPS2 - Wiring diagram [EC-579](#)
APPS3 - Wiring diagram [EC-593](#)
ASC/BS - Wiring diagram [EC-529](#)
ASC/SW - Wiring diagram [EC-522](#)
ASCBOF - Wiring diagram [EC-611](#)
ASCD [EC-27](#)
ASCD (automatic speed control device) [ACS-2](#)
ASCIND - Wiring diagram [EC-618](#)
AUDIO - Wiring diagram [AV-11](#)

Auto air conditioner - Wiring diagram [ATC-40](#)
Auto amp [ATC-107](#)
Auto anti-dazzling inside mirror [GW-73](#), [GW-74](#)
Automatic amplifier [ATC-45](#), [ATC-57](#), [ATC-107](#)
Automatic transmission fluid replacement [MA-23](#)
AV communication line [AV-83](#), [AV-144](#)
AWD - Wiring diagram [TF-18](#)
AWD control unit inspection table [TF-23](#)
Axle [MA-28](#)

B

Back Door [BL-182](#), [BL-183](#)
Back door [BL-182](#), [BL-183](#)
Back door opener - See Back door [BL-188](#)
BACK/L - Wiring diagram [LT-161](#)
Back-up lamp [LT-161](#)
Basic inspection [EC-68](#)
Battery [SC-4](#)
Battery/Starting/Charging System Tester [SC-6](#), [SC-11](#),
[SC-19](#)
BCM (Body control module) [BCS-3](#)
Blower motor [ATC-72](#), [ATC-115](#)
Blower unit [ATC-112](#)
Boring/horning cylinder block [EM-137](#)
Bose speaker amp. [AV-6](#)
Brake booster [BR-20](#)
Brake fluid change [BR-10](#)
Brake fluid level [MA-26](#)
Brake fluid level and line check [BR-10](#)
Brake hydraulic line [BR-12](#)
Brake inspection [MA-26](#)
Brake lines and cables inspection [MA-26](#)
Brake master cylinder [BR-14](#)
Brake pedal [BR-6](#)
Brake switch [EC-547](#)
BRK/SW - Wiring diagram [EC-548](#)
Bulb specifications [LT-229](#)
Bumper, front [EI-14](#)
Bumper, rear [EI-16](#)

C

Camshaft [EM-79](#)
Camshaft inspection [EM-81](#)
Camshaft position sensor (PHASE) [EC-371](#)
CAN [DI-84](#)
CAN - Wiring diagram [EC-153](#), [CVT-73](#), [LAN-27](#),
[LAN-45](#), [LAN-60](#), [LAN-78](#), [LAN-97](#), [LAN-114](#), [LAN-135](#)
CAN (Controller Area Network) [BL-27](#), [BL-62](#), [BL-104](#),
[GW-77](#), [RF-13](#), [SE-18](#)
CAN communication [EC-29](#), [EC-152](#), [EC-155](#), [CVT-24](#),
[CVT-72](#), [TF-14](#), [TF-36](#), [BRC-34](#), [BL-27](#), [BL-62](#), [BL-104](#),
[GW-77](#), [RF-13](#), [SE-18](#)
Canister-See EVAP canister [EC-33](#)
CHARGE - Wiring diagram [SC-18](#)
Charging system [SC-17](#)
Chassis and body maintenance [MA-21](#)
CHIME - Wiring diagram [DI-63](#)

ALPHABETICAL INDEX

Circuit breaker [PG-16](#)
Closed loop control [EC-23](#)
Collision diagnosis [SRS-51](#)
Combination lamp, front, removal and installation
[LT-62](#)
Combination lamp, rear, removal and installation
[LT-181](#)
Combination meter [DI-4](#)
Combination meter removal and installation - See
Instrument panel [IP-11](#)
COMM - Wiring diagram [AV-83](#), [AV-144](#)
COMPAS - Wiring diagram [DI-86](#)
Compass [DI-85](#)
Component Location (auto A/C) [ATC-37](#)
Compression pressure [EM-96](#)
Compressor special service tool [ATC-16](#)
Condenser [ATC-141](#)
Connecting rod [EM-134](#)
Connecting rod bearing clearance [EM-138](#)
Connecting rod bushing clearance [EM-134](#)
Console box - See Instrument panel [IP-10](#)
Console box lamp [LT-228](#)
CONSULT-II for engine [EC-112](#)
CONSULT-II Reference value (CVT) [CVT-60](#)
Control units (terminal arrangement) [PG-64](#)
Control valve (CVT) [CVT-28](#)
Controller Area Network (CAN) [BL-27](#), [BL-62](#), [BL-104](#),
[GW-77](#), [RF-13](#), [SE-18](#)
COOL/F - Wiring diagram [EC-506](#)
Coolant replacement [MA-14](#)
Coolant replacement VQ35DE [CO-9](#)
Cooling circuit (engine) [CO-7](#)
Cooling fan [CO-20](#)
Cooling fan motor [EC-513](#)
Cowl top [EI-20](#)
Cowl top cover [EI-20](#)
Crankcase ventilation system - See Positive crankcase
ventilation [EC-42](#)
Crankshaft [EM-138](#)
Crankshaft position sensor (POS) [EC-364](#)
Crash zone sensor [SRS-47](#)
CVT air breather hose [CVT-222](#)
CVT control system [CVT-21](#)
CVT cross-sectional view [CVT-20](#)
CVT Electrical parts location [CVT-39](#), [CVT-40](#)
CVT fluid checking [CVT-15](#), [CVT-42](#), [MA-21](#)
CVT fluid cooler cleaning [CVT-17](#)
CVT fluid cooler valve [CVT-225](#)
CVT fluid replacement [CVT-16](#), [MA-22](#)
CVT fluid temperature sensor [CVT-88](#)
CVT hydraulic control system [CVT-22](#)
CVT indicator [DI-52](#)
CVT self-diagnoses [CVT-65](#), [CVT-71](#)
CVT shift lock system [CVT-213](#)
CVT trouble diagnoses [CVT-33](#)
CVTIND - Wiring diagram [DI-52](#)
Cylinder block [EM-114](#)
Cylinder head [EM-96](#)
Cylinder head bolt tightening [EM-99](#)

D

Daytime light system [LT-64](#)
Daytime running light - See Daytime light system [LT-64](#)
Diagnosis sensor unit [SRS-50](#)
Diagnostic trouble code (DTC) for OBD system . [EC-8](#),
[WT-3](#)
Diagnostic trouble code (DTC) inspection priority chart
[EC-86](#), [CVT-33](#)
Differential side oil seal [CVT-223](#)
Display and amp. assembly [ATC-45](#), [ATC-57](#)
Door glass [GW-67](#), [GW-70](#)
Door glass Fitting Adjustment(Front) [GW-69](#)
Door glass Fitting Adjustment(Rear) [GW-72](#)
Door lock [BL-176](#)
Door mirror [GW-100](#)
Door trim [EI-30](#)
Door, front [BL-172](#), [GW-67](#)
Door, rear [BL-172](#), [GW-70](#)
Drive belt [EM-13](#)
Drive shaft [MA-28](#)
Drive shaft (rear) [RAX-7](#)
Driver air bag [SRS-39](#)
DTC work support [EC-114](#)
DTRL - Wiring diagram [LT-68](#)
Duct and grilles [ATC-125](#)

E

ECM input/output signal [EC-102](#)
ECM power supply [EC-143](#), [EC-482](#)
ECM/PW - Wiring diagram [EC-483](#)
ECTS - Wiring diagram [EC-211](#)
Electric sunroof [RF-10](#)
Electric throttle control actuator [EM-21](#), [EC-558](#),
[EC-569](#)
Electrical load signal circuit [EC-620](#)
Electrical unit [PG-64](#)
Electrical units location [PG-58](#)
Electronic ignition (EI) system [EC-24](#)
EMNT - Wiring diagram [EC-623](#)
Engine control circuit diagram [EC-100](#)
Engine control component parts location [EC-93](#)
Engine control module (ECM) [EC-102](#), [EC-486](#)
Engine control system diagram [EC-21](#)
Engine coolant [CO-9](#)
Engine coolant temperature sensor (ECTS) ... [EC-209](#),
[EC-221](#)
Engine fail-safe system [EC-88](#)
Engine mounting control (Front) [EC-622](#)
Engine oil [LU-6](#)
Engine oil filter replacement [MA-18](#)
Engine oil precautions [GI-7](#)
Engine oil replacement [MA-17](#)
Engine removal [EM-108](#)
ETC1 - Wiring diagram [EC-559](#)
ETC2 - Wiring diagram [EC-554](#)
ETC3 - Wiring diagram [EC-565](#)
EVAP canister [EC-33](#)

A
B
C
D
E
F
G
H
I
J
K
L

ALPHABETICAL INDEX

EVAP canister purge volume control solenoid valve [EC-401](#), [EC-409](#)
EVAP canister vent control valve [EC-416](#), [EC-423](#)
EVAP control system (small leak) diagnosis .. [EC-392](#), [EC-447](#)
EVAP control system pressure sensor [EC-430](#), [EC-433](#), [EC-439](#)
EVAP control system purge flow monitoring diagnosis [EC-387](#)
EVAP vapor lines inspection [MA-20](#)
Evaporative emission (EVAP) system [EC-30](#)
Evaporator [ATC-142](#)
Exhaust manifold [EM-25](#)
Exhaust system [EX-3](#)
Exhaust system inspection [EX-3](#), [MA-21](#)
Expansion valve [ATC-143](#)

F

F/FOG - Wiring diagram [LT-103](#)
F/PUMP - Wiring diagram [EC-635](#)
Floor trim [EI-34](#)
Flow charts [GI-27](#)
Fluid temperature sensor (CVT) [CVT-88](#)
Fluorescent leak detector [ATC-144](#)
Fog lamp, front [LT-101](#)
Freeze frame data [EC-51](#)
Front axle [FAX-5](#)
Front bumper [EI-14](#)
Front combination lamp removal and installation [LT-62](#)
Front disc brake [BR-25](#)
Front door [BL-172](#), [BL-176](#), [GW-67](#)
Front fog lamp [LT-101](#)
Front passenger air bag [SRS-43](#)
Front seat [SE-103](#)
Front seat belt [SB-3](#)
Front seat belt pre-tensioner [SB-2](#), [SRS-3](#), [SRS-49](#)
Front suspension [FSU-5](#)
FTS - Wiring diagram [CVT-89](#)
FTTS - Wiring diagram [EC-334](#), [EC-339](#)
Fuel cut control (at no load high engine speed) . [EC-25](#)
Fuel gauge [DI-4](#)
Fuel injection system (Bank 1) [EC-308](#), [EC-320](#)
Fuel injection system (Bank 2) [EC-308](#), [EC-320](#)
Fuel injector and fuel tube [EM-41](#)
Fuel level sensor [EC-465](#), [EC-467](#), [EC-469](#)
Fuel line inspection [FL-3](#), [MA-16](#)
Fuel precautions [GI-6](#)
Fuel pressure check [EC-78](#)
Fuel pressure release [EC-78](#)
Fuel pump [EC-634](#)
Fuel pump and gauge [FL-4](#)
Fuel system [FL-3](#)
Fuel tank [FL-10](#)
Fuel tank temperature sensor [EC-332](#), [EC-338](#)
Fuel tank vacuum relief valve [EC-33](#)
FUELB1 - Wiring diagram [EC-310](#), [EC-322](#)
FUELB2 - Wiring diagram [EC-312](#), [EC-324](#)
Fuse [PG-16](#)

Fuse and fusible link box [PG-70](#)
Fusible link [PG-16](#)

G

Gauges [DI-4](#)
Generic scan tool (GST) [EC-124](#)
Glass [GW-11](#), [GW-67](#), [GW-70](#)
Glove box lamp [LT-228](#)
Grille - See Exterior [EI-19](#)
Ground distribution [PG-29](#)

H

H/AIM - Wiring diagram [LT-98](#)
H/LAMP - Wiring diagram [LT-11](#), [LT-40](#)
Harness connector [PG-62](#)
Harness layout [PG-38](#)
Hazard warning lamp [LT-114](#), [LT-153](#)
Headlamp aiming control [LT-98](#)
Headlamp leveler - See Headlamp aiming control [LT-98](#)
Headlamp removal and installation [LT-62](#)
Headlining - See Roof trim [EI-35](#)
Heated oxygen sensor 2 (bank 1) [EC-273](#), [EC-284](#), [EC-297](#)
Heated oxygen sensor 2 (bank 2) [EC-273](#), [EC-284](#), [EC-297](#)
Heated oxygen sensor 2 heater (bank 1) [EC-170](#)
Heated oxygen sensor 2 heater (bank 2) [EC-170](#)
Heated seat [SE-98](#)
Heater and cooling unit (Heater core) [ATC-118](#)
HFC134a (R134a) system precaution [ATC-6](#)
HFC134a (R134a) system service procedure [ATC-131](#)
HFC134a (R134a) system service tools [ATC-17](#)
HFC134a system service equipment precaution [ATC-13](#)
Hood [BL-13](#)
Horn [WW-56](#)
HORN - Wiring diagram [WW-56](#)
How to erase DTC [EC-58](#)
HSEAT - Wiring diagram [SE-100](#)

I

IATS - Wiring diagram [EC-206](#)
Idle air volume learning [EC-76](#)
Idle speed [EC-73](#)
Idle speed control (ISC) [EC-473](#), [EC-475](#)
Ignition coil [EM-38](#), [EC-640](#)
Ignition control system [EC-640](#)
Ignition key hole illumination [LT-216](#)
Ignition timing [EC-73](#)
IGNSYS - Wiring diagram [EC-641](#)
Illumination control [LT-228](#)
In vehicle sensor [ATC-98](#), [ATC-109](#)
INF/D - Wiring diagram [AV-74](#)
INJECT - Wiring diagram [EC-628](#)
Injector [EC-627](#)

ALPHABETICAL INDEX

Input/Output signal of TCM [CVT-24](#)
 Instrument panel [IP-10](#)
 Intake air temperature sensor [EC-204](#), [EC-224](#)
 Intake door control linkage adjustment [ATC-71](#)
 Intake door motor [ATC-69](#), [ATC-116](#)
 Intake manifold [EM-23](#)
 Intake manifold collector [EM-18](#)
 Intake sensor [ATC-104](#), [ATC-111](#)
 Intake valve timing control (Bank 1) [EC-157](#)
 Intake valve timing control (Bank 2) [EC-157](#)
 Intake valve timing control solenoid valve (Bank 1)
[EC-179](#)
 Intake valve timing control solenoid valve (Bank 2)
[EC-179](#)
 Integrated homelink transmitter [BL-259](#)
 Interior [EI-32](#)
 Interior lamp [LT-182](#)
 IPDM (Intelligent power distribution module engine
 room) [PG-17](#)
 IVCB1 - Wiring diagram [EC-180](#)
 IVCB2 - Wiring diagram [EC-182](#)
 IVIS (Infiniti vehicle immobilizer system) precautions ...
[GI-3](#)

K

Knock sensor (KS) [EC-359](#)
 KS - Wiring diagram [EC-360](#)

L

L/USSV - Wiring diagram [CVT-167](#)
 LAN system circuit [ATC-59](#)
 Line pressure and secondary pressure control [CVT-25](#)
 Line pressure solenoid valve [CVT-116](#), [CVT-121](#)
 Liquid gasket application [EM-4](#), [LU-2](#)
 Location of electrical units [PG-58](#)
 Lock-up and select control [CVT-27](#)
 Lock-up select solenoid valve [CVT-166](#)
 Low tire pressure warning system [WT-8](#)
 LPSV - Wiring diagram [CVT-117](#)
 Lubricant (R134a) A/C [ATC-22](#)
 Lubrication circuit (engine) [LU-4](#)
 Lubrication oil A/C [ATC-148](#)

M

MAFS - Wiring diagram [EC-190](#), [EC-198](#)
 Magnet clutch [ATC-77](#)
 MAIN - Wiring diagram [EC-143](#)
 Maintenance (engine) [MA-12](#)
 Major overhaul (Transfer) [TF-54](#)
 Malfunction indicator lamp (MIL) [EC-59](#)
 Mass air flow sensor (MAFS) [EC-187](#), [EC-196](#)
 Master cylinder (brake) [BR-14](#)
 Meter [DI-4](#)
 METER - Wiring diagram [DI-11](#)
 MIL data link connectors circuit [EC-667](#)
 MIL/DL - Wiring diagram [EC-667](#)

Mirror, door [GW-100](#)
 Mirror, out side [GW-100](#)
 Misfire [EC-350](#)
 MMSW - Wiring diagram [CVT-133](#)
 Mode door control linkage adjustment [ATC-65](#)
 Mode door motor [ATC-63](#), [ATC-122](#)
 Molding - See Exterior [EI-22](#), [EI-26](#), [EI-28](#)
 Multiport fuel injection (MFI) system [EC-22](#)
 Multiport fuel injection precautions [GI-6](#)

N

NATS - Wiring diagram [BL-239](#)
 NAVI - Wiring diagram [AV-134](#)
 Navigation system [AV-125](#)
 NONDTC - Wiring diagram [CVT-183](#)
 NVH troubleshooting (BR) [BR-5](#)
 NVH troubleshooting (EM) [EM-11](#)
 NVH troubleshooting (Transfer) [TF-9](#)
 NVIS (Nissan vehicle immobilizer system) [BL-236](#)
 NVIS (Nissan vehicle immobilizer system) precautions
[GI-3](#)

O

O2H2B1 - Wiring diagram [EC-172](#)
 O2H2B2 - Wiring diagram [EC-174](#)
 O2S2B1 - Wiring diagram ... [EC-276](#), [EC-287](#), [EC-300](#)
 O2S2B2 - Wiring diagram ... [EC-278](#), [EC-289](#), [EC-302](#)
 Oil cooler (engine) [LU-10](#)
 Oil filter [LU-9](#)
 Oil pan (engine) [EM-29](#)
 Oil pressure (engine) [LU-7](#)
 Oil pump (engine) [LU-12](#)
 Oil pump regulator valve (engine) [LU-12](#)
 Oil seal replacement (engine) [EM-93](#)
 Oil seal replacement (front of final drive) [RFD-9](#)
 On board diagnostic system [EC-60](#)
 ORVR (On-board Refueling Vapor Recovery) ... [EC-37](#)
 Out side mirror [GW-100](#)
 Overheat [EC-502](#)
 Oversize piston [EM-136](#)

P

P/SCKT - Wiring diagram [WW-54](#)
 Park/Neutral position switch [EC-494](#)
 Park/neutral position switch (CVT) [CVT-81](#)
 Parking brake control [PB-3](#)
 PCV (positive crankcase ventilation) [EC-42](#)
 Personal lamp [LT-214](#)
 PGC/V - Wiring diagram [EC-403](#), [EC-411](#)
 PHSB1 - Wiring diagram [EC-373](#)
 PHSB2 - Wiring diagram [EC-375](#)
 Piston assembly [EM-127](#)
 Piston pin inspection [EM-132](#)
 Piston ring inspection [EM-133](#)
 Piston to bore clearance [EM-136](#)
 PNP/SW - Wiring diagram [EC-496](#), [CVT-83](#)

ALPHABETICAL INDEX

POS - Wiring diagram	EC-366	Seat, front	SE-103
POWER - Wiring diagram	CVT-154, PG-4	Seat, rear	SE-109
Power seat	SE-92	Second position switch	CVT-178
Power socket	WW-54	Secondary pressure sensor	CVT-137
Power steering fluid level	PS-6, MA-27	Secondary Speed Sensor	CVT-98
Power steering oil pump	PS-29	SECPS - Wiring diagram	CVT-138
Power steering pressure (PSP) sensor	EC-477	SECPSV - Wiring diagram	CVT-128
Power steering system bleeding	PS-7	Self-diagnosis (Transfer)	TF-25
Power supply routing	PG-3	Self-diagnostic results	EC-115
Power window	GW-17	SEN/PW - Wiring diagram	EC-490
PRE/SE - Wiring diagram	EC-435, EC-441	SESCVT - Wiring diagram	CVT-99
Precautions for Leak detection dye	ATC-15	SHIFT - Wiring diagram	CVT-214, CVT-216
Precautions (General)	GI-4	Shift control	CVT-25
Pressure control solenoid valve A	CVT-116, CVT-121	Shift control system	CVT-208
Pressure control solenoid valve B	CVT-124, CVT-127	Shift schedule	CVT-56, CVT-236
Pressure test (CVT)	CVT-44	Side air bag (satellite) sensor	SRS-48
Primary pressure sensor	CVT-145	Side curtain air bag	SRS-45
Primary Speed Sensor	CVT-93	Side trim	EI-32
PRIPS - Wiring diagram	CVT-146	SMJ (super multiple junction)	PG-66
Propeller shaft	PR-4	Spark plug	EM-39
Propeller shaft on vehicle service	PR-4	Spark plug replacement	MA-19
PRSCVT - Wiring diagram	CVT-94	Specification value	EC-132
PS/SEN - Wiring diagram	EC-478	Speedometer	DI-4

R

Radiator	CO-13
Rear axle	RAX-5
Rear bumper	EI-16
Rear combination lamp removal and installation	LT-181
Rear disc brake	BR-31
Rear door	BL-172, GW-70
Rear seat	SE-109
Rear seat belt	SB-5
Rear suspension	RSU-5
Rear washer	WW-37
Rear window defogger	GW-75
Refrigerant connection precaution	ATC-8
Refrigerant discharging evacuating charging	ATC-131
Refrigerant general precaution	ATC-7
Refrigerant lines	ATC-131
Refrigerant pressure sensor	EC-653, ATC-82, ATC-142
Refrigeration cycle	ATC-20
Removal and installation (Transfer)	TF-52
Road test	CVT-46
Rocker cover	EM-47
Room lamp - See Interior lamp	LT-182
ROOM/L - Wiring diagram	LT-189
RP/SEN - Wiring diagram	EC-654

S

SAE J1979 - Service \$01 - 09	EC-45
Seal - See Exterior	EI-25
Seat belt inspection	SB-6
Seat belt, front	SB-3
Seat belt, rear	SB-5

Seat, front	SE-103
Seat, rear	SE-109
Second position switch	CVT-178
Secondary pressure sensor	CVT-137
Secondary Speed Sensor	CVT-98
SECPS - Wiring diagram	CVT-138
SECPSV - Wiring diagram	CVT-128
Self-diagnosis (Transfer)	TF-25
Self-diagnostic results	EC-115
SEN/PW - Wiring diagram	EC-490
SESCVT - Wiring diagram	CVT-99
SHIFT - Wiring diagram	CVT-214, CVT-216
Shift control	CVT-25
Shift control system	CVT-208
Shift schedule	CVT-56, CVT-236
Side air bag (satellite) sensor	SRS-48
Side curtain air bag	SRS-45
Side trim	EI-32
SMJ (super multiple junction)	PG-66
Spark plug	EM-39
Spark plug replacement	MA-19
Specification value	EC-132
Speedometer	DI-4
Spiral cable	SRS-41
Spot lamp	LT-214
SPSW - Wiring diagram	CVT-179
SROOF - Wiring diagram	RF-14
SRS - See Supplemental Restraint System	SRS-5
SRS - Wiring diagram	SRS-12
SRS Trouble diagnoses	SRS-8
Stabilizer bar (rear)	RSU-16
Stall Test	CVT-42
Standardized relay	PG-67
START - Wiring diagram	SC-10
Starter	SC-9
Starting system	SC-9
Steering gear and linkage inspection	MA-27
Steering wheel and column	PS-8, PS-11
Step motor	CVT-172, CVT-176
STM - Wiring diagram	CVT-173
Stop lamp	LT-153
Stop lamp switch	EC-547
STOP/L - Wiring diagram	LT-156
STSIG - Wiring diagram	CVT-76
Sun roof, electric	RF-10
Sunload sensor	ATC-101, ATC-110
Sunroof	RF-10, RF-40
Supplemental Restraint System	SRS-5
Supplemental restraint system - Wiring diagram	SRS-12
Suspension	MA-28
Symbols and abbreviations	GI-10, GI-23
Symptom matrix chart	EC-89
System readiness test (SRT) code	EC-51

T

Tachometer	DI-4
TCM circuit diagram	CVT-41

ALPHABETICAL INDEX

TCM function	CVT-23	Warning lamps	DI-38
TCM inspection table	CVT-57	Water pump	CO-22
TCV - Wiring diagram	CVT-109	Water temperature gauge	DI-4
Thermostat	CO-27	Wheel alignment (front)	FSU-5
Three way catalyst	EM-25	Wheel alignment (rear)	RSU-5
Three way catalyst function (Bank 1)	EC-381	Wheel balance	WT-54 , MA-24
Three way catalyst function (Bank 2)	EC-381	Wheel bearing (front)	FAX-5
Three way catalyst precautions	GI-6	Wheel bearing (rear)	RAX-5
Throttle control motor	EC-564	Wheel hub (front)	FAX-5
Throttle control motor relay	EC-552	Wheel hub (rear)	RAX-5
Throttle position sensor (TPS)	EC-214 , EC-343 , EC-514 , EC-516 , EC-584	Wheel sensor (VDC)	BRC-103
Throttle valve closed position learning	EC-76	Wheel sensors (ABS)	BRC-43
Timing chain	EM-60	WINDOW - Wiring diagram	GW-23
TLID - Wiring diagram	BL-193 , BL-196	Window, door	GW-67 , GW-70
Top tether strap child restraint	SB-9	Windshield	GW-11
Torque converter installation	CVT-233 , CVT-234	WIP/R - Wiring diagram	WW-39
Torque convertor clutch solenoid valve	CVT-108 , CVT-113	WIPER - Wiring diagram	WW-11
TPS1 - Wiring diagram	EC-345	Wiper and washer	WW-4
TPS2 - Wiring diagram	EC-216	Wiring Diagram (Cell code) list	PG-55
TPS3 - Wiring diagram	EC-586	Wiring diagrams	GI-15
Transverse link (front)	FSU-12	WT-T/WARN - Wiring diagram	WT-15
TRNSCV - Wiring diagram	BL-259		
Trouble diagnoses	GI-11		
Turbocharger	CO-2		
TURN - Wiring diagram	LT-119		
Turn signal lamp	LT-114 , LT-153		
Two trip detection logic	EC-45		
Tyre pressure monitoring system - trouble diagnoses ..	WT-11		

U

Unified meter and A/C amp.	DI-27
---------------------------------	-----------------------

V

Vacuum hose drawing (Engine control)	EC-99
Valve clearance	EM-88
Valve guide	EM-103 , EM-104
Valve lifter	EM-83
Valve seat	EM-105
Valve spring	EM-106 , EM-107
Variable induction air control system (VIAS) ..	EC-542 , EC-658
VDC -Wiring diagram	BRC-59
Vehicle security (theft warning) system	BL-207
Vehicle speed sensor (VSS)	EC-471 , EC-538 , EC-540
VEHSEC - Wiring diagram	BL-213 , BL-219
VENT/V - Wiring diagram	EC-418 , EC-425
VIAS - Wiring diagram	EC-660
VIAS/V - Wiring diagram	EC-543
VIN registration	EC-75

W

WARN - Wiring diagram	DI-40
Warning chime	DI-58

A
B
C
D
E
F
G
H
I
J
K
L