
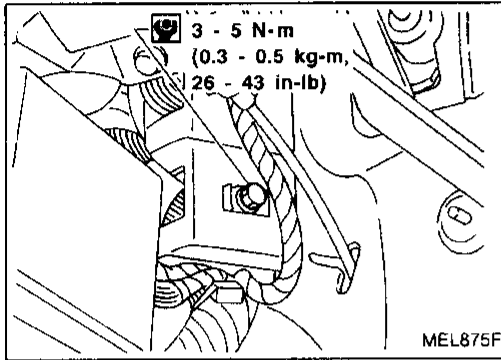



SUPER MULTIPLE JUNCTION (SMJ)

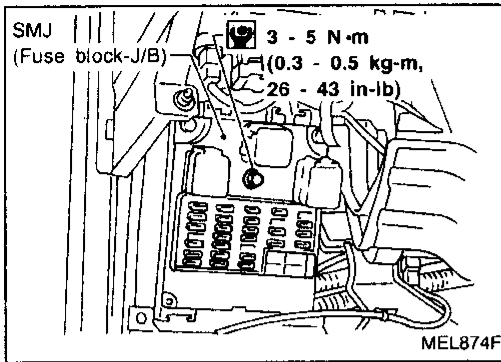

INSTALLATION

To install SMJ, tighten bolts until orange "fulltight" mark appears and then retighten to specified torque as required.

 : 3 - 5 N·m
(0.3 - 0.5 kg-m, 26 - 43 in-lb)

CAUTION:

Do not overtighten bolts, otherwise, they may be damaged.


SUPER MULTIPLE JUNCTION (SMJ)

Terminal Arrangement


MAIN HARNESS




M1

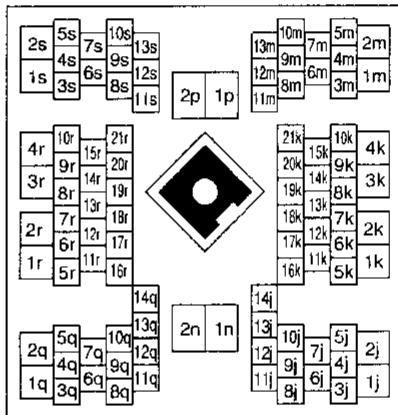


M2

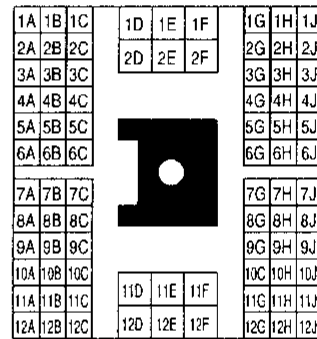

E1

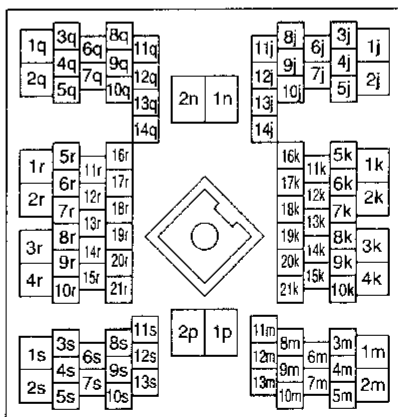

B1

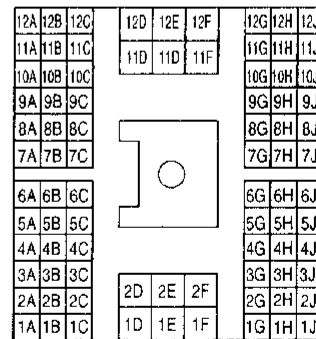


ENGINE ROOM HARNESS



BODY HARNESS

FUSE BLOCK — Junction Box (J/B)

Terminal Arrangement

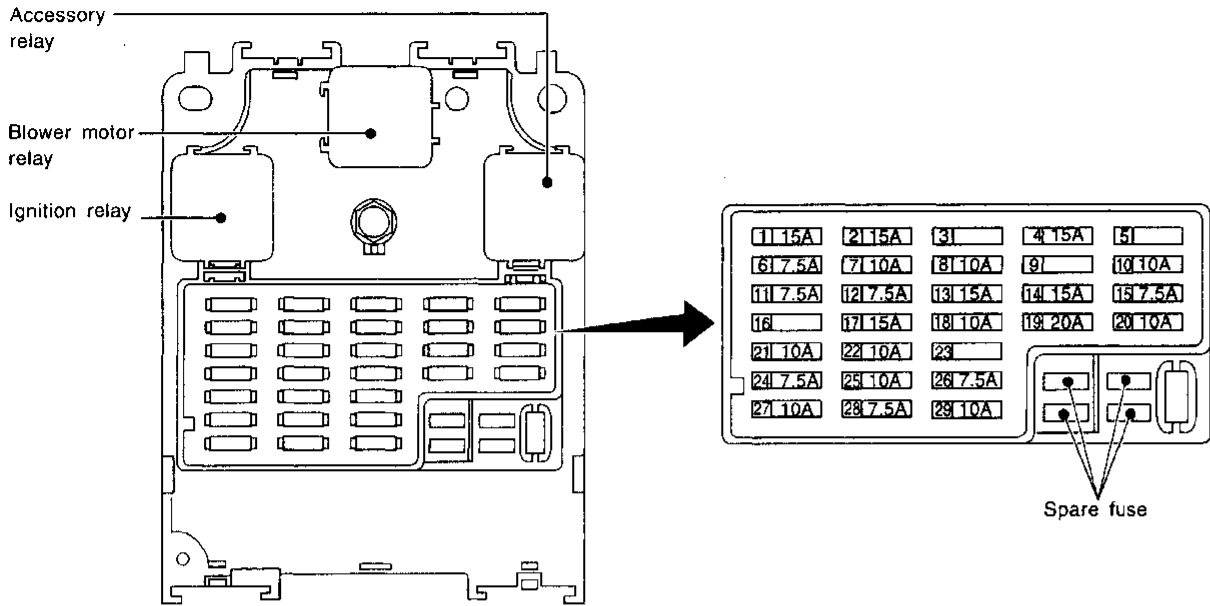


To main harness (M10)

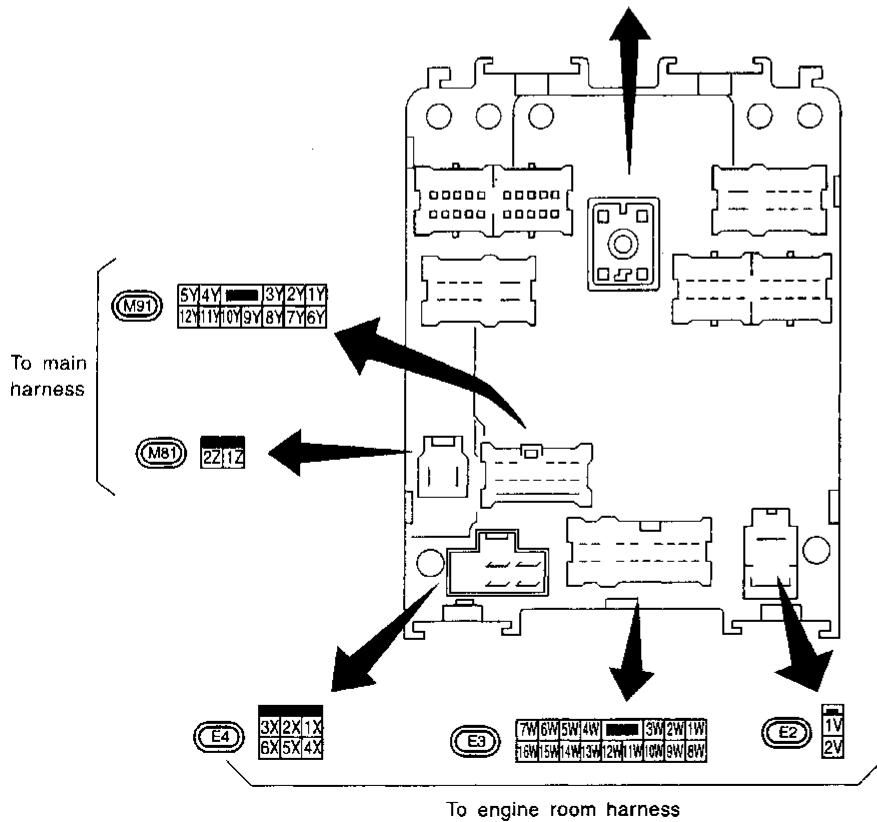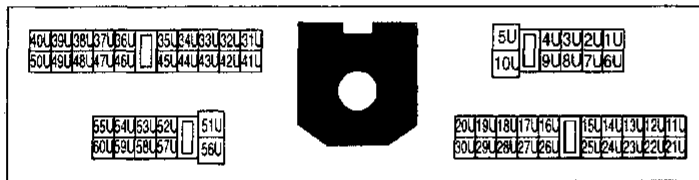

FUSE AND FUSIBLE LINK BOX

Terminal Arrangement

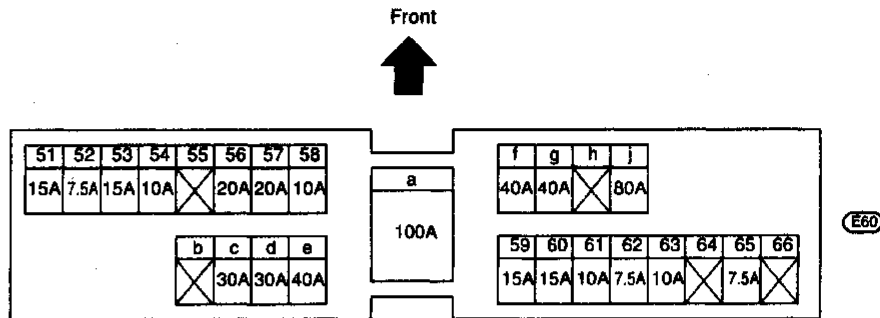


No. 51 - 66: FUSE a - j: FUSIBLE LINK

ELECTRICAL UNITS

Terminal Arrangement


ECM (ECSS CONTROL MODULE) (F24)

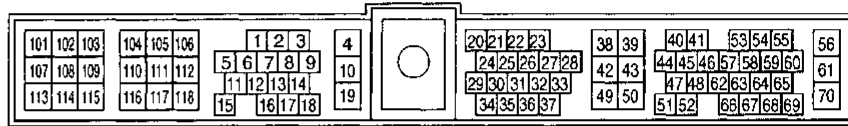

A/T CONTROL UNIT (M13)



 ABS CONTROL UNIT (M54)



SMART ENTRANCE CONTROL UNIT (M16)

