

ALPHABETICAL INDEX GI

SECTION **IDX**

A B C D E F G H I J K L M

N O P Q R S T U V W X Y Z

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

A

| | | | |
|---|------------------|---|------------|
| AAC/V - Wiring diagram..... | EC-420 | A/C service data specification (auto A/C)..... | HA-125 |
| ABS - Wiring diagram | BR-37 | A/C service data specification (manual A/C)..... | HA-206 |
| ABS sensor rotor..... | AX-6, 20 | A/C switch (manual A/C) | HA-190 |
| Absolute pressure sensor | EC-156 | A/C system description (auto A/C)..... | HA-25 |
| A/C air flow (auto A/C) | HA-27 | A/C trouble diagnoses (auto A/C) | HA-29 |
| A/C air flow (manual A/C) | HA-146 | A/C trouble diagnoses (manual A/C) | HA-148 |
| A/C component layout (auto A/C) | HA-21 | A/C, A - Wiring diagram | HA-32 |
| A/C component layout (manual A/C) | HA-144 | A/C, M - Wiring diagram | HA-152 |
| A/C compressor clutch removal and installation (auto A/C)..... | HA-116 | Accelerator control system | FE-3 |
| A/C compressor clutch removal and installation (manual A/C)..... | HA-197 | Accelerator wire adjustment | FE-3 |
| A/C compressor description (manual A/C)..... | HA-137 | Actuator lever (Transfer)..... | TF-10 |
| A/C compressor precaution (auto A/C) | HA-7 | Air bag | RS-11 |
| A/C compressor precaution (manual A/C)..... | HA-130 | Air bag disposal..... | RS-24 |
| A/C compressor special service tool (auto A/C)..... | HA-10 | Air bag precautions | GI-3 |
| A/C compressor special service tool (manual A/C)..... | HA-133 | Air bleeding (hydraulic clutch) | CL-7 |
| A/C control linkage adjustment (manual A/C) | HA-164, 181, 183 | Air bleeding for brake system | BR-8 |
| A/C control operation (auto A/C)..... | HA-25 | Air cleaner filter replacement..... | MA-19 |
| A/C control operation (manual A/C) | HA-145 | Air conditioner cut control | EC-29 |
| A/C diagnostic work flow (auto A/C) | HA-48 | Air flow meter - See Mass air flow sensor | EC-146 |
| A/C diagnostic work flow (manual A/C)..... | HA-155 | Air mix door control linkage adjustment (auto A/C)..... | HA-62 |
| A/C HFC134a (R134a) system precaution (auto A/C)..... | HA-3 | Air mix. door motor (auto A/C) | HA-60, 110 |
| A/C HFC134a (R134a) system precaution (manual A/C)..... | HA-126 | Air spoiler, rear..... | BT-31 |
| A/C HFC134a (R134a) system service procedure (auto A/C)..... | HA-111 | Alternator | SC-14 |
| A/C HFC134a (R134a) system service procedure (manual A/C) | HA-192 | Ambient sensor (auto A/C)..... | HA-97 |
| A/C HFC134a (R134a) system service tools (auto A/C)..... | HA-11 | Angular tightening application..... | EM-3 |
| A/C HFC134a (R134a) system service tools (manual A/C)..... | HA-134 | Antenna - See Power antenna | EL-159 |
| A/C HFC134a system service equipment precaution (auto A/C) | HA-7 | Anti-lock brake system - Wiring diagram | BR-37 |
| A/C HFC134a system service equipment precaution (manual A/C)..... | HA-130 | AP/SEN - Wiring diagram | EC-159 |
| A/C lubricant (R134a) (auto A/C) | HA-113 | ASCD (automatic speed control device) | EL-170 |
| A/C lubricant (R134a) (manual A/C) | HA-194 | ASCD - Wiring diagram | EL-175 |
| A/C operational check (auto A/C) | HA-49 | A/T - Wiring diagram - AT - FTS..... | AT-107 |
| A/C operational check (manual A/C)..... | HA-156 | A/T - Wiring diagram - AT - MAIN..... | AT-96 |
| A/C performance chart (auto A/C) | HA-88 | A/T - Wiring diagram - AT - PNP/SW..... | AT-101 |
| A/C performance chart (manual A/C)..... | HA-175 | A/T - Wiring diagram - AT - VSS A/T | AT-112 |
| A/C performance test diagnoses (auto A/C)..... | HA-86 | A/T control | EC-431 |
| A/C performance test diagnoses (manual A/C)..... | HA-173 | A/T diagnosis communication line..... | EC-540 |
| A/C relay (auto A/C) | HA-84 | A/T fluid temperature sensor..... | AT-109 |
| A/C relay (manual A/C) | HA-190 | A/T self-diagnoses..... | AT-46 |
| A/C self-diagnoses (auto A/C)..... | HA-38 | A/T shift lock system | AT-255 |
| | | A/T shift lock system - Wiring diagram | AT-256 |
| | | A/T trouble diagnoses | AT-53 |
| | | A/T Wiring diagram - AT - ENG SS..... | AT-117 |
| | | A/T Wiring diagram AT - 1ST | AT-123 |
| | | A/T Wiring diagram AT - 2ND | AT-129 |
| | | A/T Wiring diagram AT - 3RD | AT-135 |
| | | A/T Wiring diagram AT - 4TH..... | AT-142 |
| | | A/T Wiring diagram AT - BA/FTS..... | AT-195 |
| | | A/T Wiring diagram AT - LPSV | AT-164 |
| | | A/T Wiring diagram AT - NONDTC | AT-207 |
| | | A/T Wiring diagram AT - OVRCSV | AT-190 |
| | | A/T Wiring diagram AT - SSV/A | AT-171 |
| | | A/T Wiring diagram AT - SSV/B | AT-176 |
| | | A/T Wiring diagram AT - TCCSIG | AT-156 |
| | | A/T Wiring diagram AT - TCV | AT-150 |
| | | A/T Wiring diagram AT - TPS..... | AT-182 |
| | | A/T Wiring diagram AT - VSSMTR..... | AT-201 |

ALPHABETICAL INDEX

AT/C - Wiring diagram.....EC-433
 ATDIAG - Wiring diagram.....EC-542
 Audio.....EL-149
 AUDIO - Wiring diagram.....EL-150, 153
 Audio and A/C control removal and
 installation - See Instrument panelBT-20
 Auto air conditioner - Wiring diagramHA-32
 Automatic amplifier.....HA-36
 Automatic amplifier (auto A/C).....HA-52
 Automatic speed control system - See
 ASCDEL-170
 Automatic transmission fluid
 replacement.....MA-24
 Automatic transmission number.....GI-43
 Auxiliary air control (AAC) valveEC-416
 Axle housing (rear).....AX-20

B

Back door.....BT-15
 Back door opener - See Back door.....BT-15
 Back door trim.....BT-30
 Back-up lamp.....EL-55
 Back-up lamp switch (M/T).....MT-6
 BACK/L - Wiring diagram.....EL-55
 Ball joint (front).....SU-14
 Basic inspection.....EC-99
 Battery.....SC-3
 Baulk ring (M/T).....MT-13
 Block heater.....EM-46
 Blower motor (auto A/C).....HA-71
 Blower motor (manual A/C).....HA-166
 Blower resistor (manual A/C).....HA-166
 Body alignment.....BT-55
 BPT valve.....EC-358, 362
 Brake booster.....BR-19
 Brake control valve (Proportioning
 valve).....BR-11
 Brake fluid change.....BR-7
 Brake fluid level.....MA-28
 Brake fluid level and line check.....BR-7
 Brake hydraulic line.....BR-9
 Brake inspection.....MA-28
 Brake lines and cables inspection.....MA-28
 Brake lining wear temporary checking.....MA-29
 Brake master cylinder.....BR-16
 Brake pedal.....BR-14
 Bulb specifications.....EL-322
 Bumper, front.....BT-12
 Bumper, rear.....BT-15
 BYPS/V - Wiring diagram.....EC-527, 535

C

Camshaft inspection.....EM-31
 Camshaft position sensor (CMPS).....EC-339
 Canister-See EVAP canister.....EC-30
 Center bearing assembly (propeller

shaft).....PD-11 GI
 Center bearing disassembly (propeller
 shaft).....PD-9
 Center case (Transfer).....TF-11 MA
 CHARGE - Wiring diagram.....SC-12
 Charging system.....SC-11
 Chassis and body maintenance.....MA-23 EM
 CHIME - Wiring diagram.....EL-112
 CIGAR - Wiring diagram.....EL-139 LG
 Cigarette lighter.....EL-139
 Circuit breaker.....EL-16
 CKPS - Wiring diagram.....EC-335, 463 EC
 Closed loop control (Left bank).....EC-452
 Closed loop control (Right bank).....EC-452
 Closed throttle position switch.....EC-424 FE
 Clutch cover.....CL-13
 Clutch damper.....CL-10
 Clutch disc.....CL-13 CL
 Clutch fluid level.....MA-23
 Clutch master cylinder.....CL-8
 Clutch operating cylinder.....CL-9 MT
 Clutch pedal.....CL-5
 Clutch release bearing.....CL-11
 Clutch withdrawal lever.....CL-11 AT
 CMPS - Wiring diagram.....EC-342
 Coil spring (front).....SU-9
 Coil spring (rear).....SU-21 TF
 Collision diagnosis.....RS-64
 Combination lamp, front, removal and
 installation.....BT-12 PD
 Combination lamp, rear, removal and
 installation.....BT-31
 Combination meter.....EL-81 AX
 Combination meter removal and instal-
 lation - See Instrument panel.....BT-20
 Combination switch.....EL-22 SU
 COMPAS - Wiring diagram.....EL-97
 Compass.....EL-96
 Component Location (auto A/C).....HA-29 BR
 Component Location (manual A/C).....HA-148
 Compression pressure.....EM-13
 Compressor clutch removal and instal-
 lation (auto A/C).....HA-116
 Compressor clutch removal and instal-
 lation (manual A/C).....HA-197 RS
 Compressor description (manual A/C).....HA-137
 Compressor precaution (auto A/C).....HA-7
 Compressor precaution (manual A/C).....HA-130 BT
 Compressor special service tool (auto
 A/C).....HA-10 HA
 Compressor special service tool
 (manual A/C).....HA-133
 Connecting rod.....EM-48 SC
 Connecting rod bearing clearance.....EM-53
 Connecting rod bushing clearance.....EM-54
 Connector inspection.....GI-20 EL
 Console box - See Instrument panel.....BT-20
 CONSULT for ABS.....BR-43
 CONSULT for engine.....EC-80
 CONSULT-II general information.....GI-37
 Control valve (A/T).....AT-290

ALPHABETICAL INDEX

| | |
|---|--------|
| Converter housing installation..... | AT-267 |
| Coolant mixture ratio..... | MA-14 |
| Coolant replacement..... | MA-16 |
| Cooling circuit (engine)..... | LC-8 |
| Counter gear (M/T)..... | MT-13 |
| Counter gear (Transfer)..... | TF-12 |
| Coupling sleeve (M/T)..... | MT-13 |
| Crank angle sensor built into distributor | |
| - See Camshaft position sensor..... | EC-339 |
| “Crankcase emission control system - | |
| See positive crankcase ventilation”..... | EC-36 |
| Crankshaft..... | EM-51 |
| Crankshaft position sensor (OBD)..... | EC-333 |
| Crankshaft position sensor (OBD) cog | |
| chipping..... | EC-461 |
| Cruise control - See ASCD..... | EL-170 |
| Cylinder block..... | EM-45 |
| Cylinder block boring..... | EM-50 |
| Cylinder head..... | EM-27 |
| Cylinder head bolt tightening..... | EM-39 |

D

| | |
|---|-----------|
| Data link connector for Consult..... | EC-80 |
| Daytime light system..... | EL-36 |
| Daytime running light - See Daytime | |
| light system..... | EL-36 |
| DEF - Wiring diagram..... | EL-142 |
| Detonation sensor - See Knock sensor..... | EC-327 |
| Diagnostic trouble code (DTC) for OBD | |
| system..... | EC-8, 55 |
| Diagnostic trouble code (DTC) inspec- | |
| tion priority chart..... | EC-116 |
| Differential carrier assembly..... | PD-31, 59 |
| Differential carrier disassembly..... | PD-46 |
| Differential gear oil replacement..... | MA-27 |
| Dimensions..... | GI-43 |
| Distributor..... | EC-28 |
| Distributor ignition (DI) system..... | EC-28 |
| D/LOCK - Wiring diagram..... | EL-205 |
| Dome light - See Interior lamp..... | EL-74 |
| Door glass..... | BT-18 |
| Door lock..... | BT-18 |
| Door mirror..... | BT-54 |
| Door trim..... | BT-26 |
| Door, front..... | BT-18 |
| Door, rear..... | BT-19 |
| Drive belt inspection..... | MA-15 |
| Drive chain (Transfer)..... | TF-12 |
| Drive pinion diff. inspection..... | PD-24, 49 |
| Drive pinion height..... | PD-26, 55 |
| Drive plate runout..... | EM-54 |
| Drive shaft (front)..... | AX-12 |
| Dropping resistor (A/T)..... | AT-168 |
| DTC work support..... | EC-89 |
| DTRL - Wiring diagram..... | EL-40 |
| Dual pressure switch (auto A/C)..... | HA-84 |
| Dual pressure switch (manual A/C)..... | HA-190 |

E

| | |
|--|-----------------------|
| ECM input/output signal..... | EC-127 |
| ECTS - Wiring diagram..... | EC-177, 196 |
| EGR control (EGRC) - BPT valve..... | EC-358 |
| EGR control (EGRC) - solenoid valve..... | EC-467 |
| EGR control valve..... | EC-347, 357, 478, 485 |
| EGR temperature sensor..... | EC-472 |
| EGR/TS - Wiring diagram..... | EC-475 |
| EGRC/V - Wiring diagram..... | EC-469 |
| EGRC1 - Wiring diagram..... | EC-351, 481 |
| Electric sun roof..... | EL-163 |
| Electrical diagnoses..... | GI-23 |
| Electrical ignition system..... | EC-28 |
| Electrical unit..... | Foldout |
| Electrical units location..... | EL-302 |
| Engine compartment..... | BT-56 |
| Engine control circuit diagram..... | EC-22 |
| Engine control component parts | |
| location..... | EC-20 |
| Engine control module (ECM)..... | EC-436 |
| Engine control system diagram and | |
| chart..... | EC-23 |
| Engine coolant temperature sensor | |
| (ECTS)..... | EC-175, 194 |
| Engine fail-safe system..... | EC-117 |
| Engine oil filter replacement..... | MA-20 |
| Engine oil precautions..... | GI-7 |
| Engine oil replacement..... | MA-19 |
| Engine outer component parts..... | EM-10 |
| Engine removal..... | EM-42 |
| Engine room - See Engine | |
| compartment..... | BT-56 |
| Engine serial number..... | GI-43 |
| EVAP canister..... | EC-31 |
| EVAP canister purge volume control | |
| solenoid valve..... | EC-30, 377, 496 |
| EVAP canister vent control | |
| valve..... | EC-384, 504, 518 |
| EVAP control system (small leak) | |
| diagnosis..... | EC-367, 401, 486 |
| EVAP control system pressure sensor..... | EC-391 |
| EVAP control system purge flow moni- | |
| toring diagnosis..... | EC-510 |
| EVAP vapor lines inspection..... | MA-22 |
| Evaporative emission (EVAP) system..... | EC-30 |
| Exhaust gas recirculation (EGR) valve..... | EC-347, |
| | 478 |
| Exhaust system..... | FE-8 |
| Exhaust system inspection..... | MA-23 |
| Exterior..... | BT-31 |

F

| | |
|------------------------------------|--------|
| Fan control amp. (auto A/C)..... | HA-73 |
| Fan switch (manual A/C)..... | HA-166 |
| Fast idle cam (FIC) inspection and | |
| adjustment..... | EC-39 |

ALPHABETICAL INDEX

F/FOG - Wiring diagramEL-58
 FICD - Wiring diagramEC-582
 Final drive disassemblyPD-45
 Final drive pre-inspectionPD-45
 Final drive removal and installationPD-45
 Finisher, interior - See TrimBT-24
 Fluid temperature sensor (A/T)AT-109
 Fluids.....MA-13
 Flywheel (clutch).....CL-14
 Flywheel runout.....EM-54
 FO2H-L - Wiring diagramEC-247
 FO2H-R - Wiring diagramEC-246
 Fog lamp, front.....EL-56
 Fog lamp, front, removal and installationBT-12
 Fork rod (M/T)MT-15
 Forward clutch.....AT-309
 F/PUMP - Wiring diagramEC-570
 Freeze frame data.....EC-56
 FRO2LH - Wiring diagramEC-204, 228, 239
 FRO2RH - Wiring diagram.....EC-203, 227, 238
 Front axle.....AX-2
 Front bumperBT-12
 Front case (Transfer)TF-11
 Front combination lamp removal and installationBT-12
 Front disc brakeBR-22
 Front doorBT-18
 Front drive shaft (Transfer).....TF-12
 Front final drive disassembly (4WD).....PD-19
 Front final drive pre-inspection (4WD)PD-19
 Front final drive removal and installation (4WD).....PD-19
 Front fog lamp.....EL-56
 Front fog lamp removal and installationBT-12
 Front heated oxygen sensor (HO2S) (Left bank).....EC-200, 209, 216, 224, 235
 Front heated oxygen sensor (HO2S) (Right bank)EC-200, 209, 216, 224, 235
 Front heated oxygen sensor heater (Left bank).....EC-244
 Front heated oxygen sensor heater (Right bank)EC-244
 Front oxygen sensor (O2S) monitorEC-71
 Front seatBT-38
 Front seat beltRS-5
 Front suspension.....SU-2
 Front washerEL-120
 Front wiperEL-120
 Fuel cut control (at no load & high engine speed).....EC-30
 Fuel filler lid.....BT-15
 Fuel filter replacementMA-18
 Fuel gaugeEL-81
 Fuel injection system (Left bank).....EC-297, 306
 Fuel injection system (Right bank)EC-297, 306
 Fuel line inspectionMA-18
 Fuel precautionsGI-8
 Fuel pressure check.....EC-37
 Fuel pressure regulatorEC-38
 Fuel pressure releaseEC-37

Fuel pumpEC-568 GI
 Fuel systemFE-4
 Fuel tank temperature sensorEC-314
 Fuel tank vacuum relief valveEC-31 MA
 FUELLH - Wiring diagram.....EC-300, 309
 FUELRH - Wiring diagramEC-299, 308
 FuseEL-16 EM
 Fuse blockFoldout
 Fusible linkEL-16 LC

G

Garage jack and safety standGI-46
 Gauges.....EL-81 FE
 Gear components (M/T)MT-13
 Generator - See AlternatorSC-14
 Generic scan tool (GST)EC-93 CL
 GlassBT-18
 GreaseMA-13 MT
 Ground distribution.....EL-17

H

Harness connectorEL-5 TF
 Harness connector inspectionGI-20
 Harness layoutEL-306 PD
 Hazard warning lampEL-61
 HeadlampEL-25
 Headlining - See Roof trimBT-29 AX
 Heated seat.....BT-41, EL-169
 Height (Dimensions)GI-43
 HFC134a (R134a) system precaution (auto A/C).....HA-3 SU
 HFC134a (R134a) system precaution (manual A/C).....HA-126 BR
 HFC134a (R134a) system service procedure (auto A/C).....HA-111 ST
 HFC134a (R134a) system service procedure (manual A/C).....HA-192
 HFC134a (R134a) system service tools (auto A/C).....HA-11 RS
 HFC134a (R134a) system service tools (manual A/C).....HA-134 BT
 HFC134a system service equipment precaution (auto A/C).....HA-7
 HFC134a system service equipment precaution (manual A/C).....HA-130 HA
 High clutch.....AT-307
 H/LAMP - Wiring diagramEL-29 SC
 Hood.....BT-12
 HornEL-138
 HORN - Wiring diagram.....EL-138 EL
 How to erase DTC for OBD system.....EC-68
 HSEAT - Wiring diagram.....EL-169
 Hydraulic lash adjuster inspectionEM-36

ALPHABETICAL INDEX

I

| | |
|---|--------|
| IACV-AAC valve | EC-416 |
| IACV-FICD solenoid valve..... | EC-581 |
| IATS - Wiring diagram | EC-171 |
| Identification plate..... | GI-42 |
| Idle air control valve (IACV)..... | EC-416 |
| Idle mixture ratio..... | EC-41 |
| Idle speed..... | EC-41 |
| IGN/SG - Wiring diagram | EC-456 |
| Ignition timing | EC-41 |
| Ignition wire inspection..... | EC-326 |
| ILL - Wiring diagram | EL-69 |
| Illumination | EL-66 |
| In vehicle sensor (auto A/C)..... | HA-101 |
| INJECT - Wiring diagram | EC-555 |
| Injector..... | EC-561 |
| Injector removal and installation | EC-38 |
| Instrument panel | BT-20 |
| INT/L - Wiring diagram..... | EL-77 |
| Intake air temperature sensor..... | EC-168 |
| Intake door control linkage adjustment (auto A/C)..... | HA-70 |
| Intake door control linkage adjustment (manual A/C)..... | HA-164 |
| Intake door motor (auto A/C) | HA-64 |
| Intake door motor (manual A/C)..... | HA-159 |
| Intake sensor (auto A/C) | HA-108 |
| Integrated homelink transmitter | EL-279 |
| Interior | BT-24 |
| Interior lamp | EL-74 |
| Interior lamp on-off control..... | EL-75 |

J

| | |
|---|---------|
| Jacking points..... | GI-45 |
| Journal bearing assembly (propeller shaft) | PD-11 |
| Journal bearing disassembly (propeller shaft)..... | PD-10 |
| Junction box (J/B)..... | Foldout |

K

| | |
|--|--------|
| Keyless entry system - See Multi-re- mote control system..... | EL-222 |
| Knock sensor (KS) | EC-327 |
| Knuckle spindle | AX-10 |
| KS - Wiring diagram..... | EC-329 |

L

| | |
|---------------------------|-------|
| Length (Dimensions) | GI-43 |
| License lamp | EL-47 |
| Lifting points | GI-47 |

| | |
|---|------------------|
| Limited slip diff. adjustment..... | PD-52 |
| Limited slip diff. assembly | PD-53 |
| Limited slip diff. disassembly..... | PD-50 |
| Limited slip diff. inspection | PD-51 |
| Line pressure solenoid valve..... | AT-147, 161, 167 |
| Line pressure test (A/T) | AT-62 |
| Liquid gasket application | EM-3 |
| Location of electrical units | EL-302 |
| Lock, door | BT-18 |
| Low and reverse brake | AT-313 |
| LSV (Load sensing valve) | BR-12 |
| Lubricant (R134a) A/C (auto A/C) | HA-113 |
| Lubricant (R134a) A/C (manual A/C) | HA-194 |
| Lubricants..... | MA-13 |
| Lubrication circuit (engine) | LC-3 |
| Lubrication-locks, hinges and hood latches | MA-30 |
| Luggage room lamp..... | EL-74 |

M

| | |
|---|------------|
| MAFS - Wiring diagram..... | EC-151 |
| Magnet clutch (auto A/C)..... | HA-79, 116 |
| Magnet clutch (manual A/C)..... | HA-197 |
| MAIN - Wiring diagram..... | EC-137 |
| Main drive gear (M/T)..... | MT-13 |
| Main gear (Transfer) | TF-12 |
| Mainshaft (M/T) | MT-13 |
| Mainshaft (Transfer)..... | TF-12 |
| Maintenance (engine) | MA-15 |
| MAJOR OVERHALL..... | AT-270 |
| Major overhaul (Transfer) | TF-10 |
| Malfunction indicator lamp (MIL)..... | EC-70 |
| Manual air conditioner - Wiring diagram..... | HA-152 |
| Manual transmission number | GI-43 |
| Manual transmission oil replacement | MA-23 |
| MAP/BARO switch solenoid valve | EC-438 |
| Mass air flow sensor (MAFS)..... | EC-146 |
| Master cylinder (brake) | BR-16 |
| Master cylinder (clutch) | CL-8 |
| Meter | EL-81 |
| METER - Wiring diagram..... | EL-85 |
| MIL & Data link connectors circuit | EC-587 |
| MIL/DL - Wiring diagram | EC-587 |
| MIRROR - Wiring diagram..... | EL-166 |
| Mirror defogger | EL-140 |
| Mirror, door..... | BT-54 |
| Mirror, out side | BT-54 |
| Misfire | EC-320 |
| Mode door control linkage adjustment (auto A/C)..... | HA-59 |
| Mode door control linkage adjustment (manual A/C)..... | HA-183 |
| Mode door motor (auto A/C) | HA-54 |
| Model variation | GI-40 |
| Molding - See Exterior | BT-31 |
| M/T major overhaul | MT-12 |
| M/T removal and installation | MT-9 |
| MULTI - Wiring diagram..... | EL-226 |
| Multi-remote control system..... | EL-222 |

ALPHABETICAL INDEX

Multiport fuel injection (MFI) systemEC-26
 Multiport fuel injection precautions.....GI-6

N

NATS - Wiring diagramEL-284
 NVH troubleshooting (AX).....AX-3, 19
 NVH troubleshooting (BR).....BR-6
 NVH troubleshooting (CL)CL-4
 NVH troubleshooting (M/T)MT-5
 NVH troubleshooting (PD).....PD-4
 NVH troubleshooting (ST).....ST-5
 NVH troubleshooting (SU)SU-3, 17
 NVH troubleshooting (Transfer)TF-5
 NVIS (Nissan vehicle immobilizer system).....EL-282

O

Oil change (capacity)MA-13
 Oil pan (engine)EM-15
 Oil pressure (engine)LC-3
 Oil pump (A/T).....AT-286
 Oil pump (engine)LC-4
 Oil pump regulator valve (engine)LC-5
 Oil seal replacement (engine).....EM-25
 Oil seal replacement (front final drive 4WD).....PD-16
 Oil seal replacement (front of final drive).....PD-42
 On board diagnostic systemEC-54
 Operating cylinder (clutch).....CL-9
 Out side mirrorBT-54
 Overdrive control switch.....AT-253
 Overrun clutchAT-309
 Overrun clutch solenoid valve.....AT-192
 Oversize pistonEM-50

P

P/ANT - Wiring diagram.....EL-160
 Park/Neutral position switch.....EC-545
 Park/neutral position switch (A/T).....AT-104, 253
 Park/neutral position switch (M/T).....MT-6
 Parking brake controlBR-30
 Parking lampEL-47
 PCV (positive crankcase ventilation)EC-36
 PGC/V - Wiring diagramEC-380, 499
 Pilot bushing replacementEM-57
 Pinion bearing preload diff.PD-26
 Pinion gear height diff.PD-26, 55
 Piston assemblyEM-55
 Piston pin inspection.....EM-47
 Piston ring inspection.....EM-48
 Piston to bore clearance.....EM-49
 PNP/SW - Wiring diagramEC-548
 POWER - Wiring diagram.....EL-10

Power antenna.....EL-159 GI
 Power door lockEL-203
 Power door mirrorEL-166
 Power seatEL-167 MA
 Power steering fluid level.....MA-30, ST-7
 Power steering gear.....ST-16
 Power steering hydraulic pressureST-9 EM
 Power steering oil pressure switchEC-575
 Power steering oil pumpST-26
 Power steering system bleeding.....ST-8 LC
 Power supply routingEL-9
 Power transistor & ignition coil.....EC-454
 Power windowEL-195 EC
 PRE/SE - Wiring diagramEC-394
 Precautions (General)GI-4
 Pressure plate - See Clutch coverCL-13 FE
 Pressure test (A/T).....AT-62
 Propeller shaftPD-3
 Propeller shaft greasing.....MA-26 CL
 Propeller shaft inspectionMA-26
 Propeller shaft on vehicle service.....PD-8 MT
 Propeller shaft vibrationPD-8
 PST/SW - Wiring diagram.....EC-576

R

Rack retainer adjustment.....ST-7
 RadiatorLC-12
 Radio - See Audio.....EL-149 PD
 Rear air spoilerBT-31
 Rear axleAX-18
 Rear bumperBT-15 AX
 Rear case (Transfer).....TF-11
 Rear combination lamp removal and installationBT-31 SU
 Rear cover packing replacement diff.PD-17
 Rear doorBT-19
 Rear drum brakeBR-26 BR
 Rear heated oxygen sensor (HO2S)EC-251, 261, 271, 281
 Rear heated oxygen sensor (HO2S) heater.....EC-290 ST
 Rear seatBT-42
 Rear seat belt.....RS-6 RS
 Rear side windowBT-53
 Rear suspensionSU-17
 Rear washer.....EL-130 BT
 Rear window defogger.....EL-140
 Rear wiper.....EL-130
 Refrigerant connection precaution (auto A/C).....HA-4 HA
 Refrigerant connection precaution (manual A/C).....HA-127 SC
 Refrigerant discharging evacuating charging (auto A/C).....HA-111 EL
 Refrigerant general precaution (auto A/C).....HA-4
 Refrigerant general precaution (manual A/C).....HA-127
 Refrigerant lines (auto A/C).....HA-120

ALPHABETICAL INDEX

| | |
|---|-----------------------|
| Refrigerant lines (manual A/C)..... | HA-201 |
| Refrigeration cycle (auto A/C)..... | HA-14 |
| Refrigeration cycle (manual A/C)..... | HA-137 |
| Release bearing (clutch)..... | CL-11 |
| Removal and installation (A/T)..... | AT-266 |
| Removal and installation (Transfer)..... | TF-9 |
| Reverse clutch..... | AT-303 |
| Reverse idler shaft (M/T)..... | MT-13 |
| Reverse lamp switch (M/T) - See Back-up lamp switch (M/T)..... | MT-6 |
| Reverse main gear (M/T)..... | MT-13 |
| Revolution sensor (A/T)..... | AT-114 |
| Ring gear diff. inspection..... | PD-24, 49 |
| RO2H-L - Wiring diagram..... | EC-293 |
| RO2H-R - Wiring diagram..... | EC-292 |
| Road wheel size..... | GI-44 |
| Roof trim..... | BT-29 |
| Room lamp - See Interior lamp..... | EL-74 |
| RRO2LH - Wiring diagram..... | EC-256, 266, 276, 285 |
| RRO2RH - Wiring diagram..... | EC-255, 265, 275, 284 |

S

| | |
|--|-----------------------|
| SAE J1930 terminology list..... | GI-51 |
| Screw jack..... | GI-45 |
| Seal - See Exterior..... | BT-31 |
| SEAT - Wiring diagram..... | EL-167 |
| Seat belt inspection..... | MA-31, RS-8 |
| Seat belt pre-tensioner..... | RS-3 |
| Seat belt pre-tensioner disposal..... | RS-24 |
| Seat belt, front..... | RS-5 |
| Seat belt, rear..... | RS-6 |
| Seat, front..... | BT-38 |
| Seat, rear..... | BT-42 |
| Self-diagnostic results..... | EC-71 |
| SHIFT - Wiring diagram..... | AT-256 |
| Shift control (Transfer)..... | TF-13, 25 |
| Shift control components (M/T)..... | MT-15 |
| Shift fork (M/T)..... | MT-15 |
| Shift lever..... | MT-15 |
| Shift lock system..... | AT-255 |
| Shift schedule..... | AT-345 |
| Shift solenoid valve A (A/T) .. | AT-125, 137, 147, 173 |
| Shift solenoid valve B (A/T) .. | AT-125, 131, 147, 178 |
| Shock absorber (rear)..... | SU-21 |
| Side air bag..... | RS-22 |
| Side bearing preload (front final drive 4WD)..... | PD-25 |
| Side trim..... | BT-24 |
| Side window - See Rear side window..... | BT-53 |
| Smart entrance control unit..... | EL-273 |
| SMJ (super multiple junction)..... | Foldout |
| Spare tire size..... | GI-44 |
| Spark plug replacement..... | MA-21 |
| Speedometer..... | EL-81 |
| Spiral cable..... | RS-18 |
| Spot lamp..... | EL-74 |
| Spring (Wheelarch) height..... | SU-6 |
| SROOF - Wiring diagram..... | EL-164 |

| | |
|---|--------|
| SRS - See Supplemental Restraint System..... | RS-11 |
| SRS - Wiring diagram..... | RS-36 |
| S/SIG - Wiring diagram..... | EC-563 |
| Stabilizer bar (front)..... | SU-12 |
| Stabilizer bar (rear)..... | SU-23 |
| Stall test (A/T)..... | AT-59 |
| Standardized relay..... | EL-7 |
| START - Wiring diagram..... | SC-8 |
| Starter..... | SC-10 |
| Starting system..... | SC-6 |
| Steering gear, linkage and transfer gear inspection..... | MA-29 |
| Steering linkage..... | ST-16 |
| Steering switch..... | EL-24 |
| Steering transfer gear..... | ST-14 |
| Steering wheel and column..... | ST-10 |
| Steering wheel play..... | ST-6 |
| Steering wheel turning force..... | ST-8 |
| Stop lamp..... | EL-53 |
| STOP/L - Wiring diagram..... | EL-53 |
| Striking rod (M/T)..... | MT-15 |
| Strut (front)..... | SU-9 |
| Sub-gear (M/T)..... | MT-13 |
| Sun roof, electric..... | EL-163 |
| Sunload sensor (auto A/C)..... | HA-104 |
| Sunroof..... | BT-43 |
| Supplemental Restraint System..... | RS-11 |
| Supplemental restraint system - Wiring diagram..... | RS-36 |
| SW/V - Wiring diagram..... | EC-442 |
| Symbols and abbreviations..... | GI-10 |
| Symptom matrix chart..... | EC-118 |
| Synchronizer (M/T)..... | MT-13 |
| System readiness test (SRT) code..... | EC-56 |

T

| | |
|---|---------------------|
| Tachometer..... | EL-81 |
| Tail lamp..... | EL-47 |
| TAIL/L - Wiring diagram..... | EL-49 |
| TCM circuit diagram..... | AT-13 |
| TCM inspection table..... | AT-92 |
| Temperature control cable and linkage adjustment (manual A/C)..... | HA-181 |
| TFTS - Wiring diagram..... | EC-317 |
| THEFT - Wiring diagram..... | EL-250 |
| Theft warning system..... | EL-244 |
| Thermometer..... | EL-96 |
| Thermostat..... | LC-10 |
| Three way catalyst function (Left bank)..... | EC-363 |
| Three way catalyst function (Right bank)..... | EC-363 |
| Three way catalyst precautions..... | GI-6 |
| Throttle position sensor (TPS)..... | EC-181 |
| Throttle position sensor adjustment..... | EC-99 |
| Throttle position switch..... | EC-424, AT-187, 254 |
| Throwout bearing - See Clutch release bearing..... | CL-11 |
| Tie-rod..... | ST-20 |

ALPHABETICAL INDEX

Tie-rod ball joints.....ST-20
 Tightening torque of standard bolts.....GI-50
 Timing belt.....EM-18
 Tire rotationMA-27
 Tire sizeGI-44
 Tooth contact (front final drive 4WD)PD-30
 Tooth contact diff.PD-58
 Torque converter installationAT-267
 Torque convertor clutch solenoid valveAT-152, 161
 Tow truck towing.....GI-47
 Towing point.....GI-49
 TP/SW - Wiring diagramEC-426
 TPS - Wiring diagram.....EC-187
 Transfer caseTF-11
 Transfer fluid replacement (Part time 4WD model)MA-25
 Transfer serial numberGI-43
 Transmission case (M/T).....MT-12
 TRANSMT - Wiring diagramEL-279
 Tread-FR&RR (Dimensions).....GI-43
 TrimBT-24
 Trouble diagnosesGI-33
 TURN - Wiring diagramEL-63
 Turn signal lampEL-61
 Two trip detection logicEC-54
 Two-pole liftGI-47

U

Under bodyBT-58

V

Vacuum cut valveEC-30, 539
 Vacuum cut valve bypass valve.....EC-30, 525, 532
 Vacuum hose (brake system).....BR-21
 Vacuum hose drawing (Engine control)EC-24
 Valve clearance.....EM-59
 Valve guide.....EM-33
 Valve seat.....EM-34
 Valve spring.....EM-36
 Vehicle identification number.....GI-42

Vehicle recovery (freeing a stuck vehicle).....GI-49
 Vehicle speed sensor (VSS).....EC-411
 VENT/V - Wiring diagramEC-386, 506, 521
 Viscosity number (SAE)MA-14
 VSS - Wiring diagramEC-414

W

WARN - Wiring diagramEL-102
 Warning chimeEL-110
 Warning lampsEL-101
 Washer, front.....EL-120
 Washer, rear.....EL-130
 Water cock control rod adjustment (manual A/C).....HA-181
 Water pumpLC-9
 Water temperature gaugeEL-81
 Weatherstrip - See ExteriorBT-31
 Wheel balanceMA-27
 Wheel bearing (front).....AX-4
 Wheel bearing (rear)AX-19
 Wheel hub (front).....AX-6
 Wheel sensors (ABS).....BR-55, 77
 Wheel sizeGI-44
 Wheelarch heightSU-6
 Wheelbase (Dimensions)GI-44
 Wide open & closed throttle position switchEC-181
 Width (Dimensions)GI-43
 WINDOW - Wiring diagramEL-198
 Window, doorBT-18
 Window, rear sideBT-53
 Window, side - See Rear side windowBT-53
 Windshield.....BT-51
 WIP/R - Wiring diagramEL-133
 WIPER - Wiring diagramEL-122
 Wiper, front.....EL-120
 Wiper, rearEL-130
 Wiring Diagram (Cell code) list.....EL-323
 Wiring diagramsGI-11
 Withdrawal lever (clutch).....CL-11
 Wrist pin - See Piston pin inspection.....EM-47

GI
 MA
 EM
 LC
 EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL

NOTES