

ALPHABETICAL INDEX

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

SECTION **IDX**

ALPHABETICAL INDEX

A

AAC/V - Wiring diagram.....	EC-426	A/C service data specification (auto A/C).....	HA-126
ABS - Wiring diagram	BR-37	A/C service data specification (manual A/C).....	HA-207
ABS sensor rotor.....	AX-6, 20	A/C switch (manual A/C)	HA-190
Absolute pressure sensor	EC-159	A/C system description (auto A/C).....	HA-24
A/C air flow (auto A/C)	HA-26	A/C trouble diagnoses (auto A/C)	HA-28
A/C air flow (manual A/C)	HA-146	A/C trouble diagnoses (manual A/C)	HA-148
A/C component layout (auto A/C)	HA-20	A/C, A - Wiring diagram	HA-31
A/C component layout (manual A/C)	HA-144	A/C, M - Wiring diagram	HA-152
A/C compressor clutch removal and installation (auto A/C).....	HA-116	Accelerator control system	FE-3
A/C compressor clutch removal and installation (manual A/C).....	HA-197	Accelerator wire adjustment	FE-3
A/C compressor description (manual A/C).....	HA-139	Actuator lever (Transfer) (ATX14A)	TF-151
A/C compressor precaution (auto A/C)	HA-7	Air bag	RS-10
A/C compressor precaution (manual A/C).....	HA-131	Air bag disposal.....	RS-22
A/C compressor special service tool (auto A/C).....	HA-11	Air bag precautions	GI-3
A/C compressor special service tool (manual A/C).....	HA-135	Air bleeding (hydraulic clutch)	CL-7
A/C control linkage adjustment (manual A/C)	HA-164, 181, 183	Air bleeding for brake system	BR-8
A/C control operation (auto A/C).....	HA-24	Air cleaner filter replacement.....	MA-18
A/C control operation (manual A/C)	HA-145	Air conditioner cut control	EC-31
A/C diagnostic work flow (auto A/C)	HA-47	Air flow meter - See Mass air flow sensor	EC-151
A/C diagnostic work flow (manual A/C).....	HA-155	Air mix door control linkage adjustment (auto A/C).....	HA-61
A/C HFC134a (R134a) system precaution (auto A/C).....	HA-3	Air mix. door motor (auto A/C)	HA-59, 110
A/C HFC134a (R134a) system precaution (manual A/C).....	HA-127	Air spoiler, rear.....	BT-36
A/C HFC134a (R134a) system service procedure (auto A/C).....	HA-111	All - mode 4WD system (ATX14A)	TF-42
A/C HFC134a (R134a) system service procedure (manual A/C)	HA-192	Alternator	SC-29
A/C HFC134a (R134a) system service tools (auto A/C).....	HA-12	Ambient sensor (auto A/C).....	HA-97
A/C HFC134a (R134a) system service tools (manual A/C).....	HA-136	Angular tightening application.....	EM-3
A/C HFC134a system service equipment precaution (auto A/C)	HA-8	Antenna - See Power antenna	EL-191
A/C HFC134a system service equipment precaution (manual A/C).....	HA-132	Anti-lock brake system - Wiring diagram.....	BR-37
A/C lubricant (R134a) (auto A/C)	HA-113	AP/SEN - Wiring diagram	EC-161
A/C lubricant (R134a) (manual A/C)	HA-194	ASCD (automatic speed control device)	EL-239
A/C operational check (auto A/C)	HA-48	ASCD - Wiring diagram	EL-243
A/C operational check (manual A/C).....	HA-156	A/T - Wiring diagram - AT - FTS	AT-107
A/C performance chart (auto A/C)	HA-88	A/T - Wiring diagram - AT - MAIN.....	AT-96
A/C performance chart (manual A/C).....	HA-175	A/T - Wiring diagram - AT - PNP/SW.....	AT-101
A/C performance test diagnoses (auto A/C).....	HA-86	A/T - Wiring diagram - AT - VSS A/T	AT-113
A/C performance test diagnoses (manual A/C).....	HA-173	A/T control	EC-441
A/C relay (auto A/C)	HA-83	A/T diagnosis communication line.....	EC-604
A/C relay (manual A/C)	HA-190	A/T fluid temperature sensor.....	AT-110
A/C self-diagnoses (auto A/C).....	HA-37	A/T self-diagnoses.....	AT-46
		A/T shift lock system.....	AT-265
		A/T shift lock system - Wiring diagram	AT-266
		A/T trouble diagnoses	AT-53
		A/T Wiring diagram - AT - ENG SS.....	AT-117
		A/T Wiring diagram AT - 1ST	AT-123
		A/T Wiring diagram AT - 2ND	AT-129
		A/T Wiring diagram AT - 3RD	AT-135
		A/T Wiring diagram AT - 4TH.....	AT-142
		A/T Wiring diagram AT - BA/FTS	AT-192
		A/T Wiring diagram AT - LPSV	AT-164
		A/T Wiring diagram AT - NONDTC	AT-215
		A/T Wiring diagram AT - OVRCSV	AT-187
		A/T Wiring diagram AT - SSV/A	AT-169
		A/T Wiring diagram AT - SSV/B	AT-173
		A/T Wiring diagram AT - TCCSIG	AT-156
		A/T Wiring diagram AT - TCV	AT-150
		A/T Wiring diagram AT - TPS.....	AT-179

ALPHABETICAL INDEX

A/T Wiring diagram AT - VSSMTR.....AT-199
 AT/C - Wiring diagram.....EC-443
 ATP switch (ATX14A).....TF-143
 ATP warning lamp (ATX14A)TF-133
 AudioEL-179
 AUDIO - Wiring diagram.....EL-180, 183
 Audio and A/C control removal and
 installation - See Instrument panelBT-22
 AUT/DP - Wiring diagramEL-209
 Auto air conditioner - Wiring diagramHA-31
 Automatic amplifierHA-35
 Automatic amplifier (auto A/C)HA-51
 Automatic drive positionerEL-204
 Automatic speed control system - See
 ASCDEL-239
 Automatic transmission fluid
 replacement.....MA-23
 Automatic transmission numberGI-42
 Auxiliary air control (AAC) valveEC-423
 Axle housing (rear)AX-20

B

Back doorBT-16
 Back door opener - See Back doorBT-16
 Back door trim.....BT-35
 Back-up lampEL-85
 Back-up lamp switch (M/T)MT-6, 7
 BACK/L - Wiring diagram.....EL-85
 Ball joint (front)SU-14
 Base idle air volume initialingEC-58
 Basic inspectionEC-102
 BatterySC-4
 Battery/Starting/Charging System
 Tester.....SC-7, 13, 22
 Baulk ring (M/T).....MT-15
 Blower motor (auto A/C).....HA-70
 Blower motor (manual A/C).....HA-166
 Blower resistor (manual A/C)HA-166
 Body alignmentBT-60
 Brake boosterBR-19
 Brake control valve (Proportioning
 valve).....BR-11
 Brake fluid changeBR-7
 Brake fluid levelMA-27
 Brake fluid level and line checkBR-7
 Brake hydraulic lineBR-9
 Brake inspectionMA-27
 Brake lines and cables inspectionMA-27
 Brake lining wear temporary checkingMA-28
 Brake master cylinderBR-16
 Brake pedalBR-14
 Bulb specificationsEL-392
 Bumper, frontBT-13
 Bumper, rearBT-16
 BYPSS/V - Wiring diagramEC-588, 595

C

Camshaft inspectionEM-43
 Camshaft position sensor (PHASE)EC-343
 Canister-See EVAP canisterEC-32
 Center bearing assembly (propeller
 shaft)PD-11
 Center bearing disassembly (propeller
 shaft)PD-9
 Center case (Transfer) (ATX14A)TF-154
 Center case (Transfer) (TX10A)TF-16
 CHARGE - Wiring diagramSC-21
 Charging systemSC-20
 Chassis and body maintenanceMA-22
 CHIME - Wiring diagram.....EL-146
 CIGAR - Wiring diagram.....EL-167
 Cigarette lighter.....EL-167
 Circuit breaker.....EL-16
 CKPS - Wiring diagram.....EC-335
 Closed loop control (Left bank).....EC-492
 Closed loop control (Right bank)EC-492
 Closed throttle position switchEC-432
 Clutch cover.....CL-13
 Clutch discCL-14
 Clutch drum (Transfer) (ATX14A)TF-156
 Clutch fluid level.....MA-22
 Clutch force release limit adjustment
 (ATX14A).....TF-71
 Clutch master cylinderCL-8
 Clutch operating cylinderCL-9
 Clutch pedal.....CL-5
 Clutch pressure switch (Transfer)
 (ATX14A).....TF-142
 Clutch release bearing.....CL-10
 Clutch withdrawal lever.....CL-10
 Coil spring (front).....SU-9
 Coil spring (rear)SU-20
 Collision diagnosis.....RS-59
 Combination lamp, front, removal and
 installationBT-13
 Combination lamp, rear, removal and
 installationBT-36
 Combination meterEL-114
 Combination meter removal and instal-
 lation - See Instrument panel.....BT-22
 Combination switch.....EL-28
 COMPAS - Wiring diagram.....EL-131
 CompassEL-130
 Component Location (auto A/C).....HA-28
 Component Location (manual A/C).....HA-148
 Compression pressureEM-14
 Compressor clutch removal and instal-
 lation (auto A/C).....HA-116
 Compressor clutch removal and instal-
 lation (manual A/C).....HA-197
 Compressor description (manual A/C)HA-139
 Compressor precaution (auto A/C)HA-7
 Compressor precaution (manual A/C).....HA-131

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

Compressor special service tool (auto A/C)	HA-11
Compressor special service tool (manual A/C)	HA-135
Connecting rod	EM-66
Connecting rod bearing clearance	EM-70
Connecting rod bushing clearance	EM-71
Connector inspection	GI-21
Console box - See Instrument panel	BT-22
CONSULT for ABS	BR-43
CONSULT for all-mode 4WD (ATX14A)	TF-62
CONSULT for engine	EC-82
CONSULT-II general information	GI-38
Control lever (Transfer) (TX10A)	TF-15
Control valve (A/T)	AT-302
Control valve (Transfer) (ATX14A)	TF-159
Converter housing installation	AT-278
Coolant mixture ratio	MA-13
Coolant replacement	MA-15
Cooling circuit (engine)	LC-11
Counter gear (M/T)	MT-15
Counter gear (Transfer) (TX10A)	TF-17
Coupling sleeve (M/T)	MT-15
“Crankcase emission control system - See positive crankcase ventilation”	EC-38
Crankshaft	EM-68
Crankshaft position sensor (POS)	EC-335
Crankshaft position sensor (POS) chipping	EC-518
Crankshaft position sensor (REF)	EC-511
Cruise control - See ASCD	EL-239
Cylinder block	EM-62
Cylinder head	EM-39
Cylinder head bolt tightening	EM-50

D

Data link connector for Consult	EC-82
Daytime light system	EL-53
Daytime running light - See Daytime light system	EL-53
DEF - Wiring diagram	EL-172
Detonation sensor - See Knock sensor	EC-329
Diagnostic trouble code (DTC) for OBD system	EC-8, 61
Diagnostic trouble code (DTC) inspection priority chart	EC-117
Differential carrier assembly	PD-31, 58
Differential carrier disassembly	PD-45
Differential gear oil replacement	MA-26
Dimensions	GI-43
D/LOCK - Wiring diagram	EL-274
Dome light - See Interior lamp	EL-108
Door glass	BT-19
Door lock	BT-19
Door mirror	BT-59
Door trim	BT-31
Door, front	BT-19
Door, rear	BT-21
Drive belt inspection	MA-14

Drive chain (Transfer) (ATX14A)	TF-156
Drive chain (Transfer) (TX10A)	TF-17
Drive pinion diff. inspection	PD-24, 48
Drive pinion height	PD-26, 54
Drive plate runout	EM-71
Drive shaft (front)	AX-12
Dropping resistor (A/T)	AT-167
DTC work support	EC-94
DTRL - Wiring diagram	EL-62

E

ECM input/output signal	EC-128
ECTS - Wiring diagram	EC-172, 190
Electric sun roof	EL-195
Electrical diagnoses	GI-24
Electrical ignition system	EC-30
Electrical unit	Foldout
Electrical units location	EL-372
Engine compartment	BT-61
Engine control circuit diagram	EC-24
Engine control component parts location	EC-20
Engine control module (ECM)	EC-445
Engine control system diagram and chart	EC-25
Engine coolant temperature sensor (ECTS)	EC-170, 188
Engine fail-safe system	EC-118
Engine oil filter replacement	MA-19
Engine oil precautions	GI-7
Engine oil replacement	MA-19
Engine outer component parts	EM-10
Engine removal	EM-58
Engine room - See Engine compartment	BT-61
Engine serial number	GI-42
EVAP canister	EC-33
EVAP canister purge volume control solenoid valve	EC-32, 368, 542
EVAP canister vent control valve	EC-375, 554, 574
EVAP control system (small leak) diagnosis	EC-353, 395, 527
EVAP control system pressure sensor	EC-382
EVAP control system purge flow monitoring diagnosis	EC-562
EVAP vapor lines inspection	MA-21
Evaporative emission (EVAP) system	EC-32
Exhaust system	FE-8
Exhaust system inspection	MA-22
Exterior	BT-36

F

4LO indicator lamp (ATX14A)	TF-135
4WD shift indicator lamp (ATX14A)	TF-129
4WD shift switch (ATX14A)	TF-142

ALPHABETICAL INDEX

4WD solenoid valve (ATX14A)TF-142
 4WD warning lamp (ATX14A).....TF-45
 Fan control amp. (auto A/C).....HA-72
 Fan switch (manual A/C).....HA-166
 F/FOG - Wiring diagramEL-89
 Final drive disassemblyPD-44
 Final drive pre-inspectionPD-44
 Final drive removal and installationPD-44
 Finisher, interior - See TrimBT-29
 Fluid temperature sensor (A/T)AT-110
 Fluids.....MA-12
 Flywheel (clutch).....CL-14
 Flywheel runout.....EM-71
 FO2H-L - Wiring diagramEC-244
 FO2H-R - Wiring diagramEC-243
 Fog lamp, front.....EL-86
 Fog lamp, front, removal and
 installationBT-13
 Fork rod (M/T)MT-17
 Forward clutch.....AT-321
 F/PUMP - Wiring diagramEC-629
 Freeze frame data.....EC-61
 FRO2LH - Wiring diagramEC-198, 224, 236
 FRO2RH - Wiring diagram.....EC-197, 223, 235
 Front axle.....AX-2
 Front bumperBT-13
 Front case (Transfer) (ATX14A)TF-164
 Front case (Transfer) (TX10A).....TF-16
 Front combination lamp removal and
 installationBT-13
 Front disc brakeBR-22
 Front doorBT-19
 Front drive shaft (Transfer) (ATX14A)TF-156
 Front drive shaft (Transfer) (TX10A)TF-17
 Front final drive disassembly (4WD).....PD-19
 Front final drive pre-inspection (4WD).....PD-19
 Front final drive removal and installa-
 tion (4WD).....PD-19
 Front fog lamp.....EL-86
 Front fog lamp removal and installationBT-13
 Front heated oxygen sensor (HO2S)
 (Left bank).....EC-193, 203, 211, 219, 232
 Front heated oxygen sensor (HO2S)
 (Right bank).....EC-193, 203, 211, 219, 232
 Front heated oxygen sensor heater
 (Left bank).....EC-241
 Front heated oxygen sensor heater
 (Right bank)EC-241
 Front revolution sensor (Transfer)
 (ATX14A)TF-143
 Front seat.....BT-43
 Front seat beltRS-4
 Front suspension.....SU-2
 Front washerEL-155
 Front wiperEL-155
 Fuel cut control (at no load & high
 engine speed).....EC-32
 Fuel filler lid.....BT-16
 Fuel filter replacementMA-17
 Fuel gaugeEL-114
 Fuel injection system (Left bank).....EC-295, 303

Fuel injection system (Right bank)EC-295, 303
 Fuel line inspectionMA-17
 Fuel precautionsGI-8
 Fuel pressure check.....EC-39
 Fuel pressure regulatorEC-40
 Fuel pressure releaseEC-39
 Fuel pumpEC-627
 Fuel systemFE-4
 Fuel tank temperature sensorEC-310
 Fuel tank vacuum relief valveEC-33
 FUELLH - Wiring diagram.....EC-298, 306
 FUELRH - Wiring diagramEC-297, 305
 FuseEL-16
 Fuse blockFoldout
 Fusible linkEL-16

GI
MA
EM
LC
EC
FE

G

Garage jack and safety standGI-45
 GaugesEL-114
 Gear components (M/T)MT-15
 Generator - See AlternatorSC-29
 Generic scan tool (GST)EC-96
 GlassBT-19
 GreaseMA-12
 Ground distribution.....EL-17

CL
MT
AT
TF

H

Harness connectorEL-5
 Harness connector inspectionGI-21
 Harness layoutEL-376
 Hazard warning lampEL-94
 HeadlampEL-32
 Headlining - See Roof trimBT-34
 Heated seat.....BT-46, EL-202
 Height (Dimensions)GI-43
 HFC134a (R134a) system precaution
 (auto A/C).....HA-3
 HFC134a (R134a) system precaution
 (manual A/C).....HA-127
 HFC134a (R134a) system service pro-
 cedure (auto A/C).....HA-111
 HFC134a (R134a) system service pro-
 cedure (manual A/C).....HA-192
 HFC134a (R134a) system service tools
 (auto A/C).....HA-12
 HFC134a (R134a) system service tools
 (manual A/C).....HA-136
 HFC134a system service equipment
 precaution (auto A/C).....HA-8
 HFC134a system service equipment
 precaution (manual A/C).....HA-132
 High clutch.....AT-318
 H/LAMP - Wiring diagramEL-39
 Hood.....BT-13
 HornEL-166
 HORN - Wiring diagram.....EL-166

PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

ALPHABETICAL INDEX

How to erase DTC for OBD system.....EC-73
HSEAT - Wiring diagram.....EL-202

KS - Wiring diagram.....EC-331

I

IACV-AAC valveEC-423
IATS - Wiring diagramEC-167
Identification plate.....GI-42
Idle air control valve (IACV)EC-423
Idle mixture ratio.....EC-43
Idle speed.....EC-43
IGN/SG - Wiring diagramEC-502
Ignition control systemEC-500
Ignition timingEC-43
ILL - Wiring diagramEL-102
IlluminationEL-99
In vehicle sensor (auto A/C).....HA-101
INJECT - Wiring diagramEC-619
Injector.....EC-618
Injector removal and installationEC-41
Instrument panelBT-22
INT/L - Wiring diagramEL-111
Intake air temperature sensor.....EC-165
Intake door control linkage adjustment
(auto A/C).....HA-69
Intake door control linkage adjustment
(manual A/C).....HA-164
Intake door motor (auto A/C)HA-63
Intake door motor (manual A/C).....HA-159
Intake manifold.....EM-12
Intake sensor (auto A/C)HA-108
Integrated homelink transmitterEL-349
InteriorBT-29
Interior lampEL-108
Interior lamp on-off control.....EL-109
Internal gear (Transfer) (ATX14A)TF-165
IVC-L - Wiring diagram.....EC-454
IVC-R - Wiring diagramEC-454
IVCS-L - Wiring diagramEC-486
IVCS-R - Wiring diagramEC-486

J

Jacking points.....GI-44
Journal bearing assembly (propeller
shaft)PD-11
Journal bearing disassembly (propeller
shaft).....PD-10
Junction box (J/B).....Foldout

K

Keyless entry system - See Multi-re-
mote control system.....EL-288
Knock sensor (KS)EC-329
Knuckle spindleAX-10

L

Length (Dimensions)GI-43
License lamp.....EL-76
Lifting pointsGI-46
Limited slip diff. adjustment.....PD-51
Limited slip diff. assemblyPD-52
Limited slip diff. disassembly.....PD-49
Limited slip diff. inspectionPD-50
Line pressure solenoid valve.....AT-147, 161, 167
Line pressure switch (Transfer)
(ATX14A).....TF-142
Line pressure test (A/T)AT-62
Liquid gasket applicationEM-3
LOAD - Wiring diagramEC-645
Location of electrical unitsEL-372
Lock, doorBT-19
Low and reverse brakeAT-325
LSV (Load sensing valve)BR-12
Lubricant (R134a) A/C (auto A/C)HA-113
Lubricant (R134a) A/C (manual A/C)HA-194
Lubricants.....MA-12
Lubrication circuit (engine)LC-3
Lubrication-locks, hinges and hood
latchesMA-29
Luggage room lamp.....EL-108

M

MAFS - Wiring diagram.....EC-155
Magnet clutch (auto A/C).....HA-78, 116
Magnet clutch (manual A/C).....HA-197
MAIN - Wiring diagram.....EC-143
Main drive gear (M/T).....MT-15
Main gear (Transfer) (TX10A).....TF-17
Main oil pump (Transfer) (ATX14A)TF-162
Mainshaft (M/T)MT-15
Mainshaft (Transfer) (ATX14A)TF-156
Mainshaft (Transfer) (TX10A)TF-17
Maintenance (engine)MA-14
MAJOR OVERHALL.....AT-282
Major overhaul (Transfer) (ATX14A).....TF-151
Major overhaul (Transfer) (TX10A).....TF-15
Malfunction indicator lamp (MIL)EC-75
Manual air conditioner - Wiring diagram.....HA-152
Manual transmission numberGI-42
Manual transmission oil replacementMA-22
Mass air flow sensor (MAFS).....EC-151
Master cylinder (brake)BR-16
Master cylinder (clutch)CL-8
MeterEL-114
METER - Wiring diagramEL-119
MIL & Data link connectors circuitEC-652
MIL/DL - Wiring diagramEC-652
MIRROR - Wiring diagram.....EL-199
Mirror defoggerEL-170

ALPHABETICAL INDEX

Mirror, door.....BT-59
 Mirror, out sideBT-59
 MisfireEC-321
 Mode door control linkage adjustment
 (auto A/C).....HA-58
 Mode door control linkage adjustment
 (manual A/C).....HA-183
 Mode door motor (auto A/C)HA-53
 Model variationGI-40
 Molding - See ExteriorBT-36
 M/T major overhaulMT-14
 M/T removal and installationMT-10
 MULTI - Wiring diagram.....EL-292
 Multi-remote control system.....EL-288
 Multiport fuel injection (MFI) systemEC-28
 Multiport fuel injection precautions.....GI-6

N

NATS (Nissan anti-theft system).....EL-352
 NATS - Wiring diagramEL-354
 Neutral-4LO switch (ATX14A).....TF-143
 NVH troubleshooting (AX).....AX-3, 19
 NVH troubleshooting (BR).....BR-6
 NVH troubleshooting (CL)CL-4
 NVH troubleshooting (M/T)MT-5
 NVH troubleshooting (PD).....PD-4
 NVH troubleshooting (ST).....ST-6
 NVH troubleshooting (SU)SU-3, 17
 NVH troubleshooting (Transfer)
 (TX10A)TF-10
 NVIS (Nissan vehicle immobilizer
 system)EL-352

O

Oil change (capacity)MA-12
 Oil filter (Transfer) (ATX14A)TF-149
 Oil pan (engine)EM-15
 Oil pressure (engine)LC-5
 Oil pump (A/T).....AT-298
 Oil pump (engine)LC-6
 Oil pump regulator valve (engine)LC-7
 Oil seal replacement (engine).....EM-36
 Oil seal replacement (front final drive
 4WD).....PD-16
 Oil seal replacement (front of final
 drive)PD-41
 On board diagnostic systemEC-60
 Operating cylinder (clutch).....CL-9
 Out side mirrorBT-59
 Overdrive control switch.....AT-263
 Overrun clutchAT-321
 Overrun clutch solenoid valve.....AT-189

P

P/ANT - Wiring diagram.....EL-192
 Park/Neutral position switchEC-605
 Park/neutral position switch (A/T)AT-103, 263
 Park/neutral position switch (M/T)MT-6, 7
 Parking brake controlBR-30
 Parking lampEL-76
 PCV (positive crankcase ventilation)EC-38
 PGC/V - Wiring diagramEC-371, 545
 PHASE - Wiring diagramEC-343
 Pinion bearing preload diff.PD-26
 Pinion gear height diff.PD-26, 54
 Piston assemblyEM-72
 Piston pin inspectionEM-64
 Piston ring inspection.....EM-65
 Piston to bore clearance.....EM-67
 Planetary carrier (Transfer) (ATX14A)TF-165
 PNP/SW - Wiring diagramEC-608
 POS - Wiring diagramEC-518
 POWER - Wiring diagram.....EL-10
 Power antennaEL-191
 Power door lockEL-272
 Power door mirrorEL-199
 Power seatEL-200
 Power steering fluid level.....MA-29, ST-8
 Power steering gearST-17
 Power steering hydraulic pressureST-10
 Power steering oil pressure switchEC-636
 Power steering oil pumpST-27
 Power steering system bleeding.....ST-9
 Power supply routingEL-9
 Power transistor & ignition coil.....EC-500
 Power windowEL-259
 PRE/SE - Wiring diagramEC-385
 Precautions (General)GI-4
 Pressure plate - See Clutch coverCL-13
 Pressure test (A/T)AT-62
 Propeller shaftPD-3
 Propeller shaft greasing.....MA-25
 Propeller shaft inspectionMA-25
 Propeller shaft on vehicle servicePD-8
 Propeller shaft vibrationPD-8
 PST/SW - Wiring diagramEC-637

R

Rack retainer adjustment.....ST-8
 RadiatorLC-20, 22
 Radio - See Audio.....EL-179
 Rear air spoilerBT-36
 Rear axleAX-18
 Rear bumperBT-16
 Rear case (Transfer) (ATX14A)TF-154
 Rear case (Transfer) (TX10A)TF-16
 Rear combination lamp removal and
 installationBT-36
 Rear cover packing replacement diff.PD-17

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

Rear door	BT-21	Seat belt inspection	MA-30, RS-7
Rear drum brake	BR-26	Seat belt pre-tensioner	RS-3
Rear heated oxygen sensor		Seat belt pre-tensioner disposal	RS-22
(HO2S)	EC-248, 258, 268, 278	Seat belt, front	RS-4
Rear heated oxygen sensor (HO2S)		Seat belt, rear	RS-5
heater	EC-287	Seat, front	BT-43
Rear seat	BT-47	Seat, rear	BT-47
Rear seat belt	RS-5	Self-diagnosis (Transfer) (ATX14A)	TF-59
Rear side window	BT-58	SHIFT - Wiring diagram	AT-266
Rear suspension	SU-17	Shift control (Transfer) (TX10A)	TF-18, 30
Rear washer	EL-160	Shift control components (M/T)	MT-17
Rear window defogger	EL-170	Shift fork (M/T)	MT-17
Rear wiper	EL-160	Shift lever	MT-17
REF - Wiring diagram	EC-511	Shift lock system	AT-265
Refrigerant pressure sensor (auto A/C)	HA-84	Shift schedule	AT-357
Refrigerant pressure sensor (manual		Shift solenoid valve A (A/T) ..AT-125, 137, 147, 171	
A/C)	HA-190	Shift solenoid valve B (A/T) ..AT-125, 131, 147, 175	
Refrigerant connection precaution (auto		Shock absorber (rear)	SU-20
A/C)	HA-5	Side air bag	RS-21
Refrigerant connection precaution		Side bearing preload (front final drive	
(manual A/C)	HA-129	4WD)	PD-25
Refrigerant discharging evacuating		Side trim	BT-29
charging (auto A/C)	HA-111	Side window - See Rear side window	BT-58
Refrigerant general precaution (auto		Smart entrance control unit	EL-343
A/C)	HA-4	SMJ (super multiple junction)	Foldout
Refrigerant general precaution (manual		Spare tire size	GI-43
A/C)	HA-128	Spark plug replacement	MA-20
Refrigerant lines (auto A/C)	HA-120	Speedometer	EL-114
Refrigerant lines (manual A/C)	HA-201	Spiral cable	RS-17
Refrigerant pressure sensor	EC-641	Spot lamp	EL-108
Refrigeration cycle (auto A/C)	HA-15	Spring (Wheelarch) height	SU-6
Refrigeration cycle (manual A/C)	HA-139	SROOF - Wiring diagram	EL-196
Release bearing (clutch)	CL-10	SRS - See Supplemental Restraint	
REMOTE - Wiring diagram	EL-190	System	RS-10
Removal and installation (A/T)	AT-277	SRS - Wiring diagram	RS-35
Removal and installation (Transfer)		S/SIG - Wiring diagram	EC-624
(ATX14A)	TF-150	Stabilizer bar (front)	SU-12
Removal and installation (Transfer)		Stabilizer bar (rear)	SU-22
(TX10A)	TF-14	Stall test (A/T)	AT-59
Reverse clutch	AT-315	Standardized relay	EL-7
Reverse idler shaft (M/T)	MT-15	START - Wiring diagram	SC-11, 12
Reverse lamp switch (M/T) - See		Start signal	EC-623
Back-up lamp switch (M/T)	MT-6, 7	Starter	SC-19
Reverse main gear (M/T)	MT-15	Starting system	SC-10
Revolution sensor (A/T)	AT-115	Steering gear, linkage and transfer	
Ring gear diff. inspection	PD-24, 48	gear inspection	MA-28
RO2H-L - Wiring diagram	EC-291	Steering linkage	ST-17
RO2H-R - Wiring diagram	EC-290	Steering switch	EL-31
Road wheel size	GI-43	Steering transfer gear	ST-15
Roof trim	BT-34	Steering wheel and column	ST-11
Room lamp - See Interior lamp	EL-108	Steering wheel play	ST-7
RRO2LH - Wiring diagram	EC-252, 262, 272, 282	Steering wheel turning force	ST-9
RRO2RH - Wiring diagram	EC-251, 261, 271, 281	Stop lamp	EL-83
		STOP/L - Wiring diagram	EL-83
		Striking rod (M/T)	MT-17
		Strut (front)	SU-9
		Sub-gear (M/T)	MT-15
		Sub-oil pump (Transfer) (ATX14A)	TF-162
		Sun gear (Transfer) (ATX14A)	TF-165
		Sun roof, electric	EL-195
		Sunload sensor (auto A/C)	HA-104

S

SAE J1930 terminology list	GI-50
Screw jack	GI-44
Seal - See Exterior	BT-36
SEAT - Wiring diagram	EL-200

ALPHABETICAL INDEX

Sunroof.....	BT-48
Supplemental Restraint System.....	RS-10
Supplemental restraint system - Wiring diagram.....	RS-35
S/VCSW - Wiring diagram.....	EC-494
Swirl control valve control solenoid valve.....	EC-459
Swirl control valve control vacuum check switch.....	EC-494
SWL/V - Wiring diagram.....	EC-459
Symbols and abbreviations.....	GI-10
Symptom matrix chart.....	EC-119
Synchronizer (M/T).....	MT-15
System readiness test (SRT) code.....	EC-62

T

2-4WD shift solenoid valve (ATX14A).....	TF-142
Tachometer.....	EL-114
Tail lamp.....	EL-76
TAIL/L - Wiring diagram.....	EL-78
TCM circuit diagram.....	AT-13
TCM inspection table.....	AT-92
Temperature control cable and linkage adjustment (manual A/C).....	HA-181
TFTS - Wiring diagram.....	EC-312
THEFT - Wiring diagram.....	EL-320
Theft warning system.....	EL-312
Thermometer.....	EL-130
Thermostat.....	LC-17
Three way catalyst function (Left bank).....	EC-348
Three way catalyst function (Right bank).....	EC-348
Three way catalyst precautions.....	GI-6
Throttle bodies.....	EM-12
Throttle position sensor (TPS).....	EC-175
Throttle position sensor adjustment.....	EC-102
Throttle position switch.....	EC-432, AT-184, 264
Throwout bearing - See Clutch release bearing.....	CL-10
Tie-rod.....	ST-21
Tie-rod ball joints.....	ST-21
Tightening torque of standard bolts.....	GI-49
Timing chain.....	EM-20
Tire rotation.....	MA-27
Tire size.....	GI-43
Tooth contact (front final drive 4WD).....	PD-30
Tooth contact diff.....	PD-57
Torque converter installation.....	AT-278
Torque convertor clutch solenoid valve.....	AT-152, 161
Tow truck towing.....	GI-46
Towing point.....	GI-48
TP/SW - Wiring diagram.....	EC-435
TPS - Wiring diagram.....	EC-181
Transfer case (TX10A).....	TF-16
Transfer control unit inspection table (ATX14A).....	TF-86
Transfer dropping resistor (ATX14A).....	TF-143

Transfer fluid replacement (All-mode 4WD model).....	MA-25	GI
Transfer fluid replacement (Part time 4WD model).....	MA-24	MA
Transfer fluid temperature sensor (ATX14A).....	TF-142	EM
Transfer motor (ATX14A).....	TF-148	EM
Transfer motor relay (ATX14A).....	TF-144	EM
Transfer serial number.....	GI-43	LC
Transmission case (M/T).....	MT-14	LC
TRANSMT - Wiring diagram.....	EL-349	EC
Tread-FR&RR (Dimensions).....	GI-43	EC
Trim.....	BT-29	EC
Trouble diagnoses.....	GI-34	FE
Turbine revolution sensor.....	AT-202	FE
TURN - Wiring diagram.....	EL-96	FE
Turn signal lamp.....	EL-94	CL
Two trip detection logic.....	EC-60	CL
Two-pole lift.....	GI-46	CL

U

Under body.....	BT-63	AT
-----------------	-------	----

V

Vacuum cut valve.....	EC-32	PD
Vacuum cut valve bypass valve.....	EC-32, 586, 592	PD
Vacuum hose (brake system).....	BR-21	AX
Vacuum hose drawing (Engine control).....	EC-26	AX
Valve clearance.....	EM-53	SU
Valve guide.....	EM-44	SU
Valve seat.....	EM-46	SU
Valve spring.....	EM-47	SU
Vehicle identification number.....	GI-41	BR
Vehicle recovery (freeing a stuck vehicle).....	GI-48	BR
Vehicle speed sensor (VSS).....	EC-418	ST
VENT/V - Wiring diagram.....	EC-377, 556, 577	ST
VIAS.....	EC-612	RS
VIAS - Wiring diagram.....	EC-612	RS
Viscosity number (SAE).....	MA-13	RS
VSS - Wiring diagram.....	EC-421	BT

W

Wait detection switch (ATX14A).....	TF-143	HA
WARN - Wiring diagram.....	EL-135	SC
Warning chime.....	EL-144	SC
Warning lamps.....	EL-134	EL
Washer, front.....	EL-155	EL
Washer, rear.....	EL-160	EL
Water cock control rod adjustment (manual A/C).....	HA-181	EL
Water pump.....	LC-13	EL
Water temperature gauge.....	EL-114	EL
Weatherstrip - See Exterior.....	BT-36	EL

ALPHABETICAL INDEX

Wheel balance	MA-26	Window, rear side	BT-58
Wheel bearing (front).....	AX-4	Window, side - See Rear side window.....	BT-58
Wheel bearing (rear)	AX-19	Windshield.....	BT-56
Wheel hub (front).....	AX-6	WIP/R - Wiring diagram	EL-162
Wheel sensors (ABS).....	BR-56, 81	WIPER - Wiring diagram	EL-157
Wheel size	GI-43	Wiper, front.....	EL-155
Wheelarch height	SU-6	Wiper, rear	EL-160
Wheelbase (Dimensions)	GI-43	Wiring Diagram (Cell code) list.....	EL-393
Wide open & closed throttle position switch.....	EC-175	Wiring diagram (Transfer) (ATX14A)	TF-50
Width (Dimensions)	GI-43	Wiring diagrams	GI-11
WINDOW - Wiring diagram	EL-263	Withdrawal lever (clutch)	CL-10
Window, door	BT-19	Wrist pin - See Piston pin inspection.....	EM-64