

SECTION **RSU**
 REAR SUSPENSION

A
 B
 C
 D
 F
 G
 H
 I
 J
 K
 L
 M
 N
 O
 P

RSU

CONTENTS

PRECAUTION	2	Component	9
PRECAUTIONS	2	REMOVAL AND INSTALLATION	10
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	2	REAR SUSPENSION MEMBER	10
Precaution for Rear Suspension	2	Removal and Installation	10
PREPARATION	3	SHOCK ABSORBER	14
PREPARATION	3	Removal and Installation	14
Commercial Service Tool	3	SUSPENSION ARM	15
SYMPTOM DIAGNOSIS	4	Removal and Installation	15
NOISE, VIBRATION, AND HARSHNESS (NVH) TROUBLESHOOTING	4	FRONT LOWER LINK	17
NVH Troubleshooting Chart	4	Removal and Installation	17
ON-VEHICLE MAINTENANCE	5	REAR LOWER LINK & COIL SPRING	19
REAR SUSPENSION ASSEMBLY	5	Removal and Installation	19
On-Vehicle Inspection	5	STABILIZER BAR	21
Wheel Alignment Inspection	5	Removal and Installation	21
SHOCK ABSORBER	8	SERVICE DATA AND SPECIFICATIONS (SDS)	22
Inspection	8	SERVICE DATA AND SPECIFICATIONS (SDS)	22
ON-VEHICLE REPAIR	9	Wheel Alignment	22
REAR SUSPENSION ASSEMBLY	9	Ball Joint	22
		Wheelarch Height (Unladen*)	23

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000001675459

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

Precaution for Rear Suspension

INFOID:000000001675460

- When installing the rubber bushings, the final tightening must be done under unladen condition and with the tires on level ground. Oil will shorten the life of the rubber bushings, so wipe off any spilled oil immediately.
- Unladen condition means the fuel tank, engine coolant and lubricants are at the full specification. The spare tire, jack, hand tools, and mats are in their designated positions. There are no passengers in the vehicle.
- After installing suspension components, check the wheel alignment.
- Caulking nuts are not reusable. Always use new caulking nuts for installation. New caulking nuts are pre-oiled, do not apply any additional lubrication.

PREPARATION


< PREPARATION >

PREPARATION

PREPARATION

Commercial Service Tool

INFOID:000000001675550

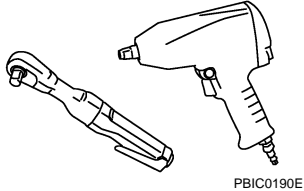Tool name	Description
Power tool  <p>PBIC0190E</p>	Removing bolts and nuts

A

B

C

D

RSU

F

G

H

I

J

K

L

M

N

O

P

NOISE, VIBRATION, AND HARSHNESS (NVH) TROUBLESHOOTING

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

NOISE, VIBRATION, AND HARSHNESS (NVH) TROUBLESHOOTING

NVH Troubleshooting Chart

INFOID:000000001675551

Use chart below to help you find the cause of the symptom. If necessary, repair or replace these parts.

Symptom		Improper installation, looseness		Shock absorber deformation, damage or deflection		Bushings or mounting deterioration		Parts interference		Spring fatigue		Suspension looseness		Incorrect wheel alignment		Stabilizer bar fatigue		PROPELLER SHAFT		DIFFERENTIAL		FRONT SUSPENSION		FRONT AXLE		TIRES		ROAD WHEEL		DRIVE SHAFT		BRAKES		STEERING	
		RSU-9	RSU-8	RSU-5	RSU-9	RSU-23	RSU-9	RSU-5	RSU-21	DLN-306, "NVH Troubleshooting Chart" (2F1310) DLN-314, "NVH Troubleshooting Chart" (2S1330) DLN-323, "NVH Troubleshooting Chart" (2S1350)	DLN-336, "NVH Troubleshooting Chart" (R180A) DLN-370, "NVH Troubleshooting Chart" (M205)	FSU-4, "NVH Troubleshooting Chart"	FAX-4, "NVH Troubleshooting Chart"	WT-33, "NVH Troubleshooting Chart"	WT-33, "NVH Troubleshooting Chart"	FAX-4, "NVH Troubleshooting Chart"	BR-5, "NVH Troubleshooting Chart"	ST-9, "NVH Troubleshooting Chart"																	
Noise		x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	
Shake		x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	
Vibration		x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	
Shimmy		x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	
Shudder		x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	
Poor quality ride or handling		x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	

x: Applicable

REAR SUSPENSION ASSEMBLY

< ON-VEHICLE MAINTENANCE >

ON-VEHICLE MAINTENANCE

REAR SUSPENSION ASSEMBLY

On-Vehicle Inspection


INFOID:000000001675566

- Check all of the component mountings for any excessive looseness, or backlash. Repair or replace the components as necessary.
- Check the components for any excessive wear, damage, or abnormal conditions. Repair or replace the components as necessary.
- Check the shock absorbers for any oil leaks or damage, and replace as necessary.

Wheel Alignment Inspection

INFOID:000000001675567

Rear Wheel Alignment Adjusting Bolts

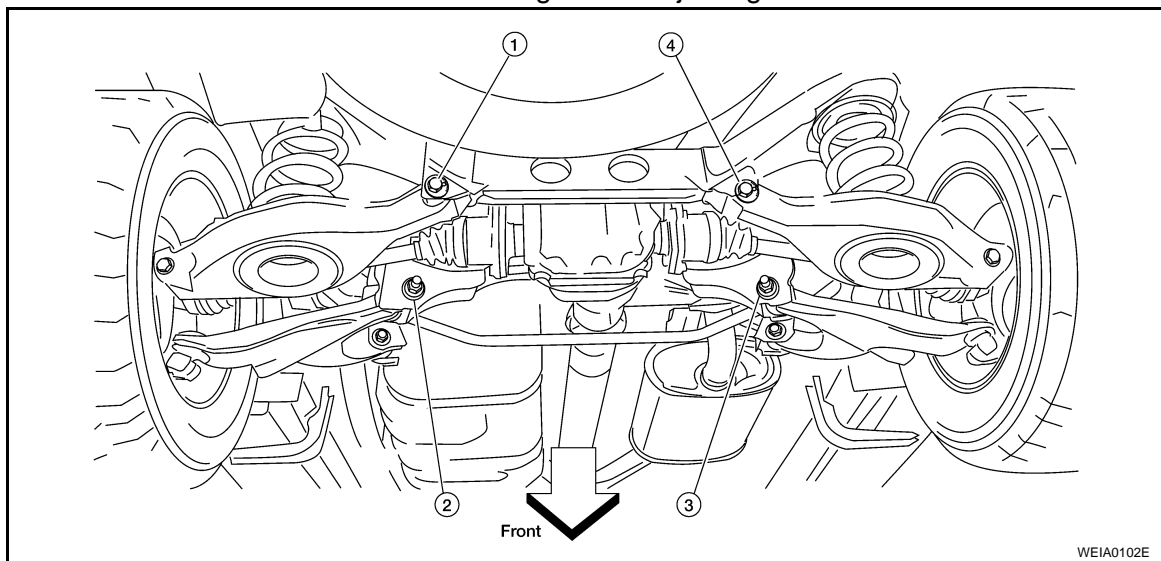

1. Rear lower link adjusting bolt, LH
2. Front lower link adjusting bolt, LH
3. Front lower link adjusting bolt, RH
4. Rear lower link adjusting bolt, RH

PRELIMINARY INSPECTION

WARNING:

Always adjust the alignment with the vehicle on a flat surface.

NOTE:

If alignment is out of specification, inspect and replace any damaged or worn rear suspension parts before making any adjustments.

1. Check and adjust the wheel alignment with the vehicle under unladen conditions. "Unladen conditions" means that the fuel, coolant, and lubricants are all full, and that the spare tire, jack, hand tools and mats are in their designated positions, and there are no passengers in the vehicle.
2. Check the tires for incorrect air pressure and excessive wear. Refer to [WT-40, "Tire"](#).
3. Check the wheels for runout and damage. Refer to [WT-34, "Inspection"](#).
4. Check the wheel bearing axial end play.

Axial end play : 0 mm (0 in)

5. Check the shock absorbers for any oil leaks or damage.
6. Check each mounting point of the suspension components for any excessive looseness or damage.
7. Check each link, arm, and the rear suspension member for any damage.
8. Check the vehicle height. Refer to [FSU-24, "Wheelarch Height \(Unladen*1\)"](#).

GENERAL INFORMATION AND RECOMMENDATIONS

1. A Four-Wheel Thrust Alignment should be performed.

A

B

C

D

RSU

F

G

H

I

J

K

L

M

N

O

P

REAR SUSPENSION ASSEMBLY

< ON-VEHICLE MAINTENANCE >

- This type of alignment is recommended for any NISSAN vehicle.
 - The four-wheel “thrust” process helps ensure that the vehicle is properly aligned and the steering wheel is centered.
 - The alignment machine itself should be capable of accepting any NISSAN vehicle.
 - The alignment machine should be checked to ensure that it is level.
2. Make sure the alignment machine is properly calibrated.
 - Your alignment machine should be regularly calibrated in order to give correct information.
 - Check with the manufacturer of your specific alignment machine for their recommended Service/Calibration Schedule.

THE ALIGNMENT PROCESS


IMPORTANT: Use only the alignment specifications listed in this Service Manual. Refer to [RSU-22. "Wheel Alignment"](#).

1. When displaying the alignment settings, many alignment machines use “indicators”: (Green/red, plus or minus, Go/No Go). **Do NOT use these indicators.**
 - The alignment specifications programmed into your alignment machine that operate these indicators may not be correct.
 - This may result in an ERROR.
2. Some newer alignment machines are equipped with an optional “Rolling Compensation” method to “compensate” the sensors (alignment targets or head units). **Do NOT use this “Rolling Compensation” method.**
 - Use the “Jacking Compensation” method. After installing the alignment targets or head units, raise the vehicle and rotate the wheels 1/2 turn both ways.
 - See Instructions in the alignment machine you are using for more information.

CAMBER

1. Measure camber of both the right and left wheels with a suitable alignment gauge and adjust as necessary to specification.

Camber : Refer to [FSU-23. "Wheel Alignment \(Unladen*1\)"](#).

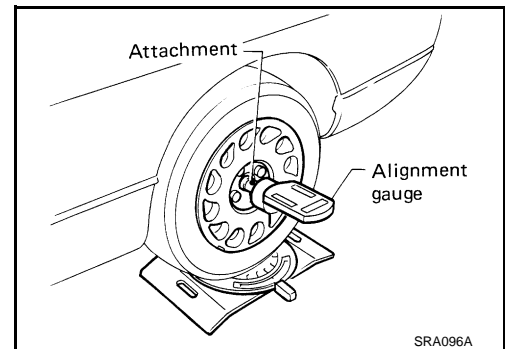

2. If outside of the specified value, adjust the camber using the adjusting bolt in the front lower link.


CAUTION:

After adjusting the camber then check the toe-in.

NOTE:

Camber changes about 0° 5' with each graduation of the adjusting bolt.

3. Tighten the adjusting bolt nuts to specification.

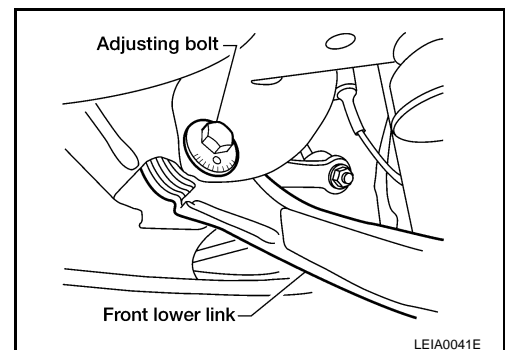


TOE-IN

1. Bounce the rear of the vehicle up and down two to three times to stabilize the vehicle height. Refer to [FSU-24. "Wheelarch Height \(Unladen*1\)"](#).
2. Push the vehicle straight ahead about 5 m (16 ft).

REAR SUSPENSION ASSEMBLY


< ON-VEHICLE MAINTENANCE >

- Put a mark on the base line of the tread (rear side) of both of the tires at the same height as the center of the hub. These will be the measuring points.
- Measure the distance "A" (rear side) across from tire to tire.

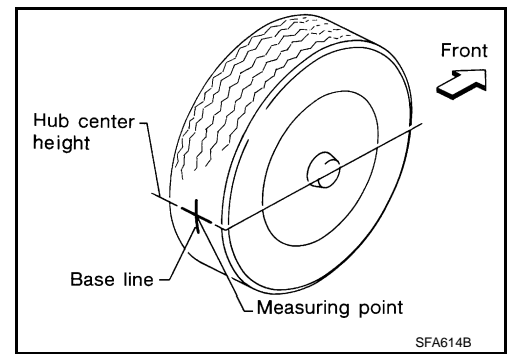

- Push the vehicle slowly ahead to rotate the wheels 180° degrees (a half turn). If the wheels are rotated more than 180° degrees (a half turn), then repeat the above steps. Never push the vehicle backward.
- Measure the distance "B" (front side) across from tire to tire.

Total toe-in : Refer to [FSU-23, "Wheel Alignment \(Unladen*1\)"](#).

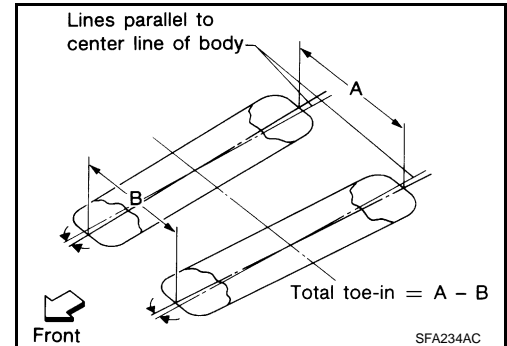

- If the toe-in is outside the specified value, adjust the toe-in using the adjusting bolt in the rear lower link.


CAUTION:

Be sure to adjust equally on the RH and LH sides using the adjusting bolt.

NOTE:

Toe changes about 1.5 mm (0.059 in) [one side] with each graduation of the adjusting bolt.

- Tighten the adjusting bolt nuts to specification.

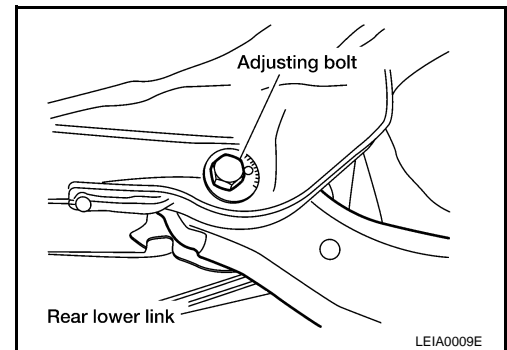

SHOCK ABSORBER

< ON-VEHICLE MAINTENANCE >

SHOCK ABSORBER

Inspection

INFOID:000000001675569

- Check for oil leakage on welded or gland packing portions.
- Check the shock absorber for smooth operation through a full stroke, both compression and extension.

REAR SUSPENSION ASSEMBLY

< ON-VEHICLE REPAIR >


ON-VEHICLE REPAIR

REAR SUSPENSION ASSEMBLY

Component

INFOID:000000001675562

SEC. 431 • 432

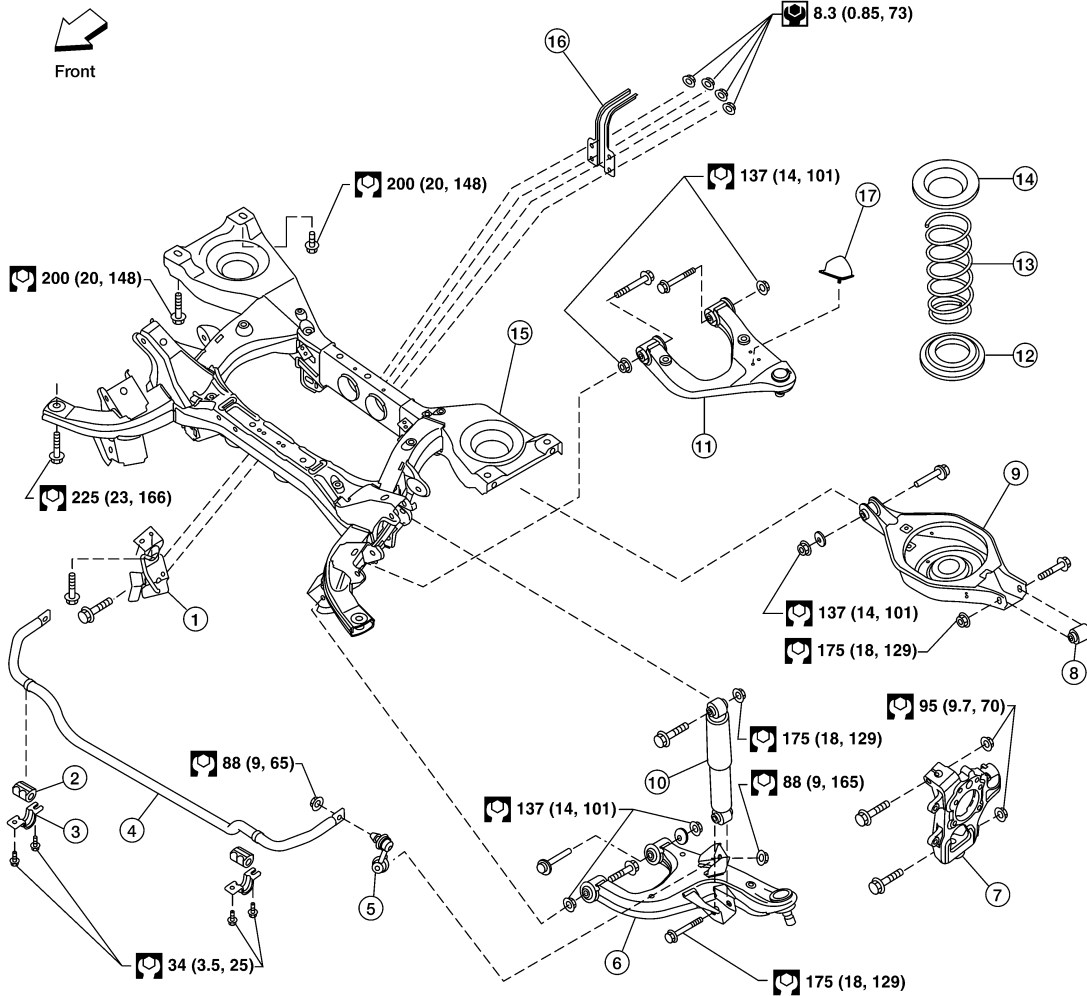

N-m (kg-m, in-lb)

N-m (kg-m, ft-lb)

WEIA0130E

- | | | |
|---------------------------|---------------------------|----------------------------|
| 1. Seat belt latch anchor | 2. Stabilizer bar bushing | 3. Stabilizer bar clamp |
| 4. Stabilizer bar | 5. Connecting rod | 6. Front lower link |
| 7. Knuckle | 8. Bushing | 9. Rear lower link |
| 10. Shock absorber | 11. Suspension arm | 12. Lower rubber seat |
| 13. Coil spring | 14. Upper rubber seat | 15. Rear suspension member |
| 16. Spare tire bracket | 17. Bound bumper | |

REAR SUSPENSION MEMBER

< REMOVAL AND INSTALLATION >

REMOVAL AND INSTALLATION


REAR SUSPENSION MEMBER

Removal and Installation

INFOID:000000001675561

COMPONENTS

SEC. 431 • 432

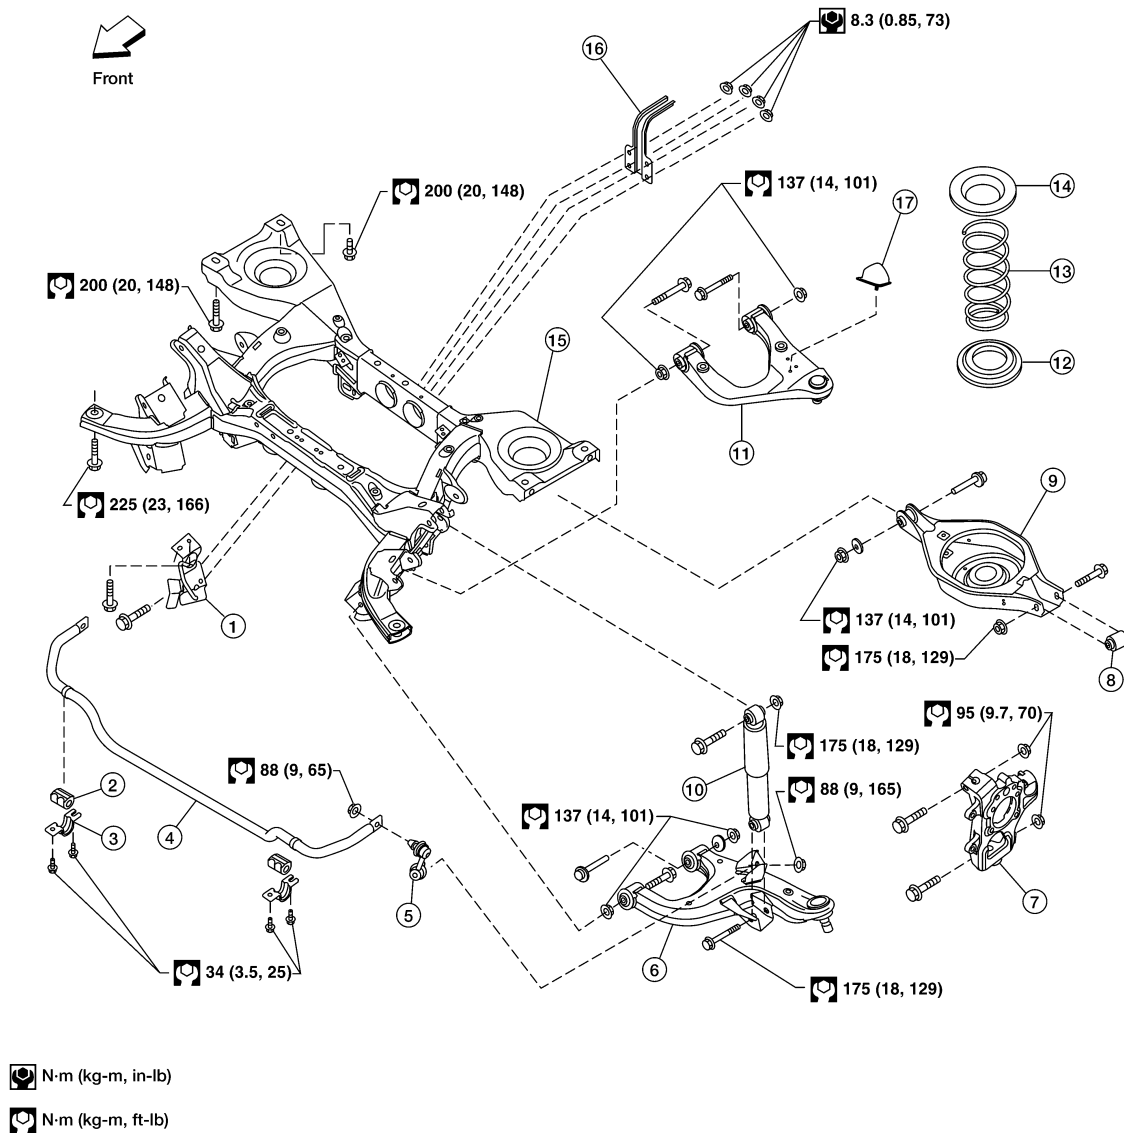

WEIA0130E

- | | | |
|---------------------------|---------------------------|----------------------------|
| 1. Seat belt latch anchor | 2. Stabilizer bar bushing | 3. Stabilizer bar clamp |
| 4. Stabilizer bar | 5. Connecting rod | 6. Front lower link |
| 7. Knuckle | 8. Bushing | 9. Rear lower link |
| 10. Shock absorber | 11. Suspension arm | 12. Lower rubber seat |
| 13. Coil spring | 14. Upper rubber seat | 15. Rear suspension member |
| 16. Spare tire bracket | 17. Bound bumper | |

REMOVAL

1. Remove both of the rear wheel and tire assemblies using power tool.
2. Remove the spare tire.

REAR SUSPENSION MEMBER

< REMOVAL AND INSTALLATION >

3. Remove the brake caliper without disconnecting the brake hoses, using power tool. Reposition the brake caliper out of the way using a suitable wire. Refer to [BR-29, "Removal and Installation of Brake Caliper and Disc Rotor"](#).


CAUTION:

- Do not crimp or stretch the brake hose when repositioning the brake caliper out of the way.
- Do not press the brake pedal while the brake caliper is positioned out of the way.


4. Remove the two rear brake rotors.
5. Remove the two rear drive shafts. Refer to [RAX-9, "Removal and Installation"](#).
6. Disconnect the parking brake cables brackets from the rear suspension member.
7. Disconnect the two rear wheel sensor connectors and harness clips.
8. Remove the rear final drive vent tube from the rear suspension member and frame.
9. Remove the rear final drive. Refer to [DLN-410, "Removal and Installation" \(R200\)](#), [DLN-447, "Removal and Installation" \(R230\)](#).

10. Set a suitable jack to support each of the rear lower links and the coil spring tension.


11. Remove both of the rear lower link outer bolts using power tool, and lower the jack to remove the rear coil springs, and the upper and lower rubber seats.

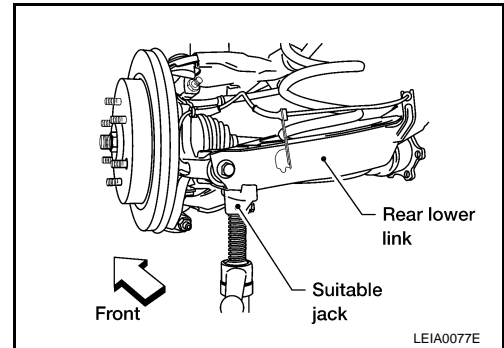

12. Remove the two bolts to disconnect the seat belt latch anchor from the rear suspension member using power tool.

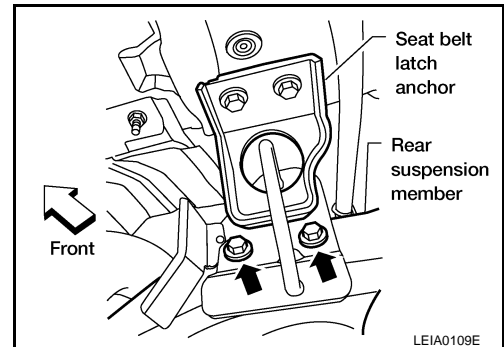

13. Disconnect both of the connecting rods from the rear stabilizer bar.

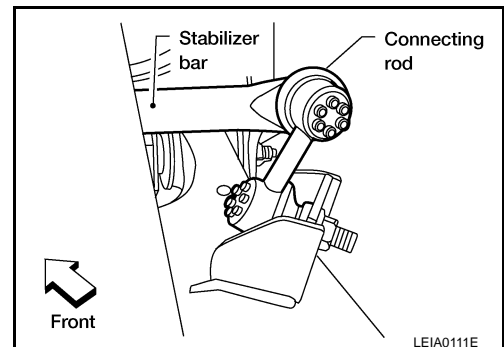


A
B
C
D
RSU
F
G
H
I
J
K
L
M
N
O
P


REAR SUSPENSION MEMBER

< REMOVAL AND INSTALLATION >

14. Set a suitable jack under each front lower link for support and remove the shock absorber upper end bolts and lower end bolts using power tool.
15. Remove both of the shock absorbers.

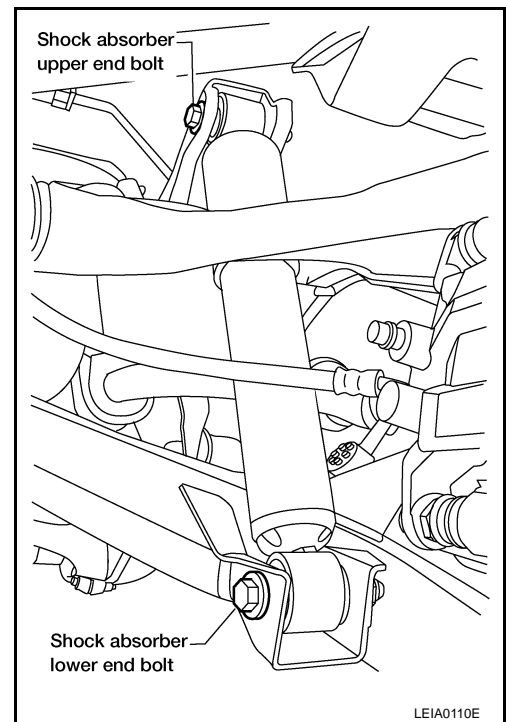

16. Set a suitable jack under the rear suspension member.
17. Remove the six rear suspension member bolts using power tool.
18. Slowly lower the jack supporting the rear suspension member to access the fuel filler tube bracket, then remove the two bolts to disconnect the fuel filler tube bracket from the rear suspension member.

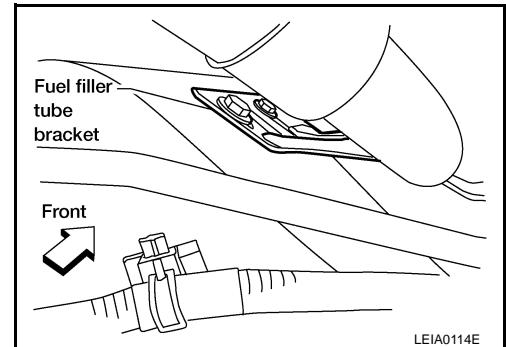

19. Slowly lower the jack to remove the rear suspension member, suspension arm, front and rear lower links, knuckles, and stabilizer bar as an assembly.
20. Remove the suspension arm, spare tire bracket, stabilizer bar, front and rear lower links, and the knuckles from the rear suspension member using power tool.


INSPECTION AFTER REMOVAL

Check rear suspension member for deformation, cracks, and other damage and replace if necessary.

INSTALLATION

Installation is in the reverse order of removal.


- When raising the rear suspension member assembly, use the locating pins to align the rear suspension member to the vehicle body.

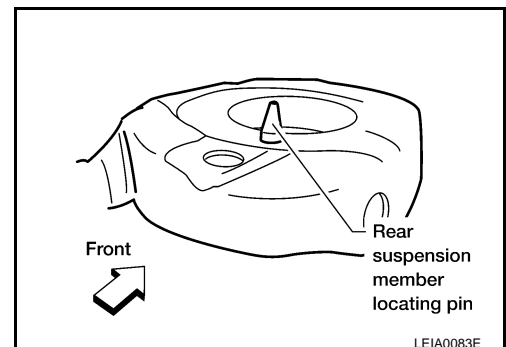

REAR SUSPENSION MEMBER

< REMOVAL AND INSTALLATION >

- When installing the upper and lower rubber seats for the rear coil springs, the arrow embossed on the rubber seats must point out toward the wheel and tire assembly.

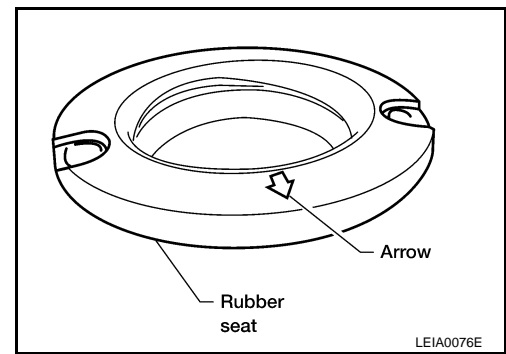

- Perform final tightening of the nuts and bolts for the links (with rubber bushings) under unladen conditions with the tires on level ground.
- Adjust the parking brake cables. Refer to [PB-3, "On-Vehicle Service"](#).
- Check the wheel alignment. Refer to [FSU-5, "Front Wheel Alignment"](#).

A
B
C
D

RSU

F
G
H
I
J
K
L
M
N
O
P

SHOCK ABSORBER

< REMOVAL AND INSTALLATION >


SHOCK ABSORBER

Removal and Installation

INFOID:000000001675559

REMOVAL

1. Remove the wheel and tire assembly using power tool. Refer to [WT-36, "Rotation"](#).
2. Position a suitable jack under the front lower link to support the shock absorber.
3. Remove the shock absorber upper and lower end bolts using power tool.
4. Remove the shock absorber.

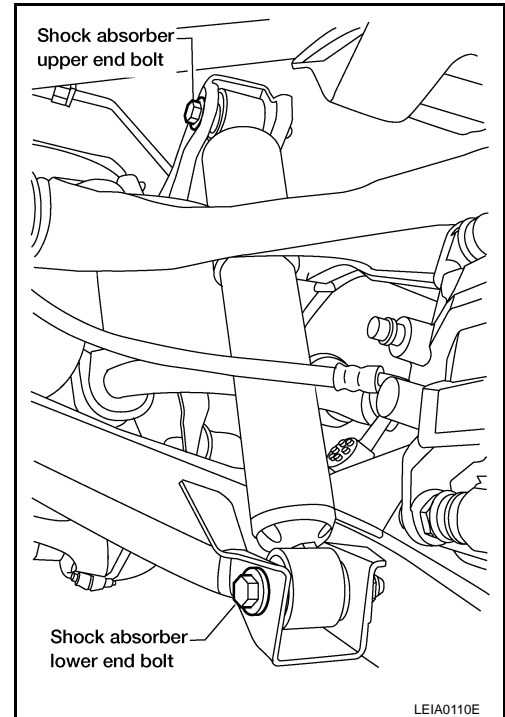

INSTALLATION

Installation is in the reverse order of removal.

- Tighten the shock absorber bolts to specification. Refer to [RSU-9, "Component"](#).

SUSPENSION ARM

< REMOVAL AND INSTALLATION >


SUSPENSION ARM

Removal and Installation

INFOID:000000001675558

REMOVAL

1. Remove the wheel and tire assembly using power tool. Refer to [WT-36. "Rotation"](#).
2. Remove the brake caliper without disconnecting the brake hoses, using power tool. Reposition the brake caliper out of the way using a suitable wire. Refer to [BR-29. "Removal and Installation of Brake Caliper and Disc Rotor"](#).
3. Position a suitable jack under the front lower link to support the knuckle.
4. Remove the shock absorber upper and lower end bolts using power tool, and remove the shock absorber.

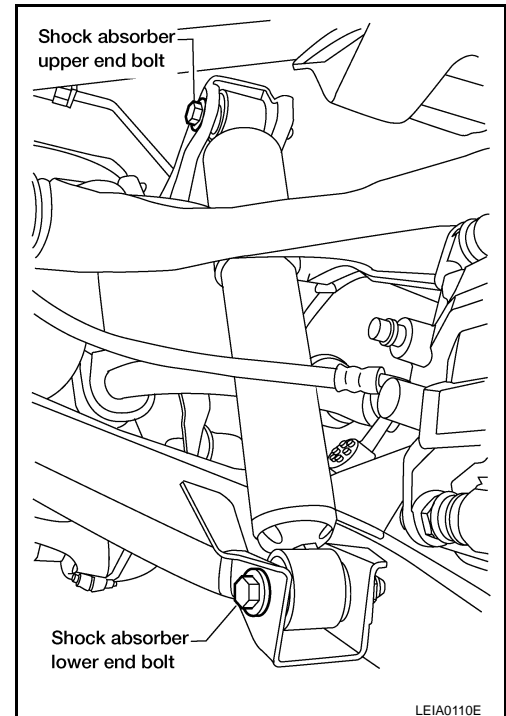


5. Remove the suspension arm upper nuts and bolts on the suspension member side using power tool.
6. Remove the suspension arm pinch bolt and nut on the knuckle side using power tool.
7. Disconnect the suspension arm from the knuckle using a soft hammer.

CAUTION:

Do not damage the ball joint with the soft hammer.

8. Remove the suspension arm.
9. Remove the bound bumper from the suspension arm if necessary to transfer to the new suspension arm.

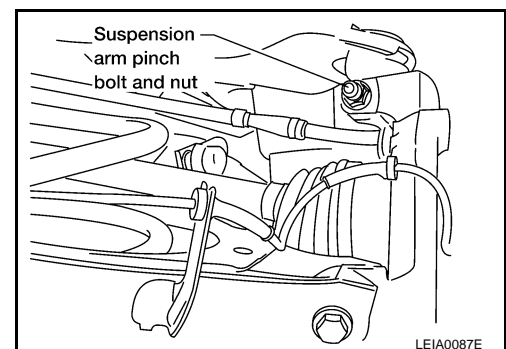

INSPECTION AFTER REMOVAL

A
B
C
D
RSU
F
G
H
I
J
K
L
M
N
O
P

SUSPENSION ARM

< REMOVAL AND INSTALLATION >


- Check the suspension arm for damage, cracks, deformation and replace if necessary.
- Check the rubber bushing for damage, cracks and deformation. Replace suspension arm assembly if necessary.
- Check the ball joint. Replace the suspension arm assembly if any of the following exists:
 - Ball stud is worn.
 - Joint is hard to swing.
 - Play in axial direction is excessive.
- Before checking, turn the ball joint at least 10 revolutions so that the ball joint is properly broken in.

Swinging force "A" : Refer to [RSU-22, "Ball Joint"](#).

Turning force "B" : Refer to [RSU-22, "Ball Joint"](#).

Vertical end play "C" : Refer to [RSU-22, "Ball Joint"](#).

Height "D" : Refer to [RSU-22, "Ball Joint"](#).

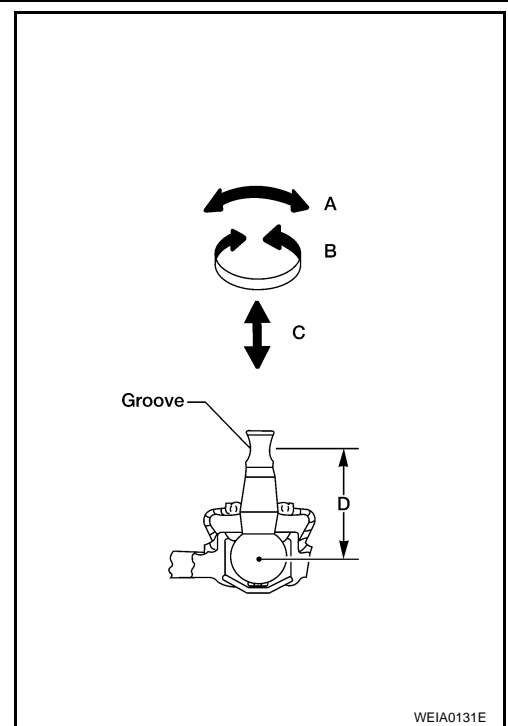

WEIA0131E

INSTALLATION

Installation is in the reverse order of removal.

- Tighten the nuts and bolts to specification. Refer to [RSU-9, "Component"](#).
- Perform final tightening of the nuts and bolts for the links (with rubber bushings) under unladen conditions with the tires on level ground.

FRONT LOWER LINK

< REMOVAL AND INSTALLATION >

FRONT LOWER LINK

Removal and Installation


INFOID:000000001675557

REMOVAL

1. Remove the wheel and tire assembly using power tool.
2. Remove the stabilizer bar. Refer to [RSU-21, "Removal and Installation"](#).
3. Set a suitable jack under the rear lower link to relieve the coil spring tension.

NOTE:


LH side shown, RH side similar.

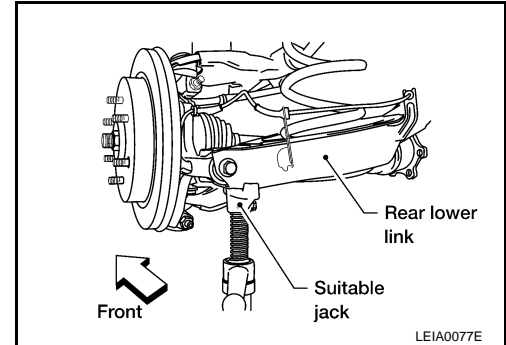

4. Remove the shock absorber lower end bolt.

NOTE:

LH side shown, RH side similar.

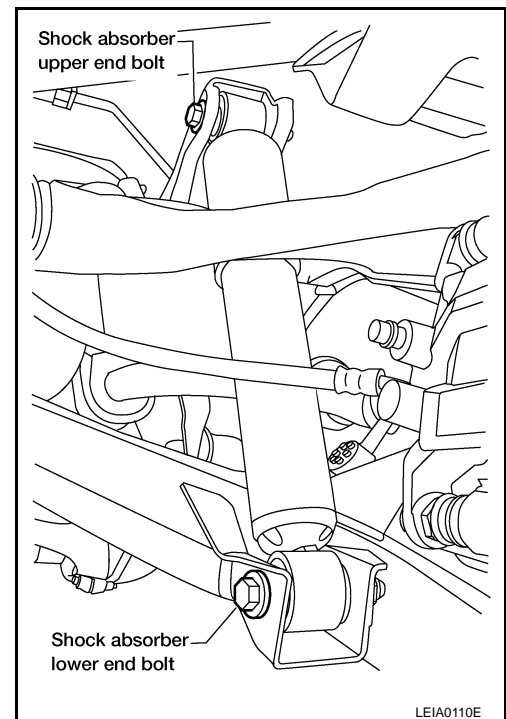

5. Remove the adjusting bolt and nut, and the bolt and nut, from the front lower link and rear suspension member using power tool.

6. Remove the front lower link pinch bolt and nut on the knuckle side using power tool.

NOTE:


LH side shown, RH side similar.

7. Disconnect the front lower link from the knuckle using a soft hammer.

CAUTION:

Do not damage the ball joint with the soft hammer.

8. Remove the front lower link.

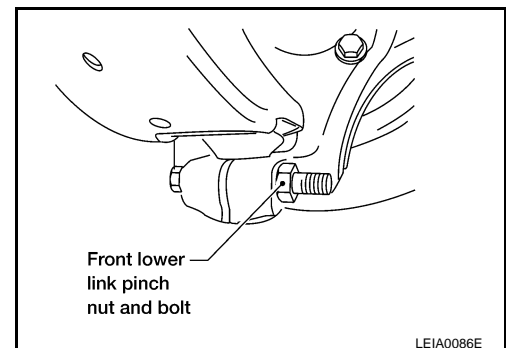

INSPECTION AFTER REMOVAL

- Check front lower link and bushing for any deformation, crack, or damage. Replace if necessary.

A
B
C
D
RSU
F
G
H
I
J
K
L
M
N
O
P

FRONT LOWER LINK

< REMOVAL AND INSTALLATION >


- Check rubber bushing for damage, cracks and deformation. Replace suspension arm assembly if necessary.
- Check ball joint. Replace suspension arm assembly if any of the following exists:
 - Ball stud is worn.
 - Joint is hard to swing.
 - Play in axial direction is excessive.
- Before checking, turn ball joint at least 10 revolutions so that ball joint is properly broken in.

Swinging force "A" : Refer to [RSU-22, "Ball Joint"](#).

Turning force "B" : Refer to [RSU-22, "Ball Joint"](#).

Vertical end play "C" : Refer to [RSU-22, "Ball Joint"](#).

Height "D" : Refer to [RSU-22, "Ball Joint"](#).

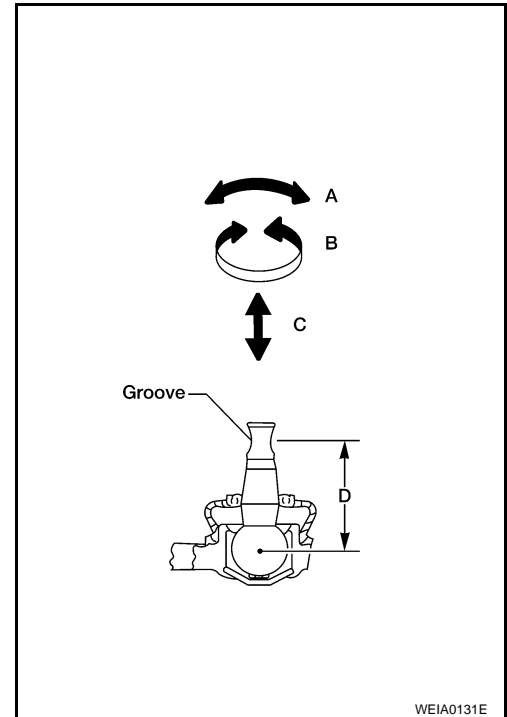

WEIA0131E

INSTALLATION

Installation is in the reverse order of removal.

- Tighten the nuts and bolts to specification. Refer to [RSU-9, "Component"](#).
- Perform the final tightening of the front lower link nuts and bolts (with rubber bushings) under unladen conditions with tires on level ground.
- Check the wheel alignment. Refer to [FSU-5, "Front Wheel Alignment"](#).

REAR LOWER LINK & COIL SPRING

< REMOVAL AND INSTALLATION >


REAR LOWER LINK & COIL SPRING

Removal and Installation


INFOID:000000001675556

REMOVAL


1. Remove the wheel and tire assembly using power tool. Refer to [WT-36. "Rotation"](#).
2. If removing the LH rear lower link and coil spring, remove the spare wheel and tire assembly.
3. Set a suitable jack to relieve the coil spring tension and support the rear lower link.

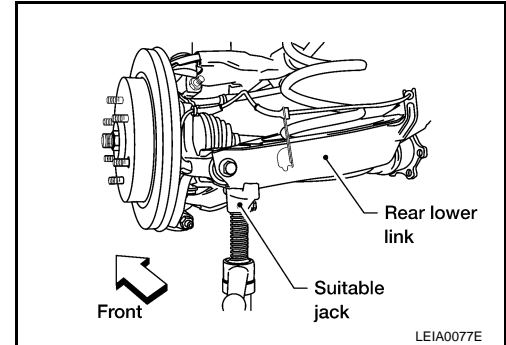

4. Loosen the rear lower link adjusting bolt and nut connected to the rear suspension member without removing the adjusting bolt and nut, using power tool.

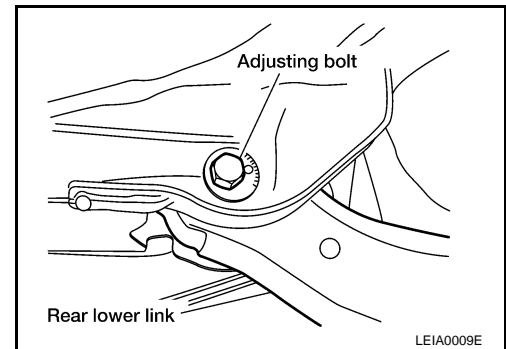

5. Remove the rear lower link pinch bolt and nut from the knuckle using power tool.
6. Slowly lower the rear lower link using the suitable jack to release the coil spring tension. Then remove the upper rubber seat, coil spring and lower rubber seat from the rear lower link.
7. Remove the rear lower link adjusting bolt and nut from the rear suspension member using power tool, then remove the rear lower link.

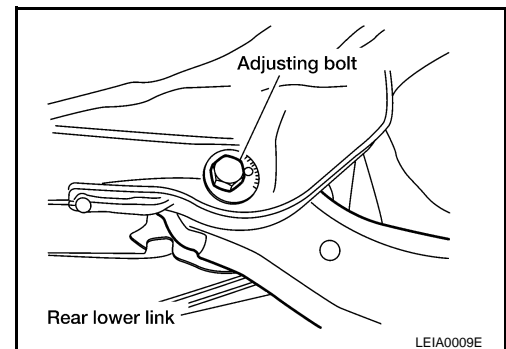

INSPECTION AFTER REMOVAL

Check for deformation, cracks, or other damage and replace if necessary.

INSTALLATION


Installation is in the reverse order of removal.

A
B
C
D
RSU
F
G
H
I
J
K
L
M
N
O
P

REAR LOWER LINK & COIL SPRING

< REMOVAL AND INSTALLATION >

- When installing the upper and lower rubber seats for the rear coil springs, the arrow embossed on the rubber seats must point out toward the wheel and tire assembly.
- Perform the final tightening of the rear lower link nuts and bolts (with rubber bushings) under unladen conditions with tires on level ground.
- Tighten the nuts and bolts to specification. Refer to [RSU-9, "Component"](#).
- Check the wheel alignment. Refer to [RSU-5, "Wheel Alignment Inspection"](#).

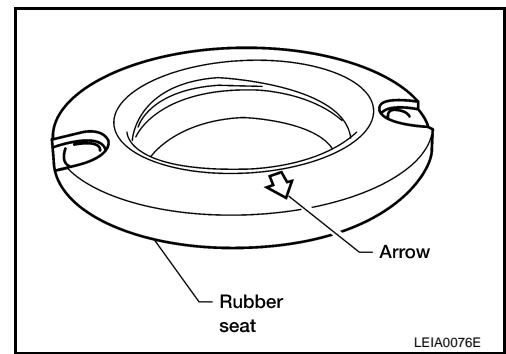

STABILIZER BAR

< REMOVAL AND INSTALLATION >


STABILIZER BAR

Removal and Installation


INFOID:000000001675555

REMOVAL

1. Disconnect the stabilizer bar ends from the connecting rods using power tool.

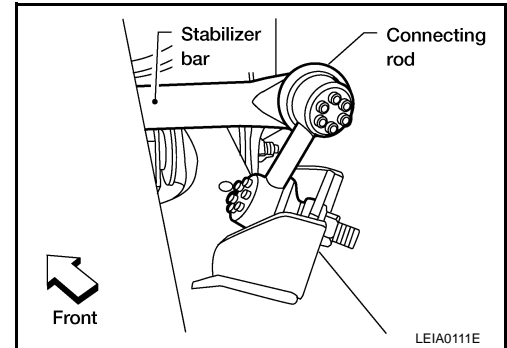

2. Remove the stabilizer bar clamps using power tool, and remove the stabilizer bar bushings.
3. Remove the stabilizer bar.

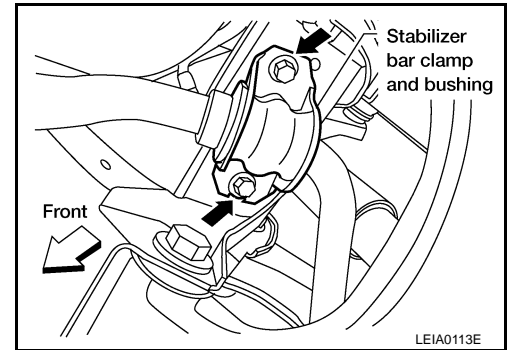


INSPECTION AFTER REMOVAL

- Check stabilizer bar for any deformation, cracks, or damage and replace if necessary.
- Check rubber bushings for deterioration, or cracks and replace if necessary.

INSTALLATION

Installation is in the reverse order of removal.

- Install the stabilizer bar bushings and clamps so they are positioned outside of the sideslip prevention clamp on the stabilizer bar.
- Tighten the nuts and bolts to specification. Refer to [RSU-9, "Component"](#).

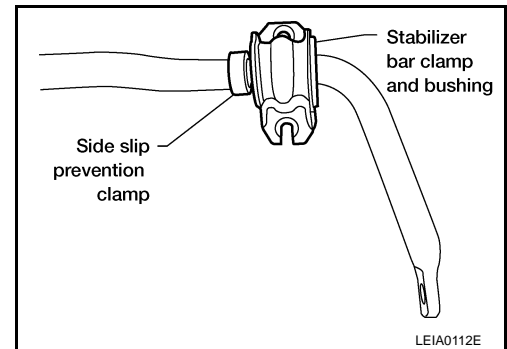

A
B
C
D
RSU
F
G
H
I
J
K
L
M
N
O
P

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)


SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

Wheel Alignment

INFOID:000000001675552


Camber Degree minute (decimal degree)	Minimum	- 0° 32' (- 0.53°)
	Nominal	- 0° 2' (- 0.03°)
	Maximum	0° 28' (0.47°)

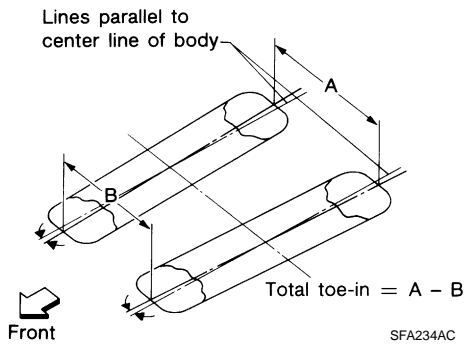

Total toe-in	Distance (A - B)	Minimum	- 1.4 mm (- 0.055 in)
		Nominal	1.9 mm (0.075 in)
		Maximum	5.2 mm (0.205 in)
		Cross toe	0 ± 2 mm (0 ± 0.079 in)
	Angle (left, right) Degree minute (decimal degree)	Minimum	- 0° 3' (-0.05°)
		Nominal	0° 4' (0.07°)
Maximum		0° 11' (0.18°)	

Ball Joint

INFOID:000000001675553

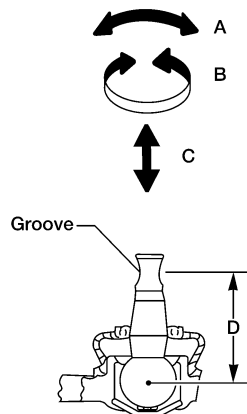

WEIA0131E

Ball joint position	Upper	Lower
---------------------	-------	-------

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)


Swinging force* "A"	11.4 - 145.5 N (1.16 - 14.8 kg, 2.56 - 32.7 lb)	11.0 - 140.7 N (1.12 - 14.35 kg, 2.47 - 31.63 lb)
Turning torque "B"	0.5 - 6.4 N·m (0.06 - 0.65 kg·m, 5 - 56 in-lb)	0.5 - 6.4 N·m (0.06 - 0.65 kg·m, 5 - 56 in-lb)
Vertical end play "C"	0 mm (0 in)	0 mm (0 in)
Height "D"	44 mm (1.73 in)	45.5 mm (1.79 in)

*: Measurement point is at the bolt groove of the ball stud.

Wheelarch Height (Unladen*)

INFOID:000000001675554

Unit: mm (in)

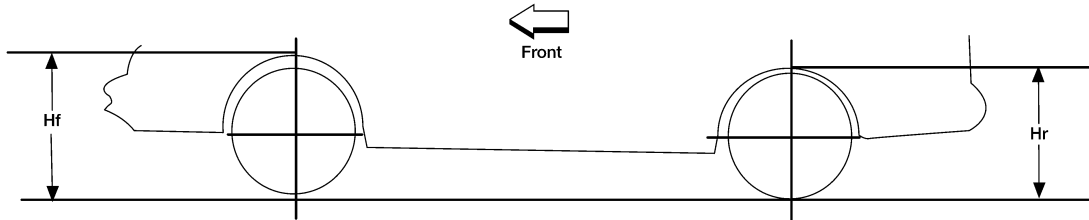

LEIA0085E

Engine	VQ40DE							VK56DE	
	2WD			Part time 4WD			Full time 4WD	2WD	4WD
Tire size	245/75R16	265/70R16	265/65R17	245/75R16	265/70R16	265/75R16	265/65R17	265/60R18	
Front wheelarch height (Hf)	867 (34.13)	865 (34.06)	865 (34.06)	875 (34.45)	873 (34.37)	889 (35.00)	874 (34.41)	868 (34.17)	876 (34.49)
Rear wheelarch height (Hr)	875 (34.45)	873 (34.37)	873 (34.37)	884 (34.80)	882 (34.72)	898 (35.35)	883 (34.76)	876 (34.49)	886 (34.88)

*1: Fuel, radiator coolant and engine oil full. Spare tire, jack, hand tools and mats in designated positions.