

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

A

ABS actuator	BR-32	A/C relay (manual A/C)	HA-33
ABS (anti-lock brake system).....	BR-29	A/C self-diagnoses (auto A/C).....	HA-78
ABS circuit diagram.....	BR-38	A/C service data specification.....	HA-169
ABS component parts and connector		A/C switch (auto A/C).....	HA-70
locations	BR-37	A/C switch (manual A/C)	HA-15
ABS control unit	BR-34	A/C symptom chart (auto A/C)	HA-77
ABS hydraulic circuit	BR-6	A/C symptom chart (manual A/C)	HA-22
ABS self-diagnosis	BR-43	A/C system description (auto A/C).....	HA-68
ABS symptom chart	BR-45	A/C trouble diagnoses (auto A/C)	HA-73
ABS system components	BR-30	A/C trouble diagnoses (manual A/C)	HA-18
ABS trouble diagnoses.....	BR-35	A/C wiring diagram (auto A/C)	HA-95
ABS wheel sensors	BR-31	A/C wiring diagram (manual A/C)	HA-37
ABS wiring diagram.....	BR-39	Accelerator control system.....	FE-2
A/C air flow (auto A/C)	HA-71	Accelerator wire adjustment.....	FE-2
A/C air flow (manual A/C)	HA-16	Air bag	RS-14
A/C circuit diagram (auto A/C)	HA-94	Air bag disposal.....	RS-18
A/C circuit diagram (manual A/C)	HA-36	Air bag module	RS-14
A/C component layout.....	HA-14	Air bag precautions	GI-2
A/C compressor clutch removal and		Air bag removal and installation.....	RS-14
installation	HA-156	Air bleeding for brake system	BR-5
A/C compressor description	HA-169	Air cleaner filter replacement.....	MA-17
A/C compressor mounting.....	HA-155	Air conditioner cut control	EC-15
A/C compressor precaution.....	HA-5	Air conditioning - See A/C.....	HA-12
A/C compressor special service tool.....	HA-8	Air conditioning system lubricants.....	MA-8
A/C control linkage adjustment (auto A/C).....	HA-132	Air conditioning system refrigerant.....	MA-8
A/C control linkage adjustment (manual A/C).....	HA-65	Air flow meter - See Mass air flow sensor.....	EC-87
A/C control operation (auto A/C).....	HA-69	Air mix door control linkage adjustment	
A/C control operation (manual A/C)	HA-15	(auto A/C).....	HA-132
A/C diagnostic work flow (auto A/C)	HA-73	Air mix door control linkage adjustment	
A/C diagnostic work flow (manual A/C)	HA-18	(manual A/C)	HA-66
A/C harness layout (auto A/C)	HA-90	Air mix. door motor (auto A/C).....	HA-138
A/C harness layout (manual A/C)	HA-33	Air mix. door motor (manual A/C)	HA-63
A/C HFC134a (R134a) system identification.....	HA-2	Alternator.....	EL-33
A/C HFC134a (R134a) system precaution	HA-3	Ambient sensor	HA-136
A/C HFC134a (R134a) system service		Antenna	EL-174
procedure	HA-149	Antenna - See Power antenna.....	EL-174
A/C HFC134a (R134a) system service tools.....	HA-6	Anti-freeze coolant	MA-8
A/C HFC134a system service equipment		Anti-freeze coolant mixture ratio	MA-9
precaution	HA-10	ASCD (automatic speed control device).....	EL-199
A/C lubricant (R134a).....	HA-151	A/T control DTC:P0600	EC-176
A/C lubrication oil	HA-151	AT control unit	AT-100
A/C operational check (auto A/C)	HA-74	AT diagnosis communication line.....	EC-201
A/C operational check (manual A/C).....	HA-19	AT fluid temperature sensor.....	AT-104
A/C performance chart (auto A/C)	HA-87	AT removal and installation.....	AT-124
A/C performance chart (manual A/C).....	HA-30	AT self-diagnoses	AT-44
A/C performance test diagnoses (auto A/C).....	HA-87	AT shift lock system	AT-115
A/C performance test diagnoses		AT trouble diagnoses	AT-13
(manual A/C)	HA-30	Audio	EL-167
A/C pressure switch (auto A/C).....	HA-130	Audio and A/C control removal and	
A/C pressure switch (manual A/C).....	HA-63	installation - See Instrument panel.....	BT-18
A/C relay (auto A/C)	HA-90	Autolamp	EL-57
		Automatic amplifier.....	HA-137
		Automatic transaxle number	GI-35
		Automatic transmission fluid	MA-8

ALPHABETICAL INDEX

Automatic transmission fluid replacement MA-21
 Auxiliary air control (AAC)..... EC-172
 Axle housing (rear)..... RA-9

B

Back door BT-10
 Back door opener - See Back door BT-10
 Back door trim BT-20
 Back-up lamp EL-62
 Battery EL-21
 Belt inspection (drive belt)..... MA-10
 Blower motor (auto A/C)..... HA-130
 Blower motor (manual A/C)..... HA-63
 Blower relay (auto A/C)..... HA-92
 Blower relay (manual A/C)..... HA-35
 Blower resistor..... HA-63
 Board-on lift..... GI-36
 Body alignment..... BT-50
 Boring/horning cylinder block..... EM-43
 Brake booster BR-16
 Brake fluid MA-8
 Brake fluid change BR-4
 Brake fluid level..... MA-21
 Brake fluid level and line check BR-4
 Brake hydraulic line..... BR-6
 Brake inspection..... MA-21
 Brake lines and cables inspection MA-21
 Brake lining temporary checking..... MA-23
 Brake master cylinder BR-13
 Brake pedal BR-11
 Bumper, front - See Front bumper..... BT-6
 Bumper, rear - See Rear bumper BT-10

C

Camshaft inspection..... EM-25
 Camshaft position sensor (CMPS)..... EC-150
 Camshaft position sensor inspection EC-153
 Charging system EL-30
 Chassis and body maintenance..... MA-20
 Cigarette lighter..... EL-160
 Circuit breaker..... EL-16
 Clearance lamp EL-64
 Closed loop control EC-116
 Coil spring (front)..... FA-22
 Combination meter..... EL-93
 Combination meter (needle type)..... EL-93
 Combination meter removal and installation -
 See Instrument panel..... BT-18
 Combination switch EL-36
 Compression pressure EM-7

Compressor clutch removal and installation HA-156
 Compressor description HA-169
 Compressor mounting HA-155 GI
 Compressor precaution HA-5
 Compressor special service tool HA-8
 Connecting rod EM-42 MA
 Connecting rod bearing clearance EM-46
 Connecting rod bushing clearance EM-47
 Consult for ECCS..... EC-40 EM
 Consult general information GI-32
 Control valve (AT) AT-150 LC
 Converter housing installation AT-211
 Coolant MA-8
 Coolant replacement MA-11 EC
 Cooling circuit (engine) LC-9
 Cooling fan LC-16
 Cooling fan control EC-204 FE
 Cooling fan control system..... LC-16
 Cooling fan motor (auto A/C) HA-90 AT
 Cooling fan motor inspection EC-214
 Cooling fan motor (manual A/C) HA-33
 Cooling fan relay (auto A/C)..... HA-90 FA
 Cooling fan relay inspection..... EC-214
 Cooling fan relay (manual A/C)..... HA-33
 Cornering lamp..... EL-71 RA
 Crank angle sensor built into distributor - See
 Camshaft position sensor EC-150 BR
 Crankcase emission control system - See
 positive crankcase ventilation EC-19
 Crankshaft assembly..... EM-49 ST
 Crankshaft bearing clearance EM-45
 Crankshaft inspection..... EM-44
 Crankshaft position sensor (OBD) DTC0802,
 P0335..... EC-146 RS
 Crankshaft position sensor (OBD) DTC0802,
 P0335 inspection EC-149 BT
 Cruise control - See ASCD EL-199
 Cylinder block..... EM-40 HA
 Cylinder block boring..... EM-43
 Cylinder head EM-20
 Cylinder head bolt tightening EM-34 EL

D

Data link connector for Consult..... EC-40
 Daytime light system EL-46
 Daytime running light - See Daytime light
 system EL-46
 Detonation sensor - See Knock sensor EC-143
 Diagnostic trouble code (DTC) chart EC-59
 Diagnostic trouble code (DTC) for ECCS
 OBD system..... EC-29
 Differential gear (FF AT)..... AT-194

IDX

ALPHABETICAL INDEX

Dimensions.....	GI-35
Distributor.....	EC-14
Distributor ignition (DI) system.....	EC-14
Dome light - See Interior lamp.....	EL-84
Door, front - See Front door.....	BT-13
Door mirror.....	BT-48
Door, rear - See Rear door.....	BT-16
Door trim.....	BT-20
Drive plate runout.....	EM-48
Drive shaft (front).....	FA-13
Dropping resistor (AT).....	AT-106
Dual pressure switch (auto A/C).....	HA-130
Dual pressure switch (manual A/C).....	HA-64

E

ECCS basic inspection.....	EC-57
ECCS circuit diagram.....	EC-6
ECCS component parts location.....	EC-8
ECCS fail-safe system.....	EC-70
ECCS on-board diagnostic system.....	EC-29
ECCS relay inspection.....	EC-84
ECCS symptom matrix chart.....	EC-71
ECCS system diagram and chart.....	EC-7
ECCS trouble diagnoses.....	EC-53
ECM input/output signal inspection.....	EC-78
EGR control (EGRC) - BPT valve.....	EC-163
EGR control (EGRC) - solenoid valve.....	EC-193
EGR temperature sensor.....	EC-197
EGR temperature sensor inspection.....	EC-200
EGR valve 0VAP canister control solenoid valve inspection.....	EC-196
EGR valve inspection.....	EC-162
EGRC - BPT valve inspection.....	EC-164
EGRC-solenoid valve inspection.....	EC-193
Electric sun roof.....	EL-158
Electric unit.....	Foldout page
Electrical units location.....	EL-258
Electronic ignition system.....	EC-14
Energy conserving oils.....	MA-8
Engine control module (ECM).....	EC-179
Engine coolant temperature sensor (ECTS).....	EC-97
Engine coolant temperature sensor (ECTS) P0115, DTC0103.....	EC-97
Engine coolant temperature sensor (ECTS) P0115, DTC0103 inspection.....	EC-100
Engine coolant temperature sensor (ECTS) P0125, DTC0908.....	EC-106
Engine coolant temperature sensor (ECTS) P0125, DTC0908 inspection.....	EC-110
Engine oil.....	MA-8
Engine oil filter replacement.....	MA-18
Engine oil precautions.....	GI-4

Engine oil replacement.....	MA-17
Engine outer component parts.....	EM-5
Engine removal.....	EM-37
Engine serial number.....	GI-35
EVAP canister control.....	EC-17
EVAP canister control solenoid valve inspection.....	EC-193
EVAP canister inspection.....	EC-17
EVAP canister purge control.....	EC-17
EVAP canister purge control solenoid valve.....	EC-193
EVAP canister purge volume control valve.....	EC-17
EVAP Vapor lines inspection.....	MA-19
Evaporative emission (EVAP) system.....	EC-17
Exhaust gas recirculation (EGR) system.....	EC-155
Exhaust gas recirculation (EGR) valve.....	EC-155
Exhaust system.....	FE-6
Exhaust system inspection.....	MA-20
Exterior.....	BT-26
Exterior lamp.....	EL-62

F

Fan control amp.....	HA-145
Fan switch (manual A/C).....	HA-63
Fast idle cam (FIC) inspection and adjustment.....	EC-22
Final drive (FF AT).....	AT-194
Finisher, interior - See Trim.....	BT-20
Floor trim.....	BT-20
Fluid temperature sensor (AT).....	AT-104
Fluids.....	MA-8
Foot lamp.....	EL-84
Forward clutch.....	AT-171
Freeze frame data.....	EC-30
Front axle.....	FA-9
Front bumper.....	BT-6
Front disc brake.....	BR-19
Front door.....	BT-13
Front heated oxygen sensor heater inspection.....	EC-119
Front heated oxygen sensor (HO2S).....	EC-117
Front heated oxygen sensor (HO2S) heater ...	EC-117
Front oxygen sensor (O2S).....	EC-111
Front oxygen sensor (O2S) monitor.....	EC-31
Front passenger air bag.....	RS-16
Front seat.....	BT-32
Front seat belt.....	RS-4
Front suspension.....	FA-21
Front washer.....	EL-118
Front wiper.....	EL-118
Fuel check valve inspection.....	EC-18
Fuel cut control (at no load & high engine speed).....	EC-16

ALPHABETICAL INDEX

Fuel filter replacement.....	MA-16
Fuel gauge	EL-94
Fuel injection system.....	EC-129
Fuel injector.....	EC-215
Fuel line inspection	MA-16
Fuel precautions.....	GI-5
Fuel pressure check.....	EC-20
Fuel pressure regulator.....	EC-21
Fuel pressure release	EC-20
Fuel pump	EC-220
Fuel pump control	EC-220
Fuel pump inspection.....	EC-224
Fuel pump relay inspection.....	EC-224
Fuel system.....	FE-3
Fuel tank vacuum relief valve inspection.....	EC-18
Fuse.....	EL-16
Fuse block.....	Foldout page
Fusible link	EL-16

G

Garage jack and safety stand.....	GI-37
Gauges.....	EL-92
Generator	EL-33
Generator - See Alternator.....	EL-33
Generic scan tool (GST)	EC-51
Grease.....	MA-8
Ground distribution.....	EL-17

H

Harness connector	EL-3
Harness layout	EL-261
Hazard warning lamp	EL-66
Headlamp	EL-39
Headlamp aiming control	EL-55
Headlamp levelizer - See Headlamp aiming control	EL-55
Headlining - See Roof trim.....	BT-24
Heated mirror	EL-154
Heated oxygen sensor heater (front) inspection.....	EC-119
Heated oxygen sensor (HO2S) (front).....	EC-111
Heated oxygen sensor (HO2S) heater (front).....	EC-111
Heated oxygen sensor (HO2S) heater (rear) ...	EC-124
Heated oxygen sensor (rear)	EC-120
Heater mirror.....	EL-154
Height (Dimensions).....	GI-35
HFC134a (R134a) system identification	HA-2
HFC134a (R134a) system precaution	HA-3
HFC134a (R134a) system service procedure ..	HA-149

HFC134a (R134a) system service tools.....	HA-6
HFC134a system service equipment precaution	HA-10
High clutch.....	AT-167
Hood.....	BT-6
Horn.....	EL-160
How to erase DTC for ECCS OBD system	EC-29
How to follow flow chart in trouble diagnoses	GI-28
How to perform efficient diagnosis for an electrical incident	GI-17
How to read wiring diagrams	GI-8
How to use this manual	GI-6
Hydraulic lash adjuster inspection	EM-31

I

IACV-AAC valve inspection.....	EC-175
IACV-FICD solenoid valve.....	EC-228
Idle air control (IACV) - fast idle control	EC-228
Idle air control valve (IACV).....	EC-172
Idle mixture ratio inspection	EC-23
Idle speed inspection	EC-23
Ignition coil inspection.....	EC-188
Ignition timing inspection.....	EC-23
Ignition wire inspection.....	EC-142
Illuminated entry system	EL-182
Illumination	EL-77
In vehicle sensor	HA-135
Inhibitor switch.....	AT-105
Injector inspection	EC-217
Injector removal and installation	EC-21
Instrument panel.....	BT-18
Intake air temperature sensor.....	EC-92
Intake air temperature sensor inspection.....	EC-96
Intake door control linkage adjustment (auto A/C).....	HA-132
Intake door control linkage adjustment (manual A/C).....	HA-66
Intake door motor (auto A/C)	HA-141
Intake door motor (manual A/C).....	HA-66
Intake manifold.....	EM-5
Interior	BT-20
Interior lamp	EL-77

J

Joint connector (J/C).....	Foldout page
----------------------------	--------------

GI

MA

EM

LC

EC

FE

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

K

Keyless entry system - See Multi-remote control system.....	EL-182
Knock sensor (KS).....	EC-143
Knock sensor (KS) inspection.....	EC-145
Knuckle spindle.....	FA-10

L

Leaf spring (rear).....	RA-11
Length (Dimensions).....	GI-35
License lamp.....	EL-64
Line pressure solenoid valve.....	AT-104
Line pressure test (AT).....	AT-110
Liquid gasket application.....	EM-2
Location of electrical units.....	EL-258
Low and reverse brake.....	AT-177
LSV (Load sensing valve).....	BR-8
Lubricant (R134a) A/C.....	HA-151
Lubricants.....	MA-8
Lubrication circuit (engine).....	LC-4
Lubrication oil A/C.....	HA-151
Lubrication-locks, hinges and hood latches.....	MA-24

M

Magnet clutch.....	HA-156
Maintenance.....	MA-3
Maintenance (engine).....	MA-10
Maintenance general.....	MA-3
Maintenance periodic.....	MA-5
Maintenance schedule (1).....	MA-5
Maintenance schedule (2).....	MA-5
Malfunction indicator lamp (MIL).....	EC-31
Mass air flow sensor inspection.....	EC-91
Mass air flow sensor (MAFS).....	EC-87
Master cylinder (brake).....	BR-13
Meter and gauges.....	EL-92
MIL & Data link connectors circuit.....	EC-235
Mirror defogger.....	EL-154
Mirror, door - See Door mirror.....	BT-48
Misfire.....	EC-139
Mode door control linkage adjustment (auto A/C).....	HA-132
Mode door control linkage adjustment (manual A/C).....	HA-65
Mode door motor (auto A/C).....	HA-140
Mode door motor (manual A/C).....	HA-65
Model variation.....	GI-33
Multi purpose grease.....	MA-8

Multiport fuel injection (MFI) system.....	EC-12
Multiport fuel injection precautions.....	GI-4
Multi-remote control system.....	EL-182

O

Oil change (capacity).....	MA-8
Oil change (interval).....	MA-5
Oil pan (engine).....	EM-8
Oil pressure (engine).....	LC-5
Oil pressure relief valve (engine).....	LC-8
Oil pump (AT).....	AT-146
Oil pump (engine).....	LC-5
Oil pump regulator valve (engine).....	LC-8
Oil seal replacement (engine).....	EM-18
Out side mirror.....	BT-48
Overdrive switch.....	AT-105
Overrun clutch.....	AT-171
Overrun clutch solenoid valve.....	AT-104
Oversize piston.....	EM-44
Oxygen sensor (O2S) (front).....	EC-111

P

Parking brake control.....	BR-27
Parking drum brake.....	BR-23
Park/Neutral position switch.....	EC-181
PCV (positive crankcase ventilation) inspection.....	EC-19
Personal lamp.....	EL-84
Piston assembly.....	EM-48
Piston pin inspection.....	EM-41
Piston ring inspection.....	EM-42
Piston to bore clearance.....	EM-43
Power antenna.....	EL-167
Power door lock.....	EL-137
Power door mirror.....	EL-153
Power seat.....	EL-156
Power steering fluid.....	MA-8
Power steering fluid level.....	ST-5
Power steering gear.....	ST-14
Power steering hydraulic pressure.....	ST-7
Power steering oil pressure switch.....	EC-225
Power steering oil pump.....	ST-20
Power steering system bleeding.....	ST-5
Power supply routing.....	EL-6
Power transistor & ignition coil.....	EC-184
Power transistor inspection.....	EC-188
Power window.....	EL-129
Precautions (General).....	GI-2
Pressure test (AT).....	AT-110

ALPHABETICAL INDEX

R

R134a - See HFC134a	HA-2
Radiator	LC-15
Radiator fan - See Cooling fan	LC-16
Radio - See Audio	EL-167
Rear axle	RA-6
Rear axle (drum brake type)	RA-6
Rear bumper	BT-10
Rear door	BT-16
Rear drum brake	BR-24
Rear heated oxygen sensor (HO2S)	EC-120
Rear heated oxygen sensor (HO2S) heater	EC-124
Rear seat belt	RS-6
Rear side window	BT-46
Rear suspension	RA-10
Rear washer	EL-123
Rear window	BT-45
Rear window defogger	EL-161
Rear wiper	EL-123
Refilling engine coolant	LC-12
Refrigerant connection precaution	HA-4
Refrigerant discharging evacuating charging	HA-149
Refrigerant general precaution	HA-3
Refrigerant lines	HA-153
Refrigeration cycle	HA-12
Resistor inspection	EC-188
Reverse clutch	AT-164
Revolution sensor (AT)	AT-106
Road wheel size	GI-35
Roof trim	BT-24
Room lamp	EL-84
Room lamp - See Interior lamp	EL-84
Rotor disc (front)	FA-9

S

SAE J1930 terminology list	GI-40
Seal - See Exterior	BT-26
Seat belt, front - See Front seat belt	RS-4
Seat belt inspection	MA-25
Seat belt, rear - See Rear seat belt	RS-6
Seat, front - See Front seat	BT-32
Seat, second (2nd) - See Second (2nd) seat	BT-34
Seat, third (3rd) - See Third (3rd) seat	BT-36
Second (2nd) seat	BT-34
Self-diagnostic results	EC-31
Shift lock system	AT-115
Shift schedule	AT-35
Shift solenoid valve (AT)	AT-104
Shock absorber (front)	FA-22
Shock absorber (rear)	RA-13

Side trim	BT-20
Side window - See Rear side window	BT-46
SMJ (super multiple junction)	Foldout page
Spark plug replacement	MA-19
Speedometer	EL-94
Spiral cable	RS-14
Spot lamp	EL-84
Spring (Wheelarch) height	FA-5
SRS - See Supplemental Restraint System	RS-10
SRS Trouble diagnoses	RS-22
SRS Wiring diagram	RS-25
Stabilizer bar (front)	FA-23
Stabilizer bar (rear)	RA-13
Stall test (AT)	AT-107
Standardized relay	EL-4
Starter	EL-28
Starting system	EL-25
Steering gear and linkage inspection	MA-23
Steering gear oil level	MA-23
Steering knuckle	FA-10
Steering linkage	ST-14
Steering switch	EL-38
Steering wheel and column	ST-9
Steering wheel play	ST-6
Steering wheel turning force	ST-6
Step lamp	EL-84
Stop lamp	EL-64
Strut (front)	FA-22
Sun roof	BT-41
Sun roof, electric - See Electric sun roof	EL-158
Sunload sensor	HA-136
Supplemental Restraint System	RS-10
Symbols and abbreviations	GI-7

T

Tachometer	EL-94
Tail lamp	EL-64
Theft warning system	EL-221
Thermostat	LC-13
Third (3rd) seat	BT-36
Three way catalyst	EC-165
Three way catalyst precautions	GI-4
Throttle bodies	EM-6
Throttle drum adjustment	FE-2
Throttle position sensor adjustment	EC-57
Throttle position sensor inspection	EC-105
Throttle position sensor (TPS)	EC-101
Throttle position switch	AT-106
Tie-rod	ST-16
Tie-rod ball joints	ST-17
Tightening torque of standard bolts	GI-39
Timing belt	EM-11

ALPHABETICAL INDEX

Tire rotation	MA-23
Tire size	GI-35
Torque converter clutch solenoid valve	AT-104
Torque converter installation	AT-216
Tow truck towing	GI-38
Transverse link (front)	FA-24
Tread-FR&RR (Dimensions)	GI-35
Trim	BT-20
Trunk room lamp	EL-84
Turn signal lamp	EL-66
Two trip detection logic	EC-29
Two-pole lift	GI-37

U

Under body	BT-53
------------------	-------

V

Vacuum hose (brake system)	BR-18
Vacuum hose drawing (ECCS)	EC-10
Valve guide inspection	EM-28
Valve seat inspection	EM-30
Valve spring inspection	EM-31
Vehicle identification number	GI-34
Vehicle recovery (Freeing a stuck vehicle)	GI-38
Vehicle speed sensor (VSS)	EC-168
Vent mode switch (auto A/C)	HA-70
Vent mode switch (manual A/C)	HA-15
Viscosity number (SAE)	MA-9

W

Warning buzzer	EL-109
Warning chime	EL-101
Warning lamps	EL-101
Washer, front	EL-118
Washer, rear	EL-123
Water cock solenoid valve (auto A/C)	HA-90
Water cock solenoid valve (manual A/C)	HA-33
Water pump	LC-11
Water temperature gauge	EL-94
Weatherstrip - See Exterior	BT-26
Wheel alignment (front)	FA-6
Wheel alignment (rear)	RA-5
Wheel balance	MA-23
Wheel bearing (front axle)	FA-6
Wheel bearing (rear)	RA-4
Wheel hub and steering knuckle	FA-10
Wheel hub (front)	FA-10
Wheel hub (rear)	RA-6
Wheel sensors (ABS)	BR-31
Wheel sensors (TCS)	BR-31
Wheel size	GI-35
Wheelarch height	FA-5
Wheelbase (Dimensions)	GI-35
Wide open & closed throttle position (CTP) switch	EC-101
Width (Dimensions)	GI-35
Window, rear - See Rear window	BT-45
Window, rear side - See Rear side window	BT-46
Windshield	BT-44
Windshield washer - See Front washer	EL-118
Windshield wiper - See Front wiper	EL-118
Wiper and washer	EL-118
Wiper, front	EL-118
Wiper, rear	EL-123
Wrist pin - See Piston pin inspection	EM-41