

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

A

<p>AAC/V - Wiring diagram.....EC-181</p> <p>ABS - Wiring diagramBR-39</p> <p>ABS (anti-lock brake system).....BR-29</p> <p>ABS sensor rotor..... FA-9</p> <p>A/C, A - Wiring diagram HA-95</p> <p>A/C air flow (auto A/C) HA-71</p> <p>A/C air flow (manual A/C) HA-16</p> <p>A/C component layout.....HA-14</p> <p>A/C compressor clutch removal and installationHA-157</p> <p>A/C compressor descriptionHA-170</p> <p>A/C compressor mounting..... HA-156</p> <p>A/C compressor precaution..... HA-5</p> <p>A/C compressor special service tool.....HA-8</p> <p>A/C control linkage adjustment (auto A/C).....HA-132</p> <p>A/C control linkage adjustment (manual A/C).....HA-66</p> <p>A/C control operation (auto A/C)..... HA-69</p> <p>A/C control operation (manual A/C)..... HA-15</p> <p>A/C diagnostic work flow (auto A/C) HA-73</p> <p>A/C diagnostic work flow (manual A/C) HA-18</p> <p>A/C harness layout (auto A/C) HA-90</p> <p>A/C harness layout (manual A/C) HA-34</p> <p>A/C HFC134a (R134a) system identification HA-2</p> <p>A/C HFC134a (R134a) system precaution HA-3</p> <p>A/C HFC134a (R134a) system service procedureHA-150</p> <p>A/C HFC134a (R134a) system service toolsHA-6</p> <p>A/C HFC134a system service equipment precaution HA-10</p> <p>A/C lubricant (R134a)..... HA-152</p> <p>A/C lubrication oil HA-152</p> <p>A/C, M - Wiring diagram HA-38</p> <p>A/C operational check (auto A/C) HA-74</p> <p>A/C operational check (manual A/C)..... HA-19</p> <p>A/C performance chart (auto A/C) HA-87</p> <p>A/C performance chart (manual A/C)..... HA-30</p> <p>A/C performance test diagnoses (auto A/C) HA-87</p> <p>A/C performance test diagnoses (manual A/C) HA-30</p> <p>A/C pressure switch (auto A/C)..... HA-130</p> <p>A/C pressure switch (manual A/C)..... HA-64</p> <p>A/C relay (auto A/C)..... HA-90</p> <p>A/C relay (manual A/C) HA-34</p> <p>A/C self-diagnoses (auto A/C)..... HA-78</p> <p>A/C service data specification..... HA-170</p> <p>A/C switch (auto A/C)..... HA-70</p> <p>A/C switch (manual A/C)..... HA-15</p> <p>A/C symptom chart (auto A/C)..... HA-77</p> <p>A/C symptom chart (manual A/C) HA-22</p> <p>A/C system description (auto A/C)..... HA-68</p> <p>A/C trouble diagnoses (auto A/C) HA-73</p>	<p>A/C trouble diagnoses (manual A/C) HA-18</p> <p>Accelerator control system..... FE-2</p> <p>Accelerator wire adjustment..... FE-2</p> <p>Air bag..... RS-15</p> <p>Air bag disposal..... RS-19</p> <p>Air bag precautions GI-2</p> <p>Air bleeding for brake system BR-5</p> <p>Air cleaner filter replacement MA-17</p> <p>Air conditioner cut control EC-17</p> <p>Air conditioning - See A/C..... HA-12</p> <p>Air flow meter - See Mass air flow sensor..... EC-89</p> <p>Air mix door control linkage adjustment (auto A/C)..... HA-132</p> <p>Air mix door control linkage adjustment (manual A/C)..... HA-67</p> <p>Air mix. door motor (auto A/C)..... HA-138</p> <p>Air mix. door motor (manual A/C) HA-64</p> <p>Alternator EL-33</p> <p>Ambient sensor HA-136</p> <p>Antenna EL-145</p> <p>Antenna - See Power antenna..... EL-145</p> <p>Anti-lock brake system - See ABS..... BR-29</p> <p>Anti-lock brake system - Wiring diagram BR-39</p> <p>ASCD (automatic speed control device)..... EL-156</p> <p>ASCD - Wiring diagram..... EL-160</p> <p>A/T - Wiring diagram AT-11</p> <p>A/T control EC-186</p> <p>A/T control unit..... AT-59</p> <p>A/T diagnosis communication line EC-217</p> <p>A/T fluid temperature sensor..... AT-68</p> <p>A/T removal and installation..... AT-143</p> <p>A/T self-diagnoses..... AT-26</p> <p>A/T shift lock system AT-134</p> <p>A/T shift lock system - Wiring diagram AT-135</p> <p>A/T trouble diagnoses AT-36</p> <p>AT/C - Wiring diagram..... EC-186</p> <p>ATDIAG - Wiring diagram EC-217</p> <p>Audio EL-135</p> <p>Audio and A/C control removal and installation - See Instrument panel BT-18</p> <p>AUDIO - Wiring diagram EL-138</p> <p>Auto air conditioner - wiring diagram HA-95</p> <p>Autolamp EL-57</p> <p>Automatic speed control system - See ASCD .. EL-156</p> <p>Automatic transaxle number GI-37</p> <p>Automatic transmission fluid replacement MA-21</p> <p>Auxiliary air control (AAC)..... EC-181</p> <p>Axle housing (rear)..... RA-8</p>
---	---

B

Back door.....	BT-10
Back door opener - See Back door.....	BT-10

ALPHABETICAL INDEX

Back door trim.....	BT-22
Back door window.....	BT-47
BACK/L - Wiring diagram.....	EL-62
Back window.....	BT-47
Back-up lamp.....	EL-62
Ball joint front axle.....	FA-24
Battery.....	EL-20
Blower motor (auto A/C).....	HA-130
Blower motor (manual A/C).....	HA-64
Blower relay (auto A/C).....	HA-92
Blower relay (manual A/C).....	HA-36
Blower resistor.....	HA-64
Board-on lift.....	GI-39
Body alignment.....	BT-52
Boring/honing cylinder block.....	EM-43
BPT valve.....	EC-173
Brake booster.....	BR-16
Brake fluid change.....	BR-4
Brake fluid level.....	MA-21
Brake fluid level and line check.....	BR-4
Brake hydraulic line.....	BR-6
Brake inspection.....	MA-21
Brake lines and cables inspection.....	MA-21
Brake lining temporary checking.....	MA-23
Brake master cylinder.....	BR-13
Brake pedal.....	BR-11
Bumper, front.....	BT-6
Bumper, rear.....	BT-10

C

Camshaft inspection.....	EM-25
Camshaft position sensor (CMPS).....	EC-157
Canister - See EVAP canister.....	EC-19
CHARGE - Wiring diagram.....	EL-31
Charging system.....	EL-30
Chassis and body maintenance.....	MA-20
Check connector for ECCS checker box.....	EC-51
CHIME - Wiring diagram.....	EL-110
Cigarette lighter.....	EL-128
Circuit breaker.....	EL-15
CKPS - Wiring diagram.....	EC-152, EC-201
Clearance lamp.....	EL-64
Closed loop control.....	EC-121
CMPS - Wiring diagram.....	EC-157
Coil spring (front).....	FA-22
Collision diagnosis.....	RS-43
Combination meter.....	EL-93
Combination meter (needle type).....	EL-93
Combination meter removal and installation - See Instrument panel.....	BT-18
Combination switch.....	EL-36
Compression pressure.....	EM-7

Compressor clutch removal and installation.....	HA-157
Compressor description.....	HA-170
Compressor mounting.....	HA-156
Compressor precaution.....	HA-5
Compressor special service tool.....	HA-8
Connecting rod.....	EM-42
Connecting rod bearing clearance.....	EM-46
Connecting rod bushing clearance.....	EM-47
Console box - See Instrument panel.....	BT-18
CONSULT for ECCS.....	EC-51
CONSULT general information.....	GI-34
Control valve (A/T).....	AT-170
Converter housing installation.....	AT-231
Coolant mixture ratio.....	MA-9
Coolant replacement.....	MA-11
COOL/F - Wiring diagram.....	EC-220
Cooling circuit (engine).....	LC-9
Cooling fan.....	LC-15
Cooling fan control.....	EC-220
Cooling fan motor.....	EC-231
Cooling fan motor (auto A/C).....	HA-90
Cooling fan motor (manual A/C).....	HA-34
Cooling fan relay.....	EC-231
Cooling fan relay (auto A/C).....	HA-90
Cooling fan relay (manual A/C).....	HA-34
CORNER - Wiring diagram.....	EL-72
Cornering lamp.....	EL-71
Crank angle sensor built into distributor - See Camshaft position sensor.....	EC-157
Crankcase emission control system - See positive crankcase ventilation.....	EC-21
Crankcase ventilation system - See positive crankcase ventilation.....	EC-21
Crankshaft.....	EM-44
Crankshaft position sensor (OBD).....	EC-152
Crankshaft position sensor (OBD) cog chipping.....	EC-201
Cruise control - See ASCD.....	EL-156
Cylinder block.....	EM-40
Cylinder block boring.....	EM-43
Cylinder head.....	EM-20
Cylinder head bolt tightening.....	EM-34

D

Data link connector for Consult.....	EC-51
Daytime light system.....	EL-46
Daytime running light - See Daytime light system.....	EL-46
DEF - Wiring diagram.....	EL-130
Detonation sensor - See Knock sensor.....	EC-149
Diagnosis sensor unit.....	RS-13
Diagnostic trouble code (DTC) chart.....	EC-70

GI
MA
EM
LC
EC
FE
AT
FA
RA
BR
ST
RS
BT
HA
EL

IDX

ALPHABETICAL INDEX

Differential gear (FF A/T)	AT-214
Dimensions.....	GI-37
Distributor	EC-16
Distributor ignition (DI) system.....	EC-16
D/LOCK - Wiring diagram	EL-190
Dome light - See Interior lamp.....	EL-84
Door, front.....	BT-13
Door mirror	BT-50
Door, rear	BT-16
Door trim.....	BT-22
Drive belt inspection.....	MA-10
Drive plate runout.....	EM-48
Drive shaft (front)	FA-13
Dropping resistor (A/T).....	AT-99
DTRL - Wiring diagram	EL-50
Dual pressure switch (auto A/C)	HA-130
Dual pressure switch (manual A/C)	HA-65

E

ECCS basic inspection.....	EC-68
ECCS circuit diagram.....	EC-8
ECCS component parts location.....	EC-10
ECCS fail-safe system	EC-71
ECCS on board diagnostic system	EC-31
ECCS relay.....	EC-85
ECCS symptom matrix chart.....	EC-72
ECCS system diagram and chart	EC-9
ECM input/output signal.....	EC-79
ECTS - Wiring diagram.....	EC-100, EC-111
EGR control (EGRC) - BPT valve.....	EC-172
EGR control (EGRC) - solenoid valve	EC-206
EGR control valve	EC-170
EGR temperature sensor	EC-211
EGR valve & EVAP canister purge control solenoid valve	EC-210
EGRC1 - Wiring diagram	EC-163
EGRC/V - Wiring diagram.....	EC-206
EGR/TS - Wiring diagram	EC-211
Electric sun roof	EL-150
Electrical diagnoses	GI-18
Electrical unit.....	Foldout page
Electrical units location.....	EL-251
Electronic ignition system.....	EC-16
Engine compartment	BT-53
Engine control module (ECM).....	EC-189
Engine coolant temperature sensor (ECTS)	EC-100, EC-111
Engine oil filter replacement.....	MA-18
Engine oil precautions.....	GI-5
Engine oil replacement.....	MA-17
Engine outer component parts.....	EM-5
Engine removal	EM-37

Engine room - See Engine compartment	BT-53
Engine serial number	GI-37
EVAP canister purge control solenoid valve.....	EC-206
EVAP vapor lines inspection	MA-19
Evaporative emission (EVAP) system.....	EC-19
Exhaust gas recirculation (EGR) valve	EC-163
Exhaust system.....	FE-6
Exhaust system inspection.....	MA-20
Exterior	BT-28
Exterior lamp	EL-62

F

Fan control amp.....	HA-145
Fan switch	HA-64
Fast idle cam (FIC)	EC-24
Fast idle cam (FIC) inspection and adjustment.....	EC-24
FICD - Wiring diagram	EC-248
Final drive (FF A/T)	AT-214
Finisher, interior - See Trim.....	BT-22
Floor trim	BT-22
Flow charts.....	GI-30
Fluid temperature sensor (A/T).....	AT-68
Fluids	MA-8
Foot lamp	EL-84
Forward clutch.....	AT-191
F/PUMP - Wiring diagram	EC-238
Freeze frame data.....	EC-33, EC-54
FRO2 - Wiring diagram	EC-116
FRO2/H - Wiring diagram	EC-122
Front axle	FA-9
Front bumper.....	BT-6
Front disc brake	BR-19
Front door.....	BT-13
Front heated oxygen sensor (HO2S).....	EC-116
Front heated oxygen sensor (HO2S) heater	EC-122
Front oxygen sensor (O2S).....	EC-116
Front oxygen sensor (O2S) monitor	EC-42
Front passenger air bag.....	RS-17
Front seat.....	BT-34
Front seat belt	RS-4
Front suspension.....	FA-21
Front washer	EL-117
Front wiper	EL-117
FUEL - Wiring diagram	EC-135, EC-140
Fuel check valve	EC-20
Fuel cut control (at no load & high engine speed)	EC-18
Fuel filter replacement.....	MA-16
Fuel gauge	EL-94
Fuel injection system.....	EC-135, EC-140
Fuel injector.....	EC-232

ALPHABETICAL INDEX

Fuel line inspection	MA-16
Fuel precautions	GI-6
Fuel pressure check.....	EC-22
Fuel pressure regulator.....	EC-23
Fuel pressure release	EC-22
Fuel pump	EC-238
Fuel pump and gauge.....	FE-5
Fuel pump relay	EC-243
Fuel system.....	FE-3
Fuse.....	EL-15
Fuse block.....	Foldout page
Fusible link	EL-15

G

Garage jack and safety stand.....	GI-39
Gauges	EL-92
Generator	EL-33
Generator - See Alternator.....	EL-33
Generic scan tool (GST).....	EC-62
Grease.....	MA-8
Ground distribution.....	EL-16

H

Harness connector	EL-3
Harness layout	EL-254
Hazard warning lamp	EL-66
Headlamp	EL-39
Headlamp aiming control	EL-55
Headlamp leveler - See Headlamp aiming control	EL-55
Headlining - See Roof trim.....	BT-26
Heated oxygen sensor (HO2S) (front).....	EC-116
Heated oxygen sensor (HO2S) heater (front).....	EC-122
Heated oxygen sensor (HO2S) heater (rear) ...	EC-130
Heated oxygen sensor (rear)	EC-126
Heater mirror	EL-153
Height (Dimensions).....	GI-37
HFC134a (R134a) system identification	HA-2
HFC134a (R134a) system precaution	HA-3
HFC134a (R134a) system service procedure ..	HA-150
HFC134a (R134a) system service tools.....	HA-6
HFC134a system service equipment precaution	HA-10
High clutch.....	AT-187
H/LAMP - Wiring diagram	EL-42
H/MIRROR - Wiring diagram	EL-153
Hood.....	BT-6
Horn.....	EL-128
HORN - Wiring diagram.....	EL-128

How to erase DTC for ECCS OBD system	EC-40
HP/SW - Wiring diagram.....	EC-254
Hydraulic lash adjuster inspection	EM-31

I

IACV-AAC valve inspection.....	EC-185
IACV-FICD solenoid valve.....	EC-248
IATS - Wiring diagram.....	EC-95
Identification plate	GI-36
Idle air control (IACV) - fast idle control	EC-248
Idle air control valve (IACV).....	EC-181
Idle mixture ratio.....	EC-25
Idle speed.....	EC-25
Ignition coil	EC-200
Ignition timing	EC-25
Ignition wire inspection.....	EC-148
IGN/SG - Wiring diagram	EC-195
Illuminated entry system	EL-201
Illumination	EL-77
ILL - Wiring diagram.....	EL-80
In vehicle sensor	HA-135
Inhibitor switch.....	AT-63, EC-191
INJECT - Wiring diagram	EC-232
Injector.....	EC-234
Injector removal and installation	EC-23
Instrument panel.....	BT-18
Intake air temperature sensor.....	EC-95
Intake door control linkage adjustment (auto A/C).....	HA-132
Intake door control linkage adjustment (manual A/C).....	HA-67
Intake door motor (auto A/C)	HA-141
Intake door motor (manual A/C).....	HA-67
Intake manifold.....	EM-5
Interior	BT-22
Interior lamp	EL-77
INT/L - Wiring diagram.....	EL-88

J

Jacking points.....	GI-38
Joint connector (J/C).....	Foldout page

K

Keyless entry system - See Multi-remote control system.....	EL-201
Knock sensor (KS)	EC-149
Knuckle spindle	FA-10
KS - Wiring diagram.....	EC-149

ALPHABETICAL INDEX

L

Leaf spring (rear).....	RA-10
Length (Dimensions).....	GI-37
License lamp.....	EL-64
Lifting points.....	GI-38
Line pressure solenoid valve.....	AT-97
Line pressure test (A/T).....	AT-132
Liquid gasket application.....	EM-2
Location of electrical units.....	EL-251
Low and reverse brake.....	AT-197
LSV (Load sensing valve).....	BR-8
Lubricant (R134a) A/C.....	HA-152
Lubricants.....	MA-8
Lubrication circuit (engine).....	LC-4
Lubrication oil A/C.....	HA-152
Lubrication-locks, hinges and hood latches.....	MA-24

M

MAFS - Wiring diagram.....	EC-89
Magnet clutch.....	HA-157
MAIN - Wiring diagram.....	EC-85
Maintenance.....	MA-3
Maintenance (engine).....	MA-10
Malfunction indicator lamp (MIL).....	EC-42
Manual air conditioner - wiring diagram.....	HA-38
Mass air flow sensor (MAFS).....	EC-89
Master cylinder (brake).....	BR-13
Meter.....	EL-92
METER - Wiring diagram.....	EL-94
MIL & Data link connectors circuit.....	EC-257
MIL/DL - Wiring diagram.....	EC-257
Mirror defogger.....	EL-153
Mirror, door.....	BT-50
Mirror, out side.....	BT-50
MIRROR - Wiring diagram.....	EL-152
Misfire.....	EC-145
Mode door control linkage adjustment (auto A/C).....	HA-132
Mode door control linkage adjustment (manual A/C).....	HA-66
Mode door motor (auto A/C).....	HA-140
Mode door motor (manual A/C).....	HA-66
Model variation.....	GI-35
Molding - See Exterior.....	BT-28
Multiport fuel injection (MFI) system.....	EC-14
Multiport fuel injection precautions.....	GI-6
Multi-remote control system.....	EL-201
MULTI - Wiring diagram.....	EL-205

O

Oil change (capacity).....	MA-8
Oil change (interval).....	MA-5
Oil pan (engine).....	EM-8
Oil pressure (engine).....	LC-5
Oil pressure relief valve (engine).....	LC-8
Oil pump (A/T).....	AT-166
Oil pump (engine).....	LC-5
Oil pump regulator valve (engine).....	LC-8
Oil seal replacement (engine).....	EM-18
Out side mirror.....	BT-50
Overdrive control switch.....	AT-63
Overrun clutch.....	AT-191
Overrun clutch solenoid valve.....	AT-108
Oversize piston.....	EM-44
Oxygen sensor (O2S) (front).....	EC-116

P

Pantograph jack.....	GI-39
P/ANT - Wiring diagram.....	EL-146
Parking brake control.....	BR-27
Parking drum brake.....	BR-23
Parking lamp.....	EL-64
Park/Neutral position switch.....	EC-191
PCV (positive crankcase ventilation).....	EC-21
Personal lamp.....	EL-84, EL-88
Piston assembly.....	EM-48
Piston pin inspection.....	EM-41
Piston ring inspection.....	EM-42
Piston to bore clearance.....	EM-43
PNP/SW - Wiring diagram.....	EC-191
Power antenna.....	EL-145
Power door lock.....	EL-185
Power door mirror.....	EL-152
Power seat.....	EL-154
Power steering fluid level.....	ST-5, MA-23
Power steering gear.....	ST-15
Power steering hydraulic pressure.....	ST-7
Power steering oil pressure switch.....	EC-244
Power steering oil pump.....	ST-21
Power steering system bleeding.....	ST-5
Power supply routing.....	EL-6
Power transistor.....	EC-200
Power transistor & ignition coil.....	EC-195
Power window.....	EL-177
POWER - Wiring diagram.....	EL-7
Precautions (General).....	GI-3
Pressure test (A/T).....	AT-132
PST/SW - Wiring diagram.....	EC-244

ALPHABETICAL INDEX

R

R134a - See HFC134a	HA-2
Radiator	LC-15
Radio - See Audio	EL-135
Rear axle	RA-6
Rear axle (drum brake type)	RA-6
Rear bumper	BT-10
Rear door	BT-16
Rear drum brake	BR-23
Rear heated oxygen sensor (HO2S)	EC-126
Rear heated oxygen sensor (HO2S) heater	EC-130
Rear seat belt	RS-6
Rear side window	BT-48
Rear suspension	RA-9
Rear washer	EL-122
Rear window	BT-47
Rear window defogger	EL-129
Rear wiper	EL-122
Refrigerant connection precaution	HA-4
Refrigerant discharging evacuating charging	HA-150
Refrigerant general precaution	HA-3
Refrigerant lines	HA-154
Refrigeration cycle	HA-12
Resistor	EC-200
Reverse clutch	AT-184
Revolution sensor (A/T)	AT-71
Road wheel size	GI-37
Roof trim	BT-26
Room lamp	EL-84
Room lamp - See Interior lamp	EL-84
Rotor disc (front)	FA-9
RRO2 - Wiring diagram	EC-126
RRO2/H - Wiring diagram	EC-130

S

SAE J1930 terminology list	GI-42
SAE J1979 - Mode 1 ~ 7	EC-31, EC-63
Seal - See Exterior	BT-28
Seat belt, front	RS-4
Seat belt inspection	MA-25
Seat belt, rear	RS-6
Seat, front	BT-34
Seat, second (2nd)	BT-36
Seat, third (3rd)	BT-38
SEAT - Wiring diagram	EL-154
Second (2nd) seat	BT-36
Self-diagnostic results	EC-42
SHIFT - Wiring diagram	AT-135
Shift lock system	AT-134
Shift schedule	AT-52

Shift solenoid valve (A/T)	AT-96
Shock absorber (front)	FA-22
Shock absorber (rear)	RA-12
Side trim	BT-22
Side window - See Rear side window	BT-48
Smart entrance control unit	EL-248
SMJ (super multiple junction)	Foldout page
Spare tire size	GI-37
Spark plug replacement	MA-19
Speedometer	EL-94
Spiral cable	RS-15
Spot lamp	EL-84
Spring (Wheelarch) height	FA-5
SROOF - Wiring diagram	EL-151
SRS - See Supplemental Restraint System	RS-10
SRS - Wiring diagram	RS-26
SRS Trouble diagnoses	RS-23
S/SIG - Wiring diagram	EC-235
Stabilizer bar (front)	FA-23
Stabilizer bar (rear)	RA-12
Stall test (A/T)	AT-129
Standardized relay	EL-4
Start signal	EC-235
START - Wiring diagram	EL-26
Starter	EL-28
Starting system	EL-24
Steering gear and linkage inspection	MA-23
Steering gear oil level	MA-23
Steering knuckle	FA-10
Steering linkage	ST-15
Steering switch	EL-38
Steering wheel and column	ST-9
Steering wheel play	ST-6
Steering wheel turning force	ST-6
Step lamp	EL-84
Stop lamp	EL-64
Strut (front)	FA-22
Sun roof, electric	EL-150
Sunload sensor	HA-136
Sunroof	BT-43
Supplement restraint system - Wiring diagram	RS-26
Supplemental Restraint System	RS-10
Symbols and abbreviations	GI-8
System readiness test (SRT) code	EC-33

T

Tachometer	EL-94
Tail lamp	EL-64
TAIL/L - Wiring diagram	EL-64
Theft warning system	EL-216
THEFT - Wiring diagram	EL-223

GI

MA

EM

LC

EC

FE

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

Thermostat	LC-13
Third (3rd) seat.....	BT-38
Three way catalyst.....	EC-174
Three way catalyst precautions	GI-6
Throttle bodies.....	EM-6
Throttle drum adjustment.....	FE-2
Throttle position sensor adjustment.....	EC-68
Throttle position sensor (TPS).....	EC-105
Throttle position switch.....	AT-63
Tie-rod	ST-18
Tie-rod ball joints.....	ST-18
Tightening torque of standard bolts	GI-41
Timing belt.....	EM-11
Tire rotation	MA-23
Tire size	GI-37
Torque converter clutch solenoid valve.....	AT-89
Torque converter installation.....	AT-236
Tow truck towing.....	GI-40
TPS - Wiring diagram.....	EC-105
Transverse link (front)	FA-24
Tread-FR&RR (Dimensions)	GI-37
Trim	BT-22
Trunk room lamp.....	EL-84
T/TOW - Wiring diagram.....	EL-75
Turn signal lamp.....	EL-66
TURN - Wiring diagram.....	EL-68
Two trip detection logic	EC-31
Two-pole lift	GI-39

U

Under body.....	BT-55
-----------------	-------

V

Vacuum hose (brake system)	BR-18
Vacuum hose drawing (ECCS)	EC-12
Valve clearance	EM-52
Valve guide.....	EM-28
Valve seat.....	EM-30
Valve spring.....	EM-31
Vehicle identification number	GI-36
Vehicle recovery (freeing a stuck vehicle)	GI-40
Vehicle speed sensor (VSS).....	EC-177
Vent mode switch (auto A/C)	HA-70
Vent mode switch (manual A/C).....	HA-15
Viscosity number (SAE)	MA-9

VSS - Wiring diagram.....	EC-177
---------------------------	--------

W

Warning buzzer	EL-109
Warning chime	EL-109
Warning lamps	EL-101
WARN - Wiring diagram.....	EL-104
Washer, front.....	EL-117
Washer, rear.....	EL-122
Water cock solenoid valve (auto A/C).....	HA-90
Water cock solenoid valve (manual A/C).....	HA-34
Water pump.....	LC-11
Water temperature gauge	EL-94
Weatherstrip - See Exterior.....	BT-28
Wheel alignment (front).....	FA-6
Wheel alignment (rear).....	RA-5
Wheel balance.....	MA-23
Wheel bearing (front axle).....	FA-6
Wheel bearing (rear)	RA-4
Wheel hub and steering knuckle.....	FA-10
Wheel hub (front)	FA-10
Wheel hub (rear).....	RA-6
Wheel sensors (ABS).....	BR-31
Wheel size.....	GI-37
Wheelarch height	FA-5
Wheelbase (Dimensions)	GI-37
Wide open & closed throttle position (CTP) switch	EC-105
Width (Dimensions).....	GI-37
Window, back	BT-47
Window, back door.....	BT-47
Window, rear	BT-47
Window, rear side.....	BT-48
Window, side - See Rear side window	BT-48
WINDOW - Wiring diagram.....	EL-182
Windshield.....	BT-46
Windshield washer - See Front washer.....	EL-117
Windshield wiper - See Front wiper.....	EL-117
Wiper and washer	EL-117
Wiper, front.....	EL-117
Wiper, rear.....	EL-122
WIPER - Wiring diagram.....	EL-118
WIP/R - Wiring diagram	EL-123
Wiring diagrams	GI-9
Wrist pin - See Piston pin inspection.....	EM-41