

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

A

AAC/V - Wiring diagram	EC-328
ABS - Wiring diagram.....	BR-35
ABS sensor rotor	AX-5, 18
Absolute pressure sensor.....	EC-124
A/C air flow	HA-22, 142
A/C component layout.....	HA-16, 139
A/C compressor clutch removal and installation	HA-106, 197
A/C compressor description	HA-14, 137
A/C compressor precaution.....	HA-7, 129
A/C compressor special service tool	HA-12, 135
A/C control linkage adjustment (auto A/C).....	HA-54
A/C control linkage adjustment (manual A/C)	HA-163
A/C control operation (auto A/C)	HA-20
A/C control operation (manual A/C)	HA-141
A/C diagnostic work flow (auto A/C).....	HA-31
A/C diagnostic work flow (manual A/C)....	HA-151
A/C HFC134a (R134a) system precaution	HA-3, 125
A/C HFC134a (R134a) system service tools.....	HA-10, 133
A/C HFC134a system service equipment precaution	HA-7, 130
A/C lubricant (R134a).....	HA-104, 195
A/C lubrication oil	HA-104, 195
A/C operational check	HA-32, 152
A/C pressure switch	HA-85, 185
A/C relay.....	HA-85, 185
A/C self-diagnoses (auto A/C)	HA-34
A/C service data specification	HA-216
A/C switch.....	HA-21, 141
A/C symptom chart (auto A/C)	HA-37
A/C symptom chart (manual A/C).....	HA-154
A/C trouble diagnoses (auto A/C).....	HA-23
A/C trouble diagnoses (manual A/C).....	HA-143
A/C, A - Wiring diagram.....	HA-27
A/C, M - Wiring diagram.....	HA-147
Accelerator control system.....	FE-3
Accelerator wire adjustment.....	FE-3
Air bag	RS-10, 15
Air bag disposal.....	RS-19
Air bag precautions.....	GI-2
Air bleeding for brake system.....	BR-6
Air cleaner filter replacement	MA-19
Air conditioner cut control.....	EC-23
Air flow meter - See Mass air flow sensor.....	EC-115
Air mix door control linkage adjustment....	HA-47
Air mix. door motor.....	HA-44
Air spoiler, rear	BT-26
Alternator	SC-14
Ambient sensor.....	HA-95

Angular tightening application	EM-2
Antenna	EL-130
Anti-lock brake system - Wiring diagram ...	BR-35
AP/SEN - Wiring diagram.....	EC-127
ASCD (automatic speed control device)...	EL-168
ASCD - Wiring diagram.....	EL-172
A/T - Wiring diagram	AT-13
A/T - Wiring diagram - AT - FTS	AT-99
A/T - Wiring diagram - AT - MAIN	AT-89
A/T - Wiring diagram - AT - PNP/SW.....	AT-93
A/T - Wiring diagram - AT - VSS A/T	AT-105
A/T control	EC-337
A/T diagnosis communication line.....	EC-428
A/T fluid temperature sensor.....	AT-102
A/T self-diagnoses.....	AT-38, 46
A/T shift lock system	AT-228
A/T shift lock system - Wiring diagram	AT-229
A/T trouble diagnoses	AT-51
A/T Wiring diagram - AT - ENG SS	AT-110
A/T Wiring diagram AT - 1ST	AT-115
A/T Wiring diagram AT - 2ND.....	AT-121
A/T Wiring diagram AT - 3RD.....	AT-127
A/T Wiring diagram AT - 4TH.....	AT-134
A/T Wiring diagram AT - BA/FTS	AT-181
A/T Wiring diagram AT - LPSV.....	AT-154
A/T Wiring diagram AT - NONDTC	AT-191
A/T Wiring diagram AT - OVRCV.....	AT-176
A/T Wiring diagram AT - SSV/A	AT-159
A/T Wiring diagram AT - SSV/B	AT-164
A/T Wiring diagram AT - TCCSIG	AT-147
A/T Wiring diagram AT - TCV.....	AT-141
A/T Wiring diagram AT - TPS	AT-169
A/T Wiring diagrwm AT - VSSMTR	AT-187
AT/C - Wiring diagram	EC-339
ATDIAG - Wiring diagram	EC-429
Audio.....	EL-119
AUDIO - Wiring diagram	EL-121
Audio and A/C control removal and installation - See Instrument panel	BT-15
AUT/DP - Wiring diagram	EL-139
Auto air conditioner - Wiring diagram.....	HA-27
Autolamp	EL-30
Automatic drive positioner	EL-135
Automatic speed control system - See ASCD	EL-168
Automatic transaxle number	GI-38
Automatic transmission fluid replacement	MA-24
Auxiliary air control (AAC) valve.....	EC-324

B

Back door	BT-9
Back door opener - See Back door	BT-9
Back door trim	BT-23
Back-up lamp	EL-51
BACK/L - Wiring diagram	EL-51

ALPHABETICAL INDEX

Ball joint (front).....	SU-11	
Basic inspection.....	EC-81	
Battery.....	SC-3	
Blower motor.....	HA-71	
Blower relay	HA-71, 80, 171, 179	
Blower resistor.....	HA-81, 171, 180	
Body alignment.....	BT-50	
BPT valve	EC-286	
Brake booster	BR-17	
Brake fluid change.....	BR-5	
Brake fluid level.....	MA-24	
Brake fluid level and line check.....	BR-5	
Brake hydraulic line	BR-7	
Brake inspection.....	MA-25	
Brake lines and cables inspection	MA-25	
Brake lining wear temporary checking.....	MA-26	
Brake master cylinder.....	BR-14	
Brake pedal.....	BR-12	
Bulb specifications.....	EL-280	
Bumper, front.....	BT-6	
Bumper, rear.....	BT-9	
BYPS/V - Wiring diagram.....	EC-418, 424	

C

Camshaft inspection.....	EM-31
Camshaft position sensor (CMPS)	EC-271
Canister-See EVAP canister.....	EC-24
CHARGE - Wiring diagram.....	SC-12
Charging system	SC-11
Chassis and body maintenance	MA-23
CHIME - Wiring diagram.....	EL-95
CIGAR - Wiring diagram.....	EL-111
Cigarette lighter	EL-111
Circuit breaker	EL-17
CKPS - Wiring diagram.....	EC-268, 363
Closed loop control.....	EC-353
Closed throttle position switch.....	EC-331
CMPS - Wiring diagram.....	EC-274
Coil spring (front)	SU-8
Collision diagnosis	RS-47
Combination lamp, front, removal and installation	BT-6
Combination lamp, rear, removal and installation	BT-26
Combination meter	EL-75
Combination meter (needle type).....	EL-75
Combination meter removal and installation - See Instrument panel	BT-15
Combination switch	EL-27
Component Location (auto A/C)	HA-23
Component Location (manual A/C)	HA-143
Compression pressure	EM-12
Compressor clutch removal and installation	HA-106, 197
Compressor description.....	HA-14, 137
Compressor precaution	HA-7, 129

Compressor special service tool	HA-12, 135	
Connecting rod	EM-49	
Connecting rod bearing clearance	EM-53	GI
Connecting rod bushing clearance	EM-54	
Connector inspection	GI-17	
Console box - See Instrument panel	BT-15	MA
CONSULT for ABS	BR-40	
CONSULT for engine	EC-62	EM
CONSULT general information	GI-34	
Control valve (A/T)	AT-267	
Converter housing installation	AT-239	LC
COOL/F - Wiring diagram.....	EC-441	
Coolant mixture ratio	MA-12	
Coolant replacement	MA-14	EC
Cooling circuit (engine)	LC-8	
Cooling fan control.....	EC-438	
Cooling fan control system	LC-15	FE
Cooling fan motor	EC-449	
Cooling fan relay.....	EC-449	
CORNER - Wiring diagram.....	EL-57	AT
Cornering lamp.....	EL-56	
Crank angle sensor built into distributor - See Camshaft position sensor	EC-271	AX
Crankcase emission control system - See posi- tive crankcase ventilation.....	EC-30	SU
Crankshaft	EM-51	
Crankshaft position sensor (OBD)	EC-266	BR
Crankshaft position sensor (OBD) cog chipping	EC-361	
Cruise control - See ASCD	EL-168	ST
Cylinder block.....	EM-46	
Cylinder block boring.....	EM-51	
Cylinder head	EM-26	RS
Cylinder head bolt tightening	EM-39	

D

Data link connector for Consult	EC-62	HA
Daytime light system	EL-42	
Daytime running light - See Daytime light system.....	EL-42	SC
DEF - Wiring diagram.....	EL-114	
Detonation sensor - See Knock sensor ..	EC-261	EL
Diagnosis sensor unit	RS-13	
Diagnostic trouble code (DTC) for OBD system.....	EC-2, 43	IDX
Diagnostic trouble code (DTC) inspection priority chart	EC-89	
Differential gear (FF A/T)	AT-311	
Dimensions	GI-38	
Distributor	EC-22	
Distributor ignition (DI) system	EC-22	
D/LOCK - Wiring diagram	EL-197	
Dome light - See Interior lamp.....	EL-68	
Door glass	BT-12	
Door lock	BT-12	
Door mirror	BT-48	

ALPHABETICAL INDEX

Door trim.....	BT-22
Door, front.....	BT-12
Drive belt inspection.....	MA-13
Drive plate runout.....	EM-54
Drive shaft (front).....	AX-9
Dropping resistor (A/T).....	AT-156
DTC work support.....	EC-71
DTRL - Wiring diagram	EL-45

E

ECM input/output signal	EC-100
ECTS - Wiring diagram	EC-141, 156
EGR control (EGRC) - BPT valve	EC-286
EGR control (EGRC) - solenoid valve.....	EC-366
EGR control valve	EC-278, 378
EGR temperature sensor.....	EC-371
EGR/TS - Wiring diagram.....	EC-375
EGRC/V - Wiring diagram	EC-368
EGRC1 - Wiring diagram	EC-282, 381
Electric sun roof	EL-131
Electrical diagnoses	GI-20
Electrical ignition system	EC-22
Electrical units.....	Foldout
Electrical units location.....	EL-257
Engine compartment	BT-51
Engine control circuit diagram	EC-15
Engine control component parts location	EC-13
Engine control module (ECM)	EC-341
Engine control system diagram and chart	EC-16
Engine coolant temperature sensor (ECTS)	EC-139, 154
Engine fail-safe system	EC-90
Engine oil filter replacement.....	MA-20
Engine oil precautions	GI-4
Engine oil replacement.....	MA-19
Engine outer component parts	EM-9
Engine removal	EM-42
Engine room - See Engine compartment ...	BT-51
Engine serial number.....	GI-38
EVAP canister	EC-25
EVAP canister purge volume control solenoid valve.....	EC-24, 300, 391
EVAP canister vent control valve.....	EC-306, 398, 409
EVAP control system (small leak) diagnosis	EC-293, 384
EVAP control system pressure sensor....	EC-312
EVAP control system purge flow monitoring diagnosis	EC-403
EVAP vapor lines inspection	MA-22
Evaporative emission (EVAP) system	EC-24
Exhaust gas recirculation (EGR) valve.....	EC-278, 378
Exhaust system.....	FE-8
Exhaust system inspection.....	MA-23

Exterior	BT-26
----------------	-------

F

Fan switch	HA-80, 171, 179
Fast idle cam (FIC) inspection and adjustment.....	EC-33
FICD - Wiring diagram.....	EC-468
Final drive (FF A/T).....	AT-311
Finisher, interior - See Trim.....	BT-19
Floor trim	BT-19
Fluid temperature sensor (A/T)	AT-102, 184
Fluids	MA-11
Flywheel runout	EM-54
Forward clutch	AT-289
F/PUMP - Wiring diagram	EC-459
Freeze frame data	EC-44
FRO2 - Wiring diagram	EC-162, 179, 187
FRO2/H - Wiring diagram.....	EC-193
Front axle	AX-2
Front bumper.....	BT-6
Front combination lamp removal and installation	BT-6
Front disc brake	BR-20
Front door	BT-12
Front heated oxygen sensor (HO2S)	EC-159, 166, 171, 176, 184
Front heated oxygen sensor (HO2S) heater	EC-191
Front oxygen sensor (O2S) monitor.....	EC-54
Front passenger air bag	RS-17
Front seat	BT-30
Front seat belt	RS-3
Front suspension	SU-2
Front washer	EL-99
Front wiper	EL-99
FUEL - Wiring diagram	EC-239, 246
Fuel cut control (at no load & high engine speed)	EC-24
Fuel filter replacement.....	MA-18
Fuel gauge	EL-75
Fuel injection system.....	EC-237, 244
Fuel injector	EC-450
Fuel line inspection	MA-18
Fuel precautions	GI-5
Fuel pressure check	EC-31
Fuel pressure regulator	EC-32
Fuel pressure release	EC-31
Fuel pump.....	EC-458
Fuel pump and gauge	FE-6
Fuel pump relay.....	EC-462
Fuel system.....	FE-4
Fuel tank vacuum relief valve.....	EC-25
Fuse	EL-17
Fuse block.....	Foldout
Fusible link	EL-17

ALPHABETICAL INDEX

G

Garage jack and safety stand.....	GI-40
Gauges	EL-75
Generator	SC-14
Generator - See Alternator	SC-14
Generic scan tool (GST).....	EC-75
Glass	BT-12
Grease	MA-11
Ground distribution	EL-18

H

Harness connector	EL-3
Harness connector inspection	GI-17
Harness layout	EL-260
Hazard warning lamp	EL-52
Headlamp	EL-30
Headlamp aiming control	EL-40
Headlining - See Roof trim.....	BT-24
Heater mirror	EL-134
Height (Dimensions)	GI-38
HFC134a (R134a) system precaution	HA-3, 125
HFC134a (R134a) system service tools.....	HA-10, 133
HFC134a system service equipment precaution	HA-7, 130
High clutch.....	AT-284
H/LAMP - Wiring diagram	EL-32
H/MIRROR - Wiring diagram	EL-134
Hood	BT-6
Horn	EL-110
HORN - Wiring diagram	EL-110
How to erase DTC for OBD system.....	EC-51
Hydraulic lash adjuster inspection	EM-37

I

IACV-AAC valve.....	EC-324
IACV-FICD solenoid valve	EC-467
IATS - Wiring diagram	EC-136
Idle air control valve (IACV)	EC-324
Idle mixture ratio	EC-35
Idle speed	EC-35
IGN/SG - Wiring diagram	EC-357
Ignition control system.....	EC-355
Ignition timing	EC-35
Ignition wire inspection	EC-260
ILL - Wiring diagram.....	EL-64
Illumination	EL-61
In vehicle sensor.....	HA-97
INJECT - Wiring diagram	EC-451
Injector	EC-450

Injector removal and installation.....	EC-32
Instrument panel.....	BT-15
INT/L - Wiring diagram	EL-71
Intake air temperature sensor	EC-133
Intake door control linkage adjustment.....	HA-54, 163
Intake door motor	HA-50, 161
Integrated homelink transmitter.....	EL-255
Interior	BT-19
Interior lamp	EL-68

J

Jacking points	GI-39, 40
Joint connector (J/C).....	Foldout

K

Keyless entry system - See Multi-remote control system	EL-210
Knock sensor (KS).....	EC-261
Knuckle spindle.....	AX-5
KS - Wiring diagram	EC-263

L

Leaf spring (rear)	SU-18
Length (Dimensions).....	GI-38
License lamp	EL-49
Lifting points.....	GI-41
Line pressure solenoid valve	AT-138, 156
Line pressure test (A/T).....	AT-61
Liquid gasket application.....	EM-2
Location of electrical units.....	EL-257
Lock, door.....	BT-12
Low and reverse brake.....	AT-294
LSV (Load sensing valve)	BR-9
Lubricant (R134a) A/C.....	HA-104, 195
Lubricants	MA-11
Lubrication circuit (engine).....	LC-3
Lubrication oil A/C	HA-104, 195
Lubrication-locks, hinges and hood latches.....	MA-27

M

MAFS - Wiring diagram	EC-120
Magnet clutch	HA-106, 197
MAIN - Wiring diagram	EC-110
Maintenance (engine).....	MA-13
MAJOR OVERHALL.....	AT-241
Malfunction indicator lamp (MIL)	EC-53

ALPHABETICAL INDEX

Manual air conditioner - Wiring diagram	HA-147
MAP/BARO switch solenoid valve.....	EC-343
Mass air flow sensor (MAFS)	EC-115
Master cylinder (brake).....	BR-14
Meter	EL-75
METER - Wiring diagram	EL-78
MIL & Data link connectors circuit.....	EC-474
MIL/DL - Wiring diagram	EC-474
MIRROR - Wiring diagram	EL-133
Mirror defogger.....	EL-134
Mirror, door	BT-48
Mirror, out side	BT-48
Misfire	EC-256
Mode door control linkage adjustment	HA-61
Model variation.....	GI-36
Molding - See Exterior	BT-26
Mud guard - See Exterior.....	BT-26
MULTI - Wiring diagram	EL-213
Multi-remote control system	EL-210
Multipoint fuel injection (MFI) system	EC-20
Multipoint fuel injection precautions	GI-4

N

NVH troubleshooting (AX)	AX-3
NVH troubleshooting (BR)	BR-4
NVH troubleshooting (EM)	EM-7
NVH troubleshooting (ST)	ST-5
NVH troubleshooting (SU)	SU-3

O

Oil change (capacity).....	MA-11
Oil change (interval)	MA-6
Oil pan (engine).....	EM-13
Oil pressure (engine)	LC-3
Oil pump (A/T)	AT-263
Oil pump (engine)	LC-4
Oil pump regulator valve (engine)	LC-5
Oil seal replacement (engine)	EM-24
On board diagnostic system.....	EC-42
Out side mirror	BT-48
Overdrive control switch	AT-226
Overrun clutch	AT-289
Overrun clutch solenoid valve...AT-138, 178, 270	
Oversize piston.....	EM-51

P

Park/neutral position switch.....	EC-431
Park/neutral position switch (A/T)	AT-91, 226
Parking brake control.....	BR-28
Parking drum brake	BR-24

Parking lamp	EL-49
PCV (positive crankcase ventilation).....	EC-30
PGC/V - Wiring diagram.....	EC-303, 394
Pilot bushing replacement.....	EM-56
Piston assembly	EM-54
Piston pin inspection	EM-48
Piston ring inspection.....	EM-48
Piston to bore clearance	EM-50
PNP/SW - Wiring diagram.....	EC-434
POWER - Wiring diagram	EL-10
Power door lock	EL-194
Power door mirror	EL-133
Power seat	EL-166
Power steering fluid level	MA-26, ST-7
Power steering gear	ST-16
Power steering hydraulic pressure.....	ST-8
Power steering oil pressure switch.....	EC-463
Power steering oil pump	ST-21
Power steering system bleeding	ST-7
Power supply routing.....	EL-7
Power transistor & ignition coil	EC-355
Power window	EL-189
PRE/SE - Wiring diagram.....	EC-315
Precautions (General).....	GI-2
Pressure test (A/T)	AT-61
PST/SW - Wiring diagram	EC-464

R

Radiator.....	LC-12
Radio - See Audio	EL-119
Rear air spoiler.....	BT-26
Rear axle.....	AX-17
Rear bumper	BT-9
Rear combination lamp removal and installation	BT-26
Rear drum brake.....	BR-24
Rear heated oxygen sensor (HO ₂ S).....	EC-197, 206, 215, 224
Rear heated oxygen sensor (HO ₂ S) heater	EC-231
Rear seat belt	RS-4
Rear side window.....	BT-46
Rear suspension.....	SU-13
Rear washer	EL-104
Rear window defogger	EL-112
Rear wiper	EL-104
Refrigerant connection precaution	HA-4, 126
Refrigerant discharging evacuating charging	HA-102, 193
Refrigerant general precaution.....	HA-3, 125
Refrigerant lines.....	HA-113, 204
Refrigeration cycle	HA-14, 137
Removal and installation (A/T)	AT-238
Reverse clutch.....	AT-281
Revolution sensor (A/T).....	AT-107
Road wheel size	GI-38

ALPHABETICAL INDEX

Roof trim.....	BT-24
Room lamp.....	EL-68
Room lamp - See Interior lamp.....	EL-68
RRO2 - Wiring diagram ...	EC-200, 209, 218, 226
RRO2/H - Wiring diagram	EC-233

S

SAE J1930 terminology list.....	GI-44
Screw jack.....	GI-39
Seal - See Exterior.....	BT-26
SEAT - Wiring diagram	EL-166
Seat belt inspection	MA-28, RS-7
Seat belt, front	RS-3
Seat belt, rear	RS-4
Seat, front.....	BT-30
Seat, second (2nd).....	BT-32
Second (2nd) seat.....	BT-32
Self-diagnostic results.....	EC-54
SHIFT - Wiring diagram	AT-229
Shift lock system	AT-228
Shift schedule	AT-334
Shift solenoid valve A (A/T)	AT-117, 129, 161, 270
Shift solenoid valve B (A/T)	AT-117, 123, 270
Shock absorber (front).....	SU-8
Shock absorber (rear).....	SU-21
Side trim	BT-19
Side window - See Rear side window	BT-46
Smart entrance control unit.....	EL-249
SMJ (super multiple junction).....	Foldout
Spare tire size.....	GI-38
Spark plug replacement	MA-21
Speedometer.....	EL-75
Spiral cable	RS-15
Spring (Wheelarch) height.....	SU-5
SROOF - Wiring diagram.....	EL-132
SRS - See Supplemental Restraint System	RS-10
SRS - Wiring diagram.....	RS-28
SRS Trouble diagnoses.....	RS-24
S/SIG - Wiring diagram	EC-455
Stabilizer bar (front).....	SU-10
Stabilizer bar (rear).....	SU-21
Stall test (A/T).....	AT-57
Standardized relay	EL-5
START - Wiring diagram.....	SC-7
Start signal.....	EC-454
Starter	SC-9
Starting system	SC-6
Steering gear and linkage inspection.....	MA-26
Steering linkage.....	ST-16
Steering switch	EL-29
Steering wheel and column.....	ST-10
Steering wheel play	ST-6
Steering wheel turning force	ST-8
Stop lamp	EL-50

STOP/L - Wiring diagram	EL-50
Strut (front).....	SU-8
Sun roof, electric	EL-131
Sunload sensor.....	HA-99
Sunroof	BT-39
Supplemental Restraint System	RS-10
Supplemental restraint system - Wiring diagram	RS-28
SW/V - Wiring diagram	EC-347
Symbols and abbreviations.....	GI-7
Symptom matrix chart.....	EC-91
System readiness test (SRT) code	EC-44

T

Tachometer.....	EL-75
Tail lamp	EL-49
TAIL/L - Wiring diagram	EL-49
Tank fuel temperature sensor.....	EC-251
TCM circuit diagram	AT-13
TCM inspection table.....	AT-85
TFTS - Wiring diagram	EC-253
THEFT - Wiring diagram	EL-232
Theft warning system.....	EL-226
Thermostat	LC-11
Three way catalyst.....	EC-290
Three way catalyst precautions	GI-4
Throttle drum adjustment	FE-3
Throttle position sensor (TPS).....	EC-144
Throttle position sensor adjustment	EC-81
Throttle position switch	AT-173, 226, EC-331
Tie-rod	ST-19
Tie-rod ball joints	ST-19
Tightening torque of standard bolts	GI-43
Timing belt.....	EM-16
Tire rotation	MA-24
Tire size	GI-38
Torque converter installation	AT-239, 328
Torque convertor clutch solenoid valve.....	AT-138, 143
Tow truck towing	GI-41
Towing point	GI-42
TP/SW - Wiring diagram.....	EC-334
TPS - Wiring diagram	EC-150
Transaxle serial number	GI-38
TRANSMT - Wiring diagram	EL-255
Tread-FR&RR (Dimensions)	GI-38
Trim	BT-19
Trouble diagnoses	GI-30
T/TOW - Wiring diagram	EL-59
TURN - Wiring diagram	EL-53
Turn signal lamp	EL-52
Two trip detection logic	EC-42
Two-pole lift.....	GI-41

ALPHABETICAL INDEX

U

Under body.....BT-53

V

Vacuum cut valveEC-24, 427

Vacuum cut valve bypass
valve.....EC-24, 416, 421

Vacuum hose (brake system).....BR-19

Vacuum hose drawing (Engine control)EC-18

Valve clearanceEM-59

Valve guideEM-32

Valve seatEM-34

Valve springEM-36

Vehicle identification numberGI-37

Vehicle recovery (freeing a stuck vehicle)...GI-42

Vehicle speed sensor (VSS).....EC-319

VENT/V - Wiring diagram.....EC-308, 400, 412

Viscosity number (SAE)MA-12

VSS - Wiring diagram.....EC-322

W

WARN - Wiring diagram.....EL-88

Warning buzzerEL-93

Warning chimeEL-93

Warning lampsEL-85

Washer, frontEL-99

Washer, rearEL-104

Water pump.....LC-9
Water temperature gaugeEL-75
Weatherstrip - See Exterior.....BT-26
Wheel alignment (front)SU-6
Wheel alignment (rear)SU-15
Wheel balance.....MA-24
Wheel bearing (front)AX-4
Wheel bearing (rear)AX-17
Wheel hub (front)AX-5
Wheel hub (rear)AX-18
Wheel sensors (ABS)BR-51, 65
Wheel sizeGI-38
Wheelarch height.....SU-5
Wheelbase (Dimensions)GI-38
Wide open & closed throttle position
 switchEC-144
Width (Dimensions).....GI-38
WINDOW - Wiring diagram.....EL-191
Window, door.....BT-12
Window, rear side.....BT-46
Window, side - See Rear side windowBT-46
WindshieldBT-45
Windshield washer - See Front washer.....EL-99
Windshield wiper - See Front wiper.....EL-99
WIP/R - Wiring diagramEL-105, 107
WIPER - Wiring diagramEL-100
Wiper and washerEL-99
Wiper, frontEL-99
Wiper, rearEL-104
Wiring Diagram (Cell code) listEL-281
Wiring diagramsGI-8
Wrist pin - See Piston pin inspectionEM-48