

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

A

AAC/V - Wiring diagram	EC-359	Alternator	SC-31
ABS - Wiring diagram.....	BR-36	Ambient sensor	HA-113
ABS sensor rotor	AX-5, 19	Angular tightening application	EM-3
Absolute pressure sensor.....	EC-137	Antenna	EL-152
A/C air flow	HA-26	Anti-lock brake system - Wiring diagram	BR-36
A/C component layout.....	HA-20, 165	AP/SEN - Wiring diagram.....	EC-140
A/C compressor clutch removal and installation	HA-127, 236	ASCD (automatic speed control device)	EL-217
A/C compressor description	HA-18, 163	ASCD - Wiring diagram.....	EL-221
A/C compressor precaution.....	HA-9, 154	A/T - Wiring diagram	AT-15
A/C compressor special service tool.....	HA-16, 161	A/T - Wiring diagram - AT - FTS	AT-112
A/C control linkage adjustment (auto A/C).....	HA-62	A/T - Wiring diagram - AT - MAIN	AT-100
A/C control linkage adjustment (manual A/C)	HA-192	A/T - Wiring diagram - AT - PNP/SW	AT-105
A/C control operation (auto A/C)	HA-24	A/T - Wiring diagram - AT - VSS A/T	AT-119
A/C control operation (manual A/C)	HA-167	A/T control	EC-371
A/C diagnostic work flow (auto A/C).....	HA-35	A/T diagnosis communication line.....	EC-468
A/C diagnostic work flow (manual A/C)	HA-177	A/T fluid temperature sensor	AT-116
A/C HFC134a (R134a) system precaution	HA-4, 149	A/T self-diagnoses.....	AT-39, 48
A/C HFC134a (R134a) system service tools.....	HA-13, 158	A/T shift lock system	AT-263
A/C HFC134a system service equipment precaution	HA-9, 155	A/T shift lock system - Wiring diagram	AT-264
A/C lubricant (R134a).....	HA-124, 233	A/T trouble diagnoses	AT-55
A/C lubrication oil	HA-124, 233	A/T Wiring diagram - AT - ENG SS.....	AT-124
A/C operational check	HA-36, 178	A/T Wiring diagram AT - 1ST	AT-130
A/C pressure switch	HA-103, 222	A/T Wiring diagram AT - 2ND.....	AT-136
A/C relay.....	HA-103, 222	A/T Wiring diagram AT - 3RD.....	AT-142
A/C self-diagnoses (auto A/C)	HA-38	A/T Wiring diagram AT - 4TH	AT-149
A/C service data specification	HA-147, 257	A/T Wiring diagram AT - BA/FTS	AT-200
A/C switch.....	HA-25, 167	A/T Wiring diagram AT - LPSV.....	AT-169
A/C symptom chart (auto A/C)	HA-41	A/T Wiring diagram AT - NONDTC	AT-213
A/C symptom chart (manual A/C).....	HA-180	A/T Wiring diagram AT - OVRCSV.....	AT-194
A/C trouble diagnoses (auto A/C).....	HA-27	A/T Wiring diagram AT - SSV/A	AT-175
A/C trouble diagnoses (manual A/C).....	HA-169	A/T Wiring diagram AT - SSV/B	AT-181
A/C, A - Wiring diagram.....	HA-31	A/T Wiring diagram AT - TCCSIG	AT-161
A/C, M - Wiring diagram.....	HA-173	A/T Wiring diagram AT - TCV.....	AT-156
Accelerator control system.....	FE-3	A/T Wiring diagram AT - TPS.....	AT-187
Accelerator wire adjustment.....	FE-3	A/T Wiring diagram AT - VSSMTR.....	AT-207
Air bag	RS-13, 19	AT/C - Wiring diagram.....	EC-373
Air bag disposal	RS-24	ATDIAG - Wiring diagram.....	EC-469
Air bag precautions.....	GI-3	Audio	EL-138
Air bleeding for brake system.....	BR-7	AUDIO - Wiring diagram	EL-140
Air cleaner filter replacement	MA-19	Audio and A/C control removal and installation - See Instrument panel.....	BT-23
Air conditioner cut control.....	EC-27	AUT/DP - Wiring diagram	EL-176
Air flow meter - See Mass air flow sensor.....	EC-128	Auto air conditioner - Wiring diagram.....	HA-31
Air mix door control linkage adjustment.....	HA-53	Autolamp	EL-34
Air mix. door motor	HA-48	Automatic drive positioner.....	EL-172
Air spoiler, rear	BT-36	Automatic speed control system - See ASCD.....	EL-217
		Automatic transaxle number	GI-42
		Automatic transmission fluid replacement	MA-25
		Auxiliary air control (AAC) valve.....	EC-356

ALPHABETICAL INDEX

B

Back door	BT-17
Back door opener - See Back door	BT-17
Back door trim	BT-33
Back-up lamp	EL-57
BACK/L - Wiring diagram	EL-57
Ball joint (front).....	SU-11
Basic inspection.....	EC-87
Battery.....	SC-4
Battery/Starting/Charging	
System Tester	SC-7, 13, 24
Blower motor.....	HA-83
Blower relay	HA-83, 96, 203, 214
Blower resistor.....	HA-97, 204, 215
Body alignment.....	BT-60
Brake booster	BR-18
Brake fluid change.....	BR-6
Brake fluid level.....	MA-25
Brake fluid level and line check.....	BR-6
Brake hydraulic line	BR-8
Brake inspection.....	MA-26
Brake lines and cables inspection	MA-26
Brake lining wear temporary checking.....	MA-27
Brake master cylinder.....	BR-15
Brake pedal.....	BR-13
Bulb specifications.....	EL-336
Bumper, front.....	BT-14
Bumper, rear.....	BT-17
BYPS/V - Wiring diagram.....	EC-455, 463

C

Camshaft inspection.....	EM-32
Camshaft position sensor (CMPS).....	EC-296
Canister-See EVAP canister.....	EC-28
CHARGE - Wiring diagram.....	SC-23
Charging system.....	SC-22
Chassis and body maintenance.....	MA-24
CHIME - Wiring diagram	EL-111
CIGAR - Wiring diagram	EL-129
Cigarette lighter.....	EL-129
Circuit breaker.....	EL-19
CKPS - Wiring diagram.....	EC-292, 417
Clock.....	EL-138
Closed loop control.....	EC-390
Closed throttle position switch.....	EC-363
CMPS - Wiring diagram.....	EC-299
Coil spring (front).....	SU-8
Collision diagnosis.....	RS-53
Combination lamp, front, removal and installation.....	BT-14
Combination lamp, rear, removal and installation.....	BT-36
Combination meter.....	EL-85
Combination meter (needle type).....	EL-85

Combination meter removal and installation - See Instrument panel.....	BT-23	
Combination switch	EL-31	GI
Component Location (auto A/C).....	HA-27	
Component Location (manual A/C)	HA-169	MA
Compression pressure	EM-13	
Compressor clutch removal and installation	HA-127, 236	EM
Compressor description.....	HA-18, 163	
Compressor precaution	HA-9, 154	
Compressor special service tool	HA-16, 161	LC
Connecting rod	EM-50	
Connecting rod bearing clearance	EM-54	
Connecting rod bushing clearance	EM-55	EC
Connector inspection	GI-19	
Console box - See Instrument panel	BT-23	
CONSULT for ABS	BR-41	FE
CONSULT for engine.....	EC-69	
CONSULT-II general information	GI-37	AT
Control valve (A/T)	AT-302	
Converter housing installation	AT-363	
COOL/F - Wiring diagram.....	EC-395	AX
Coolant mixture ratio	MA-12	
Coolant replacement	MA-14	
Cooling circuit (engine)	LC-8	SU
Cooling fan control.....	EC-392	
Cooling fan control system	LC-15	
Cooling fan motor	EC-407	BR
Cooling fan relay.....	EC-406	
CORNER - Wiring diagram	EL-62	
Cornering lamp.....	EL-61	ST
Crank angle sensor built into distributor - See Camshaft position sensor.....	EC-296	RS
Crankcase emission control system - See positive crankcase ventilation.....	EC-34	
Crankshaft	EM-52	BT
Crankshaft position sensor (OBD).....	EC-290	
Crankshaft position sensor (OBD) cog chipping.....	EC-415	HA
Cruise control - See ASCD	EL-217	
Cylinder block.....	EM-47	
Cylinder block boring.....	EM-52	SC
Cylinder head	EM-27	
Cylinder head bolt tightening	EM-40	EL

D

Data link connector for Consult.....	EC-69	
Daytime light system	EL-48	
Daytime running light - See Daytime light system.....	EL-48	
DEF - Wiring diagram	EL-132	
Detonation sensor - See Knock sensor.....	EC-285	
Diagnosis sensor unit	RS-17	
Diagnostic trouble code (DTC) for OBD system.....	EC-7, 51	

ALPHABETICAL INDEX

Diagnostic trouble code (DTC)	
inspection priority chart.....	EC-100
Differential gear (FF A/T).....	AT-346
Dimensions	GI-42
Distributor.....	EC-26
Distributor ignition (DI) system	EC-26
D/LOCK - Wiring diagram	EL-246
Dome light - See Interior lamp.....	EL-77
Door glass	BT-20
Door lock	BT-20
Door mirror	BT-58
Door trim.....	BT-31
Door, front.....	BT-20
Drive belt inspection.....	MA-13
Drive plate runout.....	EM-56
Drive shaft (front).....	AX-9
Dropping resistor (A/T).....	AT-172
DTC work support.....	EC-78
DTRL - Wiring diagram	EL-51

E

ECM input/output signal.....	EC-111
ECTS - Wiring diagram	EC-156, 173
Electric sun roof	EL-168
Electrical diagnoses	GI-22
Electrical ignition system	EC-26
Electrical unit.....	EL-344
Electrical units location.....	EL-313
Engine compartment.....	BT-61
Engine control circuit diagram	EC-20
Engine control component parts	
location.....	EC-18
Engine control module (ECM)	EC-376
Engine control system diagram	
and chart	EC-21
Engine coolant temperature	
sensor (ECTS).....	EC-154, 171
Engine fail-safe system	EC-101
Engine oil filter replacement.....	MA-20
Engine oil precautions	GI-6
Engine oil replacement.....	MA-19
Engine outer component parts.....	EM-10
Engine removal	EM-43
Engine room - See Engine	
compartment.....	BT-61
Engine serial number.....	GI-42
EVAP canister.....	EC-29
EVAP canister purge volume	
control solenoid valve.....	EC-28, 320, 423
EVAP canister vent control	
valve.....	EC-327, 432, 446
EVAP control system (small leak)	
diagnosis.....	EC-309, 421
EVAP control system pressure	
sensor.....	EC-334

EVAP control system purge flow	
monitoring diagnosis	EC-438
EVAP vapor lines inspection	MA-23
Evaporative emission (EVAP) system.....	EC-28
Exhaust system.....	FE-8
Exhaust system inspection.....	MA-24
Exterior	BT-36

F

Fan switch.....	HA-83
Fast idle cam (FIC) inspection	
and adjustment.....	EC-37
F/FOG - Wiring diagram.....	EL-59
FICD - Wiring diagram.....	EC-501
Final drive (FF A/T)	AT-346
Finisher, interior - See Trim.....	BT-28
Floor trim	BT-28
Fluid temperature sensor (A/T)	AT-116, 204
Fluids	MA-11
Flywheel runout.....	EM-56
Fog lamp, front.....	EL-58
Foot lamp	EL-77
Forward clutch	AT-324
F/PUMP - Wiring diagram	EC-490
Freeze frame data	EC-51
FRO2 - Wiring diagram.....	EC-180, 201, 210
FRO2/H - Wiring diagram.....	EC-216
Front axle	AX-2
Front bumper.....	BT-14
Front combination lamp removal	
and installation.....	BT-14
Front disc brake.....	BR-21
Front door.....	BT-20
Front fog lamp.....	EL-58
Front heated oxygen sensor	
(HO2S)	EC-177, 185, 191, 198, 208
Front heated oxygen sensor	
(HO2S) heater.....	EC-214
Front passenger air bag	RS-22
Front seat	BT-40
Front seat belt.....	RS-4
Front suspension	SU-2
Front washer.....	EL-117
Front wiper.....	EL-117
FUEL - Wiring diagram.....	EC-261, 269
Fuel cut control (at no load & high	
engine speed)	EC-28
Fuel filter replacement.....	MA-18
Fuel gauge	EL-85
Fuel injection system.....	EC-259, 267
Fuel injector	EC-479
Fuel line inspection	MA-18
Fuel precautions	GI-7
Fuel pressure check	EC-35
Fuel pressure regulator	EC-36
Fuel pressure release.....	EC-35

ALPHABETICAL INDEX

Fuel pump.....	EC-488
Fuel pump and gauge.....	FE-6
Fuel pump relay.....	EC-495
Fuel system.....	FE-4
Fuel tank temperature sensor	EC-274
Fuel tank vacuum relief valve.....	EC-29
Fuse.....	EL-19
Fuse block.....	EL-341
Fusible link	EL-19

G

Garage jack and safety stand.....	GI-44
Gauges.....	EL-85
Generator.....	SC-31
Generator - See Alternator	SC-31
Generic scan tool (GST).....	EC-81
Glass	BT-20
Grease	MA-11
Ground distribution.....	EL-20

H

Harness connector	EL-5
Harness connector inspection	GI-19
Harness layout	EL-316
Hazard warning lamp	EL-63
Headlamp	EL-34
Headlamp aiming control	EL-46
Headlamp leveler - See Headlamp aiming control	EL-46
Headlining - See Roof trim.....	BT-34
Heated seat	EL-211
Heater mirror	EL-171
Height (Dimensions)	GI-42
HFC134a (R134a) system precaution	HA-4, 149
HFC134a (R134a) system service tools.....	HA-13, 158
HFC134a system service equipment precaution	HA-9, 155
High clutch.....	AT-319
H/LAMP - Wiring diagram	EL-36
H/MIRROR - Wiring diagram	EL-171
Hood.....	BT-14
Horn.....	EL-128
HORN - Wiring diagram.....	EL-128
How to erase DTC for OBD system.....	EC-61
HSEAT - Wiring diagram.....	EL-212
Hydraulic lash adjuster inspection	EM-38

I

IACV-AAC valve.....	EC-356
---------------------	--------

IACV-FICD solenoid valve.....	EC-500
IATS - Wiring diagram	EC-150
Idle air control valve (IACV)	EC-356
Idle mixture ratio	EC-38
Idle speed	EC-38
IGN/SG - Wiring diagram	EC-410
Ignition control system.....	EC-408
Ignition timing.....	EC-38
Ignition wire inspection	EC-284
ILL - Wiring diagram.....	EL-73
Illumination	EL-70
In vehicle sensor.....	HA-116
INJECT - Wiring diagram	EC-480
Injector	EC-479
Injector removal and installation.....	EC-36
Instrument panel.....	BT-23
INT/L - Wiring diagram.....	EL-80
Intake air temperature sensor	EC-148
Intake door control linkage adjustment.....	HA-62, 192
Intake door motor	HA-56, 189
Integrated homelink transmitter.....	EL-310
Interior	BT-28
Interior lamp	EL-77

J

Jacking points	GI-43, 44
Joint connector (J/C).....	EL-343

K

Keyless entry system - See Multi-remote control system.....	EL-262
Knock sensor (KS).....	EC-285
Knuckle spindle.....	AX-5
KS - Wiring diagram	EC-286

L

Leaf spring (rear).....	SU-20
Length (Dimensions).....	GI-42
License lamp	EL-55
Lifting points.....	GI-45
Line pressure solenoid valve	AT-153, 172
Line pressure test (A/T).....	AT-65
Liquid gasket application.....	EM-3
Location of electrical units.....	EL-313
Lock, door.....	BT-20
Low and reverse brake.....	AT-329
LSV (Load sensing valve)	BR-10
Lubricant (R134a) A/C.....	HA-124, 233
Lubricants	MA-11
Lubrication circuit (engine).....	LC-3

GI
MA
EM
LC
EC
FE
AT
AX
SU
BR
ST
RS
BT
HA
SC
EL

IDX

ALPHABETICAL INDEX

Lubrication oil A/CHA-124, 233
 Lubrication-locks, hinges and
 hood latchesMA-28

M

MAFS - Wiring diagramEC-132
 Magnet clutchHA-127, 236
 MAIN - Wiring diagramEC-121
 Maintenance (engine).....MA-13
 MAJOR OVERHALL.....AT-276
 Malfunction indicator lamp (MIL)EC-63
 Manual air conditioner - Wiring
 diagramHA-173
 Map lamp.....EL-77
 MAP/BARO switch solenoid valve.....EC-378
 Mass air flow sensor (MAFS).....EC-128
 Master cylinder (brake).....BR-15
 MeterEL-85
 METER - Wiring diagramEL-89
 MIL & Data link connectors circuit.....EC-510
 MIL/DL - Wiring diagramEC-510
 MIRROR - Wiring diagramEL-170
 Mirror defogger.....EL-171
 Mirror, doorBT-58
 Mirror, out sideBT-58
 MisfireEC-279
 Mode door control linkage adjustmentHA-71
 Model variation.....GI-40
 Molding - See ExteriorBT-36
 Mud guard - See Exterior.....BT-36
 MULTI - Wiring diagramEL-266
 Multi-remote control system.....EL-262
 Multiport fuel injection (MFI) systemEC-24
 Multiport fuel injection precautionsGI-5

N

NVH troubleshooting (AX)AX-3
 NVH troubleshooting (BR)BR-5
 NVH troubleshooting (EM)EM-8
 NVH troubleshooting (ST).....ST-5
 NVH troubleshooting (SU).....SU-3

O

Oil change (capacity).....MA-11
 Oil change (interval)MA-6
 Oil pan (engine).....EM-14
 Oil pressure (engine)LC-3
 Oil pump (A/T)AT-298
 Oil pump (engine)LC-4
 Oil pump regulator valve (engine)LC-5
 Oil seal replacement (engine)EM-25

On board diagnostic system.....EC-50
 Out side mirrorBT-58
 Overdrive control switchAT-261
 Overrun clutchAT-324
 Overrun clutch solenoid valve.....AT-197, 305
 Oversize piston.....EM-52

P

Park/Neutral position switchEC-471
 Park/neutral position switch (A/T)AT-103, 261
 Parking brake control.....BR-29
 Parking drum brakeBR-25
 Parking lampEL-55
 PCV (positive crankcase ventilation).....EC-34
 Personal lampEL-77
 PGC/V - Wiring diagram.....EC-323, 426
 Pilot bushing replacement.....EM-58
 Piston assemblyEM-56
 Piston pin inspectionEM-49
 Piston ring inspectionEM-49
 Piston to bore clearanceEM-51
 PNP/SW - Wiring diagram.....EC-473
 POWER - Wiring diagramEL-12
 Power door lockEL-242
 Power door mirrorEL-170
 Power seatEL-209
 Power steering fluid levelMA-27, ST-7
 Power steering gearST-16
 Power steering hydraulic pressure.....ST-8
 Power steering oil pressure switch.....EC-496
 Power steering oil pumpST-21
 Power steering system bleedingST-7
 Power supply routing.....EL-9
 Power transistor & ignition coil.....EC-408
 Power windowEL-237
 PRE/SE - Wiring diagram.....EC-336
 Precautions (General).....GI-3
 Pressure test (A/T)AT-65
 PST/SW - Wiring diagramEC-497

R

Radiator.....LC-12
 Radio - See AudioEL-138
 Rear air spoiler.....BT-36
 Rear axle.....AX-18
 Rear bumperBT-17
 Rear combination lamp removal
 and installation.....BT-36
 Rear drum brake.....BR-25
 Rear heated oxygen sensor
 (HO2S).....EC-220, 229, 238, 246
 Rear heated oxygen sensor
 (HO2S) heater.....EC-253
 Rear seat beltRS-6

ALPHABETICAL INDEX

Rear side window.....	BT-56
Rear suspension.....	SU-15
Rear washer.....	EL-122
Rear window.....	BT-56
Rear window defogger.....	EL-130
Rear wiper.....	EL-122
Refrigerant connection precaution.....	HA-5, 150
Refrigerant discharging evacuating charging.....	HA-122, 231
Refrigerant general precaution.....	HA-4, 149
Refrigerant lines.....	HA-134, 243
Refrigeration cycle.....	HA-18, 163
Removal and installation (A/T).....	AT-273
Reverse clutch.....	AT-316
Revolution sensor (A/T).....	AT-122
Road wheel size.....	GI-42
Roof trim.....	BT-34
Room lamp.....	EL-77
Room lamp - See Interior lamp.....	EL-77
RRO2 - Wiring diagram.....	EC-223, 232, 240, 248
RRO2/H - Wiring diagram.....	EC-255

S

SAE J1930 terminology list.....	GI-48
Screw jack.....	GI-43
Seal - See Exterior.....	BT-36
SEAT - Wiring diagram.....	EL-209
Seat belt inspection.....	MA-28, RS-9
Seat belt, front.....	RS-4
Seat belt, rear.....	RS-6
Seat, front.....	BT-40
Seat, second (2nd).....	BT-42
Second (2nd) seat.....	BT-42
SHIFT - Wiring diagram.....	AT-264
Shift lock system.....	AT-263
Shift schedule.....	AT-370
Shift solenoid valve A (A/T).....	AT-132, 144, 178, 305
Shift solenoid valve B (A/T).....	AT-132, 138, 305
Shock absorber (front).....	SU-8
Shock absorber (rear).....	SU-23
Side trim.....	BT-28
Side window - See Rear side window.....	BT-56
Smart entrance control unit.....	EL-304
SMJ (super multiple junction).....	EL-339
Spare tire size.....	GI-42
Spark plug replacement.....	MA-21
Speedometer.....	EL-85
Spiral cable.....	RS-19
Spring (Wheelarch) height.....	SU-5
SROOF - Wiring diagram.....	EL-169
SRS - See Supplemental Restraint System.....	RS-13

SRS - Wiring diagram.....	RS-34	
SRS Trouble diagnoses.....	RS-30	
S/SIG - Wiring diagram.....	EC-485	GI
Stabilizer bar (front).....	SU-10	
Stabilizer bar (rear).....	SU-23	MA
Stall test (A/T).....	AT-61	
Standardized relay.....	EL-7	
START - Wiring diagram.....	SC-11	EM
Start signal.....	EC-484	
Starter.....	SC-20	
Starting system.....	SC-10	LC
Steering gear and linkage inspection.....	MA-27	
Steering linkage.....	ST-16	
Steering switch.....	EL-33	EC
Steering wheel and column.....	ST-10	
Steering wheel play.....	ST-6	
Steering wheel turning force.....	ST-8	FE
Step lamp.....	EL-77	
Stop lamp.....	EL-56	AT
STOP/L - Wiring diagram.....	EL-56	
Strut (front).....	SU-8	
Sun roof, electric.....	EL-168	AX
Sunload sensor.....	HA-119	
Sunroof.....	BT-49	
Supplemental Restraint System.....	RS-13	SU
Supplemental restraint system - Wiring diagram.....	RS-34	
SW/V - Wiring diagram.....	EC-381	BR
Symbols and abbreviations.....	GI-9	
Symptom matrix chart.....	EC-102	ST
System readiness test (SRT) code.....	EC-52	

T

Tachometer.....	EL-85	BT
Tail lamp.....	EL-55	
TAIL/L - Wiring diagram.....	EL-55	HA
TCM circuit diagram.....	AT-15	
TCM inspection table.....	AT-96	
TFTS - Wiring diagram.....	EC-276	SC
THEFT - Wiring diagram.....	EL-287	
Theft warning system.....	EL-281	
Thermostat.....	LC-11	EL
Three way catalyst.....	EC-304	
Three way catalyst precautions.....	GI-5	
Throttle drum adjustment.....	FE-3	
Throttle position sensor (TPS).....	EC-160	
Throttle position sensor adjustment.....	EC-87	
Throttle position switch.....	AT-191, 261, EC-363	
Tie-rod.....	ST-19	
Tie-rod ball joints.....	ST-19	
Tightening torque of standard bolts.....	GI-47	
Timing belt.....	EM-17	
Tire rotation.....	MA-25	
Tire size.....	GI-42	
Torque converter installation.....	AT-363	

ALPHABETICAL INDEX

Torque convertor clutch solenoid valve.....	AT-158
Tow truck towing	GI-45
Towing point.....	GI-46
TP/SW - Wiring diagram.....	EC-366
TPS - Wiring diagram.....	EC-165
Transaxle serial number	GI-42
TRANSMT - Wiring diagram	EL-310
Tread-FR&RR (Dimensions).....	GI-42
Trim	BT-28
Trouble diagnoses	GI-32
T/TOW - Wiring diagram	EL-68
TURN - Wiring diagram.....	EL-64
Turn signal lamp.....	EL-63
Two trip detection logic.....	EC-50
Two-pole lift.....	GI-45

U

Under body.....	BT-63
-----------------	-------

V

Vacuum cut valve	EC-28, 467
Vacuum cut valve bypass valve.....	EC-28, 453, 460
Vacuum hose (brake system).....	BR-20
Vacuum hose drawing (Engine control).....	EC-22
Valve clearance	EM-60
Valve guide.....	EM-33
Valve seat.....	EM-35
Valve spring.....	EM-37
Vanity mirror lamp	EL-77
Vehicle identification number	GI-41
Vehicle recovery (freeing a stuck vehicle).....	GI-46
Vehicle speed sensor (VSS).....	EC-352
VENT/V - Wiring diagram.....	EC-329, 434, 449
Viscosity number (SAE)	MA-12
VSS - Wiring diagram.....	EC-354

W

WARN - Wiring diagram.....	EL-104
Warning buzzer	EL-109
Warning chime	EL-109
Warning lamps	EL-101
Washer, front	EL-117
Washer, rear.....	EL-122
Water pump.....	LC-9
Water temperature gauge	EL-85
Weatherstrip - See Exterior.....	BT-36
Wheel alignment (front)	SU-6
Wheel alignment (rear).....	SU-17
Wheel balance.....	MA-25
Wheel bearing (front).....	AX-4
Wheel bearing (rear).....	AX-18
Wheel hub (front).....	AX-5
Wheel hub (rear).....	AX-19
Wheel sensors (ABS).....	BR-53, 73
Wheel size	GI-42
Wheelarch height.....	SU-5
Wheelbase (Dimensions).....	GI-42
Wide open & closed throttle position switch.....	EC-160
Width (Dimensions).....	GI-42
WINDOW - Wiring diagram.....	EL-239
Window, door.....	BT-20
Window, rear side.....	BT-56
Window, side - See Rear side window	BT-56
Windshield.....	BT-55
Windshield washer - See Front washer.....	EL-117
Windshield wiper - See Front wiper.....	EL-117
WIP/R - Wiring diagram.....	EL-123, 125
WIPER - Wiring diagram	EL-118
Wiper and washer	EL-117
Wiper, front	EL-117
Wiper, rear.....	EL-122
Wiring Diagram (Cell code) list	EL-337
Wiring diagrams.....	GI-10
Wrist pin - See Piston pin inspection.....	EM-49