

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

Numerics	
2nd brake	AT-638
2nd coast brake	AT-638
2nd coast brake hub	AT-644
A	
A/C air flow	ATC-28 , MTC-28
A/C compressor clutch removal and installation ..	ATC-174 , MTC-157
A/C compressor mounting	ATC-173 , MTC-156
A/C compressor precaution	ATC-11 , MTC-11
A/C compressor special service tool .	ATC-14 , MTC-14
A/C control operation (auto A/C)	ATC-26 , MTC-26
A/C diagnostic work flow (auto A/C) ...	ATC-127 , MTC-119
A/C evaporator	ATC-184 , MTC-166
A/C HFC134a (R134a) system identification	ATC-7 , MTC-7
A/C HFC134a (R134a) system precaution	ATC-5 , MTC-5
A/C HFC134a (R134a) system service procedure	ATC-169 , MTC-152
A/C HFC134a (R134a) system service tools ..	ATC-14 , MTC-14
A/C HFC134a system service equipment precaution ...	ATC-11 , MTC-11
A/C lubricant (R134a)	ATC-22 , MTC-22
A/C lubrication oil	ATC-22 , MTC-22
A/C operational check	ATC-52 , MTC-53
A/C self-diagnoses (auto A/C)	ATC-50 , ATC-127 , MTC-51 , MTC-119
A/C service data specification	ATC-192 , MTC-174
A/C trouble diagnoses (auto A/C)	ATC-31 , MTC-31
A/C, A - Wiring diagram	ATC-39 , MTC-40
A/T - Wiring diagram	AT-19
A/T fluid checking	AT-382 , AT-421
A/T fluid replacement	AT-382
A/T fluid temperature sensor	AT-112 , AT-463 , AT-468
A/T IND - Wiring diagram	DI-30
A/T indicator	DI-30
A/T self-diagnoses	AT-42 , AT-54 , AT-442 , AT-447 , AT-448
A/T shift lock system	AT-247 , AT-600
A/T shift lock system - Wiring diagram	AT-248 , AT-601
A/T trouble diagnoses	AT-411
A/T Wiring diagram AT - 1ST	AT-129 , AT-484
A/T Wiring diagram AT - 2ND	AT-134 , AT-488
A/T Wiring diagram AT - 3RD	AT-139 , AT-494
A/T Wiring diagram AT - 4TH	AT-144 , AT-500
A/T Wiring diagram AT - 5TH	AT-505
A/T Wiring diagram AT - BA/FTS	AT-191
A/T Wiring diagram AT - CAN	AT-104 , AT-451
A/T Wiring diagram AT - ENG SS	AT-124
A/T Wiring diagram AT - FTS	AT-114 , AT-464
A/T Wiring diagram AT - FTSP	AT-469
A/T Wiring diagram AT - LPSV	AT-164
A/T Wiring diagram AT - LVRSW	AT-567
A/T Wiring diagram AT - MAIN	AT-100
A/T Wiring diagram AT - NONDTC	AT-209
A/T Wiring diagram AT - OVRCSV	AT-186
A/T Wiring diagram AT - PC/A	AT-513
A/T Wiring diagram AT - PC/B	AT-548
A/T Wiring diagram AT - PC/C	AT-557
A/T Wiring diagram AT - PC/CS	AT-562
A/T Wiring diagram AT - PNP/SW	AT-108 , AT-458
A/T Wiring diagram AT - PWR/IN	AT-571
A/T Wiring diagram AT - SFTFNC	AT-553
A/T Wiring diagram AT - SSV/A	AT-170 , AT-518
A/T Wiring diagram AT - SSV/B	AT-175 , AT-523
A/T Wiring diagram AT - SSV/C	AT-528
A/T Wiring diagram AT - SSV/CS	AT-533
A/T Wiring diagram AT - SSV/D	AT-538
A/T Wiring diagram AT - SSV/E	AT-543
A/T Wiring diagram AT - TCCSIG	AT-156 , AT-510
A/T Wiring diagram AT - TCV	AT-151
A/T Wiring diagram AT - TPS	AT-181
A/T Wiring diagram AT - TRSC	AT-474
A/T Wiring diagram AT - VSS A/T	AT-120
A/T Wiring diagram AT - VSSATC	AT-478
A/T Wiring diagram AT - VSSMTR	AT-197 , AT-202
ABS - Wiring diagram	BRC-16 , BRC-60
ABS (anti-lock brake system)	BRC-7 , BRC-50
Accelerator control system	ACC-3
Accelerator pedal position (APP) sensor	EC-655 , EC-662 , EC-678
Accelerator pedal released position learning	EC-94
Active damper suspension system - Wiring diagram	FSU-5
AF1B1-Wiring diagram	EC-531 , EC-539 , EC-547 , EC-556 , EC-566 , EC-575 , EC-587
AF1B2-Wiring diagram	EC-533 , EC-541 , EC-549 , EC-558 , EC-568 , EC-577 , EC-589
AF1HB1-Wiring diagram	EC-445
AF1HB2-Wiring diagram	EC-447
Aiming adjustment	LT-27
Air bag	SRS-3
Air bag precautions	GI-3 , AP-2
Air bleeding for brake system	BR-11
Air cleaner and air duct	EM-17
Air cleaner filter	EM-18
Air cleaner filter replacement	MA-17
Air conditioner cut control	EC-31
Air flow meter - See Mass air flow sensor	EC-192 , EC-202
Air fuel ratio sensor 1 ..	EC-529 , EC-537 , EC-545 , EC-554 , EC-563 , EC-572 , EC-584
Air fuel ratio sensor 1 heater	EC-444
Air mix. door motor	ATC-64 , MTC-63
Ambient sensor .	ATC-129 , ATC-140 , MTC-120 , MTC-126
Angular tightening application	EM-5
APPS1 - Wiring diagram	EC-657
APPS2 - Wiring diagram	EC-664
APPS3 - Wiring diagram	EC-680
ASC/BS - Wiring diagram	EC-628

ALPHABETICAL INDEX

ASC/SW - Wiring diagram	EC-620
ASCBOF - Wiring diagram	EC-734
ASCD	EC-32
ASCD brake switch	EC-626 , EC-733
ASCD clutch switch	EC-626 , EC-733
ASCD indicator lamp	EC-740
ASCD steering switch	EC-618
ASCIND - Wiring diagram	EC-741
AUDIO - Wiring diagram	AV-15
Auto air conditioner - Wiring diagram	ATC-39 , MTC-40
Auto anti-dazzling inside mirror	GW-80 , GW-81
Autolamp	LT-40
Automatic amplifier	ATC-48 , ATC-55 , MTC-55
Automatic transaxle number	GI-44
Automatic transmission fluid replacement	MA-23
AV and NAVI control unit	AV-115
AV communication line	AV-139

B

B5 brake	AT-646
Back door trim	EI-30
Back sonar	DI-49
BACK/L - Wiring diagram	LT-110
Back-up lamp	LT-110
Ball Joint (rear)	RSU-12
Basic inspection	EC-76
Battery	SC-4
Battery/Starting/Charging System Tester	SC-6 , SC-13 , SC-23
BCM (Body control module)	BCS-3
Block heater	EM-141
Blower motor	ATC-87 , ATC-144 , MTC-80 , MTC-128
Board computer	AV-87
Board-on lift	GI-38
Body alignment	BL-241
Body component parts	BL-230
Body construction	BL-240
Body exterior paint color	BL-229
Body repair	BL-229
Body sealing	BL-237
Bose speaker amp.	AV-8
Brake booster	BR-21
Brake fluid change	BR-11
Brake fluid level	MA-26
Brake fluid level and line check	BR-11
Brake hydraulic line	BR-12
Brake inspection	MA-26
Brake lines and cables inspection	MA-26
Brake master cylinder	BR-15
Brake pedal	BR-6
Brake switch	EC-626 , EC-650 , EC-733
BRK/SW - Wiring diagram	EC-651
Bulb specifications	LT-170
Bumper, front	EI-14
Bumper, rear	EI-16

C

Camshaft	EM-100
Camshaft inspection	EM-102
Camshaft position sensor (PHASE)	EC-322
CAN - Wiring diagram	EC-176 , LAN-17 , LAN-44 , LAN-71 , LAN-98 , LAN-128
CAN (Controller Area Network)	WT-10 , BRC-10 , BRC-54 , SE-16 , LAN-15 , LAN-42 , LAN-69 , LAN-96 , LAN-126
CAN communication	EC-175 , AT-31 , AT-103 , AT-402 , AT-450 , WT-10 , BRC-10 , BRC-54 , SE-16 , LAN-15 , LAN-42 , LAN-69 , LAN-96 , LAN-126
Canister-See EVAP canister	EC-38
CHARGE - Wiring diagram	SC-22
Charging system	SC-21
Chassis and body maintenance	MA-21
Chassis and body maintenanceSchedule 1	MA-7
Chassis and body maintenanceSchedule 2	MA-8
CHIME - Wiring diagram	DI-36
Circuit breaker	PG-66
Closed loop control	EC-28
Closed loop control (Bank 1)	EC-505
Closed loop control (Bank 2)	EC-505
Coil spring (front)	FSU-10
Coil spring (rear)	RSU-15
Collision diagnosis	SRS-59
Combination lamp, front, removal and installation	LT-29 , LT-39
Combination lamp, rear, removal and installation	LT-126
Combination meter	DI-5
Combination switch	LT-101
COMBSW - Wiring diagram	LT-101
COMM - Wiring diagram	AV-139
Component Location (auto A/C)	ATC-35 , MTC-35
Compression pressure	EM-118
Compressor clutch removal and installation	ATC-174 , MTC-157
Compressor mounting	ATC-173 , MTC-156
Compressor precaution	ATC-11 , MTC-11
Compressor special service tool	ATC-14 , MTC-14
Condenser	ATC-182 , MTC-165
Connecting rod	EM-158
Connecting rod bearing clearance	EM-160
Connecting rod bushing clearance	EM-160
Connector inspection	GI-22
Console box - See Instrument panel	IP-10
CONSULT for VDC	BRC-23 , BRC-69
CONSULT general information	GI-35
CONSULT-II for engine	EC-133
Control units (terminal arrangement)	PG-70
Controller Area Network (CAN)	WT-10 , BRC-10 , BRC-54 , SE-16 , LAN-15 , LAN-42 , LAN-69 , LAN-96 , LAN-126
Converter housing installation	AT-357
COOL/F - Wiring diagram	EC-512
Coolant mixture ratio	MA-11
Coolant replacementVQ35DE	MA-14
Cooling fan	CO-12
Cooling fan control	EC-508

ALPHABETICAL INDEX

Cooling fan motor	EC-508	Electric sunroof	RF-10
Cooling unit (A/C evaporator)	ATC-146 , ATC-184 , MTC-130 , MTC-166	Electric throttle control actuator	EC-462 , EC-464
CORNER - Wiring diagram	LT-89	Electrical diagnoses	GI-22
Cornering lamp	LT-86	Electrical load signal circuit	EC-732
Corrosion protection	BL-234	Electronic ignition (EI) system	EC-29
Crankcase ventilation system - See Positive crankcase ventilation	EC-48	EMNT - Wiring diagram	EC-722
Crankshaft	EM-141	Engine control circuit diagram	EC-122
Crankshaft position sensor (POS)	EC-314	Engine control component parts location	EC-113
Crash zone sensor	SRS-54	Engine control module (ECM)	EC-441
Cylinder block	EM-141	Engine control system diagram and chart	EC-26
Cylinder head	EM-118	Engine coolant temperature sensor (ECTS) ..	EC-216 , EC-230
Cylinder head bolt tightening	EM-121	Engine mounting control (Front)	EC-721

D

Data link connector for Consult	EC-135 , EC-146	Engine oil	LU-7
Daytime light system	LT-30	Engine oil filter replacementQR25DE	MA-18
Daytime running light - See Daytime light system ..	LT-30	Engine oil precautions	GI-3 , GI-6
Diagnosis sensor unit	SRS-57	Engine oil replacementQR25DE	MA-18
Diagnostic trouble code (DTC) for OBD system .	EC-9 , EC-56	Engine removal	EM-134
Diagnostic trouble code (DTC) inspection priority chart	EC-106	Engine serial number	GI-44
Differential gear (FF A/T)	AT-652	ETC1 - Wiring diagram	EC-465
Dimensions	GI-44	ETC2 - Wiring diagram	EC-473
Display and amp.assembly ATC-48 , ATC-55 , MTC-55		ETC3 - Wiring diagram	EC-477
Display Control Unit	AV-209	EVAP canister	EC-38
Display Unit	AV-112	EVAP canister purge volume control solenoid valve	EC-374 , EC-603
Dome light - See Interior lamp	LT-130	EVAP canister vent control valve	EC-381 , EC-611
Door glass	GW-74	EVAP control system (small leak) diagnosis ..	EC-366 , EC-406 , EC-414
Door glass Fitting Adjustment(Front)	GW-75	EVAP control system pressure sensor ...	EC-388 , EC-391 , EC-398
Door lock	BL-194	EVAP control system purge flow monitoring diagnosis .	EC-361
Door trim	EI-30	EVAP vapor lines inspection	MA-20
Door, front	GW-74	Evaporative emission (EVAP) system	EC-35
Drive belt	EM-14	Evaporator	ATC-184 , MTC-166
Driver air bag	SRS-44	Exhaust manifold	EM-27
Dropping resistor (A/T)	AT-162	Exhaust system	EX-3
DTC work support	EC-144	Exhaust system inspection	EX-3 , MA-21
DTRL - Wiring diagram	LT-35	Expansion valve	ATC-187 , MTC-169
Duct and grilles	ATC-164 , MTC-147		
DVD - Wiring Diagram	AV-77		
DVD Entertainment System	AV-74		
DVD Player	AV-85		

E

ECM input/output signal	EC-124 , EC-149	F/FOG - Wiring diagram	LT-60
ECM power supply	EC-166 , EC-451	F/PUMP - Wiring diagram	EC-716
ECM/PW - Wiring diagram	EC-452	Family Entertainment System (See DVD Entertainment System)	AV-74
ECTS - Wiring diagram	EC-218	Flow charts	GI-25
EGR function	EC-332 , EC-596	Fluid temperature sensor (A/T) ..	AT-112 , AT-463 , AT-468
EGR temperature sensor	EC-347	Fluids	MA-10
EGR volume control valve	EC-340	Fluorescent leak detector	ATC-188 , MTC-170
EGR/TS - Wiring diagram	EC-350	Fog lamp, front	LT-58
EGRC1 - Wiring diagram	EC-336 , EC-600	Foot lamp	LT-131
EGVC/V - Wiring diagram	EC-342	Freeze frame data	EC-57 , EC-137
		Front axle	FAX-5
		Front bumper	EI-14
		Front combination lamp removal and installation	LT-29 , LT-39
		Front disc brakeFront disc brake	BR-26

F

ALPHABETICAL INDEX

IPDM (Intelligent power distribution module engine room) [PG-15](#)
IVCB1 - Wiring diagram [EC-456](#)
IVCB2 - Wiring diagram [EC-458](#)

J

Jacking points [GI-38](#)
Junction box (J/B) [PG-74](#)

K

Key illumination [LT-131](#)
Keyless entry system - See Multi-remote control system [BL-54](#)
Knock sensor (KS) [EC-309](#)
KS - Wiring diagram [EC-310](#)

L

Length (Dimensions) [GI-44](#)
License lamp [LT-112](#)
Lifting points [GI-38](#)
Line pressure solenoid valve [AT-162](#)
Line pressure test (A/T) [AT-71](#), [AT-423](#)
Liquid gasket application [EM-5](#), [LU-2](#)
Location of electrical units [PG-63](#)
Low tire pressure warning system [WT-7](#)
Lubricant (R134a) A/C [ATC-22](#), [MTC-22](#)
Lubricants [MA-10](#)
Lubrication circuit (engine) [LU-5](#)
Lubrication oil A/C [ATC-22](#), [MTC-22](#)
Lubrication-locks, hinges and hood latches [MA-30](#)

M

MAFS - Wiring diagram [EC-195](#), [EC-204](#)
Magnet clutch [ATC-108](#), [ATC-174](#), [MTC-101](#), [MTC-157](#)
MAIN - Wiring diagram [EC-166](#)
Maintenance [MA-4](#)
Malfunction indicator lamp (MIL) [EC-67](#)
Manual transaxle number [GI-44](#)
Map lamp [LT-131](#)
Mass air flow sensor (MAFS) [EC-192](#), [EC-202](#)
Master cylinder (brake)Master cylinder (brake) . [BR-15](#)
Meter [DI-5](#)
METER - Wiring diagram [DI-10](#)
MIL data link connectors circuit [EC-743](#)
MIL/DL - Wiring diagram [EC-743](#)
Misfire [EC-300](#)
Mode door control linkage adjustment .. [ATC-60](#), [MTC-59](#)
Mode door motor .. [ATC-58](#), [ATC-157](#), [MTC-58](#), [MTC-141](#)
Model variation [GI-44](#)
Multiport fuel injection (MFI) system [EC-27](#)
Multiport fuel injection precautions [GI-3](#), [GI-5](#)
Multi-remote control system [BL-54](#)

N

NATS - Wiring diagram [BL-209](#)
NAVI - Wiring diagram [AV-131](#)
NAVI Control Unit [AV-209](#)
Navigation system [AV-113](#)
NVH troubleshooting (BR)NVH troubleshooting (BR) ... [BR-5](#)
NVH troubleshooting (EM) [EM-12](#)
NVH troubleshooting (FAX) [FAX-4](#)
NVH troubleshooting (RA) [RAX-4](#)
NVH troubleshooting (RSU)NVH Troubleshooting (RSU) [RSU-4](#)
NVH troubleshooting (ST) [PS-5](#)
NVH troubleshooting (WT) [WT-3](#)

O

O2H2B1 - Wiring diagram [EC-185](#)
O2H2B2 - Wiring diagram [EC-187](#)
O2S2B1 - Wiring diagram .. [EC-241](#), [EC-252](#), [EC-484](#), [EC-496](#)
O2S2B2 - Wiring diagram .. [EC-243](#), [EC-254](#), [EC-486](#), [EC-498](#)
Oil cooler (engine) [LU-15](#)
Oil filter [LU-10](#)
Oil pan (engine) [EM-31](#)
Oil pressure (engine) [LU-7](#)
Oil pump (A/T) [AT-638](#)
Oil pump (engine) [LU-11](#)
Oil pump regulator valve (engine) [LU-12](#)
Oil seal replacement (engine) [EM-114](#)
On board diagnostic system [EC-51](#)
One-way clutch No.1 [AT-644](#)
One-way clutch outer race sub assembly [AT-644](#)
ORVR (On-board Refueling Vapor Recovery) .. [EC-42](#)
Overdrive control switch [AT-239](#)
Overheat [EC-508](#)
Overrun clutch solenoid valve [AT-184](#)

P

P/SCKT - Wiring diagram [WW-52](#)
Park/Neutral position switch [EC-636](#)
Park/neutral position switch (A/T) [AT-106](#), [AT-457](#)
PCV (positive crankcase ventilation) [EC-48](#)
Periodic maintenance [MA-6](#)
Personal lamp [LT-131](#)
PGC/V - Wiring diagram [EC-376](#), [EC-605](#)
PHSB1 - Wiring diagram [EC-324](#)
PHSB2 - Wiring diagram [EC-326](#)
Pilot bushing replacement - See Pilot converter ... [EM-141](#)
Piston pin inspection [EM-158](#)
Piston ring inspection [EM-159](#)
Piston to bore clearance [EM-162](#)
PNP/SW - Wiring diagram [EC-638](#)
POS - Wiring diagram [EC-316](#)
POWER - Wiring diagram [PG-6](#)

ALPHABETICAL INDEX

<p>Power seat SE-82</p> <p>Power steering fluid level MA-28</p> <p>Power steering pressure (PSP) sensor EC-436</p> <p>Power supply routing PG-4</p> <p>Power transistor EC-686</p> <p>Power window GW-17</p> <p>PRE/SE - Wiring diagram EC-393, EC-400</p> <p>Precautions (General) GI-3</p> <p>Precautions in repairing high strength steel BL-258</p> <p>Pressure control solenoid valve A AT-512</p> <p>Pressure control solenoid valve B AT-547</p> <p>Pressure control solenoid valve C AT-556</p> <p>Pressure test (A/T) AT-71, AT-423</p> <p>PS/SEN - Wiring diagram EC-437</p>	<p>Second (2nd) seat SE-100</p> <p>SEN/PW - Wiring diagram EC-525</p> <p>SHIFT - Wiring diagram AT-248, AT-601</p> <p>Shift lock system AT-247, AT-600</p> <p>Shift schedule AT-364, AT-431</p> <p>Shift solenoid valve A (A/T) AT-168, AT-517</p> <p>Shift solenoid valve B (A/T) AT-173, AT-522</p> <p>Shift solenoid valve C (A/T) AT-527</p> <p>Shift solenoid valve D (A/T) AT-537</p> <p>Shift solenoid valve E (A/T) AT-542</p> <p>Shock absorber (front) FSU-11</p> <p>Shock absorber (rear) RSU-11</p> <p>Side air bag (satellite) sensor SRS-55</p> <p>Side curtain air bag SRS-52</p> <p>Side trim EI-32</p> <p>SMJ (super multiple junction) PG-73</p> <p>SONAR - Wiring diagram DI-51</p> <p>Spare tire size GI-44</p> <p>Spark plug EM-39</p> <p>Spark plug replacement QR25DE MA-19</p> <p>Specification value EC-155</p> <p>Speedometer DI-5</p> <p>Spiral cable SRS-46</p> <p>SROOF - Wiring diagram RF-12</p> <p>SRS - See Supplemental Restraint System SRS-5</p> <p>SRS - Wiring diagram SRS-12</p> <p>SRS Trouble diagnoses SRS-8</p> <p>Stabilizer bar (front) FSU-12</p> <p>Stabilizer bar (rear) RSU-17</p> <p>Stall test (A/T) AT-68, AT-421</p> <p>Standardized relay PG-71</p> <p>START - Wiring diagram SC-11</p> <p>Starting system SC-10</p> <p>Steering gear and linkage inspection MA-27</p> <p>Step lamp LT-131</p> <p>Stop lamp LT-107</p> <p>Stop lamp switch EC-626, EC-650, EC-733</p> <p>STOP/L - Wiring diagram LT-108</p> <p>Strut (front) FSU-10</p> <p>Sun roof, electric RF-10</p> <p>Sunload sensor ATC-135</p> <p>Sunroof RF-20</p> <p>Supplemental Restraint System SRS-5</p> <p>Supplemental restraint system - Wiring diagram SRS-12</p> <p>Symbols and abbreviations GI-8, GI-9, GI-20</p> <p>Symptom matrix chart EC-109</p> <p>System readiness test (SRT) code EC-58</p>
R	
<p>Radiator fan - See Cooling fan CO-12</p> <p>Rear Audio Remote Control Unit AV-68</p> <p>Rear bumper EI-16</p> <p>Rear combination lamp removal and installation ... LT-126</p> <p>Rear disc brakeRear disc brake BR-32</p> <p>Rear seat SE-100</p> <p>Rear seat belt SB-6</p> <p>Rear suspension RSU-9</p> <p>Rear suspensionRear suspension RSU-5</p> <p>Rear washer WW-34</p> <p>Rear window GW-13</p> <p>Rear window defogger GW-82</p> <p>Rear wiper WW-34</p> <p>Refrigerant connection precaution ATC-7, MTC-7</p> <p>Refrigerant discharging evacuating charging ATC-169, MTC-152</p> <p>Refrigerant general precaution ATC-6, MTC-6</p> <p>Refrigerant lines ATC-169, ATC-177, ATC-178, MTC-152, MTC-160, MTC-161</p> <p>Refrigerant pressure sensor . EC-726, ATC-113, ATC-182, MTC-164</p> <p>Remote keyless entry system BL-54</p> <p>Removal and installation (A/T) AT-260, AT-611</p> <p>Revolution sensor (A/T) AT-118, AT-477</p> <p>Road wheel size GI-44</p> <p>Rocker cover EM-44</p> <p>Room lamp - See Interior lamp LT-130</p> <p>ROOM/L - Wiring diagram LT-137</p> <p>RP/SEN - Wiring diagram EC-727</p>	<p>Side trim EI-32</p> <p>SMJ (super multiple junction) PG-73</p> <p>SONAR - Wiring diagram DI-51</p> <p>Spare tire size GI-44</p> <p>Spark plug EM-39</p> <p>Spark plug replacement QR25DE MA-19</p> <p>Specification value EC-155</p> <p>Speedometer DI-5</p> <p>Spiral cable SRS-46</p> <p>SROOF - Wiring diagram RF-12</p> <p>SRS - See Supplemental Restraint System SRS-5</p> <p>SRS - Wiring diagram SRS-12</p> <p>SRS Trouble diagnoses SRS-8</p> <p>Stabilizer bar (front) FSU-12</p> <p>Stabilizer bar (rear) RSU-17</p> <p>Stall test (A/T) AT-68, AT-421</p> <p>Standardized relay PG-71</p> <p>START - Wiring diagram SC-11</p> <p>Starting system SC-10</p> <p>Steering gear and linkage inspection MA-27</p> <p>Step lamp LT-131</p> <p>Stop lamp LT-107</p> <p>Stop lamp switch EC-626, EC-650, EC-733</p> <p>STOP/L - Wiring diagram LT-108</p> <p>Strut (front) FSU-10</p> <p>Sun roof, electric RF-10</p> <p>Sunload sensor ATC-135</p> <p>Sunroof RF-20</p> <p>Supplemental Restraint System SRS-5</p> <p>Supplemental restraint system - Wiring diagram . SRS-12</p> <p>Symbols and abbreviations GI-8, GI-9, GI-20</p> <p>Symptom matrix chart EC-109</p> <p>System readiness test (SRT) code EC-58</p>
S	
<p>SAE J1930 terminology list GI-48</p> <p>SEAT - Wiring diagram SE-82, SE-83</p> <p>Seat belt inspection SB-11, MA-31</p> <p>Seat belt pre-tensioner SRS-56</p> <p>Seat belt, front SB-4</p> <p>Seat belt, rear SB-6</p> <p>Seat, front SE-89</p> <p>Seat, rear SE-100</p> <p>Seat, third (3rd) SE-100</p>	<p>Tachometer DI-5</p> <p>Tail lamp LT-112</p> <p>TAIL/L - Wiring diagram LT-114</p> <p>TCM circuit diagram AT-19, AT-420</p> <p>TCM inspection table AT-97, AT-439</p> <p>TCS - Wiring diagram BRC-15, BRC-16, BRC-59, BRC-60</p> <p>TCS (traction control system) BRC-7, BRC-50</p>
T	

ALPHABETICAL INDEX

TCS component parts and connector location [BRC-14](#), [BRC-58](#)
TCS wheel sensors [BRC-14](#), [BRC-58](#)
Three way catalyst [EM-27](#)
Three way catalyst function (Bank 1) [EC-355](#)
Three way catalyst function (Bank 2) [EC-355](#)
Three way catalyst precautions [GI-3](#), [GI-5](#)
Throttle control motor [EC-476](#)
Throttle control motor relay [EC-471](#)
Throttle position sensor (TPS) .. [EC-222](#), [EC-292](#), [EC-520](#), [EC-522](#), [EC-670](#)
Throttle position switch [AT-239](#)
Throttle valve closed position learning [EC-94](#)
Tightening torque of standard bolts [GI-42](#)
Time lag test [AT-422](#)
Timing chain [EM-58](#)
Tire rotation [MA-26](#)
Tire size [GI-44](#)
Torque converter installation [AT-260](#), [AT-357](#), [AT-611](#)
Torque convertor clutch solenoid valve ... [AT-149](#), [AT-509](#)
Tow truck towing [GI-41](#)
Towing point [GI-41](#)
TPS1 - Wiring diagram [EC-294](#)
TPS2 - Wiring diagram [EC-224](#)
TPS3 - Wiring diagram [EC-672](#)
Traction control system - Wiring diagram [BRC-15](#), [BRC-59](#)
Transaxle case cover [AT-646](#)
Transaxle serial number [GI-44](#)
Tread-FR&RR (Dimensions) [GI-44](#)
Trim [EI-32](#)
TRNSCV - Wiring diagram [BL-226](#)
Trouble diagnoses [GI-9](#)
Turbine revolution sensor [AT-473](#)
TURN - Wiring diagram [LT-73](#)
Turn signal lamp [LT-69](#), [LT-86](#)
Two trip detection logic [EC-51](#)
Two-pole lift [GI-38](#)
Tyre pressure monitoring system - trouble diagnoses .. [WT-11](#)
Tyre pressure monitoring system - wiring diagram [WT-11](#)

V

Vacuum hose (brake system)Vacuum hose (brake system) [BR-24](#)
Vacuum hose drawing (Engine control) [EC-121](#)
Valve clearance [EM-109](#)
Valve guide [EM-129](#), [EM-130](#)
Valve lifter [EM-100](#)
Valve seat [EM-131](#)
Valve spring [EM-132](#)
Variable induction air control system (VIAS) .. [EC-645](#), [EC-699](#)
VDC (vehicle dynamics control) [BRC-50](#)
VDC -Wiring diagram [BRC-60](#)
Vehicle identification number [GI-44](#)

Vehicle recovery (freeing a stuck vehicle) [GI-41](#)
Vehicle speed sensor (VSS) [EC-430](#)
VENT/V - Wiring diagram [EC-383](#), [EC-613](#)
VIAS - Wiring diagram [EC-701](#)
VIAS/V - Wiring diagram [EC-646](#)
Video Monitor [AV-85](#)
VIN registration [EC-94](#)
Viscosity number (SAE) [MA-11](#)

W

W/ANT - Wiring diagram [AV-71](#)
WARN - Wiring diagram [DI-23](#)
Warning chime [DI-33](#)
Warning lamps [DI-22](#)
Washer, front [WW-4](#)
Washer, rear [WW-34](#)
Water temperature gauge [DI-5](#)
Wheel alignment (rear)Wheel alignment (rear) . [RSU-6](#)
Wheel balance [WT-5](#), [MA-24](#)
Wheel bearing (front) [FAX-5](#)
Wheel bearing (rear) [RAX-5](#)
Wheel hub (front) [FAX-5](#)
Wheel hub (rear) [RAX-5](#)
Wheel sensors (ABS) [BRC-8](#), [BRC-52](#)
Wheel size [GI-44](#)
Wheelarch heightWheelarch height [RSU-19](#)
Wheelbase (Dimensions) [GI-44](#)
Width (Dimensions) [GI-44](#)
WINDOW - Wiring diagram [GW-31](#)
Window, door [GW-74](#)
Window, rear [GW-13](#)
Windshield [GW-11](#)
WIP/R - Wiring diagram [WW-37](#)
WIPER - Wiring diagram [WW-11](#)
Wiper, front [WW-4](#)
Wiper, rear [WW-34](#)
Wiring Diagram (Cell code) list [PG-60](#)
Wiring diagrams [GI-8](#), [GI-13](#)
WT-T/WARN - Wiring diagram [WT-11](#)