

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EF &
EC

FE

CL

MT

AT

FA

RA

BR

ST

BF

HA

EL

IDX

ALPHABETICAL INDEX

A

ABS (anti-lock brake system).....	BR-28
ABS actuator	BR-35
ABS circuit diagram.....	BR-33
ABS component parts and connector locations.....	BR-45
ABS control unit.....	BR-35
ABS hydraulic circuit.....	BR-32
ABS self-diagnosis.....	BR-44
ABS symptom chart.....	BR-42
ABS system components.....	BR-30
ABS trouble diagnoses.....	BR-38
ABS wheel sensors.....	BR-35
ABS wiring diagram.....	BR-34
A/C air flow.....	HA-8
A/C circuit diagram (manual A/C)	HA-44
A/C component layout.....	HA-7
A/C compressor clutch removal and installation	HA-23
A/C compressor mounting.....	HA-19
A/C compressor precaution	HA-5
A/C control operation (manual A/C).....	HA-6
A/C diagnostic work flow (manual A/C).....	HA-26
A/C harness layout (manual A/C).....	HA-42
A/C HFC134a (R134a) system identification	HA-2
A/C HFC134a (R134a) system introduction.....	HA-2
A/C HFC134a (R134a) system precaution.....	HA-3
A/C HFC134a (R134a) system service procedure.....	HA-15
A/C HFC134a (R134a) system service tools.....	HA-11
A/C HFC134a system service equipment precaution	HA-13
A/C lubrication oil.....	HA-21
A/C operational check	HA-27
A/C performance chart.....	HA-29
A/C performance test diagnoses	HA-30
A/C push control	HA-73
A/C relay	HA-68
A/C service data specification	HA-78
A/C switch	HA-67
A/C symptom chart (manual A/C).....	HA-36
A/C trouble diagnoses (manual A/C).....	HA-35
A/C wiring diagram (manual A/C)	HA-48
Acceleration cut control (SR engine) ..	EF&EC-26
Accelerator control system.....	FE-2
Accelerator wire adjustment.....	FE-2
Activated carbon canister (GA engine).....	EF&EC-206
Activated carbon canister (SR engine).....	EF&EC-18

Activated carbon canister inspection (GA engine).....	EF&EC-381
Air bag	BF-86
Air bag caution labels.....	BF-88
Air bag precautions	GI-2
Air bag removal and installation.....	BF-92
Air bag scrapping.....	BF-96
Air bag system trouble diagnoses	BF-98
Air bleeding for brake system	BR-3
Air cleaner filter replacement (GA engine).....	MA-19
Air cleaner filter replacement (SR engine)	MA-12
Air control cable adjustment.....	HA-70
Air Spoiler (Rear).....	BF-81
Alternator	EL-22
Angular tightening application.....	EM-2
Anti-freeze coolant.....	MA-8
ASCD (automatic speed control device).....	EL-70
AT control unit (RE4F03V).....	AT-94
AT fluid temperature sensor (RE4F03V).....	AT-98
AT mode switch (RE4F03V).....	AT-99
Audio	EL-67
Automatic transaxle number	GI-18
Automatic transmission fluid	MA-8
Automatic transmission fluid replacement.....	MA-23
Auxiliary air control (AAC) (GA engine).....	EF&EC-205
Auxiliary air control (AAC) (SR engine).....	EF&EC-16

B

Back-up lamp.....	EL-32
Back-up lamp switch (MT).....	MT-6
Ball joint front axle.....	FA-24
Battery.....	EL-11
Baulk ring (MT) (RS5F31A).....	MT-11
Baulk ring (MT) (RS5F32V).....	MT-31
Belt inspection (drive belt) (GA engine).....	MA-16
Belt inspection (drive belt) (SR engine)	MA-9
Blower motor.....	HA-69
Blower resistor.....	HA-69
Body alignment.....	BF-82
Boring/horning cylinder block (GA engine).....	EM-102
Brake booster.....	BR-12
Brake control valve (Proportioning Valve).....	BR-7
Brake fluid	MA-8
Brake fluid change.....	BR-3
Brake fluid level	MA-24

ALPHABETICAL INDEX

Brake fluid level and line check	BR-3
Brake hydraulic line	BR-5
Brake inspection	MA-24
Brake lines and cables inspection	MA-24
Brake lining wear temporary checking	MA-25
Brake master cylinder	BR-9
Brake pedal	BR-8

C

Camshaft inspection (GA engine)	EM-86
Camshaft inspection (SR engine)	EM-36
Camshaft position sensor (CMPS) (GA engine)	EF&EC-201
Camshaft position sensor (CMPS) (SR engine)	EF&EC-12
Camshaft position sensor inspection (GA engine)	EF&EC-372
Camshaft position sensor inspection (SR engine)	EF&EC-181
Canister control (GA engine)	EF&EC-212
Canister control (SR engine)	EF&EC-24
Charging system	EL-21
Chassis and body maintenance	MA-22
Cigarette lighter	EL-63
Clearance lamp	EL-31
Clock	EL-63
Clutch cable	CL-3
Clutch cover	CL-7
Clutch disc	CL-6
Clutch pedal	CL-4
Clutch pedal free play	CL-4
Clutch pedal height	CL-4
Clutch release bearing	CL-5
Clutch withdrawal lever	CL-5
Coil spring (front)	FA-23
Coil spring (rear)	RA-9
Combination lamp (rear) removal and installation	BF-35
Combination meter	EL-38
Combination switch	EL-24
Compression pressure (GA engine)	EM-71
Compression pressure (SR engine)	EM-11
Compressor clutch removal and installation	HA-23
Compressor mounting	HA-19
Compressor precaution	HA-5
Connecting rod (GA engine)	EM-100
Connecting rod (SR engine)	EM-50
Connecting rod bearing clearance (GA engine)	EM-104
Connecting rod bearing clearance (SR engine)	EM-54
Connecting rod bushing clearance (SR engine)	EM-55
Consult for ECCS (GA engine)	EF&EC-240

Consult for ECCS (SR engine)	EF&EC-50	
CONSULT general information	GI-14	
Control lever (MT)	MT-9	
Control valve (AT) (RE4F03V)	AT-172	
Control valve (AT) (RL4F03A)	AT-164	GI
Converter housing installation	AT-124	
Coolant replacement (GA engine)	MA-17	MA
Coolant replacement (SR engine)	MA-10	
Cooling circuit (GA engine)	LC-17	
Cooling circuit (SR engine)	LC-10	EM
Cooling fan control (GA engine)	EF&EC-215	
Cooling fan control (SR engine)	EF&EC-25	
Cooling fan motor inspection (GA engine)	EF&EC-375	LC
Cooling fan motor inspection (SR engine)	EF&EC-187	EF & EC
Cooling fan relay inspection (GA engine)	EF&EC-377	
Cooling fan relay inspection (SR engine)	EF&EC-188	FE
Counter gear (MT) (RS5F31A)	MT-11	
Counter gear (MT) (RS5F32V)	MT-31	CL
Coupling sleeve (MT) (RS5F31A)	MT-11	
Coupling sleeve (MT) (RS5F32V)	MT-31	
Crankcase emission control system (GA engine)	EF&EC-383	MT
Crankcase emission control system (SR engine)	EF&EC-193	AT
Crankshaft assembly (GA engine)	EM-106	
Crankshaft assembly (SR engine)	EM-57	
Crankshaft bearing clearance (GA engine)	EM-103	FA
Crankshaft bearing clearance (SR engine)	EM-52	RA
Crankshaft inspection (GA engine)	EM-102	
Crankshaft inspection (SR engine)	EM-52	
Cylinder block (GA engine)	EM-98	BR
Cylinder block (SR engine)	EM-48	
Cylinder block boring (GA engine)	EM-102	
Cylinder block boring (SR engine)	EM-52	ST
Cylinder head (GA engine)	EM-85	
Cylinder head (SR engine)	EM-33	BF
Cylinder head bolt tightening (GA engine)	EM-79	
Cylinder head bolt tightening (SR engine)	EM-25	HA

D

Data link connector for Consult (GA engine)	EF&EC-206	IDX
Data link connector for Consult (SR engine)	EF&EC-18	
Daytime light system	EL-27	
Differential gear (FF AT) (RE4F03V)	AT-236	
Differential gear (FF AT) (RL4F03A)	AT-232	
Differential gear (FF MT) (RS5F31A)	MT-21	

ALPHABETICAL INDEX

Differential gear (FF MT) (RS5F32V).....	MT-44
Dimensions	GI-19
Door adjustment (front).....	BF-8
Door adjustment (rear).....	BF-9
Door mirror	BF-80
Drive plate runout (SR engine).....	EM-56
Drive shaft (front)	FA-12
Dropping resistor (AT) (RE4F03V)	AT-100
Dual pressure switch.....	HA-67

E

ECCS basic inspection (GA engine) ..	EF&EC-252
ECCS basic inspection (SR engine)	EF&EC-62
ECCS circuit diagram (GA engine)....	EF&EC-200
ECCS circuit diagram (SR engine).....	EF&EC-11
ECCS component parts location (GA engine)	EF&EC-195
ECCS component parts location (SR engine)	EF&EC-5
ECCS fail-safe system (GA engine)...	EF&EC-217
ECCS on-board diagnostic system (GA engine)	EF&EC-234
ECCS on-board diagnostic system (SR engine)	EF&EC-44
ECCS relay inspection (GA engine) ..	EF&EC-377
ECCS relay inspection (SR engine)...	EF&EC-188
ECCS system diagram and chart (GA engine)	EF&EC-197
ECCS system diagram and chart (SR engine)	EF&EC-8
ECCS trouble diagnoses (GA engine)	EF&EC-227
ECCS trouble diagnoses (SR engine)	EF&EC-37
ECCS wiring diagram.....	Foldout page
ECM input/output signal inspection (GA engine)	EF&EC-368
ECM input/output signal inspection (SR engine).....	EF&EC-177
EGR canister control solenoid valve inspection (SR engine)	EF&EC-186
EGR control (EGRC) - BPT valve (GA engine)	EF&EC-205
EGR control (EGRC) - BPT valve (SR engine)	EF&EC-17
EGR control (EGRC) - solenoid valve (GA engine)	EF&EC-205
EGR control (EGRC) - solenoid valve (SR engine)	EF&EC-17
EGR temperature sensor (GA engine)	EF&EC-206
EGR temperature sensor (SR engine)	EF&EC-17
EGR temperature sensor inspection (GA engine).....	EF&EC-378

EGR temperature sensor inspection (SR engine).....	EF&EC-187
EGR valve inspection (GA engine)	EF&EC-378
EGR valve inspection (SR engine)	EF&EC-186
EGRC - BPT valve inspection (GA engine)	EF&EC-378
EGRC - BPT valve inspection (SR engine).....	EF&EC-187
Electrical units location.....	EL-86
Engine control module (ECM) (GA engine)	EF&EC-201
Engine control module (ECM) (SR engine)	EF&EC-12
Engine coolant temperature sensor (ECTS) (GA engine)	EF&EC-202
Engine coolant temperature sensor (ECTS) (SR engine).....	EF&EC-13
Engine coolant temperature sensor inspection (GA engine).....	EF&EC-372
Engine coolant temperature sensor inspection (SR engine)	EF&EC-181
Engine oil.....	MA-8
Engine oil filter replacement (GA engine).....	MA-20
Engine oil filter replacement (SR engine)	MA-13
Engine oil precautions.....	GI-4
Engine oil replacement (GA engine).....	MA-19
Engine oil replacement (SR engine)	MA-13
Engine outer component parts (GA engine)	EM-67
Engine outer component parts (SR engine)	EM-8
Engine removal (GA engine)	EM-95
Engine removal (SR engine).....	EM-45
Engine serial number	GI-18
Evaporative emission system (GA engine)	EF&EC-381
Evaporative emission system (SR engine).....	EF&EC-191
Exhaust gas recirculation (EGR) system (GA engine)	EF&EC-212
Exhaust gas recirculation (EGR) system (SR engine)	EF&EC-24
Exhaust gas recirculation (EGR) valve (GA engine)	EF&EC-205
Exhaust gas recirculation (EGR) valve (SR engine)	EF&EC-17
Exhaust system.....	FE-5
Exhaust system inspection	MA-22
Exterior.....	BF-31
Exterior lamp	EL-31

F

Fan switch	HA-68
Final drive (FF AT) (RE4F03V)	AT-236

ALPHABETICAL INDEX

Final drive (FF AT) (RL4F03A)	AT-232
Final drive (FF MT) (RS5F31A).....	MT-21
Final drive (FF MT) (RS5F32V).....	MT-44
Fluid temperature sensor (AT) (RE4F03V)	AT-98
Fluids	MA-8
Flywheel runout (GA engine)	EM-105
Flywheel runout (SR engine)	EM-56
Fog lamp, front.....	EL-33
Fork rod (MT) (RS5F31A).....	MT-12
Fork rod (MT) (RS5F32V).....	MT-32
Forward clutch	AT-203
Front axle.....	FA-8
Front bumper.....	BF-5
Front disc brake	BR-14
Front suspension	FA-22
Fuel check valve inspection (GA engine)	EF&EC-382
Fuel check valve inspection (SR engine).....	EF&EC-192
Fuel filter (GA engine).....	EF&EC-206
Fuel filter (SR engine).....	EF&EC-18
Fuel filter replacement (GA engine).....	MA-19
Fuel filter replacement (SR engine).....	MA-11
Fuel gauge	EL-40
Fuel injector (GA engine).....	EF&EC-202
Fuel injector (SR engine)	EF&EC-14
Fuel line inspection (GA engine).....	MA-18
Fuel line inspection (SR engine)	MA-11
Fuel precautions.....	GI-5
Fuel pressure check (GA engine).....	EF&EC-379
Fuel pressure check (SR engine).....	EF&EC-189
Fuel pressure regulator (GA engine)	EF&EC-203
Fuel pressure regulator (SR engine) ..	EF&EC-15
Fuel pressure release (GA engine)...	EF&EC-379
Fuel pressure release (SR engine) ...	EF&EC-189
Fuel pump (GA engine)	EF&EC-204
Fuel pump (SR engine)	EF&EC-15
Fuel pump control (GA engine)	EF&EC-212
Fuel pump control (SR engine).....	EF&EC-24
Fuel pump inspection (GA engine)....	EF&EC-373
Fuel pump inspection (SR engine)	EF&EC-182
Fuel pump relay inspection (GA engine)	EF&EC-377
Fuel system.....	FE-3
Fuel tank vacuum relief valve inspection (GA engine).....	EF&EC-382
Fuel tank vacuum relief valve inspection (SR engine)	EF&EC-192
Fuel temperature sensor inspection (GA engine)	EF&EC-378
Fuse.....	EL-10
Fusible link.....	EL-10

G

Gears (MT) (RS5F31A).....	MT-11
Gears (MT) (RS5F32V).....	MT-31

GI

H

Harness connector	EL-4
Harness layout.....	EL-88
Hazard warning lamp	EL-34
Headlamp (For Canada)	EL-27
Headlamp (For U.S.A.).....	EL-26
Heated oxygen (H02S) heater control (SR engine)	EF&EC-26
Heated oxygen sensor (H02S) (GA engine)	EF&EC-203
Heated oxygen sensor (H02S) (SR engine)	EF&EC-15
Heated oxygen sensor heater inspection (SR engine)	EF&EC-183
Heated oxygen sensor monitor (GA engine)	EF&EC-239
Heated oxygen sensor monitor (SR engine)	EF&EC-49
Heater wiring diagram.....	HA-52
Height (Dimensions).....	GI-19
HFC134a (R134a) system identification	HA-2
HFC134a (R134a) system introduction	HA-2
HFC134a (R134a) system precaution	HA-3
HFC134a (R134a) system service procedure.....	HA-15
HFC134a (R134a) system service tools.....	HA-11
HFC134a system service equipment precaution	HA-13
High clutch	AT-198
Hood adjustment	BF-5
Horn.....	EL-63
How to follow flow chart in trouble diagnoses.....	GI-11
How to read wiring diagrams.....	GI-8
How to use this manual	GI-6
Hydraulic lash adjuster inspection (SR engine).....	EM-40

MA

EM

LC

EF &
EC

FE

CL

MT

AT

FA

RA

BR

ST

BF

HA

EL

I

IACV - air regulator inspection (GA engine)	EF&EC-375
IACV - air regulator inspection (SR engine).....	EF&EC-185
IACV - FICD solenoid valve inspection (GA engine).....	EF&EC-375

IDX

ALPHABETICAL INDEX

IACV - FICD solenoid valve inspection (SR engine)	EF&EC-185
IACV-AAC valve inspection (GA engine)	EF&EC-374
IACV-AAC valve inspection (SR engine).....	EF&EC-184
Identification plate	GI-18
Idle air adjusting (IAA) unit (GA engine)	EF&EC-204
Idle air control (IAC) system (GA engine)	EF&EC-211
Idle air control (IAC) system (SR engine)	EF&EC-23
Idle air control (IACV) - fast idle control (GA engine)	EF&EC-204
Idle air control valve (IACV) (GA engine)	EF&EC-204
Idle air control valve (IACV) (SR engine)	EF&EC-16
Idle air control valve (IACV) - air regulator (SR engine).....	EF&EC-27
Idle mixture ratio inspection (GA engine)	EF&EC-219
Idle mixture ratio inspection (SR engine)	EF&EC-30
Idle speed inspection (GA engine) ...	EF&EC-219
Idle speed inspection (SR engine)	EF&EC-30
Ignition coil inspection (GA engine) ..	EF&EC-373
Ignition coil inspection (SR engine)...	EF&EC-182
Ignition timing inspection (GA engine)	EF&EC-219
Ignition timing inspection (SR engine)	EF&EC-30
Illumination	EL-36
Inhibitor switch (RE4F03V)	AT-99
Inhibitor switch (RL4F03A)	AT-30
Inhibitor switch inspection (GA engine)	EF&EC-378
Inhibitor switch inspection (SR engine).....	EF&EC-188
Injection removal and installation (GA engine)	EF&EC-380
Injection removal and installation (SR engine).....	EF&EC-190
Injector inspection (GA engine).....	EF&EC-375
Injector inspection (SR engine)	EF&EC-186
Instrument panel.....	BF-25
Intake door control linkage adjustment (Lever control type)	HA-71
Intake door control linkage adjustment (Push control type).....	HA-72
Interior.....	BF-27
Interior lamp	EL-37

J

Jacking points.....	GI-22
---------------------	-------

K

Knock sensor (KS) (SR engine).....	EF&EC-18
Knock sensor inspection (SR engine).....	EF&EC-185

L

Length (Dimensions)	GI-19
Lifting points	GI-20
Line pressure solenoid valve (RE4F03V)	AT-98
Line pressure test (AT) (RE4F03V)	AT-103
Line pressure test (AT) (RL4F03A)	AT-26
Liquid gasket application	EM-3
Low and reverse brake	AT-209
Lubricants	MA-8
Lubrication circuit (GA engine)	LC-14
Lubrication circuit (SR engine).....	LC-6
Lubrication oil A/C	HA-21
Lubrication-locks, hinges and hood latches	MA-27

M

Magnet clutch	HA-23
Main drive gear (MT) (RS5F31A)	MT-11
Main drive gear (MT) (RS5F32V)	MT-31
Mainshaft (MT) (RS5F31A).....	MT-11
Mainshaft (MT) (RS5F32V).....	MT-31
Maintenance	MA-1
Maintenance (engine) (GA engine)	MA-16
Maintenance (engine) (SR engine).....	MA-9
Maintenance general	MA-3
Maintenance periodic.....	MA-5
Maintenance schedule (1).....	MA-6
Maintenance schedule (2).....	MA-7
Manual steering gear	ST-13
Manual transaxle number.....	GI-18
Manual transmission oil	MA-8
Manual transmission oil replacement	MA-22
Mass air flow sensor (MAFS) (GA engine)	EF&EC-201
Mass air flow sensor (MAFS) (SR engine)	EF&EC-12
Mass air flow sensor inspection (GA engine)	EF&EC-372

ALPHABETICAL INDEX

Mass air flow sensor inspection (SR engine).....	EF&EC-181
Master cylinder (brake)	BR-9
Meter and gauges.....	EL-38
Mode door control linkage adjustment	HA-71
Model variation	GI-16
Molding	BF-31
MT overhaul (RS5F31A).....	MT-10
MT overhaul (RS5F32V).....	MT-30
MT removal and installation	MT-7
Multi purpose grease.....	MA-8
Multiport fuel injection (MFI) system (GA engine)	EF&EC-207
Multiport fuel injection (MFI) system (SR engine)	EF&EC-19
Multiport fuel injection precautions	GI-4
Multiport fuel injection system inspection (SR engine)	EF&EC-189

N

Neutral position switch (MT)	MT-6
Neutral position switch inspection (GA engine)	EF&EC-378
Neutral position switch inspection (SR engine).....	EF&EC-188

O

Oil pan (GA engine).....	EM-72
Oil pan (SR engine).....	EM-12
Oil pressure (GA engine).....	LC-14
Oil pressure (SR engine).....	LC-6
Oil pressure relief valve (GA engine).....	LC-15
Oil pressure relief valve (SR engine)	LC-9
Oil pump (AT)	AT-160
Oil pump (GA engine)	LC-15
Oil pump (SR engine).....	LC-7
Oil pump regulator valve (GA engine).....	LC-15
Oil pump regulator valve (SR engine)	LC-9
Oil seal replacement (GA engine).....	EM-83
Oil seal replacement (SR engine)	EM-31
Overdrive switch (RE4F03V)	AT-99
Overdrive switch (RL4F03A)	AT-30
Overrun clutch	AT-203
Overrun clutch solenoid valve (RE4F03V).....	AT-98
Oversize piston (GA engine).....	EM-102
Oversize piston (SR engine).....	EM-51
Oxygen sensor (02S) (GA engine)	EF&EC-203

P

Parking brake control	BR-27	
PCV (positive crankcase ventilation) inspection (GA engine)	EF&EC-383	GI
PCV (positive crankcase ventilation) inspection (SR engine)	EF&EC-193	MA
Piston assembly (GA engine).....	EM-106	
Piston assembly (SR engine).....	EM-56	EM
Piston pin inspection (GA engine).....	EM-99	
Piston pin inspection (SR engine)	EM-49	
Piston ring inspection (GA engine).....	EM-100	LC
Piston ring inspection (SR engine).....	EM-50	
Piston to bore clearance (GA engine)	EM-101	EF & EC
Piston to bore clearance (SR engine).....	EM-51	
Power door lock.....	BF-10	FE
Power steering fluid.....	MA-8	
Power steering fluid level.....	ST-6	
Power steering gear.....	ST-18	CL
Power steering hydraulic pressure.....	ST-7	
Power steering oil pressure switch (SR engine)	EF&EC-17	MT
Power steering oil pressure switch inspection (GA engine).....	EF&EC-376	
Power steering oil pressure switch inspection (SR engine)	EF&EC-188	AT
Power steering oil pump.....	ST-29	
Power steering system bleeding	ST-6	FA
Power supply routing	EL-8	
Power transistor Ignition coil (GA engine)	EF&EC-204	RA
Power transistor Ignition coil (SR engine)	EF&EC-15	
Power transistor inspection (GA engine)	EF&EC-373	BR
Power transistor inspection (SR engine).....	EF&EC-182	ST
Power window	BF-10	
Power window/Power door lock trouble diagnoses	BF-12	BF
Precautions (General).....	GI-2	
Pressure test (AT) (RE4F03V)	AT-103	
Pressure test (AT) (RL4F03A)	AT-26	HA

R

Radiator (GA engine)	LC-21	
Radiator (SR engine).....	LC-13	
Rear axle.....	RA-6	
Rear bumper.....	BF-6	
Rear disc brake.....	BR-19	
Rear drum brake.....	BR-24	
Rear side window.....	BF-79	
Rear suspension	RA-8	

IDX

ALPHABETICAL INDEX

Rear window defogger	EL-64
Refilling engine coolant	LC-4
Refrigerant connection precaution	HA-4
Refrigerant general precaution	HA-4
Refrigerant lines	HA-17
Refrigeration cycle	HA-9
Release bearing (clutch)	CL-5
Resistor inspection (GA engine)	EF&EC-376
Reverse clutch	AT-194
Reverse gear (MT) (RS5F31A)	MT-11
Reverse gear (MT) (RS5F32V)	MT-31
Reverse idler shaft (MT) (RS5F31A)	MT-11
Reverse idler shaft (MT) (RS5F32V)	MT-31
Revolution sensor (AT) (RE4F03V)	AT-100
Road wheel size	GI-19

S

SEA J1930 terminology list	GI-26
Seat (front)	BF-36
Seat (rear)	BF-38
Seat belt inspection	MA-27
Seat belt system	BF-39
Self-diagnostic results (GA engine) ...	EF&EC-237
Self-diagnostic results (SR engine)	EF&EC-47
Shift control (MT) (RS5F31A)	MT-12
Shift control (MT) (RS5F32V)	MT-32
Shift fork (MT) (RS5F31A)	MT-12
Shift fork (MT) (RS5F32V)	MT-32
Shift lock system	AT-108
Shift schedule (RE4F03V)	AT-55
Shift schedule (RL4F03A)	AT-18
Shift solenoid valve (AT) (RE4F03V)	AT-98
Side guard molding	BF-34
SMJ (super multiple junction)	Foldout page
Soft/Hard closed throttle position (CTP) switch (GA engine)	EF&EC-202
Soft/Hard closed throttle position (CTP) switch (SR engine)	EF&EC-13
Spark plug replacement (GA engine)	MA-21
Spark plug replacement (SR engine)	MA-14
Speedometer	EL-40
Spring (Wheelarch) height	FA-5
Stabilizer bar (front)	FA-24
Stabilizer bar (rear)	RA-10
Stall test (AT) (RE4F03V)	AT-100
Stall test (AT) (RL4F03A)	AT-24
Standardized relay	EL-5
Starter	EL-16
Starting system	EL-15
Steering gear oil level	MA-25
Steering linkage (manual steering)	ST-13
Steering linkage (power steering)	ST-18
Steering wheel and column	ST-9
Steering wheel play	ST-5
Steering wheel turning force	ST-7
Stop lamp	EL-31

Striking rod (MT) (RS5F31A)	MT-12
Striking rod (MT) (RS5F32V)	MT-32
Strut (front)	FA-23
Strut (rear)	RA-9
Sun roof	BF-76
Supplemental restraint system	BF-86
Synchronizer (MT) (RS5F31A)	MT-11
Synchronizer (MT) (RS5F32V)	MT-31

T

Tachometer	EL-40
Tail lamp	EL-31
Temperature control cable and linkage adjustment (Lever control type)	HA-70
Temperature control cable and linkage adjustment (Push control type)	HA-71
Thermal protector	HA-67
Thermo control amp	HA-68
Thermostat (GA engine)	LC-20
Thermostat (SR engine)	LC-12
Three way catalyst precautions	GI-4
Throttle position sensor (TPS) (GA engine)	EF&EC-202
Throttle position sensor (TPS) (SR engine)	EF&EC-13
Throttle position sensor inspection and adjustment (GA engine)	EF&EC-373
Throttle position sensor inspection and adjustment (SR engine)	EF&EC-183
Tie-rod	ST-22
Tie-rod ball joints	ST-22
Tightening torque of standard bolts	GI-25
Time control system	EL-47
Timing chain (GA engine)	EM-73
Timing chain (SR engine)	EM-17
Tire rotation	MA-23
Tire size	GI-19
Torque converter clutch solenoid valve (RE4F03V)	AT-98
Torque converter clutch solenoid valve (RL4F03A)	AT-30
Torque converter installation	AT-124
Tow truck towing	GI-23
Transmission case (MT) (RS5F31A)	MT-10
Transmission case (MT) (RS5F32V)	MT-30
Transverse link (front)	FA-24
Tread-FR0R (Dimensions)	GI-19
Trim - door	BF-27
Trim - luggage compartment	BF-30
Trim - roof	BF-29
Trim - side and floor	BF-27
Trunk lid	BF-6
Trunk room lamp	EL-37

ALPHABETICAL INDEX

Turn signal lamp..... EL-34

V

Vacuum hose (brake system)..... BR-13
 Vacuum hose drawing (ECCS)
 (GA engine) EF&EC-199
 Vacuum hose drawing (ECCS)
 (SR engine) EF&EC-10
 Valve clearance (GA engine)..... EM-92
 Valve guide inspection (GA engine)..... EM-88
 Valve guide inspection (SR engine)..... EM-38
 Valve seat inspection (GA engine)..... EM-89
 Valve seat inspection (SR engine)..... EM-39
 Valve spring inspection (GA engine)..... EM-90
 Valve spring inspection (SR engine)..... EM-40
 Valve timing control (VTC)
 (GA engine) EF&EC-213
 Valve timing control solenoid valve
 (GA engine) EF&EC-206
 Vapor lines inspection (GA engine)..... MA-21
 Vapor lines inspection (SR engine)..... MA-15
 Vehicle identification number GI-17
 Vehicle speed sensor (VSS)
 (GA engine) EF&EC-205
 Vehicle speed sensor (VSS)
 (SR engine) EF&EC-16
 Viscosity number (SAE) MA-8
 Viscous coupling (FF AT) (RE4F03V)..... AT-236
 Viscous coupling (FF MT) (RS5F31A)..... MT-21
 Viscous coupling (FF MT) (RS5F32V)..... MT-44

VTC solenoid valve inspection
 (GA engine) EF&EC-378

W

Warning buzzer..... EL-46
 Warning lamps..... EL-43
 Washer, front..... EL-59
 Washer, rear EL-60
 Water cock control rod adjustment..... HA-70
 Water pump (GA engine) LC-18
 Water pump (SR engine)..... LC-11
 Water temperature gauge EL-40
 Weatherstrip..... BF-31
 Wheel alignment (front) FA-6
 Wheel alignment (rear)..... RA-4
 Wheel balance MA-23
 Wheel bearing (front axle)..... FA-6
 Wheel bearing (rear) RA-4
 Wheel hub (rear)..... RA-6
 Wheel hub and knuckle..... FA-8
 Wheel sensors (ABS)..... BR-35
 Wheelbase (Dimensions) GI-19
 Width (Dimensions) GI-19
 Windshield and windows BF-78
 Wiper and washer..... EL-59
 Wiper, front EL-59
 Wiper, rear EL-60
 Withdrawal lever (clutch) CL-5

GI
 MA
 EM
 LC
 EF &
 EC
 FE
 CL
 MT
 AT
 FA
 RA
 BR
 ST
 BF
 HA
 EL

IDX