

# ALPHABETICAL INDEX

## SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

**IDX**

# ALPHABETICAL INDEX

## A

AAC/V - Wiring diagram.....	EC-321
ABS - Wiring diagram .....	BR-48
ABS (anti-lock brake system).....	BR-37
ABS sensor rotor.....	FA-9
Absolute pressure sensor .....	EC-121
A/C - Wiring diagram.....	HA-21
A/C air flow.....	HA-16
A/C component location.....	HA-14
A/C compressor clutch removal and installation .....	HA-66
A/C compressor mounting.....	HA-65
A/C compressor precaution.....	HA-7
A/C compressor special service tool.....	HA-8
A/C control linkage adjustment (manual A/C)....	HA-34
A/C control operation (manual A/C).....	HA-15
A/C diagnostic work flow (manual A/C) .....	HA-24
A/C harness layout (manual A/C) .....	HA-17
A/C HFC134a (R134a) system precaution .....	HA-2
A/C HFC134a (R134a) system service procedure .....	HA-61
A/C HFC134a (R134a) system service tools.....	HA-9
A/C HFC134a system service equipment precaution .....	HA-11
A/C lubricant (R134a).....	HA-63
A/C lubrication oil.....	HA-63
A/C operational check.....	HA-25
A/C performance chart.....	HA-49
A/C performance test diagnoses.....	HA-47
A/C pressure switch .....	HA-13
A/C relay.....	HA-44
A/C service data specification.....	HA-72
A/C switch .....	HA-43
A/C symptom chart (manual A/C) .....	HA-24
A/C trouble diagnoses (manual A/C) .....	HA-24
Accelerator control system.....	FE-2
Accelerator wire adjustment.....	FE-2
Air bag .....	RS-15
Air bag disposal.....	RS-19
Air bag precautions .....	GI-2
Air bleeding for brake system .....	BR-5
Air cleaner filter replacement.....	MA-15
Air conditioner - Wiring diagram .....	HA-21
Air conditioner cut control .....	EC-19
Air conditioning - See A/C.....	HA-2
Air flow meter - See Mass air flow sensor.....	EC-112
Air mix door control linkage adjustment.....	HA-34
Air spoiler, rear.....	BT-27
Alternator - See Generator.....	EL-37
Angular tightening application.....	EM-2
Antenna .....	EL-142
Anti-lock brake system - See ABS.....	BR-37

Anti-lock brake system - Wiring diagram.....	BR-48
AP/SEN - Wiring diagram .....	EC-121
ASCD - Wiring diagram.....	EL-149
ASCD (automatic speed control device).....	EL-145
A/T - Wiring diagram .....	AT-8
A/T shift lock system .....	AT-48
A/T shift lock system - Wiring diagram.....	AT-49
A/T trouble diagnoses .....	AT-31
Audio .....	EL-139
AUDIO - Wiring diagram .....	EL-140
Audio and A/C control removal and installation - See Instrument panel.....	BT-13
Automatic speed control system - See ASCD ..	EL-145
Automatic transaxle number .....	GI-37
Automatic transmission fluid replacement .....	MA-21
Auxiliary air control (AAC).....	EC-321

## B

BACK/L - Wiring diagram.....	EL-56
Back-up lamp .....	EL-56
Back-up lamp switch (M/T) .....	MT-8
Ball joint front axle.....	FA-24
Basic inspection .....	EC-82
Battery .....	EL-21
Baulk ring (M/T).....	MT-13
Blower motor .....	HA-30
Blower resistor.....	HA-30
Board-on lift.....	GI-40
Body alignment.....	BT-39
Boring/honing cylinder block.....	EM-49
BPT valve .....	EC-277, EC-282
Brake booster .....	BR-16
Brake control valve (Proportioning valve).....	BR-8
Brake fluid change .....	BR-4
Brake fluid level.....	MA-21
Brake fluid level and line check .....	BR-4
Brake hydraulic line.....	BR-6
Brake inspection.....	MA-21
Brake lines and cables inspection .....	MA-21
Brake lining wear temporary checking.....	MA-22
Brake master cylinder .....	BR-12
Brake pedal .....	BR-10
Bulb specifications.....	EL-250
Bumper, front.....	BT-5
Bumper, rear.....	BT-8
BYPS/V - Wiring diagram.....	EC-427

## C

Camshaft inspection.....	EM-31
Camshaft position sensor (CMPS).....	EC-261

# ALPHABETICAL INDEX

<p>Canister - See EVAP canister..... EC-21</p> <p>CANI/V - Wiring diagram..... EC-438</p> <p>CHARGE - Wiring diagram ..... EL-35</p> <p>Charging system ..... EL-34</p> <p>Chassis and body maintenance..... MA-19</p> <p>CHIME - Wiring diagram..... EL-110</p> <p>CIGAR - Wiring diagram ..... EL-130</p> <p>Cigarette lighter..... EL-130</p> <p>Circuit breaker..... EL-16</p> <p>CKPS - Wiring diagram..... EC-256, EC-362</p> <p>Clearance lamp..... EL-58</p> <p>Closed loop control ..... EC-353</p> <p>Closed throttle position switch ..... EC-328</p> <p>Clutch cable..... CL-4</p> <p>Clutch cover ..... CL-8</p> <p>Clutch disc..... CL-7</p> <p>Clutch pedal ..... CL-4</p> <p>Clutch release bearing ..... CL-6</p> <p>Clutch release mechanism..... CL-6</p> <p>Clutch withdrawal lever ..... CL-6</p> <p>CMPS - Wiring diagram ..... EC-261</p> <p>Coil spring (front)..... FA-22</p> <p>Coil spring (rear) ..... RA-11</p> <p>Collision diagnosis..... RS-45</p> <p>Combination lamp, rear, removal and installation ..... BT-26</p> <p>Combination meter..... EL-79, EL-89</p> <p>Combination meter removal and installation - See Instrument panel..... BT-13</p> <p>Combination switch ..... EL-41</p> <p>Compression pressure ..... EM-14</p> <p>Compressor clutch removal and installation..... HA-66</p> <p>Compressor mounting..... HA-65</p> <p>Compressor precaution..... HA-7</p> <p>Compressor special service tool..... HA-8</p> <p>Connecting rod..... EM-47</p> <p>Connecting rod bearing clearance..... EM-51</p> <p>Connecting rod bushing clearance ..... EM-52</p> <p>Connector inspection..... GI-17</p> <p>Console box - See Instrument panel..... BT-13</p> <p>CONSULT for ABS ..... BR-55</p> <p>CONSULT for engine ..... EC-62</p> <p>CONSULT general information ..... GI-33</p> <p>Control lever (M/T) ..... MT-11</p> <p>Control valve (A/T) ..... AT-88</p> <p>Converter housing installation..... AT-60</p> <p>Coolant mixture ratio ..... MA-9</p> <p>Coolant replacement..... MA-12</p> <p>COOL/F - Wiring diagram ..... EC-471</p> <p>Cooling circuit (engine) ..... LC-8</p> <p>Cooling fan ..... LC-14</p> <p>Cooling fan control..... EC-468</p> <p>Cooling fan motor..... EC-480</p> <p>Cooling fan relay ..... EC-480</p>	<p>Coupling sleeve (M/T)..... MT-13</p> <p>Crank angle sensor built into distributor - See Camshaft position sensor ..... EC-261</p> <p>Crankcase emission control system - See positive crankcase ventilation..... EC-31</p> <p>Crankcase ventilation system - See positive crankcase ventilation ..... EC-31</p> <p>Crankshaft..... EM-49</p> <p>Crankshaft position sensor (OBD)..... EC-256</p> <p>Cruise control - See ASCD ..... EL-145</p> <p>Cylinder block..... EM-45</p> <p>Cylinder block boring..... EM-49</p> <p>Cylinder head ..... EM-30</p> <p>Cylinder head bolt tightening ..... EM-23</p>
<b>D</b>	
<p>Data link connector for CONSULT..... EC-62</p> <p>Daytime light system..... EL-48</p> <p>Daytime running light - See Daytime light system..... EL-48</p> <p>DEF - Wiring diagram ..... EL-132</p> <p>Detonation sensor - See Knock sensor..... EC-251</p> <p>Diagnosis sensor unit..... RS-14</p> <p>Diagnostic trouble code (DTC) for OBD system..... EC-2</p> <p>Diagnostic trouble code (DTC) inspection priority chart ..... EC-87</p> <p>Differential gear (FF A/T) ..... AT-136</p> <p>Differential gear (FF M/T)..... MT-23</p> <p>Dimensions..... GI-38</p> <p>Distributor ..... EC-18</p> <p>Distributor ignition (DI) system..... EC-18</p> <p>D/LOCK - Wiring diagram ..... EL-178</p> <p>Dome light - See Interior lamp..... EL-74</p> <p>Door, front..... BT-11</p> <p>Door glass ..... BT-11, BT-12</p> <p>Door lock ..... BT-11, BT-12</p> <p>Door mirror..... BT-38</p> <p>Door, rear ..... BT-12</p> <p>Door trim..... BT-18</p> <p>Drive belt inspection..... MA-10</p> <p>Drive plate runout..... EM-52</p> <p>Drive shaft (front) ..... FA-14</p> <p>DTRL - Wiring diagram ..... EL-51</p> <p>Dual pressure switch..... HA-44</p>	<p>GI</p> <p>MA</p> <p>EM</p> <p>LC</p> <p>EC</p> <p>FE</p> <p>CL</p> <p>MT</p> <p>AT</p> <p>FA</p> <p>RA</p> <p>BR</p> <p>ST</p> <p>RS</p> <p>BT</p> <p>HA</p> <p>EL</p>
<b>E</b>	
<p>ECCS relay..... EC-11</p> <p>ECM input/output signal..... EC-97</p> <p>ECTS - Wiring diagram..... EC-136, EC-155</p>	<p>EC</p> <p>FE</p> <p>CL</p> <p>MT</p> <p>AT</p> <p>FA</p> <p>RA</p> <p>BR</p> <p>ST</p> <p>RS</p> <p>BT</p> <p>HA</p> <p>EL</p>

# ALPHABETICAL INDEX

EGR control (EGRC) - BPT valve.....	EC-278
EGR control (EGRC) - solenoid valve .....	EC-367
EGR control valve .....	EC-276, EC-384
EGR temperature sensor .....	EC-372
EGRC1 - Wiring diagram .....	EC-269
EGRC/V - Wiring diagram.....	EC-367
EGR/TS - Wiring diagram .....	EC-372
Electric sun roof .....	EL-143
Electrical diagnoses .....	GI-20
Electrical ignition system.....	EC-18
Electrical load signal circuit.....	EC-499
Electrical units location.....	EL-232
Engine compartment .....	BT-39
Engine control circuit diagram.....	EC-9
Engine control component parts location.....	EC-11
Engine control module (ECM).....	EC-334
Engine control system diagram and chart .....	EC-10
Engine coolant temperature sensor (ECTS).....	EC-136
Engine fail-safe system .....	EC-88
Engine oil filter replacement.....	MA-16
Engine oil precautions .....	GI-5
Engine oil replacement.....	MA-15
Engine outer component parts.....	EM-10
Engine removal .....	EM-41
Engine room - See Engine compartment .....	BT-39
Engine serial number .....	GI-37
EVAP canister .....	EC-21
EVAP canister purge control solenoid valve.....	EC-438, EC-444
EVAP canister purge control valve ....	EC-438, EC-444
EVAP canister purge volume control valve .....	EC-21, EC-299, EC-399
EVAP canister vent control valve .....	EC-305
EVAP control system pressure sensor .....	EC-310
EVAP control system (small leak) diagnosis .....	EC-287, EC-386
EVAP vapor lines inspection .....	MA-17
Evaporative emission (EVAP) system.....	EC-21
Exhaust gas recirculation (EGR) valve.....	EC-269
Exhaust system .....	FE-6
Exhaust system inspection.....	MA-19
Exterior .....	BT-22
Exterior lamp .....	EL-56

## F

Fan switch .....	HA-30
Fast idle.....	EC-33
Fast idle cam (FIC) .....	EC-33
Fast idle cam (FIC) inspection and adjustment.....	EC-33
F/FOG - Wiring diagram.....	EL-61
FICD - Wiring diagram .....	EC-495

Final drive (FF A/T) .....	AT-136
Final drive (FF M/T) .....	MT-23
Finisher, interior - See Trim.....	BT-16
Finisher, trunk lid .....	BT-25
Floor trim .....	BT-16
Flow charts .....	GI-30
Fluids .....	MA-8
Flywheel (clutch) .....	CL-8
Flywheel runout.....	EM-52
Fog lamp, front.....	EL-60
Fog lamp, front, removal and installation.....	BT-5
Fork rod (M/T) .....	MT-14
Forward clutch.....	AT-112
F/PUMP - Wiring diagram .....	EC-487
Freeze frame data.....	EC-44
FRO2 - Wiring diagram.....	EC-161
FRO2/H - Wiring diagram .....	EC-197
Front axle .....	FA-9
Front bumper.....	BT-5
Front disc brake .....	BR-19
Front door.....	BT-11
Front fog lamp.....	EL-60
Front fog lamp removal and installation.....	BT-5
Front heated oxygen sensor (HO2S).....	EC-161
Front heated oxygen sensor (HO2S) heater ....	EC-197
Front heated oxygen sensor (HO2S) monitor...	EC-168
Front oxygen sensor (O2S).....	EC-161
Front oxygen sensor (O2S) monitor .....	EC-53
Front passenger air bag.....	RS-17
Front seat .....	BT-28
Front seat belt .....	RS-3
Front suspension.....	FA-21
Front washer .....	EL-120
Front wiper .....	EL-120
FUEL - Wiring diagram .....	EC-231
Fuel cut control (at no load & high engine speed) .....	EC-20
Fuel filler lid.....	BT-8
Fuel filter.....	EC-32
Fuel filter replacement.....	MA-14
Fuel gauge .....	EL-81, EL-91
Fuel injector.....	EC-483
Fuel line inspection .....	MA-14
Fuel precautions.....	GI-6
Fuel pressure check.....	EC-32
Fuel pressure regulator .....	EC-33
Fuel pressure release .....	EC-32
Fuel pump .....	EC-487
Fuel pump and gauge .....	FE-5
Fuel pump relay .....	EC-487
Fuel system .....	FE-3
Fuel tank vacuum relief valve .....	EC-22
Fuel temperature sensor .....	EC-242
Fuse.....	EL-16

# ALPHABETICAL INDEX

Fuse block..... Foldout page  
 Fusible link..... EL-16

## G

Garage jack and safety stand..... GI-40  
 Gauges..... EL-78, EL-88  
 Gear components (M/T)..... MT-13  
 Generator..... EL-37  
 Generic scan tool (GST)..... EC-76  
 Glass..... BT-11, BT-12  
 Governor valve assembly..... AT-35  
 Grease..... MA-8  
 Grille - See Exterior..... BT-5  
 Ground distribution..... EL-17

## H

Harness connector..... EL-4  
 Harness connector inspection..... GI-17  
 Harness layout..... EL-233  
 Hazard warning lamp..... EL-63  
 Headlamp..... EL-44  
 Headlamp aiming control..... EL-47  
 Headlining - See Roof trim..... BT-20  
 Heated oxygen sensor (HO2S) (front)..... EC-161  
 Heated oxygen sensor (HO2S) heater (front)..... EC-197  
 Heated oxygen sensor (HO2S) heater (rear) ... EC-227  
 Heated oxygen sensor monitor (HO2S) (front)..... EC-168  
 Heated oxygen sensor (rear)..... EC-201  
 HEATER - Wiring diagram..... HA-20  
 Heater system - Wiring diagram..... HA-20  
 Height (Dimensions)..... GI-38  
 HFC134a (R134a) system precaution..... HA-2  
 HFC134a (R134a) system service procedure .... HA-61  
 HFC134a (R134a) system service tools..... HA-9  
 HFC134a system service equipment precaution..... HA-11  
 High clutch..... AT-107  
 H/LAMP - Wiring diagram..... EL-45  
 Hood..... BT-5  
 Horn..... EL-129  
 HORN - Wiring diagram..... EL-129  
 How to erase DTC for OBD system..... EC-52

## I

IACV-AAC valve..... EC-327  
 IACV-FICD solenoid valve..... EC-495  
 IATS - Wiring diagram..... EC-130

Identification plate..... GI-36  
 Idle air control (IAC) system..... EC-321  
 Idle air control valve (IACV)..... EC-321  
 Idle mixture ratio..... EC-36  
 Idle speed..... EC-36  
 Ignition coil..... EC-361  
 Ignition timing..... EC-36  
 Ignition wire inspection..... EC-250  
 IGN/SG - Wiring diagram..... EC-355  
 ILL - Wiring diagram..... EL-70  
 Illumination..... EL-69  
 INJECT - Wiring diagram..... EC-481  
 Injector..... EC-483  
 Injector removal and installation..... EC-33  
 Input shaft (FF M/T)..... MT-17  
 Instrument panel..... BT-13  
 Intake air temperature sensor..... EC-130  
 Intake door control linkage adjustment..... HA-37  
 Intake door motor..... HA-37  
 Intake manifold..... EM-10  
 Intake valve timing control..... EC-345  
 Intake valve timing control solenoid valve..... EC-345  
 Interior..... BT-16  
 Interior lamp..... EL-69  
 Interior lamp on-off control..... EL-73  
 INT/L - Wiring diagram..... EL-74  
 IVC - Wiring diagram..... EC-345

## J

Jacking points..... GI-39, GI-40  
 Joint connector (J/C)..... Foldout page  
 Junction box (J/B)..... Foldout page

## K

Keyless entry system - See Multi-remote control system..... EL-190  
 Knock sensor (KS)..... EC-251  
 Knuckle spindle..... FA-9  
 KS - Wiring diagram..... EC-251

## L

Length (Dimensions)..... GI-38  
 License lamp..... EL-58  
 Lifting points..... GI-39  
 Line pressure test (A/T)..... AT-34  
 Liquid gasket application..... EM-2  
 LKUP - Wiring diagram..... EC-458  
 LOAD - Wiring diagram..... EC-499

GI  
 MA  
 EM  
 LC  
 EC  
 FE  
 CL  
 MT  
 AT  
 FA  
 RA  
 BR  
 ST  
 RS  
 BT  
 HA  
 EL

## IDX

# ALPHABETICAL INDEX

Location of electrical units.....	EL-231
Lock, door.....	BT-11, BT-12
Low and reverse brake .....	AT-118
Lubricant (R134a) A/C.....	HA-63
Lubricants.....	MA-8
Lubrication circuit (engine).....	LC-4
Lubrication oil A/C.....	HA-63
Lubrication-locks, hinges and hood latches.....	MA-24
Luggage compartment trim .....	BT-21

## M

MAFS - Wiring diagram.....	EC-112
Magnet clutch.....	HA-66
MAIN - Wiring diagram.....	EC-107
Main drive gear (M/T).....	MT-13
Mainshaft (M/T).....	MT-19
Maintenance.....	MA-3
Maintenance (engine).....	MA-10
MAJOR OVERHAUL.....	AT-62
Malfunction indicator lamp (MIL).....	EC-53
Manual steering gear .....	ST-14
Manual transaxle number.....	GI-37
Manual transmission oil replacement.....	MA-19
MAP/BARO switch solenoid valve .....	EC-336
Mass air flow sensor (MAFS).....	EC-112
Master cylinder (brake) .....	BR-12
Meter .....	EL-78, EL-88
METER - Wiring diagram.....	EL-80, EL-90
MIL & Data link connectors circuit .....	EC-503
MIL/DL - Wiring diagram.....	EC-503
MIRROR - Wiring diagram.....	EL-144
Mirror, door.....	BT-38
Mirror, out side .....	BT-38
Misfire.....	EC-246
Mode door control linkage adjustment.....	HA-32
Model variation.....	GI-35
Molding - See Exterior .....	BT-22
M/T major overhaul .....	MT-12
M/T removal and installation .....	MT-9
Mud guard - See Exterior.....	BT-27
MULTI - Wiring diagram.....	EL-193
Multiport fuel injection (MFI) system.....	EC-16
Multiport fuel injection precautions.....	GI-5
Multi-remote control system.....	EL-190

## N

NVH troubleshooting (BR).....	BR-3
NVH troubleshooting (CL).....	CL-3
NVH troubleshooting (EM).....	EM-8
NVH troubleshooting (FA).....	FA-4

NVH troubleshooting (M/T).....	MT-5
NVH troubleshooting (RA).....	RA-3
NVH troubleshooting (ST).....	ST-5

## O

Oil change (capacity) .....	MA-8
Oil change (interval).....	MA-5
Oil pan (engine).....	EM-15
Oil pressure (engine).....	LC-5
Oil pressure relief valve (engine).....	LC-7
Oil pump (A/T).....	AT-84
Oil pump (engine).....	LC-6
Oil pump regulator valve (engine).....	LC-6
Oil seal replacement (engine).....	EM-28
On board diagnostic system .....	EC-42
ORVR (On-board Refueling Vapor Recovery) ....	EC-26
Out side mirror .....	BT-38
Overdrive control switch.....	AT-46
Overrun clutch.....	AT-112
Oversize piston.....	EM-49
Oxygen sensor monitor (O2S) (front) .....	EC-168
Oxygen sensor (O2S) (front).....	EC-161

## P

Parking brake control .....	BR-35
Park/neutral position (PNP) switch .....	EC-453
Park/neutral position (PNP) switch (A/T) .....	AT-47
Park/neutral position (PNP) switch (M/T).....	MT-8
PCV (positive crankcase ventilation) .....	EC-31
PGC/V - Wiring diagram .....	EC-299
Piston assembly .....	EM-53
Piston pin inspection .....	EM-46
Piston ring inspection.....	EM-47
Piston to bore clearance .....	EM-48
PNP/SW - Wiring diagram .....	EC-453
POWER - Wiring diagram.....	EL-10
Power door mirror .....	EL-144
Power steering fluid level.....	MA-23, ST-6
Power steering gear.....	ST-19
Power steering hydraulic pressure.....	ST-9
Power steering oil pressure switch .....	EC-491
Power steering oil pump .....	ST-24
Power steering system bleeding .....	ST-7
Power supply routing.....	EL-8
Power transistor .....	EC-361
Power transistor & ignition coil.....	EC-355
Power window .....	EL-169
Precautions (General).....	GI-3
PRE/SE - Wiring diagram .....	EC-310
Pressure plate - See Clutch cover.....	CL-8

# ALPHABETICAL INDEX

Pressure test (A/T).....AT-34  
 PST/SW - Wiring diagram.....EC-491

## R

Rack retainer adjustment.....ST-16  
 Radiator.....LC-14  
 Radiator fan - See Cooling fan.....LC-14  
 Radio - See Audio.....EL-139  
 Rear air spoiler.....BT-27  
 Rear axle.....RA-7  
 Rear axle (disc brake type).....RA-7  
 Rear axle (drum brake type).....RA-7  
 Rear bumper.....BT-8  
 Rear combination lamp removal and  
   installation.....BT-26  
 Rear disc brake.....BR-26  
 Rear door.....BT-12  
 Rear drum brake.....BR-23  
 Rear heated oxygen sensor (HO2S).....EC-201  
 Rear heated oxygen sensor (HO2S) heater.....EC-227  
 Rear seat.....BT-29  
 Rear seat belt.....RS-3  
 Rear side window.....BT-37  
 Rear suspension.....RA-9  
 Rear window.....BT-36  
 Rear window defogger.....EL-131  
 Refrigerant CFC12 precaution.....HA-2  
 Refrigerant connection precaution.....HA-4  
 Refrigerant discharging evacuating charging.....HA-61  
 Refrigerant general precaution.....HA-3  
 Refrigerant lines.....HA-57  
 Refrigeration cycle.....HA-13  
 Release bearing (clutch).....CL-6  
 Removal and installation (A/T).....AT-59  
 Resistor.....EC-361  
 Reverse clutch.....AT-103  
 Reverse idler shaft (M/T).....MT-13  
 Reverse lamp switch (M/T) - See Back-up  
   lamp switch (M/T).....MT-8  
 Reverse main gear (M/T).....MT-13  
 Road wheel size.....GI-38  
 Roof trim.....BT-20  
 Room lamp.....EL-72  
 Rotor disc (front).....FA-9  
 RRO2 - Wiring diagram.....EC-201  
 RRO2/H - Wiring diagram.....EC-227

## S

SAE J1930 terminology list.....GI-44  
 Seal - See Exterior.....BT-22

Seat belt, front.....RS-3  
 Seat belt inspection.....MA-24, RS-8  
 Seat belt, rear.....RS-3  
 Seat, front.....BT-28  
 Seat, rear.....BT-29  
 Self-diagnostic results.....EC-53  
 SFT, RL - Wiring diagram.....AT-49  
 SHIFT - Wiring diagram.....AT-49  
 Shift control components (M/T).....MT-14  
 Shift fork (M/T).....MT-14  
 Shift lever.....MT-11  
 Shift lock system.....AT-48  
 Shift schedule.....AT-38  
 Shock absorber (front).....FA-22  
 Shock absorber (rear).....RA-11  
 Side trim.....BT-16  
 Smart entrance control unit.....EL-230  
 SMJ (super multiple junction).....Foldout page  
 Spare tire size.....GI-38  
 Spark plug replacement.....MA-16  
 Speedometer.....EL-84, EL-93  
 Spiral cable.....RS-15  
 Spot lamp.....EL-72  
 Spring (Wheelarch) height.....FA-6  
 SROOF - Wiring diagram.....EL-143  
 SRS - See Supplemental Restraint System.....RS-11  
 SRS - Wiring diagram.....RS-28  
 SRS Trouble diagnoses.....RS-23  
 S/SIG - Wiring diagram.....EC-484  
 Stabilizer bar (front).....FA-23  
 Stall test (A/T).....AT-31  
 Standardized relay.....EL-6  
 START - Wiring diagram.....EL-27  
 Start signal.....EC-484  
 Starter.....EL-30  
 Starting system.....EL-25  
 Steering gear and linkage inspection.....MA-23  
 Steering knuckle.....FA-9  
 Steering linkage (PR24T).....ST-19  
 Steering linkage (R24N).....ST-14  
 Steering switch.....EL-43  
 Steering wheel and column.....ST-10  
 Steering wheel play.....ST-8  
 Steering wheel turning force.....ST-7  
 Stop lamp.....EL-58  
 Striking rod (M/T).....MT-14  
 Strut (front).....FA-22  
 Strut (rear).....RA-11  
 Sun roof, electric.....EL-143  
 Sunroof.....BT-30  
 Supplemental Restraint System.....RS-11  
 Supplemental restraint system - Wiring  
   diagram.....RS-28  
 SW/V - Wiring diagram.....EC-336

GI  
 MA  
 EM  
 LC  
 EC  
 FE  
 CL  
 MT  
 AT  
 FA  
 RA  
 BR  
 ST  
 RS  
 BT  
 HA  
 EL  
**IDX**

# ALPHABETICAL INDEX

Symbols and abbreviations.....	GI-8
Symptom matrix chart.....	EC-89
Synchronizer (M/T).....	MT-13
System readiness test (SRT) code.....	EC-44

## T

Tachometer.....	EL-83
Tail lamp.....	EL-58
TAIL/L - Wiring diagram.....	EL-58
Tank fuel temperature sensor.....	EC-242
Temperature control cable and linkage adjustment.....	HA-34
TFTS - Wiring diagram.....	EC-242, EC-244
THEFT - Wiring diagram.....	EL-209
Theft warning system.....	EL-204
Thermal protector.....	HA-44
Thermo control amp.....	HA-44
Thermostat.....	LC-12
Three way catalyst.....	EC-283
Three way catalyst precautions.....	GI-5
Throttle bodies.....	EM-11
Throttle drum adjustment.....	FE-2
Throttle position sensor adjustment.....	EC-82
Throttle position sensor (TPS).....	EC-141
Throwout bearing - See Clutch release bearing.....	CL-6
Tie-rod (PR24T).....	ST-22
Tie-rod (R24N).....	ST-16
Tie-rod ball joints (PR24T).....	ST-22
Tie-rod ball joints (R24N).....	ST-16
Tightening torque of standard bolts.....	GI-43
Timing chain.....	EM-17
Tire rotation.....	MA-23
Tire size.....	GI-38
Torque converter clutch solenoid valve.....	AT-44
Torque converter installation.....	AT-60
Torque convertor clutch solenoid valve.....	EC-458, EC-463
Tow truck towing.....	GI-41
TPS - Wiring diagram.....	EC-141
TP/SW - Wiring diagram.....	EC-328
Transmission case (M/T).....	MT-12
Transverse link (front).....	FA-24
Tread-FR&RR (Dimensions).....	GI-38
Trim.....	BT-16
Trouble diagnoses.....	GI-20
Trunk lid.....	BT-8
Trunk lid finisher.....	BT-25
Trunk lid opener - See Trunk lid.....	BT-8
Trunk room lamp.....	EL-72
Trunk room trim.....	BT-21
TURN - Wiring diagram.....	EL-66

Turn signal lamp.....	EL-63
Two trip detection logic.....	EC-42
Two-pole lift.....	GI-41

## U

Under body.....	BT-41
-----------------	-------

## V

Vacuum cut valve.....	EC-437
Vacuum cut valve bypass valve.....	EC-427
Vacuum hose (brake system).....	BR-18
Vacuum hose drawing (Engine control).....	EC-14
Valve clearance.....	EM-38
Valve guide.....	EM-33
Valve lifter.....	EM-36
Valve seat.....	EM-35
Valve spring.....	EM-36
Vehicle identification number.....	GI-36
Vehicle recovery (freeing a stuck vehicle).....	GI-42
Vehicle speed sensor (VSS).....	EC-316
VENT/V - Wiring diagram.....	EC-305
Viscosity number (SAE).....	MA-8
VSS - Wiring diagram.....	EC-316

## W

WARN - Wiring diagram.....	EL-99
Warning chime.....	EL-108
Warning lamps.....	EL-96
Washer, front.....	EL-120
Water pump.....	LC-11
Water temperature gauge.....	EL-81, EL-91
Weatherstrip - See Exterior.....	BT-22
Wheel alignment (front).....	FA-7
Wheel alignment (rear).....	RA-6
Wheel balance.....	MA-23
Wheel bearing (front axle).....	FA-7, FA-11
Wheel bearing (rear).....	RA-5
Wheel hub (front).....	FA-9
Wheel hub (rear).....	RA-7
Wheel sensors (ABS).....	BR-40
Wheel size.....	GI-38
Wheelarch height.....	FA-6
Wheelbase (Dimensions).....	GI-38
Wide open & closed throttle position switch.....	EC-141
Width (Dimensions).....	GI-38
WINDOW - Wiring diagram.....	EL-172
Window, door.....	BT-11, BT-12
Window, rear.....	BT-36



# ALPHABETICAL INDEX

---

Windshield.....	BT-35	Wiring diagrams.....	GI-9
WIPER - Wiring diagram.....	EL-122	Withdrawal lever (clutch).....	CL-6
Wiper, front.....	EL-120	Wrist pin - See Piston pin inspection.....	EM-46
Wiring Diagram (Cell code) list.....	EL-251		

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

**IDX**