$\mathsf{D}$ 

Е

F

Н

J

Κ

L

M

## **CONTENTS**

ACCELERATOR CONTROL SYSTEM2	SERVICE DATA AND SPECIFICATIONS (SDS) 4
Removal and Installation2	Accelerator Control4
	PEDAL TRAVEL4

## **ACCELERATOR CONTROL SYSTEM**


## **ACCELERATOR CONTROL SYSTEM**

PFP:18005


### **Removal and Installation**

EBS00DTP

- Disconnect the accelerator pedal position sensor electrical connector.
- a. Pull the connector lock back to unlock the connector from the accelerator pedal position sensor.
- Pull up on the connector to disconnect it from the accelerator pedal position sensor.

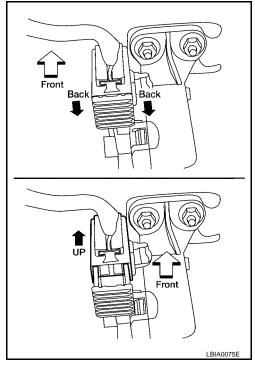

2. Remove the upper and lower pedal assembly nuts.

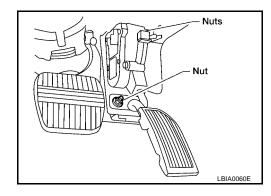


- 3. Remove the pedal assembly.
  - For electrical inspection of the accelerator pedal position sensor. Refer to <u>EC-501</u>, "<u>DTC P2122</u>, <u>P2123</u>
     <u>APP SENSOR</u>" (QG18DE ULEV), <u>EC-1113</u>, "<u>DTC P2122</u>, <u>P2123 APP SENSOR</u>" (QG18DE SULEV) or <u>EC-1735</u>, "<u>DTC P2122</u>, <u>P2123 APP SENSOR</u>" (QR25DE).

#### **CAUTION:**

- Do not disassemble the pedal assembly. Do not remove the accelerator pedal position sensor from the pedal assembly.
- Avoid impact from dropping during handling.
- Keep the pedal assembly away from water.


## **ACCELERATOR CONTROL SYSTEM**

- 4. Installation is in the reverse order of removal.
  - Check the accelerator pedal for smooth operation. There should be no binding or sticking when applying or releasing the accelerator pedal.

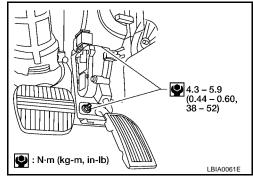

Check that the accelerator pedal moves through the full specified distance of pedal travel.

Pedal Travel "A" : 52.6 - 58.2 mm (2.07 - 2.29 in)

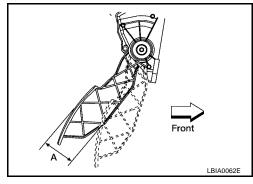

#### **CAUTION:**

When the harness connector of the accelerator pedal position sensor is disconnected, perform the "Accelerator Pedal Released Position Learning". Refer to <a href="EC-1239">EC-1239</a>, "Accelerator Pedal Released Position Learning".

Α

**ACC** 

С

D

Ε

F

G

<

L

M

# SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)		PFP:00030
Accelerator Control PEDAL TRAVEL		EBS00EWA
Accelerator control pedal - total travel	52.6 - 58.2 mm (2.07 - 2.29 in)	