

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

A

- A/C - Wiring diagram [MTC-28](#)
A/C air flow [MTC-22](#)
A/C component layout [MTC-20](#)
A/C compressor clutch removal and installation . [MTC-70](#)
A/C compressor mounting [MTC-69](#)
A/C compressor precaution [MTC-8](#)
A/C compressor special service tool [MTC-11](#)
A/C control linkage adjustment (manual A/C) . [MTC-42](#)
A/C control operation (manual A/C) [MTC-21](#)
A/C diagnostic work flow (manual A/C) [MTC-35](#)
A/C HFC134a (R134a) system identification [MTC-4](#)
A/C HFC134a (R134a) system introduction ... [MTC-16](#)
A/C HFC134a (R134a) system precaution [MTC-3](#)
A/C HFC134a (R134a) system service procedure [MTC-83](#)
A/C HFC134a (R134a) system service tools .. [MTC-12](#)
A/C HFC134a system service equipment precaution ... [MTC-8](#)
A/C lubricant (R134a) [MTC-17](#)
A/C lubrication oil [MTC-17](#)
A/C operational check [MTC-36](#)
A/C performance chart [MTC-59](#)
A/C performance test diagnoses [MTC-59](#)
A/C pressure switch [MTC-16](#)
A/C push control [MTC-21](#)
A/C reray [MTC-56](#)
A/C service data specification [MTC-92](#)
A/C switch [MTC-21](#)
A/C, M - Wiring diagram [MTC-28](#)
A/F - Wiring diagram [EC-1024](#), [EC-1030](#), [EC-1036](#),
[EC-1043](#), [EC-1050](#), [EC-1056](#), [EC-1064](#)
A/FH - Wiring diagram [EC-921](#)
A/T - Wiring diagram [AT-406](#)
A/T fluid temperature sensor [AT-125](#), [AT-495](#)
A/T self-diagnoses [AT-431](#), [AT-439](#), [AT-440](#)
A/T shift lock system [AT-252](#), [AT-635](#)
A/T shift lock system - Wiring diagram [AT-253](#), [AT-636](#)
A/T trouble diagnoses [AT-56](#)
A/T Wiring diagram AT - 1ST [AT-137](#), [AT-512](#)
A/T Wiring diagram AT - 2ND [AT-142](#), [AT-517](#)
A/T Wiring diagram AT - 3RD [AT-147](#), [AT-522](#)
A/T Wiring diagram AT - 4TH [AT-153](#), [AT-527](#)
A/T Wiring diagram AT - BA/FTS [AT-199](#), [AT-573](#)
A/T Wiring diagram AT - CAN [AT-209](#), [AT-589](#)
A/T Wiring diagram AT - ENG SS [AT-132](#), [AT-507](#)
A/T Wiring diagram AT - FTS [AT-122](#), [AT-497](#)
A/T Wiring diagram AT - LPSV [AT-174](#), [AT-547](#)
A/T Wiring diagram AT - MAIN [AT-112](#), [AT-486](#)
A/T Wiring diagram AT - NONDTC [AT-215](#), [AT-595](#)
A/T Wiring diagram AT - OVRCSV [AT-194](#), [AT-568](#)
A/T Wiring diagram AT - PNP/SW [AT-116](#), [AT-491](#)
A/T Wiring diagram AT - SSV/A [AT-180](#), [AT-553](#)
A/T Wiring diagram AT - SSV/B [AT-184](#), [AT-558](#)
A/T Wiring diagram AT - TCCSIG [AT-166](#), [AT-539](#)
A/T Wiring diagram AT - TCV [AT-160](#), [AT-534](#)
A/T Wiring diagram AT - TPS [AT-190](#), [AT-563](#)
A/T Wiring diagram AT - VSS A/T [AT-128](#), [AT-503](#)
A/T Wiring diagram AT - VSSMTR . [AT-205](#), [AT-580](#),
[AT-585](#)
ABS - Wiring diagram [BRC-10](#)
ABS (anti-lock brake system) [BRC-5](#)
ABS sensor rotor [RAX-6](#)
Accelerator pedal position (APP) sensor [EC-1113](#), [EC-1133](#), [EC-1735](#), [EC-1741](#), [EC-1754](#)
Accelerator pedal released position learning ... [EC-52](#),
[EC-1239](#)
Air bag [SRS-3](#)
Air bag disposal [SRS-47](#)
Air bag precautions [GI-3](#)
Air bleeding (hydraulic clutch) [CL-7](#), [CL-24](#)
Air bleeding for brake system [BR-7](#)
Air cleaner and air duct [EM-101](#)
Air cleaner filter replacementQG18DE [MA-19](#)
Air cleaner filter replacementQR25DE [MA-26](#)
Air conditioner - Wiring diagram [MTC-28](#)
Air conditioner cut control [EC-1226](#)
Air control cable adjustment [MTC-44](#)
Air flow meter - See Mass air flow sensor [EC-164](#), [EC-172](#), [EC-378](#), [EC-1352](#), [EC-1359](#), [EC-1578](#)
Air fuel ratio sensor 1 ... [EC-1021](#), [EC-1027](#), [EC-1033](#),
[EC-1040](#), [EC-1047](#), [EC-1053](#), [EC-1061](#)
Air fuel ratio sensor 1 heater [EC-919](#)
Air mix door control linkage adjustment [MTC-46](#)
Air spoiler, rear [EI-22](#)
Alternator [SC-30](#)
Angular tightening application [EM-4](#), [EM-91](#)
Antenna [AV-11](#)
Anti-lock brake system - See ABS [BRC-5](#)
Anti-lock brake system - Wiring diagram [BRC-10](#)
APPS1 - Wiring diagram . [EC-503](#), [EC-1115](#), [EC-1737](#)
APPS2 - Wiring diagram . [EC-509](#), [EC-1122](#), [EC-1743](#)
APPS3 - Wiring diagram . [EC-521](#), [EC-1135](#), [EC-1756](#)
ASC/BS - Wiring diagram [EC-481](#), [EC-1092](#), [EC-1716](#)
ASC/SW - Wiring diagram [EC-474](#), [EC-1085](#), [EC-1709](#)
ASCSOF - Wiring diagram [EC-562](#), [EC-1177](#), [EC-1818](#)
ASCD [EC-589](#), [EC-1844](#)
ASCD (automatic speed control device) [EC-1204](#),
[ACS-2](#)
ASCIND - Wiring diagram [EC-571](#), [EC-1186](#), [EC-1826](#)
Audio [AV-2](#)
AUDIO - Wiring diagram [AV-4](#)
Audio and A/C control removal and installation - See Instrument panel [IP-10](#)
Automatic transaxle number [GI-48](#)
Automatic transmission fluid replacement [MA-31](#)
Axle [MA-35](#)

B

- Back door window [GW-12](#)
BACK/L - Wiring diagram [LT-22](#)
Back-up lamp [LT-22](#)
Back-up lamp switch (M/T) [MT-13](#)
Back-up lamp switch (M/T)Back-up lamp switch .. [MT-78](#), [MT-139](#)

ALPHABETICAL INDEX

| | | | | |
|--|--|--|---|---|
| Ball joint (front) | FSU-14 | Clutch disc | CL-17 , CL-33 | |
| Base idle air volume initialing | EC-625 | Clutch fluid level | MA-29 | A |
| Basic inspection | EC-88 , EC-660 , EC-1275 | Clutch master cylinder | CL-9 , CL-26 | |
| Battery | SC-4 | Clutch operating cylinder | CL-11 , CL-28 | B |
| Battery/Starting/Charging System Tester | SC-6 , SC-13 , SC-24 | Clutch pedal | CL-7 , CL-24 | |
| Baulk ring (M/T) | MT-21 , MT-85 , MT-146 | Clutch release bearing | CL-14 , CL-31 | B |
| Bi-level door control linkage adjustment | MTC-44 | Clutch release mechanism | CL-14 , CL-31 | |
| Block heater | EM-158 | Clutch withdrawal lever | CL-14 , CL-31 | C |
| Blower motor | MTC-51 | Coil spring (front) | FSU-9 | |
| Blower resistor | MTC-51 | Coil spring (rear) | RSU-10 | C |
| Blower unit | MTC-80 | Combination lamp, front, removal and installation | EI-13 | |
| Board-on lift | GI-40 | Combination lamp, rear, removal and installation | EI-22 | D |
| Body alignment | BL-115 | Combination meter | DI-3 | |
| Brake booster | BR-16 | Combination meter removal and installation - See Instru- ment panel | IP-10 | E |
| Brake control valve (Proportioning valve) | BR-10 | Combination switch | LT-4 | |
| Brake fluid change | BR-6 | Component Location (manual A/C) | MTC-24 | |
| Brake fluid level | MA-32 | Compression pressure | EM-52 | F |
| Brake fluid level and line check | BR-6 | Compressor clutch removal and installation ... | MTC-70 | |
| Brake hydraulic line | BR-8 | Compressor mounting | MTC-69 | |
| Brake inspectionDisc Brake | MA-32 | Compressor precaution | MTC-8 | G |
| Brake inspectionDrum Brake | MA-33 | Compressor special service tool | MTC-11 | |
| Brake lines and cables inspection | MA-32 | Connecting rod | EM-70 | |
| Brake lining wear temporary checkingDisc Brake . | MA-33 | Connecting rod bearing clearance | EM-75 | H |
| 33 | | Connecting rod bushing clearance | EM-76 | |
| Brake lining wear temporary checkingDrum Brake | MA-34 | Connector inspection | GI-23 | H |
| 34 | | Console box - See Instrument panel | IP-10 | |
| Brake pedal | BR-11 | CONSULT for ABS | BRC-16 | I |
| Brake switch | EC-495 , EC-1107 , EC-1730 | CONSULT for engine | EC-113 , EC-685 , EC-1300 | |
| BRK/SW - Wiring diagram | EC-496 , EC-1108 , EC-1731 | CONSULT general information | GI-36 | I |
| Bulb specifications | LT-48 | Control lever (M/T) | MT-14 | J |
| Bumper, front | EI-13 | Control valve (A/T) | AT-297 | |
| Bumper, rear | EI-18 | Controller Area Network (CAN) . | LAN-6 , LAN-15 , LAN-21 | J |
| BYPS/V - Wiring diagram | EC-1693 , EC-1701 | Converter housing installation | AT-379 , AT-743 | K |

C

| | | | | |
|------------------------------------|--|--|---|------|
| Camshaft | EM-121 | COOL/F - Wiring diagram | EC-440 , EC-1001 , EC-1449 , EC-1638 | L |
| Camshaft inspection | EM-32 , EM-123 | Coolant mixture ratio | MA-14 | |
| Camshaft position sensor (PHASE) . | EC-282 , EC-831 , EC-1480 | Coolant overtemperarute enrichment protection .. | EC-1445 | L |
| CAN - Wiring diagram | EC-147 , EC-720 , EC-1335 , LAN-7 , LAN-16 , LAN-22 | Coolant replacementQG18DE | MA-16 | |
| CAN (Controller Area Network) . | LAN-6 , LAN-15 , LAN-21 | Coolant replacementQR25DE | MA-23 | I DX |
| CAN communication | EC-40 , EC-146 , EC-612 , EC-719 , EC-1227 , EC-1334 , AT-208 , AT-588 , LAN-6 , LAN-15 , LAN-21 | Cooling circuit (engine) | CO-6 | |
| Canister-See EVAP canister | EC-577 | Cooling fan motor | EC-1458 , EC-1647 | |
| CHARGE - Wiring diagram | SC-23 | Cooling fan relay | EC-1011 | |
| Charging system | SC-22 | Cooling unit (A/C evaporator) | MTC-81 | |
| Chassis and body maintenance | MA-10 , MA-29 | Coupling sleeve (M/T) | MT-21 , MT-85 , MT-146 | |
| CHIME - Wiring diagram | DI-40 | Crankcase ventilation system - See Positive crankcase ventilation | EC-587 , EC-1202 , EC-1842 | |
| CIGAR - Wiring diagram | WW-10 | Crankshaft | EM-72 , EM-159 | |
| Cigarette lighter | WW-10 | Crankshaft position sensor (POS) ... | EC-276 , EC-825 , EC-1474 | |
| Circuit breaker | PG-45 | Cylinder block | EM-67 , EM-158 | |
| Closed loop control ... | EC-435 , EC-609 , EC-1224 , EC-1633 | Cylinder block boring | EM-179 | |
| Clutch cover | CL-17 , CL-33 | Cylinder head | EM-52 , EM-143 | |

D

| | |
|-------------------------------|-----------------------|
| D/LOCK - Wiring diagram | BL-15 |
|-------------------------------|-----------------------|

ALPHABETICAL INDEX

| | | | |
|---|--|--|--|
| Data link connector | EC-573 , EC-1188 , EC-1829 | 605 , EC-1220 | |
| Data link connector for Consult . | EC-115 , EC-628 , EC-687 , EC-1302 | Engine coolant temperature sensor (ECTS) .. | EC-182 , EC-193 , EC-751 , EC-762 , EC-1370 , EC-1382 |
| Daytime light system | LT-10 | Engine fail-safe system | EC-87 , EC-659 , EC-1274 |
| Daytime running light - See Daytime light system .. | LT-10 | Engine oil filter replacementQG18DE | MA-20 |
| DEF - Wiring diagram | GW-20 | Engine oil filter replacementQR25DE | MA-27 |
| Detonation sensor - See Knock sensor | EC-821 | Engine oil precautions | GI-7 |
| Diagnosis sensor unit | SRS-37 | Engine oil replacementQG18DE | MA-20 |
| Diagnostic trouble code (DTC) for OBD system | EC-61 , EC-634 , EC-1208 | Engine oil replacementQR25DE | MA-26 |
| Diagnostic trouble code (DTC) inspection priority chart | EC-86 , EC-657 , EC-1272 | Engine outer component parts | EM-12 |
| Differential gear (FF A/T) | AT-355 | Engine removal | EM-63 , EM-154 |
| Differential gear (FF M/T) | MT-23 , MT-58 , MT-88 , MT-149 | Engine room - See Engine compartment | BL-116 |
| Dimensions | GI-48 | Engine serial number | GI-47 |
| DLC - Wiring diagram | EC-573 , EC-1188 , EC-1829 | ETC1 - Wiring diagram | EC-392 , EC-944 , EC-1591 |
| Dome light - See Interior lamp | LT-35 | ETC2 - Wiring diagram | EC-400 , EC-952 , EC-1599 |
| Door adjustment (front) | BL-31 | ETC3 - Wiring diagram | EC-404 , EC-956 , EC-1603 |
| Door adjustment (rear) | BL-31 | EVAP canister | EC-577 , EC-1192 |
| Door glass | BL-31 , GW-6 , GW-12 , GW-13 | EVAP canister purge volume control solenoid valve | EC-310 , EC-458 , EC-856 , EC-1069 , EC-1505 , EC-1656 |
| Door glass Fitting Adjustment | BL-31 | EVAP canister vent control valve | EC-316 , EC-466 , EC-862 , EC-1077 , EC-1511 , EC-1664 , EC-1671 |
| Door mirror | GW-14 , GW-16 | EVAP control system (small leak) diagnosis .. | EC-300 , EC-337 , EC-345 , EC-847 , EC-882 , EC-1497 , EC-1531 , EC-1539 , EC-1679 |
| Door trim | EI-31 | EVAP control system pressure sensor ... | EC-323 , EC-869 , EC-875 , EC-1518 , EC-1524 |
| Door, front | BL-31 , GW-12 | EVAP control system purge flow monitoring diagnosis . | EC-293 , EC-841 , EC-1491 |
| Door, rear | BL-31 , GW-13 | EVAP system close mode | EC-1193 |
| Drive belt | EM-99 | EVAP vapor lines inspectionQG18DE | MA-22 |
| Drive belt inspectionQG18DE | MA-16 | EVAP vapor lines inspectionQR25DE | MA-28 |
| Drive belt inspectionQR25DE | MA-23 | Evaporative emission (EVAP) system | EC-1830 |
| Drive plate runoff | EM-77 | Exhaust system | EX-3 |
| Drive shaft | MA-36 | Exhaust system inspection | MA-29 |
| Drive shaft (front) | FAX-5 , FAX-11 | Exterior | EI-22 |
| Dropping resistor (A/T) | AT-178 , AT-545 | | |
| DTC work support | EC-124 , EC-697 , EC-1311 | | |
| DTRL - Wiring diagram | LT-14 | | |

E

| | |
|---|---|
| ECM input/output signal | EC-105 , EC-677 , EC-1291 |
| ECM power supply | EC-139 , EC-374 , EC-712 , EC-925 , EC-1326 , EC-1574 |
| ECM/PW - Wiring diagram | EC-375 , EC-1575 |
| ECTS - Wiring diagram | EC-184 , EC-753 , EC-1372 |
| Electric throttle control actuator | EC-389 , EC-391 , EC-403 , EC-941 , EC-943 , EC-955 , EC-1588 , EC-1590 |
| Electrical diagnoses | GI-23 |
| Electrical load signal circuit | EC-555 , EC-1169 , EC-1805 |
| Electrical units location | PG-42 |
| Electronic ignition (EI) system | EC-38 , EC-1225 |
| Engine compartment | BL-116 |
| Engine control circuit diagram .. | EC-103 , EC-675 , EC-1289 |
| Engine control component parts location ... | EC-97 , EC-669 , EC-1284 |
| Engine control module (ECM) ... | EC-371 , EC-916 , EC-1567 |
| Engine control system diagram and chart . | EC-33 , EC- |

F

| | |
|---|--|
| F/FOG - Wiring diagram | LT-25 |
| F/PUMP - Wiring diagram | EC-545 , EC-1159 , EC-1791 |
| Fan switch | MTC-51 |
| Final drive (FF A/T) | AT-355 |
| Final drive (FF M/T) ... | MT-23 , MT-58 , MT-88 , MT-149 |
| Finisher, interior - See Trim | EI-28 |
| Finisher, trunk lid | EI-33 |
| Floor trim | EI-28 |
| Flow charts | GI-26 |
| FLS1 - Wiring diagram | EC-1549 |
| FLS2 - Wiring diagram | EC-1556 |
| FLS3 - Wiring diagram | EC-1689 |
| Fluid temperature sensor (A/T) | AT-125 , AT-495 |
| Fluids | MA-13 |
| Flywheel (clutch) | CL-18 , CL-34 |
| Flywheel runoff | EM-77 |
| Fog lamp, front | LT-24 |
| Fog lamp, front, removal and installation | EI-13 |
| Fork rod (M/T) | MT-22 , MT-87 , MT-148 |
| Forward clutch | AT-324 |
| Freeze frame data | EC-62 , EC-634 , EC-1248 |

ALPHABETICAL INDEX

| | | | | |
|---|--|---|---|------|
| Front axle | FAX-5 | Headlamp | LT-6 | |
| Front bumper | EI-13 | Headlamp removal and installation | EI-13 | A |
| Front combination lamp removal and installation | EI-13 | Headlining - See Roof trim | EI-32 | |
| Front disc brake | BR-19 | Heated oxygen sensor 1 | EC-201 , EC-207 , EC-216 , EC-408 , EC-414 , EC-1390 , EC-1396 , EC-1405 , EC-1607 , EC-1613 | B |
| Front door | BL-31 , GW-12 | Heated oxygen sensor 1 heater | EC-152 , EC-1340 | |
| Front fog lamp | LT-24 | Heated oxygen sensor 2 | EC-223 , EC-230 , EC-420 , EC-427 , EC-770 , EC-777 , EC-981 , EC-989 , EC-1412 , EC-1419 , EC-1619 , EC-1626 | C |
| Front fog lamp removal and installation | EI-13 | Heated oxygen sensor 2 heater | EC-158 , EC-725 , EC-1346 | D |
| Front passenger air bag | SRS-44 | HEATER - Wiring diagram | MTC-26 | |
| Front seat | SE-3 | Heater mirror | GW-15 | E |
| Front seat belt | SB-3 | Heater system - Wiring diagram | MTC-26 | |
| Front washer | WW-3 | Heater unit (heater core) | MTC-79 | |
| Front wiper | WW-3 | Height (Dimensions) | GI-48 | F |
| FTTS - Wiring diagram | EC-253 , EC-257 , EC-801 , EC-805 , EC-1442 | HFC134a (R134a) system identification | MTC-4 | |
| FUEL - Wiring diagram | EC-240 , EC-247 , EC-787 , EC-794 , EC-1428 , EC-1435 | HFC134a (R134a) system introduction | MTC-16 | |
| Fuel cut control (at no load high engine speed) | EC-611 , EC-1226 | HFC134a (R134a) system precaution | MTC-3 | |
| Fuel gauge | DI-3 | HFC134a (R134a) system service procedure | MTC-83 | G |
| Fuel injection system ... | EC-238 , EC-245 , EC-651 , EC-785 , EC-792 , EC-1426 , EC-1433 | HFC134a (R134a) system service tools | MTC-12 | |
| Fuel injector | EC-538 | HFC134a system service equipment precaution | MTC-8 | |
| Fuel injector and fuel tube | EM-19 , EM-116 | High clutch | AT-318 | H |
| Fuel level sensor .. | EC-353 , EC-355 , EC-358 , EC-899 , EC-901 , EC-903 , EC-1548 , EC-1553 , EC-1555 , EC-1688 | HO2S1 - Wiring diagram | EC-203 , EC-210 , EC-219 , EC-1392 , EC-1399 , EC-1408 | |
| Fuel line inspection | FL-2 , MA-19 | HO2S1H - Wiring diagram | EC-154 , EC-1342 | I |
| Fuel line inspection QR25DE | MA-25 | HO2S2 - Wiring diagram ... | EC-225 , EC-233 , EC-422 , EC-430 , EC-772 , EC-780 , EC-984 , EC-992 , EC-1414 , EC-1421 , EC-1621 , EC-1628 | |
| Fuel precautions | GI-3 , GI-5 | HO2S2H - Wiring diagram . | EC-160 , EC-727 , EC-1348 | J |
| Fuel pressure check | EC-56 , EC-1241 | Hood | EI-13 | |
| Fuel pressure release | EC-56 , EC-628 , EC-1241 | Horn | WW-9 | |
| Fuel pump | EC-544 , EC-1158 , EC-1790 | HORN - Wiring diagram | WW-9 | K |
| Fuel tank temperature sensor ... | EC-251 , EC-256 , EC-799 , EC-804 , EC-1439 , EC-1441 | How to erase DTC | EC-642 , EC-643 | |
| Fuel tank vacuum relief valve | EC-577 , EC-1192 | How to erase DTC for OBD system ... | EC-71 , EC-642 , EC-1257 | L |
| Fuel tank Removal and Installtion | FL-7 | | | |
| Fuse | PG-45 | | | |
| Fuse and fusible link box | PG-55 | | | |
| Fuse block | PG-54 | | | |
| Fusible link | PG-45 | | | |
| G | | | | |
| Garage jack and safety stand | GI-39 | IATS - Wiring diagram | EC-179 , EC-748 , EC-1367 | I DX |
| Gauges | DI-3 | Identification plate | GI-47 | |
| Gear components (M/T) | MT-21 , MT-85 , MT-146 | Idle air volume learning | EC-53 , EC-1239 | |
| Generator | SC-30 | Idle mixture ratio | EC-43 , EC-615 , EC-1229 | |
| Generator - See Alternator | SC-30 | Idle speed | EC-43 , EC-88 , EC-614 , EC-615 , EC-1229 , EC-1275 | |
| Generic scan tool (GST) ... | EC-126 , EC-700 , EC-1313 | Idle speed control (ISC) | EC-362 , EC-364 , EC-907 , EC-909 , EC-1563 , EC-1565 | |
| Ground distribution | PG-12 | Ignition coil | EM-113 , EC-526 , EC-1140 , EC-1761 | |
| H | | | | |
| H/LAMP - Wiring diagram | LT-7 | Ignition control system | EC-526 , EC-1140 , EC-1761 | |
| H/MIRROR - Wiring diagram | GW-15 | Ignition timing ... | EC-43 , EC-88 , EC-614 , EC-615 , EC-1229 , EC-1275 | |
| Harness connector | PG-46 | IGNSYS - Wiring diagram | EC-527 , EC-1141 , EC-1762 | |
| Harness connector inspection | GI-23 | ILL - Wiring diagram | LT-33 | |
| Harness layout | PG-21 | Illumination | LT-32 | |
| Hazard warning lamp | LT-27 | INJECT - Wiring diagram . | EC-539 , EC-1153 , EC-1781 | |
| | | Injector | EC-1152 , EC-1780 | |
| | | Input shaft (FF M/T) ... | MT-21 , MT-41 , MT-85 , MT-146 | |
| | | Instrument panel | IP-10 | |

ALPHABETICAL INDEX

INT/L - Wiring diagram [LT-37](#)
Intake air temperature sensor ... [EC-178](#), [EC-196](#), [EC-746](#), [EC-765](#), [EC-1365](#), [EC-1385](#)
Intake door control linkage adjustment [MTC-42](#)
Intake door motor [MTC-39](#)
Intake manifold [EM-12](#), [EM-103](#)
Intake sensor [MTC-67](#)
Intake valve timing control . [EC-149](#), [EC-384](#), [EC-722](#), [EC-936](#), [EC-1337](#)
Intake valve timing control solenoid valve [EC-384](#), [EC-936](#), [EC-1584](#)
Interior [EI-28](#)
Interior lamp [LT-35](#)
IVC - Wiring diagram [EC-386](#), [EC-938](#), [EC-1585](#)
IVIS (Infiniti vehicle immobilizer system) precautions ... [GI-5](#)

J

Jacking points [GI-39](#)
Joint connector (J/C) [PG-49](#)
Junction box (J/B) [PG-54](#)

K

Keyless entry system - See Multi-remote control system [BL-34](#)
Knock sensor (KS) [EC-272](#), [EC-821](#), [EC-1470](#)
KS - Wiring diagram [EC-273](#), [EC-822](#), [EC-1471](#)

L

Length (Dimensions) [GI-48](#)
License lamp [LT-19](#)
Lifting points [GI-39](#), [GI-40](#)
Line pressure solenoid valve [AT-158](#), [AT-545](#)
Line pressure test (A/T) [AT-67](#), [AT-454](#)
Liquid gasket application [EM-4](#), [EM-92](#)
LOAD - Wiring diagram ... [EC-556](#), [EC-1169](#), [EC-1170](#)
Location of electrical units [PG-42](#)
Low and reverse brake [AT-332](#)
Lubricant (R134a) A/C [MTC-17](#)
Lubrication circuit (engine) [LU-4](#)
Lubrication oil A/C [MTC-17](#)
Lubrication-locks, hinges and hood latches [MA-36](#)
Luggage room lamp [LT-35](#)

M

M/T major overhaul [MT-20](#), [MT-88](#), [MT-149](#)
M/T oil replacementM/T oil replacement ... [MT-76](#), [MT-137](#)
M/T removal and installation [MT-16](#)
MAFS - Wiring diagram [EC-167](#), [EC-174](#), [EC-380](#), [EC-734](#), [EC-741](#), [EC-931](#), [EC-1355](#), [EC-1361](#), [EC-1580](#)
Magnet clutch [MTC-70](#)
MAIN - Wiring diagram [EC-139](#), [EC-712](#), [EC-1326](#)
Main drive gear (M/T) [MT-21](#)
Mainshaft (M/T) [MT-21](#), [MT-48](#), [MT-85](#), [MT-146](#)

Maintenance [MA-5](#)
Maintenance (engine)QG18DE [MA-16](#)
Maintenance (engine)QR25DE [MA-23](#)
Malfunction indicator lamp (MIL) . [EC-72](#), [EC-644](#), [EC-1259](#), [EC-1570](#)
Manual air conditioner - Wiring diagram [MTC-28](#)
Manual transaxle number [GI-48](#)
Manual transmission oil replacement [MA-29](#)
Mass air flow sensor (MAFS) [EC-164](#), [EC-172](#), [EC-378](#), [EC-731](#), [EC-739](#), [EC-1352](#), [EC-1359](#), [EC-1578](#)
Master cylinder (clutch) [CL-9](#), [CL-26](#)
Meter [DI-3](#)
METER - Wiring diagram [DI-13](#)
MIL - Wiring diagram [EC-1571](#)
MIRROR - Wiring diagram [GW-14](#)
Mirror defogger [GW-15](#)
Mirror, door [GW-14](#), [GW-16](#)
Mirror, out side [GW-16](#)
Misfire [EC-266](#), [EC-814](#), [EC-1465](#)
Model variation [GI-45](#)
Molding - See Exterior [EI-22](#)
MULTI - Wiring diagram [BL-39](#)
Multiport fuel injection (MFI) system .. [EC-36](#), [EC-608](#), [EC-1223](#)
Multiport fuel injection precautions [GI-3](#), [GI-6](#)
Multi-remote control system [BL-34](#)

N

NATS (Nissan anti-theft system) [BL-95](#)
NVH troubleshooting (BR) [BR-5](#)
NVH troubleshooting (EM) [EM-10](#), [EM-97](#)
NVH troubleshooting (FA) [FAX-4](#)
NVH troubleshooting (RA) [RAX-4](#)
NVH troubleshooting (WT) [WT-2](#)
NVIS (Nissan vehicle immobilizer system) [BL-95](#)
NVIS (Nissan vehicle immobilizer system) precautions [GI-3](#), [GI-5](#)

O

Oil change (capacity) [MA-13](#)
Oil pan (engine) [EM-16](#), [EM-110](#)
Oil pump (A/T) [AT-292](#)
Oil pump (engine) [LU-8](#), [LU-19](#)
Oil pump regulator valve (engine) [LU-10](#)
Oil seal replacement (engine) [EM-49](#), [EM-140](#)
On board diagnostic system [EC-1244](#)
Operating cylinder (clutch) [CL-11](#), [CL-28](#)
ORVR (On-board Refueling Vapor Recovery) [EC-581](#), [EC-1196](#), [EC-1836](#)
Overdrive control switch [AT-249](#), [AT-251](#), [AT-630](#)
Overheat [EC-437](#), [EC-998](#)
Overrun clutch [AT-324](#)
Overrun clutch solenoid valve [AT-566](#)

P

Park/Neutral position switch [EC-491](#), [EC-1103](#), [EC-](#)

ALPHABETICAL INDEX

[1726](#)

Park/neutral position switch (A/T) [AT-115](#), [AT-489](#)
 Park/neutral position switch (M/T) [MT-13](#)
 Park/neutral position switch (M/T)Park/neutral position
 switch (M/T) [MT-78](#), [MT-139](#)
 Parking brake control [PB-2](#)
 Parking drum brake [BR-31](#)
 Parking lamp [LT-19](#)
 PCV (positive crankcase ventilation) [EC-587](#), [EC-1202](#),
[EC-1842](#)
 Periodic maintenance [MA-7](#)
 PGC/V - Wiring diagram [EC-312](#), [EC-460](#), [EC-858](#), [EC-1071](#),
[EC-1507](#), [EC-1658](#)
 PHASE - Wiring diagram ... [EC-283](#), [EC-832](#), [EC-1481](#)
 Piston assembly [EM-77](#)
 Piston pin inspection [EM-69](#)
 Piston ring inspection [EM-70](#)
 Piston to bore clearance [EM-71](#), [EM-179](#)
 PNP/SW - Wiring diagram [EC-493](#), [EC-1105](#), [EC-1728](#)
 POS - Wiring diagram [EC-278](#), [EC-827](#), [EC-1475](#)
 POWER - Wiring diagram [EC-926](#), [PG-4](#)
 Power door lock [BL-12](#)
 Power door mirror [GW-14](#)
 Power steering fluid level [PS-8](#), [MA-34](#)
 Power steering gear [PS-15](#)
 Power steering hydraulic pressure [PS-9](#)
 Power steering oil pressure switch [EC-1795](#)
 Power steering oil pump [PS-21](#)
 Power steering pressure (PSP) sensor [EC-911](#)
 Power steering system bleeding [PS-8](#)
 Power supply routing [PG-2](#)
 Power window [GW-7](#)
 Power window main switch [GW-7](#)
 PRE/SE - Wiring diagram .. [EC-325](#), [EC-871](#), [EC-877](#),
[EC-1520](#), [EC-1526](#)
 Precautions (General) [GI-3](#)
 Pressure plate - See Clutch cover [CL-17](#), [CL-33](#)
 Pressure test (A/T) [AT-67](#), [AT-454](#)
 PS/SEN - Wiring diagram [EC-367](#), [EC-912](#)
 PST/SW - Wiring diagram [EC-1796](#)

R

Radiator [CO-13](#)
 Radio - See Audio [AV-2](#)
 Rear air spoiler [EI-22](#)
 Rear axle [RAX-5](#)
 Rear axle (disc brake type) [RAX-6](#)
 Rear axle (drum brake type) [RAX-6](#)
 Rear bumper [EI-18](#)
 Rear combination lamp removal and installation [EI-22](#)
 Rear disc brake [BR-23](#)
 Rear door [BL-31](#), [GW-13](#)
 Rear drum brake [BR-31](#)
 Rear seat [SE-5](#)
 Rear seat belt [SB-5](#)
 Rear suspension [RSU-5](#)
 Rear window [GW-3](#)
 Rear window defogger [GW-17](#)

Refrigerant connection precaution [MTC-5](#)
 Refrigerant general precaution [MTC-4](#)
 Refrigerant lines [MTC-83](#)
 Refrigerant pressure sensor [EC-550](#), [EC-1164](#), [EC-1800](#),
[MTC-57](#)
 Refrigeration cycle [MTC-16](#)
 Release bearing (clutch) [CL-14](#), [CL-31](#)
 Remote keyless entry system [BL-34](#)
 Removal and installation (A/T) [AT-264](#)
 Reverse clutch [AT-313](#)
 Reverse idler shaft (M/T) [MT-20](#), [MT-85](#), [MT-146](#)
 Reverse lamp switch (M/T) - See Back-up lamp switch
 (M/T) [MT-13](#)
 Reverse main gear (M/T) [MT-21](#), [MT-85](#), [MT-146](#)
 Revolution sensor (A/T) [AT-501](#)
 Road wheel size [GI-49](#)
 Rocker cover [EM-119](#)
 Roof trim [EI-32](#)
 Room lamp - See Interior lamp [LT-35](#)
 RP/SEN - Wiring diagram [EC-551](#), [EC-1165](#), [EC-1801](#)

S

S/SIG - Wiring diagram [EC-1787](#)
 SAE J1979 - Mode 1 - 7 [EC-1244](#)
 Seal - See Exterior [EI-22](#)
 Seat belt inspection [SB-7](#), [MA-37](#)
 Seat belt pre-tensioner disposal [SRS-47](#)
 Seat belt, front [SB-3](#)
 Seat belt, rear [SB-5](#)
 Seat, front [SE-3](#)
 Seat, rear [SE-5](#)
 SEN/PW - Wiring diagram [EC-455](#), [EC-1018](#), [EC-1653](#)
 Sheft warning system [BL-64](#)
 SHIFT - Wiring diagram [AT-253](#), [AT-636](#)
 Shift control components (M/T) [MT-22](#), [MT-87](#), [MT-148](#)
 Shift control components (M/T)Shift control components
 (M/T) [MT-79](#), [MT-140](#)
 Shift fork (M/T) [MT-22](#), [MT-87](#), [MT-148](#)
 Shift lever [MT-14](#)
 Shift lock system [AT-252](#), [AT-635](#)
 Shift schedule [AT-385](#), [AT-750](#)
 Shift solenoid valve A (A/T) .. [AT-139](#), [AT-149](#), [AT-551](#)
 Shift solenoid valve B (A/T) [AT-139](#), [AT-556](#)
 Shock absorber (front) [FSU-9](#)
 Shock absorber (rear) [RSU-10](#)
 Side trim [EI-28](#)
 Smart entrance control unit [BCS-3](#)
 Spare tire size [GI-49](#)
 Spark plug replacementQG18DE [MA-21](#)
 Spark plug replacementQR25DE [MA-27](#)
 Specification value [EC-1321](#)
 Speedometer [DI-3](#)
 SROOF - Wiring diagram [RF-12](#)
 SRS - Wiring diagram [SRS-14](#)
 SRS Trouble diagnoses [SRS-8](#)
 Stabilizer bar (front) [FSU-11](#)
 Stall test (A/T) [AT-63](#), [AT-450](#)
 Standardized relay [PG-52](#)

A
B
C
D
E
F
G
H
I
J
K
L
I DX

ALPHABETICAL INDEX

| | | | |
|--|--|--|--|
| START - Wiring diagram | SC-10 | Timing chain | EM-39 , EM-132 |
| Start signal | EC-1786 | Tire rotation | MA-31 |
| Starter | SC-18 | Tire size | GI-49 |
| Starting system | SC-9 | TLID - Wiring diagram | BL-33 |
| Steering gear and linkage inspection | MA-34 | Top tether strap child restraint | SB-10 |
| Steering linkage | PS-15 | Torque converter installation AT-265 , AT-648 , AT-743 | |
| Steering wheel and column | PS-11 | Torque convertor clutch solenoid valve | AT-532 |
| Steering wheel play | PS-7 | Tow truck towing | GI-41 |
| Steering wheel turning force | PS-9 | Towing point | GI-42 |
| Stop lamp | LT-21 | TPS1 - Wiring diagram | EC-262 , EC-1461 |
| Stop lamp switch | EC-495 , EC-1730 | TPS2 - Wiring diagram | EC-189 , EC-758 , EC-1377 |
| STOP/L - Wiring diagram | LT-21 | TPS3 - Wiring diagram | EC-515 , EC-1129 , EC-1749 |
| Striking rod (M/T) | MT-22 | Transmission case (M/T) | MT-20 , MT-84 , MT-145 |
| Strut (front) | FSU-9 | Tread-FR&RR (Dimensions) | GI-48 |
| Strut (rear) | RSU-8 | Trim | EI-28 |
| Sub-gear (M/T) | MT-21 | Trouble diagnoses | GI-9 , GI-23 |
| Sunroof | RF-11 | Trunk lid | EI-18 |
| Supplemental restraint system - Wiring diagram | SRS-14 | Trunk lid finisher | EI-33 |
| Suspension | MA-35 | Trunk lid opener - See Trunk lid | EI-18 |
| Swirl control valve | EC-960 , EC-973 | Trunk lid opener, electric | BL-33 |
| Swirl control valve control position sensor | EC-965 , EC-973 | Trunk lid trim | EI-33 |
| Swirl control valve control solenoid valve | EC-973 | Trunk room lamp | LT-35 |
| SWL/S - Wiring diagram | EC-967 , EC-975 | Trunk room trim | EI-33 |
| SWL/V - Wiring diagram | EC-960 , EC-962 , EC-973 | TURN - Wiring diagram | LT-29 |
| Symbols and abbreviations | GI-8 , GI-9 , GI-21 | Turn signal lamp | LT-27 |
| Symptom matrix chart | EC-93 , EC-665 , EC-1279 | Two trip detection logic | EC-58 , EC-630 , EC-1244 |
| Synchronizer (M/T) | MT-21 , MT-85 , MT-146 | Two-pole lift | GI-40 |
| System readiness test (SRT) code | EC-63 , EC-635 , EC-1249 | | |

T

| | |
|--|---|
| Tachometer | DI-3 |
| Tail lamp | LT-19 |
| TAIL/L - Wiring diagram | LT-19 |
| TCM circuit diagram | AT-18 , AT-406 |
| TCM inspection table | AT-109 , AT-483 |
| Temperature control cable and linkage adjustment | MTC-46 |
| Thermal protector | MTC-77 |
| Thermostat | CO-11 , CO-28 |
| Three way catalyst function | EC-288 , EC-837 , EC-1486 |
| Three way catalyst precautions | GI-3 , GI-5 |
| Throttle control motor | EC-1602 |
| Throttle control motor relay | EC-398 , EC-950 , EC-1597 |
| Throttle position sensor (TPS) .. | EC-187 , EC-260 , EC-450 , EC-452 , EC-513 , EC-756 , EC-1013 , EC-1015 , EC-1127 , EC-1375 , EC-1459 , EC-1648 , EC-1650 , EC-1747 |
| Throttle position sensor adjustment | EC-660 |
| Throttle position switch | AT-249 , AT-630 |
| Throttle valve closed position learning | EC-1239 |
| Throwout bearing - See Clutch release bearing | CL-14 , CL-31 |
| Tie-rod | PS-19 |
| Tie-rod ball joints | PS-19 |
| Tightening torque of standard bolts | GI-43 |
| Time control system | BCS-10 |

U

| | |
|------------------|------------------------|
| Under body | BL-119 |
|------------------|------------------------|

V

| | |
|--|--|
| Vacuum cut valve bypass valve | EC-1691 , EC-1698 |
| Vacuum hose (brake system) | BR-18 |
| Vacuum hose drawing (Engine control) | EC-34 , EC-1221 |
| Valve clearance | EM-35 , EM-128 |
| Valve guide | EM-58 , EM-150 |
| Valve seat | EM-60 , EM-151 |
| Valve spring | EM-61 , EM-152 |
| Variable induction air control system (VIAS) . | EC-1772 |
| Vehicle identification number | GI-46 |
| Vehicle recovery (freeing a stuck vehicle) | GI-42 |
| Vehicle security (theft warning) system | BL-64 |
| Vehicle speed sensor (VSS) | EC-360 , EC-905 , EC-1559 |
| VEHSEC - Wiring diagram | BL-71 |
| Vent mode switch | MTC-21 |
| VENT/V - Wiring diagram ... | EC-318 , EC-468 , EC-864 , EC-1079 , EC-1513 , EC-1666 , EC-1674 |
| VIAS - Wiring diagram | EC-1774 |
| Viscosity number (SAE) | MA-14 |
| VSS - Wiring diagram | EC-1560 |

W

| | |
|-----------------------------|-----------------------|
| WARN - Wiring diagram | DI-29 |
|-----------------------------|-----------------------|

ALPHABETICAL INDEX

| | | |
|---|---|---|
| Warning chime | DI-37 | |
| Warning lamps | DI-27 | A |
| Washer, front | WW-3 | |
| Water pump | CO-9 | |
| Water temperature gauge | DI-3 | B |
| Weatherstrip - See Exterior | EI-22 | |
| Wheel alignment (front) | FSU-6 | |
| Wheel alignment (rear) | RSU-6 | C |
| Wheel balance | MA-31 | |
| Wheel bearing (front axle) | FAX-9 | |
| Wheel bearing (front) | FAX-5 | |
| Wheel bearing (rear) | RAX-5 | D |
| Wheel hub (front) | FAX-6 , FAX-9 | |
| Wheel hub (rear) | RAX-6 | |
| Wheel sensors (ABS) | BRC-44 | E |
| Wheel size | GI-49 | |
| Wheelbase (Dimensions) | GI-48 | |
| Width (Dimensions) | GI-48 | F |
| WINDOW - Wiring diagram | GW-9 | |
| Window, back door | GW-12 | |
| Window, door | GW-6 , GW-12 | |
| Window, rear | GW-3 | G |
| Windshield | GW-3 | |
| Windshield washer - See Front washer | WW-3 | |
| Windshield wiper - See Front wiper | WW-3 | H |
| WIPER - Wiring diagram | WW-5 | |
| Wiper and washer | WW-3 | |
| Wiper, front | WW-3 | I |
| Wiring Diagram (Cell code) list | PG-39 | |
| Wiring diagrams | GI-8 , GI-13 | |
| Withdrawal lever (clutch) | CL-14 , CL-31 | J |
| Wrist pin - See Piston pin inspection | EM-69 | |