

SECTION **IDX**  
ALPHABETICAL INDEX

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

IDX

# ALPHABETICAL INDEX

## A

- A/C - Wiring diagram ..... [MTC-27](#)  
A/C air flow ..... [MTC-21](#)  
A/C component layout ..... [MTC-19](#)  
A/C compressor clutch removal and installation . [MTC-69](#)  
A/C compressor mounting ..... [MTC-68](#)  
A/C compressor precaution ..... [MTC-8](#)  
A/C compressor special service tool ..... [MTC-11](#)  
A/C control linkage adjustment (manual A/C) . [MTC-41](#)  
A/C control operation (manual A/C) ..... [MTC-20](#)  
A/C diagnostic work flow (manual A/C) ..... [MTC-34](#)  
A/C HFC134a (R134a) system identification .... [MTC-4](#)  
A/C HFC134a (R134a) system introduction ... [MTC-15](#)  
A/C HFC134a (R134a) system precaution ..... [MTC-3](#)  
A/C HFC134a (R134a) system service procedure ..... [MTC-82](#)  
A/C HFC134a (R134a) system service tools .. [MTC-12](#)  
A/C HFC134a system service equipment precaution ... [MTC-8](#)  
A/C lubricant (R134a) ..... [MTC-16](#)  
A/C lubrication oil ..... [MTC-16](#)  
A/C operational check ..... [MTC-35](#)  
A/C performance chart ..... [MTC-58](#)  
A/C performance test diagnoses ..... [MTC-58](#)  
A/C pressure switch ..... [MTC-15](#)  
A/C push control ..... [MTC-20](#)  
A/C reray ..... [MTC-55](#)  
A/C service data specification ..... [MTC-91](#)  
A/C switch ..... [MTC-20](#)  
A/C, M - Wiring diagram ..... [MTC-27](#)  
A/F - Wiring diagram ... [EC-453](#), [EC-459](#), [EC-465](#), [EC-472](#), [EC-479](#), [EC-485](#), [EC-492](#), [EC-1116](#), [EC-1122](#), [EC-1128](#), [EC-1135](#), [EC-1142](#), [EC-1148](#), [EC-1155](#)  
A/FH - Wiring diagram ..... [EC-353](#), [EC-1030](#)  
A/T - Wiring diagram ..... [AT-406](#)  
A/T fluid temperature sensor ..... [AT-125](#), [AT-494](#)  
A/T self-diagnoses ..... [AT-431](#), [AT-439](#), [AT-440](#)  
A/T shift lock system ..... [AT-252](#), [AT-633](#)  
A/T shift lock system - Wiring diagram [AT-253](#), [AT-634](#)  
A/T trouble diagnoses ..... [AT-56](#)  
A/T Wiring diagram AT - 1ST ..... [AT-137](#), [AT-511](#)  
A/T Wiring diagram AT - 2ND ..... [AT-142](#), [AT-516](#)  
A/T Wiring diagram AT - 3RD ..... [AT-147](#), [AT-521](#)  
A/T Wiring diagram AT - 4TH ..... [AT-153](#), [AT-526](#)  
A/T Wiring diagram AT - BA/FTS ..... [AT-199](#), [AT-572](#)  
A/T Wiring diagram AT - CAN ..... [AT-209](#), [AT-588](#)  
A/T Wiring diagram AT - ENG SS ..... [AT-132](#), [AT-506](#)  
A/T Wiring diagram AT - FTS ..... [AT-122](#), [AT-496](#)  
A/T Wiring diagram AT - LPSV ..... [AT-174](#), [AT-546](#)  
A/T Wiring diagram AT - MAIN ..... [AT-112](#), [AT-485](#)  
A/T Wiring diagram AT - NONDTC .... [AT-215](#), [AT-594](#)  
A/T Wiring diagram AT - OVRCSV .... [AT-194](#), [AT-567](#)  
A/T Wiring diagram AT - PNP/SW .... [AT-116](#), [AT-490](#)  
A/T Wiring diagram AT - SSV/A ..... [AT-180](#), [AT-552](#)  
A/T Wiring diagram AT - SSV/B ..... [AT-184](#), [AT-557](#)  
A/T Wiring diagram AT - TCCSIG ..... [AT-166](#), [AT-538](#)  
A/T Wiring diagram AT - TCV ..... [AT-160](#), [AT-533](#)  
A/T Wiring diagram AT - TPS ..... [AT-190](#), [AT-562](#)  
A/T Wiring diagram AT - VSS A/T ..... [AT-128](#), [AT-502](#)  
A/T Wiring diagram AT - VSSMTR ... [AT-205](#), [AT-579](#), [AT-584](#)  
ABS - Wiring diagram ..... [BRC-10](#)  
ABS sensor rotor ..... [RAX-6](#)  
Accelerator pedal position (APP) sensor [EC-540](#), [EC-559](#), [EC-1210](#), [EC-1217](#), [EC-1230](#)  
Accelerator pedal released position learning ... [EC-47](#), [EC-684](#)  
Air bag ..... [SRS-3](#)  
Air bag disposal ..... [SRS-47](#)  
Air bag precautions ..... [GI-3](#)  
Air bleeding (hydraulic clutch) ..... [CL-7](#), [CL-24](#)  
Air bleeding for brake system ..... [BR-7](#)  
Air cleaner and air duct ..... [EM-101](#)  
Air cleaner filter replacementQG18DE ..... [MA-19](#)  
Air cleaner filter replacementQR25DE ..... [MA-26](#)  
Air conditioner - Wiring diagram ..... [MTC-27](#)  
Air conditioner cut control ..... [EC-659](#)  
Air control cable adjustment ..... [MTC-43](#)  
Air flow meter - See Mass air flow sensor [EC-807](#), [EC-815](#)  
Air fuel ratio sensor 1 .. [EC-450](#), [EC-456](#), [EC-462](#), [EC-469](#), [EC-476](#), [EC-482](#), [EC-489](#), [EC-1113](#), [EC-1119](#), [EC-1125](#), [EC-1132](#), [EC-1139](#), [EC-1145](#), [EC-1152](#)  
Air fuel ratio sensor 1 heater ..... [EC-351](#), [EC-1028](#)  
Air mix door control linkage adjustment ..... [MTC-45](#)  
Air spoiler, rear ..... [EI-22](#)  
Alternator ..... [SC-30](#)  
Angular tightening application ..... [EM-4](#), [EM-91](#)  
Antenna ..... [AV-13](#)  
Anti-lock brake system - Wiring diagram ..... [BRC-10](#)  
APPS1 - Wiring diagram ..... [EC-542](#), [EC-1212](#)  
APPS2 - Wiring diagram ..... [EC-548](#), [EC-1219](#)  
APPS3 - Wiring diagram ..... [EC-561](#), [EC-1232](#)  
ASC/BS - Wiring diagram ..... [EC-519](#), [EC-1183](#)  
ASC/SW - Wiring diagram ..... [EC-512](#), [EC-1176](#)  
ASCBOF - Wiring diagram ..... [EC-609](#), [EC-1293](#)  
ASCD ..... [EC-1319](#)  
ASCD (automatic speed control device) [EC-635](#), [ACS-2](#)  
ASCD brake switch ..... [EC-1181](#), [EC-1292](#)  
ASCD clutch switch ..... [EC-1181](#), [EC-1292](#)  
ASCD indicator lamp ..... [EC-1300](#)  
ASCD steering switch ..... [EC-1174](#)  
ASCIND - Wiring diagram ..... [EC-619](#), [EC-1301](#)  
Audio ..... [AV-2](#)  
AUDIO - Wiring diagram ..... [AV-4](#)  
Audio and A/C control removal and installation - See Instrument panel ..... [IP-10](#)  
Automatic transaxle number ..... [GI-49](#)  
Automatic transmission fluid replacement ..... [MA-31](#)  
Axle ..... [MA-36](#)

## B

- Back door window ..... [GW-12](#)  
BACK/L - Wiring diagram ..... [LT-22](#)

# ALPHABETICAL INDEX

|  |  |   |  |   |
|--|--|---|--|---|
| Back-up lamp                                   | <a href="#">LT-22</a>  | Clutch operating cylinder   | <a href="#">CL-11</a> , <a href="#">CL-28</a>    |   |
| Back-up lamp switch (M/T)                      | <a href="#">MT-12</a>  | Clutch pedal  | <a href="#">CL-7</a> , <a href="#">CL-24</a>     | A |
| Back-up lamp switch (M/T)Back-up lamp switch   | <a href="#">MT-75</a>  | Clutch release bearing  | <a href="#">CL-14</a> , <a href="#">CL-31</a>    |   |
| Ball joint (front)                             | <a href="#">FSU-14</a>   | Clutch release mechanism  | <a href="#">CL-14</a> , <a href="#">CL-31</a>    |   |
| Basic inspection                               | <a href="#">EC-81</a> , <a href="#">EC-723</a>   | Clutch withdrawal lever   | <a href="#">CL-14</a> , <a href="#">CL-31</a>    | B |
| Battery  | <a href="#">SC-4</a>   | Coil spring (front)   | <a href="#">FSU-9</a>                            |   |
| Battery/Starting/Charging System Tester        | <a href="#">SC-6</a> , <a href="#">SC-13</a> ,<br><a href="#">SC-24</a>  | Coil spring (rear)  | <a href="#">RSU-10</a>                           |   |
| Baulk ring (M/T)                               | <a href="#">MT-19</a> , <a href="#">MT-82</a>  | Combination lamp, front, removal and installation                 | <a href="#">EI-13</a>                            | C |
| Bi-level door control linkage adjustment       | <a href="#">MTC-43</a>   | Combination lamp, rear, removal and installation                  | <a href="#">EI-22</a>                            |   |
| Block heater                                   | <a href="#">EM-159</a>   | Combination meter   | <a href="#">DI-3</a>                             |   |
| Blower motor                                   | <a href="#">MTC-50</a>   | Combination meter removal and installation - See Instrument panel | <a href="#">IP-10</a>                            | D |
| Blower resistor                                | <a href="#">MTC-50</a>   | Combination switch  | <a href="#">LT-4</a>                             |   |
| Blower unit                                    | <a href="#">MTC-79</a>   | Component Location (manual A/C)                                   | <a href="#">MTC-23</a>                           |   |
| Body alignment                                 | <a href="#">BL-112</a>   | Compression pressure  | <a href="#">EM-52</a>                            | E |
| Brake booster                                  | <a href="#">BR-16</a>  | Compressor clutch removal and installation                        | <a href="#">MTC-69</a>                           |   |
| Brake control valve (Proportioning valve)      | <a href="#">BR-10</a>  | Compressor mounting   | <a href="#">MTC-68</a>                           |   |
| Brake fluid change                             | <a href="#">BR-6</a>   | Compressor precaution   | <a href="#">MTC-8</a>                            | F |
| Brake fluid level                              | <a href="#">MA-32</a>  | Compressor special service tool                                   | <a href="#">MTC-11</a>                           |   |
| Brake fluid level and line check               | <a href="#">BR-6</a>   | Connecting rod  | <a href="#">EM-69</a>                            |   |
| Brake hydraulic line                           | <a href="#">BR-8</a>   | Connecting rod bearing clearance                                  | <a href="#">EM-74</a>                            | G |
| Brake inspectionDisc Brake                     | <a href="#">MA-33</a>  | Connecting rod bushing clearance                                  | <a href="#">EM-75</a>                            |   |
| Brake inspectionDrum Brake                     | <a href="#">MA-34</a>  | Connector inspection  | <a href="#">GI-23</a>                            |   |
| Brake lines and cables inspection              | <a href="#">MA-32</a>  | Console box - See Instrument panel                                | <a href="#">IP-10</a>                            | H |
| Brake lining wear temporary checkingDisc Brake | <a href="#">MA-34</a>  | CONSULT for ABS   | <a href="#">BRC-16</a>                           |   |
| Brake lining wear temporary checkingDrum Brake | <a href="#">MA-34</a>  | CONSULT for engine  | <a href="#">EC-114</a>                           |   |
| Brake pedal                                    | <a href="#">BR-11</a>  | CONSULT general information                                       | <a href="#">GI-36</a>                            | I |
| Brake switch                                   | <a href="#">EC-534</a> , <a href="#">EC-1181</a> , <a href="#">EC-1204</a> , <a href="#">EC-1292</a>   | CONSULT-áU for engine   | <a href="#">EC-753</a>                           |   |
| BRK/SW - Wiring diagram                        | <a href="#">EC-535</a> , <a href="#">EC-1205</a>   | Control lever (M/T)   | <a href="#">MT-13</a>                            |   |
| Bulb specifications                            | <a href="#">LT-48</a>  | Control valve (A/T)   | <a href="#">AT-297</a>                           | J |
| Bumper, front                                  | <a href="#">EI-13</a>  | Controller Area Network (CAN)                                     | <a href="#">LAN-7</a> , <a href="#">LAN-17</a>   |   |
| Bumper, rear                                   | <a href="#">EI-18</a>  | Converter housing installation                                    | <a href="#">AT-379</a> , <a href="#">AT-741</a>  |   |
| <b>C</b>                                       |  |   |  |   |
| Camshaft                                       | <a href="#">EM-121</a>   | COOL/F - Wiring diagram   | <a href="#">EC-431</a> , <a href="#">EC-1095</a> | K |
| Camshaft inspection                            | <a href="#">EM-33</a> , <a href="#">EM-123</a>   | Coolant mixture ratio   | <a href="#">MA-14</a>                            |   |
| Camshaft position sensor (PHASE)               | <a href="#">EC-259</a> , <a href="#">EC-935</a>  | Coolant replacementQG18DE   | <a href="#">MA-16</a>                            |   |
| CAN - Wiring diagram                           | <a href="#">EC-149</a> , <a href="#">EC-790</a> , <a href="#">LAN-8</a> , <a href="#">LAN-18</a>   | Coolant replacementQR25DE   | <a href="#">MA-23</a>                            | L |
| CAN (Controller Area Network)                  | <a href="#">LAN-7</a> , <a href="#">LAN-17</a>   | Cooling circuit (engine)  | <a href="#">CO-7</a>                             |   |
| CAN communication                              | <a href="#">EC-34</a> , <a href="#">EC-148</a> , <a href="#">EC-661</a> , <a href="#">EC-789</a> ,<br><a href="#">AT-208</a> , <a href="#">AT-587</a> , <a href="#">LAN-7</a> , <a href="#">LAN-17</a> | Cooling fan control   | <a href="#">EC-1092</a>                          |   |
| Canister-See EVAP canister                     | <a href="#">EC-1308</a>  | Cooling fan motor   | <a href="#">EC-1092</a>                          |   |
| CHARGE - Wiring diagram                        | <a href="#">SC-23</a>  | Cooling fan relay   | <a href="#">EC-440</a> , <a href="#">EC-1104</a> |   |
| Charging system                                | <a href="#">SC-22</a>  | Cooling unit (A/C evaporator)                                     | <a href="#">MTC-80</a>                           |   |
| Chassis and body maintenance                   | <a href="#">MA-9</a> , <a href="#">MA-30</a>   | Coupling sleeve (M/T)   | <a href="#">MT-19</a> , <a href="#">MT-82</a>    |   |
| CHIME - Wiring diagram                         | <a href="#">DI-43</a>  | Crankcase ventilation system - See Positive crankcase ventilation | <a href="#">EC-633</a> , <a href="#">EC-1317</a> |   |
| CIGAR - Wiring diagram                         | <a href="#">WW-10</a>  | Crankshaft  | <a href="#">EM-71</a> , <a href="#">EM-160</a>   |   |
| Cigarette lighter                              | <a href="#">WW-10</a>  | Crankshaft position sensor (POS)                                  | <a href="#">EC-252</a> , <a href="#">EC-930</a>  |   |
| Circuit breaker                                | <a href="#">PG-46</a>  | Cylinder block  | <a href="#">EM-66</a> , <a href="#">EM-159</a>   |   |
| Closed loop control                            | <a href="#">EC-31</a> , <a href="#">EC-657</a>   | Cylinder block boring   | <a href="#">EM-179</a>                           |   |
| Closed loop control (Bank 1)                   | <a href="#">EC-1090</a>  | Cylinder head   | <a href="#">EM-52</a> , <a href="#">EM-143</a>   |   |
| Clutch cover                                   | <a href="#">CL-17</a> , <a href="#">CL-33</a>  | <b>D</b>  |  |   |
| Clutch disc                                    | <a href="#">CL-17</a> , <a href="#">CL-33</a>  | D/LOCK - Wiring diagram   | <a href="#">BL-14</a>                            |   |
| Clutch fluid level                             | <a href="#">MA-30</a>  | Data link connector   | <a href="#">EC-1303</a>                          |   |
| Clutch master cylinder                         | <a href="#">CL-9</a> , <a href="#">CL-26</a>   | Data link connector for Consult                                   | <a href="#">EC-116</a> , <a href="#">EC-756</a>  |   |
|  |  | Daytime light system  | <a href="#">LT-10</a>                            |   |
|  |  | Daytime running light - See Daytime light system                  | <a href="#">LT-10</a>                            |   |
|  |  | DEF - Wiring diagram  | <a href="#">GW-20</a>                            |   |

# ALPHABETICAL INDEX

Detonation sensor - See Knock sensor ... [EC-247](#), [EC-926](#)  
Diagnosis sensor unit ..... [SRS-37](#)  
Diagnostic trouble code (DTC) for OBD system [EC-56](#),  
[EC-639](#), [EC-693](#)  
Diagnostic trouble code (DTC) inspection priority chart  
[EC-78](#), [EC-720](#)  
Differential gear (FF A/T) ..... [AT-355](#)  
Differential gear (FF M/T) ..... [MT-21](#), [MT-55](#), [MT-85](#)  
Dimensions ..... [GI-49](#)  
DLC - Wiring diagram ..... [EC-621](#), [EC-1303](#)  
Dome light - See Interior lamp ..... [LT-35](#)  
Door adjustment (front) ..... [BL-30](#)  
Door adjustment (rear) ..... [BL-30](#)  
Door glass ..... [BL-30](#), [GW-6](#), [GW-12](#), [GW-13](#)  
Door glass Fitting Adjustment ..... [BL-30](#)  
Door mirror ..... [GW-14](#), [GW-16](#)  
Door trim ..... [EI-31](#)  
Door, front ..... [BL-30](#), [GW-12](#)  
Door, rear ..... [BL-30](#), [GW-13](#)  
Drive belt ..... [EM-99](#)  
Drive belt inspectionQG18DE ..... [MA-16](#)  
Drive belt inspectionQR25DE ..... [MA-23](#)  
Drive plate runout ..... [EM-76](#)  
Drive shaft ..... [MA-37](#)  
Drive shaft (front) ..... [FAX-5](#), [FAX-11](#)  
Dropping resistor (A/T) ..... [AT-178](#), [AT-544](#)  
DTC work support ..... [EC-126](#), [EC-765](#)  
DTRL - Wiring diagram ..... [LT-14](#)

## E

ECM input/output signal ..... [EC-106](#), [EC-746](#), [EC-769](#)  
ECM power supply [EC-141](#), [EC-357](#), [EC-782](#), [EC-1034](#)  
ECM/PW - Wiring diagram ..... [EC-358](#)  
ECTS - Wiring diagram ..... [EC-181](#), [EC-829](#)  
Electric throttle control actuator [EC-373](#), [EC-375](#), [EC-387](#),  
[EC-1043](#), [EC-1045](#), [EC-1057](#)  
Electrical diagnoses ..... [GI-23](#)  
Electrical load signal circuit ..... [EC-596](#), [EC-1274](#)  
Electrical units location ..... [PG-43](#)  
Electronic ignition (EI) system ..... [EC-658](#)  
Engine compartment ..... [BL-113](#)  
Engine control circuit diagram ..... [EC-102](#), [EC-742](#)  
Engine control component parts location ... [EC-90](#), [EC-732](#)  
Engine control module (ECM) ..... [EC-348](#), [EC-1025](#)  
Engine control system diagram and chart . [EC-28](#), [EC-652](#)  
Engine coolant temperature sensor (ECTS) ... [EC-179](#),  
[EC-190](#), [EC-827](#), [EC-838](#)  
Engine fail-safe system ..... [EC-80](#), [EC-721](#)  
Engine oil filter replacementQG18DE ..... [MA-20](#)  
Engine oil filter replacementQR25DE ..... [MA-27](#)  
Engine oil precautions ..... [GI-7](#)  
Engine oil replacementQG18DE ..... [MA-20](#)  
Engine oil replacementQR25DE ..... [MA-26](#)  
Engine outer component parts ..... [EM-13](#)  
Engine removal ..... [EM-62](#), [EM-155](#)

Engine room - See Engine compartment ..... [BL-113](#)  
Engine serial number ..... [GI-48](#)  
ETC1 - Wiring diagram ..... [EC-376](#), [EC-1046](#)  
ETC2 - Wiring diagram ..... [EC-384](#), [EC-1054](#)  
ETC3 - Wiring diagram ..... [EC-388](#), [EC-1058](#)  
EVAP canister ..... [EC-625](#), [EC-1308](#)  
EVAP canister purge volume control solenoid valve ....  
[EC-284](#), [EC-496](#), [EC-963](#), [EC-1159](#)  
EVAP canister vent control valve [EC-291](#), [EC-504](#), [EC-969](#),  
[EC-1167](#)  
EVAP control system (small leak) diagnosis .. [EC-275](#),  
[EC-314](#), [EC-955](#), [EC-990](#), [EC-998](#)  
EVAP control system pressure sensor ... [EC-298](#), [EC-300](#),  
[EC-306](#), [EC-976](#), [EC-982](#)  
EVAP control system purge flow monitoring diagnosis .  
[EC-269](#), [EC-949](#)  
EVAP vapor lines inspectionQG18DE ..... [MA-22](#)  
EVAP vapor lines inspectionQR25DE ..... [MA-29](#)  
Evaporative emission (EVAP) system ..... [EC-1305](#)  
Exhaust system ..... [EX-3](#)  
Exhaust system inspection ..... [MA-30](#)  
Exterior ..... [EI-22](#)

## F

F/FOG - Wiring diagram ..... [LT-25](#)  
F/PUMP - Wiring diagram ..... [EC-586](#), [EC-1265](#)  
Fan switch ..... [MTC-50](#)  
Final drive (FF A/T) ..... [AT-355](#)  
Final drive (FF M/T) ..... [MT-21](#), [MT-55](#), [MT-85](#)  
Finisher, interior - See Trim ..... [EI-28](#)  
Finisher, trunk lid ..... [EI-33](#)  
Floor trim ..... [EI-28](#)  
Flow charts ..... [GI-26](#)  
Fluid temperature sensor (A/T) ..... [AT-125](#), [AT-494](#)  
Fluids ..... [MA-13](#)  
Flywheel (clutch) ..... [CL-18](#), [CL-34](#)  
Flywheel runout ..... [EM-76](#)  
Fog lamp, front ..... [LT-24](#)  
Fog lamp, front, removal and installation ..... [EI-13](#)  
Fork rod (M/T) ..... [MT-20](#), [MT-84](#)  
Forward clutch ..... [AT-324](#)  
Freeze frame data ..... [EC-57](#), [EC-694](#)  
Front axle ..... [FAX-5](#)  
Front bumper ..... [EI-13](#)  
Front combination lamp removal and installation [EI-13](#)  
Front door ..... [BL-30](#), [GW-12](#)  
Front fog lamp ..... [LT-24](#)  
Front fog lamp removal and installation ..... [EI-13](#)  
Front passenger air bag ..... [SRS-44](#)  
Front seat ..... [SE-3](#)  
Front seat belt ..... [SB-3](#)  
Front washer ..... [WW-3](#)  
Front wiper ..... [WW-3](#)  
FTTS - Wiring diagram [EC-228](#), [EC-232](#), [EC-906](#), [EC-910](#)  
FUEL - Wiring diagram [EC-214](#), [EC-221](#), [EC-885](#), [EC-896](#)  
Fuel cut control (at no load high engine speed) [EC-33](#),

# ALPHABETICAL INDEX

[EC-660](#)  
Fuel gauge ..... [DI-3](#)  
Fuel injection system [EC-73](#), [EC-212](#), [EC-219](#), [EC-883](#),  
[EC-894](#)  
Fuel injector and fuel tube ..... [EM-19](#), [EM-116](#)  
Fuel level sensor [EC-331](#), [EC-333](#), [EC-335](#), [EC-1008](#),  
[EC-1010](#), [EC-1012](#)  
Fuel line inspection ..... [FL-2](#), [MA-19](#)  
Fuel line inspection QR25DE ..... [MA-25](#)  
Fuel precautions ..... [GI-3](#), [GI-5](#)  
Fuel pressure check ..... [EC-49](#), [EC-687](#)  
Fuel pressure release ..... [EC-49](#), [EC-687](#)  
Fuel pump ..... [EC-585](#), [EC-1264](#)  
Fuel tank temperature sensor ... [EC-226](#), [EC-231](#), [EC-904](#), [EC-909](#)  
Fuel tank vacuum relief valve ..... [EC-625](#), [EC-1308](#)  
Fuel tank Removal and Installtion ..... [FL-7](#)  
Fuse ..... [PG-46](#)  
Fuse and fusible link box ..... [PG-55](#)  
Fuse block ..... [PG-54](#)  
Fusible link ..... [PG-46](#)

## G

Gauges ..... [DI-3](#)  
Gear components (M/T) ..... [MT-19](#), [MT-82](#)  
Generator ..... [SC-30](#)  
Generator - See Alternator ..... [SC-30](#)  
Generic scan tool (GST) ..... [EC-129](#), [EC-767](#)  
Ground distribution ..... [PG-13](#)

## H

H/LAMP - Wiring diagram ..... [LT-7](#)  
H/MIRROR - Wiring diagram ..... [GW-15](#)  
Harness connector ..... [PG-47](#)  
Harness connector inspection ..... [GI-23](#)  
Harness layout ..... [PG-22](#)  
Hazard warning lamp ..... [LT-27](#)  
Headlamp ..... [LT-6](#)  
Headlamp removal and installation ..... [EI-13](#)  
Headlining - See Roof trim ..... [EI-32](#)  
Heated oxygen sensor 1 ... [EC-846](#), [EC-852](#), [EC-862](#),  
[EC-1062](#), [EC-1068](#)  
Heated oxygen sensor 1 heater ..... [EC-795](#)  
Heated oxygen sensor 2 ... [EC-198](#), [EC-204](#), [EC-413](#),  
[EC-420](#), [EC-869](#), [EC-875](#), [EC-1074](#), [EC-1082](#)  
Heated oxygen sensor 2 heater ..... [EC-154](#), [EC-801](#)  
HEATER - Wiring diagram ..... [MTC-25](#)  
Heater mirror ..... [GW-15](#)  
Heater system - Wiring diagram ..... [MTC-25](#)  
Heater unit (heater core) ..... [MTC-78](#)  
Height (Dimensions) ..... [GI-49](#)  
HFC134a (R134a) system identification ..... [MTC-4](#)  
HFC134a (R134a) system introduction ..... [MTC-15](#)  
HFC134a (R134a) system precaution ..... [MTC-3](#)  
HFC134a (R134a) system service procedure [MTC-82](#)  
HFC134a (R134a) system service tools ..... [MTC-12](#)  
HFC134a system service equipment precaution [MTC-8](#)

High clutch ..... [AT-318](#)  
HO2S1 - Wiring diaram ..... [EC-848](#), [EC-855](#), [EC-865](#)  
HO2S1H - Wiring diagram ..... [EC-797](#)  
HO2S2 - Wiring diagram ... [EC-200](#), [EC-207](#), [EC-415](#),  
[EC-422](#), [EC-871](#), [EC-878](#), [EC-1077](#), [EC-1085](#)  
HO2S2H - Wiring diagram ..... [EC-156](#), [EC-803](#)  
Hood ..... [EI-13](#)  
Horn ..... [WW-9](#)  
HORN - Wiring diagram ..... [WW-9](#)  
How to erase DTC for OBD system .... [EC-64](#), [EC-704](#)

## I

IATS - Wiring diagram ..... [EC-176](#), [EC-824](#)  
Identification plate ..... [GI-48](#)  
Idle air volume learning ..... [EC-47](#), [EC-685](#)  
Idle mixture ratio ..... [EC-36](#), [EC-663](#), [EC-674](#)  
Idle speed ... [EC-35](#), [EC-36](#), [EC-663](#), [EC-674](#), [EC-723](#)  
Idle speed control (ISC) .... [EC-339](#), [EC-341](#), [EC-1016](#),  
[EC-1018](#)  
Ignition coil ..... [EM-113](#), [EC-566](#), [EC-1237](#)  
Ignition control system ..... [EC-566](#), [EC-1237](#)  
Ignition timing [EC-35](#), [EC-36](#), [EC-663](#), [EC-674](#), [EC-723](#)  
IGNSYS - Wiring diagram ..... [EC-567](#), [EC-1238](#)  
ILL - Wiring diagram ..... [LT-33](#)  
Illumination ..... [LT-32](#)  
INJECT - Wiring diagram ..... [EC-579](#), [EC-1259](#)  
Injector ..... [EC-578](#), [EC-1258](#)  
Input shaft (FF M/T) ..... [MT-19](#), [MT-38](#), [MT-82](#)  
Instrument panel ..... [IP-10](#)  
INT/L - Wiring diagram ..... [LT-37](#)  
Intake air temperature sensor .... [EC-175](#), [EC-193](#), [EC-822](#), [EC-841](#)  
Intake door control linkage adjustment ..... [MTC-41](#)  
Intake door motor ..... [MTC-38](#)  
Intake manifold ..... [EM-13](#), [EM-103](#)  
Intake sensor ..... [MTC-66](#)  
Intake valve timing control .. [EC-151](#), [EC-368](#), [EC-792](#),  
[EC-1038](#)  
Intake valve timing control solenoid valve [EC-368](#), [EC-1038](#)  
Interior ..... [EI-28](#)  
Interior lamp ..... [LT-35](#)  
IVC - Wiring diagram ..... [EC-370](#), [EC-1040](#)  
IVIS (Infiniti vehicle immobilizer system) precautions ...  
[GI-5](#)

## J

Joint connector (J/C) ..... [PG-50](#)  
Junction box (J/B) ..... [PG-54](#)

## K

Keyless entry system - See Multi-remote control system  
[BL-33](#)  
Knock sensor (KS) ..... [EC-247](#), [EC-926](#)  
KS - Wiring diagram ..... [EC-248](#), [EC-927](#)

# ALPHABETICAL INDEX

## L

Length (Dimensions) ..... [GI-49](#)  
License lamp ..... [LT-19](#)  
Lifting points ..... [GI-39](#)  
Line pressure solenoid valve ..... [AT-158, AT-544](#)  
Line pressure test (A/T) ..... [AT-67, AT-454](#)  
Liquid gasket application ..... [EM-5, EM-92](#)  
LOAD - Wiring diagram ..... [EC-597](#)  
Location of electrical units ..... [PG-43](#)  
Low and reverse brake ..... [AT-332](#)  
Lubricant (R134a) A/C ..... [MTC-16](#)  
Lubrication circuit (engine) ..... [LU-4](#)  
Lubrication oil A/C ..... [MTC-16](#)  
Lubrication-locks, hinges and hood latches ..... [MA-37](#)  
Luggage room lamp ..... [LT-35](#)

## M

M/T major overhaul ..... [MT-18, MT-85](#)  
M/T oil replacementM/T oil replacement ..... [MT-73](#)  
M/T removal and installation ..... [MT-15](#)  
MAFS - Wiring diagram [EC-163, EC-170, EC-363, EC-810, EC-817](#)  
Magnet clutch ..... [MTC-69](#)  
MAIN - Wiring diagram ..... [EC-141, EC-782](#)  
Main drive gear (M/T) ..... [MT-19](#)  
Mainshaft (M/T) ..... [MT-19, MT-45, MT-82](#)  
Maintenance ..... [MA-5](#)  
Maintenance (engine)QG18DE ..... [MA-16](#)  
Maintenance (engine)QR25DE ..... [MA-23](#)  
Malfunction indicator lamp (MIL) ..... [EC-66, EC-706](#)  
Manual air conditioner - Wiring diagram ..... [MTC-27](#)  
Manual transaxle number ..... [GI-49](#)  
Manual transmission oil replacement ..... [MA-30](#)  
Mass air flow sensor (MAFS) .... [EC-160, EC-168, EC-807, EC-815](#)  
Master cylinder (clutch) ..... [CL-9, CL-26](#)  
Meter ..... [DI-3](#)  
METER - Wiring diagram ..... [DI-12, DI-61](#)  
MIL - Wiring diagram ..... [EC-1303](#)  
MIL data link connectors circuit ..... [EC-621](#)  
MIRROR - Wiring diagram ..... [GW-14](#)  
Mirror defogger ..... [GW-15](#)  
Mirror, door ..... [GW-14, GW-16](#)  
Mirror, out side ..... [GW-16](#)  
Misfire ..... [EC-241, EC-919](#)  
Model variation ..... [GI-46](#)  
Molding - See Exterior ..... [EI-22](#)  
MULTI - Wiring diagram ..... [BL-38](#)  
Multiport fuel injection (MFI) system .... [EC-30, EC-656](#)  
Multiport fuel injection precautions ..... [GI-3, GI-6](#)  
Multi-remote control system ..... [BL-33](#)

## N

NATS (Nissan anti-theft system) ..... [BL-92](#)  
NVH troubleshooting (BR) ..... [BR-5](#)  
NVH troubleshooting (EM) ..... [EM-11, EM-97](#)

NVH troubleshooting (FA) ..... [FAX-4](#)  
NVH troubleshooting (RA) ..... [RAX-4](#)  
NVH troubleshooting (WT) ..... [WT-2](#)  
NVIS (Nissan vehicle immobilizer system) ..... [BL-92](#)  
NVIS (Nissan vehicle immobilizer system) precautions  
[GI-3, GI-5](#)

## O

Oil change (capacity) ..... [MA-13](#)  
Oil pan (engine) ..... [EM-16, EM-110](#)  
Oil pump (A/T) ..... [AT-292](#)  
Oil pump (engine) ..... [LU-8, LU-19](#)  
Oil pump regulator valve (engine) ..... [LU-10](#)  
Oil seal replacement (engine) ..... [EM-49, EM-139](#)  
On board diagnostic system ..... [EC-689](#)  
Operating cylinder (clutch) ..... [CL-11, CL-28](#)  
ORVR (On-board Refueling Vapor Recovery) [EC-627, EC-1312](#)  
Overdrive control switch ..... [AT-249, AT-251, AT-628](#)  
Overheat ..... [EC-428, EC-1092](#)  
Overrun clutch ..... [AT-324](#)  
Overrun clutch solenoid valve ..... [AT-565](#)

## P

Park/Neutral position switch ..... [EC-530, EC-1194](#)  
Park/neutral position switch (A/T) ..... [AT-115, AT-488](#)  
Park/neutral position switch (M/T) ..... [MT-12](#)  
Park/neutral position switch (M/T)Park/neutral position  
switch (M/T) ..... [MT-75](#)  
Parking brake control ..... [PB-2](#)  
Parking drum brake ..... [BR-38](#)  
Parking lamp ..... [LT-19](#)  
PCV (positive crankcase ventilation) [EC-633, EC-1317](#)  
Periodic maintenance ..... [MA-7](#)  
PGC/V - Wiring diagram [EC-286, EC-498, EC-965, EC-1161](#)  
PHASE - Wiring diagram ..... [EC-260, EC-936](#)  
Piston assembly ..... [EM-76](#)  
Piston pin inspection ..... [EM-68](#)  
Piston ring inspection ..... [EM-69](#)  
Piston to bore clearance ..... [EM-70, EM-179](#)  
PNP/SW - Wiring diagram ..... [EC-532, EC-1196](#)  
POS - Wiring diagram ..... [EC-254, EC-931](#)  
POWER - Wiring diagram ..... [EC-1035, PG-5](#)  
Power door lock ..... [BL-11](#)  
Power door mirror ..... [GW-14](#)  
Power steering fluid level ..... [PS-8, MA-35](#)  
Power steering gear ..... [PS-15](#)  
Power steering hydraulic pressure ..... [PS-10](#)  
Power steering oil pump ..... [PS-21](#)  
Power steering pressure (PSP) sensor ... [EC-343, EC-1020](#)  
Power steering system bleeding ..... [PS-8](#)  
Power supply routing ..... [PG-3](#)  
Power transistor ..... [EC-1237](#)  
Power window ..... [GW-7](#)  
Power window main switch ..... [GW-7](#)

# ALPHABETICAL INDEX

PRE/SE - Wiring diagram ... [EC-302](#), [EC-308](#), [EC-978](#),  
[EC-984](#)  
 Precautions (General) ..... [GI-3](#)  
 Pressure plate - See Clutch cover ..... [CL-17](#), [CL-33](#)  
 Pressure test (A/T) ..... [AT-67](#), [AT-454](#)  
 PS/SEN - Wiring diagram ..... [EC-344](#), [EC-1021](#)

## R

Radiator ..... [CO-14](#)  
 Radio - See Audio ..... [AV-2](#)  
 Rear air spoiler ..... [EI-22](#)  
 Rear axle ..... [RAX-5](#)  
 Rear axle (disc brake type) ..... [RAX-6](#)  
 Rear axle (drum brake type) ..... [RAX-6](#)  
 Rear bumper ..... [EI-18](#)  
 Rear combination lamp removal and installation [EI-22](#)  
 Rear disc brake ..... [BR-29](#)  
 Rear door ..... [BL-30](#), [GW-13](#)  
 Rear drum brake ..... [BR-38](#)  
 Rear seat ..... [SE-5](#)  
 Rear seat belt ..... [SB-5](#)  
 Rear suspension ..... [RSU-5](#)  
 Rear window ..... [GW-3](#)  
 Rear window defogger ..... [GW-17](#)  
 Refrigerant connection precaution ..... [MTC-5](#)  
 Refrigerant general precaution ..... [MTC-4](#)  
 Refrigerant lines ..... [MTC-82](#)  
 Refrigerant pressure sensor . [EC-591](#), [EC-1269](#), [MTC-56](#)  
 Refrigeration cycle ..... [MTC-15](#)  
 Release bearing (clutch) ..... [CL-14](#), [CL-31](#)  
 Remote keyless entry system ..... [BL-33](#)  
 Removal and installation (A/T) ..... [AT-264](#)  
 Reverse clutch ..... [AT-313](#)  
 Reverse idler shaft (M/T) ..... [MT-18](#), [MT-82](#)  
 Reverse lamp switch (M/T) - See Back-up lamp switch (M/T) ..... [MT-12](#)  
 Reverse main gear (M/T) ..... [MT-19](#), [MT-82](#)  
 Revolution sensor (A/T) ..... [AT-500](#)  
 Road wheel size ..... [GI-50](#)  
 Rocker cover ..... [EM-119](#)  
 Roof trim ..... [EI-32](#)  
 Room lamp - See Interior lamp ..... [LT-35](#)  
 RP/SEN - Wiring diagram ..... [EC-592](#), [EC-1270](#)

## S

SAE J1979 - Mode 1 - 7 ..... [EC-689](#)  
 Seal - See Exterior ..... [EI-22](#)  
 Seat belt inspection ..... [SB-7](#), [MA-38](#)  
 Seat belt pre-tensioner disposal ..... [SRS-47](#)  
 Seat belt, front ..... [SB-3](#)  
 Seat belt, rear ..... [SB-5](#)  
 Seat, front ..... [SE-3](#)  
 Seat, rear ..... [SE-5](#)  
 SEN/PW - Wiring diagram ..... [EC-447](#), [EC-1110](#)  
 Sheft warning system ..... [BL-63](#)  
 SHIFT - Wiring diagram ..... [AT-253](#), [AT-634](#)

Shift control components (M/T) ..... [MT-20](#), [MT-84](#)  
 Shift control components (M/T)Shift control components (M/T) ..... [MT-76](#)  
 Shift fork (M/T) ..... [MT-20](#), [MT-84](#)  
 Shift lever ..... [MT-13](#)  
 Shift lock system ..... [AT-252](#), [AT-633](#)  
 Shift schedule ..... [AT-385](#), [AT-748](#)  
 Shift solenoid valve A (A/T) .. [AT-139](#), [AT-149](#), [AT-550](#)  
 Shift solenoid valve B (A/T) ..... [AT-139](#), [AT-555](#)  
 Shock absorber (front) ..... [FSU-9](#)  
 Shock absorber (rear) ..... [RSU-10](#)  
 Side trim ..... [EI-28](#)  
 Smart entrance control unit ..... [BCS-3](#)  
 Spare tire size ..... [GI-50](#)  
 Spark plug replacementQG18DE ..... [MA-21](#)  
 Spark plug replacementQR25DE ..... [MA-28](#)  
 Specification value ..... [EC-777](#)  
 Speedometer ..... [DI-3](#)  
 SROOF - Wiring diagram ..... [RF-11](#)  
 SRS - Wiring diagram ..... [SRS-14](#)  
 SRS Trouble diagnoses ..... [SRS-8](#)  
 Stabilizer bar (front) ..... [FSU-11](#)  
 Stall test (A/T) ..... [AT-63](#), [AT-450](#)  
 Standardized relay ..... [PG-52](#)  
 START - Wiring diagram ..... [SC-10](#)  
 Starter ..... [SC-18](#)  
 Starting system ..... [SC-9](#)  
 Steering gear and linkage inspection ..... [MA-35](#)  
 Steering linkage ..... [PS-15](#)  
 Steering wheel and column ..... [PS-11](#)  
 Steering wheel play ..... [PS-7](#)  
 Steering wheel turning force ..... [PS-9](#)  
 Stop lamp ..... [LT-21](#)  
 Stop lamp switch ..... [EC-1181](#), [EC-1204](#), [EC-1292](#)  
 STOP/L - Wiring diagram ..... [LT-21](#)  
 Striking rod (M/T) ..... [MT-20](#)  
 Strut (front) ..... [FSU-9](#)  
 Strut (rear) ..... [RSU-8](#)  
 Sub-gear (M/T) ..... [MT-19](#)  
 Sunroof ..... [RF-10](#)  
 Supplemental restraint system - Wiring diagram . [SRS-14](#)  
 Suspension ..... [MA-36](#)  
 Swirl control valve ..... [EC-392](#), [EC-405](#)  
 Swirl control valve control position sensor [EC-397](#), [EC-405](#)  
 SWL/S - Wiring diagram ..... [EC-399](#), [EC-407](#)  
 SWL/V - Wiring diagram ..... [EC-394](#)  
 Symbols and abbreviations ..... [GI-8](#), [GI-9](#), [GI-21](#)  
 Symptom matrix chart ..... [EC-86](#), [EC-728](#)  
 Synchronizer (M/T) ..... [MT-19](#), [MT-82](#)  
 System readiness test (SRT) code ..... [EC-57](#), [EC-694](#)

## T

Tachometer ..... [DI-3](#)  
 Tail lamp ..... [LT-19](#)  
 TAIL/L - Wiring diagram ..... [LT-19](#)  
 TCM circuit diagram ..... [AT-18](#), [AT-406](#)

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

I DX

# ALPHABETICAL INDEX

TCM inspection table ..... [AT-109](#), [AT-481](#)  
Temperature control cable and linkage adjustment .....  
[MTC-45](#)  
Thermal protector ..... [MTC-76](#)  
Thermostat ..... [CO-12](#), [CO-30](#)  
Three way catalyst function ..... [EC-265](#), [EC-941](#)  
Three way catalyst precautions ..... [GI-3](#), [GI-5](#)  
Throttle control motor ..... [EC-1057](#)  
Throttle control motor relay ..... [EC-382](#), [EC-1052](#)  
Throttle position sensor (TPS) .. [EC-184](#), [EC-235](#), [EC-442](#), [EC-444](#), [EC-553](#), [EC-832](#), [EC-913](#), [EC-1105](#), [EC-1107](#), [EC-1224](#)  
Throttle position switch ..... [AT-249](#), [AT-628](#)  
Throttle valve closed position learning . [EC-47](#), [EC-684](#)  
Throwout bearing - See Clutch release bearing [CL-14](#),  
[CL-31](#)  
Tie-rod ..... [PS-19](#)  
Tie-rod ball joints ..... [PS-19](#)  
Tightening torque of standard bolts ..... [GI-44](#)  
Time control system ..... [BCS-10](#)  
Timing chain ..... [EM-39](#), [EM-131](#)  
Tire rotation ..... [MA-32](#)  
Tire size ..... [GI-50](#)  
TLID - Wiring diagram ..... [BL-32](#)  
Top tether strap child restraint ..... [SB-10](#)  
Torque converter installation [AT-265](#), [AT-646](#), [AT-741](#)  
Torque convertor clutch solenoid valve ..... [AT-531](#)  
Tow truck towing ..... [GI-42](#)  
Towing point ..... [GI-43](#)  
TPS1 - Wiring diagram ..... [EC-237](#), [EC-915](#)  
TPS2 - Wiring diagram ..... [EC-186](#), [EC-834](#)  
TPS3 - Wiring diagram ..... [EC-555](#), [EC-1226](#)  
Transmission case (M/T) ..... [MT-18](#), [MT-81](#)  
Tread-FR&RR (Dimensions) ..... [GI-49](#)  
Trim ..... [EI-28](#)  
Trouble diagnoses ..... [GI-9](#), [GI-23](#)  
Trunk lid ..... [EI-18](#)  
Trunk lid finisher ..... [EI-33](#)  
Trunk lid opener - See Trunk lid ..... [EI-18](#)  
Trunk lid opener, electric ..... [BL-32](#)  
Trunk lid trim ..... [EI-33](#)  
Trunk room lamp ..... [LT-35](#)  
Trunk room trim ..... [EI-33](#)  
TURN - Wiring diagram ..... [LT-29](#)  
Turn signal lamp ..... [LT-27](#)  
Two trip detection logic ..... [EC-52](#), [EC-689](#)

## U

Under body ..... [BL-116](#)

## V

Vacuum hose (brake system) ..... [BR-18](#)  
Vacuum hose drawing (Engine control) ..... [EC-654](#)  
Valve clearance ..... [EM-35](#), [EM-128](#)  
Valve guide ..... [EM-58](#), [EM-150](#), [EM-151](#)  
Valve seat ..... [EM-60](#), [EM-152](#)  
Valve spring ..... [EM-61](#), [EM-153](#)

Variable induction air control system (VIAS) [EC-1198](#),  
[EC-1249](#)  
Vehicle identification number ..... [GI-47](#)  
Vehicle recovery (freeing a stuck vehicle) ..... [GI-43](#)  
Vehicle security (theft warning) system ..... [BL-63](#)  
Vehicle speed sensor (VSS) ..... [EC-337](#), [EC-1014](#)  
VEHSEC - Wiring diagram ..... [BL-70](#)  
Vent mode switch ..... [MTC-20](#)  
VENT/V - Wiring diagram .. [EC-293](#), [EC-506](#), [EC-971](#),  
[EC-1169](#)  
VIAS - Wiring diagram ..... [EC-1251](#)  
VIAS/V - Wiring diagram ..... [EC-1199](#)  
Viscosity number (SAE) ..... [MA-14](#)

## W

WARN - Wiring diagram ..... [DI-28](#)  
Warning chime ..... [DI-40](#)  
Warning lamps ..... [DI-26](#)  
Washer, front ..... [WW-3](#)  
Water pump ..... [CO-10](#)  
Water temperature gauge ..... [DI-3](#)  
Weatherstrip - See Exterior ..... [EI-22](#)  
Wheel alignment (front) ..... [FSU-6](#)  
Wheel alignment (rear) ..... [RSU-6](#)  
Wheel balance ..... [MA-32](#)  
Wheel bearing (front axle) ..... [FAX-9](#)  
Wheel bearing (front) ..... [FAX-5](#)  
Wheel bearing (rear) ..... [RAX-5](#)  
Wheel hub (front) ..... [FAX-6](#), [FAX-9](#)  
Wheel hub (rear) ..... [RAX-6](#)  
Wheel sensors (ABS) ..... [BRC-44](#)  
Wheel size ..... [GI-50](#)  
Wheelbase (Dimensions) ..... [GI-49](#)  
Width (Dimensions) ..... [GI-49](#)  
WINDOW - Wiring diagram ..... [GW-9](#)  
Window, back door ..... [GW-12](#)  
Window, door ..... [GW-6](#), [GW-12](#)  
Window, rear ..... [GW-3](#)  
Windshield ..... [GW-3](#)  
Windshield washer - See Front washer ..... [WW-3](#)  
Windshield wiper - See Front wiper ..... [WW-3](#)  
WIPER - Wiring diagram ..... [WW-5](#)  
Wiper and washer ..... [WW-3](#)  
Wiper, front ..... [WW-3](#)  
Wiring Diagram (Cell code) list ..... [PG-40](#)  
Wiring diagrams ..... [GI-8](#), [GI-13](#)  
Withdrawal lever (clutch) ..... [CL-14](#), [CL-31](#)  
Wrist pin - See Piston pin inspection ..... [EM-68](#)